



## *ASSEMBLY INSTRUCTIONS* *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**108113**  
***Arm Chair***









ITEM: **108113****ASSEMBLY INSTRUCTIONS****ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










**WARNING!**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

**ASSEMBLY TIME****15 MINUTES****PARTS IDENTIFICATION**

|   |                   |                                                                                      |      |
|---|-------------------|--------------------------------------------------------------------------------------|------|
| A | BACK FRAME        |    | 1PC  |
| B | SEAT FRAME        |     | 1PC  |
| C | FRONT LEG         |     | 2PCS |
| D | LEFT ARM          |     | 1PC  |
| E | RIGHT ARM         |     | 1PC  |
| F | LEFT ARM SUPPORT  |     | 1PC  |
| G | RIGHT ARM SUPPORT |   | 1PC  |
| H | SEAT CUSHION      |  | 1PC  |

**HARDWARE IDENTIFICATION**

|   |                                            |                                                                                      |       |
|---|--------------------------------------------|--------------------------------------------------------------------------------------|-------|
| 1 | ALLEN WRENCH<br>(M4 x 65mm - BLK)          |  | 1PC   |
| 2 | LONG BOLT<br>(M6 x 80mm - BLK)             |  | 4PCS  |
| 3 | MEDIUM BOLT<br>(M6 x 60mm - BLK)           |  | 4PCS  |
| 4 | SHORT BOLT<br>(M6 x 35mm - BLK)            |  | 9PCS  |
| 5 | LOCK WASHER<br>(M6 x 11 x 1.5 - BLK)       |  | 17PCS |
| 6 | FLAT WASHER<br>(M6 x 19 x 1.0 - BLK)       |  | 15PCS |
| 7 | SHORT FLAT HEAD SCREW<br>(M4 x 30mm - BLK) |  | 4PCS  |
| 8 | LONG FLAT HEAD SCREW<br>(M4 x 38mm - BLK)  |  | 2PCS  |
| 9 | WOOD PLUG<br>(Dia 14 X 10mm)               |  | 2PCS  |

**NOTE:**

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **108113**




## ASSEMBLY INSTRUCTIONS

### STEP 1

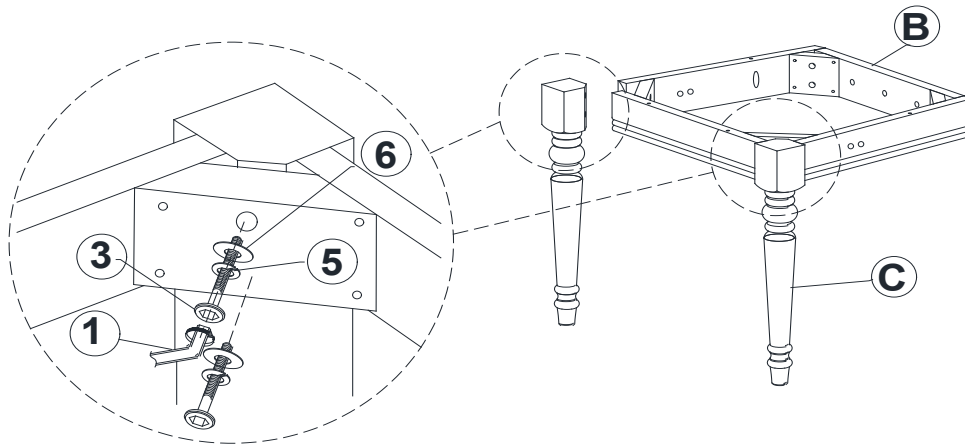

### STEP 2

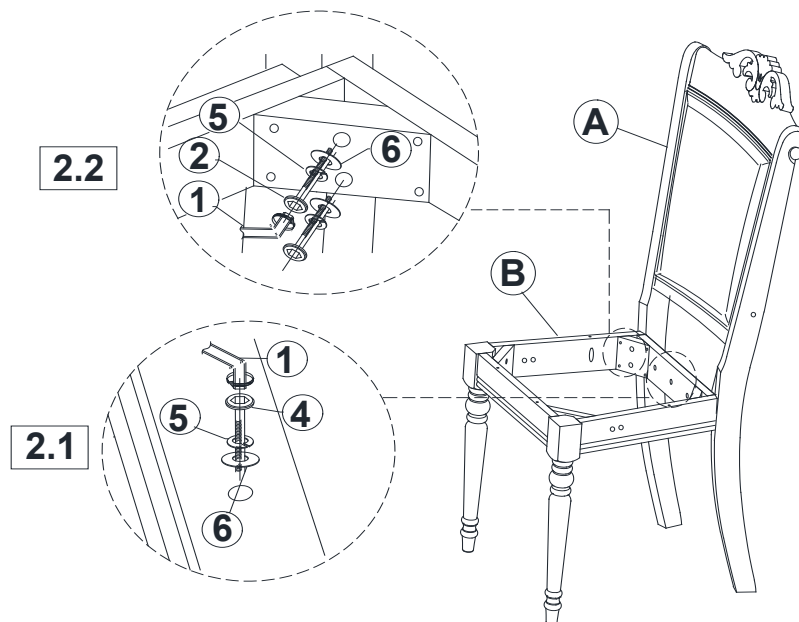


ITEM: **108113**




## ASSEMBLY INSTRUCTIONS

### STEP 3

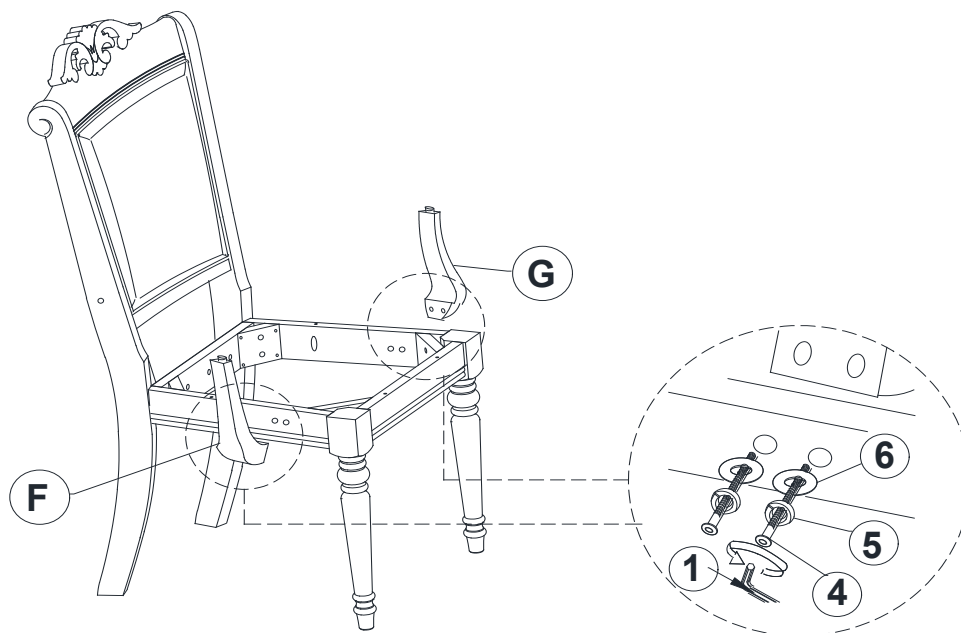


### STEP 4

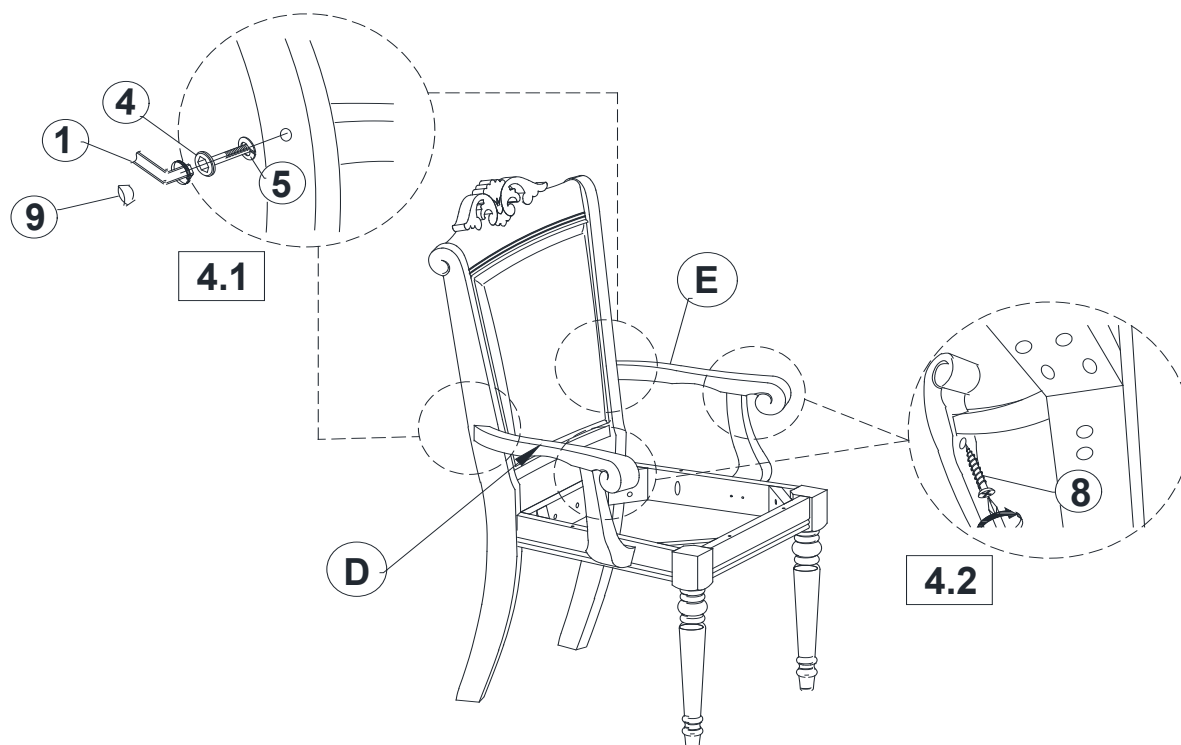


ITEM: **108113**




## **STEP 5**

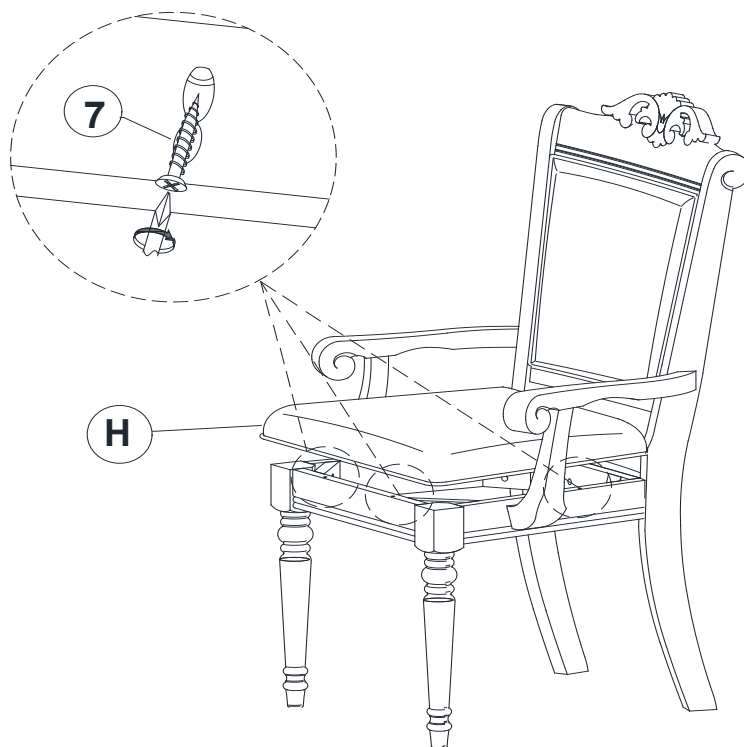

## **STEP 6** **COMPLETE**

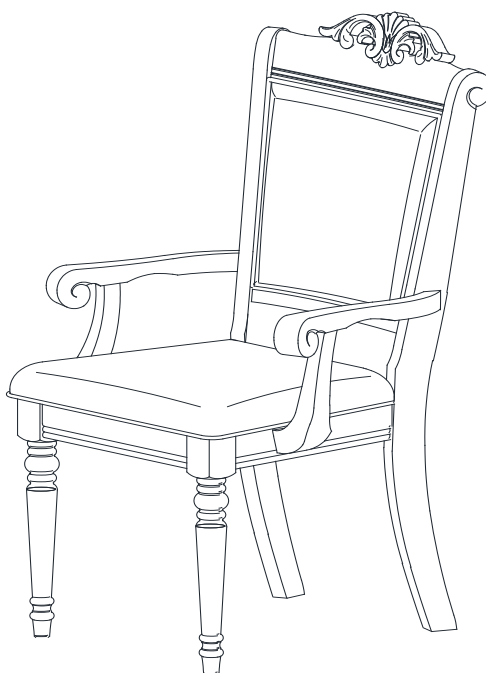

ITEM:108113

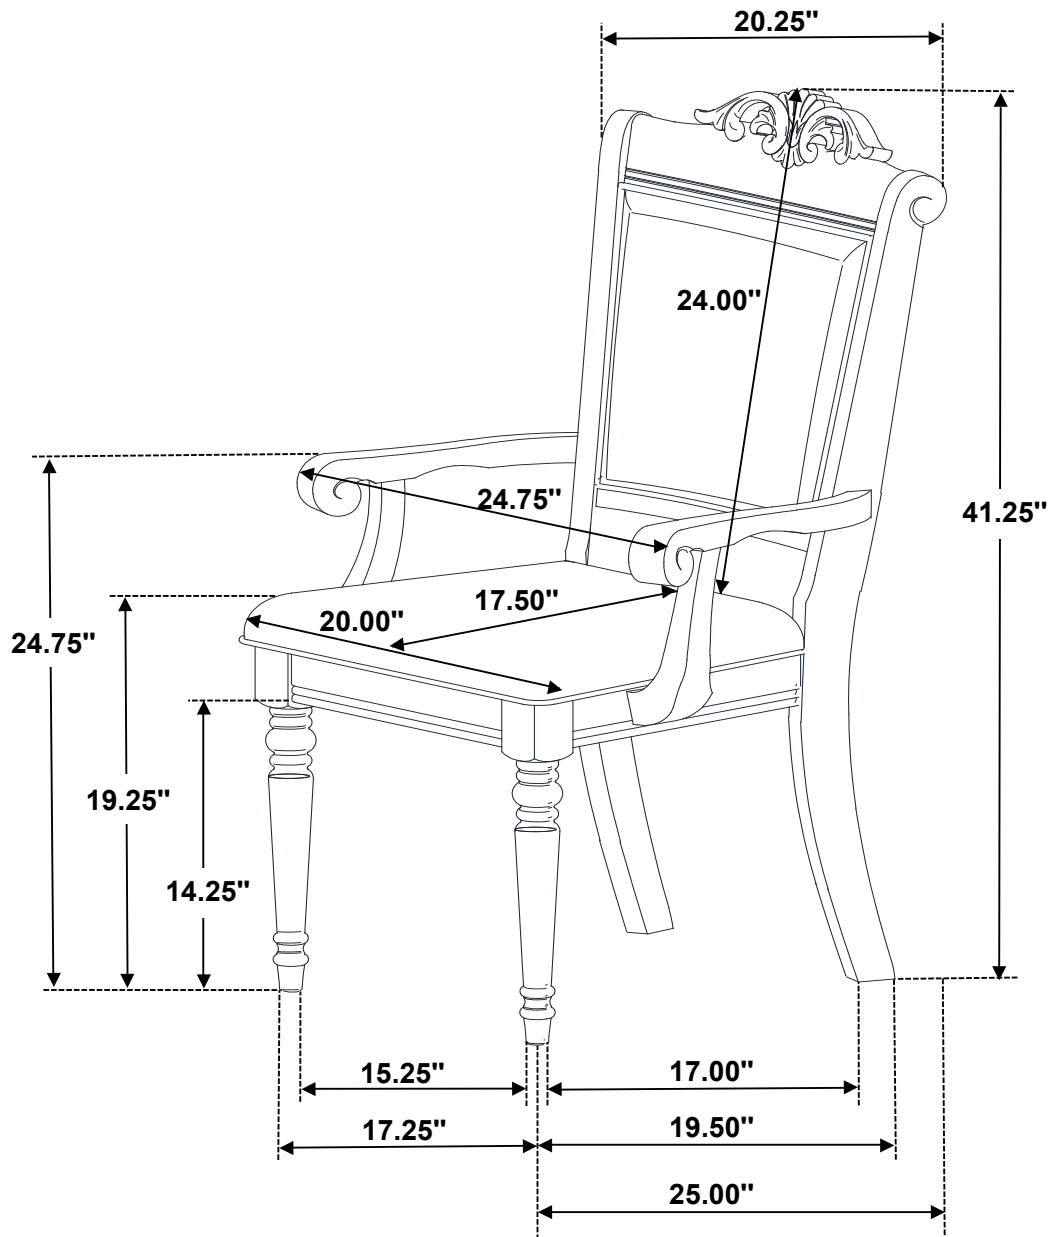

Note : Dimension tolerance  $\pm 5\%$