

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**108570**  
**Round Dining Table**

ITEM: **108570**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

|   |                |  |      |
|---|----------------|--|------|
| A | TOP            |  | 1PC  |
| B | LEG            |  | 4PCS |
| C | UPPER CROSSBAR |  | 1PC  |
| D | LOWER CROSSBAR |  | 1PC  |

## HARDWARE IDENTIFICATION


|   |                                    |  |       |
|---|------------------------------------|--|-------|
| 1 | ALLEN WRENCH<br>(M5 x 65mm - BLK)  |  | 1PC   |
| 2 | SHORT BOLT<br>(M8 x 50mm - RBW)    |  | 1PC   |
| 3 | LONG BOLT<br>(M8 x 70mm - RBW)     |  | 8PCS  |
| 4 | LOCK WASHER<br>(M8 - RBW)          |  | 13PCS |
| 5 | FLAT WASHER<br>(M8 - RBW)          |  | 12PCS |
| 6 | WRENCH<br>(13mm)                   |  | 1PC   |
| 7 | HEX NUT<br>(M8 - RBW)              |  | 4PCS  |
| 8 | PLASTIC DOWEL<br>(M8 x 30mm - BLK) |  | 4PCS  |

ITEM: **108570**




## ASSEMBLY INSTRUCTIONS

### STEP 1

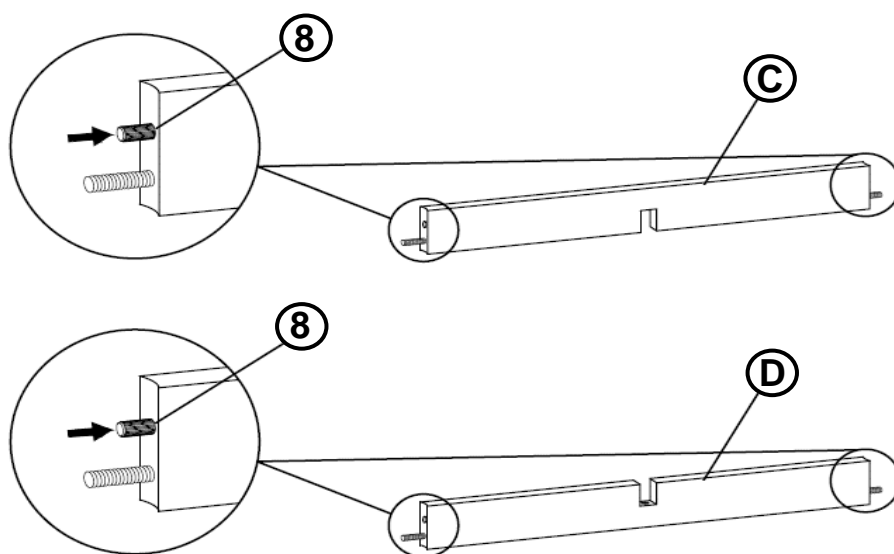

### STEP 2

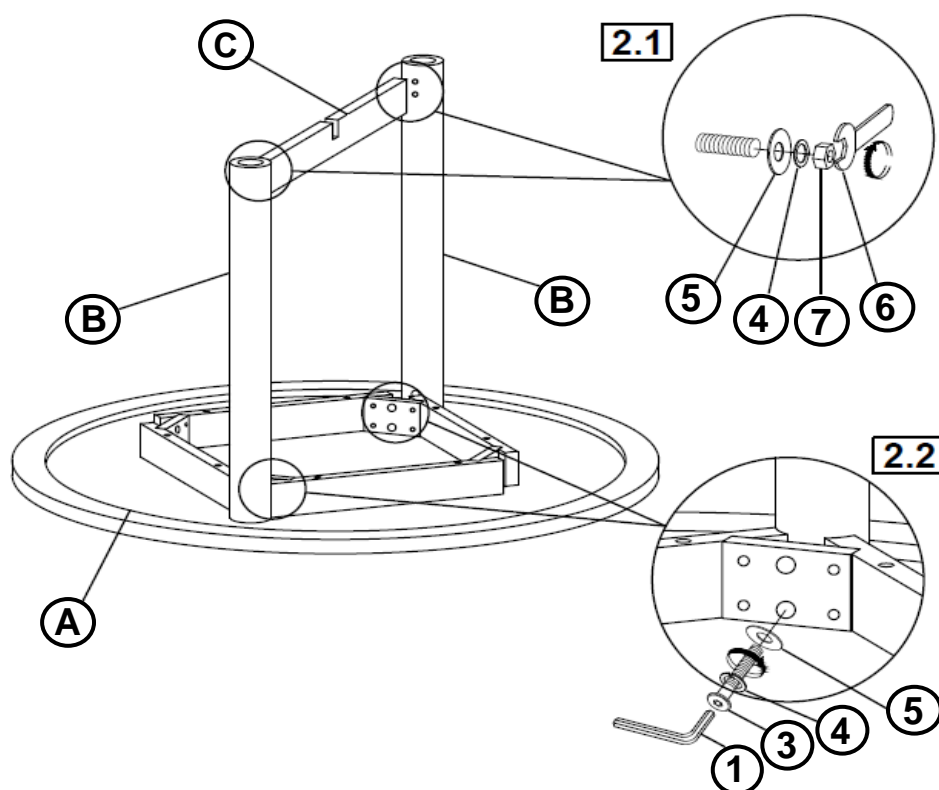


ITEM: **108570**




## ASSEMBLY INSTRUCTIONS

### STEP 3

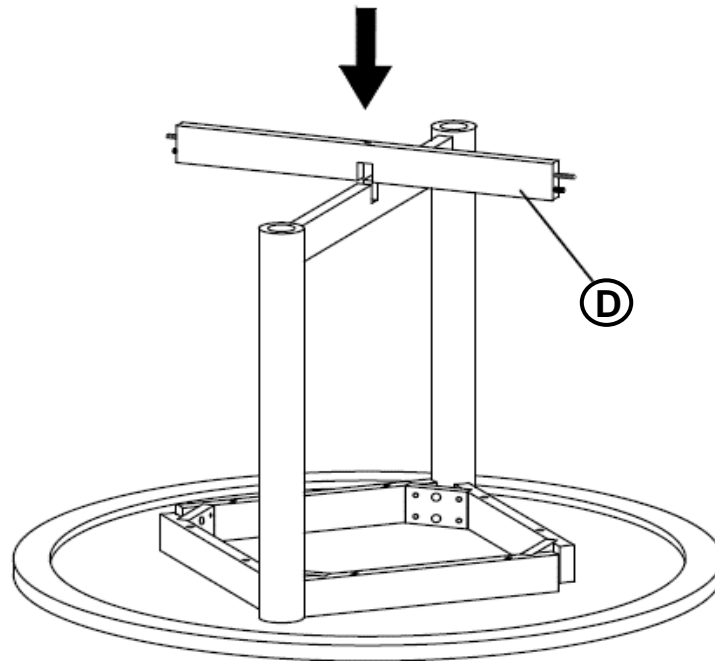


### STEP 4

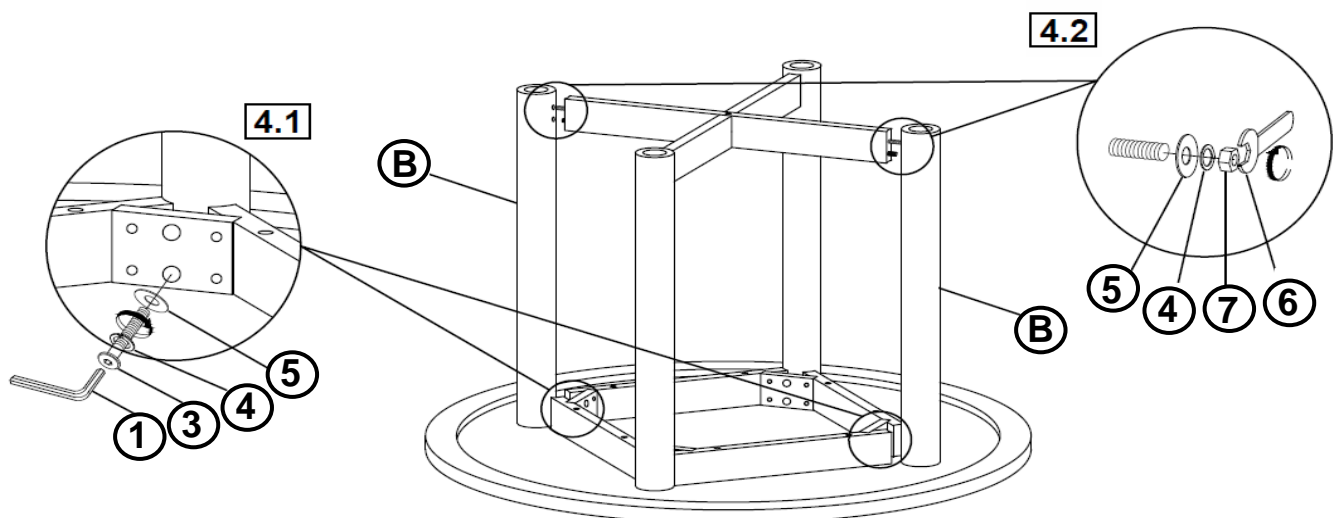



ITEM: **108570**




**ASSEMBLY INSTRUCTIONS**  
**STEP 5**

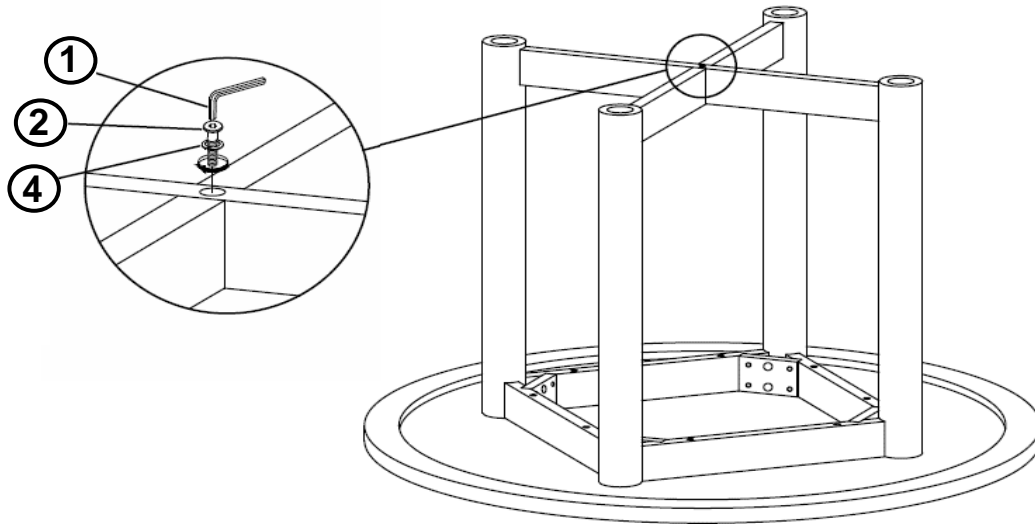

**STEP 6**  
**COMPLETE**

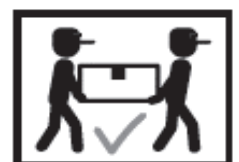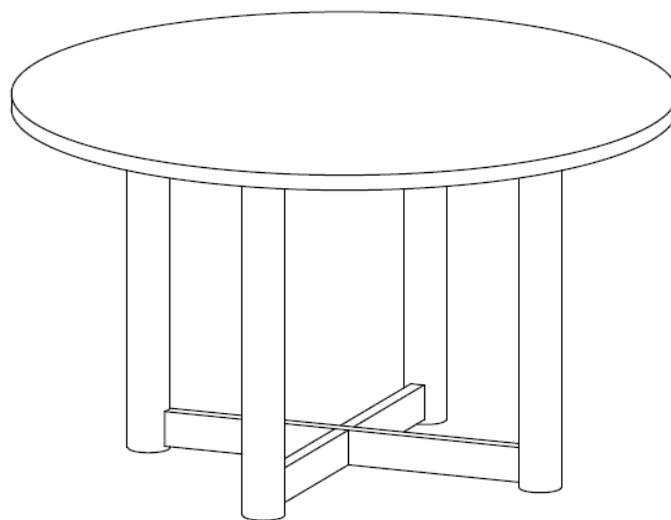

ITEM: **108570**

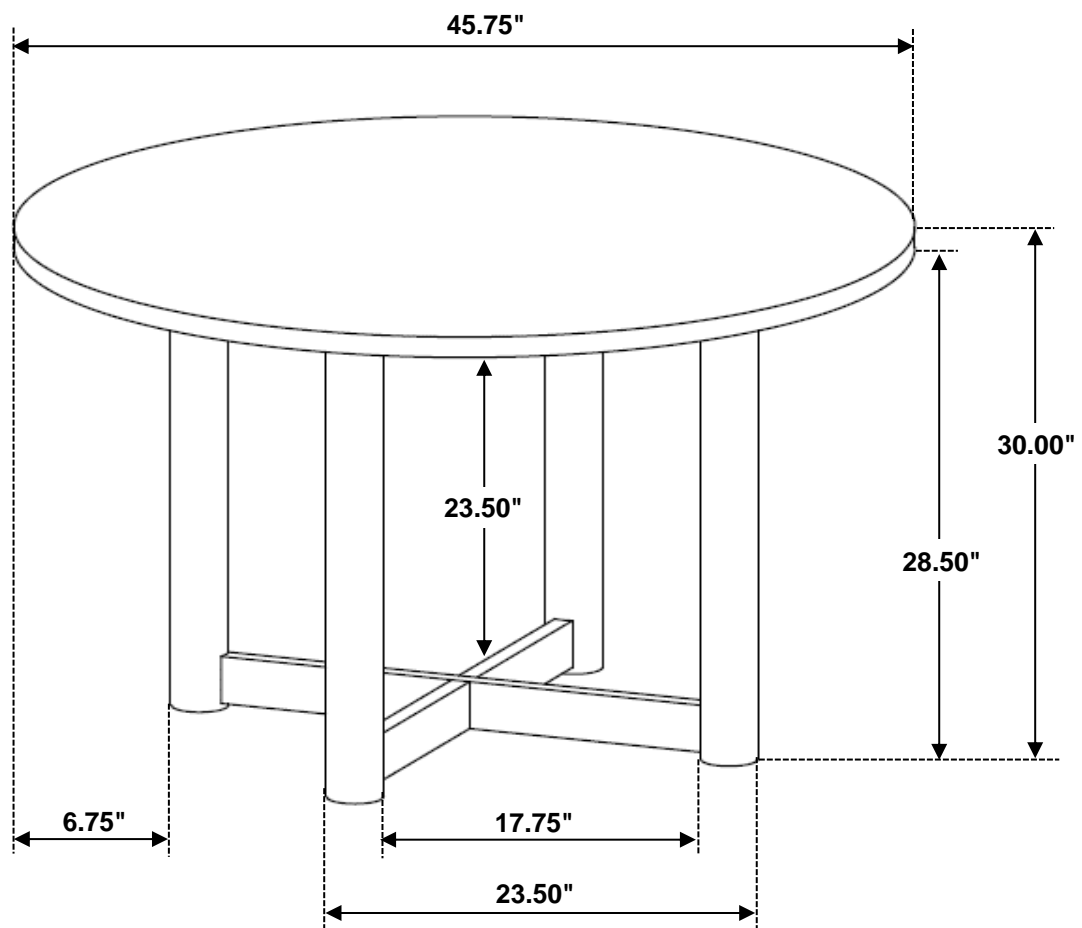

**Note: Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**108572**  
**Side Chair**

ITEM: **108572**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.










ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

|   |              |  |      |
|---|--------------|--|------|
| A | BACK FRAME   |    | 1PC  |
| B | SEAT FRAME   |     | 1PC  |
| C | SEAT CUSHION |   | 1PC  |
| D | FRONT LEG    |  | 2PCS |

## HARDWARE IDENTIFICATION

|   |                                      |   |       |
|---|--------------------------------------|---|-------|
| 1 | ALLEN WRENCH<br>(M4 x 100mm - BLK)   |  | 1PC   |
| 2 | SHORT BOLT<br>(M6 x 40mm - RBW)      |  | 2PCS  |
| 3 | MEDIUM BOLT<br>(M6 x 60mm - RBW)     |  | 4PCS  |
| 4 | LONG BOLT<br>(M6 x 70mm - RBW)       |  | 4PCS  |
| 5 | LOCK WASHER<br>(M6 - RBW)            |  | 10PCS |
| 6 | FLAT WASHER<br>(M6 - RBW)            |  | 10PCS |
| 7 | FLAT HEAD SCREW<br>(M4 x 25mm - RBW) |  | 5PCS  |

### NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **108572**




## ASSEMBLY INSTRUCTIONS


### STEP 1

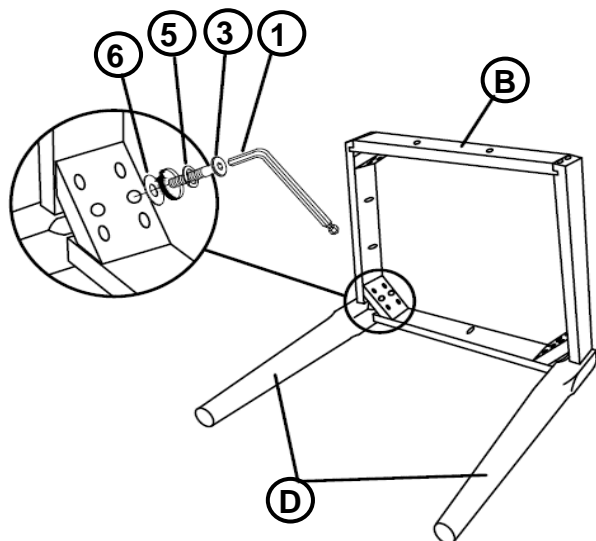


### STEP 2

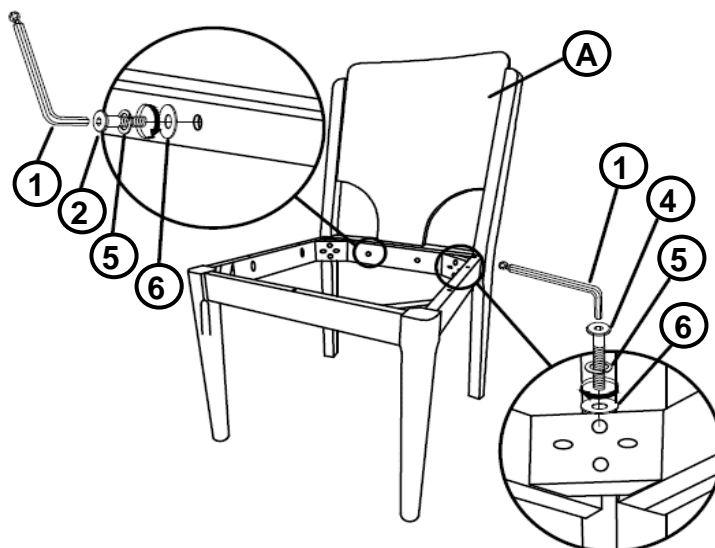


### STEP 3

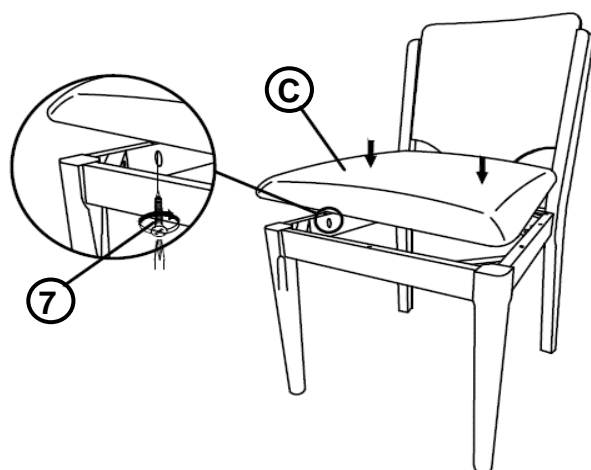

### STEP 4 **COMPLETE**

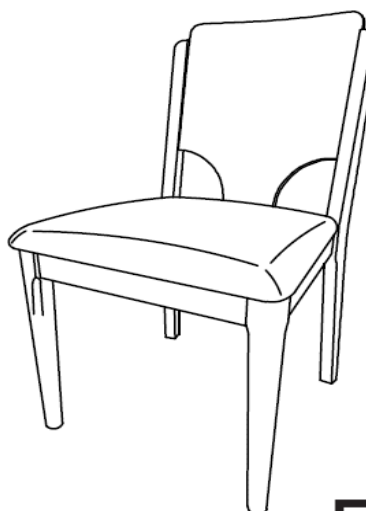

ITEM: **108572**

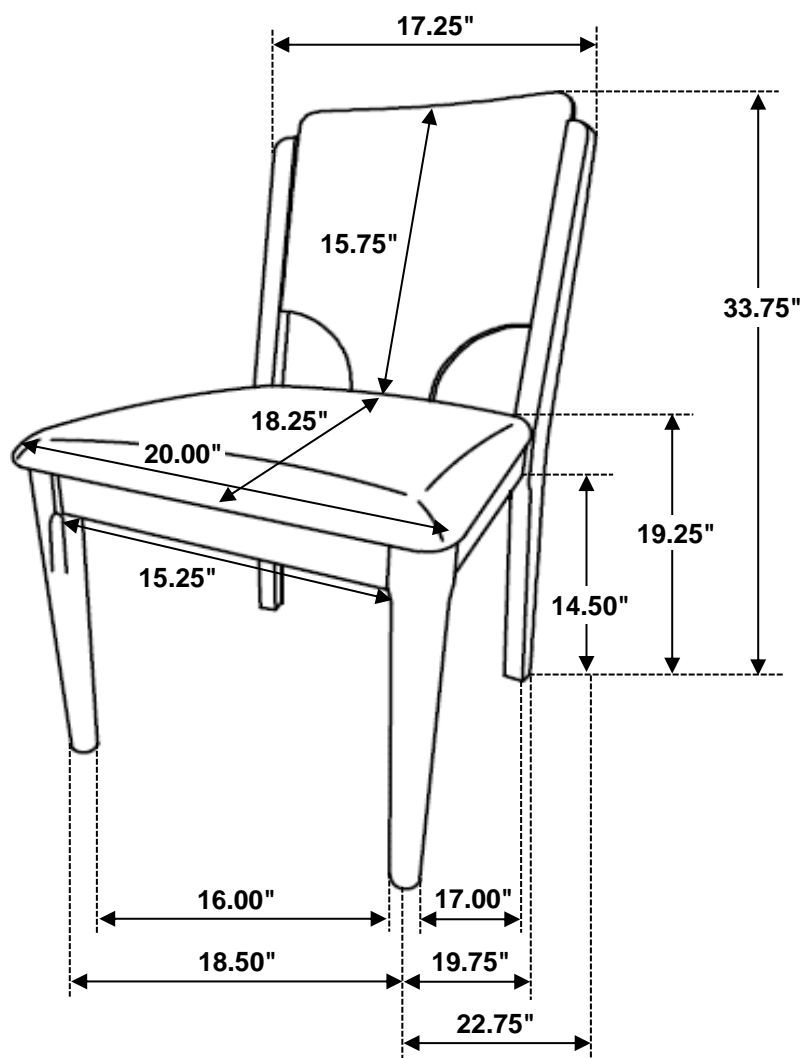

Note: Dimension tolerance  $\pm 5\%$