

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

122248
Counter Height Table

ITEM:122248



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG FRAME		2PCS
C	CROSSBAR		1PC
D	APRON		2PCS

HARDWARE IDENTIFICATION


1	ALLEN WRENCH (M4 - BLK)		1PC
2	SHORT BOLT (M6 x 50mm - RBW)		4PCS
3	LONG BOLT (M6 x 90mm - RBW)		8PCS
4	LOCK WASHER (M6 - RBW)		12PCS
5	PLASTIC DOWEL (M8 x 30mm - BLK)		6PCS
6	BARREL NUT		8PCS
7	FLAT HEAD SCREW (M4 x 38mm - RBW)		8PCS
8	WAFFER HEAD SCREW (M4 x 38mm - BLK)		4PCS
9	WOOD PLUG		12PCS

ITEM: **122248**




ASSEMBLY INSTRUCTIONS


STEP 1

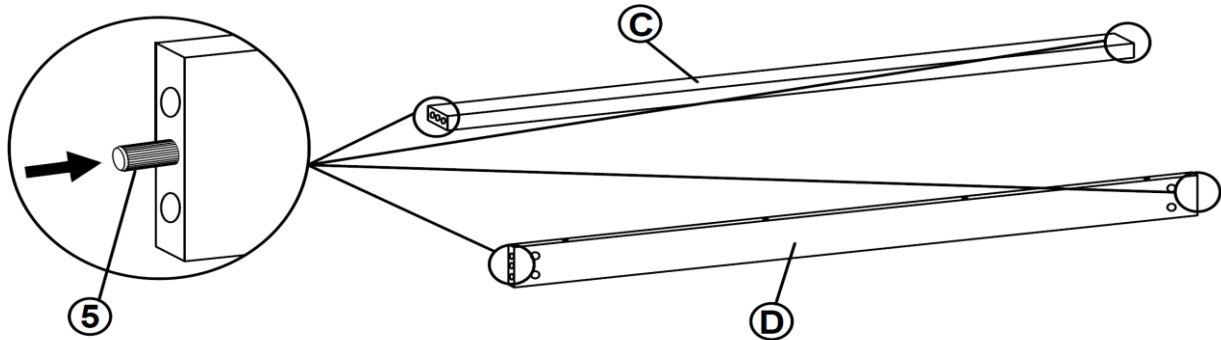

STEP 2

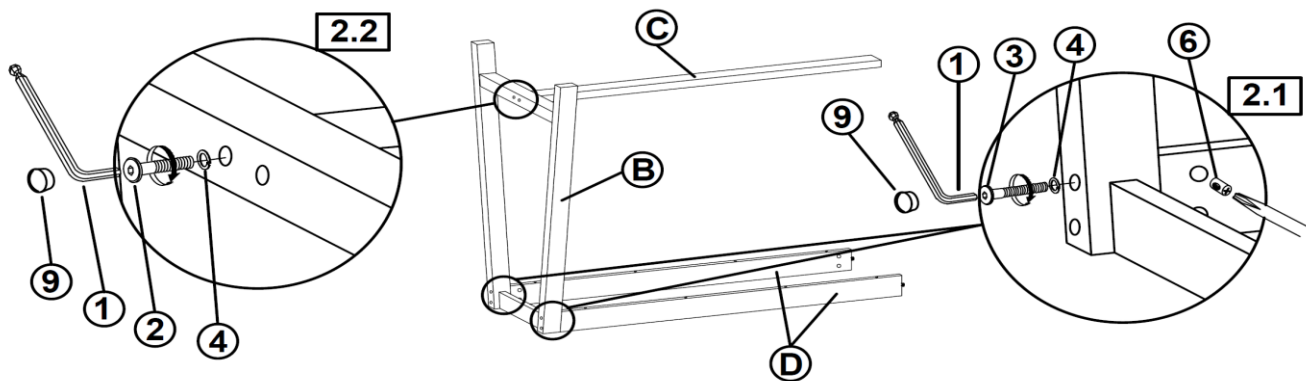

STEP 3

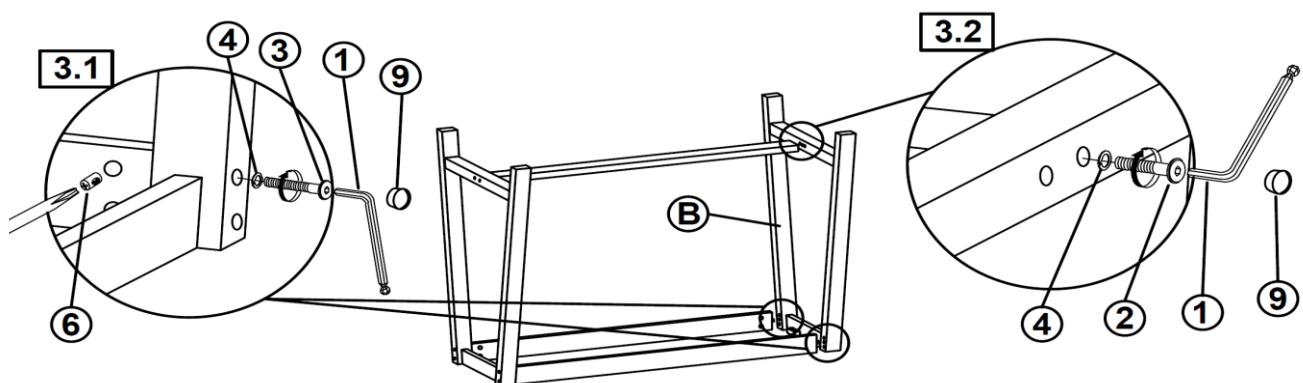


ITEM: **122248**




ASSEMBLY INSTRUCTIONS


STEP 4

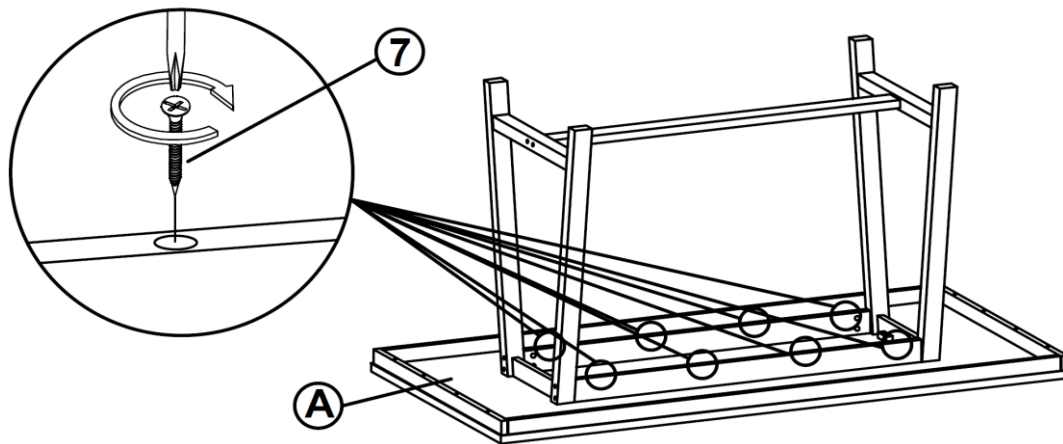


STEP 5

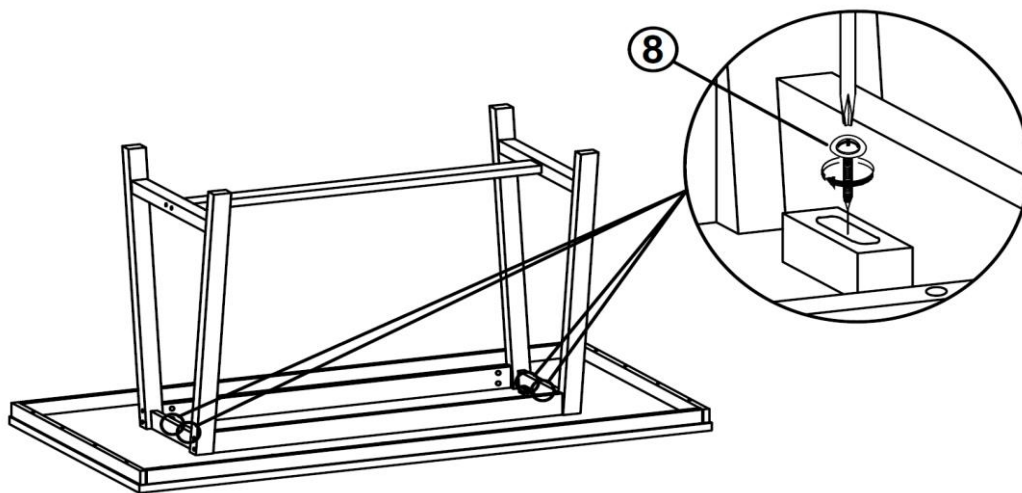

STEP 6 COMPLETE

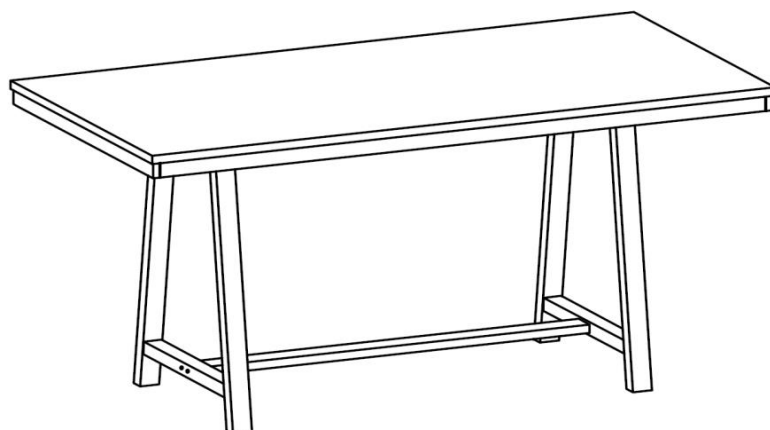

ITEM: **122248**

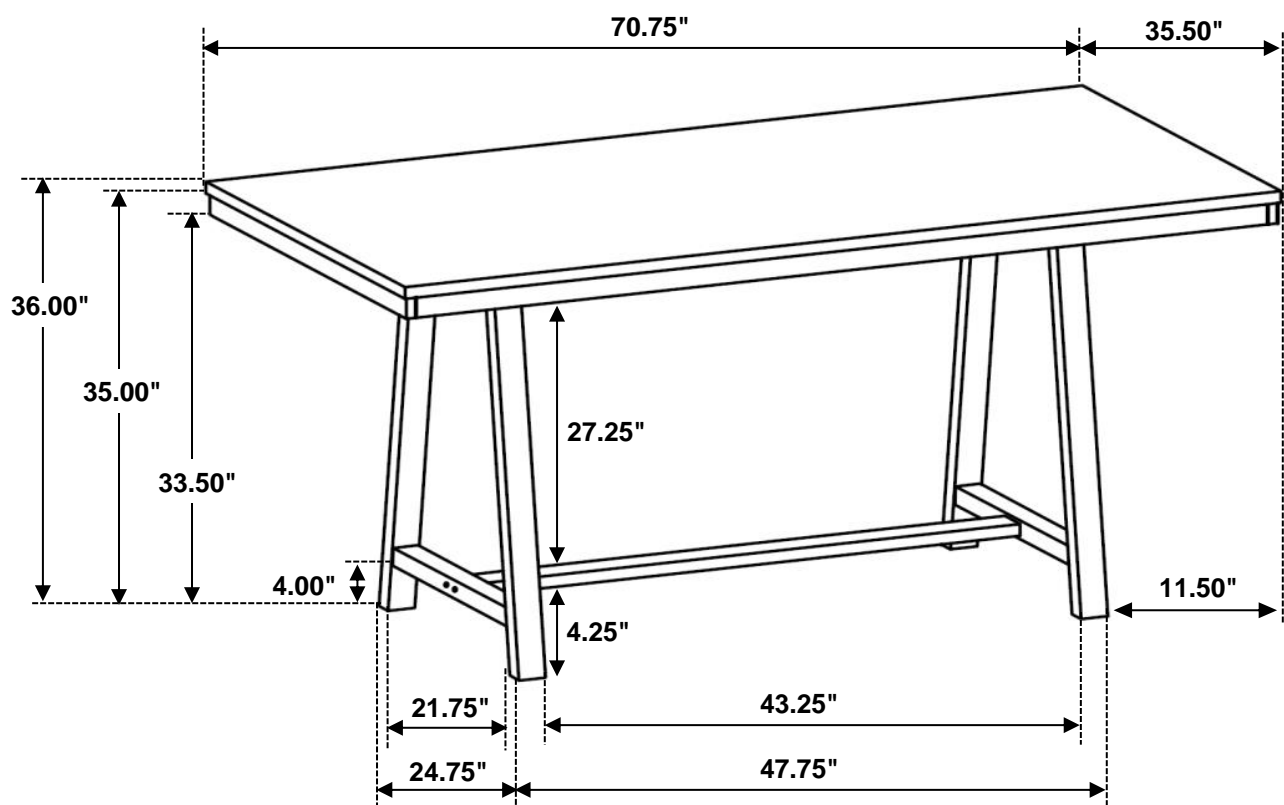

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

122249

Counter Height Chair

ITEM:122249



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A BACK FRAME

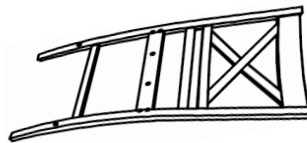

1PC

B SEAT FRAME

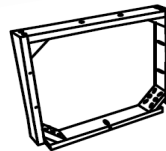

1PC

C SEAT CUSHION



1PC

D LEFT FORNT LEG




1PC

E RIGHT FRONT LEG



1PC

F LEFT SIDE STRETCHER




1PC

G RIGHT SIDE STRETCHER



1PC

H FRONT STRETCHER



1PC

NOTE:

Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:122249



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 - BLK)		1PC
2	SHORT BOLT (M6 x 40mm - RBW)		2PCS
3	MEDIUM BOLT (M6 x 60mm - RBW)		4PCS
4	LONG BOLT (M6 x 70mm - RBW)		4PCS
5	LOCK WASHER (M6 - RBW)		10PCS
6	FLAT WASHER (M6 - RBW)		10PCS
7	SHORT FLAT HEAD SCREW (M4 x 25mm - RBW)		5PCS
8	LONG FLAT HEAD SCREW (M4 x 38mm - RBW)		6PCS

NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **122249**




ASSEMBLY INSTRUCTIONS

STEP 1

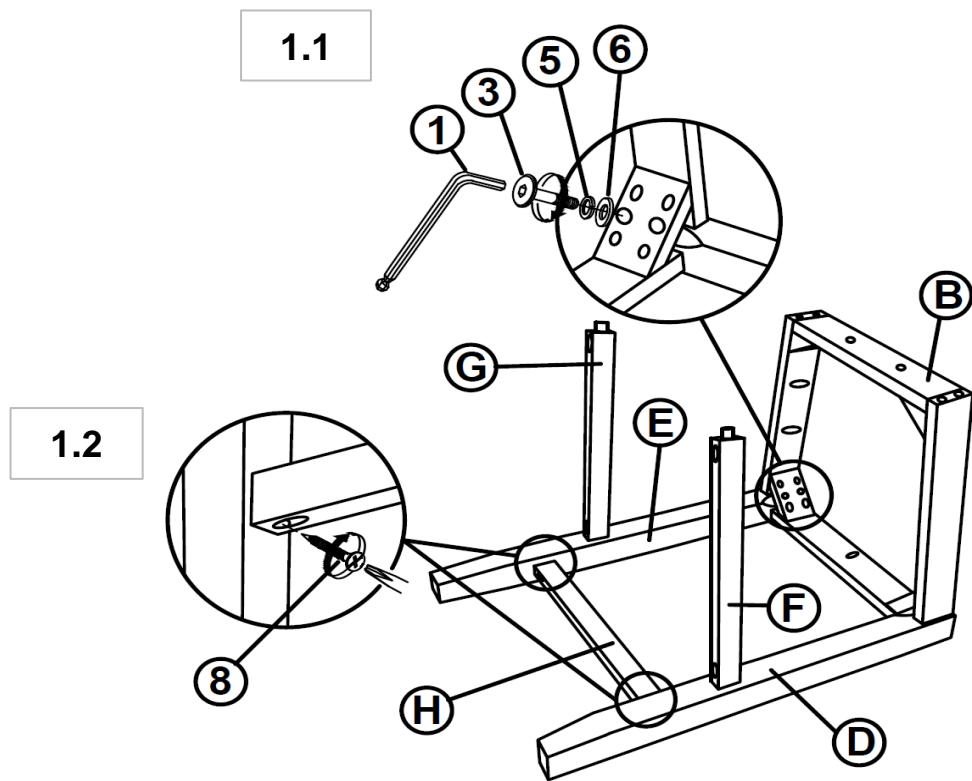

STEP 2

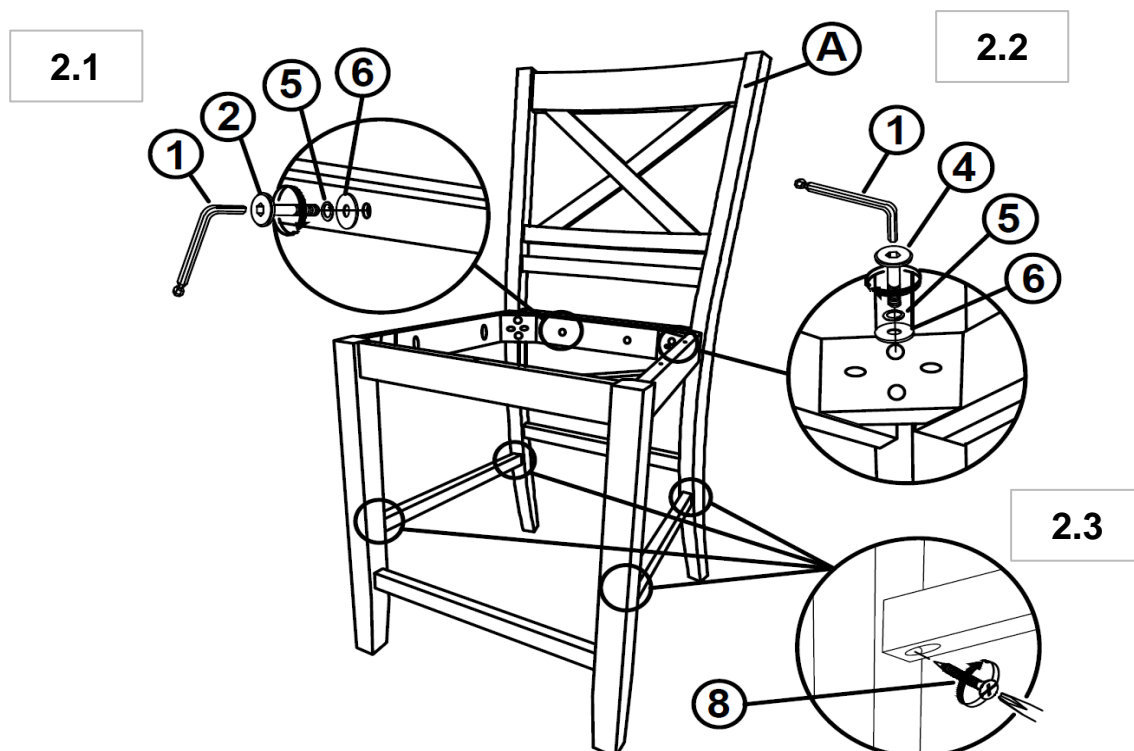


ITEM: **122249**




ASSEMBLY INSTRUCTIONS

STEP 3

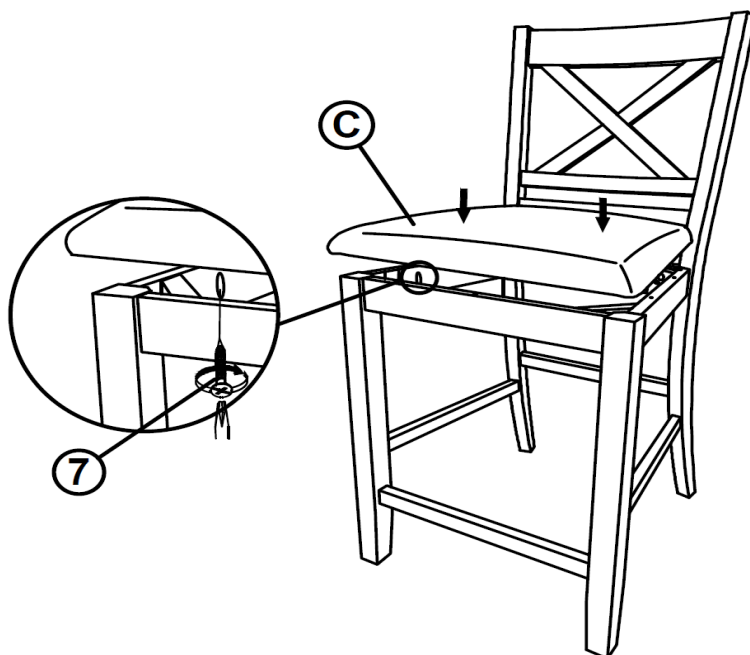


STEP 4

COMPLETE

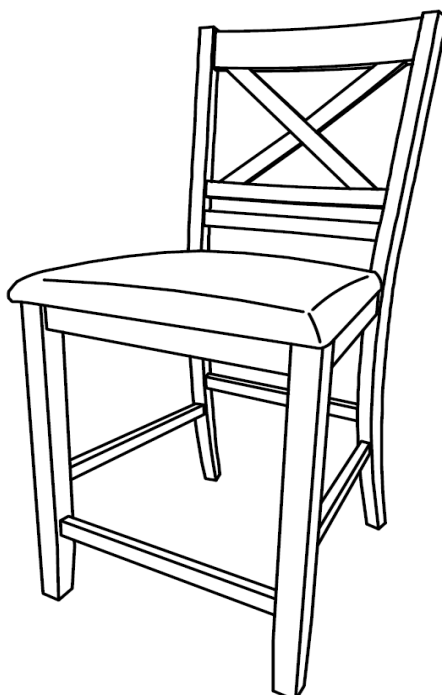

ITEM:122249

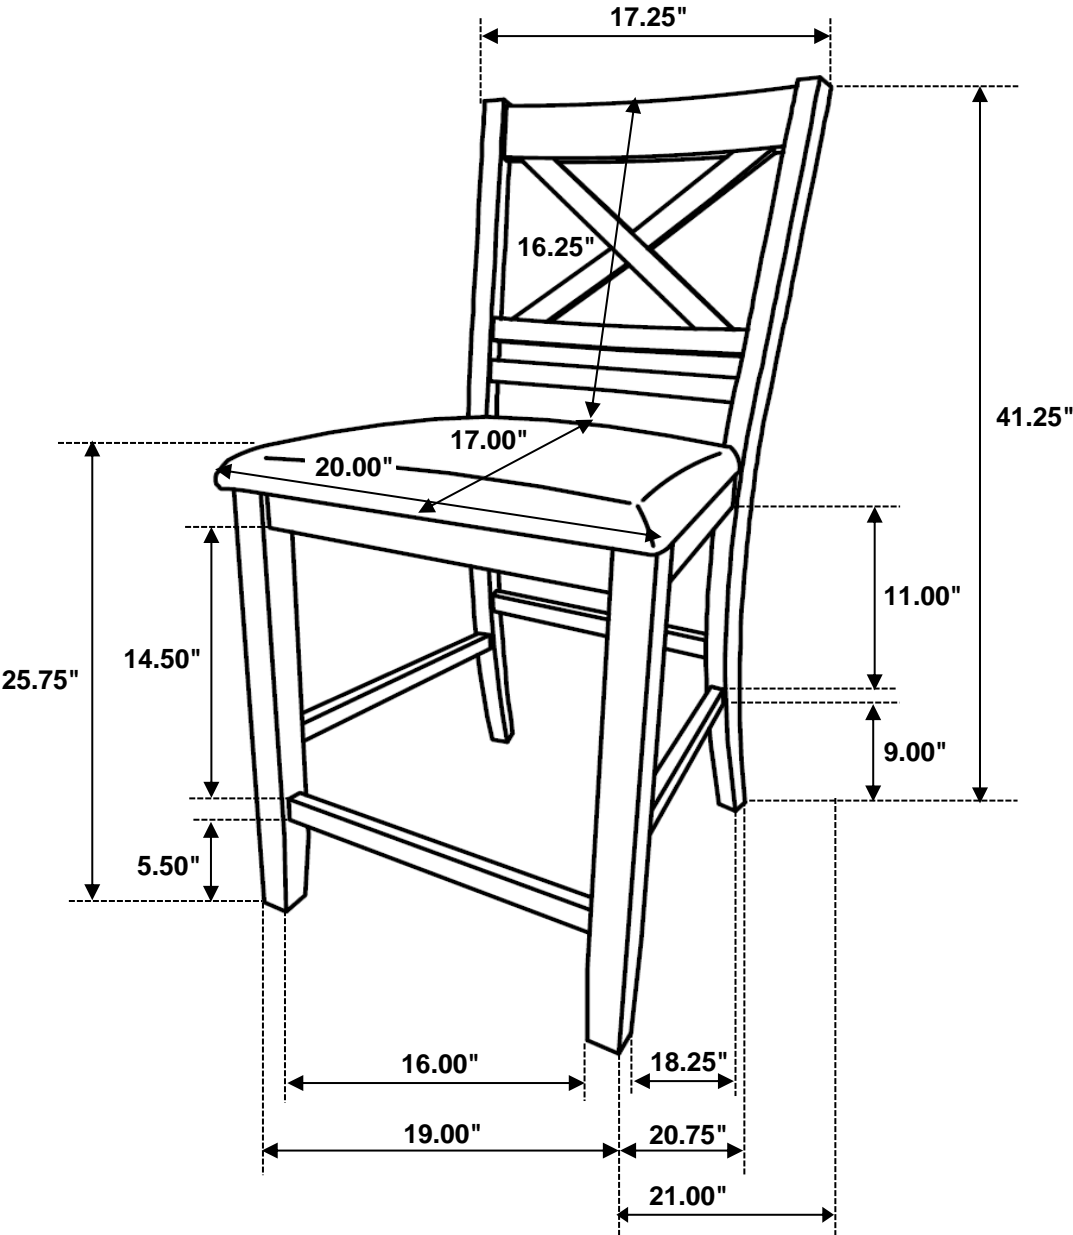

Note: Dimension tolerance $\pm 5\%$