



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

192722
Side Chair

ITEM: **192722**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A RIGHT LEG FRAME

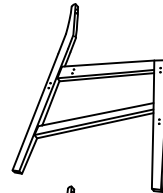


1PC

B LEFT LEG FRAME

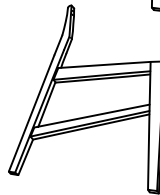


1PC

**C FRONT RAIL
(WITH "C" LABEL)**




1PC

**D BACK RAIL
(WITH "D" LABEL)**



1PC

**E BACK STRETCHER
(WITH "E" LABEL)**



1PC

**F FRONT STRETCHER
(WITH "F" LABEL)**




1PC

G BACKREST



1PC

H SEAT CUSHION



1PC

NOTE :

Quantities shown are for one chair.

ITEM: **192722**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 100MM - BLK)		1PC
2	LONG BOLT (M6 x 45MM - RBW)		10PCS
3	SHORT BOLT (M6 x 20MM - RBW)		4PCS
4	LOCK WASHER (1/4" - BLK)		10PCS
5	FLAT WASHER (M6 X 13MM - RBW)		14PCS
6	WOOD PLUG (Ø14.5 X 9MM)		4PCS

NOTE :

Quantities shown are for one chair.


ITEM: **192722**

ASSEMBLY INSTRUCTIONS




STEP 1

Pre-drill hole mark should be towards the right leg frame.

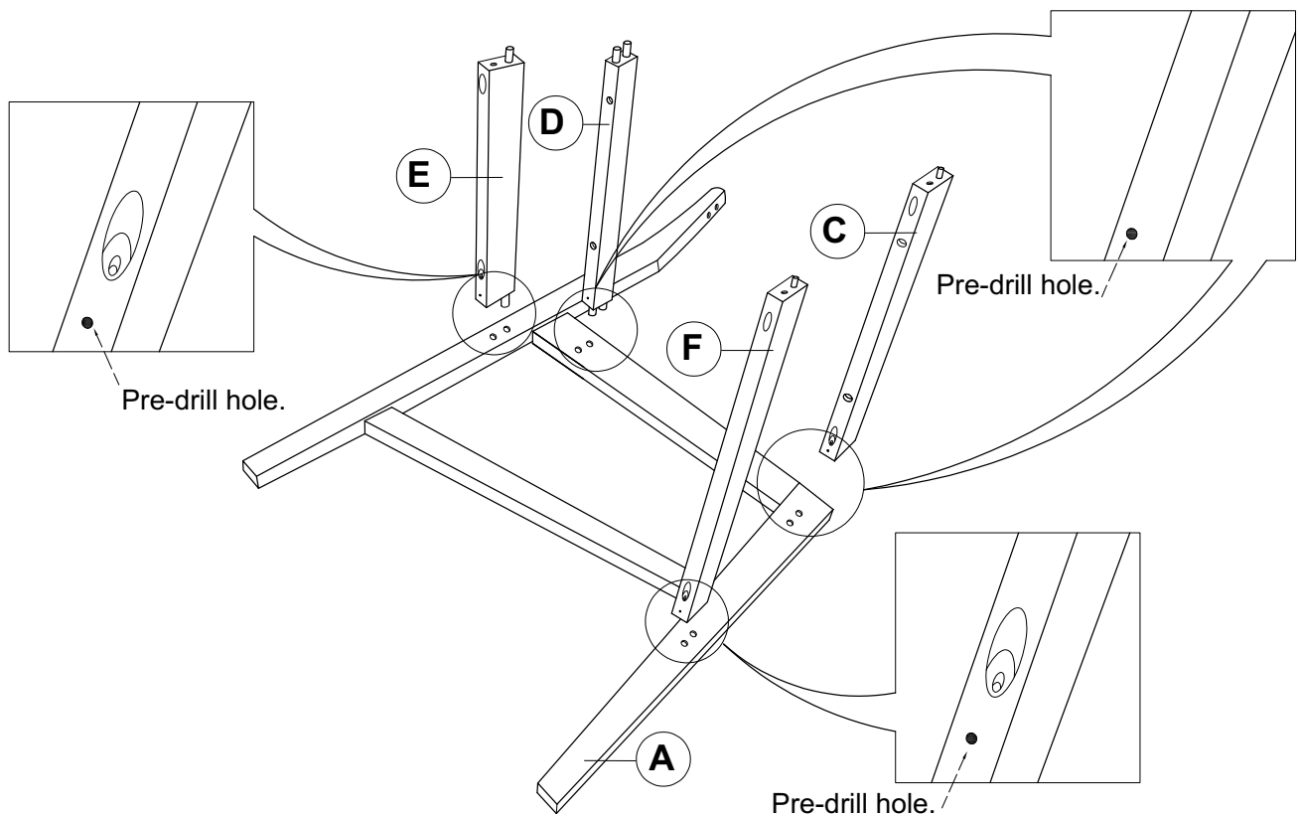

STEP 2

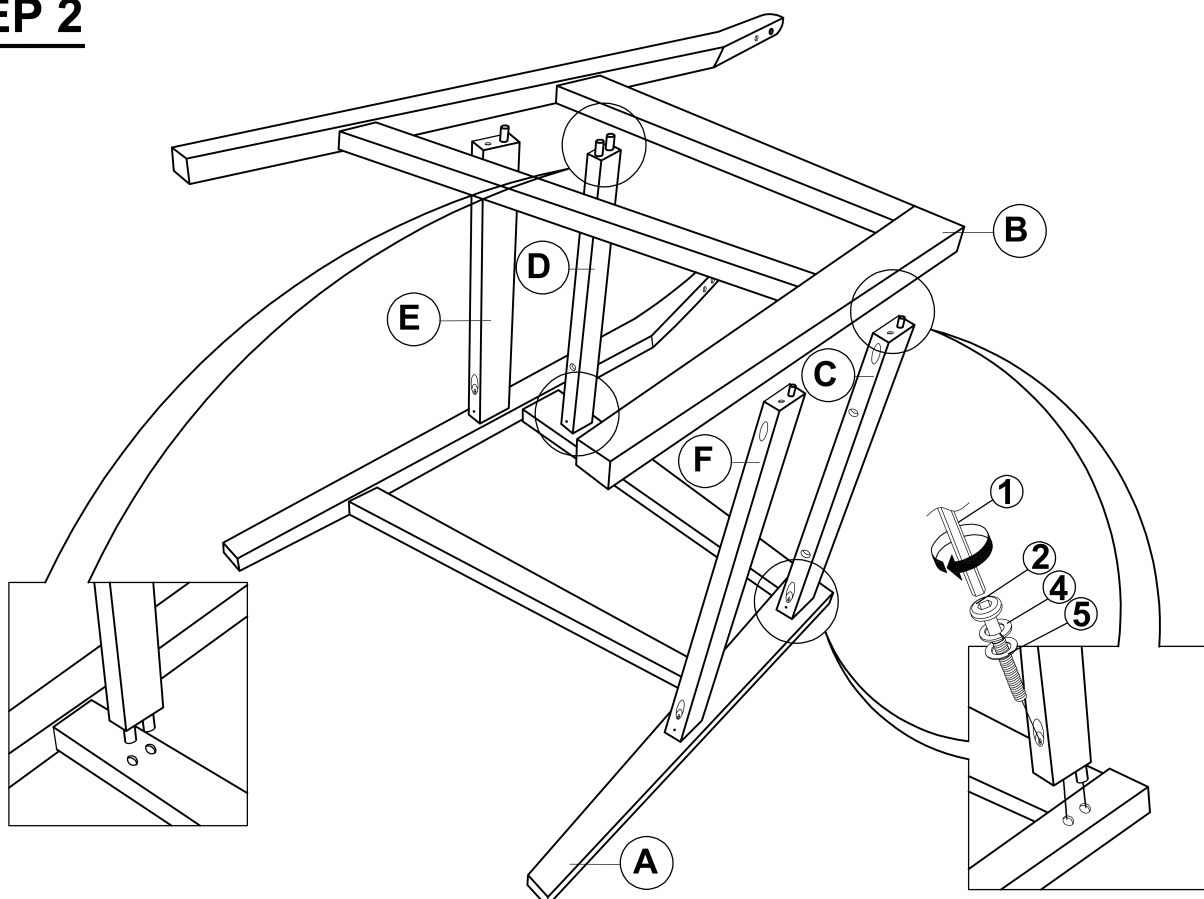


ITEM: **192722**


ASSEMBLY INSTRUCTIONS



STEP 3

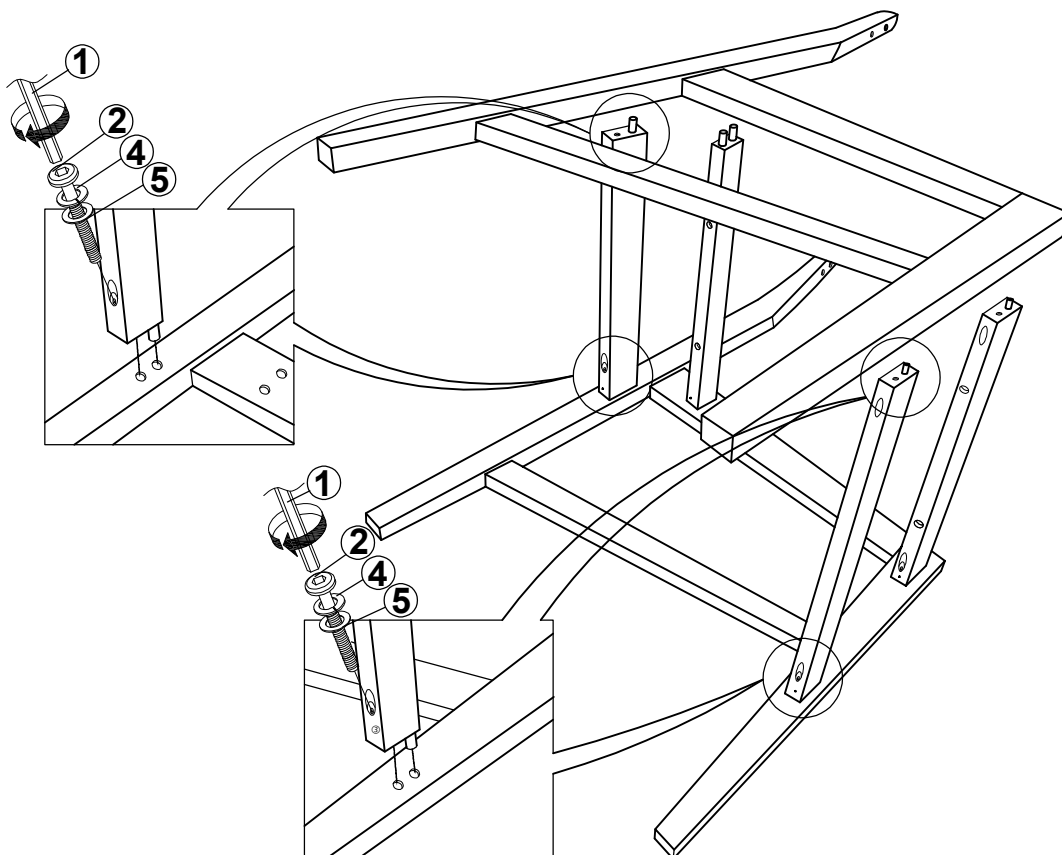


STEP 4

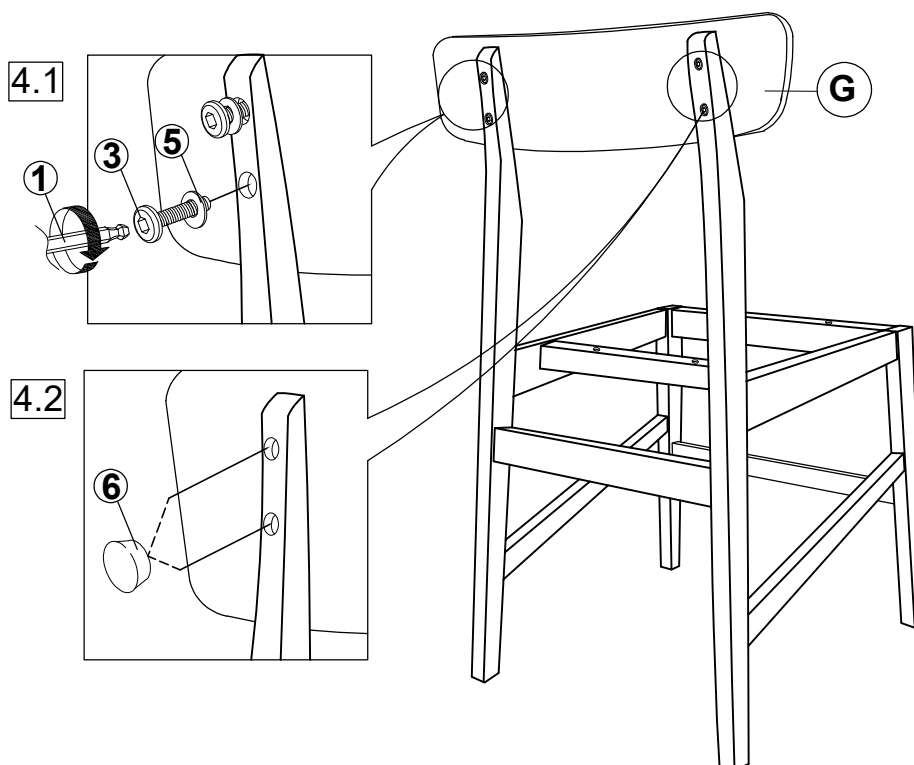

ITEM: **192722**



ASSEMBLY INSTRUCTIONS

STEP 5

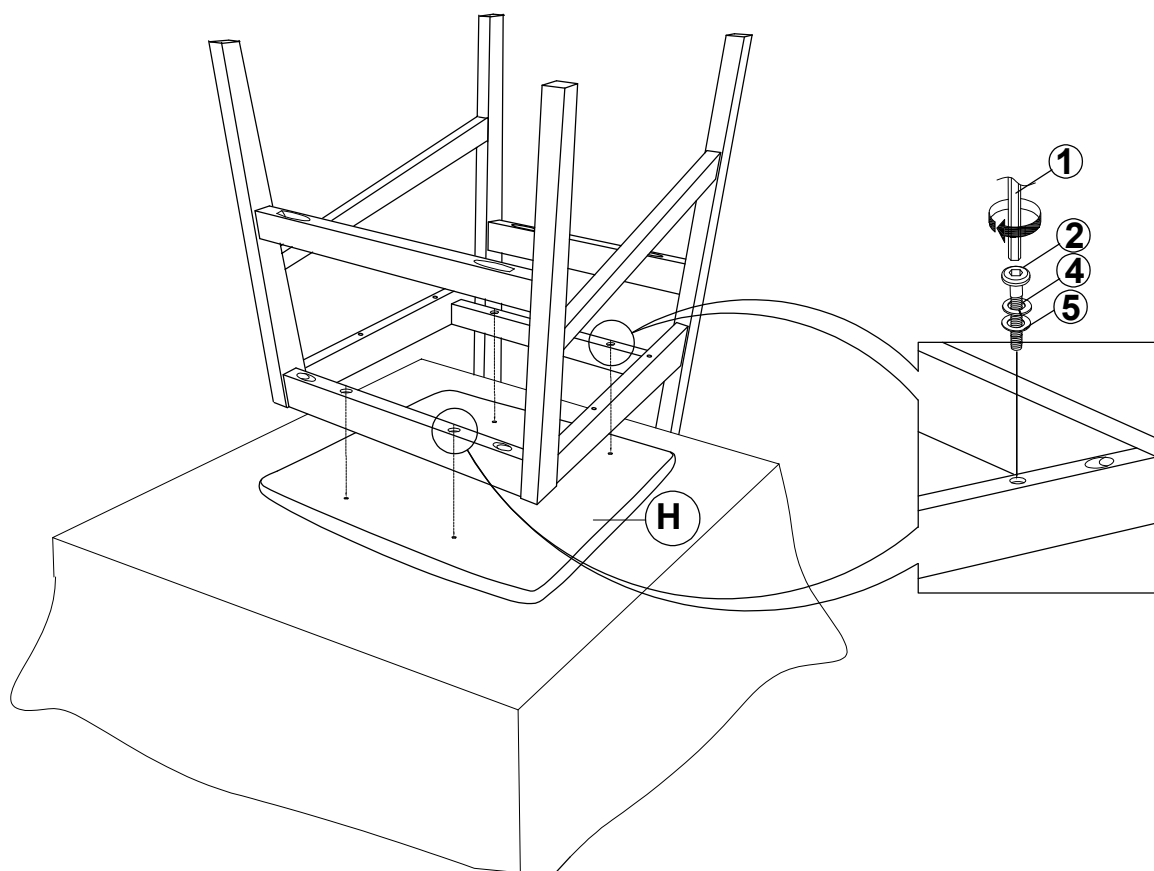


STEP 6

COMPLETE

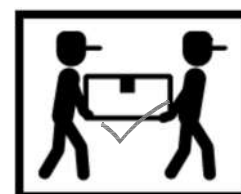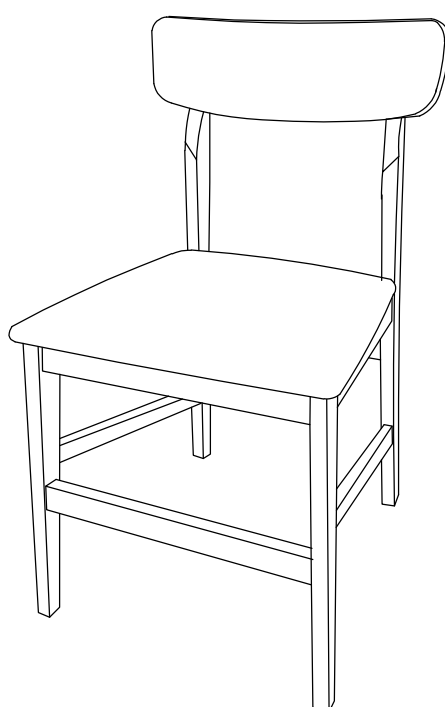

ITEM: **192722**

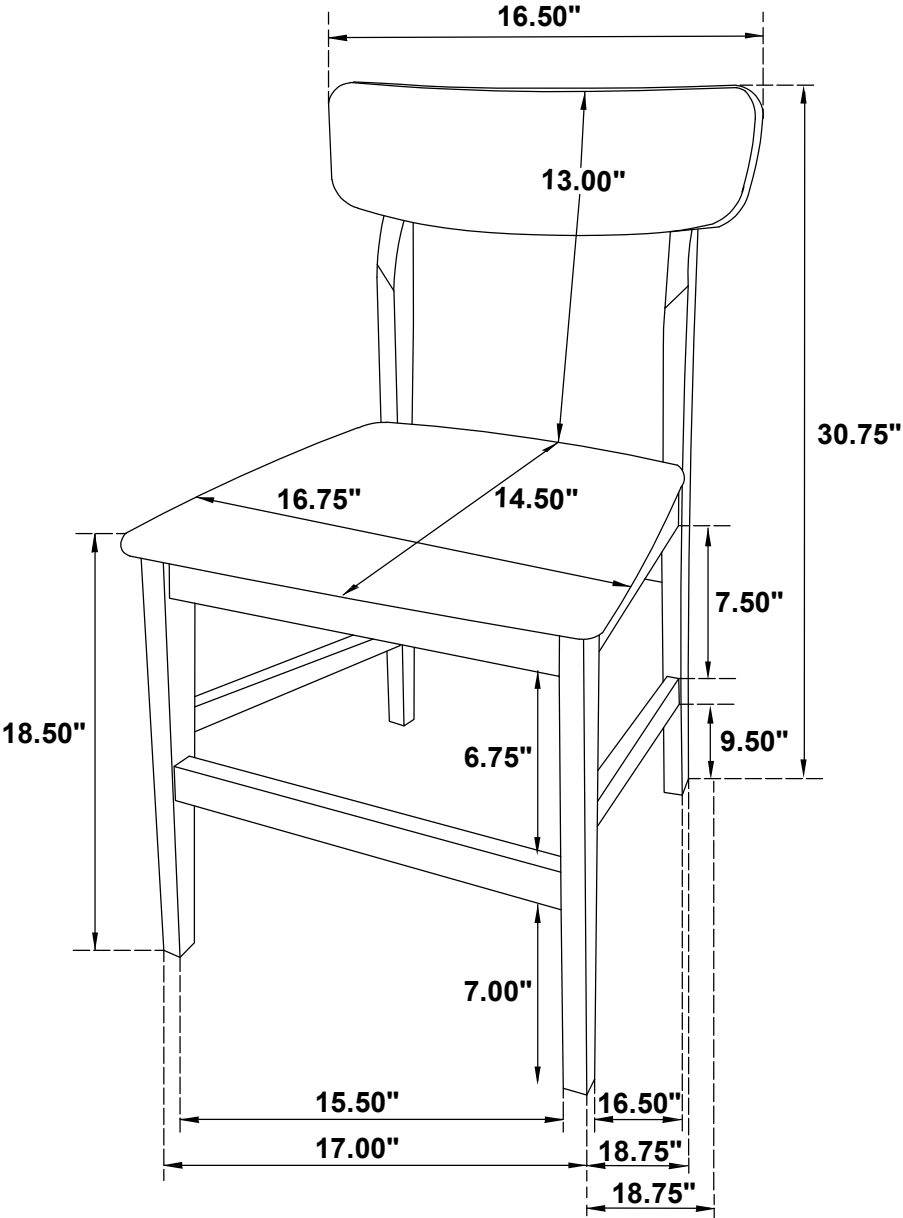

Note: Dimension tolerance $\pm 5\%$