



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

193750
Dining Table

ITEM: **193750**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG FRAME		4PCS
C	MOUNTING BOARD		1PC
D	LEG CONNECTOR		8PCS

HARDWARE IDENTIFICATION

1	BOLT (M6 x 30MM - RBW)		32PCS
2	LOCK WASHER (M6 x 12MM - RBW)		32PCS
3	FLAT WASHER (M6 x 19MM - RBW)		32PCS
4	ALLEN WRENCH (M4 x 100MM - BLK)		1PC




ITEM: **193750**

ASSEMBLY INSTRUCTIONS






STEP 1

Do not fully tighten bolts.

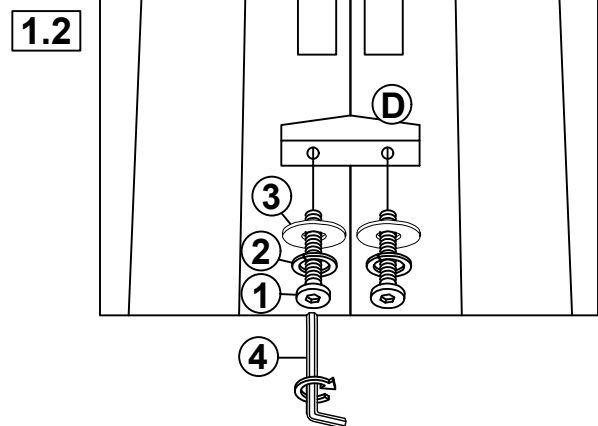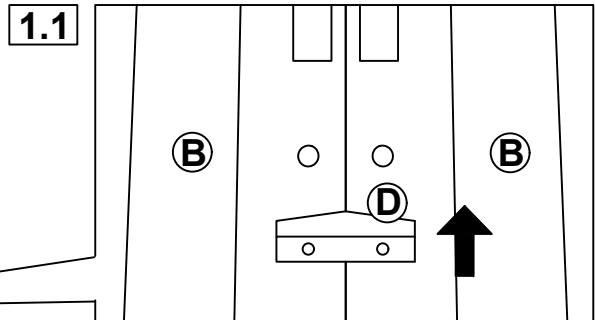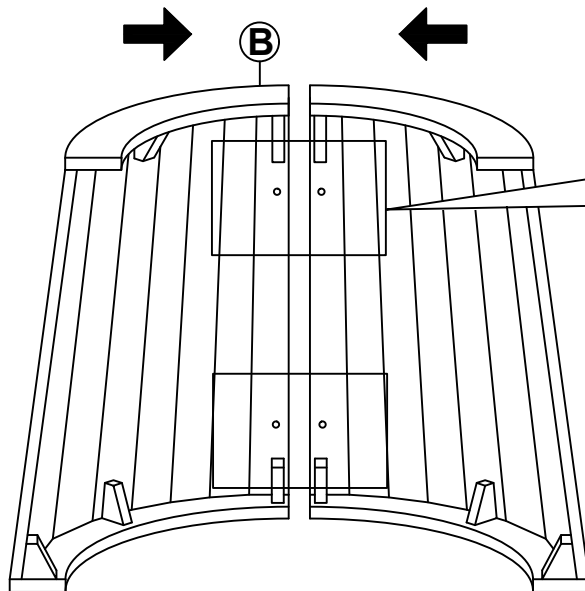


STEP 2

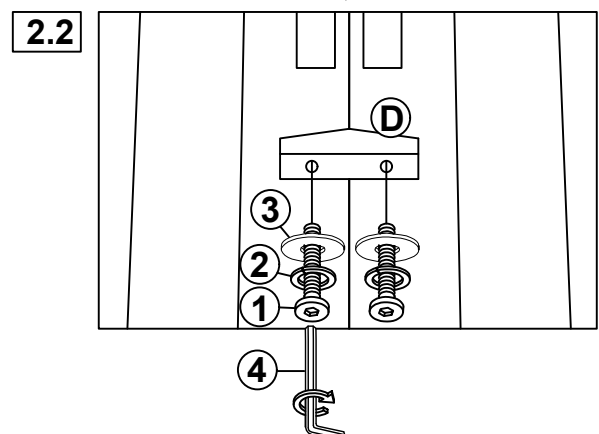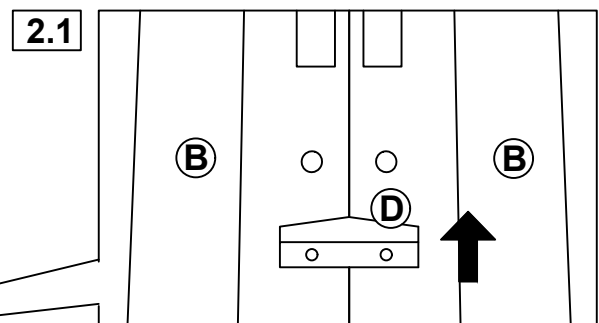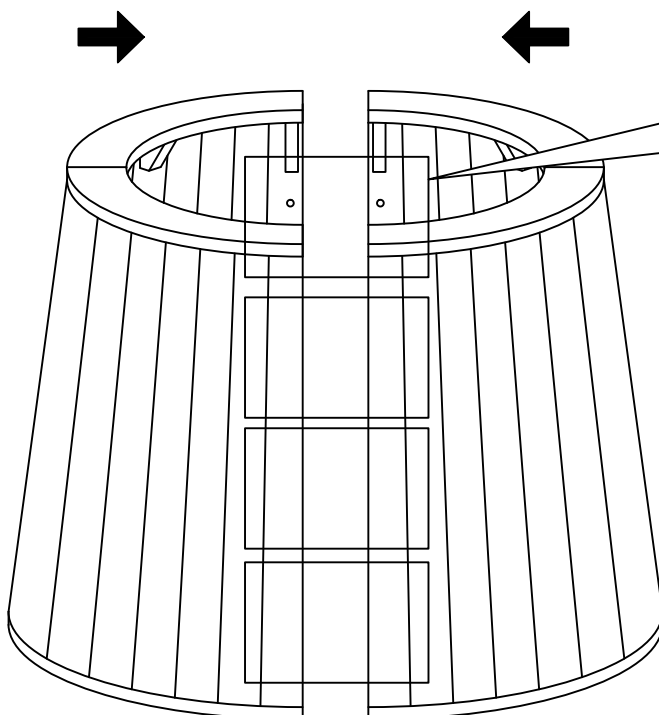

ITEM: **193750**

ASSEMBLY INSTRUCTIONS


STEP 3

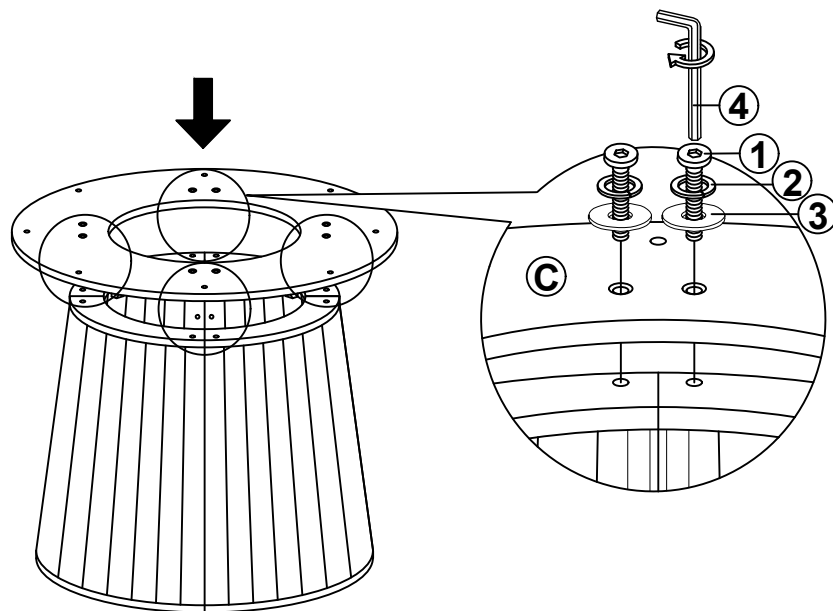

STEP 4



Fully tighten all bolts.

Adjust the nuts as needed

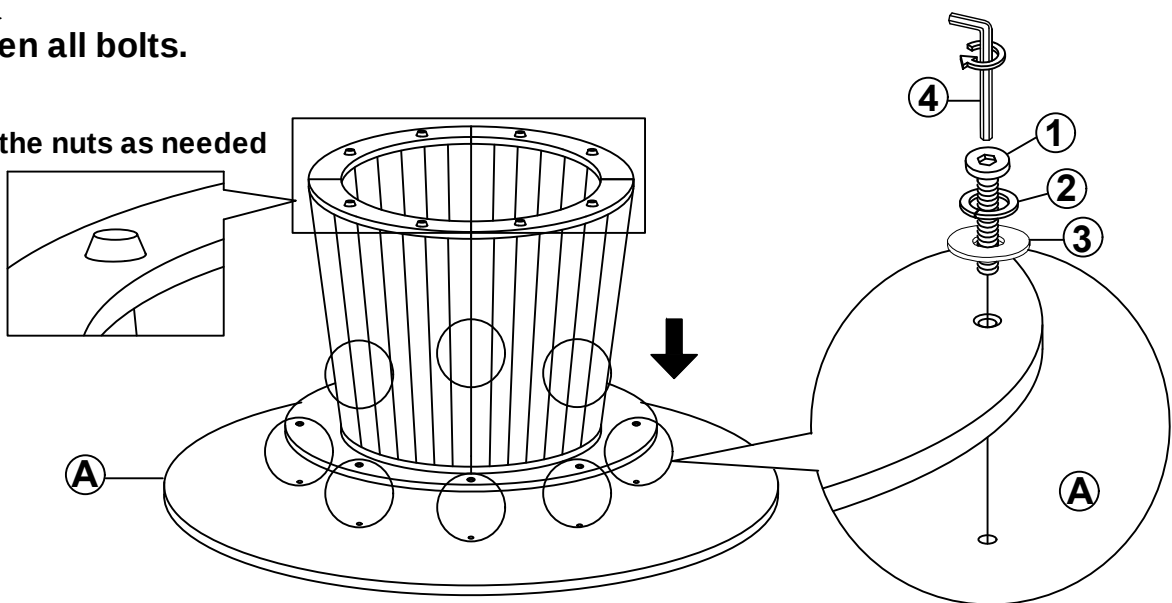


STEP 5

COMPLETE

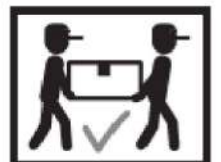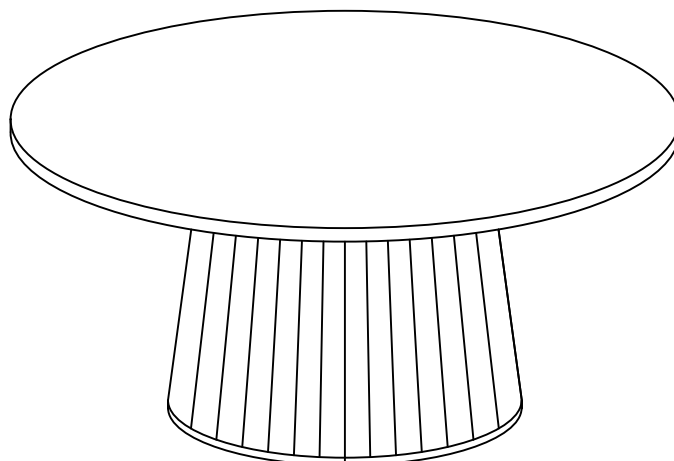

ITEM: **193750**

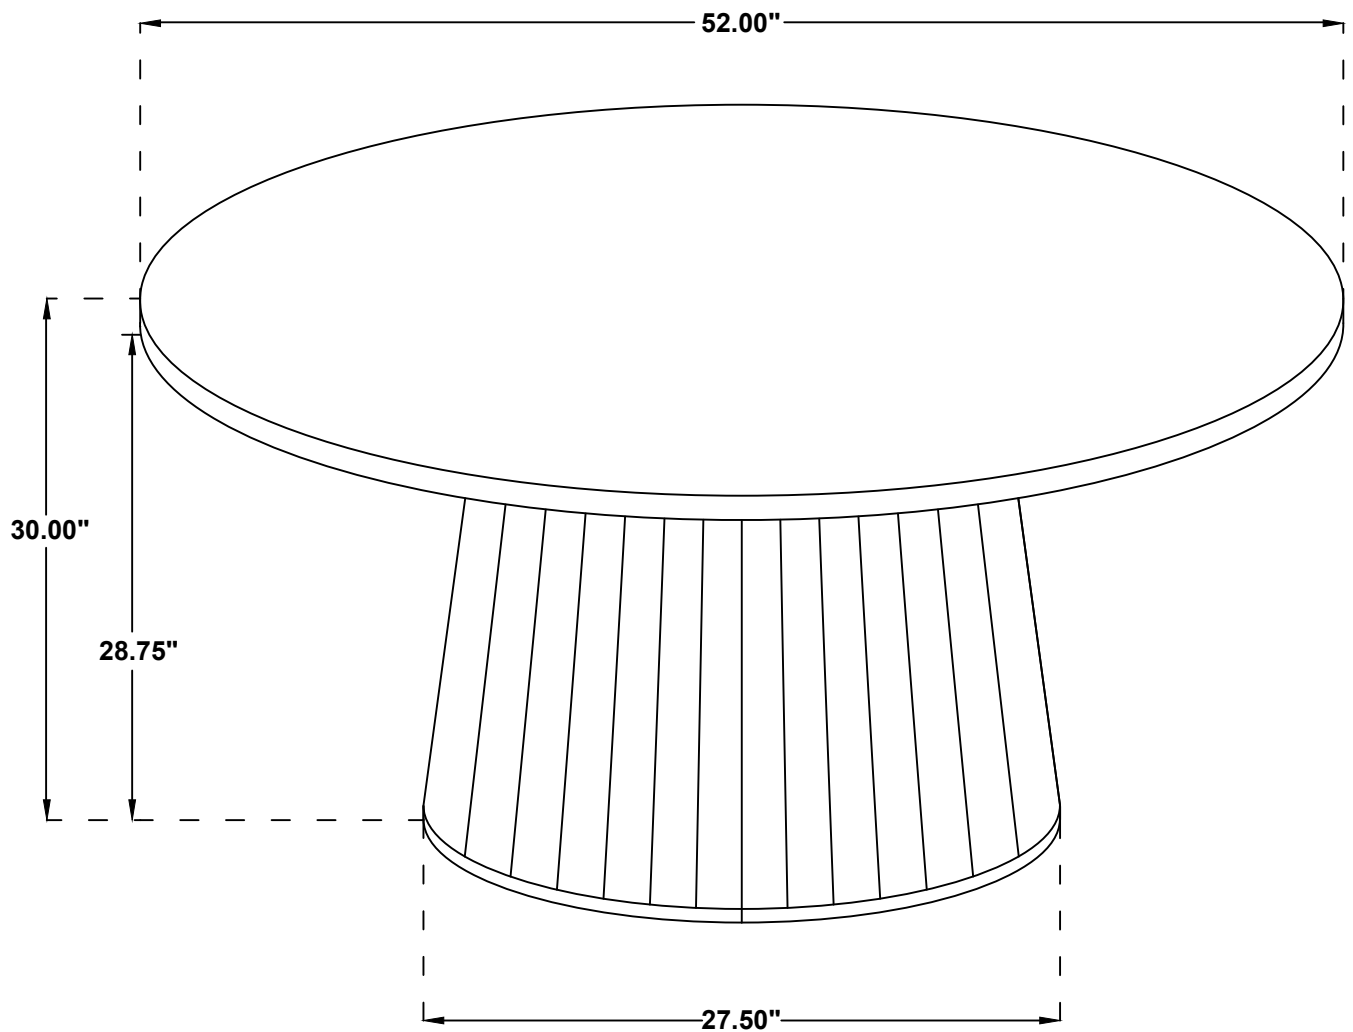

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

193752NMG
Side Chair

ITEM: 193752NMG

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A	BACKREST		1PC
B	RIGHT ARMREST WITH LABEL "R"		1PC
C	LEFT ARMREST WITH LABEL "L"		1PC
D	SEAT CUSHION WITH FRAME		1PC
E	LEG FRAME		2PCS
F	FRONT RAIL		1PC
G	BACK RAIL		1PC

HARDWARE IDENTIFICATION

1	SHORT BOLT (M6 x 35MM - RBW)		8PCS
2	LONG BOLT (M6 x 55MM - RBW)		10PCS
3	LOCK WASHER (M6 x 12MM - RBW)		18PCS
4	FLAT WASHER (M6 x 19MM - RBW)		8PCS
5	WOOD DOWEL (M8 X 30MM)		8PCS
6	FLAT HEAD SCREW (M4 x 32MM - RBW)		2PCS
7	ALLEN WRENCH (M4 x 100MM - BLK)		1PC


NOTE:

Quantities shown are for one chair.

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **193752NMG**
ASSEMBLY INSTRUCTIONS

STEP 1

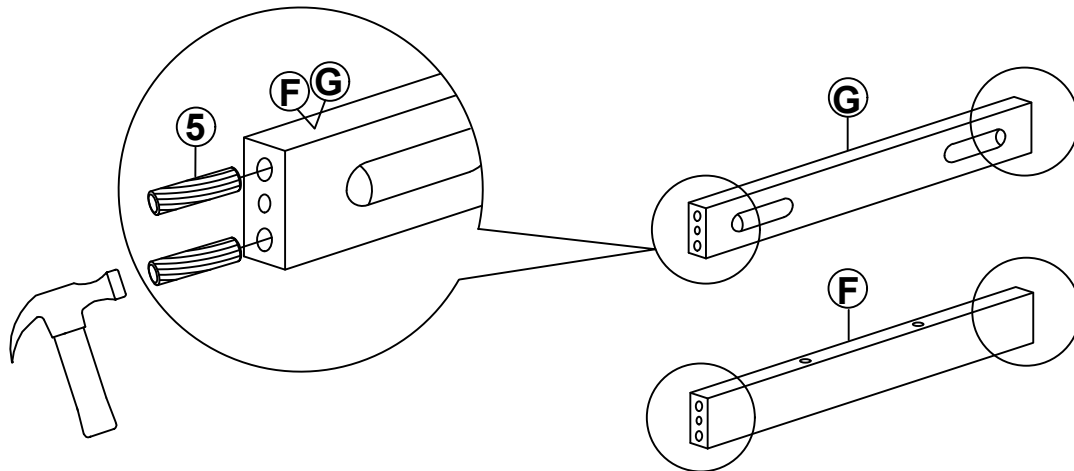


STEP 2

Do not fully tighten bolts.

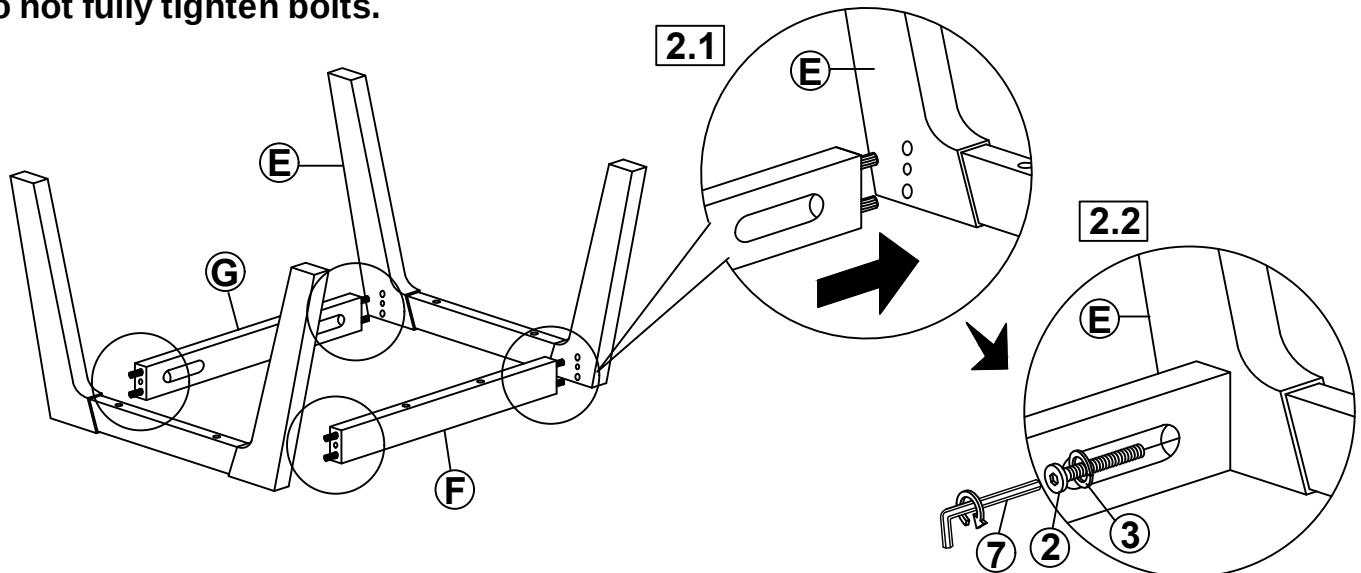

STEP 3

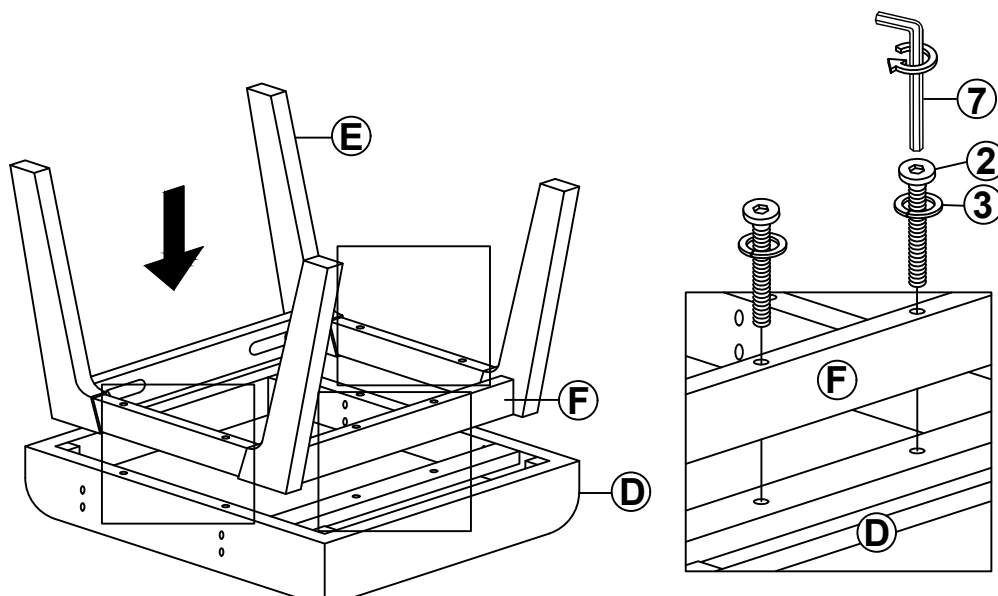


ITEM: **193752NMG**

ASSEMBLY INSTRUCTIONS




STEP 4

Insert the Left and Right Armrest, then push the backrest down slightly to lock it in place.


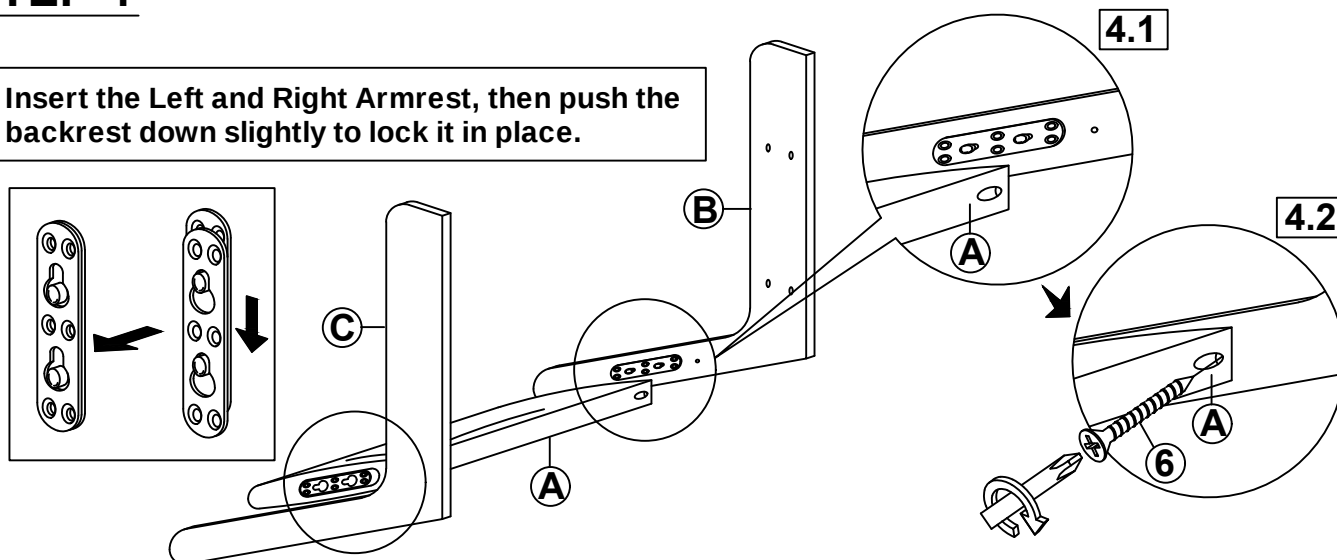


STEP 5

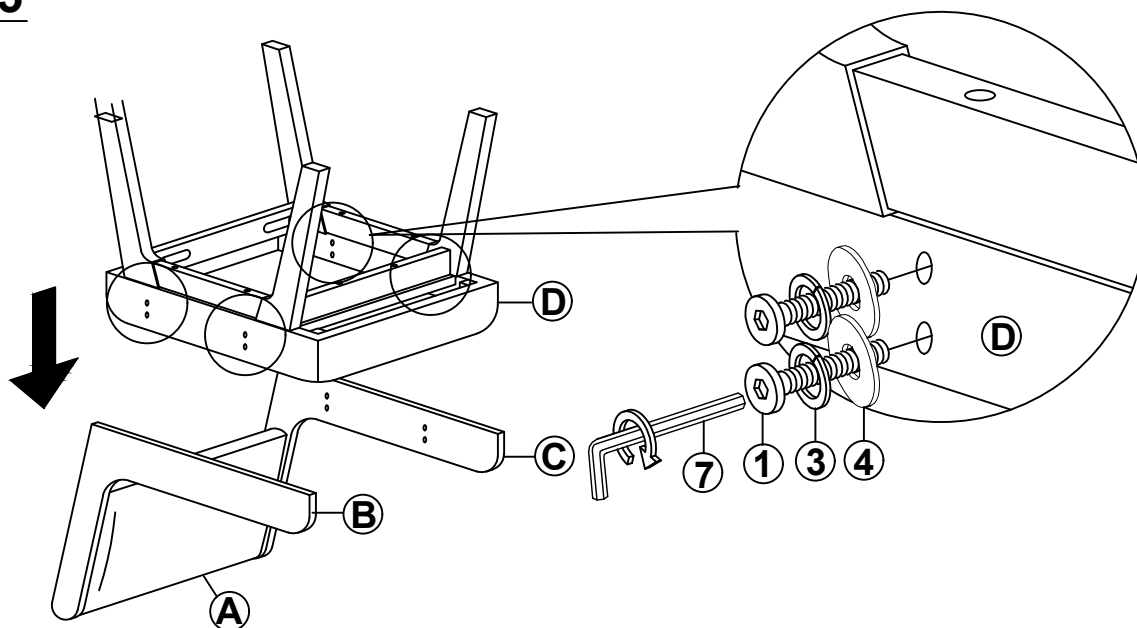


STEP 6

COMPLETE

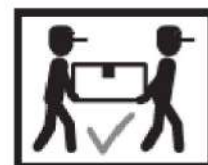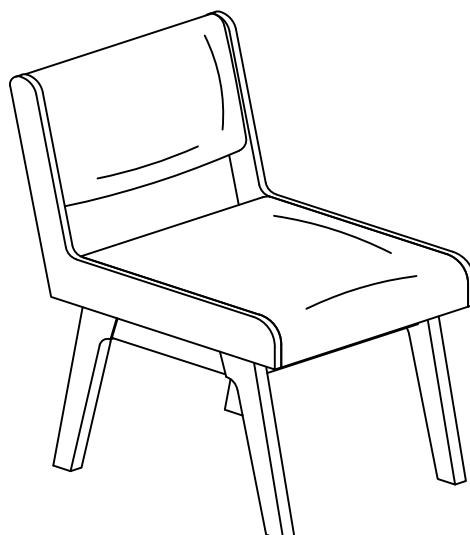

ITEM: **193752NMG**

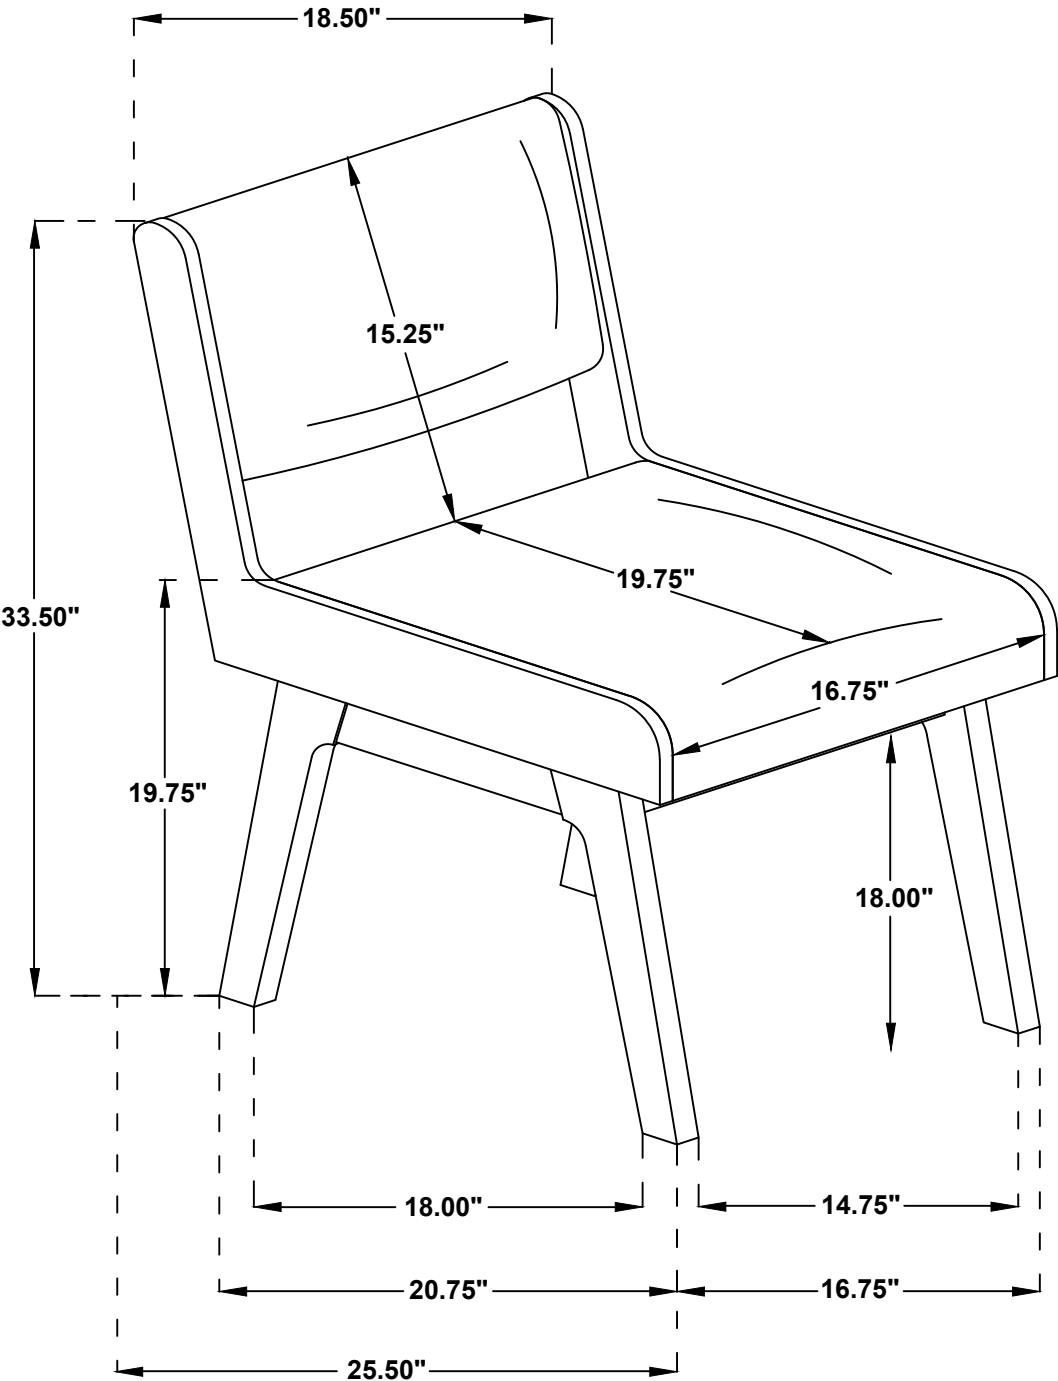

Note: Dimension tolerance $\pm 5\%$