


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

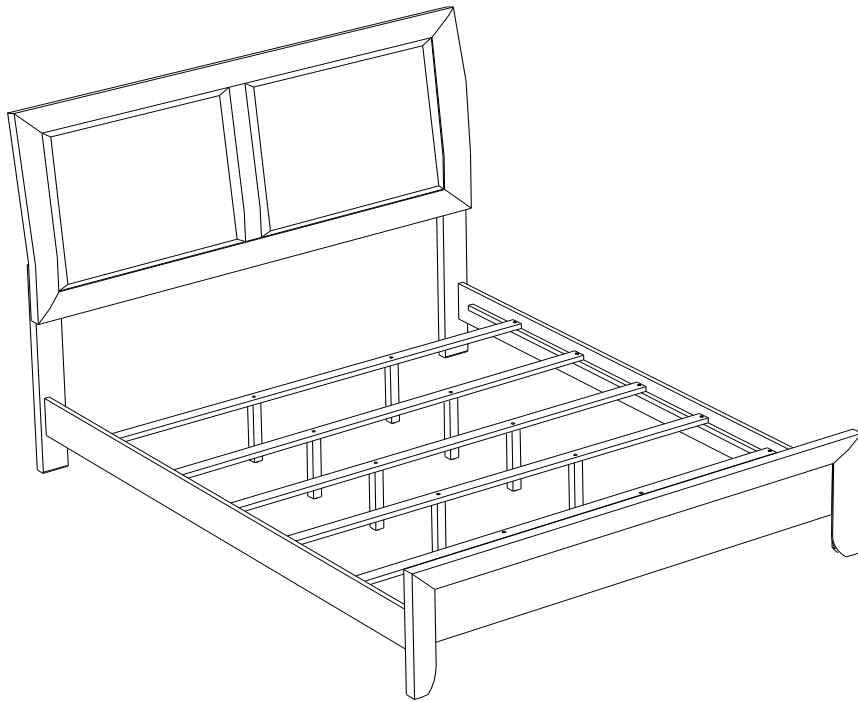

Fine Furniture for every stage of life

200701KE (B1-B3) **Eastern King Bed**

REVISION 0 : 01/05/2009
REVISION 1 : 01/09/2012
REVISION 2 : 12/22/2020

ITEM: 200701KE (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME


20 MINUTES

PARTS IDENTIFICATION




B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	LEFT HEADBOARD LEG		1PC
C	RIGHT HEADBOARD LEG		1PC

B2 (BOX 2)

D	FOOTBOARD		1PC
---	-----------	---	-----

B3 (BOX 3)

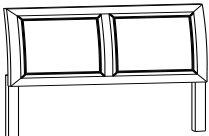E	BED SLAT		5PCS
F	BED SLAT SUPPORT WITH LEVELER		10PCS
G	BED RAIL		2PCS
HB	200701KE(B1) *FROM BOX 1 HEADBOARD COMPLETE		1PC
D	200701KE(B2) FROM BOX 2 FOOTBOARD		1PC

ITEM: 200701KE (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 200701KE (B1)

- | | | | |
|---|--|--|------|
| 1 | BOLT
(M6 x 35mm - BLK) |  | 6PCS |
| 2 | ALLEN WRENCH
(M4 x 60mm - BLK) |  | 1PC |

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 200701KE (B3)


- | | | | |
|---|---|---|-------|
| 3 | FLAT HEAD SCREW
(M4 x 32mm - RBW) |  | 10PCS |
|---|---|---|-------|

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

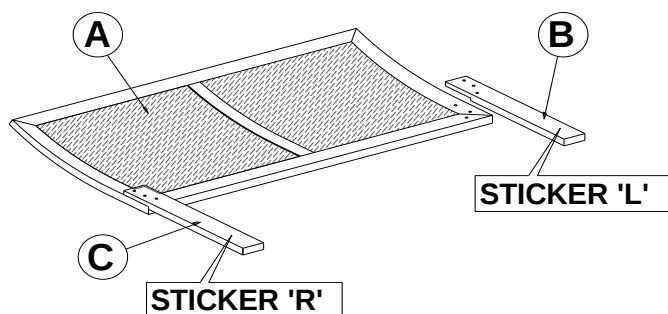




****BACK VIEW****

Note : Please put item on soft surface.

STEP 2

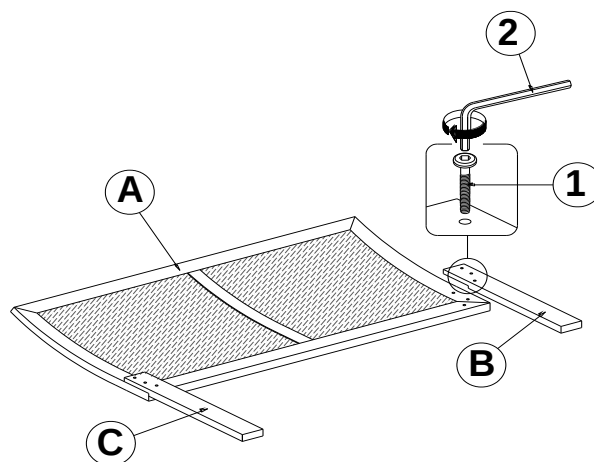

STEP 3

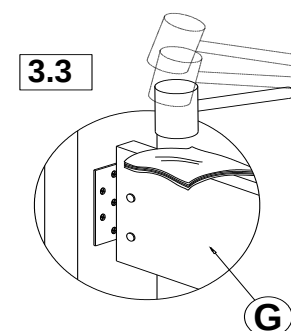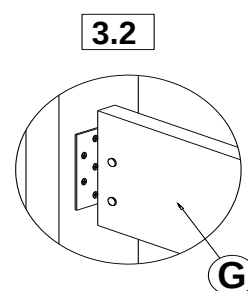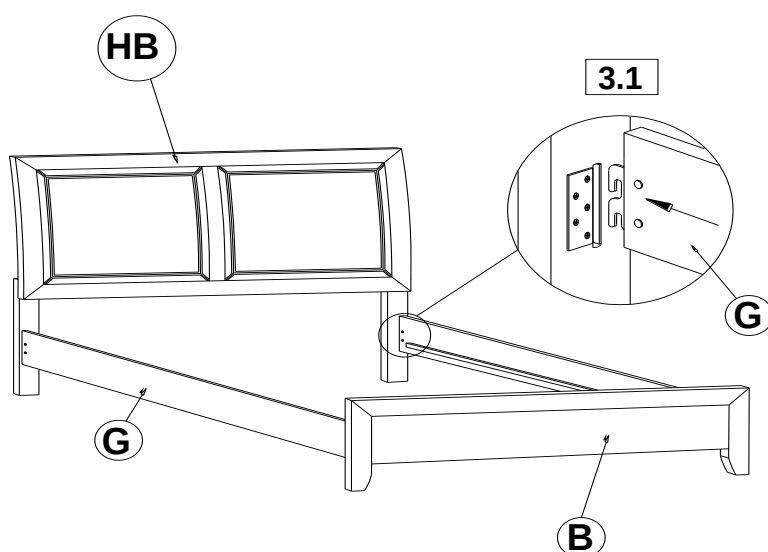


ITEM: **200701KE (B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 4

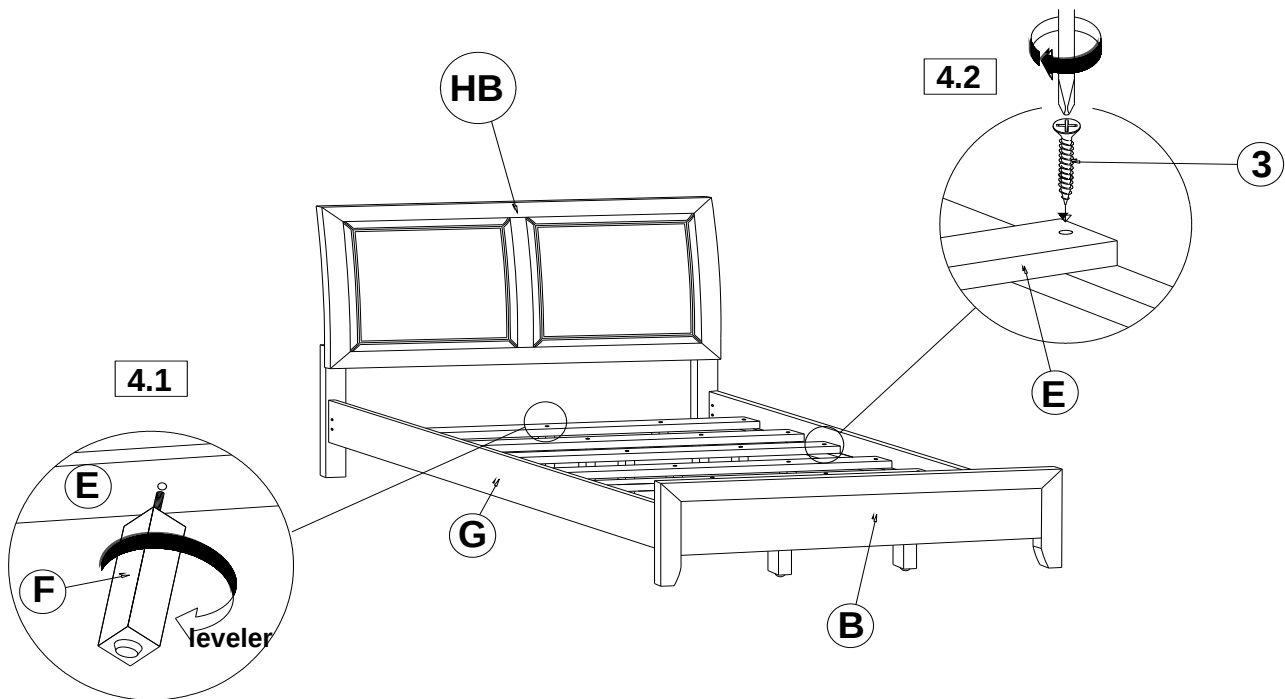


STEP 5 COMPLETE

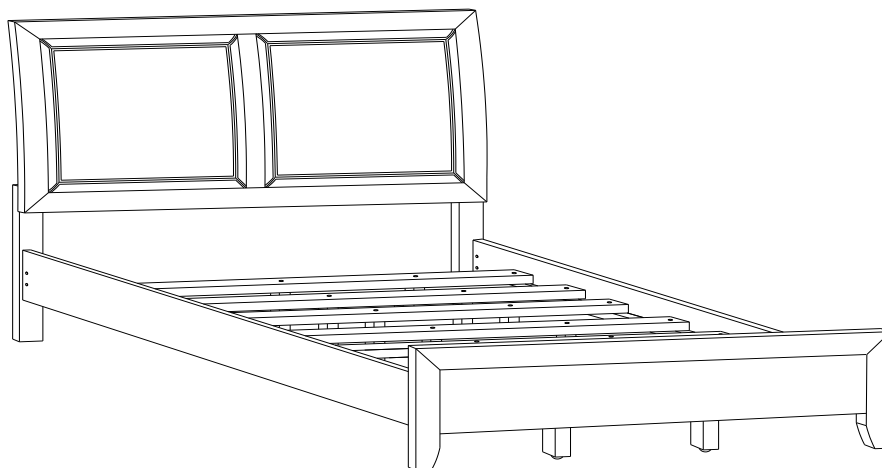

ITEM: **200701KE (B1-B3)**




Inner Size: 76.75"W x 81.00"D

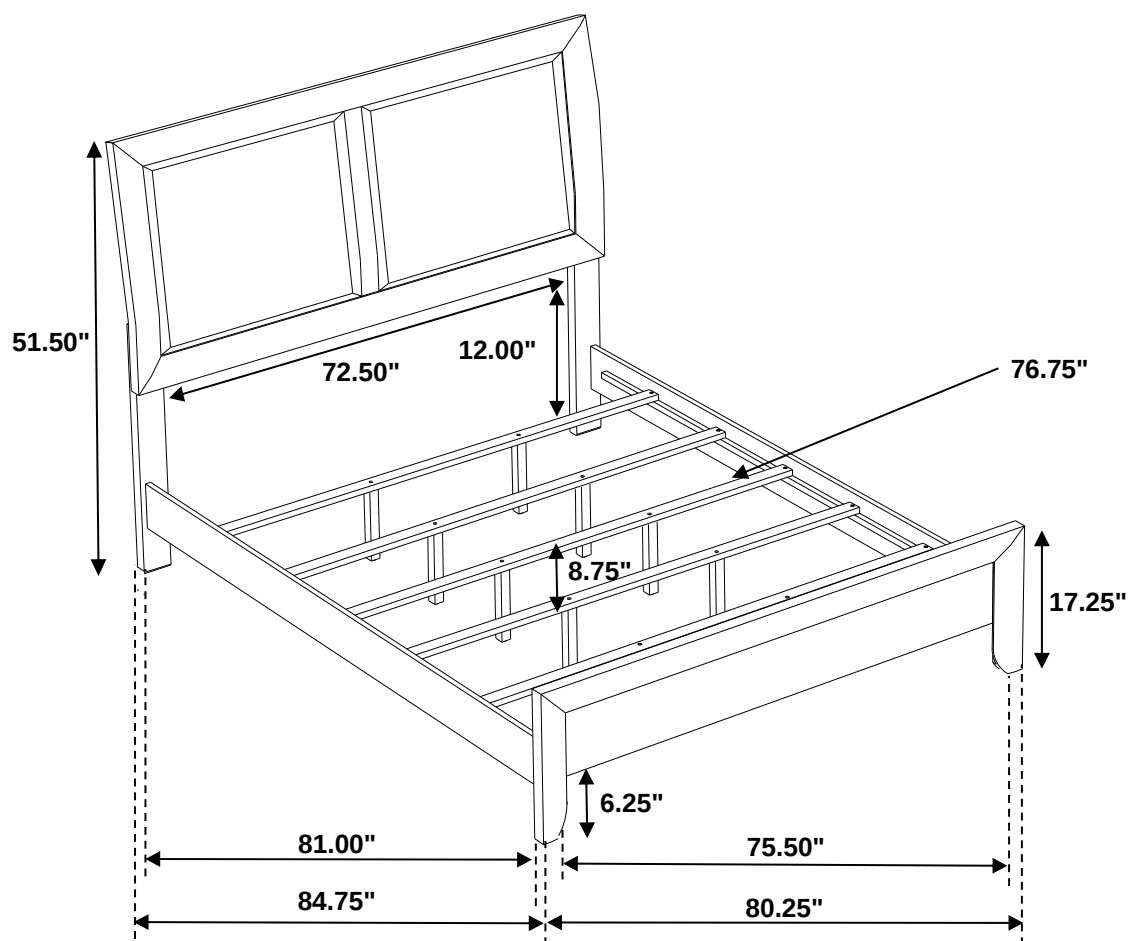

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

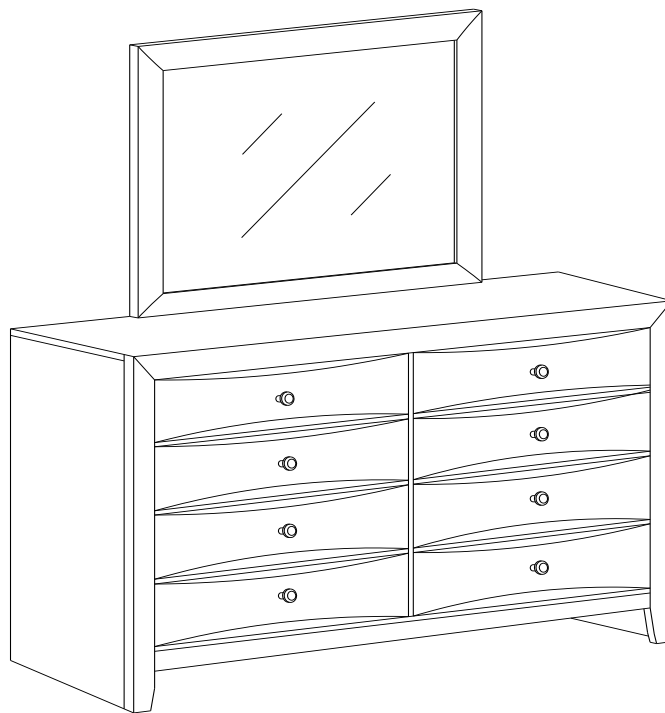

Fine Furniture for every stage of life

200704
Mirror

ITEM: **200704**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A DRESSER
FROM BOX ITEM
#200703

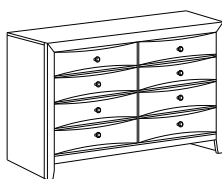


1PC

B MIRROR

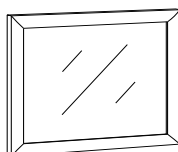

1PC

C MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW
(M4 x 32mm - RBW)




12PCS


ITEM: **200704**

ASSEMBLY INSTRUCTIONS

STEP 1

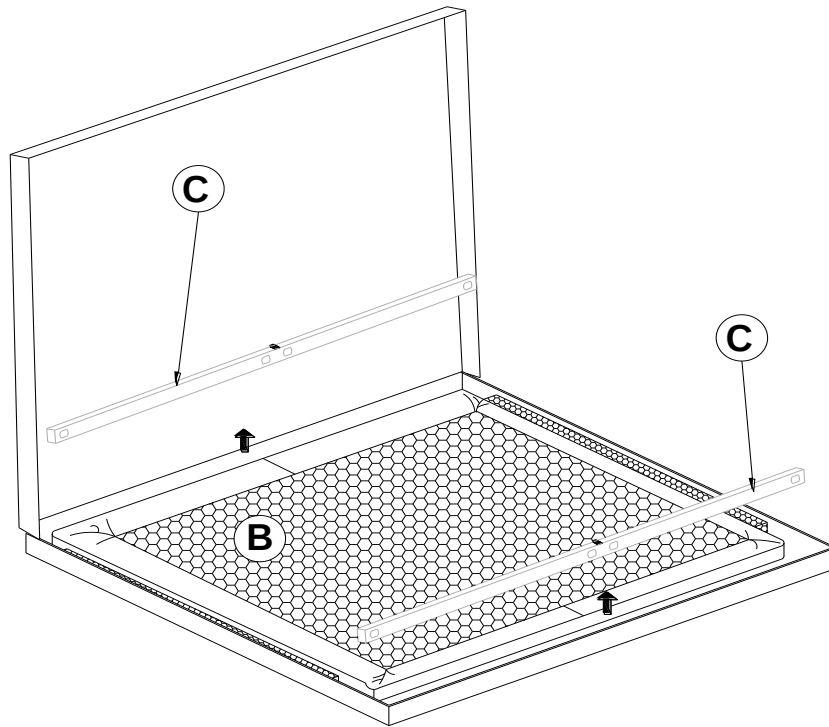

STEP 2

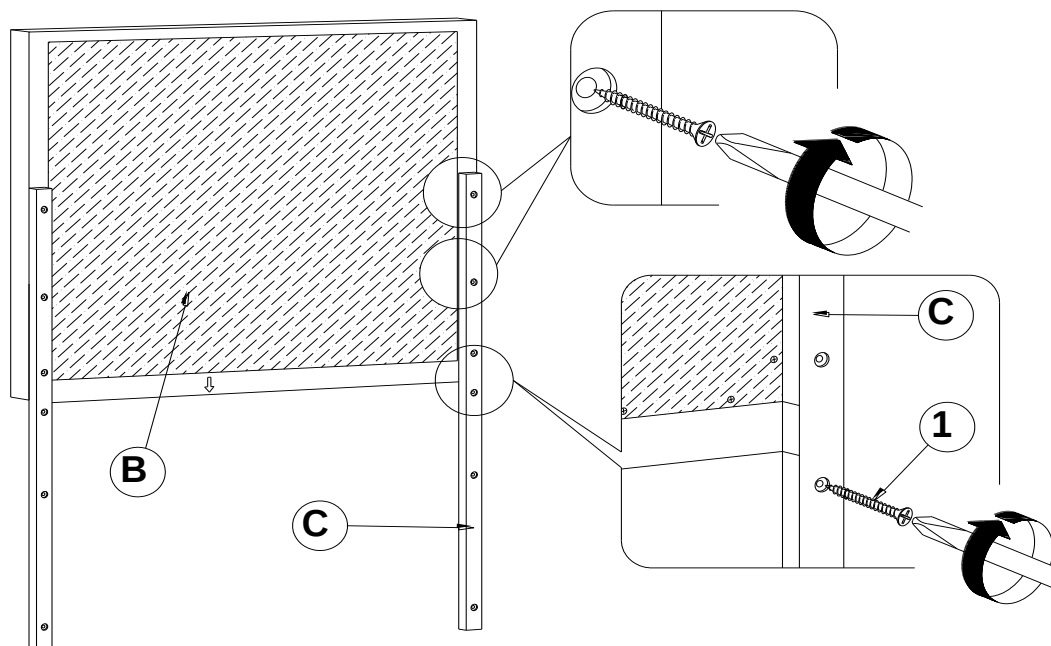


****BACK VIEW****


ITEM: **200704**

ASSEMBLY INSTRUCTIONS


STEP 3

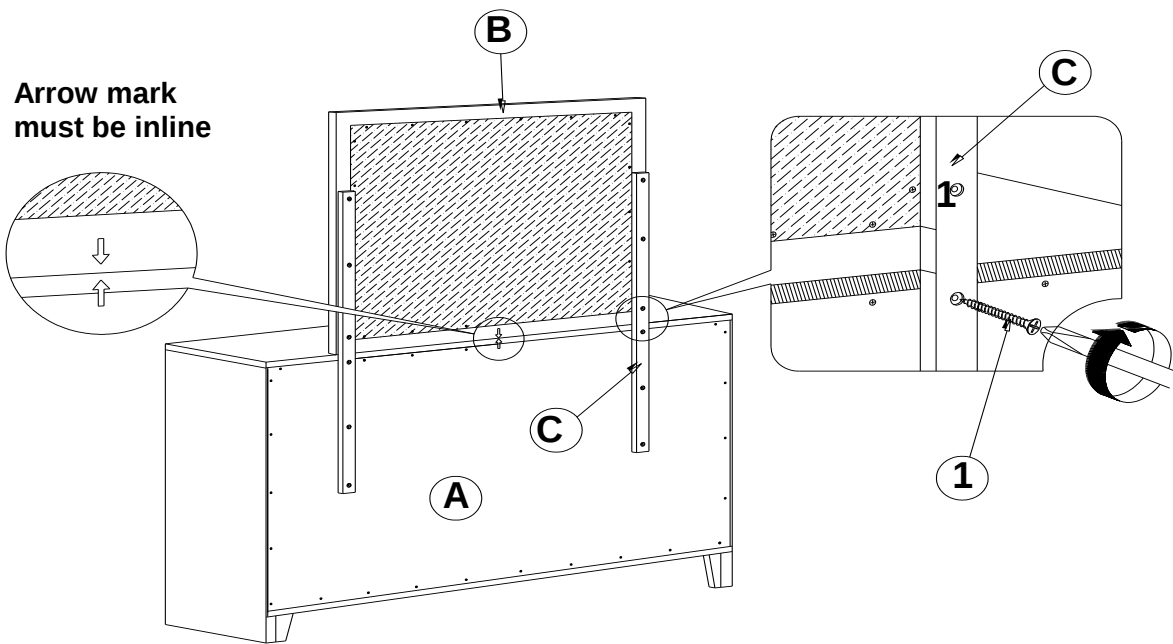

STEP 4 COMPLETE

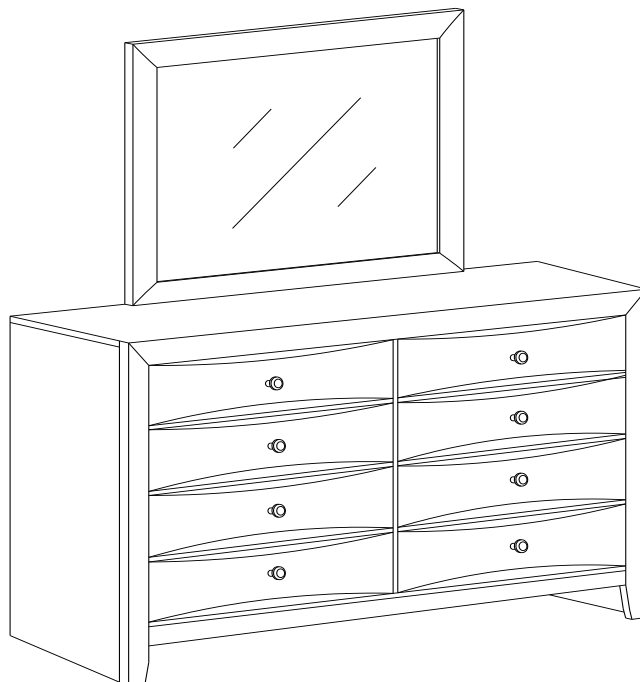

ITEM: **200704**

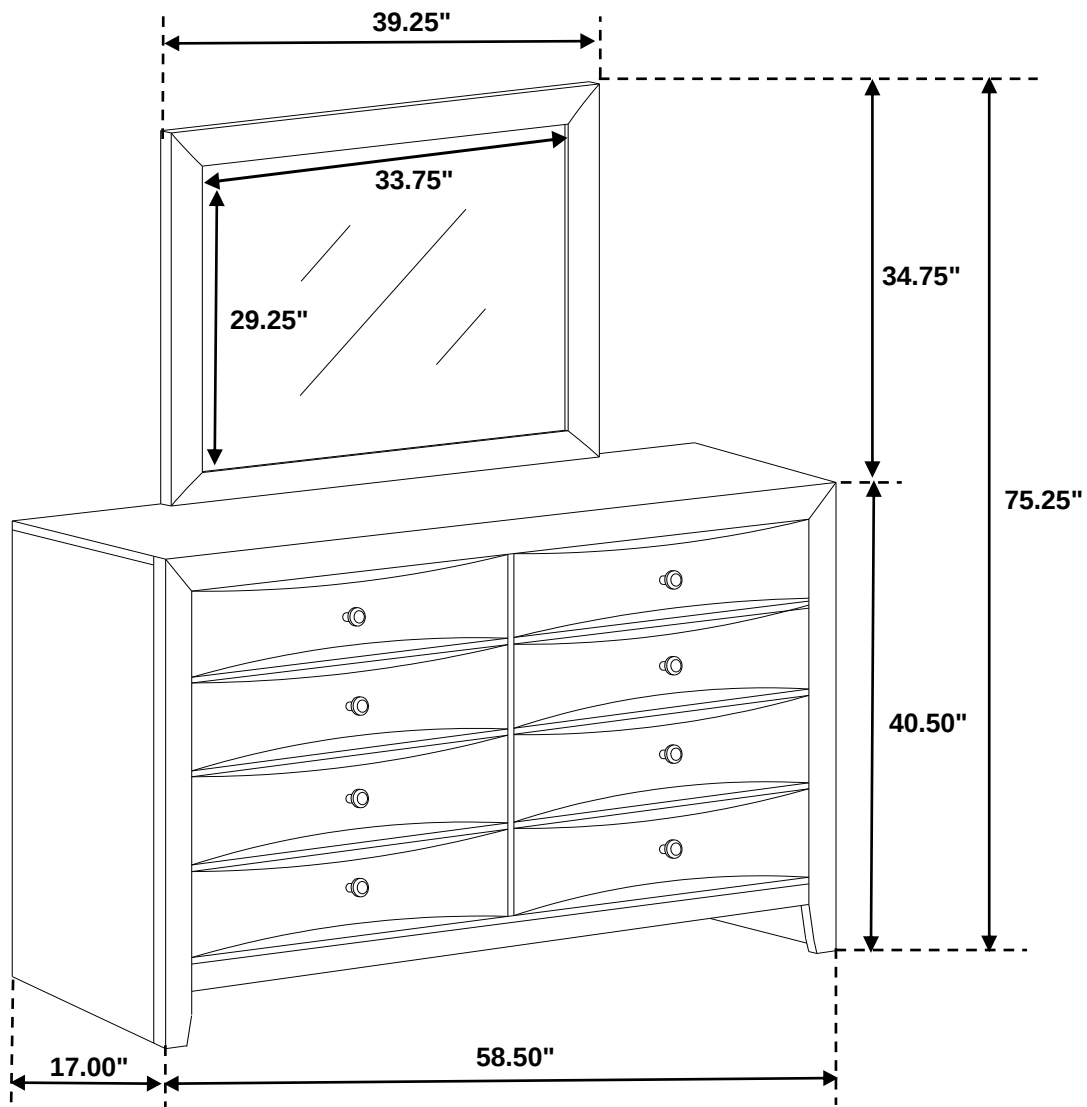

Note : Dimension tolerance $\pm$ 5%