


ITEM: **200703**

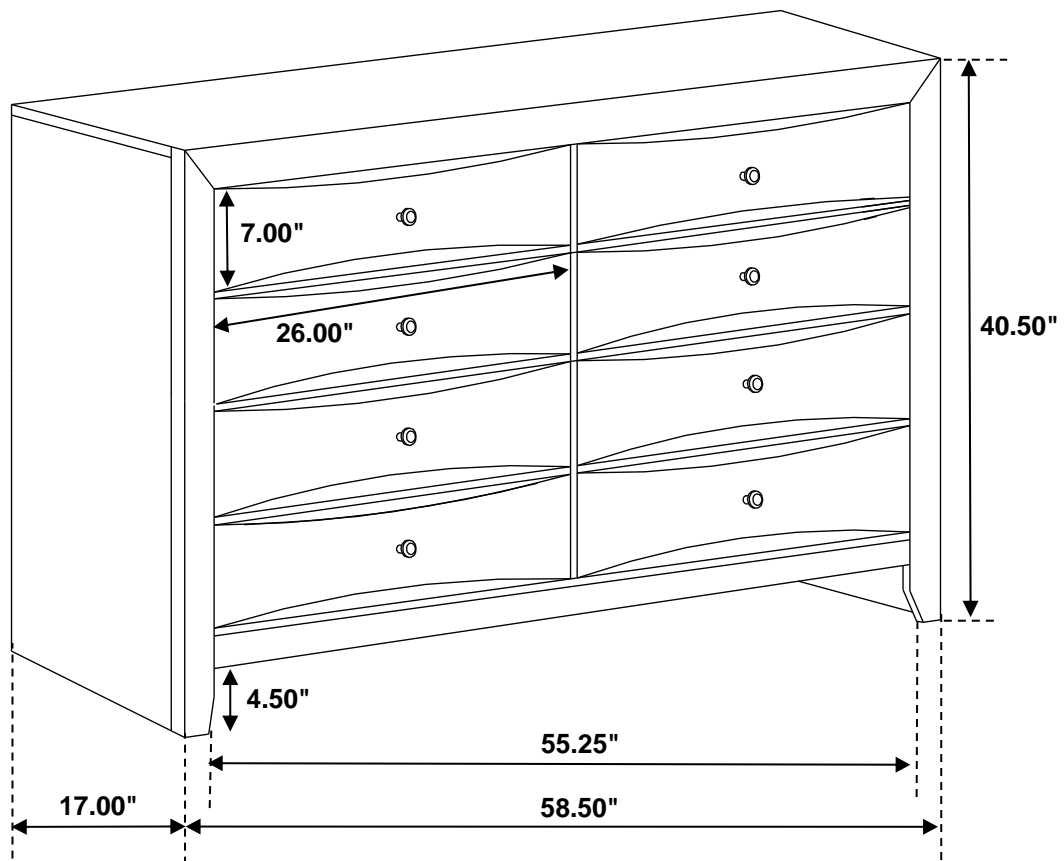


**Inner Size of Drawer : 23.50"W X 12.50"D X 5.25"H X 1.25"T**



**Note : Dimension tolerance  $\pm 5\%$**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

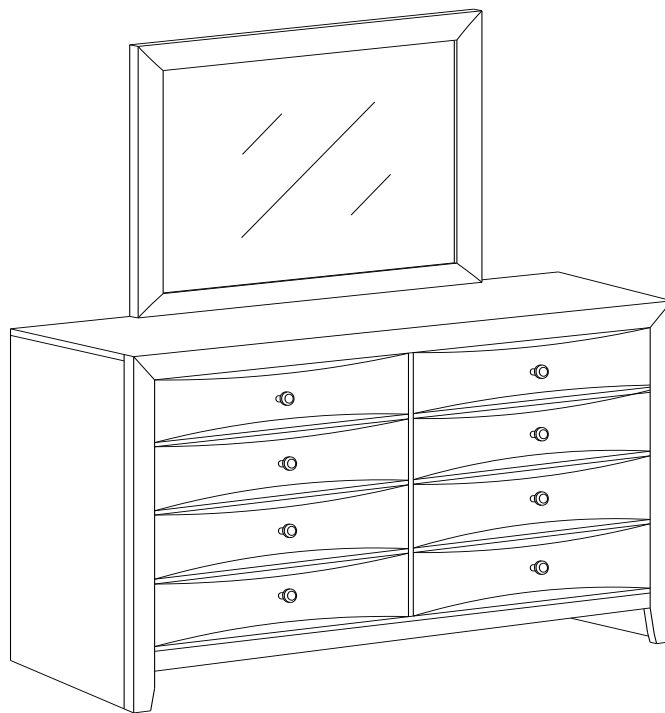

*Fine Furniture for every stage of life*

**200704**  
**Mirror**

ITEM: **200704**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

**A** DRESSER  
FROM BOX ITEM  
#200703




1PC

**B** MIRROR

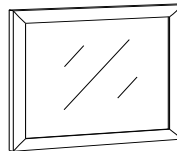

1PC

**C** MIRROR SUPPORT  
(PACKED WITH MIRROR)



2PCS

## HARDWARE IDENTIFICATION

**1** FLAT HEAD SCREW  
(M4 x 32mm - RBW)




12PCS


ITEM: **200704**

## ASSEMBLY INSTRUCTIONS

### STEP 1

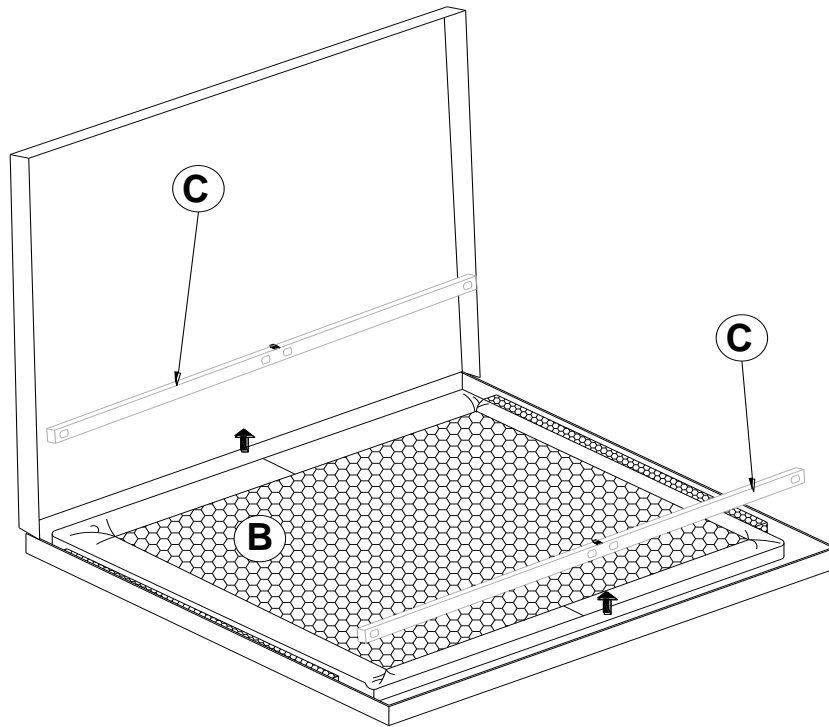

### STEP 2

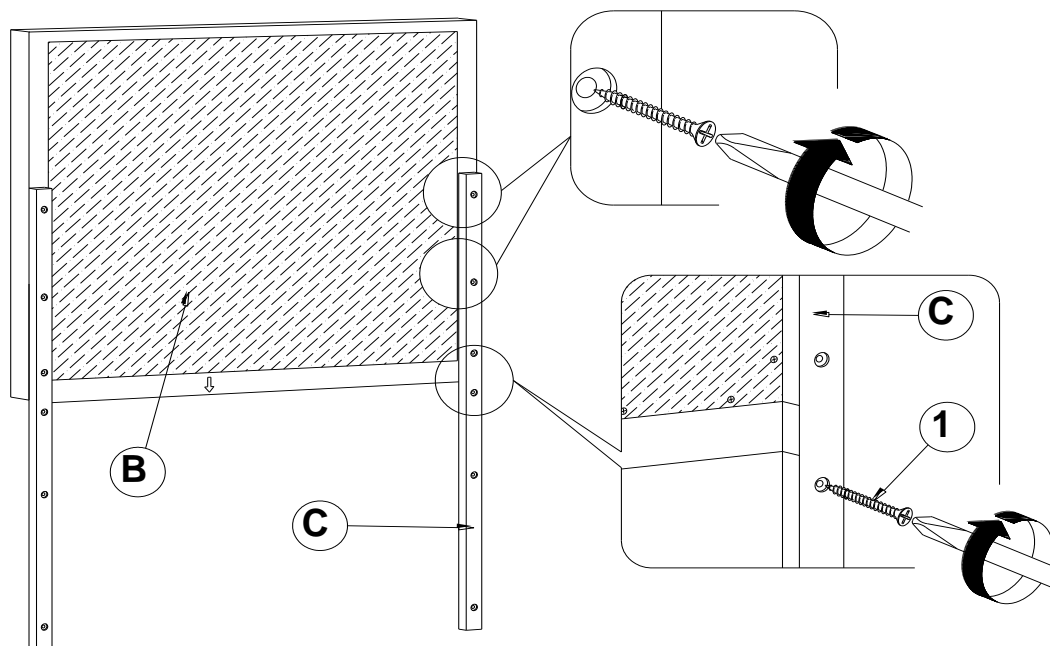


**\*\*BACK VIEW\*\***

ITEM: **200704**




## ASSEMBLY INSTRUCTIONS


### STEP 3

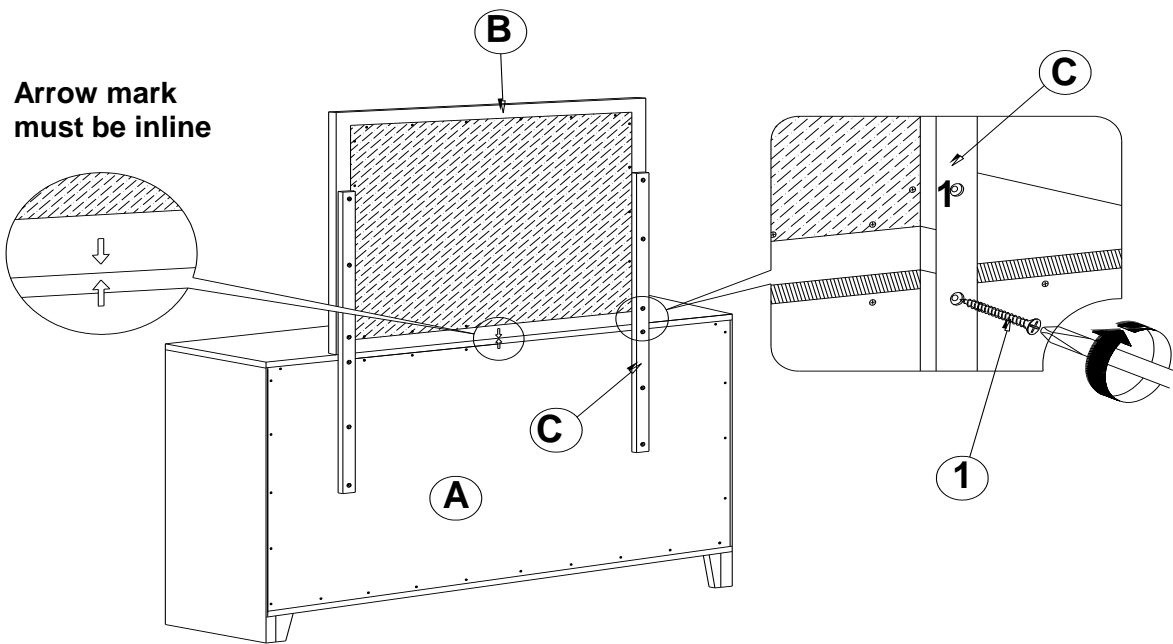

### STEP 4 COMPLETE

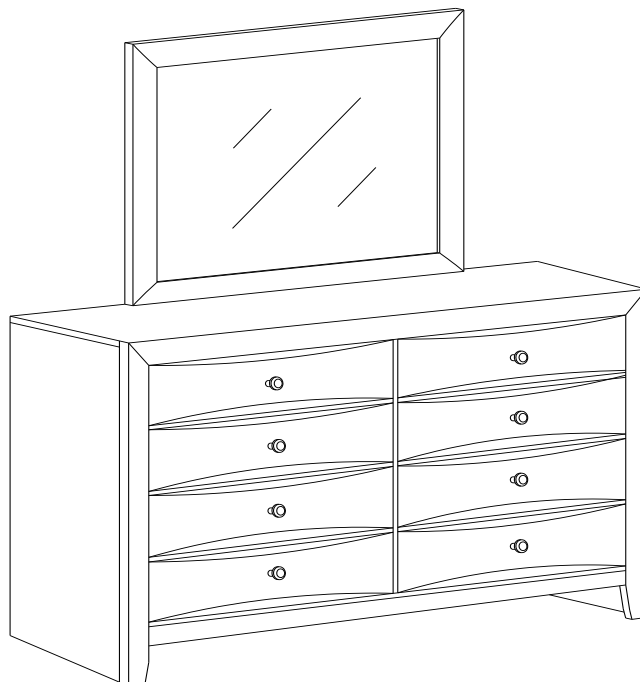

ITEM: **200704**

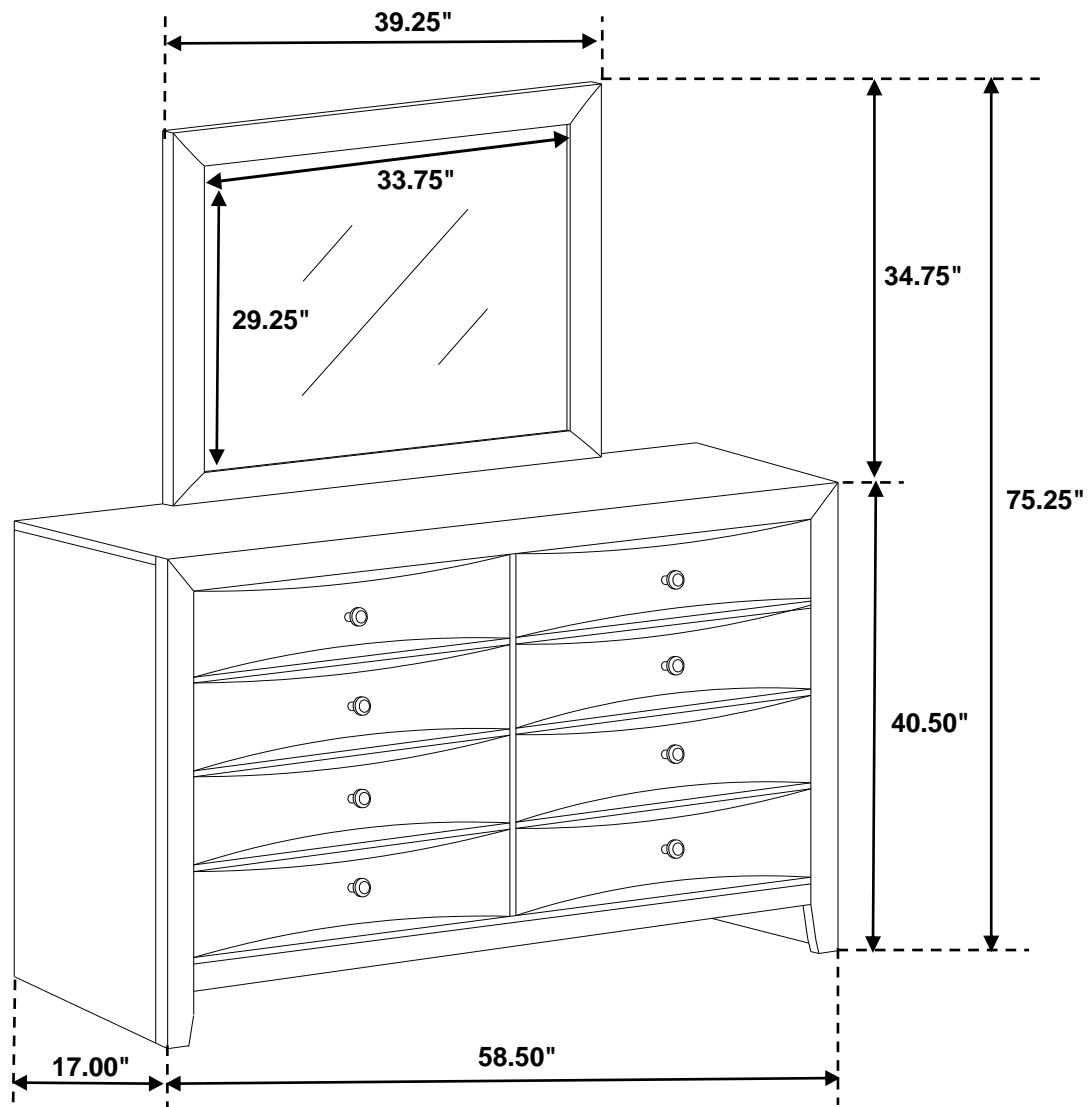

**Note : Dimension tolerance  $\pm$  5%**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**200704**  
**Mirror**

ITEM: **200704**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

**A** DRESSER  
FROM BOX ITEM  
#200703




1PC

**B** MIRROR

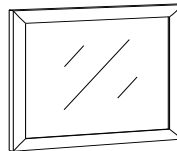

1PC

**C** MIRROR SUPPORT  
(PACKED WITH MIRROR)

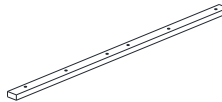

2PCS

## HARDWARE IDENTIFICATION

**1** FLAT HEAD SCREW  
(M4 x 32mm - RBW)




12PCS




ITEM: **200704**

## ASSEMBLY INSTRUCTIONS

### STEP 1

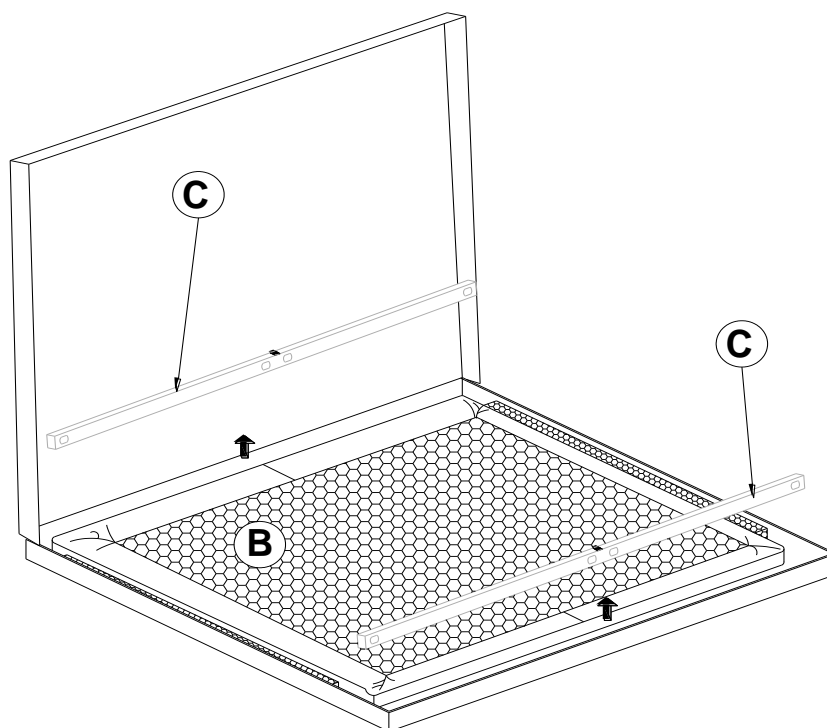

### STEP 2

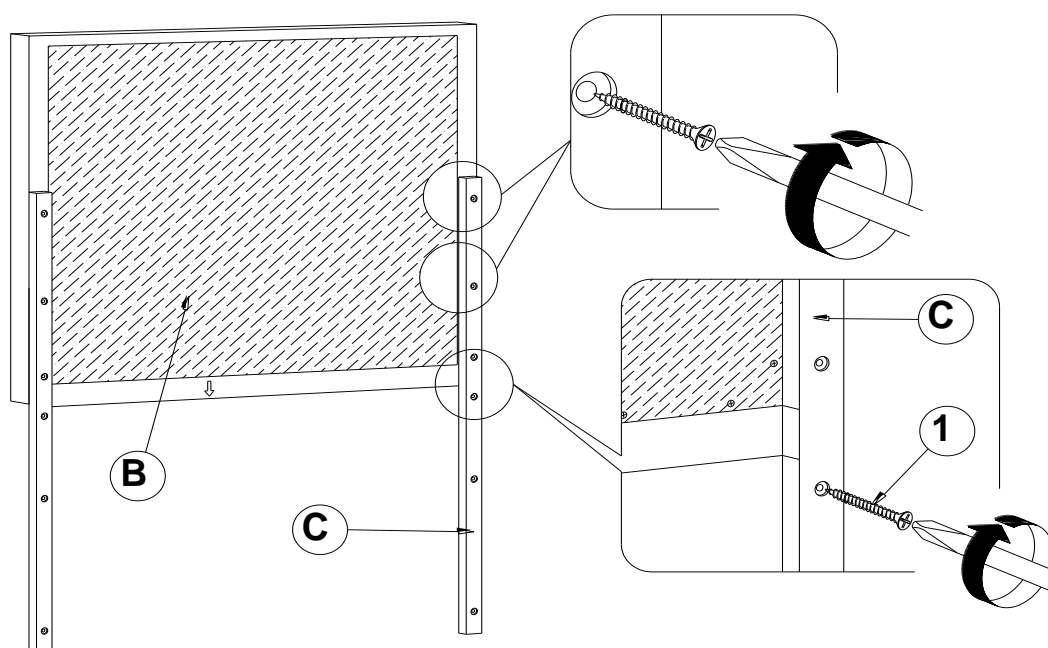


**\*\*BACK VIEW\*\***

ITEM: **200704**




## ASSEMBLY INSTRUCTIONS


### STEP 3

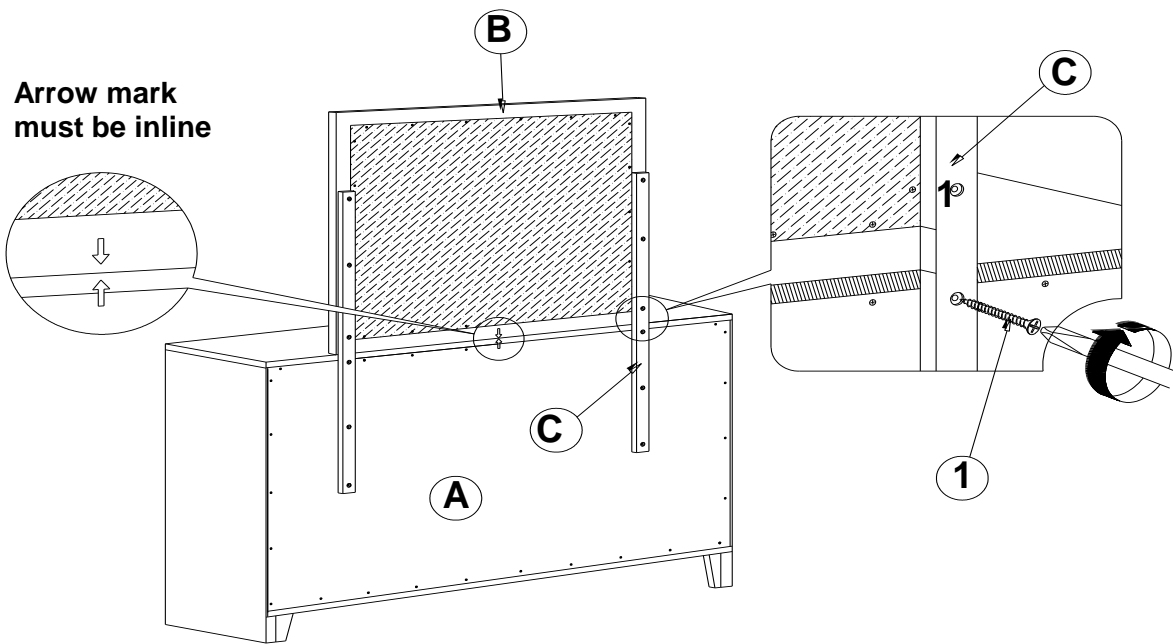

### STEP 4 COMPLETE

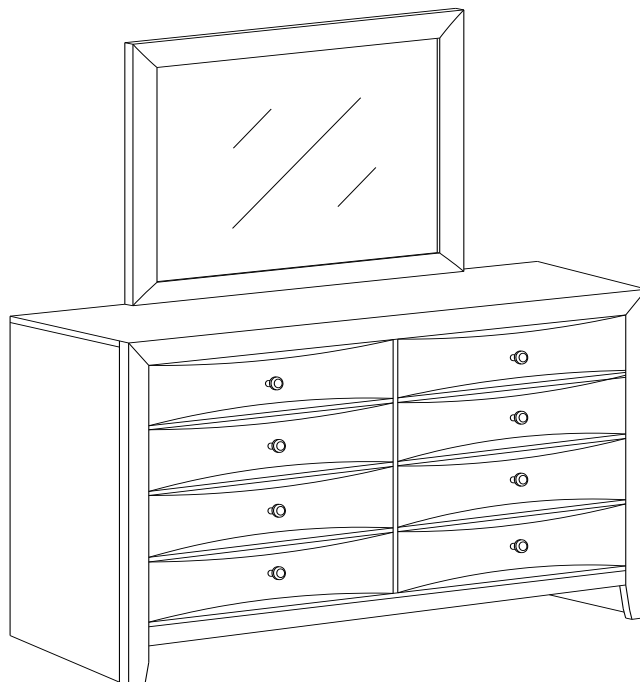

ITEM: **200704**

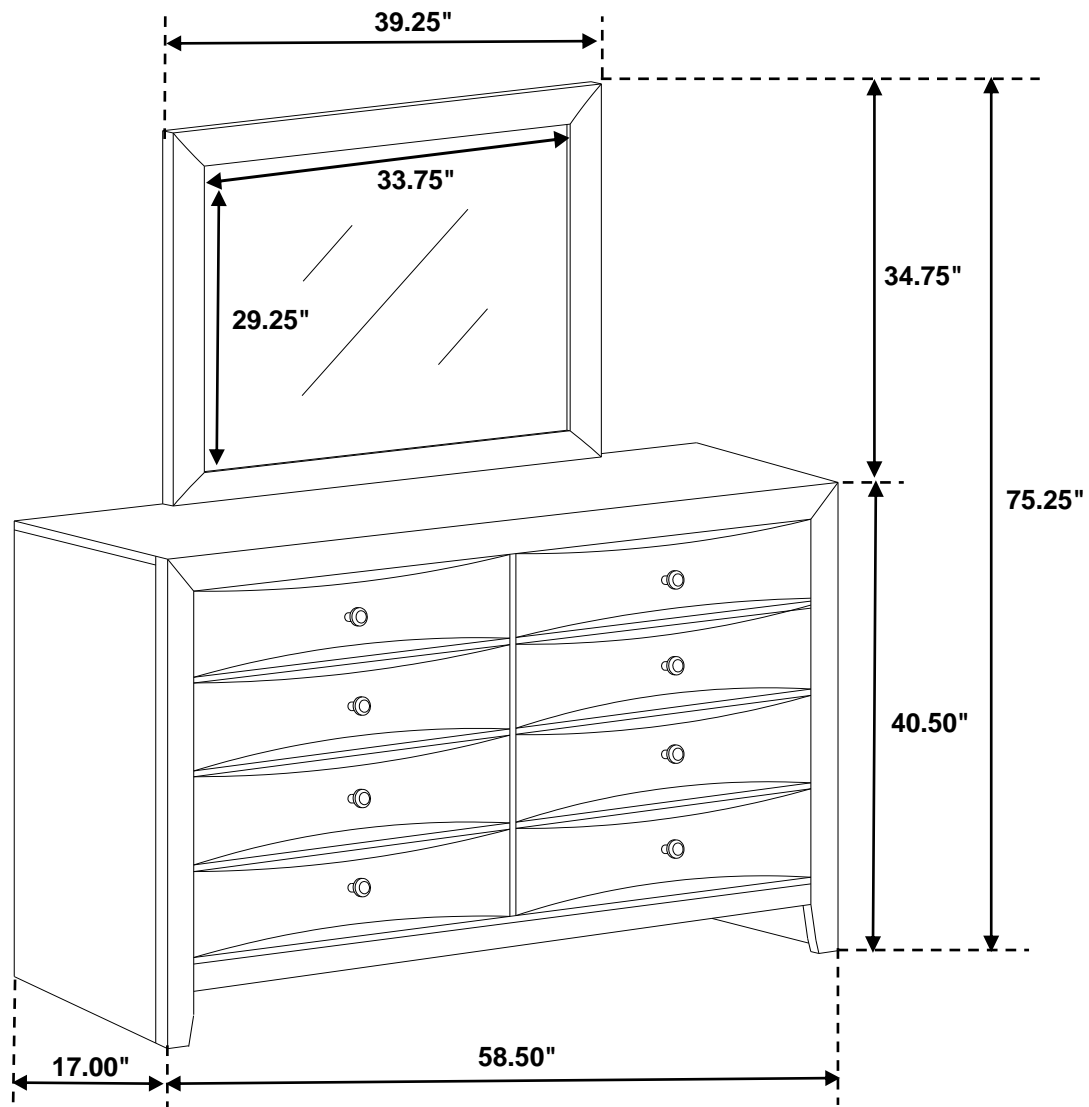

**Note : Dimension tolerance  $\pm$  5%**