



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**200712**  
***Nightstand***

REVISION 0 : 05/14/2008  
REVISION 1 : 12/04/2012  
REVISION 2 : 08/08/2017  
REVISION 3 : 09/11/2018  
REVISION 4 : 12/02/2019  
REVISION 5 : 07/05/2024

ITEM: **200712**



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

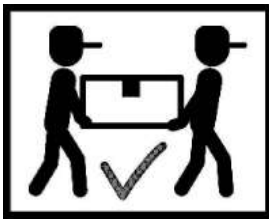


ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND

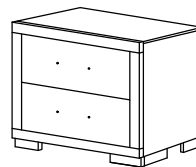

1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **200712**





## ASSEMBLY INSTRUCTIONS

### STEP 1

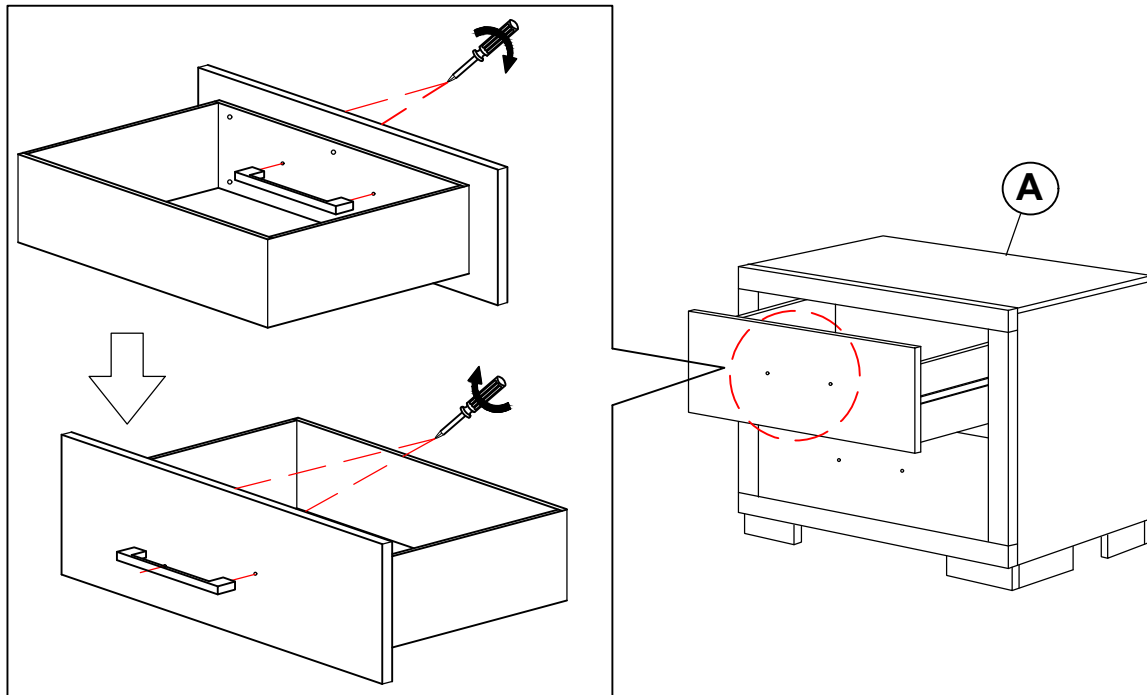

### STEP 2 COMPLETE

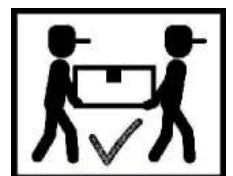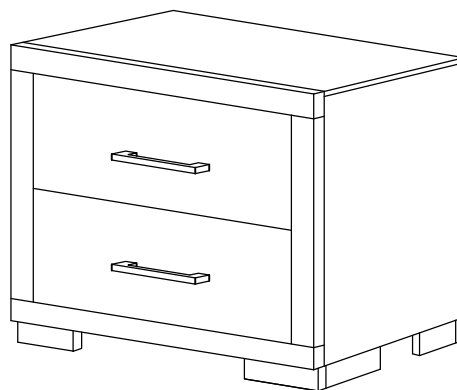

ITEM: **200712**






## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

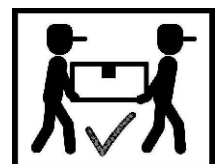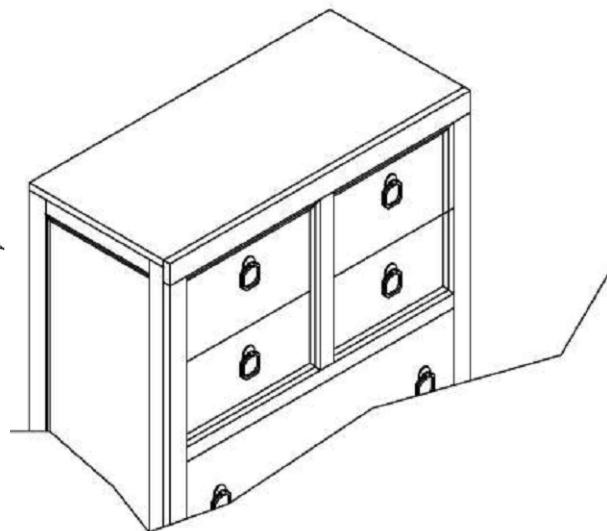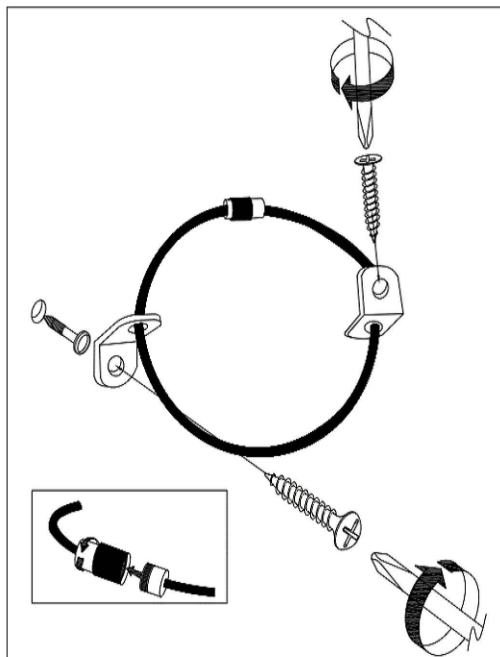

ITEM: **200712**



**Inner Size of Drawer : 19.00"W x 12.75"D x 5.50"H x 0.50"T**

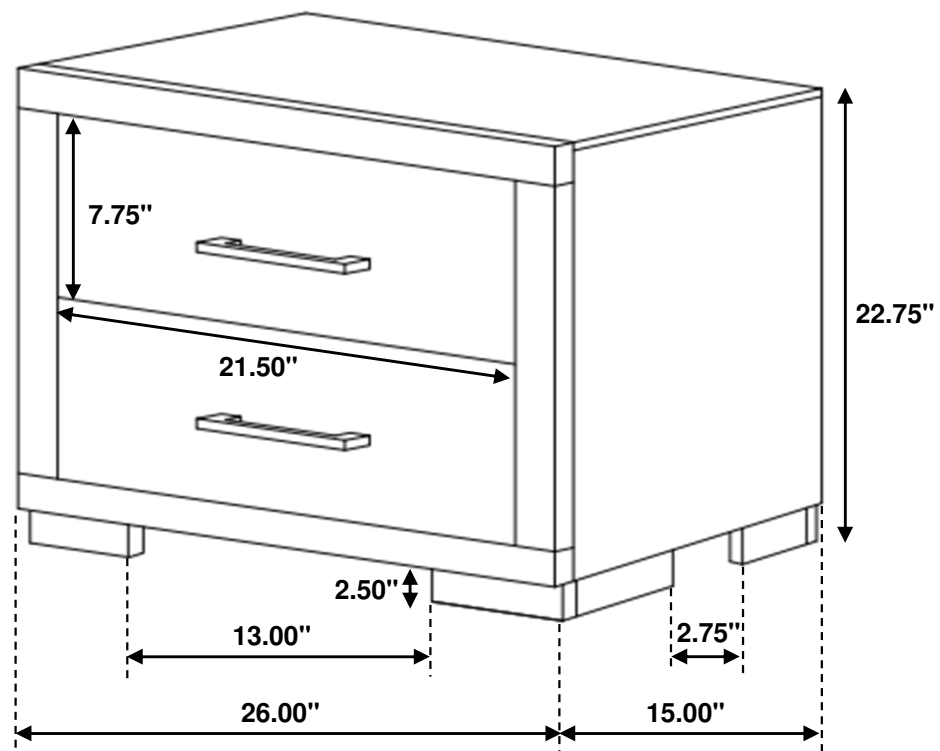

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**200713**  
***Dresser***

REVISION 0 : 05/14/2008  
REVISION 1 : 12/04/2012  
REVISION 2 : 08/08/2017  
REVISION 3 : 09/11/2018  
REVISION 4 : 12/02/2019  
REVISION 5 : 07/05/2024

ITEM: **200713**



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

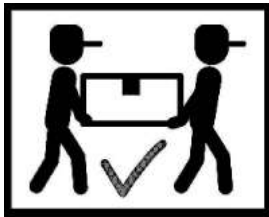


ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A DRESSER

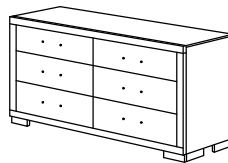

1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ITEM: **200713**  
**ASSEMBLY INSTRUCTIONS**



**ASSEMBLY INSTRUCTIONS**  
**STEP 1**

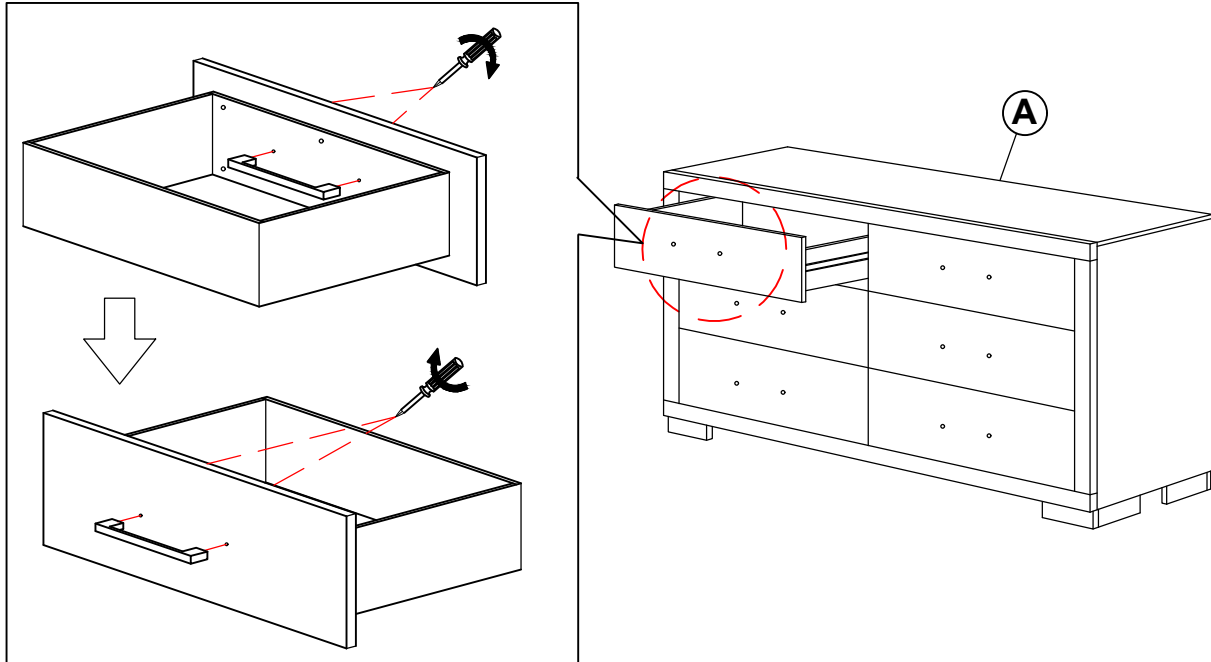

**STEP 2**  
**COMPLETE**

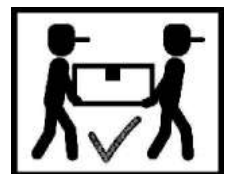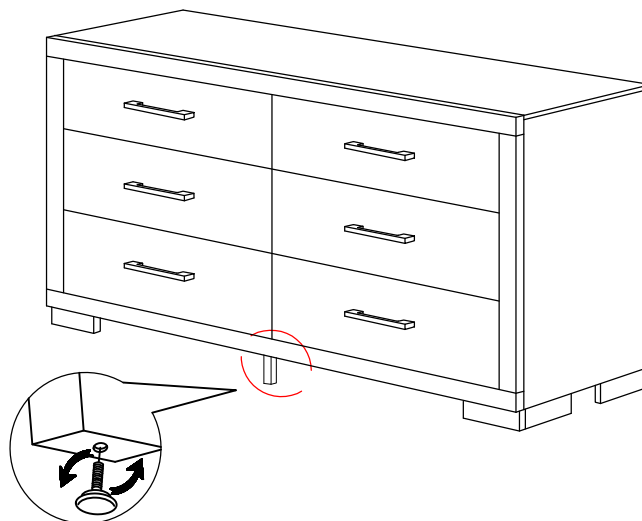



ITEM: **200713**






## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

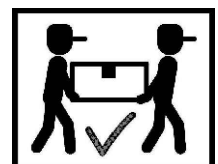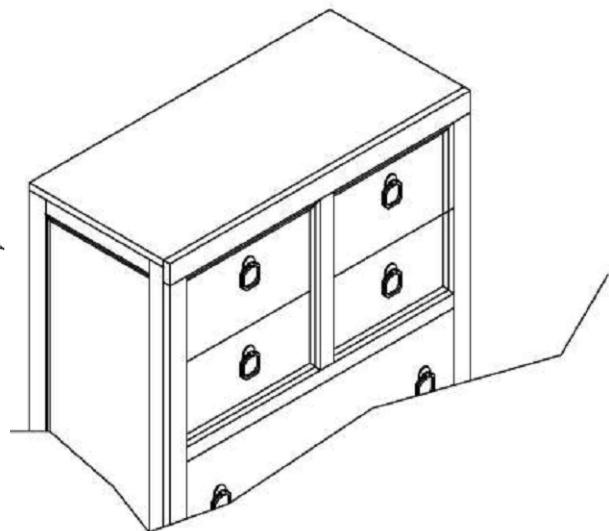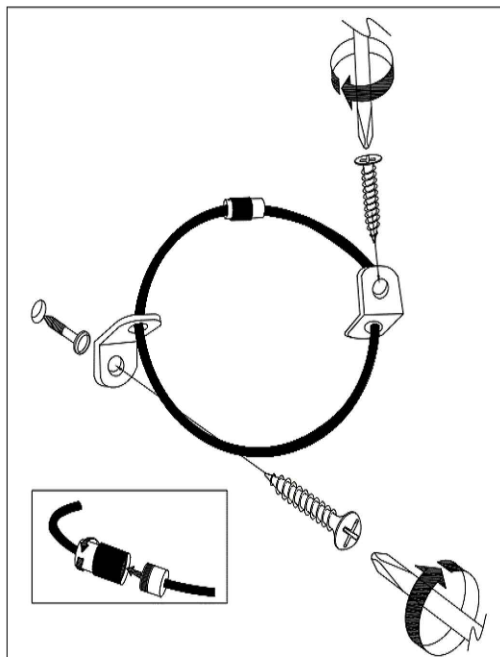

ITEM: **200713**




Inner Size of Drawer : 26.75"W x 12.75"D x 5.50"H x 0.50"T

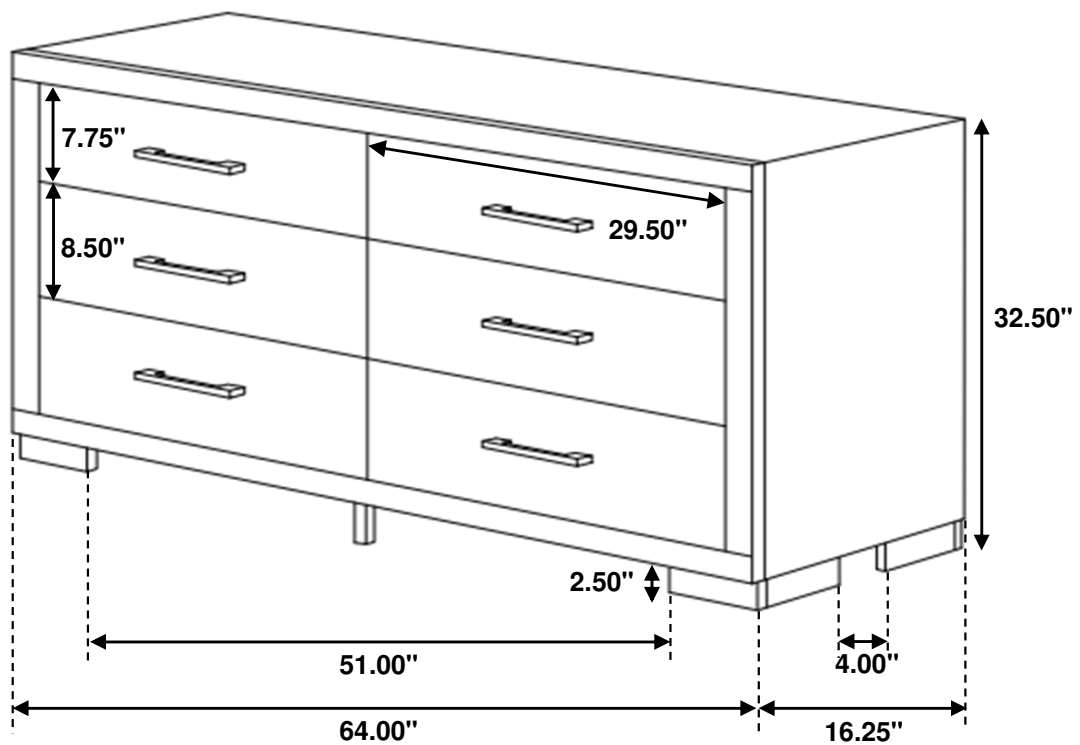

Note : Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

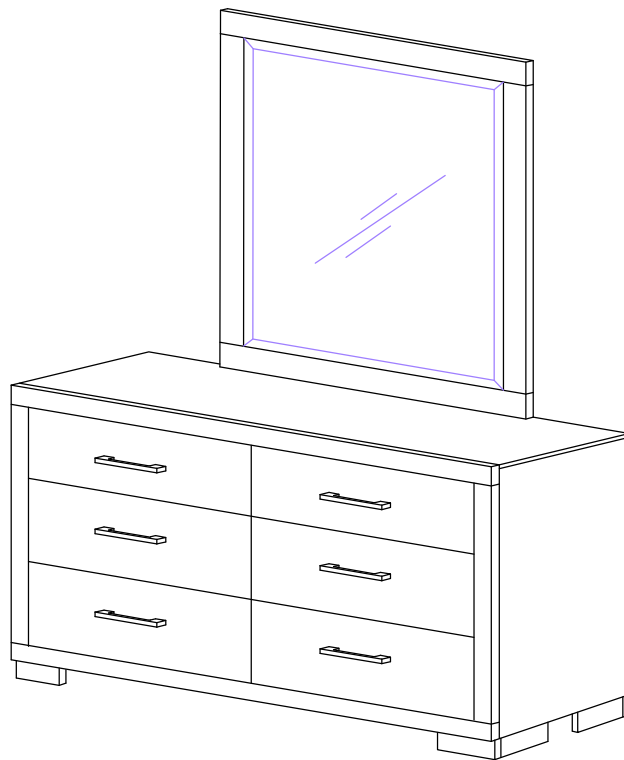

*Fine Furniture for every stage of life*

**200714**  
***Mirror***

REVISION 0 : 05/14/2008  
REVISION 1 : 12/04/2012  
REVISION 2 : 08/08/2017  
REVISION 3 : 09/11/2018  
REVISION 4 : 12/02/2019  
REVISION 5 : 09/09/2023

ITEM: **200714**



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

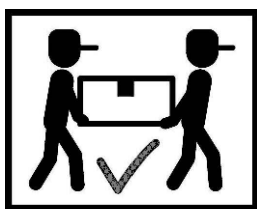


ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A MIRROR




1PC

B DRESSER  
\*FROM BOX ITEM  
#200713



1PC

C MIRROR SUPPORT  
(PACKED WITH DRESSER)



2PCS


## HARDWARE IDENTIFICATION

1 SHORT FLAT HEAD SCREW  
(M4 x 32mm - BLK)



4PCS

2 LONG FLAT HEAD SCREW  
(M4 x 45mm - BLK)



4PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **200714**

## ASSEMBLY INSTRUCTIONS

### STEP 1

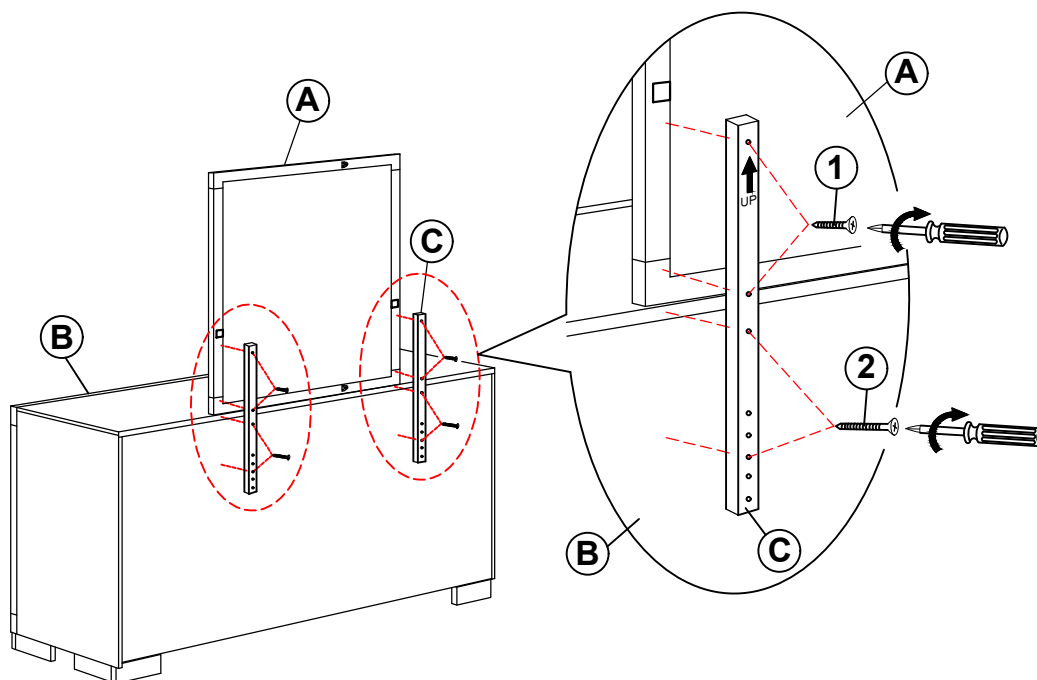

### STEP 2


#### (OPTIONAL)

Align and hang the mirror against the wall in landscape orientation with both left and right pre-fixed metal bracket in correct orientation.



**Note :** Screws or fittings to fix the mirror to the wall are not included. Choose screws or fittings that are suitable to the wall material and have sufficient holding power.

If you are uncertain, contact your local specialised retailer.


**Warning :** Wrong assembly can lead to the mirror topples or falls resulting in personal injury or damage.

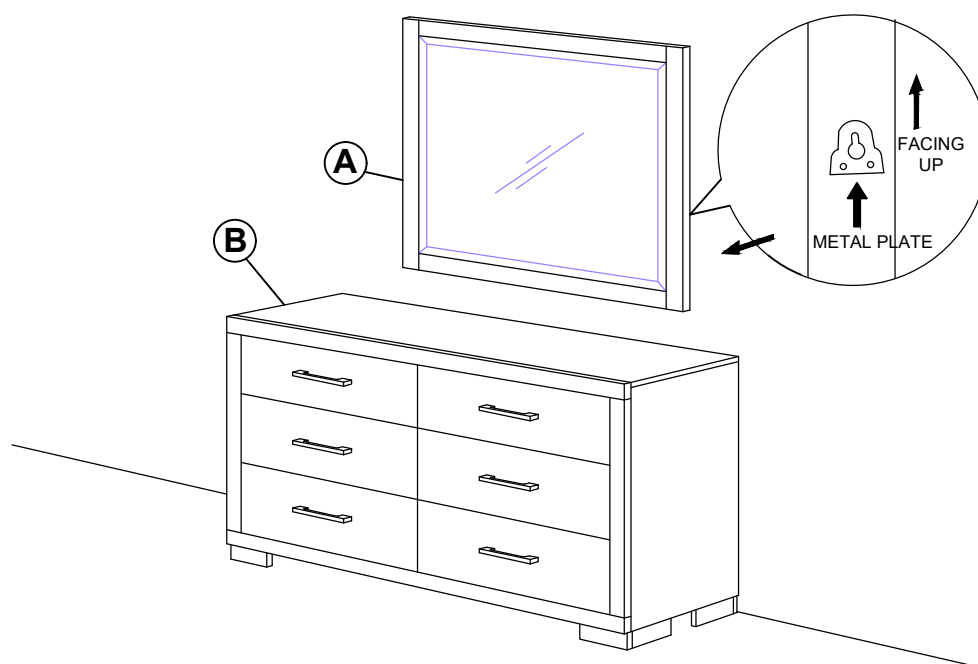

ITEM: **200714**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 3**  
**COMPLETE**

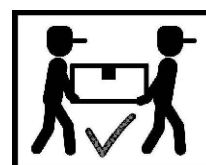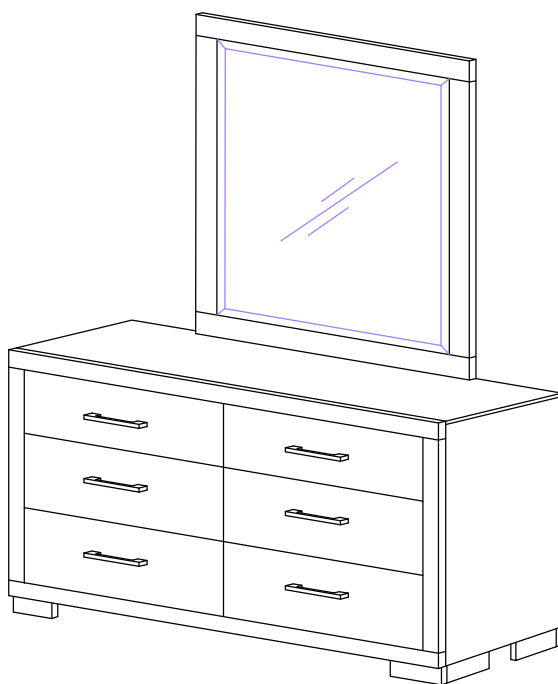


ITEM: **200714**

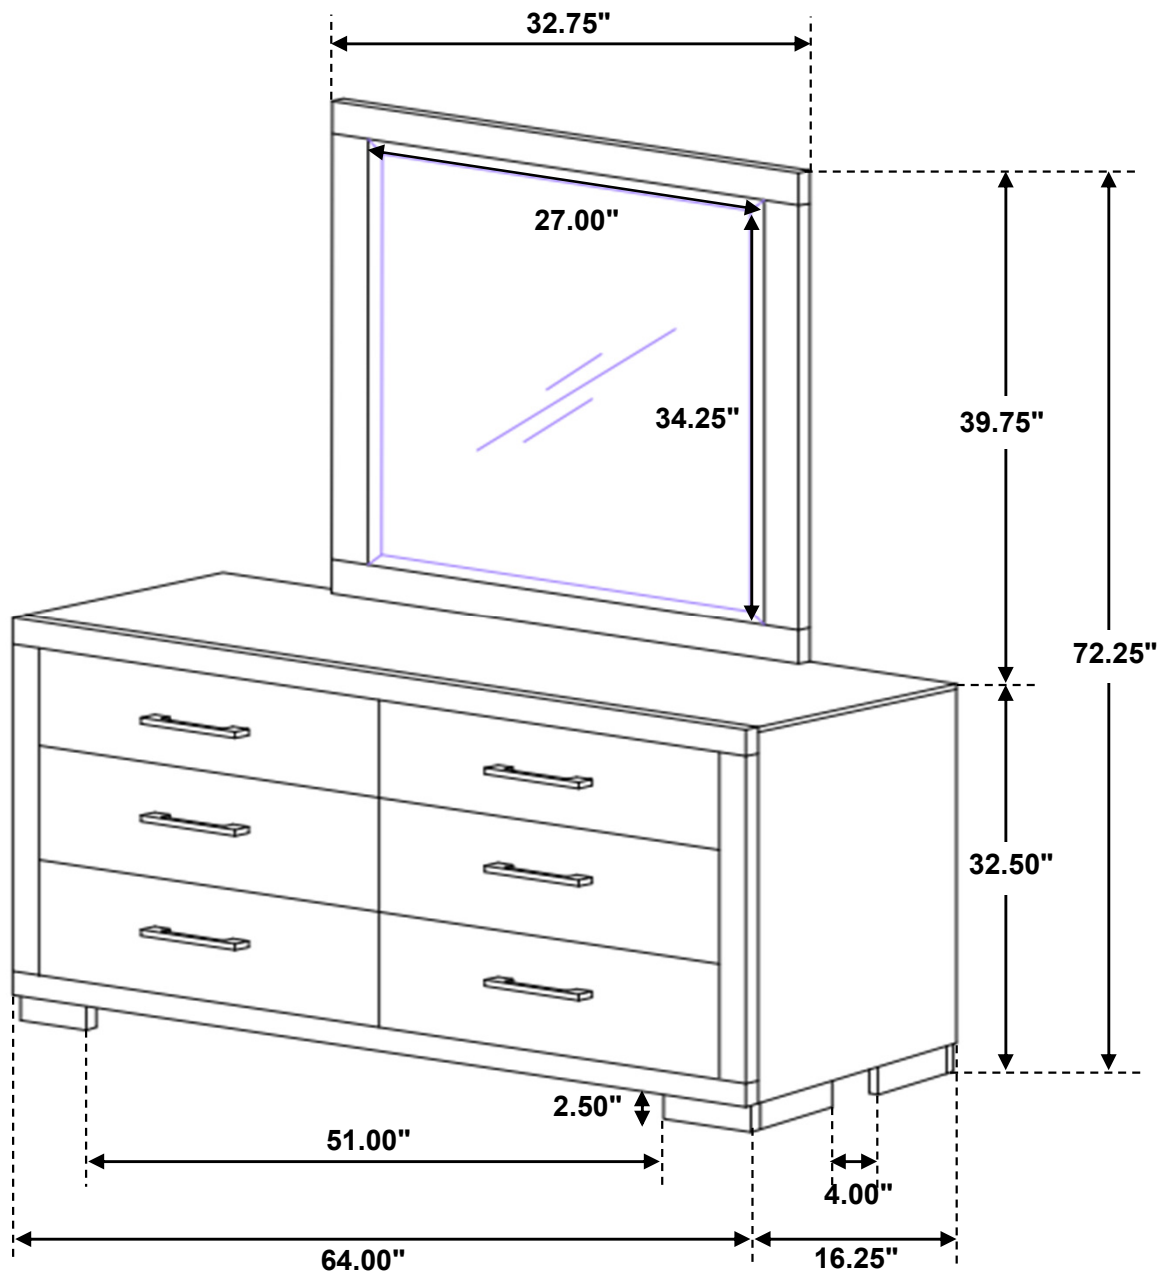

Note : Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

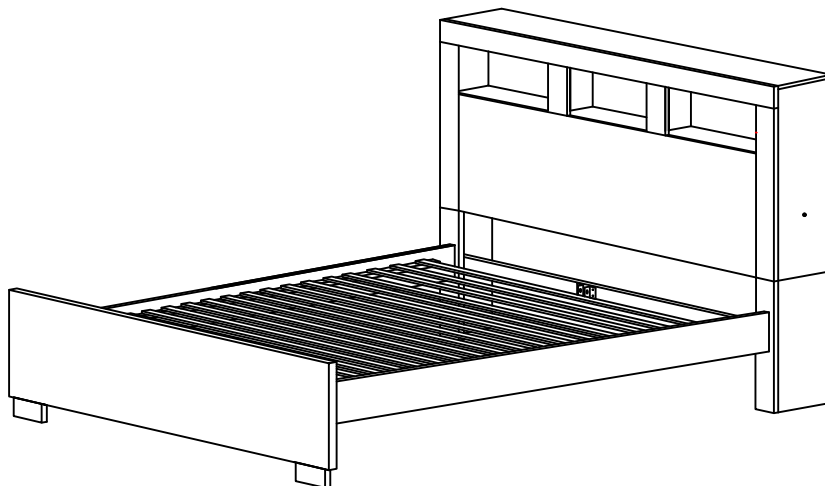

*Fine Furniture for every stage of life*

## **200719KW (B1-B4)** **California King Bed**

REVISION 0 : 07/03/2009  
REVISION 1 : 09/27/2012  
REVISION 2 : 02/09/2017  
REVISION 3 : 09/18/2018  
REVISION 4 : 12/02/2019  
REVISION 5 : 08/04/2020  
REVISION 6 : 12/02/2022



# ITEM:200719KW (B1-B4)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

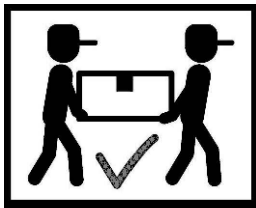





ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION




### B1 ( BOX 1 )

1	HEADBOARD PANEL		1PC
2L	LEFT HEADBOARD LEG		1PC
2R	RIGHT HEADBOARD LEG		1PC
8	HEADBOARD BOTTOM RAIL		1PC

### B2 ( BOX 2 )

3	FOOTBOARD		1PC
---	-----------	--	-----

### B3 ( BOX 3 )

4L	LEFT BED RAIL		1PC
4R	RIGHT BED RAIL		1PC
5	CENTER RAIL		1PC

# ITEM: 200719KW (B1-B4)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.


6 CENTER RAIL SUPPORT  
WITH LEVELER



2PCS


### B4 (BOX 4)

7 ROLL SLAT (7PCS)



2SETS

HB 200719KW (B1)  
FROM BOX 1  
HEADBOARD COMPLETE



1PC

3 200719KW (B2)  
FROM BOX 2  
FOOTBOARD



1PC

# ITEM: 200719KW (B1-B4)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 200719KW(B1)

A	<b>ALLEN WRENCH</b> (M4 x 110mm - BLK)		1PC
B	<b>BOLT</b> (M6 x 50mm - BLK)		14PCS
C	<b>LONG FLAT HEAD SCREW</b> (M4 x 32mm- BLK)		28PCS
D	<b>SHORT FLAT HEAD SCREW</b> (M4 x 20mm - BLK)		8PCS
E	<b>WRENCH</b> (2 x 24.5 x 85 - RBW)		1PC
F	<b>HEX NUT</b> (M6 - RBW)		2PCS
G	<b>U BRACKET</b> (26 x 63 x 70mm - RBW)		2PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 200719KW (B1-B4)




## ASSEMBLY INSTRUCTIONS

### STEP 1

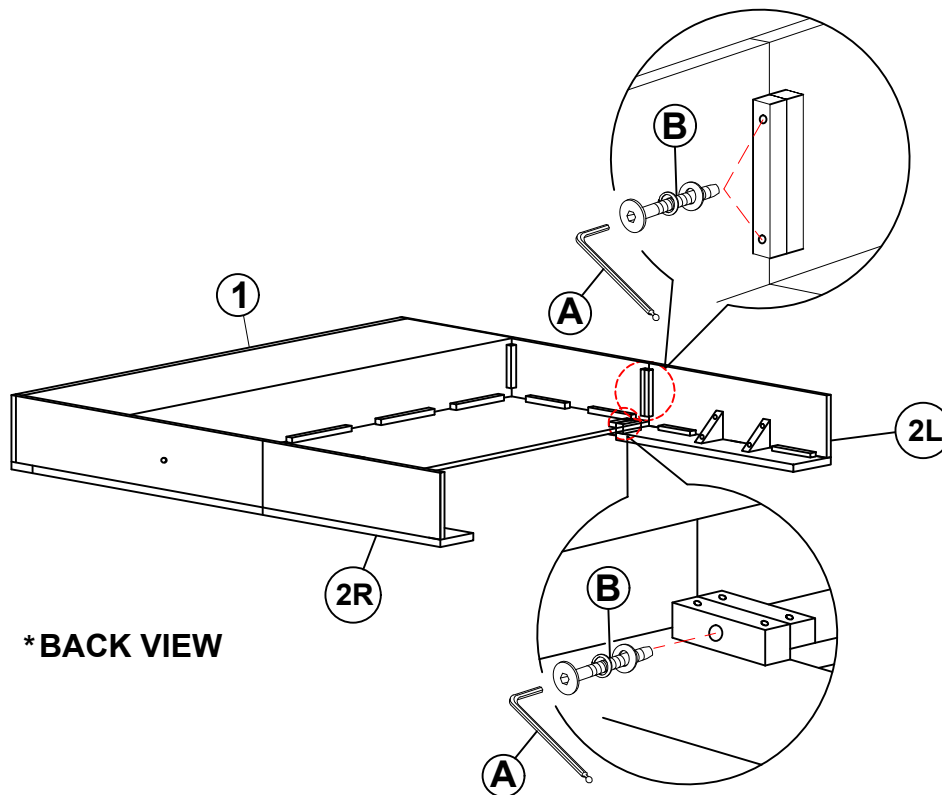


### STEP 2

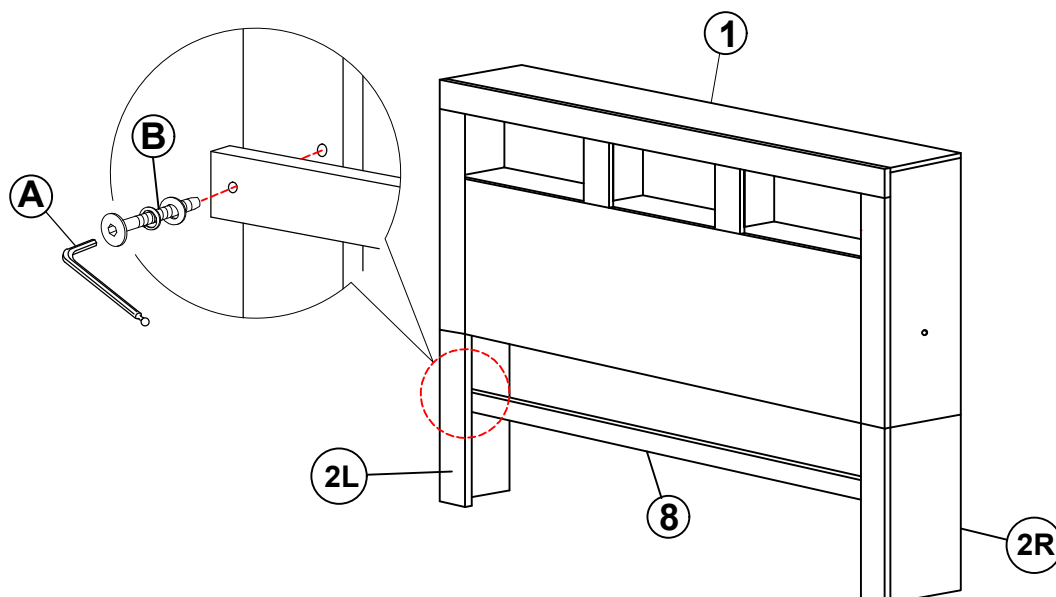


# ITEM: 200719KW (B1-B4)



## ASSEMBLY INSTRUCTIONS STEP 3

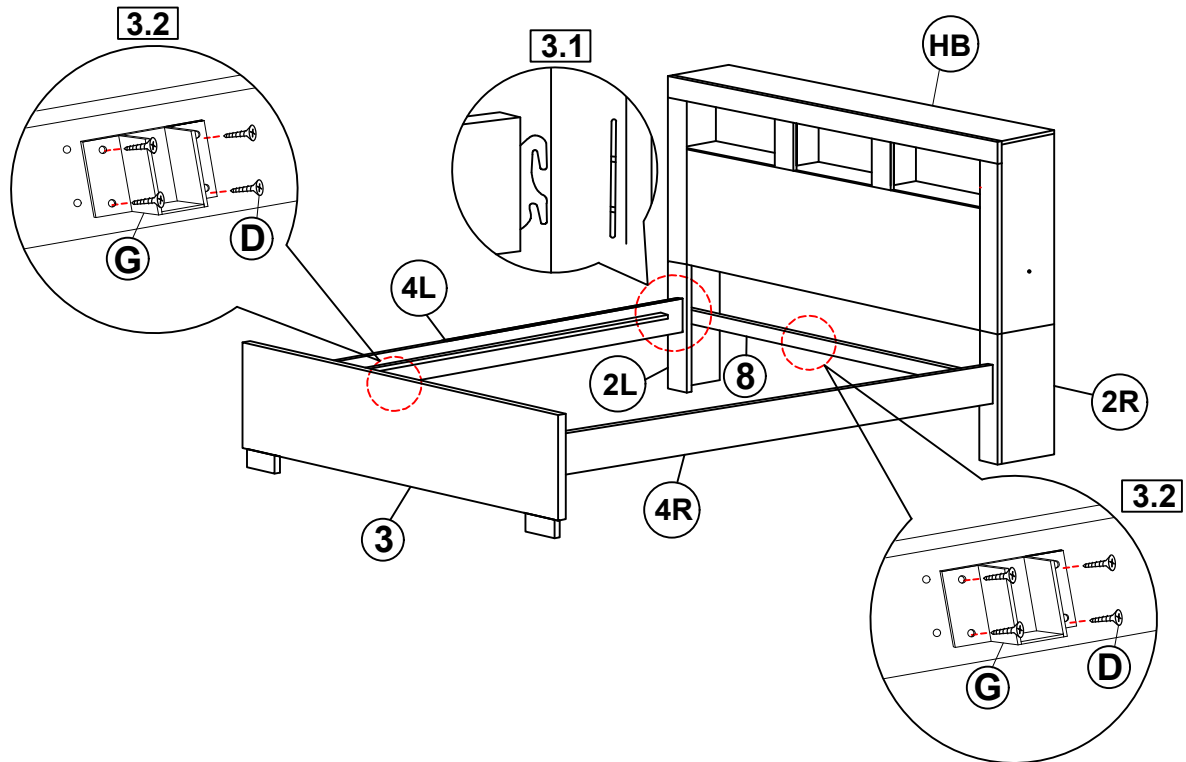


## STEP 4

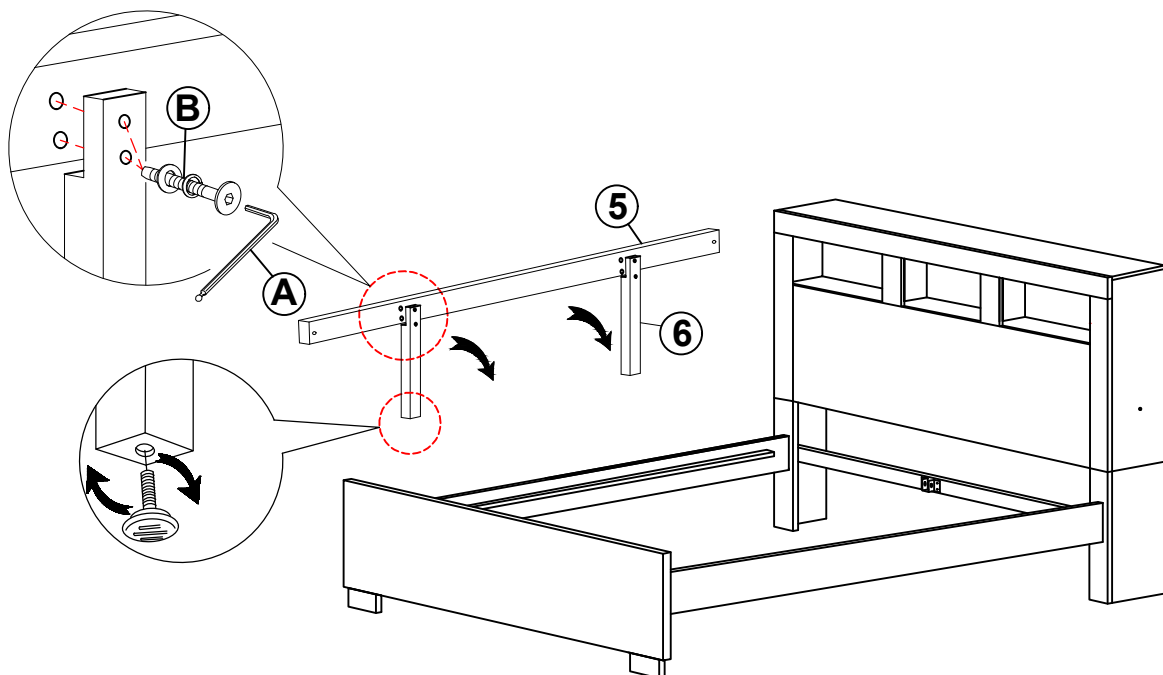



# ITEM: 200719KW (B1-B4)



## ASSEMBLY INSTRUCTIONS STEP 5

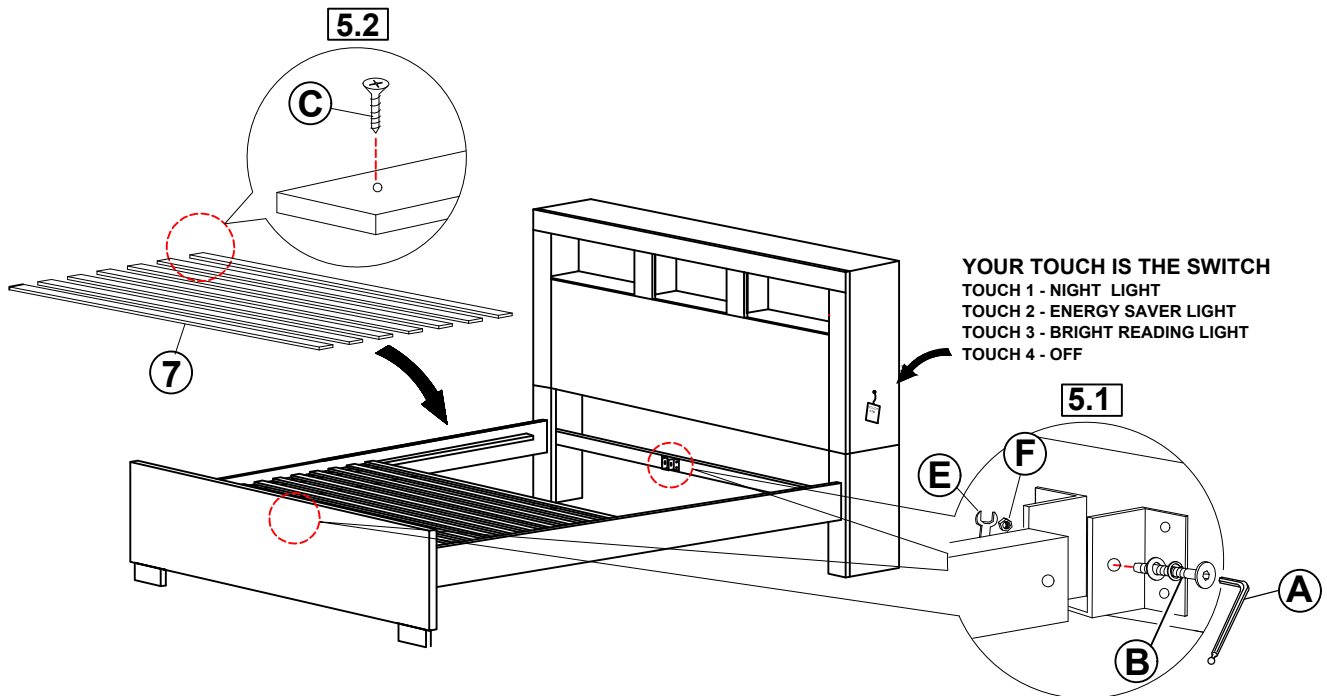


## STEP 6 COMPLETE

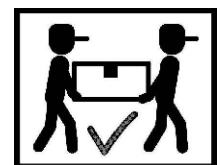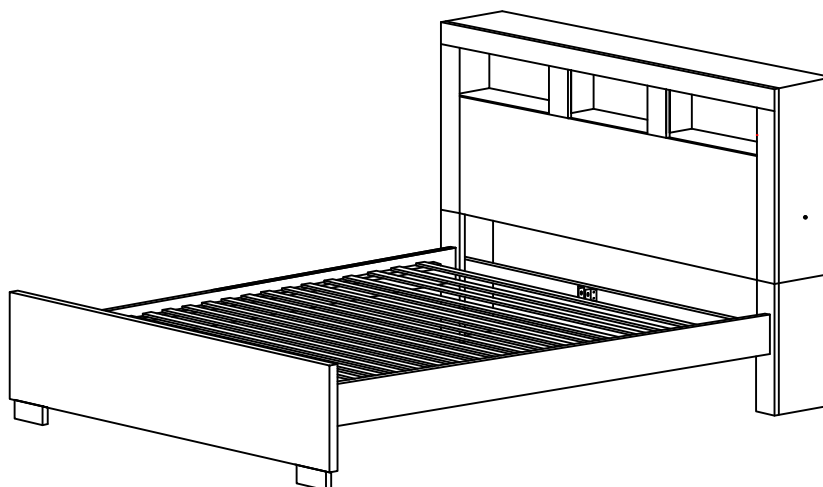

ITEM: **200719KW (B1-B4)**



Inner Size : 72.00"W x 85.00"D

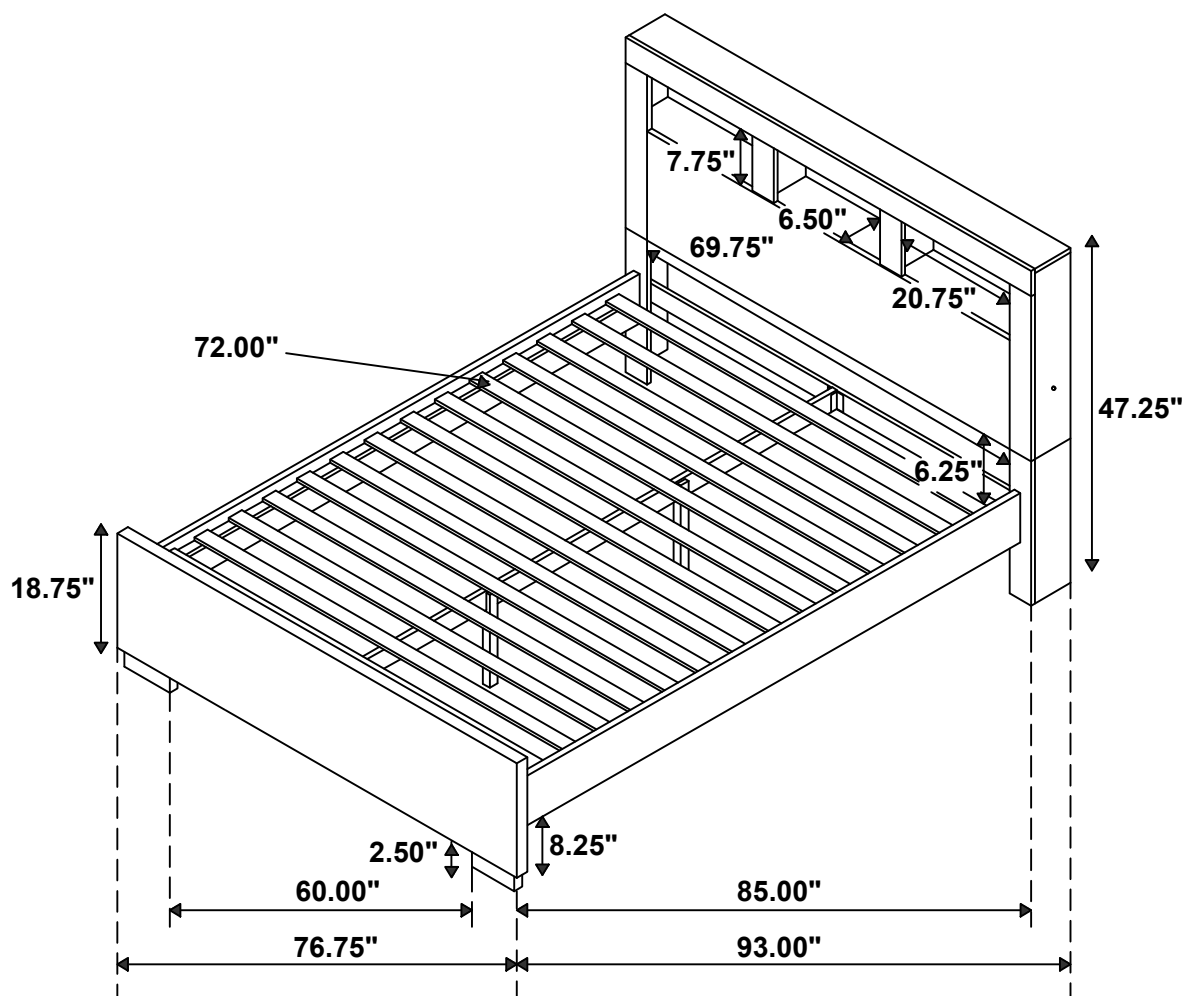

Note: Dimension tolerance  $\pm 5\%$