


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

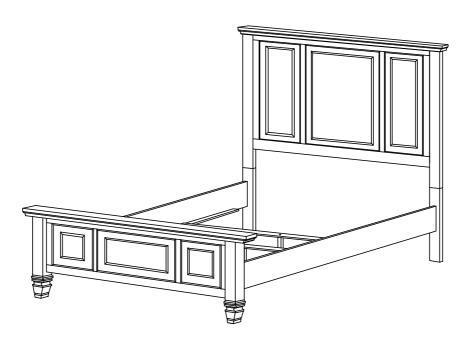

Fine Furniture for every stage of life

201321Q (B1-B3) Queen Bed

REVISION 0 : 07/04/2011 REVISION 1 : 09/27/2011 REVISION 2 : 07/16/2012 REVISION 3 : 08/27/2018 REVISION 4 : 12/04/2019 REVISION 5 : 07/28/2020

REVISION 6: 10/18/2024

PAGE 1 OF 5

COASTER'

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

D1 LEFT HEADBOARD LEG	IPC			
D2 RIGHT HEADBOARD LEG 1	IPC			
B2 (BOX 2)				
C FOOTBOARD 1	IPC			
B3 (BOX 3)				
B1 LEFT BED RAIL	IPC			
B2 RIGHT BED RAIL	IPC			
E BED SLAT	IPCS			
F BED SLAT SUPPORT WITH LEVELER	1PCS			
201321Q (B1) HB FROM BOX 1 HEADBOARD COMPLETE	1PC			
201321Q (B2) C FROM BOX 2 FOOTBOARD	1PC			

PAGE 2 OF 5





ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 201321Q (B3)


1	ALLEN WRENCH (M4 - BLK)		1PC
2	BOLT (M6 x 50mm - BLK)		8PCS
3	FLAT HEAD SCREW (M4 x 32mm - BLK)	Despera	8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ASSEMBLY INSTRUCTIONS STEP 1

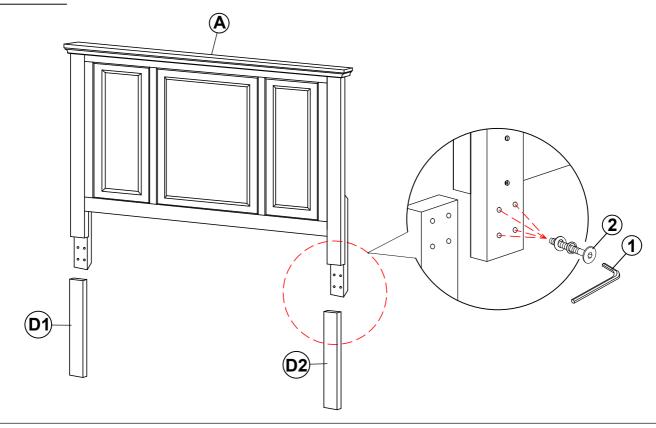

STEP 2

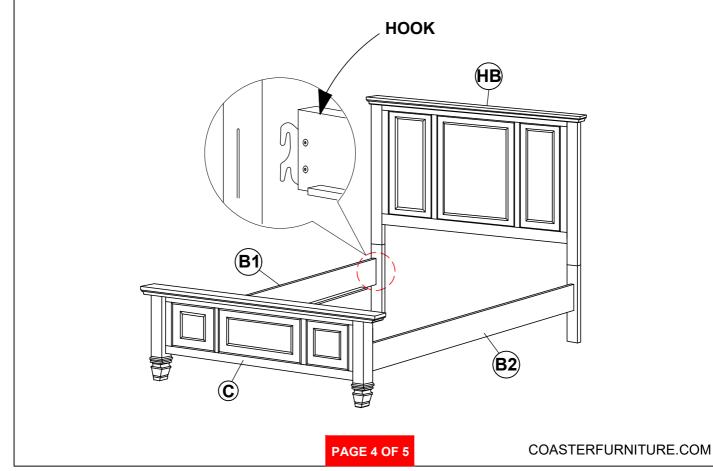


ASSEMBLY INSTRUCTIONS STEP 3 (B1-B3) (B1-B3)

STEP 4 COMPLETE





Inner Size: 61.00"W x 81.00"D

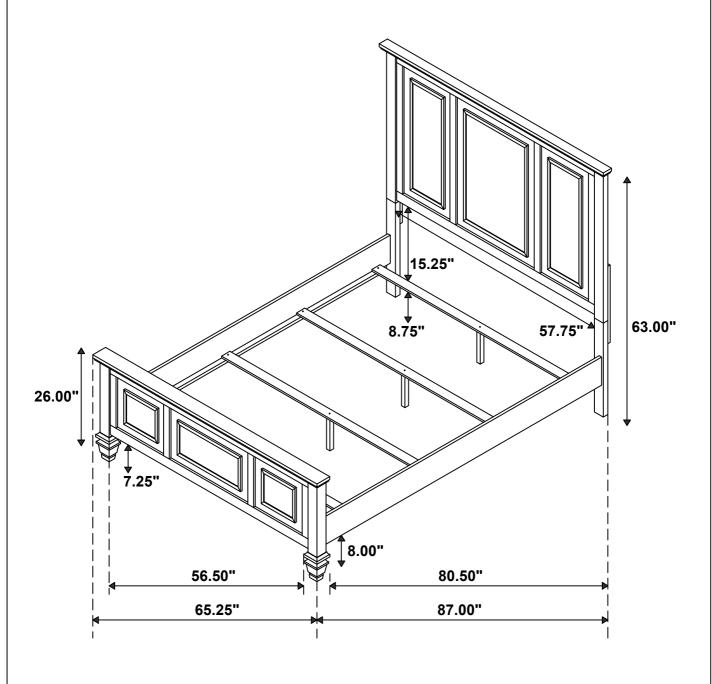



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

201322 Nightstand

REVISION 0: 07/04/2011 REVISION 1: 01/17/2013 REVISION 2: 02/22/2017 REVISION 3: 08/27/2018 REVISION 4: 12/04/2019

PAGE 1 OF 4



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND




1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTER

ASSEMBLY INSTRUCTIONS STEP 1

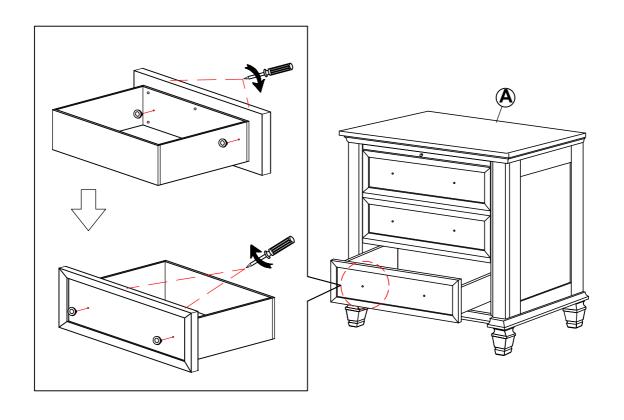

STEP 2 COMPLETE



COASTERFURNITURE.COM

PAGE 3 OF 4

COASTER

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

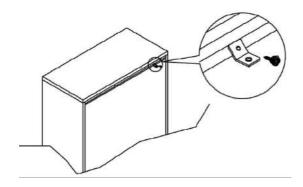


STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of furniture. Attach the wall stud using the long screw provided, through the smaller hole.

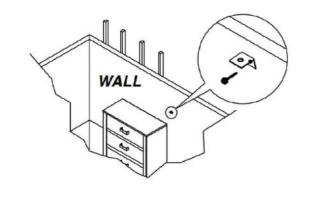

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the large hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

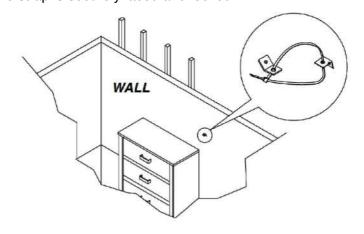








Inner Size of Drawer A: 19.50"W X 12.75"D X 2.75"H X 0.50"T Inner Size of Drawer B: 19.50"W X 12.75"D X 4.00"H X 0.50"T

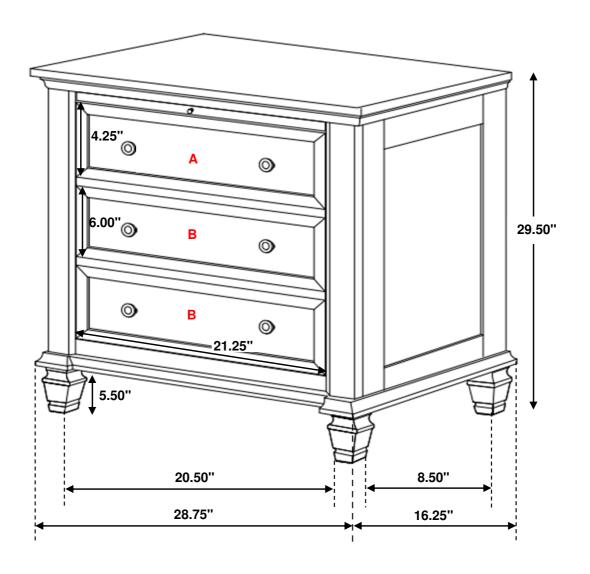



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

201323 *Dresser*

REVISION 0 : 07/04/2011 REVISION 1 : 01/07/2013 REVISION 2 : 08/27/2018 REVISION 3 : 12/04/2019 REVISION 4 : 07/05/2024

PAGE 1 OF 4



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER




1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS STEP 1

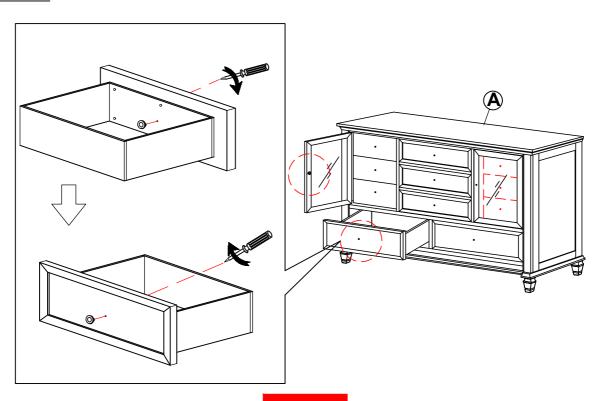


PAGE 2 OF 4



ASSEMBLY INSTRUCTIONS STEP 2

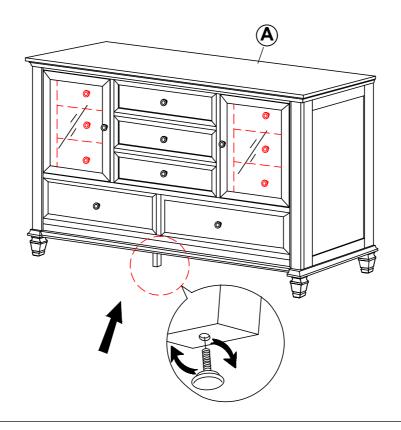

STEP 3 COMPLETE

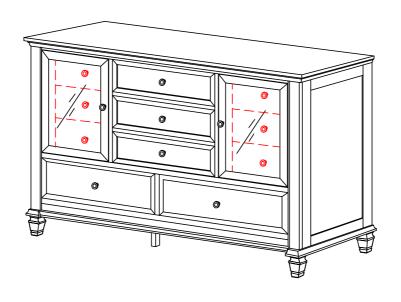

凉



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

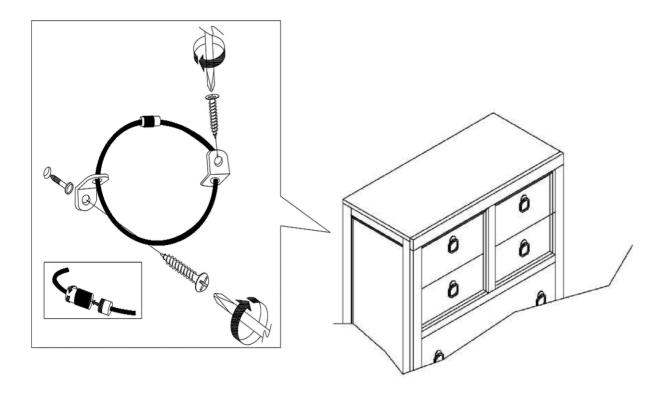









Inner Size of Drawer A: 10.25"W x 10.75"D x 4.00"H x 0.50"T Inner Size of Drawer B: 19.50"W x 12.75"D x 4.00"H x 0.50"T Inner Size of Drawer C: 24.50"W x 12.75"D x 5.50"H x 0.50"T

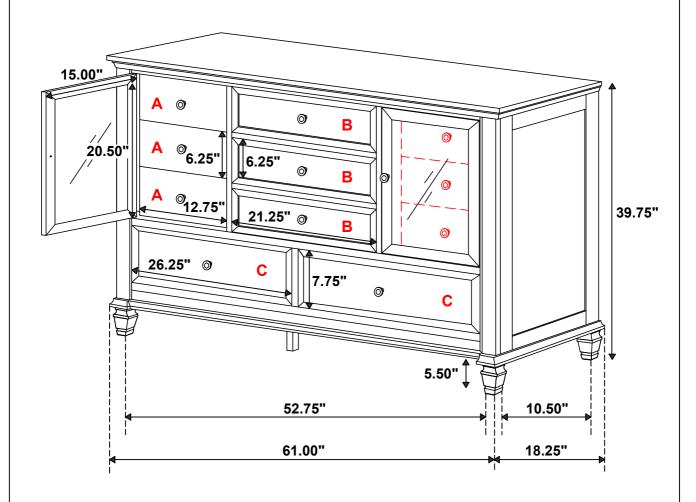



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

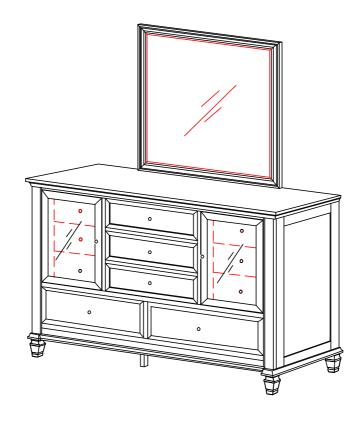

Fine Furniture for every stage of life

201324 *Mirror*

REVISION 0 : 07/04/2011 REVISION 1 : 09/27/2011 REVISION 2 : 03/17/2016 REVISION 3 : 08/27/2018 REVISION 4 : 12/04/2019 REVISION 5 : 09/04/2023

PAGE 1 OF 3



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

DRESSER
*FROM BOX ITEM #201323

TPC

MIRROR SUPPORT
(PACKED WITH DRESSER)

2PCS

HARDWARE IDENTIFICATION

1 SHORT FLAT HEAD SCREW
(M4 x 32mm - BLK)

4PCS

LONG FLAT HEAD SCREW
(M4 x 45mm - BLK)

4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ASSEMBLY INSTRUCTIONS STEP 1

B

(C)

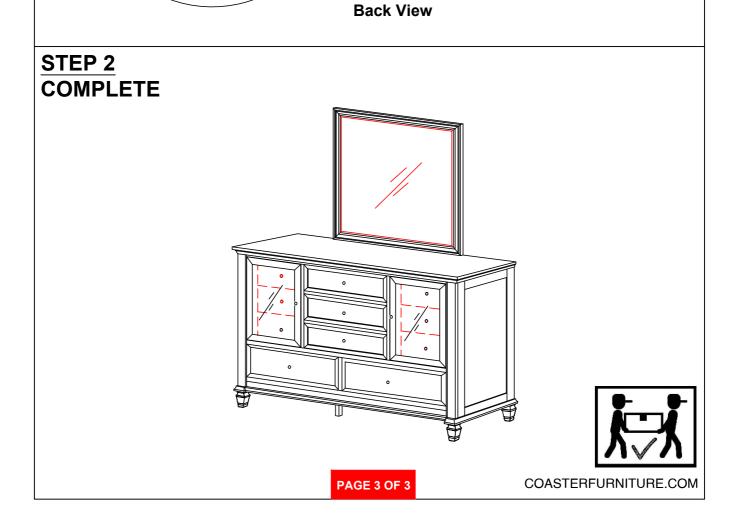



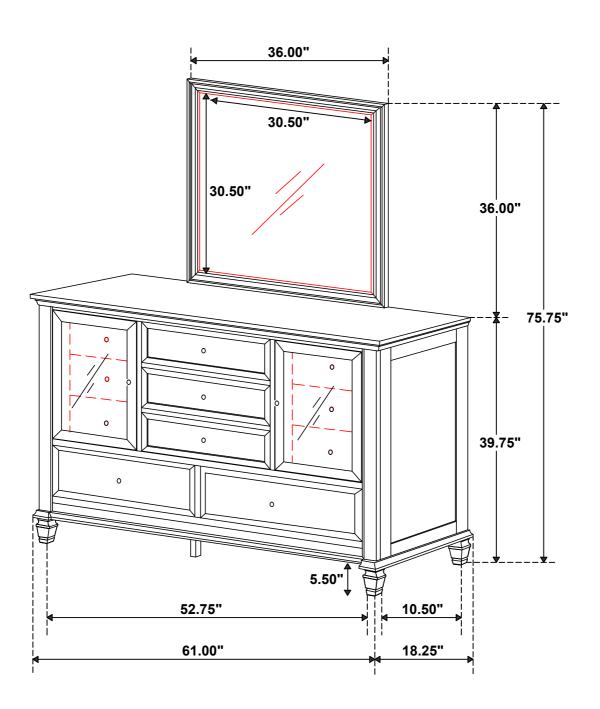



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

201325 *Chest*

REVISION 0 : 07/04/2011 REVISION 1 : 01/07/2013 REVISION 2 : 08/27/2018 REVISION 3 : 12/04/2019 REVISION 4 : 07/05/2024

PAGE 1 OF 4



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHEST




1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTER'

ASSEMBLY INSTRUCTIONS STEP 1

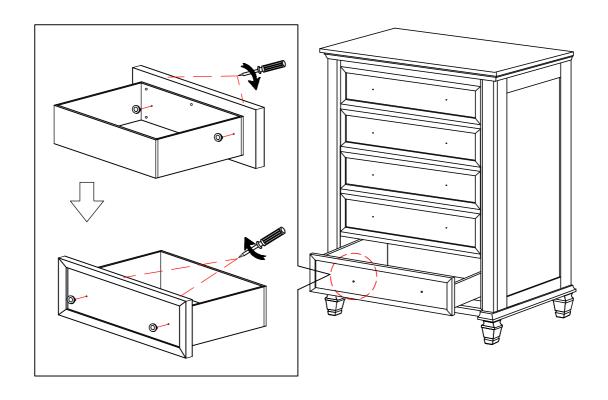

STEP 2 COMPLETE







ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

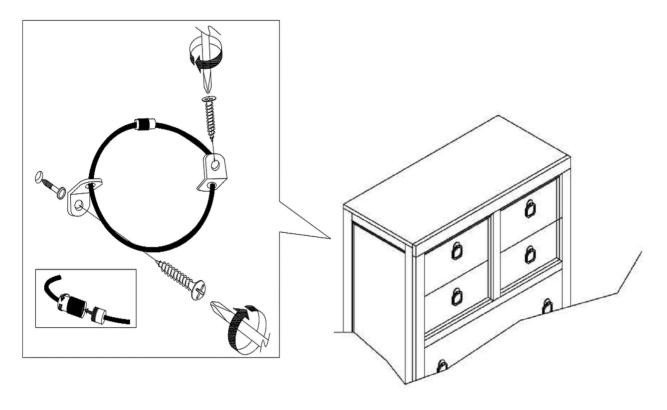







Inner Size of Drawer : 26.75"W x 12.75"D x 5.50"H x 0.50"T

