


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

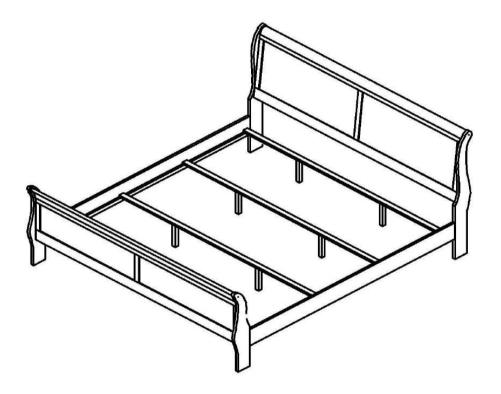

Fine Furniture for every stage of life

202441KE(B1&B2) Eastern King Bed

REVISION 0: 06/18/2024

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

20 MINUTES

### **PARTS IDENTIFICATION**

B1 (BOX 1)								
A	HEADBOARD PANEL		1PC	НВ	202441KE(B1) *FROM BOX 1 HEADBOARD COMPLETE		1PC	
В	LEFT HEADBOARD LEG		1PC	FB	202441KE(B1) *FROM BOX 1 FOOTBOARD		1PC	
С	RIGHT HEADBOARD LEG		1PC			U		
D	FOOTBOARD PANEL		1PC					
E	LEFT FOOTBOARD LEG		1PC					
F	RIGHT FOOTBOARD LEG		1PC					
B2 (BOX 2)								
G	BED RAIL		2PCS					
н	BED SLAT		4PCS					
I	BED SLAT SUPPORT WITH LEVELER	€	8PCS					

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

### **HARDWARE IDENTIFICATION**

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 202441KE(B1)

1	BOLT (M6 x 35mm - BLK)		12PCS
2	LOCK WASHER (M6 - BLK)		12PCS
3	SMALL FLAT WASHER (M6 x 13mm - BLK)		4PCS
4	BIG FLAT WASHER (M6 x 19mm - BLK)		8PCS
5	ALLEN WRENCH (M4 x 65mm - BLK)		1PC
6	WOOD PLUG (14.50mm - WHT)		4PCS
7	PAN HEAD SCREW (M4 x 30mm - BLK)	E DONNE DE LA CONTRACTION DE L	8PCS


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




# ASSEMBLY INSTRUCTIONS 202441KE(B1) - BOX 1

## STEP 1

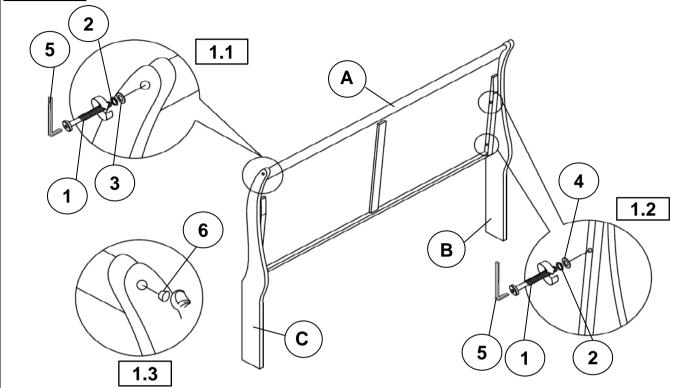

### STEP 2

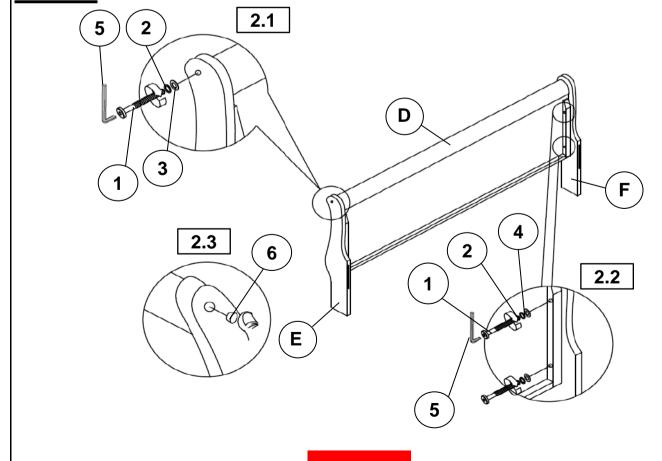


PAGE 4 OF 6




# ASSEMBLY INSTRUCTIONS 202441KE(B1&B2) - BOX 1 & BOX 2

## STEP 3

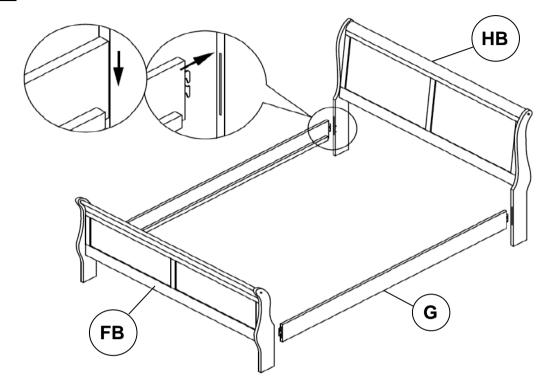


## STEP 4

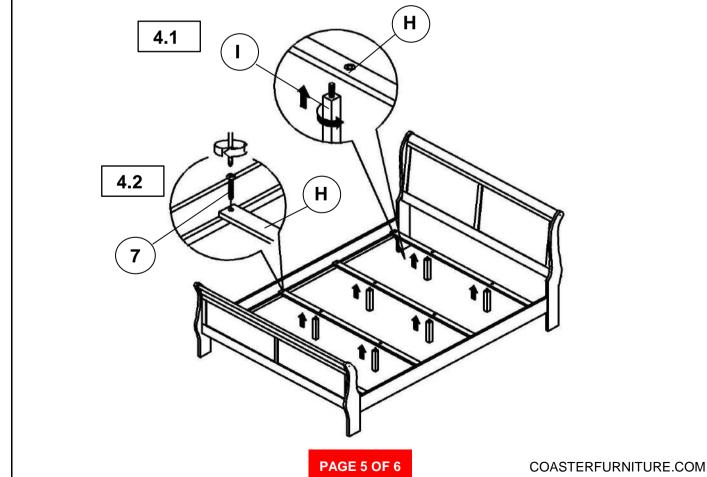



### **ASSEMBLY INSTRUCTIONS**


# STEP 5 COMPLETE

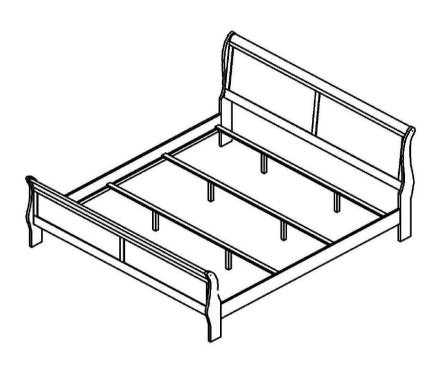





Inner Size: 76.25"W x 80.50"D

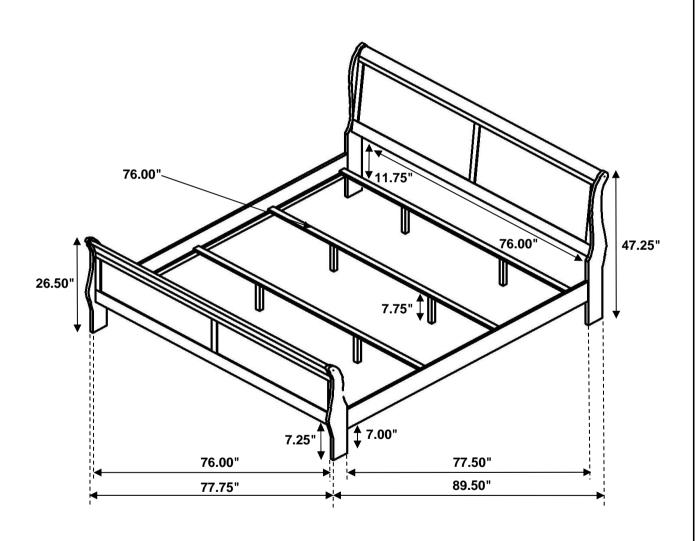



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

202443 *Dresser* 

REVISION 0:06/18/2024

PAGE 1 OF 2



# ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

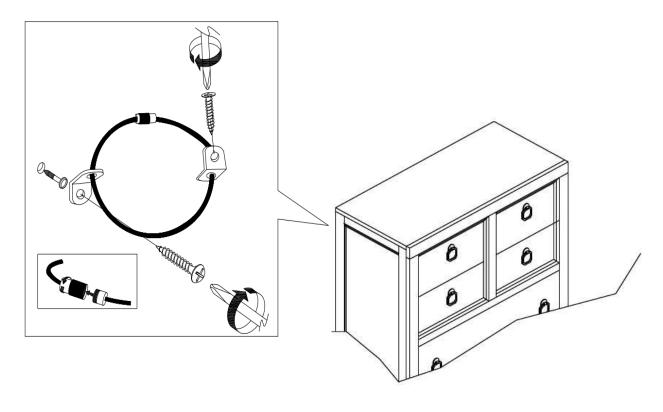





Inner Size of Drawer: 23.00"W X 12.25"D X 4.00"H X 0.50"T

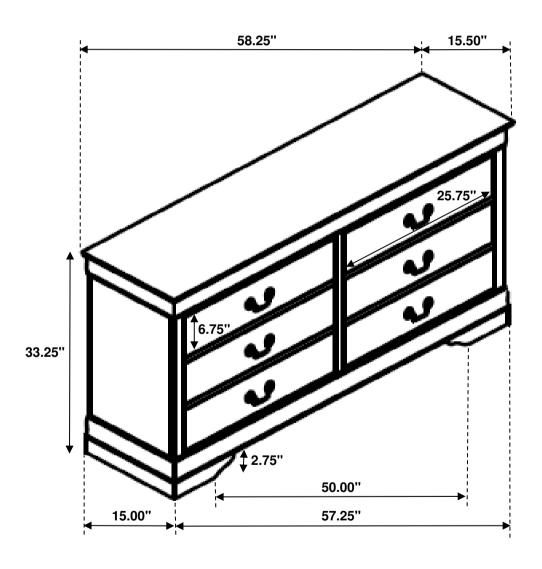



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

202444 *Mirror* 

REVISION 0: 06/18/2024

PAGE 1 OF 4

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

### **PARTS IDENTIFICATION**

A MIRROR



1PC

B DRESSER FROM BOX ITEM# 202443



1PC

C MIRROR SUPPORT (PACKED WITH DRESSER)



2PCS

### **HARDWARE IDENTIFICATION**

PAN HEAD SCREW (M4 x 32mm - BLK)




6PCS

#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




# ASSEMBLY INSTRUCTIONS STEP 1

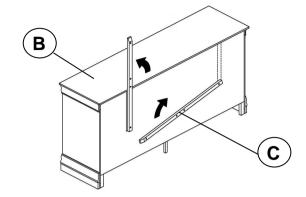

## STEP 2

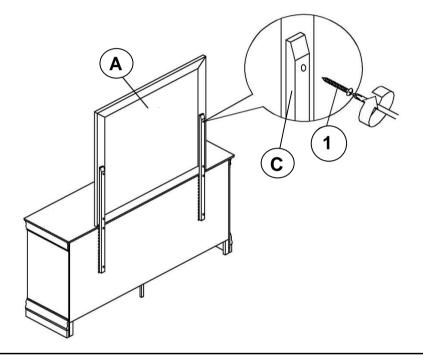


# STEP 3 COMPLETE

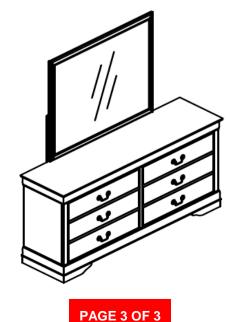





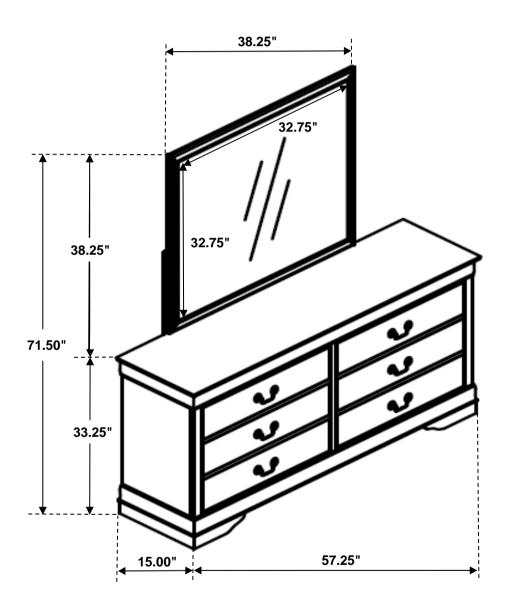



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

202445 <u>Chest</u>



# ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

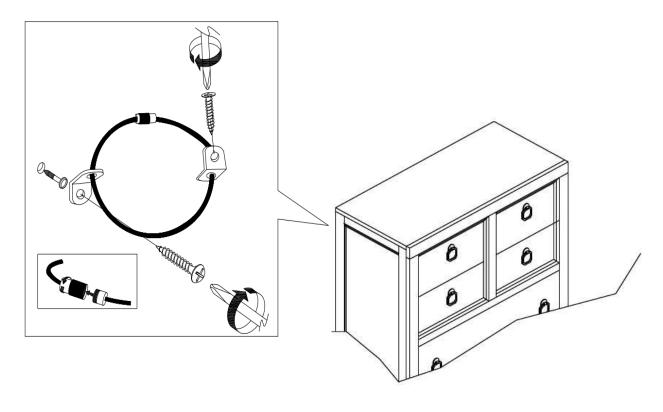





Inner Size of Drawer: 23.00"W X 12.25"D X 4.00"H X 0.50"T

