

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

200704
Mirror

ITEM: **200704**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A DRESSER
FROM BOX ITEM
#200703

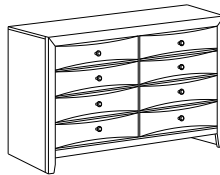


1PC

B MIRROR

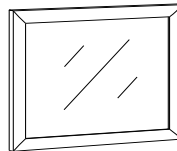

1PC

C MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW
(M4 x 32mm - RBW)




12PCS


ITEM: **200704**

ASSEMBLY INSTRUCTIONS

STEP 1

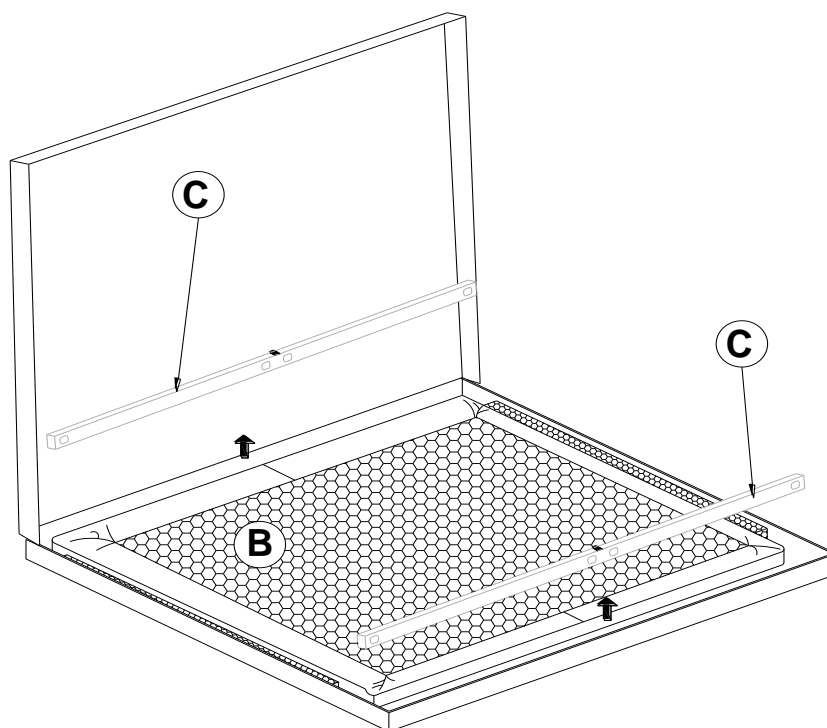

STEP 2

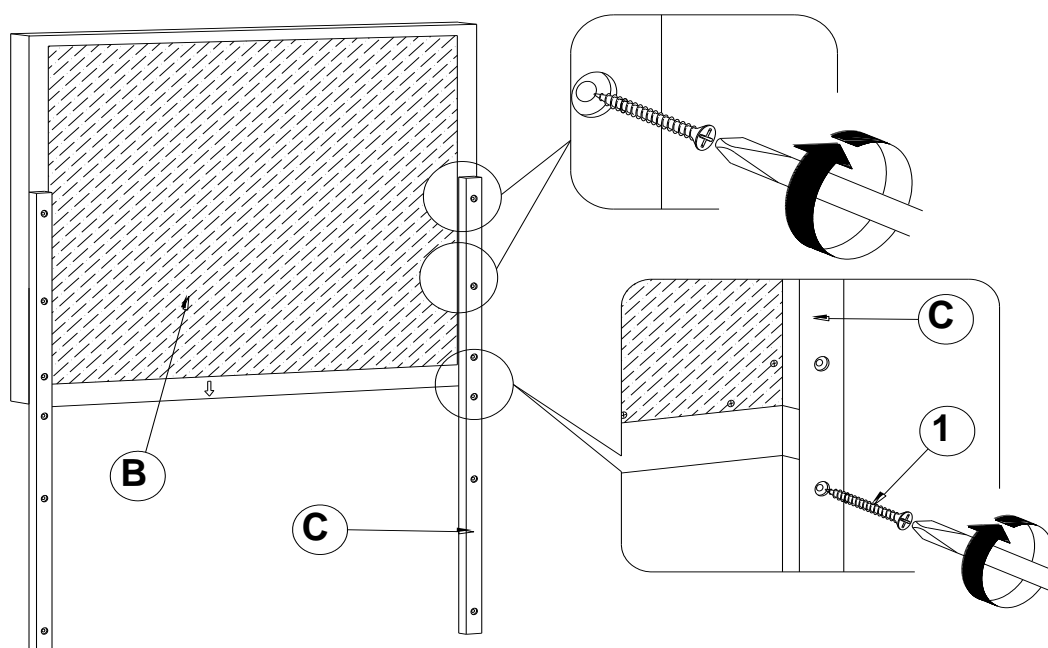


****BACK VIEW****

ITEM: **200704**




ASSEMBLY INSTRUCTIONS


STEP 3

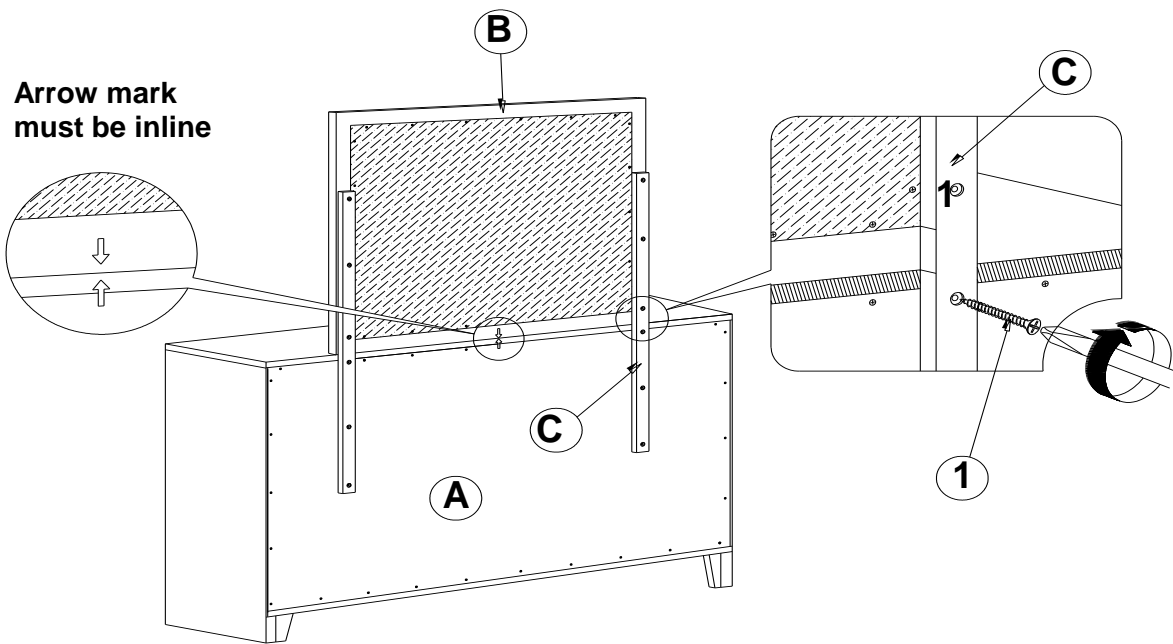

STEP 4 COMPLETE

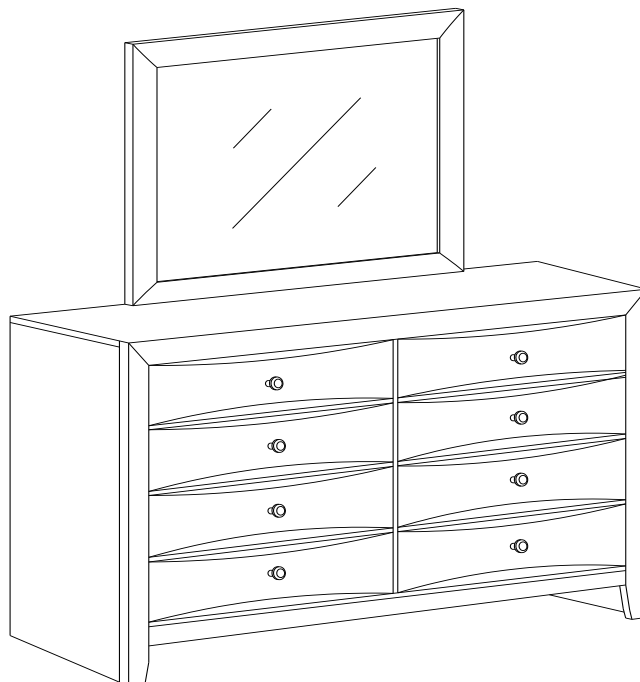


ITEM: **200704**

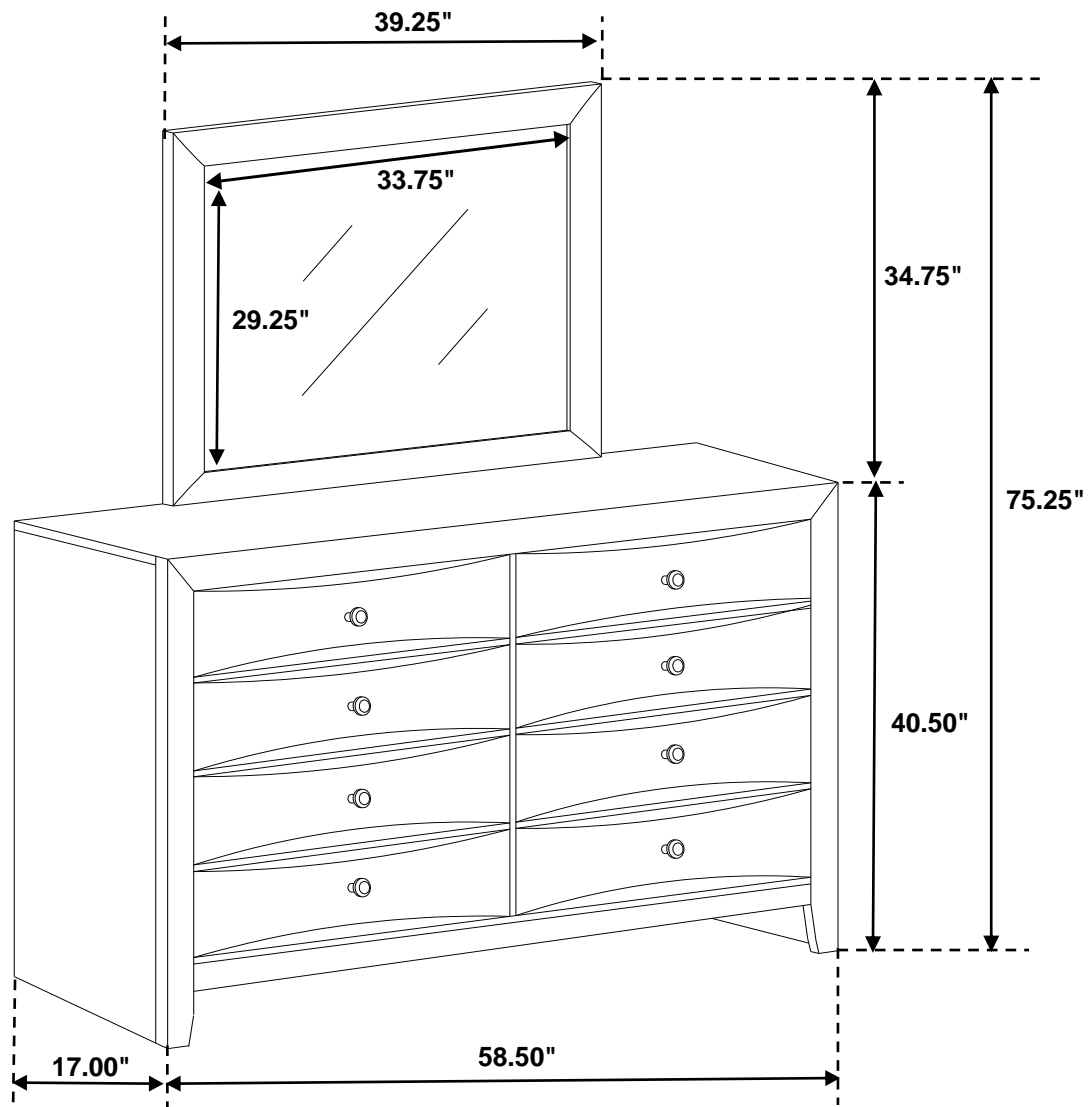

Note : Dimension tolerance \pm 5%

ASSEMBLY INSTRUCTIONS *COASTER FINE FURNITURE*

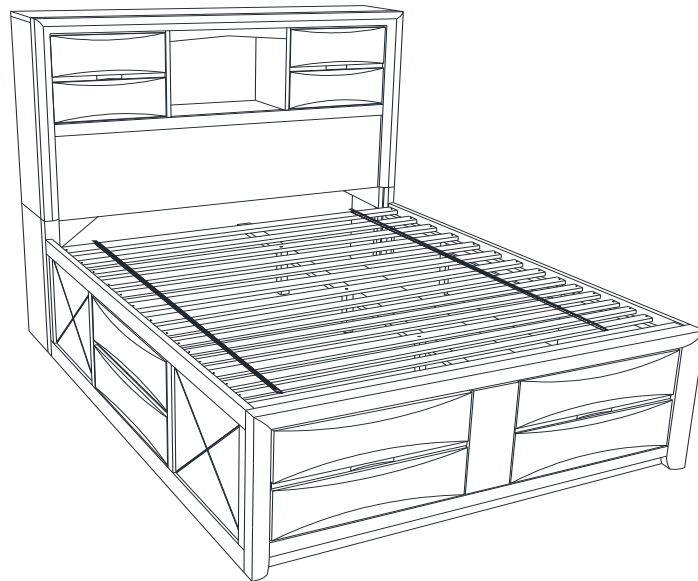

Fine Furniture for every stage of life

202701KE(B1-B3) **Eastern King Storage Bed**

REVISION 0 : 07/11/2012
REVISION 1 : 03/19/2013
REVISION 2 : 01/09/2017
REVISION 3 : 12/16/2020

ITEM: 202701KE(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

45 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL

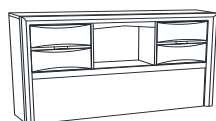


1PC

B RIGHT
HEADBOARD
LEG




1PC

C LEFT
HEADBOARD
LEG



1PC

D FOOTBOARD




1PC

E DRAWER GLIDE
WITH RAIL




4PCS

F ROLL SLAT
(14PCS)



1 SET

G DRAWER FRAME




1PC

H CONCEAL PANEL



2PCS

I TRESTLE BAR



2PCS

J BED SLAT
SUPPORT WITH
LEVELER



3PCS

K DRAWER
FRAME
SUPPORT WITH
LEVELER




1PC

L TRIANGLE
SUPPORT
PANEL



2PCS


M BOTTOM
CROSS RAIL

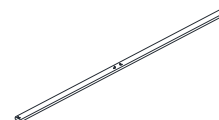

3PCS


B2 (BOX 2)

N BED RAIL

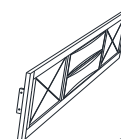

2PCS


O CENTER RAIL



1PC


B3 (BOX 3)

P TOP DRAWER



2PCS

Q BOTTOM DRAWER




2PCS

HB 202701KE (B1)
*FROM BOX 1
HEADBOARD
COMPLETE



1PC

D 202701KE (B2)
*FROM BOX 1
FOOTBOARD



1PC

ITEM: 202701KE(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 202701KE (B1)

1	FLAT HEAD SCREW (M4 x 32mm - RBW)		41PCS
2	PAN HEAD SCREW (M3.5 x 16mm - BLK)		24PCS
3	SHORT BOLT (M6 x 35mm - BLK)		19PCS
4	LONG BOLT (M6 x 50mm - BLK)		5PCS
5	FLAT WASHER (1/4" ID x 13mm - BLK)		21PCS
6	LOCK WASHER (1/4" - BLK)		21PCS
7	ALLEN WRENCH (M4 x 110mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 202701KE (B2)


8	HINGE		2SETS
9	PAN HEAD SCREW (M3.5 x 16mm - BLK)		16PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

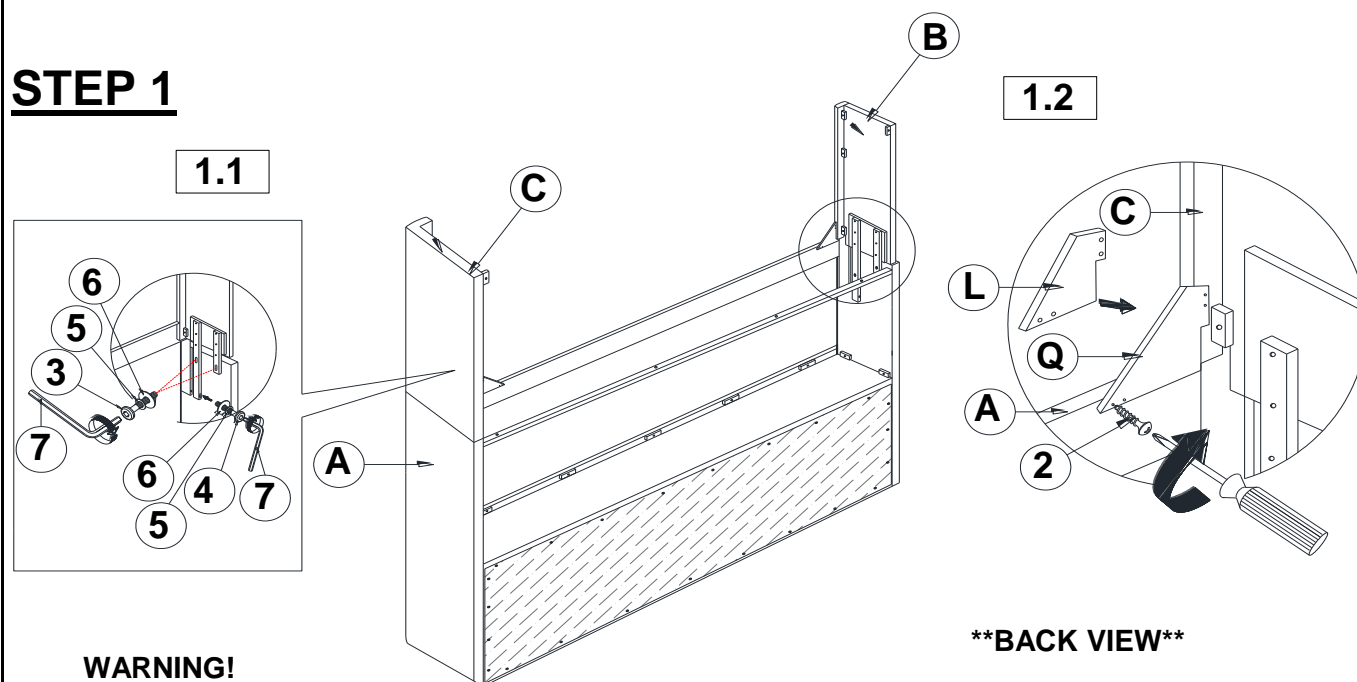


WARNING!

Install the bolts by following the arrows shown. After all bolts been installed inside the hole, please tighten them fully.


Note : Please put item on soft surface.
Note : Please take note of the marking sticker (L&R) on the leg.

STEP 2

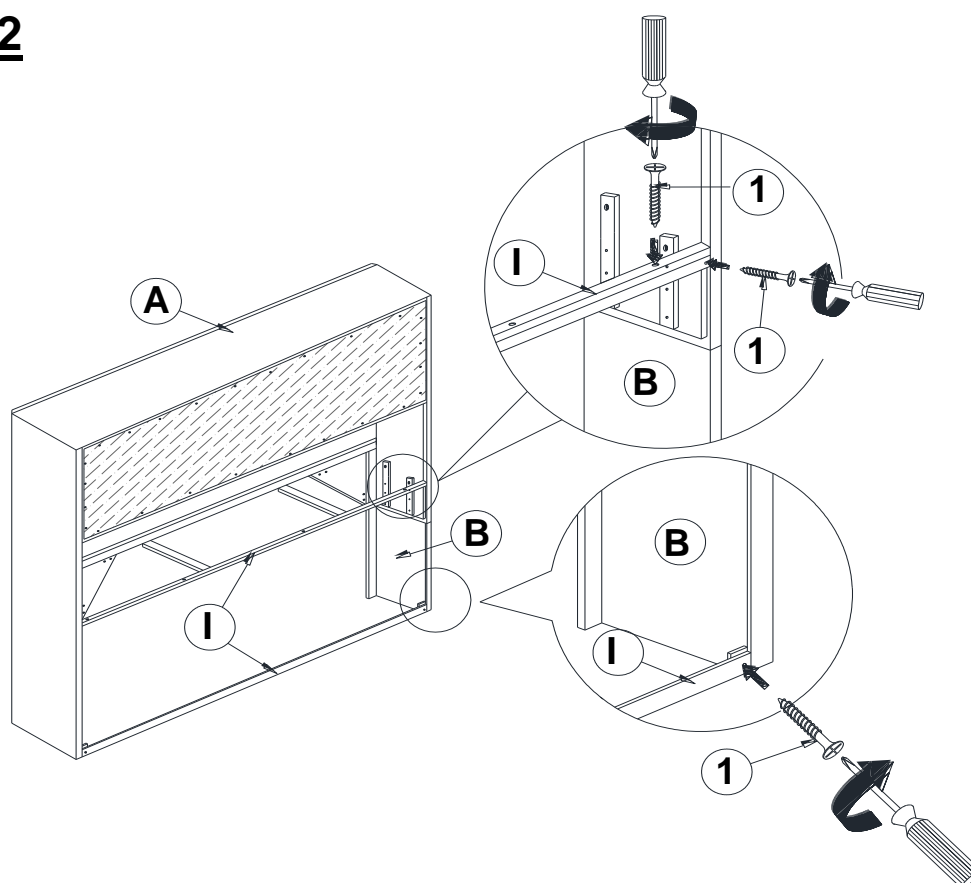


ASSEMBLY INSTRUCTIONS

STEP 3

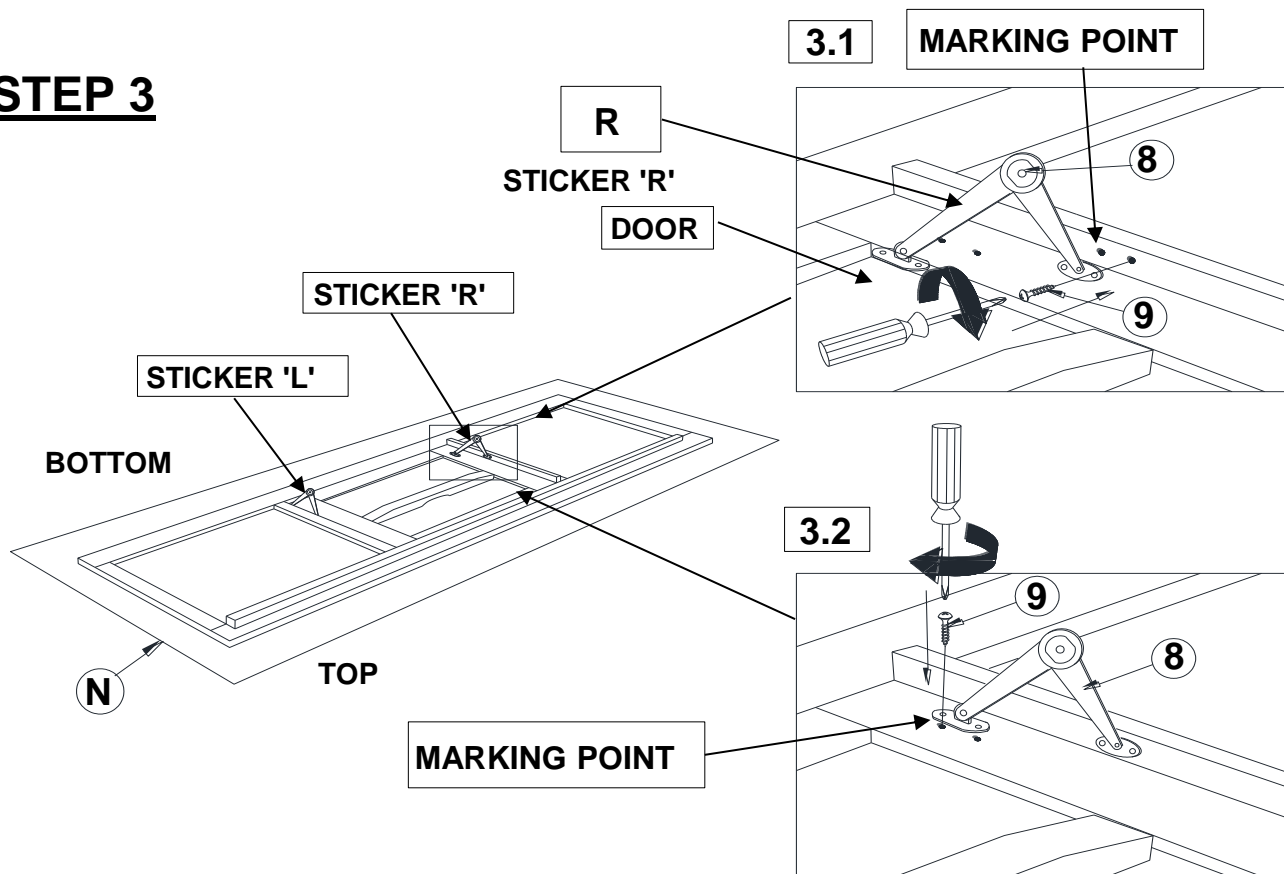


STEP 4

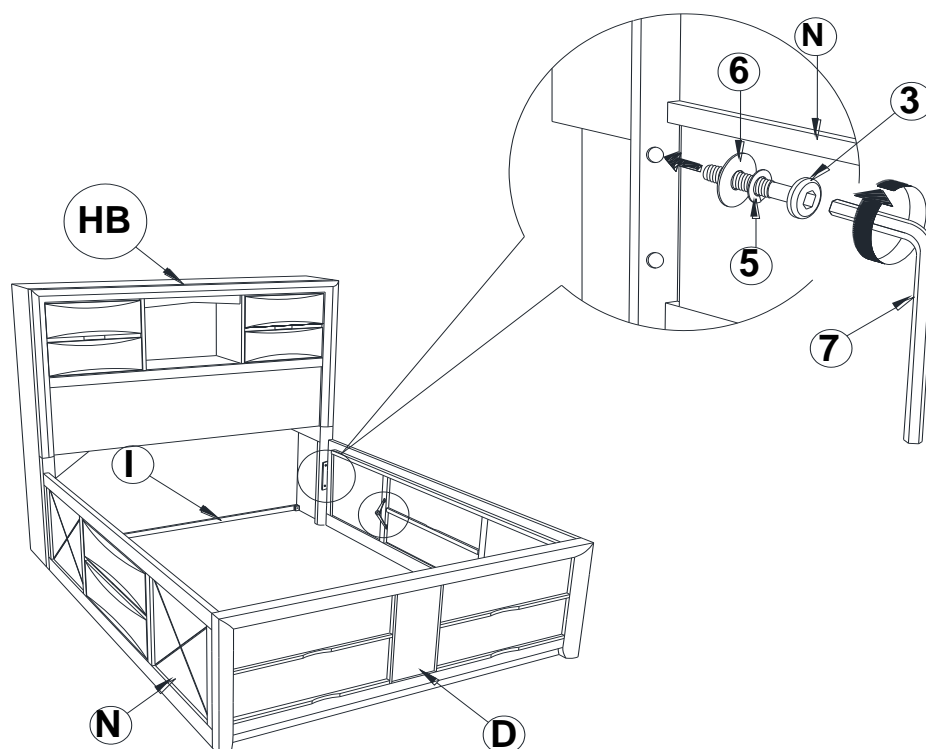


ASSEMBLY INSTRUCTIONS

STEP 5

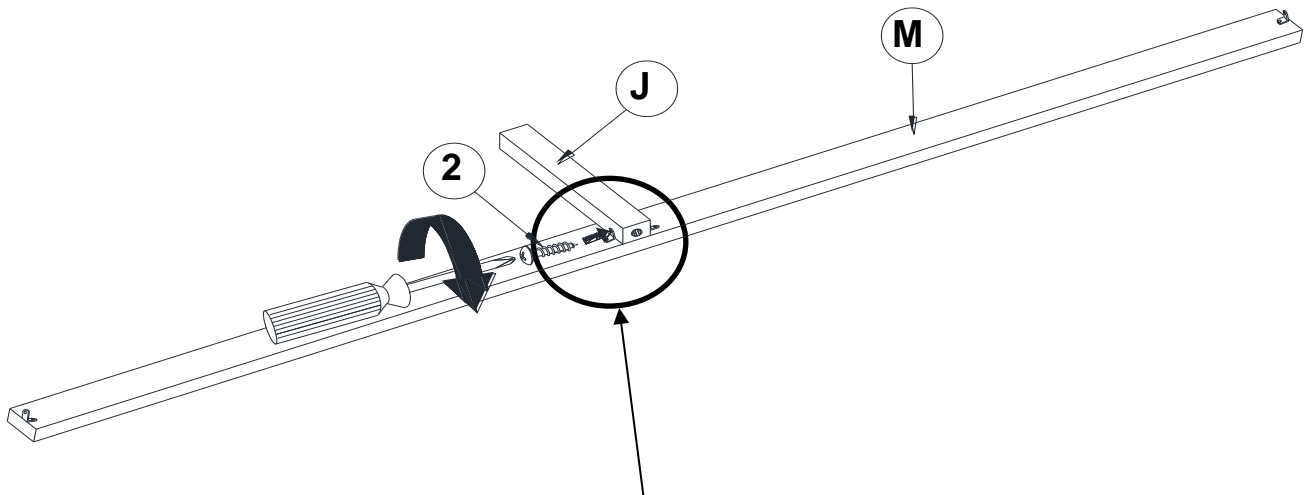


REMARK: MAKE SURE THE BOTTOM SURFACE OF THE BED SLAT SUPPORT (J) IS ALIGNED WITH THE EDGE OF THE BOTTOM CROSS RAIL (M)

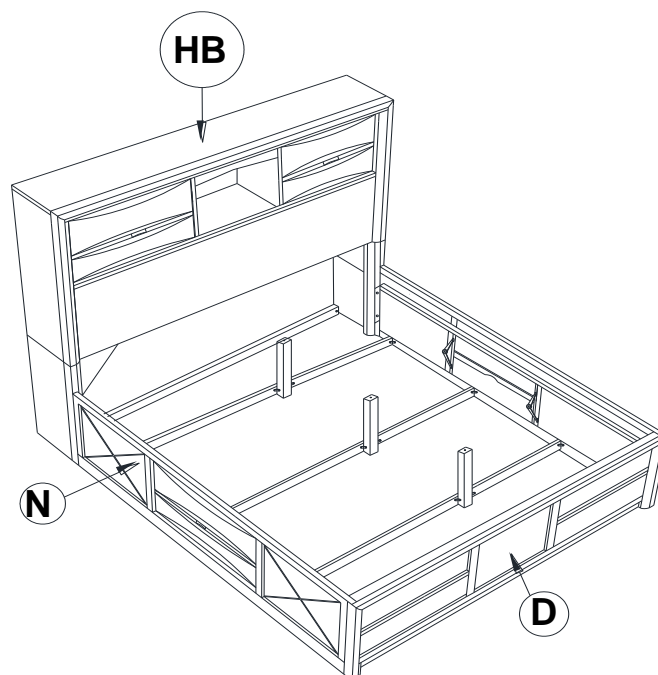


ASSEMBLY INSTRUCTIONS

STEP 6

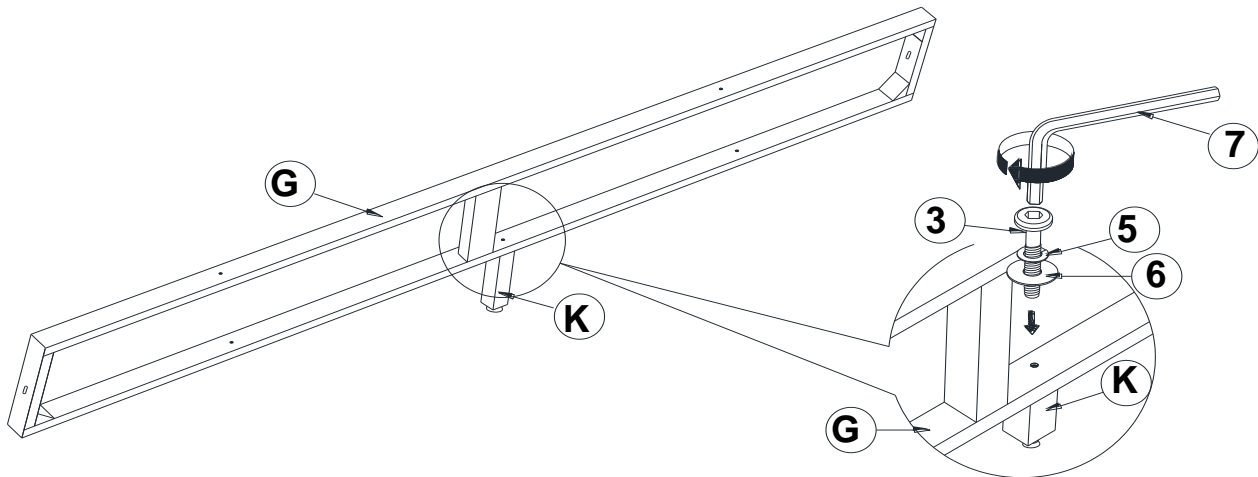

STEP 7


REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

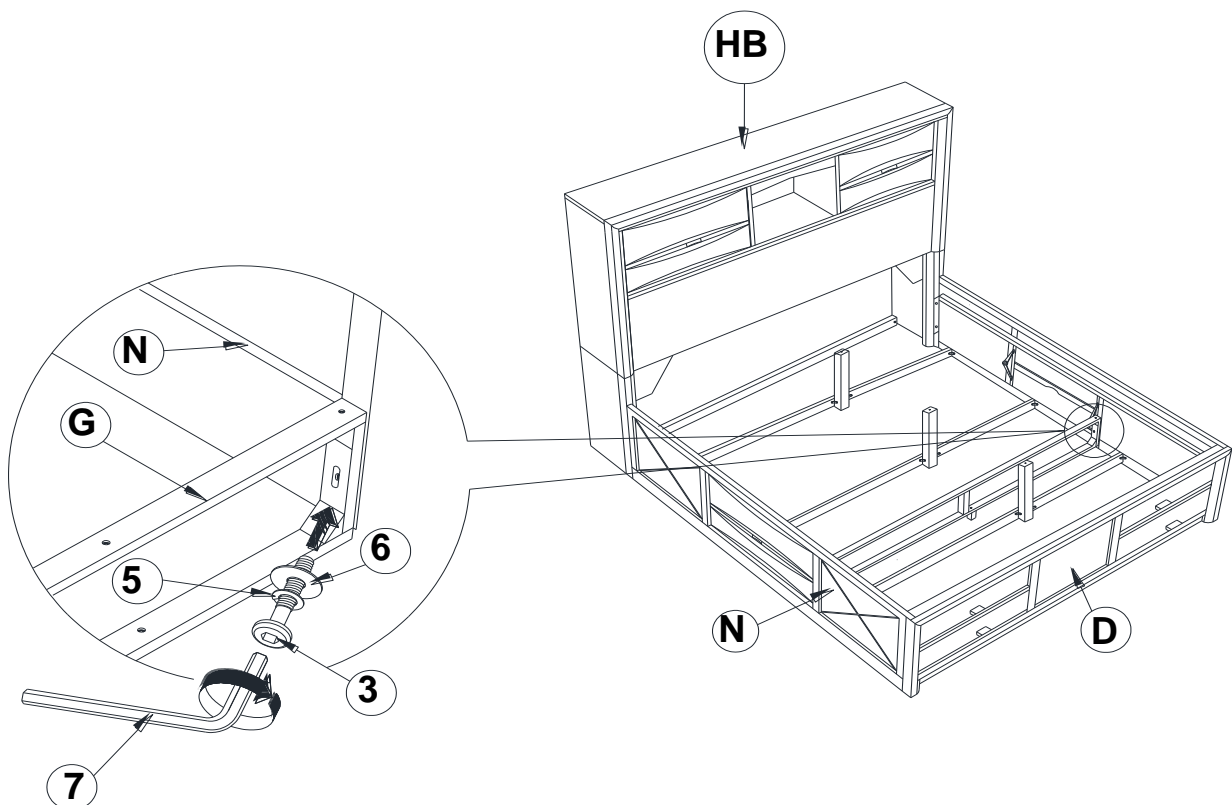

ASSEMBLY INSTRUCTIONS

STEP 8

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

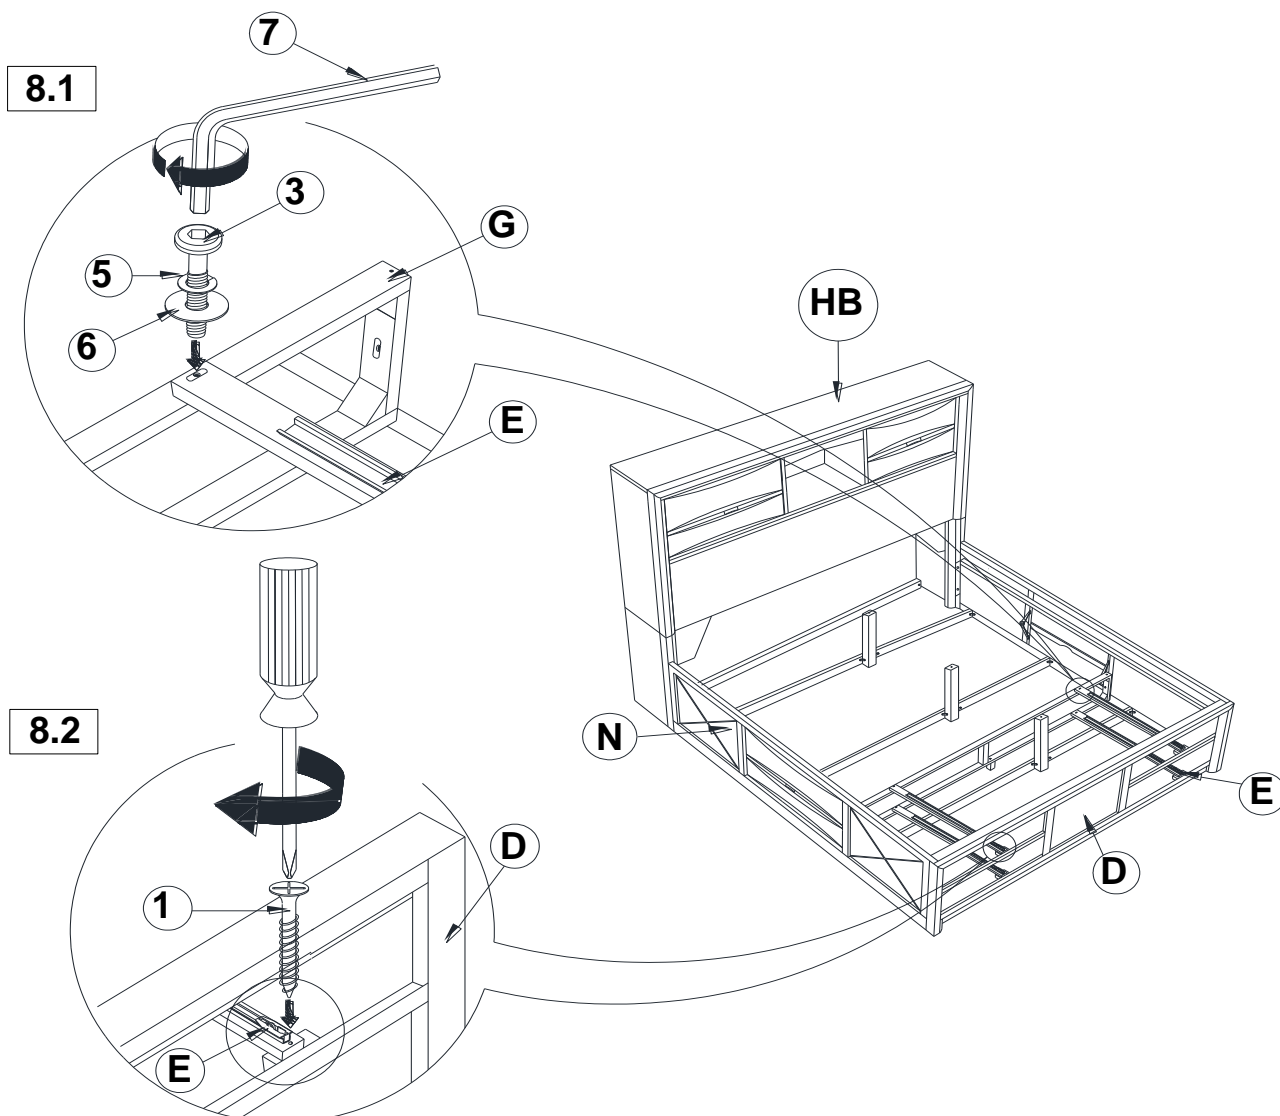


REMARK: MAKE SURE THE DRAWER GLIDE WITH RAIL (E) IS CENTER AGAINST THE CUT OUT ON THE WOOD CLEAT AND ALSO TOUCHING IT BEFORE FASTEN USING SCREW (1).



ASSEMBLY INSTRUCTIONS

STEP 9

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

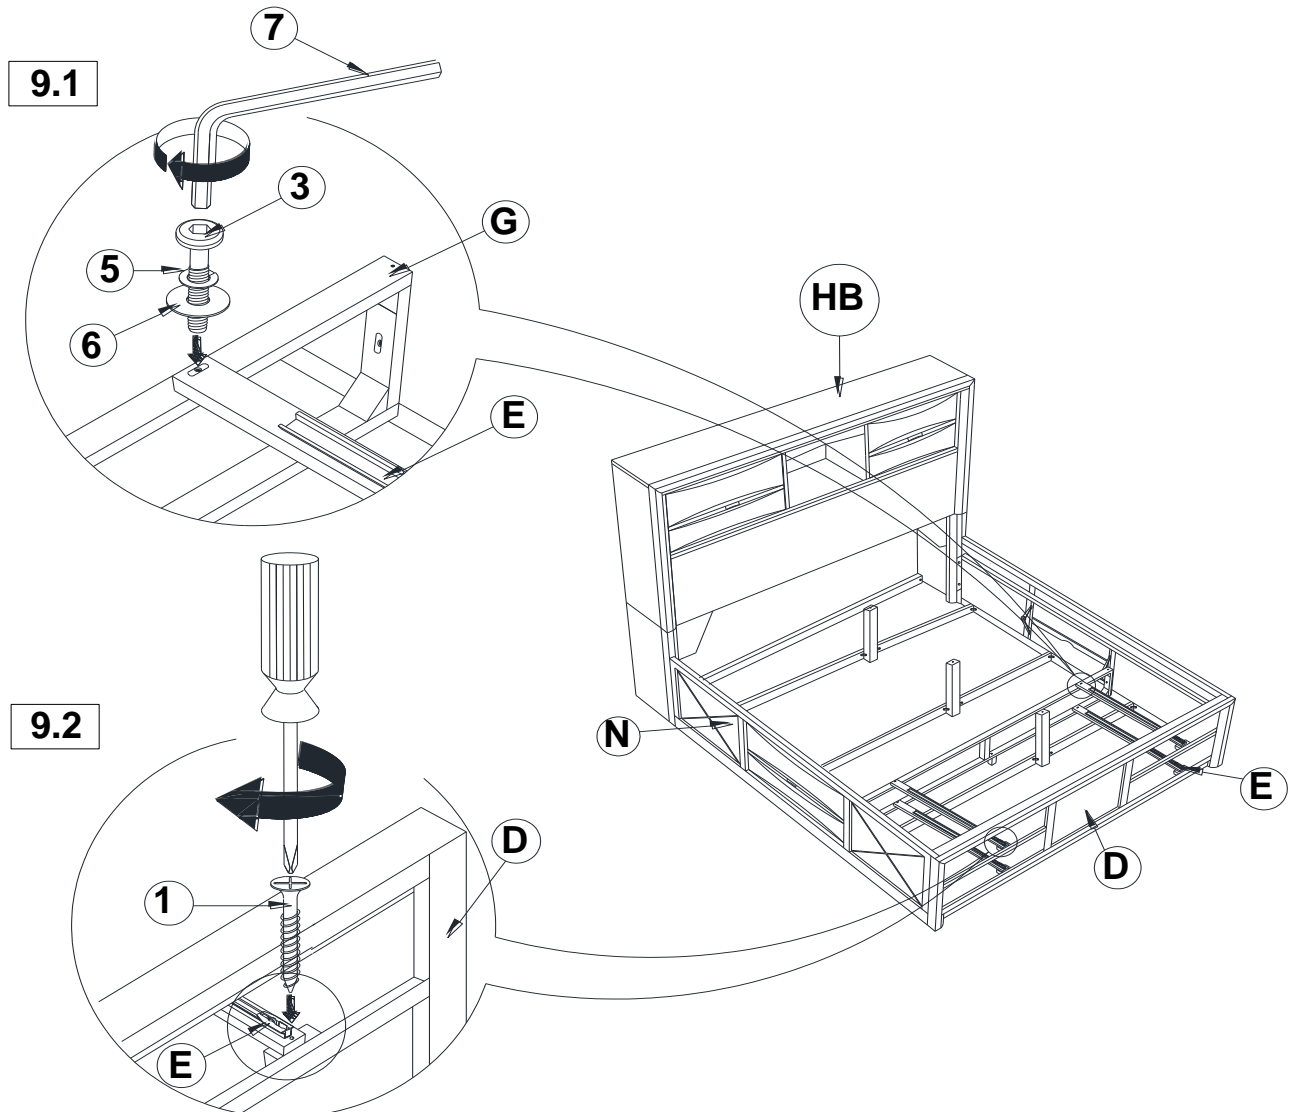


REMARK: MAKE SURE THE DRAWER GLIDE WITH RAIL (E) IS CENTER AGAINST THE CUT OUT ON THE WOOD CLEAT AND ALSO TOUCHING IT BEFORE FASTEN USING SCREW (1).

ASSEMBLY INSTRUCTIONS


STEP 10

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

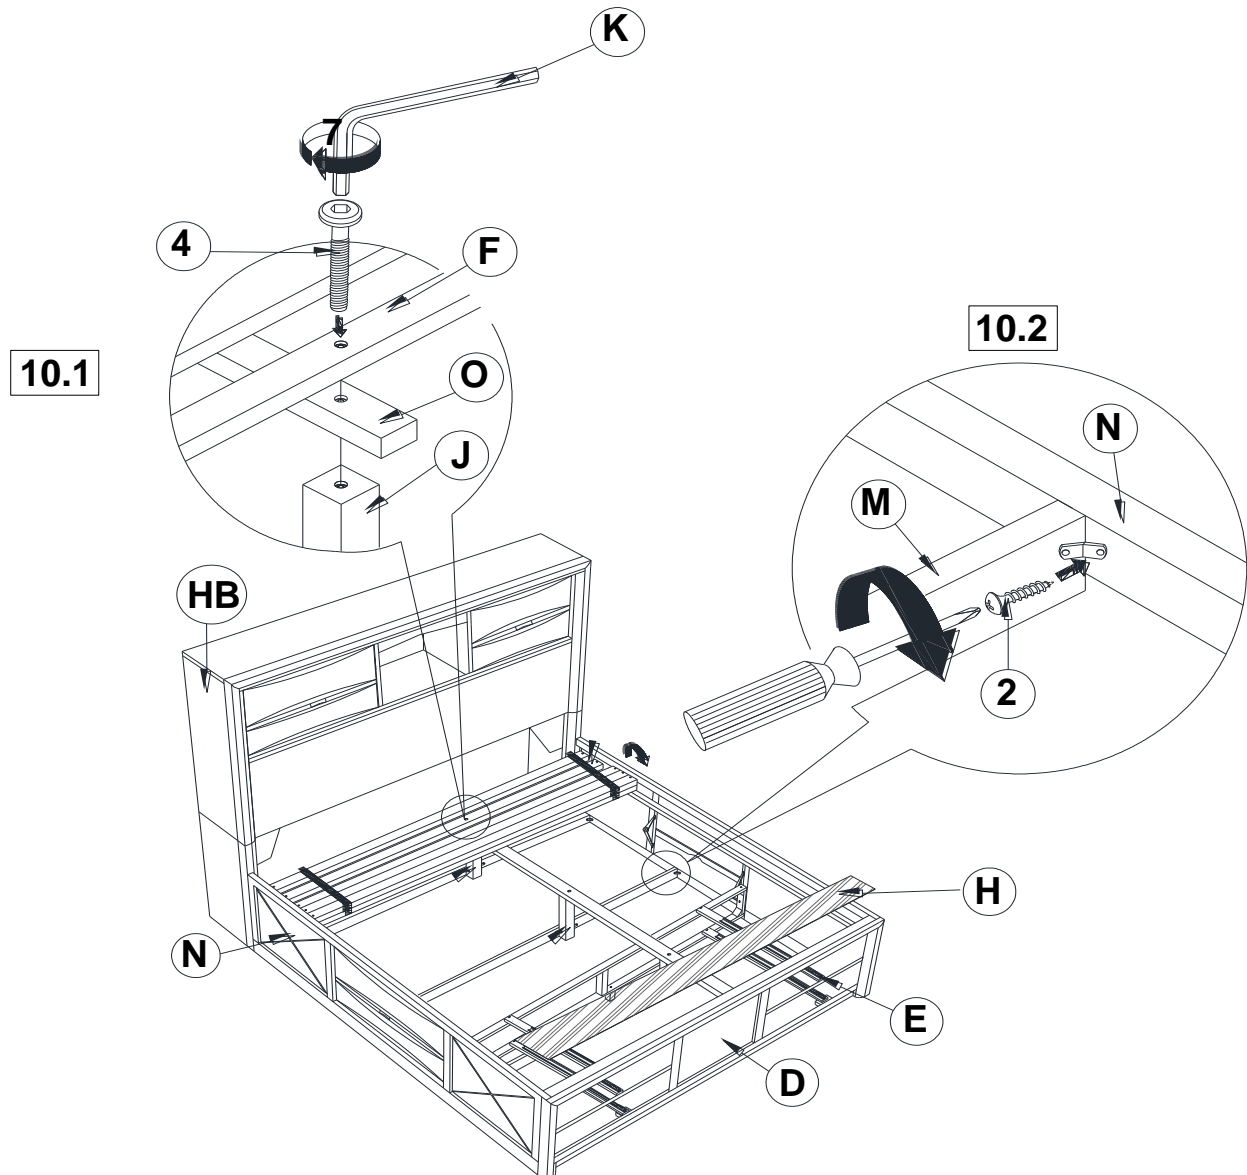


ASSEMBLY INSTRUCTIONS

STEP 11

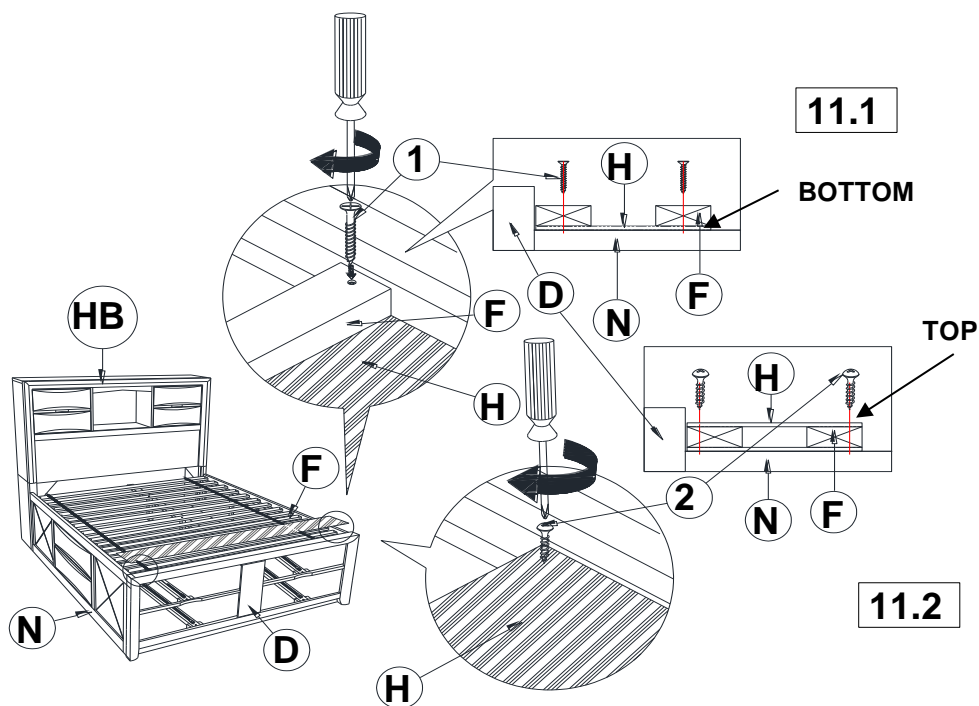

REMARK: MAKE SURE ALIGN THE CONCEALED PANEL AT BOTTOM AND TOP OF LAST TWO SLAT AS DIAGRAM SHOWN.

STEP 12

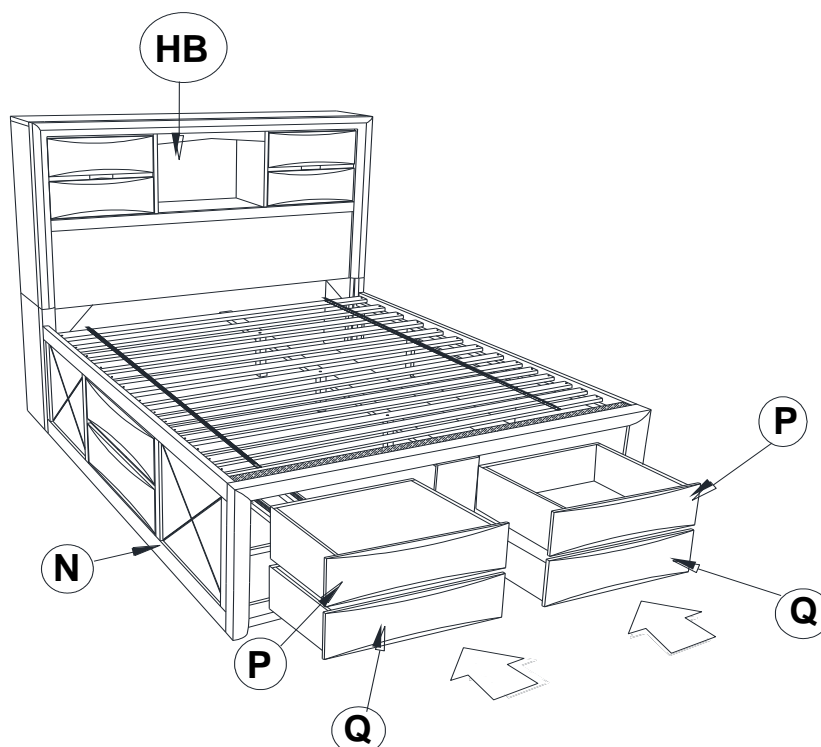


REMARK: REFER TO THE "TOP" & "BOTTOM" LABEL ON DRAWER PRIOR TO START OF ASSEMBLY.

ASSEMBLY INSTRUCTIONS

REMARK: IF THE DRAWER IS NOT ALIGNED, PLEASE DO THE BELOW ADJUSTMENT:


1) To align the drawer up or down

Action : Adjust the drawer frame (G) to up or down.

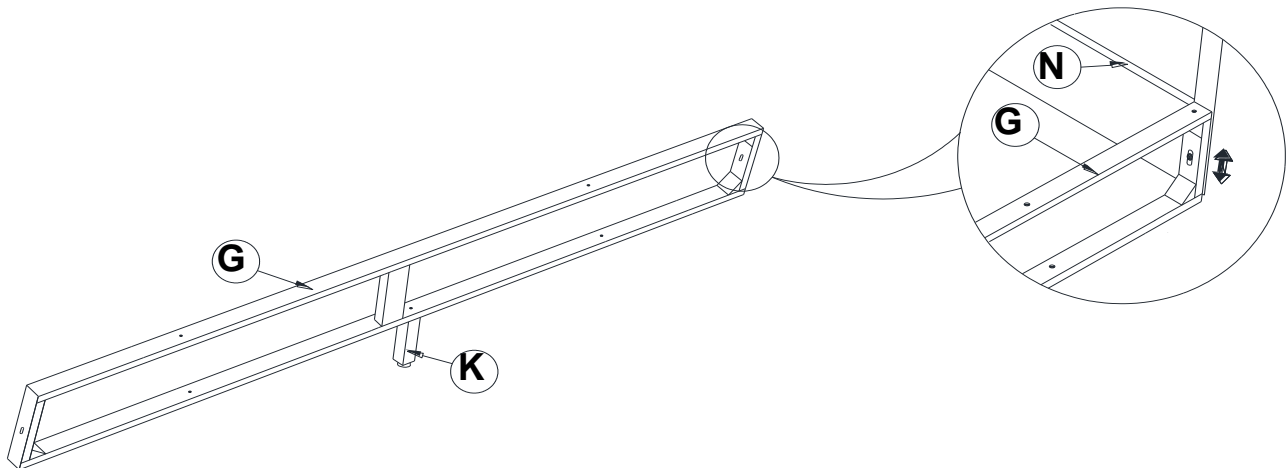


REMARK: 2) To align the drawer left or right.

Action : Adjust the drawer glide with rail (E) to left or right.

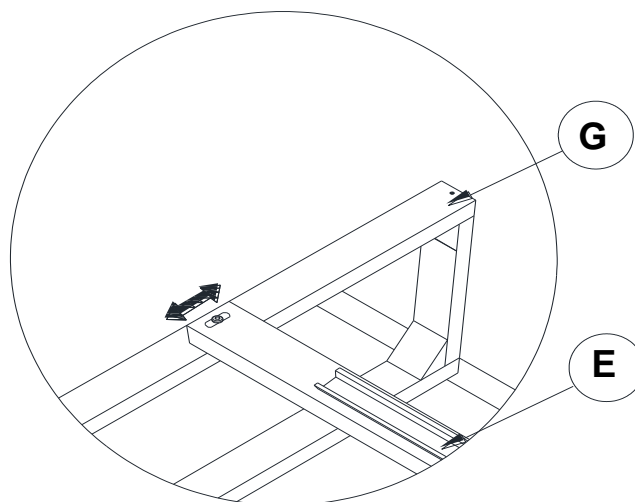

REMARK: AFTER COMPLETED THE DRAWER ALIGNMENT:

- 1) Adjust the leveler of drawer frame support (K) to touch the floor.**
- 2) Fully tighten all the bolt from step 8, 9 & 10.**

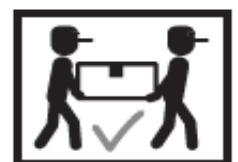


ITEM: **202701KE(B1-B3)**



Inner Size: 76.75"W X 81.00"D

Inner Size of Drawer : 23.25"W X 12.75"D X 4.25"H X 0.25"T

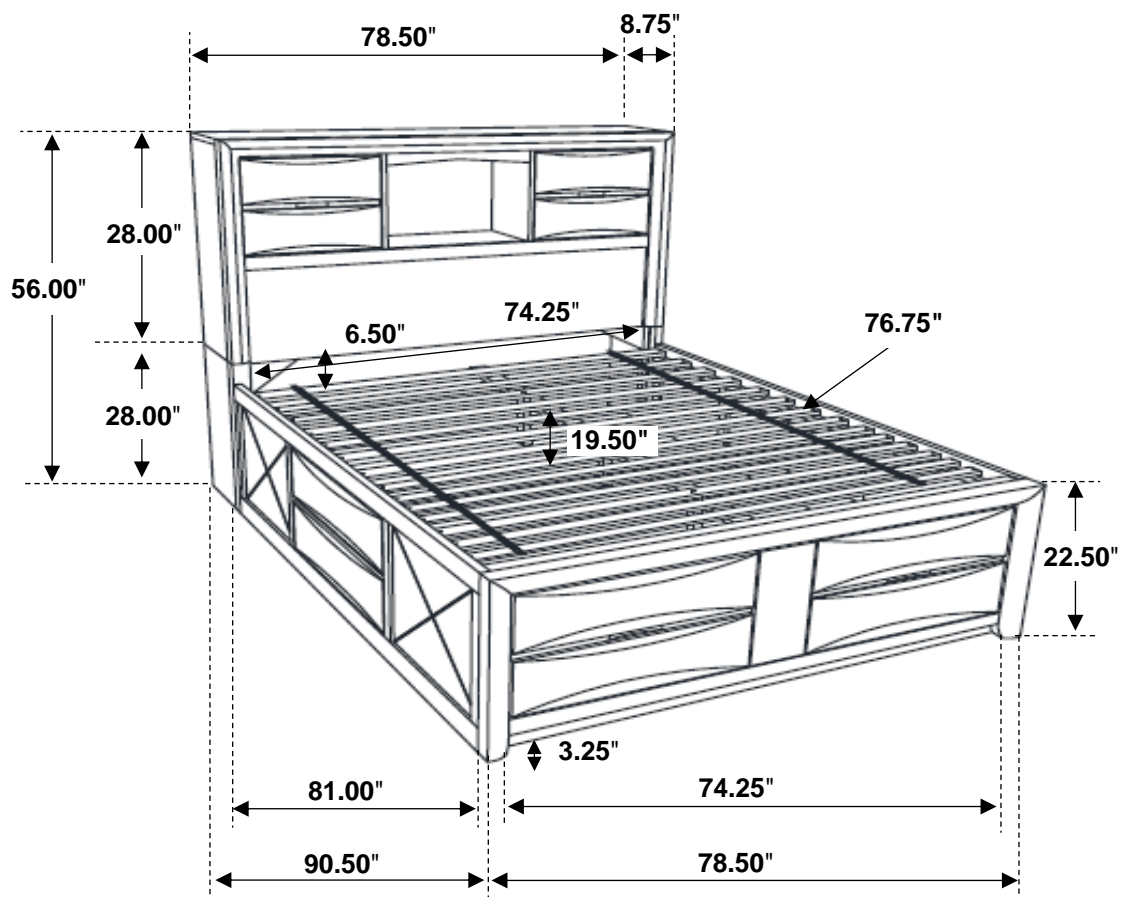

Note: Dimension tolerance $\pm 5\%$