

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

200704 *Mirror*

REVISION 0 : 01/05/2009 REVISION 1 : 01/09/2012 REVISION 2 : 12/22/2020

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

DRESSER
A FROM BOX ITEM
#200703



1PC

B MIRROR



1PC

C MIRROR SUPPORT (PACKED WITH MIRROR)



2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW (M4 x 32mm - RBW)




12PCS




ASSEMBLY INSTRUCTIONS

STEP 1

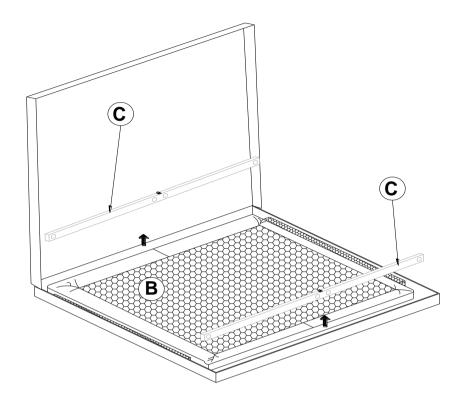

STEP 2

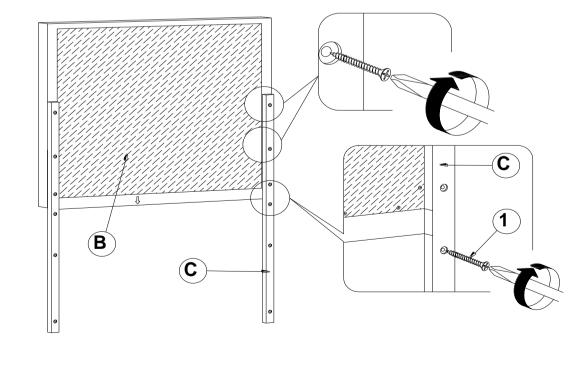


BACK VIEW

PAGE 3 OF 4



ASSEMBLY INSTRUCTIONS

STEP 3

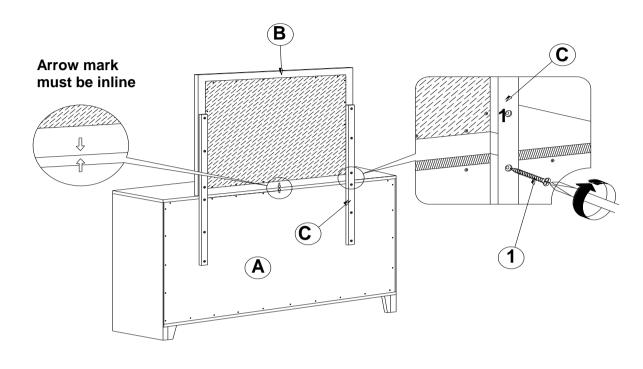


STEP 4 COMPLETE





PAGE 4 OF 4



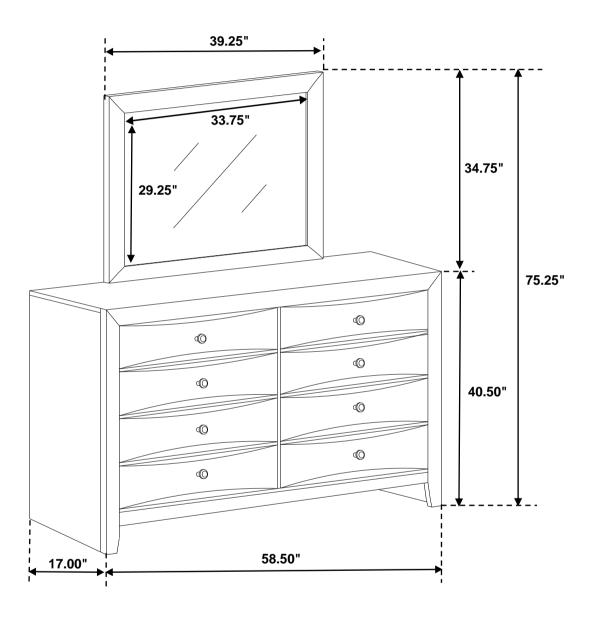

Note: Dimension tolerence ± 5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

202701KE(B1-B3) Eastern King Storage Bed

REVISION 0 : 07/11/2012 REVISION 1 : 03/19/2013 REVISION 2 : 01/09/2017 REVISION 3 : 12/16/2020

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

45 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

	12021./		_		
Α	HEADBOARD PANEL	1PC	DRAWER FRAME SUPPORT WITH LEVELER		1PC
В	RIGHT HEADBOARD LEG	1PC	TRIANGLE L SUPPORT PANEL		2PCS
С	LEFT HEADBOARD LEG	1PC	M BOTTOM CROSS RAIL		3PCS
D	FOOTBOARD	1PC	B2 (BOX 2)	A	
			N BED RAIL		2PCS
E	DRAWER GLIDE WITH RAIL	4PCS	O CENTER RAIL		1PC
F	ROLL SLAT (14PCS)	1 SET	4		
			B3 (BOX 3)		
G	DRAWER FRAME	1PC	P TOP DRAWER		2PCS
н	CONCEAL PANEL	2PCS	Q BOTTOM DRAWER		2PCS
I	TRESTLE BAR	2PCS	202701KE (B1) *FROM BOX 1 HEADBOARD		1PC
	BED SLAT		COMPLETE		
J	SUPPORT WITH LEVELER	3PCS	202701KE (B2) D *FROM BOX 1 FOOTBOARD		1PC

PAGE 2 OF 12

COASTER'

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 202701KE (B1)

1	FLAT HEAD SCREW (M4 x 32mm - RBW)		41PCS
2	PAN HEAD SCREW (M3.5 x 16mm - BLK)	€) □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	24PCS
3	SHORT BOLT (M6 x 35mm - BLK)		19PCS
4	LONG BOLT (M6 x 50mm - BLK)		5PCS
5	FLAT WASHER (1/4"ID x 13mm - BLK)		21PCS
6	LOCK WASHER (1/4" - BLK)		21PCS
7	ALLEN WRENCH (M4 x 110mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 202701KE (B2)

8 HINGE

2SETS

9 PAN HEAD SCREW
(M3.5 x 16mm - BLK)


16PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ASSEMBLY INSTRUCTIONS

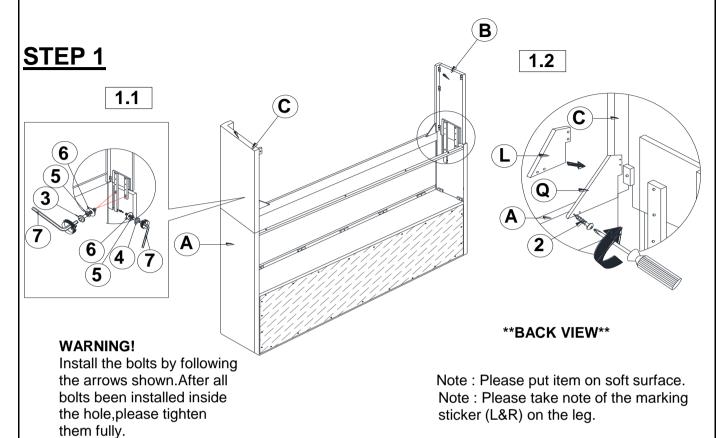

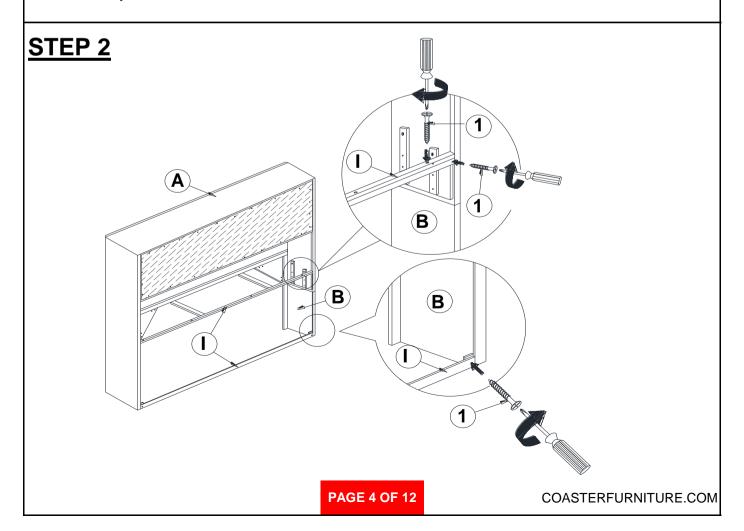




ASSEMBLY INSTRUCTIONS

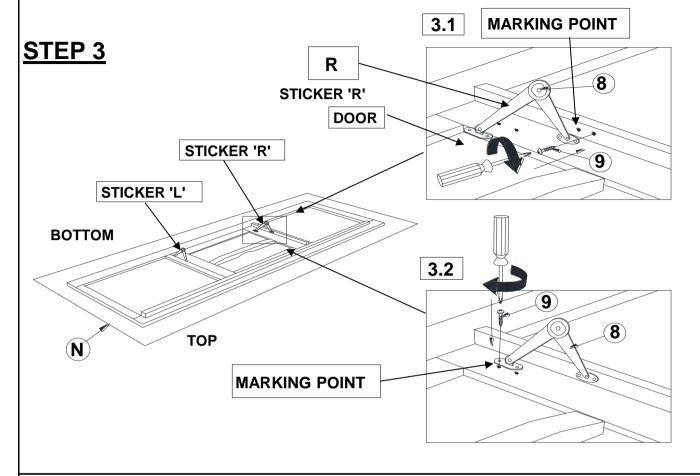

STEP 4

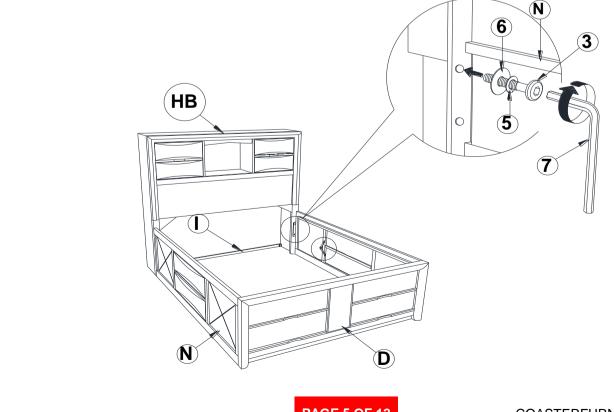


PAGE 5 OF 12




ASSEMBLY INSTRUCTIONS

STEP 5

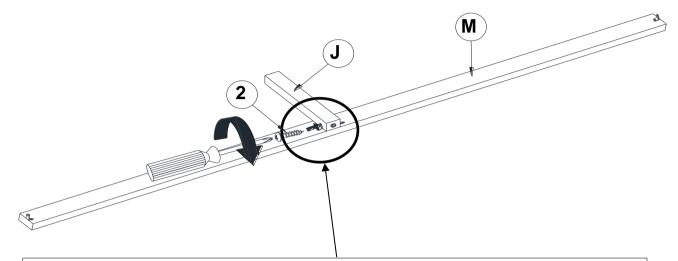


REMARK: MAKE SURE THE BOTTOM SURFACE OF THE BED SLAT SUPPORT (J) IS ALIGNED WITH THE EDGE OF THE BOTTOM CROSS RAIL (M)

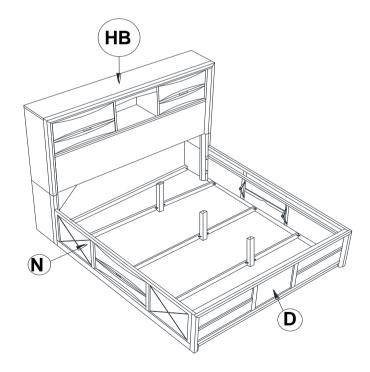




ASSEMBLY INSTRUCTIONS

STEP 6

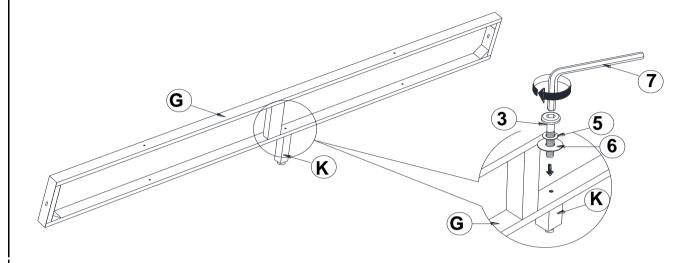

STEP 7

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

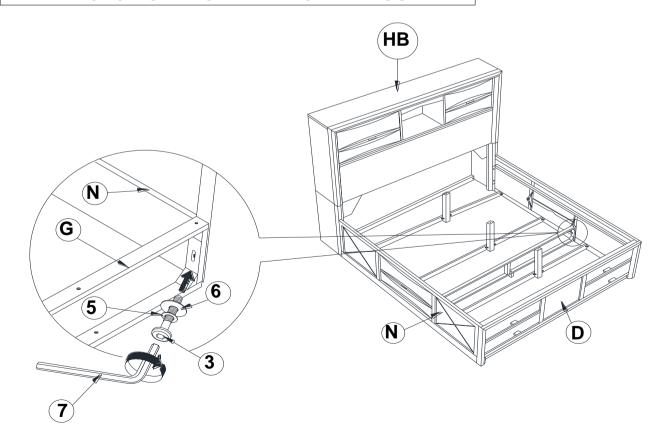


PAGE 7 OF 12



ASSEMBLY INSTRUCTIONS

STEP 8

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

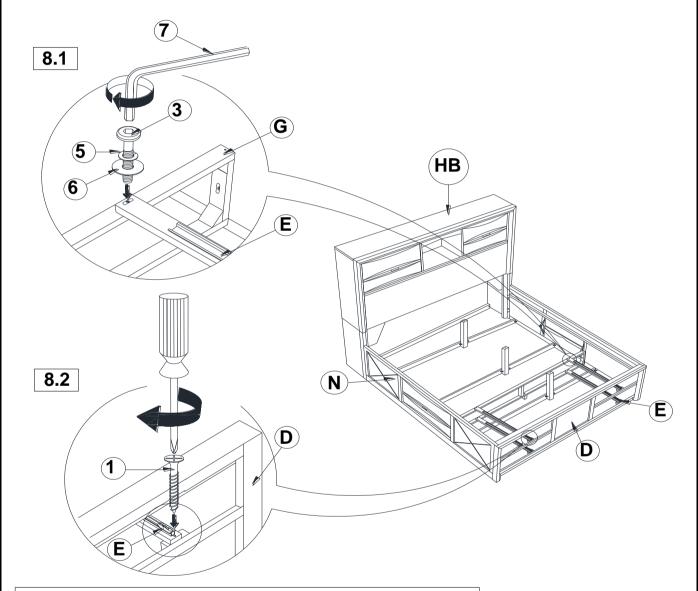


REMARK: MAKE SURE THE DRAWER GLIDE WITH RAIL (E) IS CENTER AGAINST THE CUT OUT ON THE WOOD CLEAT AND ALSO TOUCHING IT BEFORE FASTEN USING SCREW (1).





ASSEMBLY INSTRUCTIONS STEP 9

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

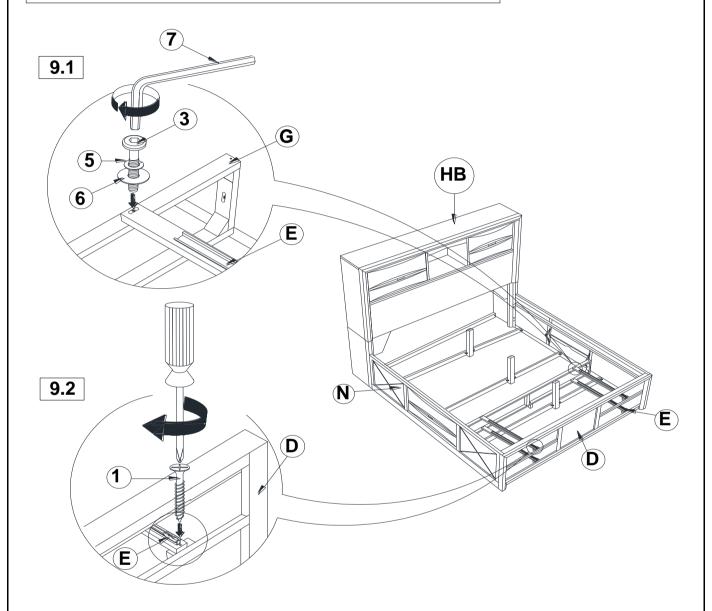


REMARK: MAKE SURE THE DRAWER GLIDE WITH RAIL (E)
IS CENTER AGAINST THE CUT OUT ON THE
WOOD CLEAT AND ALSO TOUCHING IT BEFORE
FASTEN USING SCREW (1).




ASSEMBLY INSTRUCTIONS STEP 10

REMARK: DO NOT FULLY TIGHTEN THE BOLT AT THIS STEP

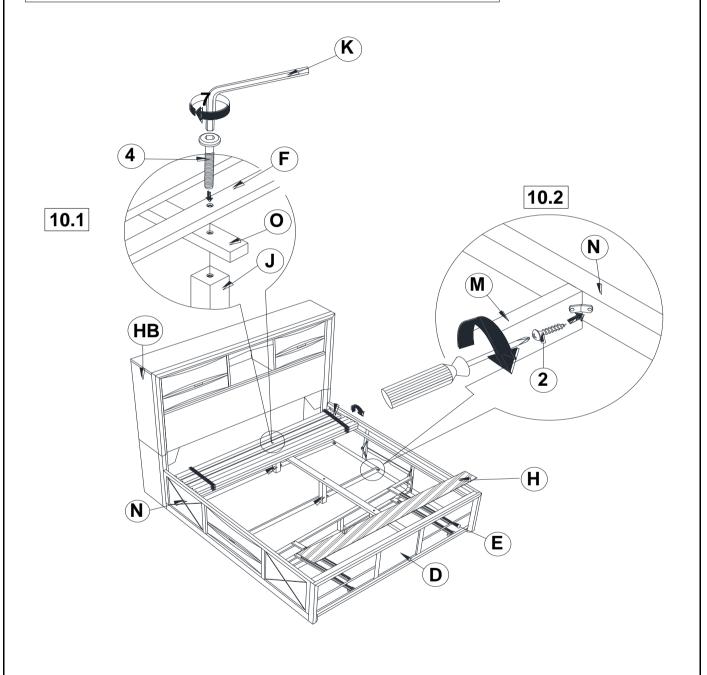




ASSEMBLY INSTRUCTIONS

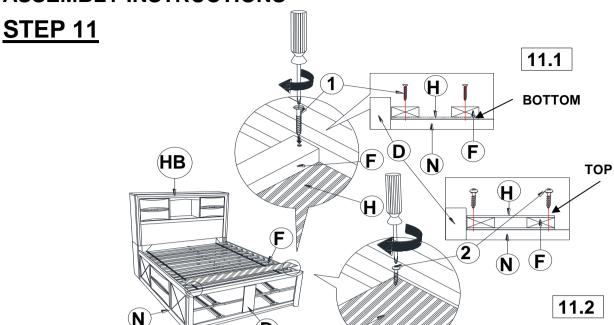

REMARK: MAKE SURE ALIGN THE CONCEALED PANEL AT BOTTOM AND TOP OF LAST TWO SLAT AS DIAGRAM SHOWN.

STEP 12

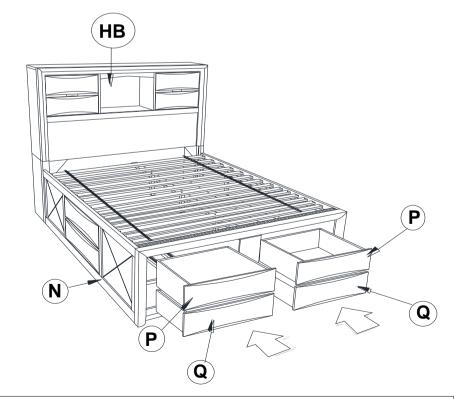

REMARK: REFER TO THE "TOP" & "BOTTOM" LABEL ON DRAWER PRIOR TO START OF ASSEMBLY.


PAGE 11 OF 12



ASSEMBLY INSTRUCTIONS


REMARK: IF THE DRAWER IS NOT ALIGNED, PLEASE DO THE BELOW ADJUSTMENT:

1) To align the drawer up or down Action: Adjust the drawer frame (G) to up or down.

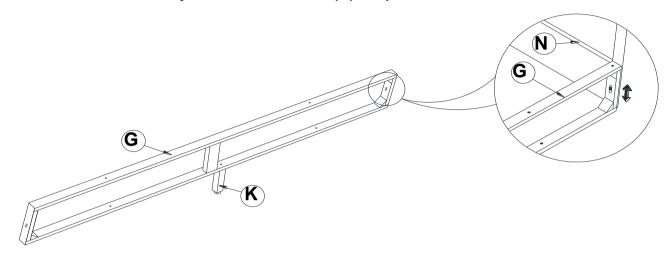

REMARK: 2) To align the drawer left or right.

Action: Adjust the drawer glide with rail (E) to left or right.

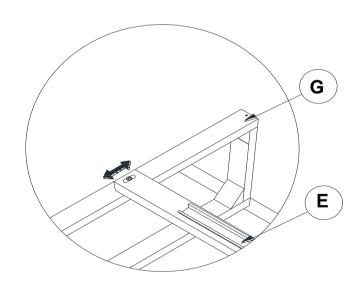

REMARK: AFTER COMPLETED THE DRAWER ALIGNMENT:


- 1) Adjust the leveler of drawer frame support (K) to touch the floor.
- 2) Fully tighten all the bolt from step 8, 9 &10.





Inner Size: 76.75"W X 81.00"D

Inner Size of Drawer: 23.25"W X 12.75"D X 4.25"H X 0.25"T

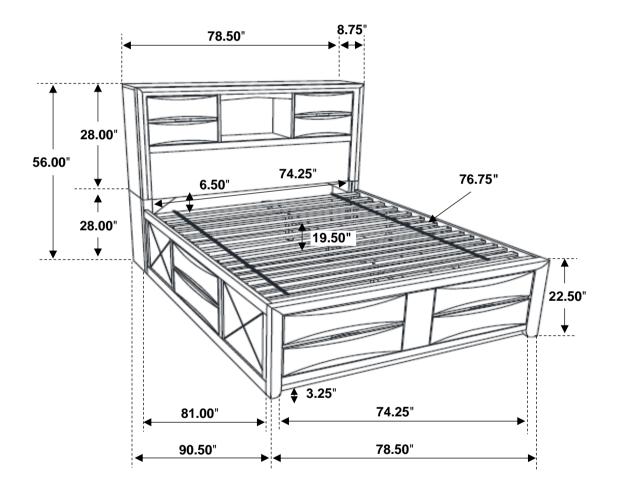

Note: Dimension tolerance ±5%