


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

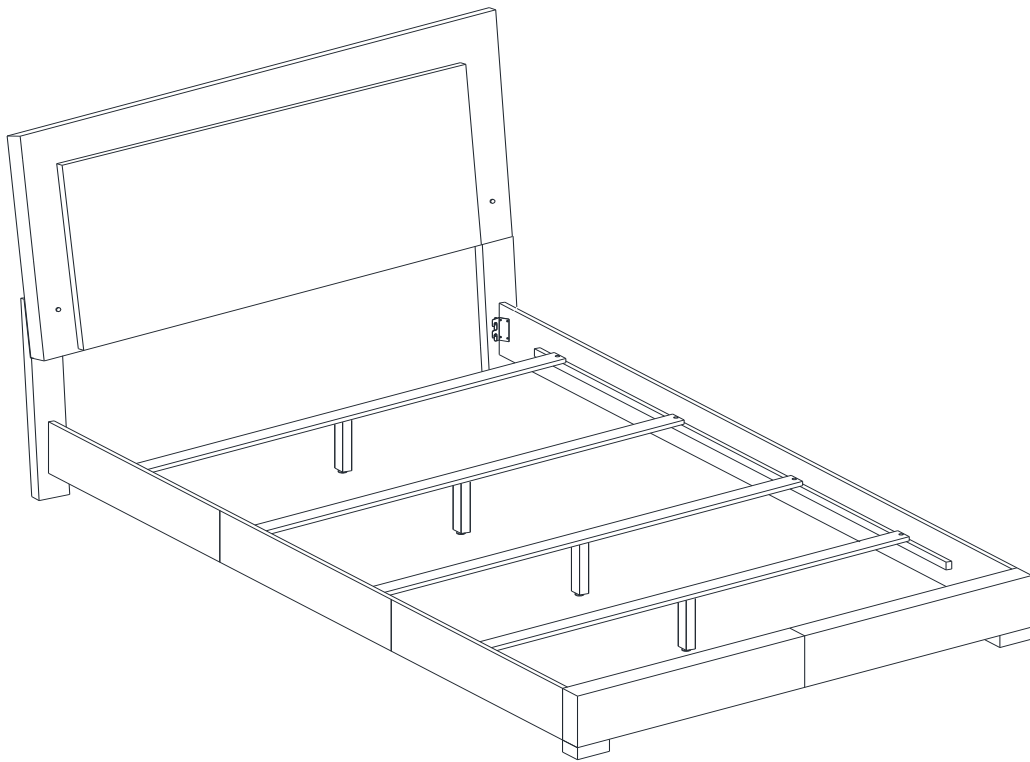

*Fine Furniture for every stage of life*

## 203500Q (B1&B2) *Queen Bed*

# ITEM: 203500Q (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 ( BOX 1)

A HEADBOARD PANEL



1PC

B RIGHT HEADBOARD  
LEG



1PC

C LEFT HEADBOARD  
LEG



1PC

### B2 ( BOX 2)

D BED SLAT




4PCS

E BED SLAT SUPPORT  
WITH LEVELER



4PCS

F BED RAIL




2PCS

G FOOTBOARD LEG



2PCS

H FOOTBOARD PANEL




1PC

I ADAPTER PLUG



1PC

HB  
203500Q (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

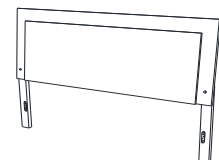

1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 203500Q (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 203500Q (B1)

1	<b>BOLT</b> (M6 x 30mm - BLK)		6PCS	3	<b>FLAT WASHER</b> (1/4" X 13mm - BLK)		6PCS
2	<b>ALLEN WRENCH</b> (M4 x 60mm - BLK)		1PC	4	<b>LOCK WASHER</b> (1/4" - BLK)		6PCS

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203500Q (B2)

5	<b>SHORT FLAT HEAD SCREW</b> (M4 x 32mm - RBW)		8PCS	8	<b>SMALL ALLEN WRENCH</b> (M4 x 60MM - BLK)		1PC
6	<b>LONG FLAT HEAD SCREW</b> (M4 x 50mm - RBW)		6PCS	9	<b>BIG ALLEN WRENCH</b> (M5 x 65MM - BLK)		1PC
7	<b>BOLT</b> (M6 x 40mm - BLK)		4PCS				

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 203500Q (B1&B2)




## ASSEMBLY INSTRUCTIONS

### STEP 1

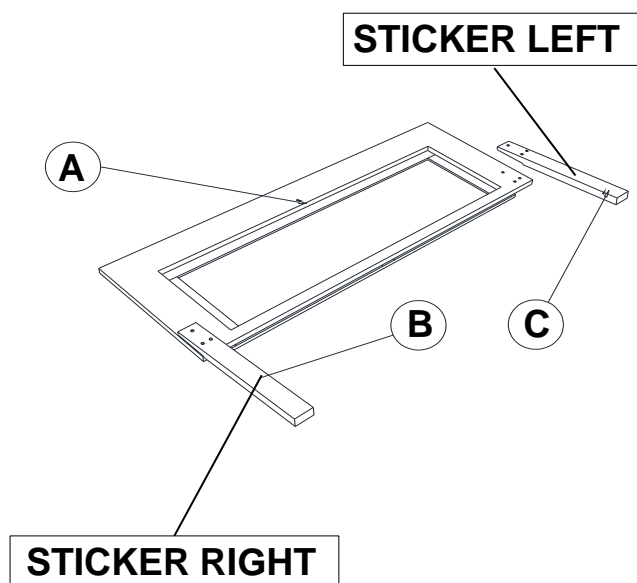


### STEP 2

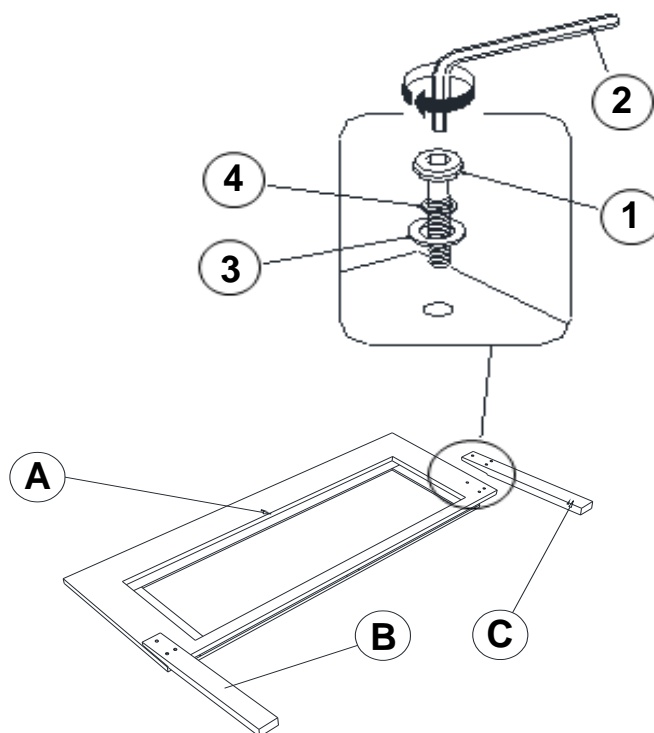

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

### STEP 3

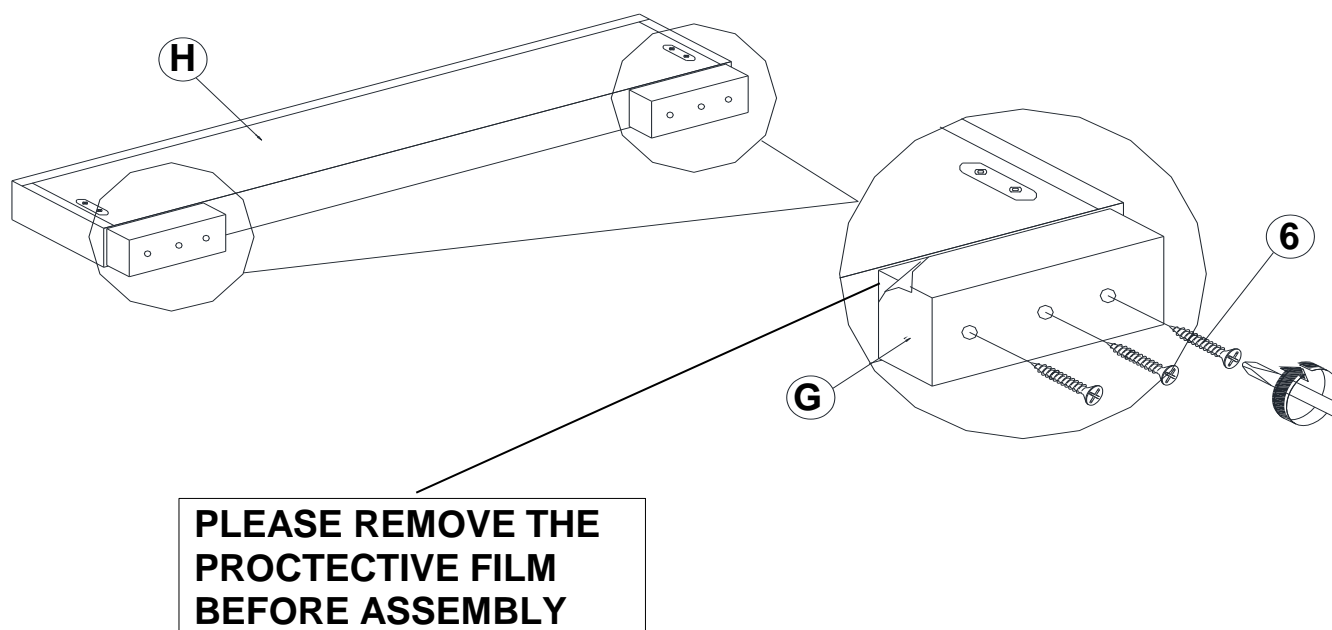


# ITEM: 203500Q (B1&B2)




## ASSEMBLY INSTRUCTIONS


### STEP 4

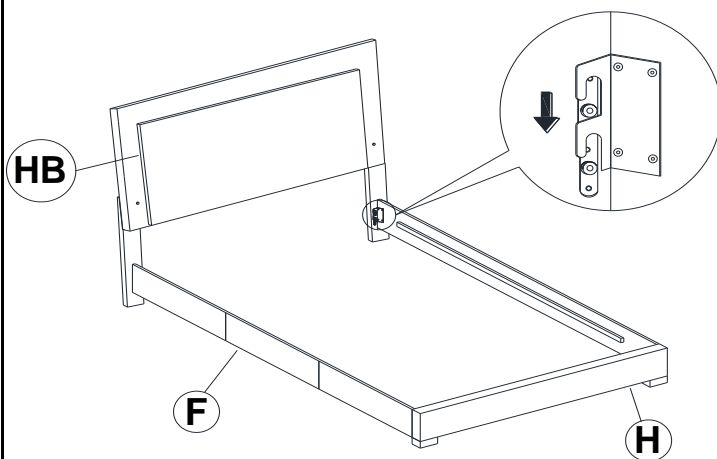



### STEP 5

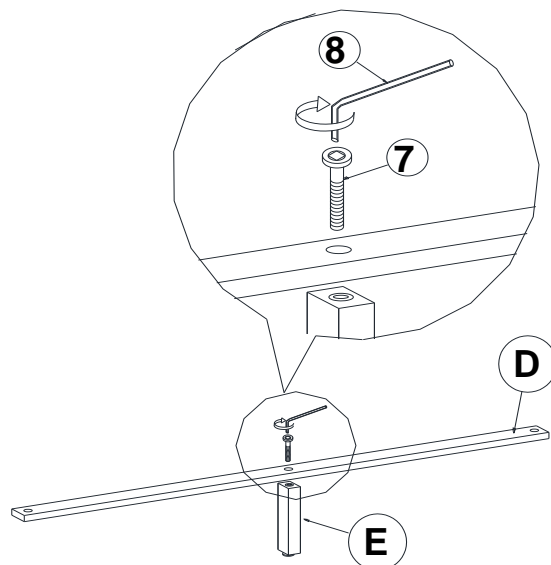

### STEP 6

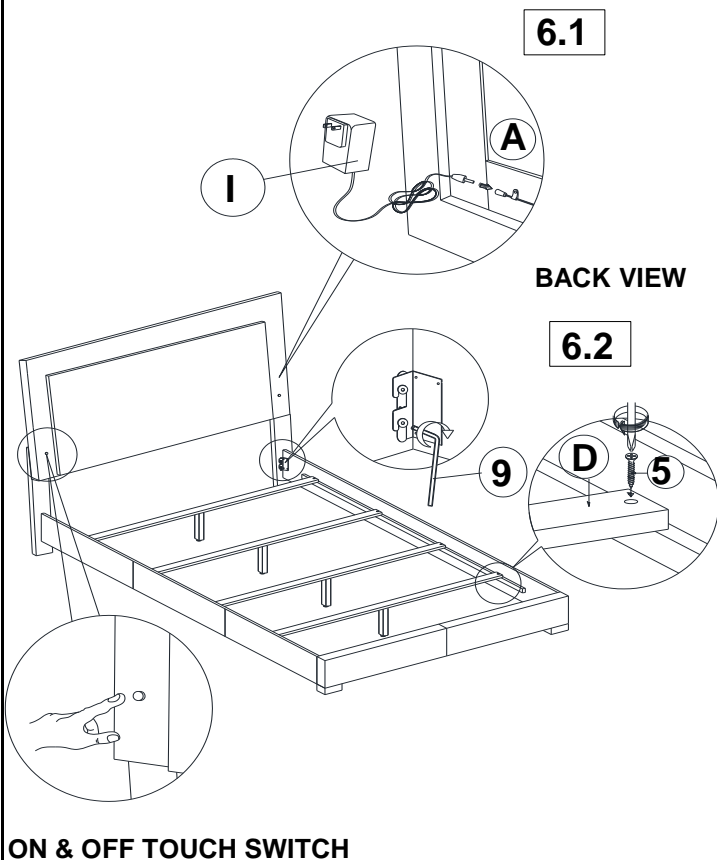

### STEP 7 COMPLETE

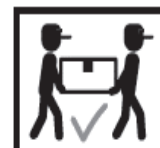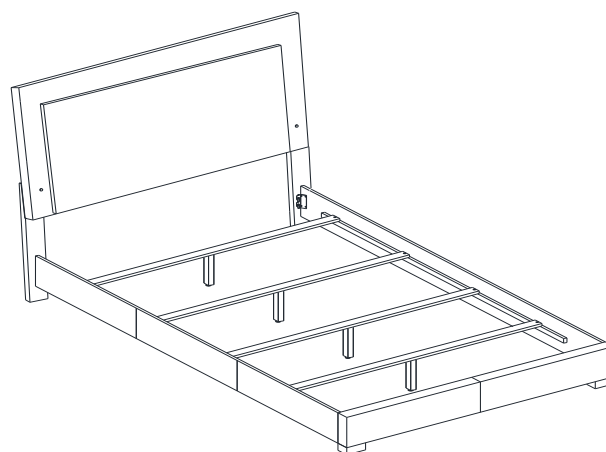


ON & OFF TOUCH SWITCH

ITEM: **203500Q (B1&B2)**



Inner Size : 61.00W" X 81.00"D

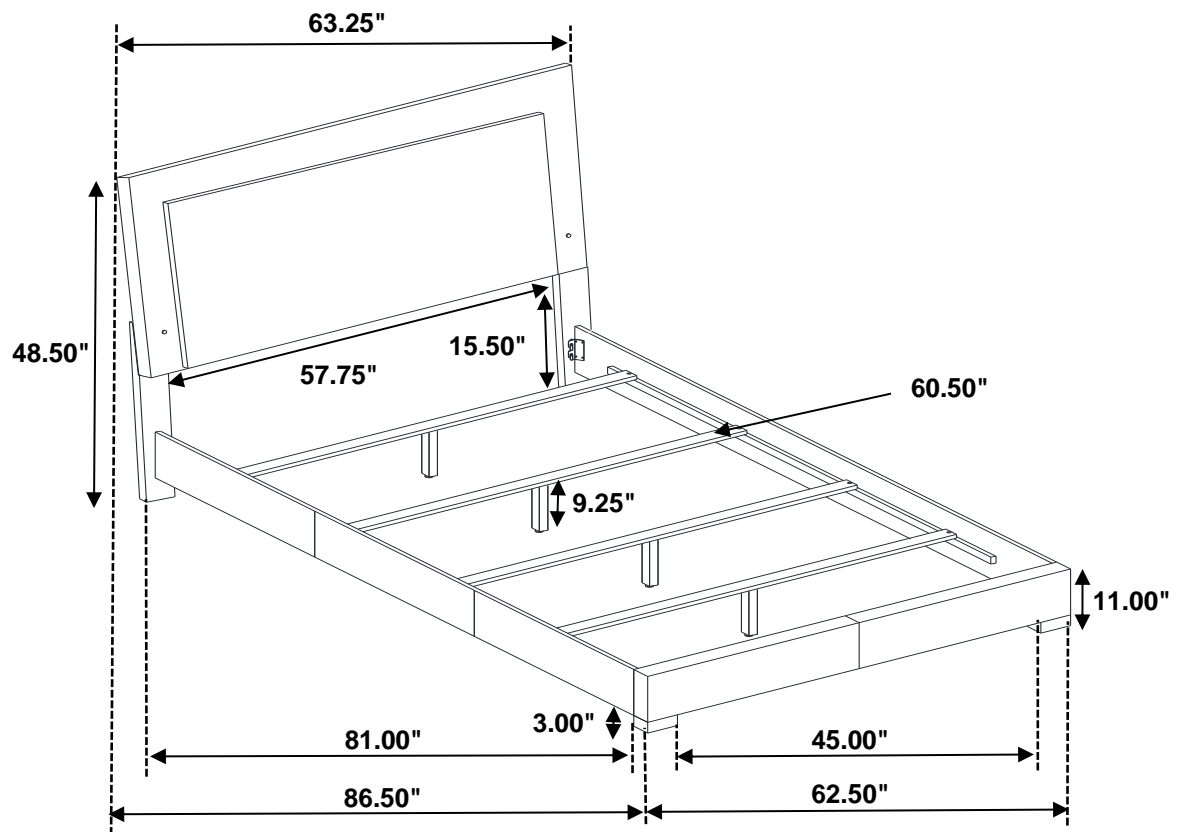

Note : Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*


**203502**  
***Nightstand***

ITEM: **203502**

## ASSEMBLY INSTRUCTIONS




### REMOVAL OF PROTECTIVE FILM

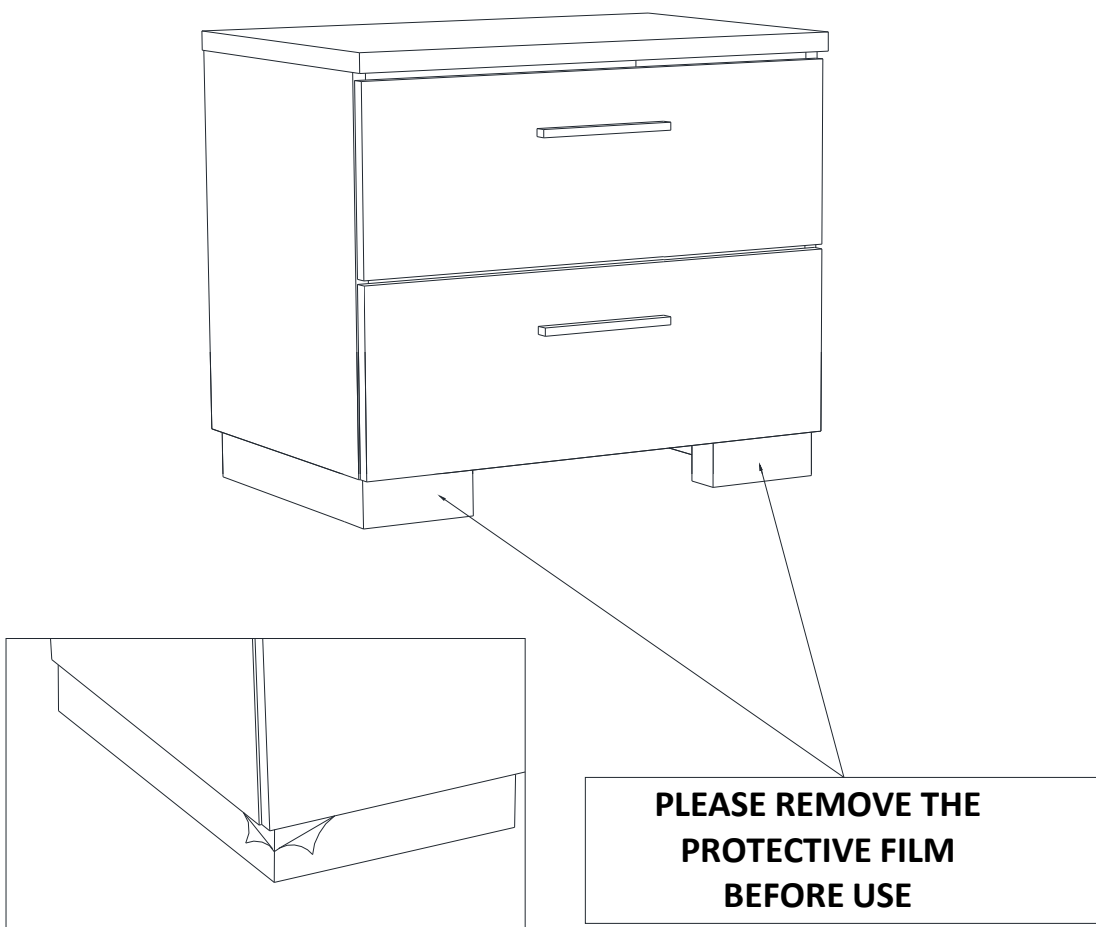

ITEM: **203502**



**Inner Size of Drawer : 20.00"W x 12.50"D x 5.00"H x 0.25"T**

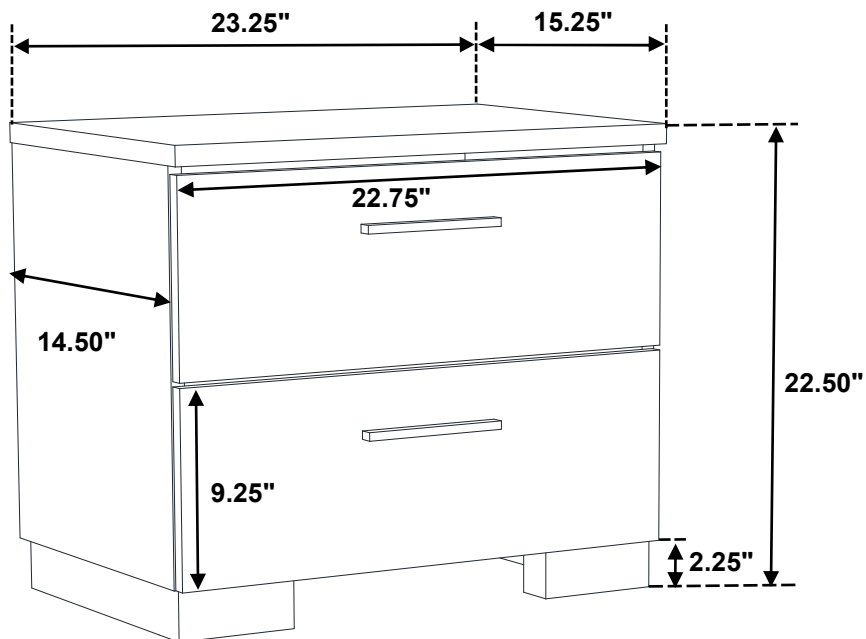

**Note : Dimension tolerance  $\pm 5\%$**



## *ASSEMBLY INSTRUCTIONS*

### *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**203503**  
***Dresser***

REVISION 0 : 05/16/2014  
REVISION 1 : 05/27/2014  
REVISION 2 : 07/26/2019

**PAGE 1 OF 2**


COASTERFURNITURE.COM

ITEM: **203503**

## ASSEMBLY INSTRUCTIONS



### REMOVAL OF PROTECTIVE FILM

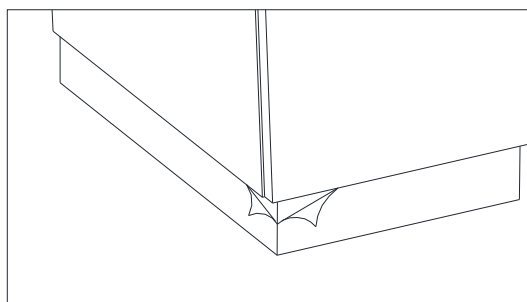


**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



ITEM: **203503**



**Inner Size of Drawer : 28.75"W x 12.50"D x 5.00"H x 0.25"T**

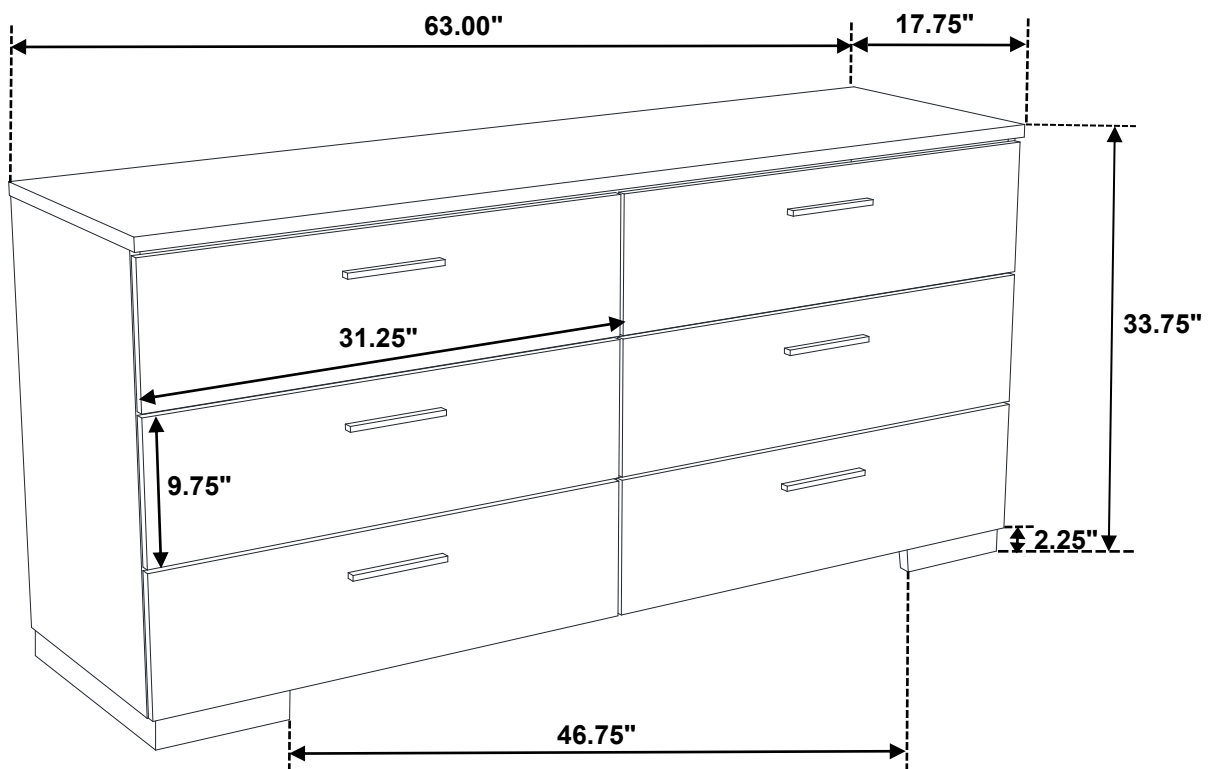

**Note : Dimension tolerance  $\pm$  5%**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**203504**  
***Mirror***

REVISION 0 : 05/16/2014  
REVISION 1 : 02/09/2017  
REVISION 2 : 07/25/2019

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: **203504**



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

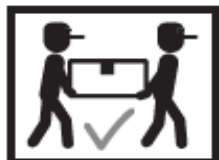

ASSEMBLY TIME


5 MINUTES

## PARTS IDENTIFICATION

A

MIRROR

1PC

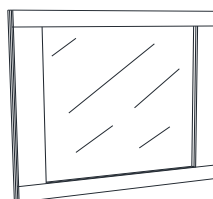

B

DRESSER  
FROM BOX ITEM # 203503


1PC



C

MIRROR SUPPORT  
(PACK WITH DRESSER)

2PCS



## HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW  
(M4 x 32mm - RBW)

10PCS



### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **203504**




## ASSEMBLY INSTRUCTIONS

### STEP 1

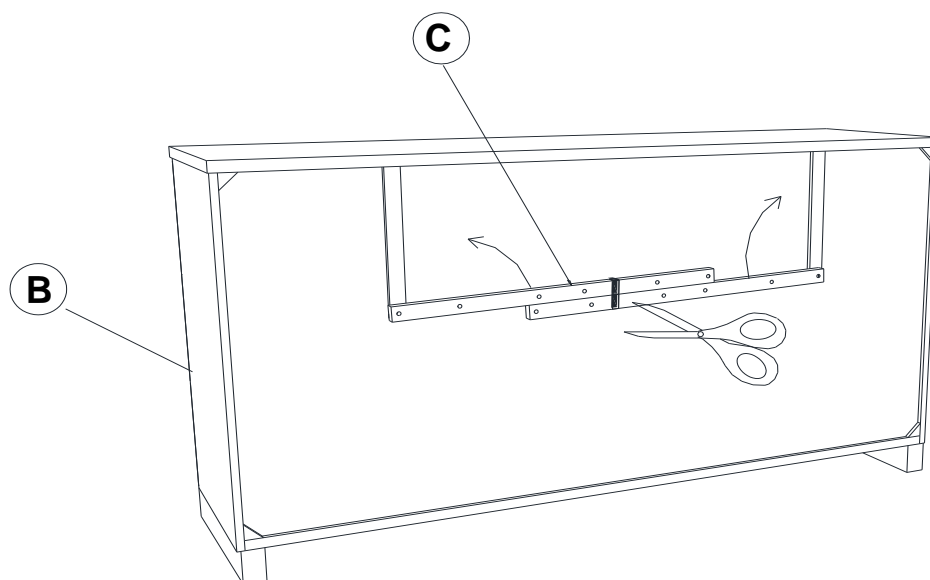

### STEP 2

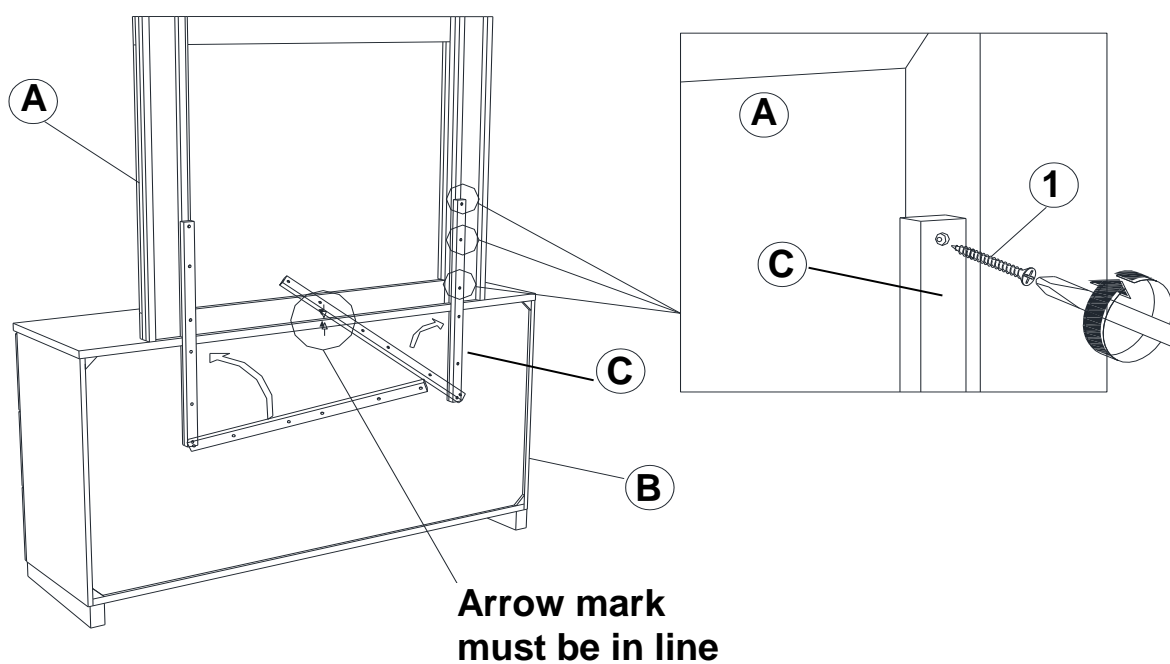


**\*\*BACK VIEW**

ITEM: **203504**



## ASSEMBLY INSTRUCTIONS

### STEP 3

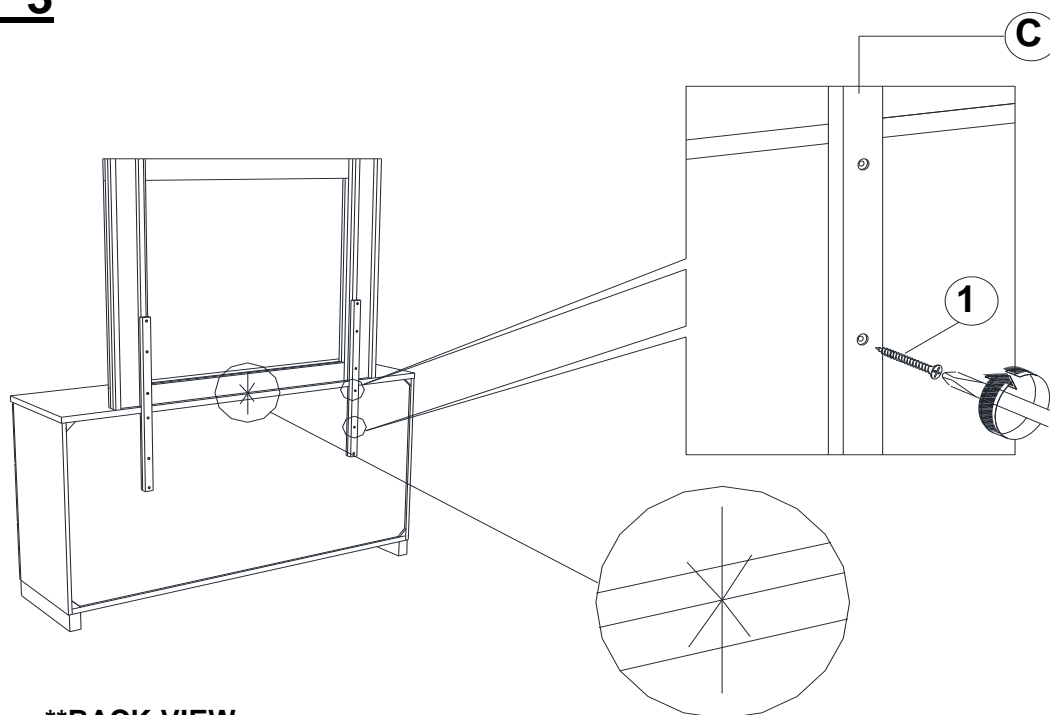


**\*\*BACK VIEW**


**Arrow Marking Must Be Aligned**

### STEP 4


### **COMPLETE**

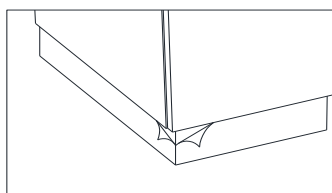

**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**

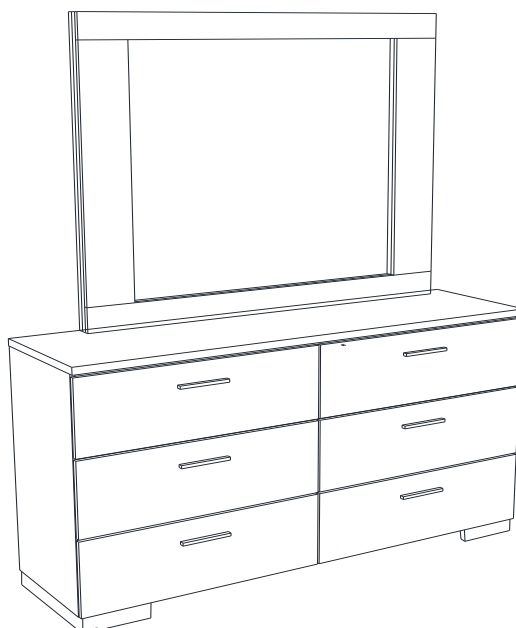

ITEM: **203504**

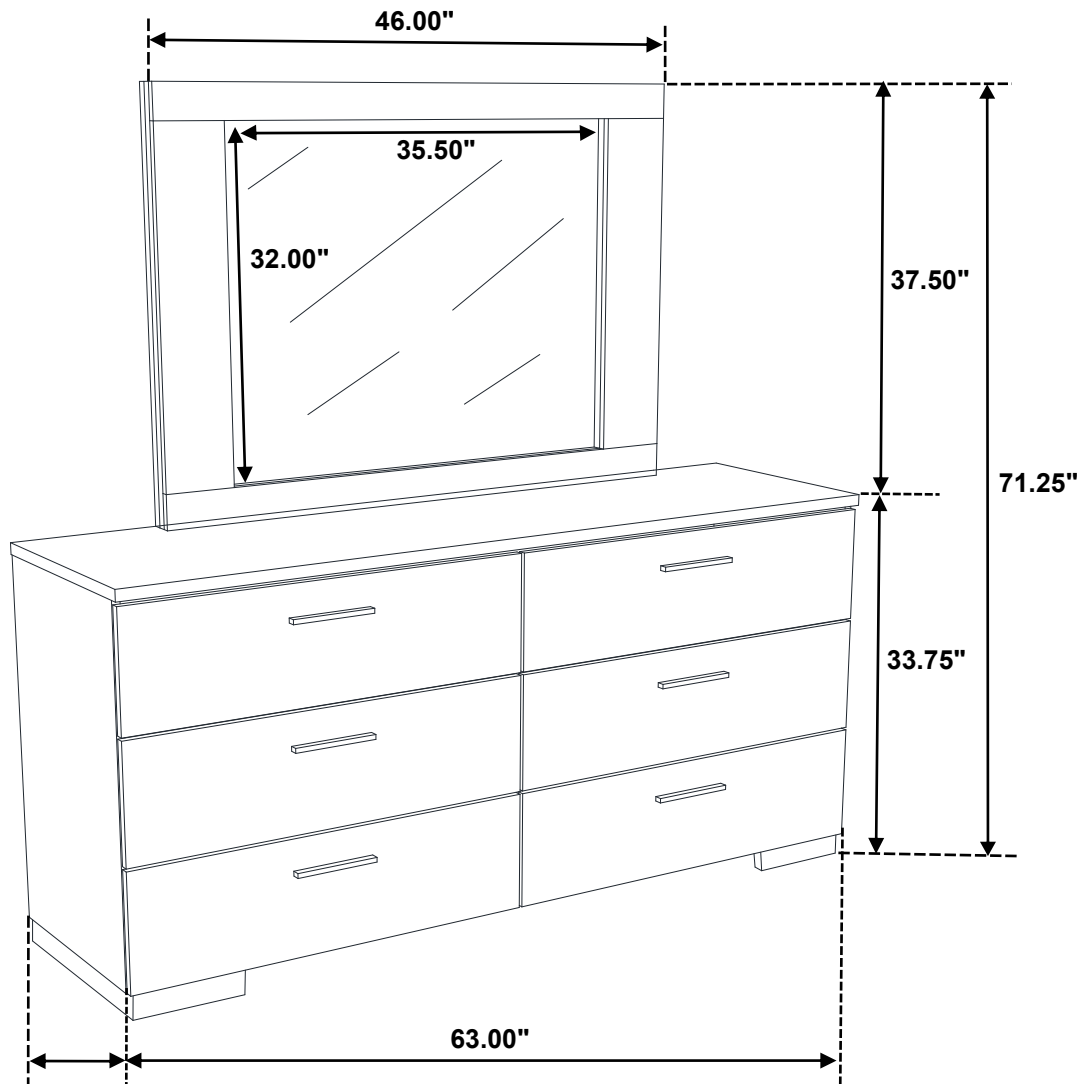

**Note : Dimension tolerance  $\pm 5\%$**

# *ASSEMBLY INSTRUCTIONS* *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*


**203505**  
***Chest***

ITEM: **203505**

## ASSEMBLY INSTRUCTIONS



### REMOVAL OF PROTECTIVE FILM

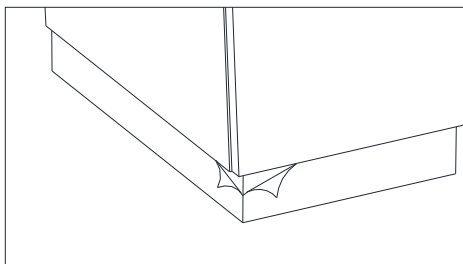


**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



ITEM:203505



Inner Size of Drawer : 32.00"W x 12.50"D x 5.00"H x 0.25"T

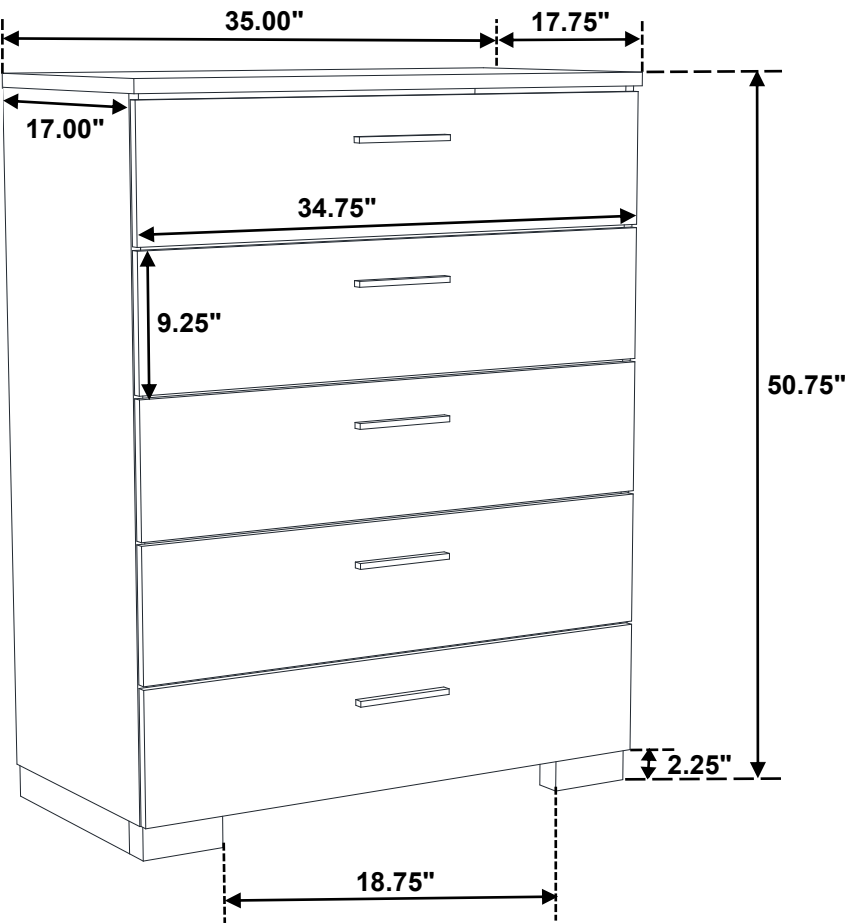

Note : Dimension tolerance  $\pm 5\%$