




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

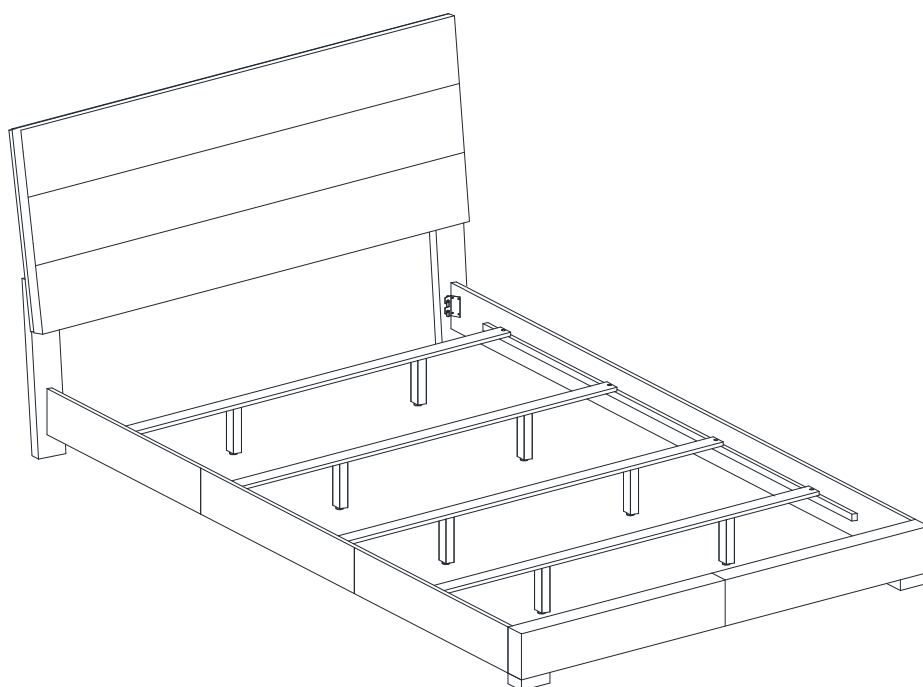

Fine Furniture for every stage of life

203501KE (B1&B2) Eastern King Bed

REVISION 0 : 05/16/2014
REVISION 1 : 05/27/2014
REVISION 2 : 07/25/2019

ITEM: 203501KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL



1PC

B RIGHT HEADBOARD LEG



1PC

C LEFT HEADBOARD LEG



1PC

B2 (BOX 2)

D BED SLAT




4PCS

E BED SLAT SUPPORT WITH LEVELER



8PCS

F BED RAIL




2PCS

G FOOTBOARD LEG



2PCS


H FOOTBOARD PANEL



1PC

HB

203501KE (B1)
FROM BOX 1
HEADBOARD
COMPLETE

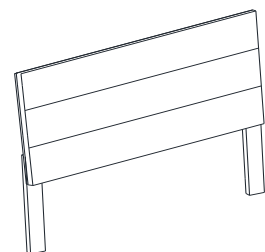

1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203501KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 203501KE (B1)

1	BOLT (M6 x 30mm - BLK)		6PCS	3	FLAT WASHER (1/4" X 13mm - BLK)		6PCS
2	SMALL ALLEN WRENCH (M4 x 60MM - BLK)		1PC	4	LOCK WASHER (1/4" - BLK)		6PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203501KE (B2)

5	SHORT FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS	8	SMALL ALLEN WRENCH (M4 x 60MM - BLK)		1PC
6	LONG FLAT HEAD SCREW (M4 x 50mm - RBW)		6PCS	9	BIG ALLEN WRENCH (M5 x 65MM - BLK)		1PC
7	BOLT (M4 x 40mm - BLK)		8PCS				

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **203501KE (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 1

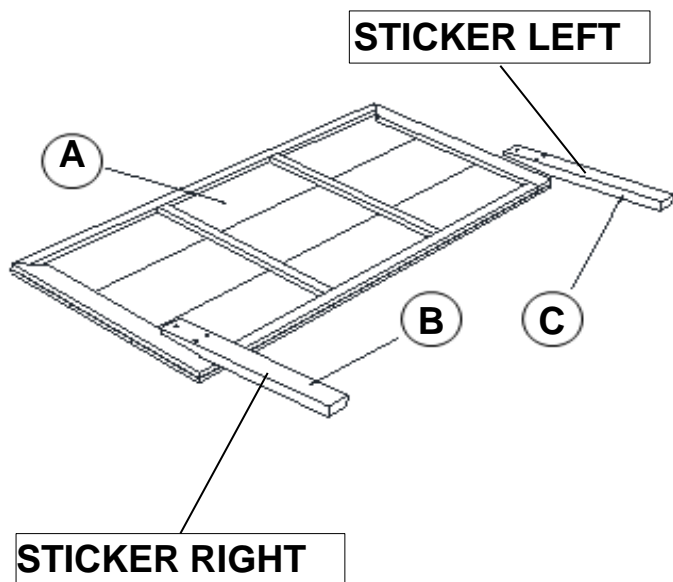


STEP 2

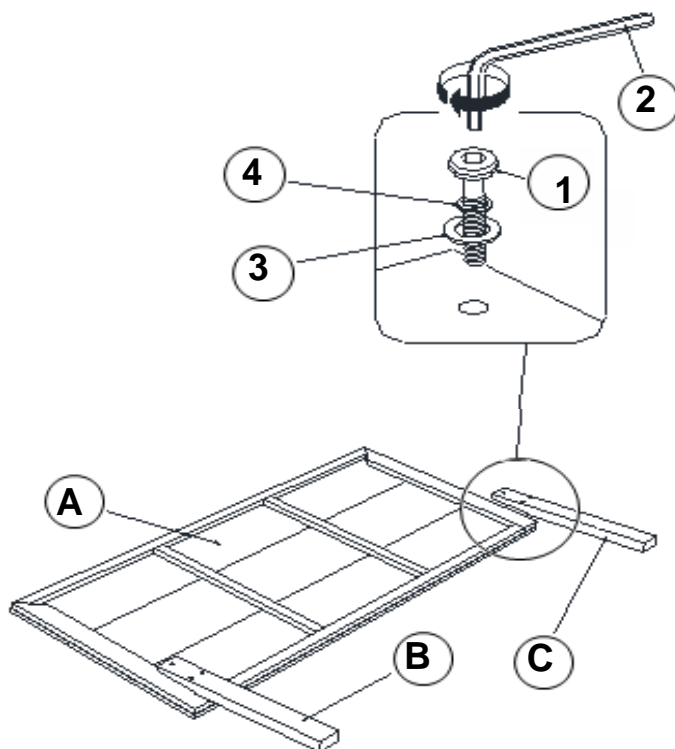

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

STEP 3

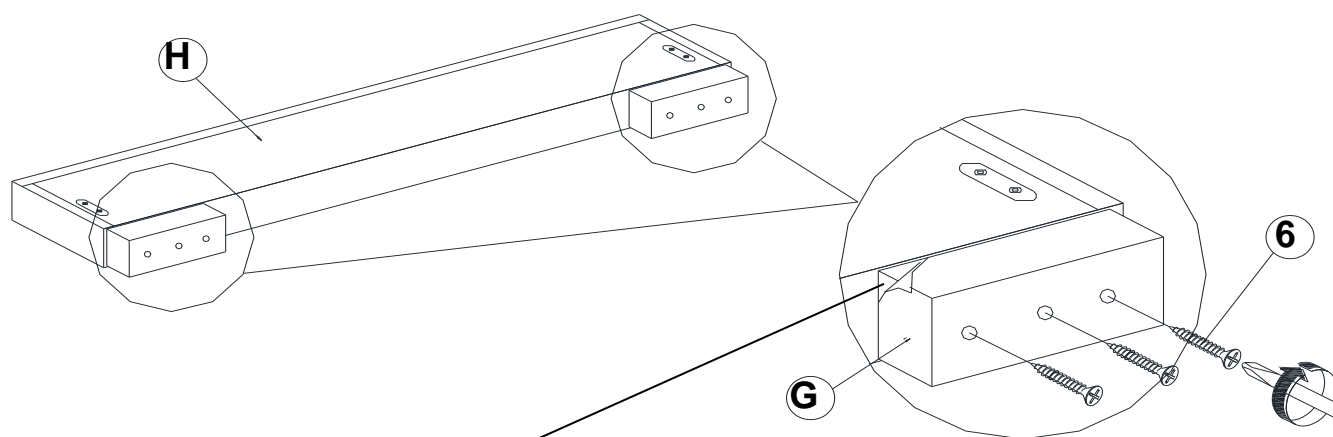


PLEASE REMOVE THE
PROTECTIVE FILM
BEFORE ASSEMBLY

ITEM: 203501KE (B1&B2)




ASSEMBLY INSTRUCTIONS


STEP 4

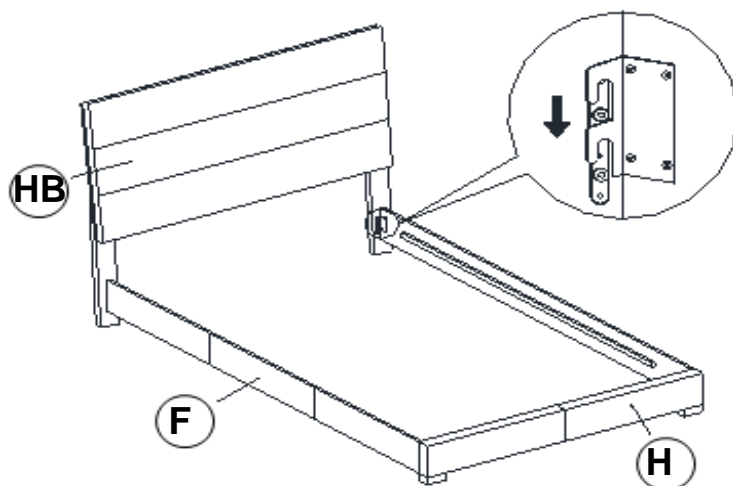



STEP 5

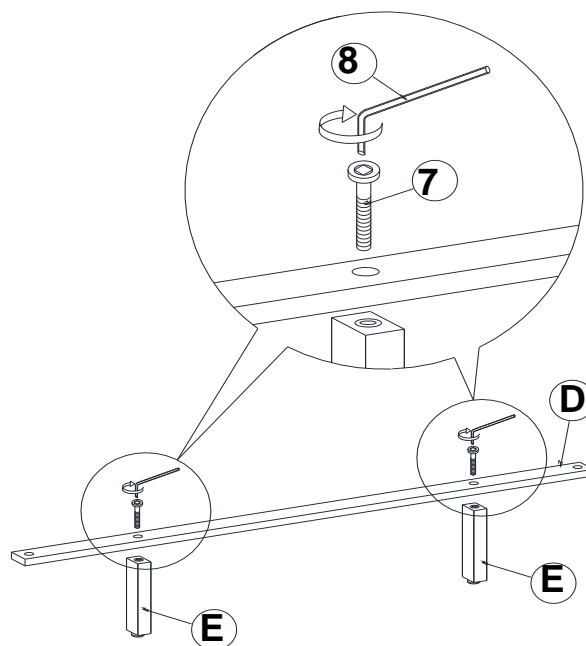

STEP 6

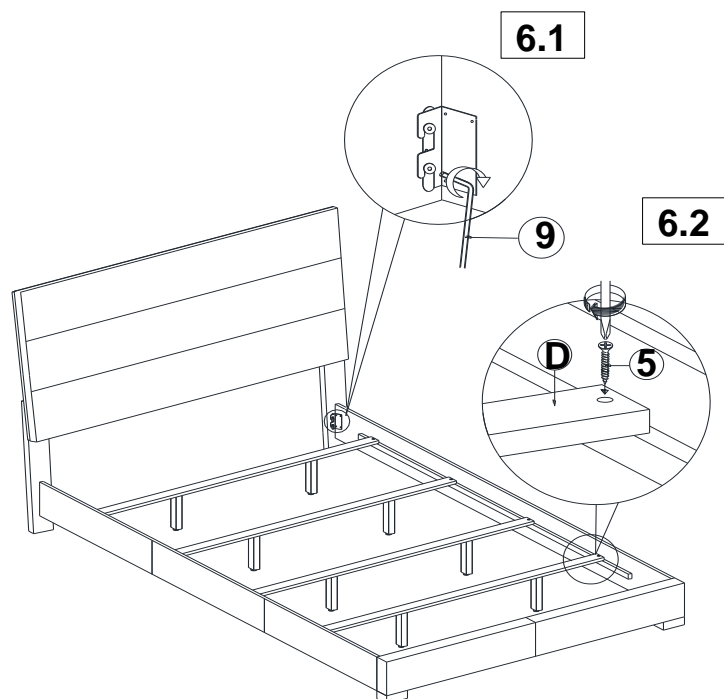


STEP 7 **COMPLETE**

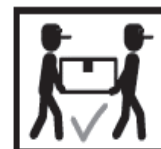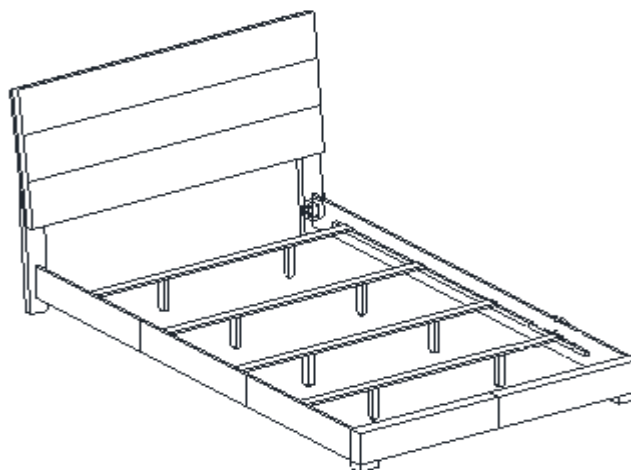

ITEM: **203501KE (B1&B2)**



Inner Size : 76.75"W X 80.25"D

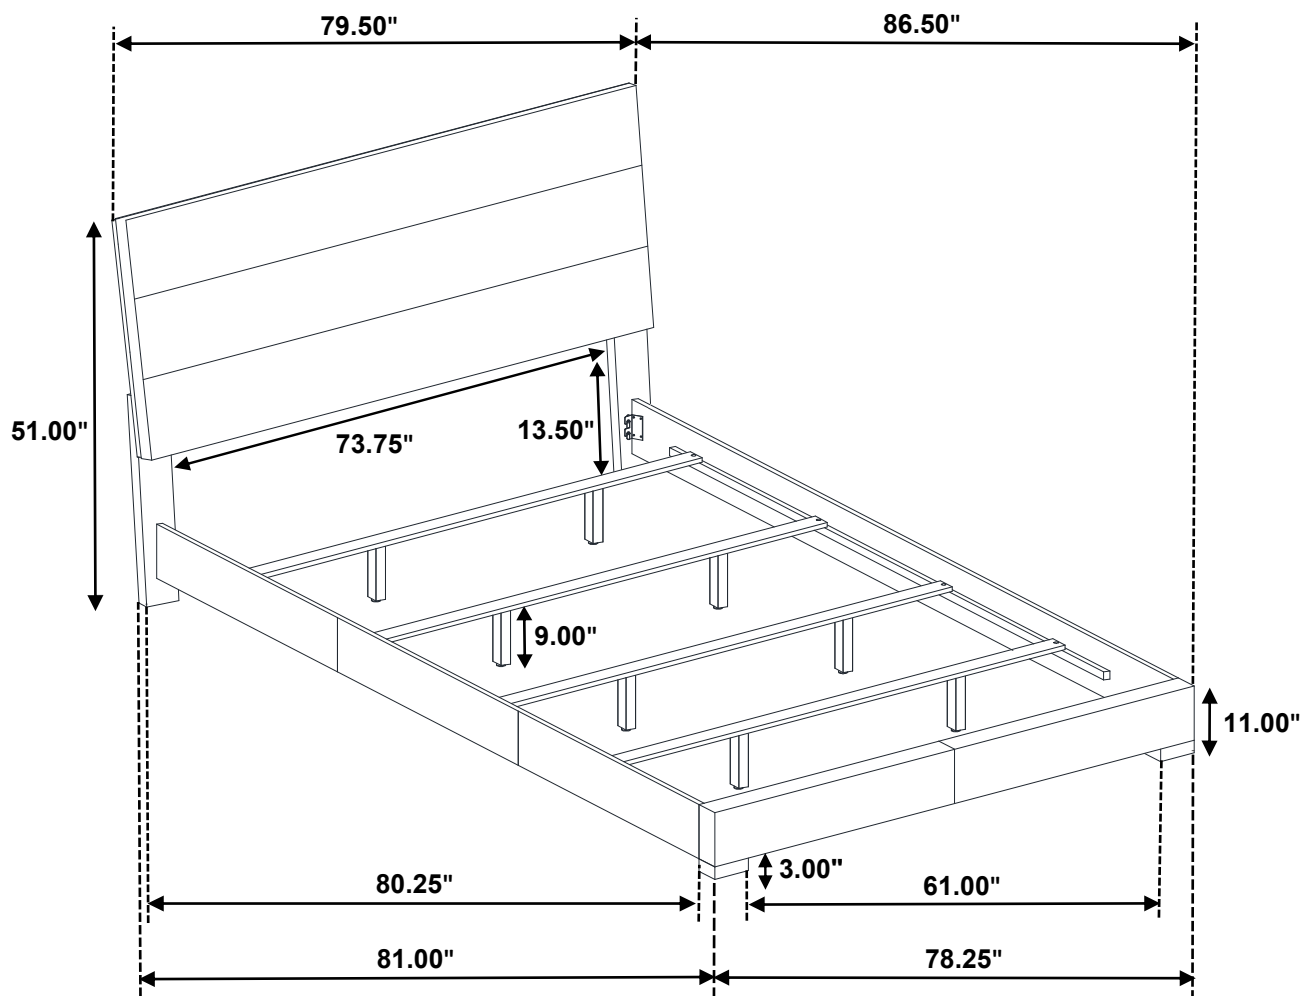

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

203502
Nightstand

ITEM: **203502**

ASSEMBLY INSTRUCTIONS




REMOVAL OF PROTECTIVE FILM



ITEM: **203502**



Inner Size of Drawer : 20.00"W x 12.50"D x 5.00"H x 0.25"T

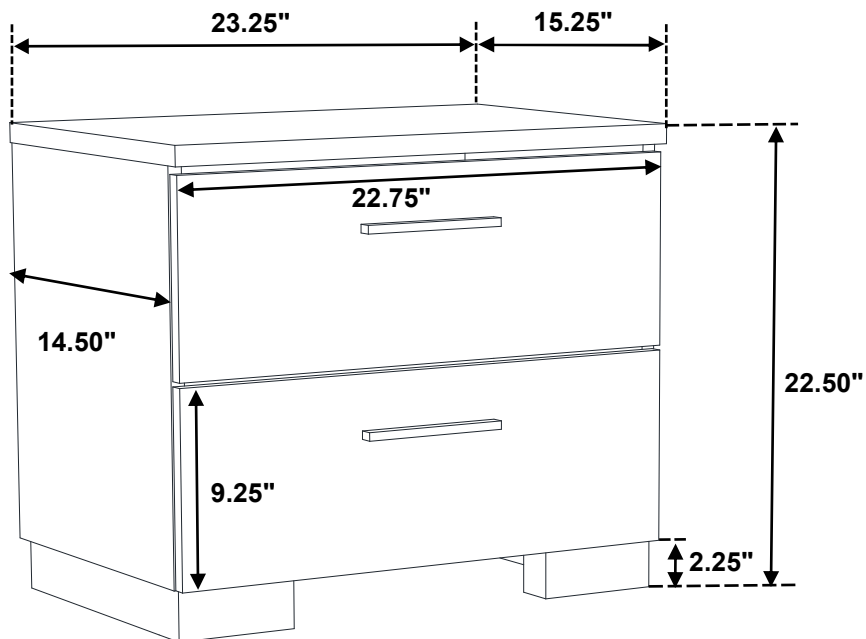

Note : Dimension tolerance \pm 5%



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

203503
Dresser

REVISION 0 : 05/16/2014
REVISION 1 : 05/27/2014
REVISION 2 : 07/26/2019

PAGE 1 OF 2


COASTERFURNITURE.COM

ITEM: **203503**

ASSEMBLY INSTRUCTIONS



REMOVAL OF PROTECTIVE FILM

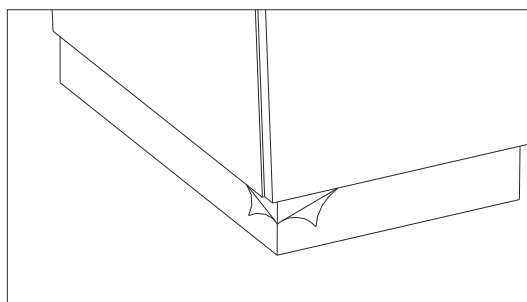


**PLEASE REMOVE THE
PROTECTIVE FILM
BEFORE USE**



ITEM: **203503**



Inner Size of Drawer : 28.75"W x 12.50"D x 5.00"H x 0.25"T

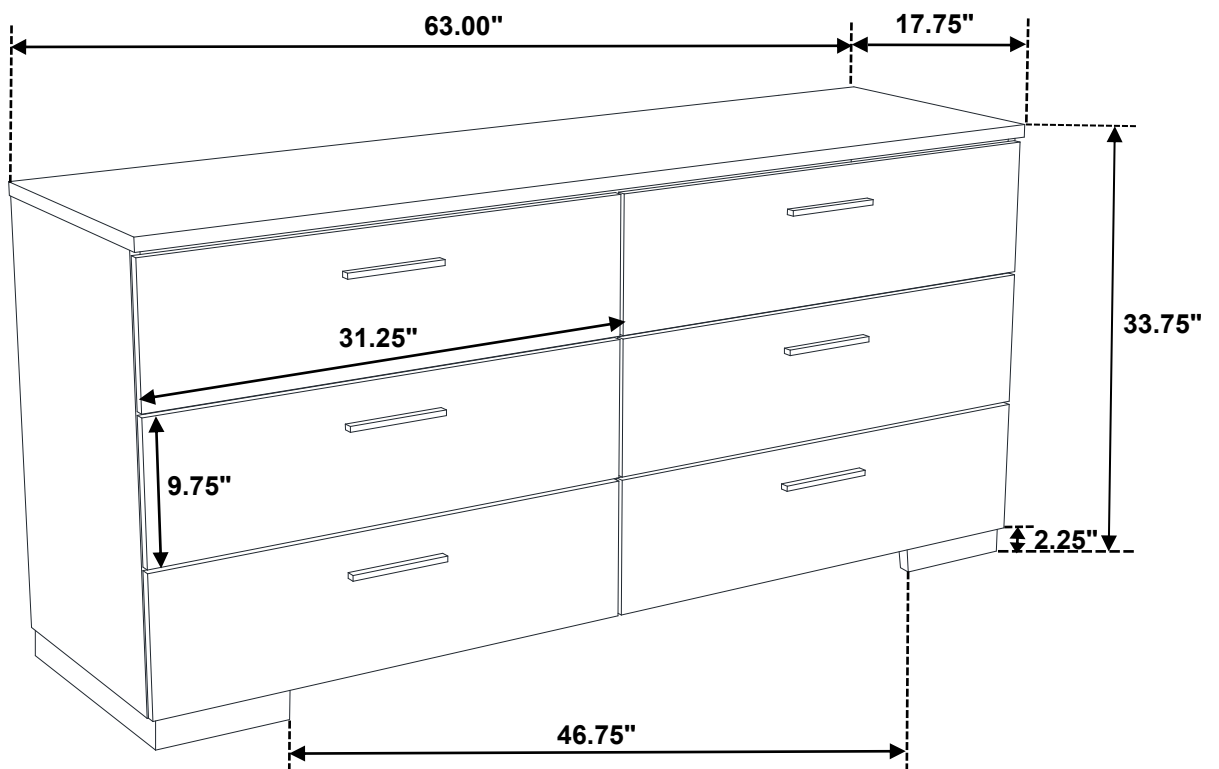

Note : Dimension tolerance \pm 5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

203504
Mirror

REVISION 0 : 05/16/2014
REVISION 1 : 02/09/2017
REVISION 2 : 07/25/2019

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM:203504



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME


5 MINUTES

PARTS IDENTIFICATION

A

MIRROR

1PC

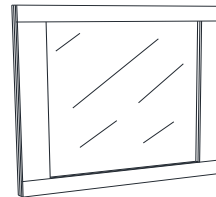

B

DRESSER
FROM BOX ITEM # 203503


1PC



C

MIRROR SUPPORT
(PACK WITH DRESSER)

2PCS



HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW
(M4 x 32mm - RBW)

10PCS



NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **203504**




ASSEMBLY INSTRUCTIONS

STEP 1

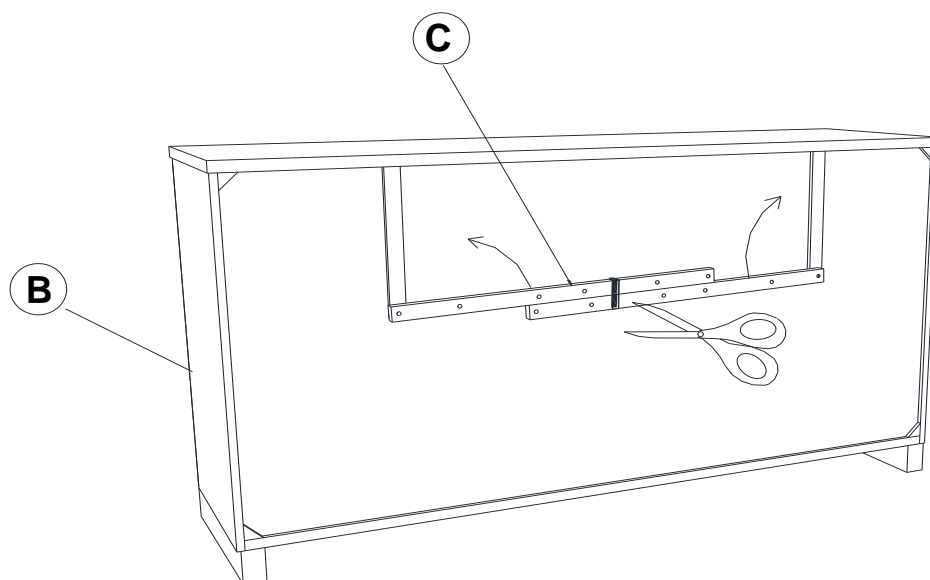

STEP 2

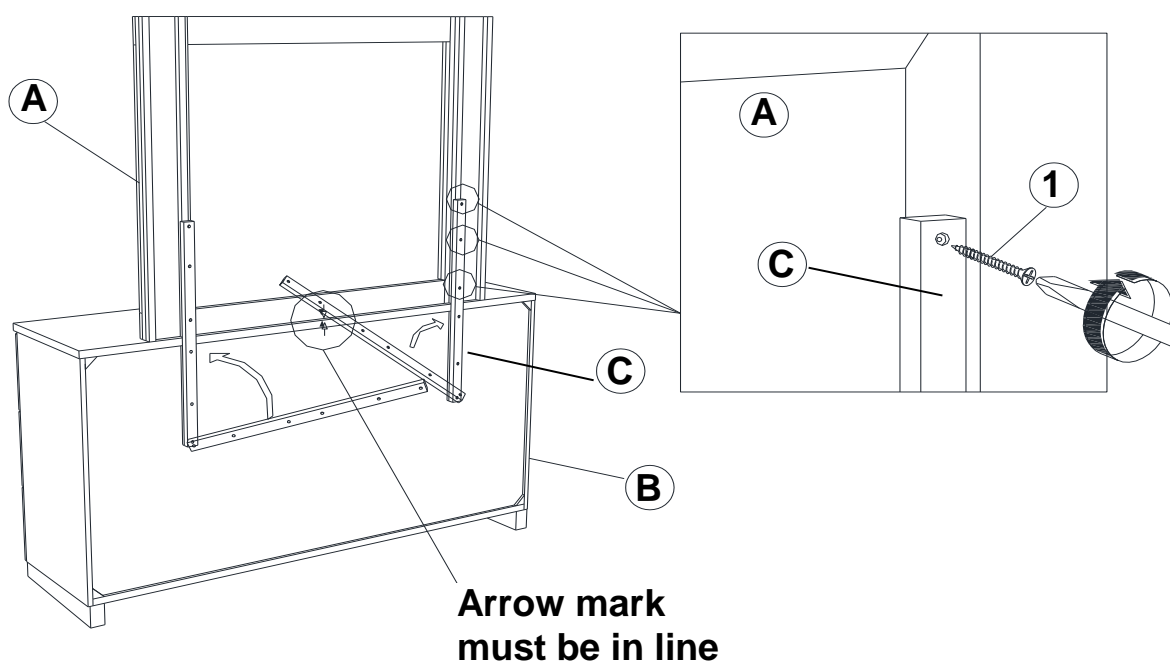


****BACK VIEW**

ITEM: **203504**



ASSEMBLY INSTRUCTIONS

STEP 3

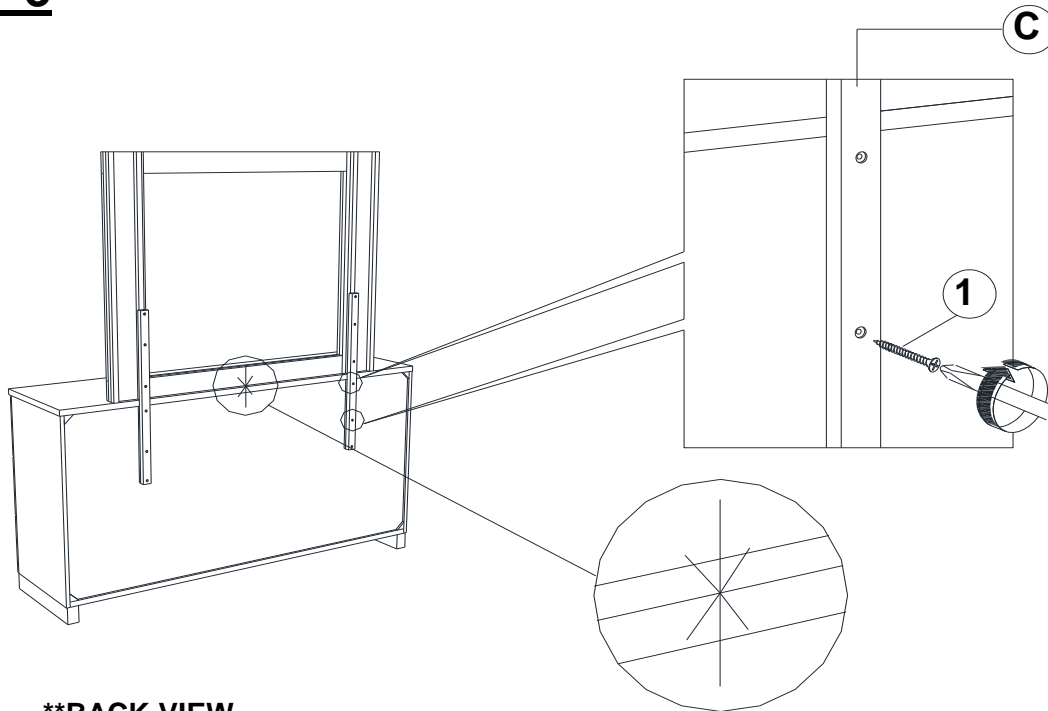


****BACK VIEW**



Arrow Marking Must Be Aligned

STEP 4


COMPLETE

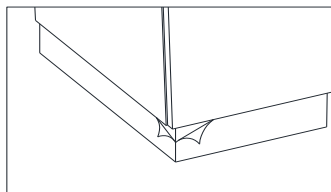

**PLEASE REMOVE THE
PROTECTIVE FILM
BEFORE USE**

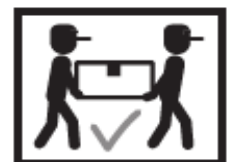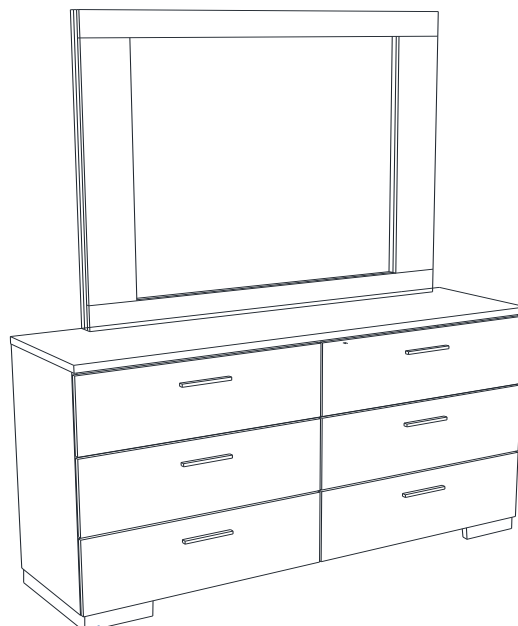

ITEM: **203504**

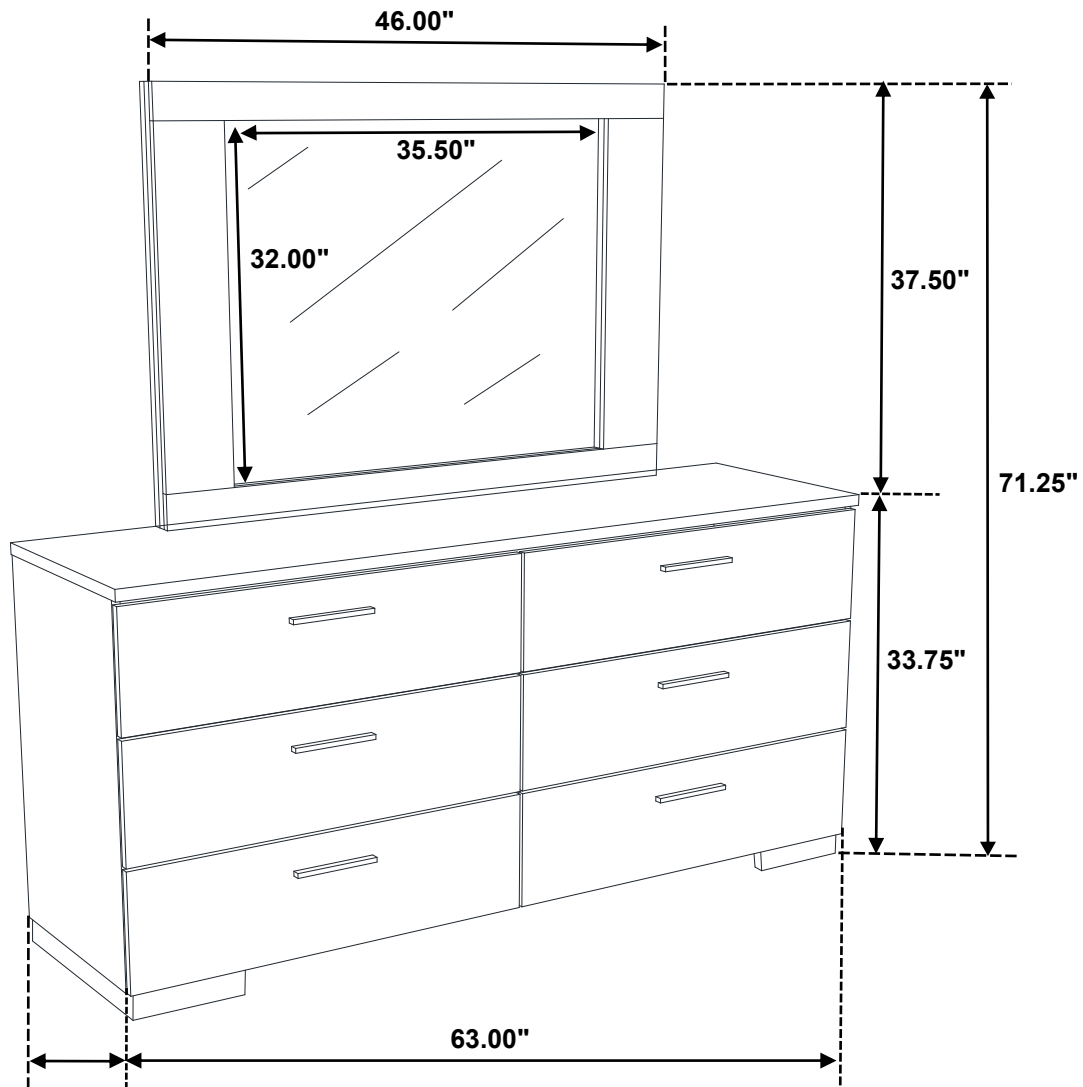

Note : Dimension tolerance $\pm 5\%$