


ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

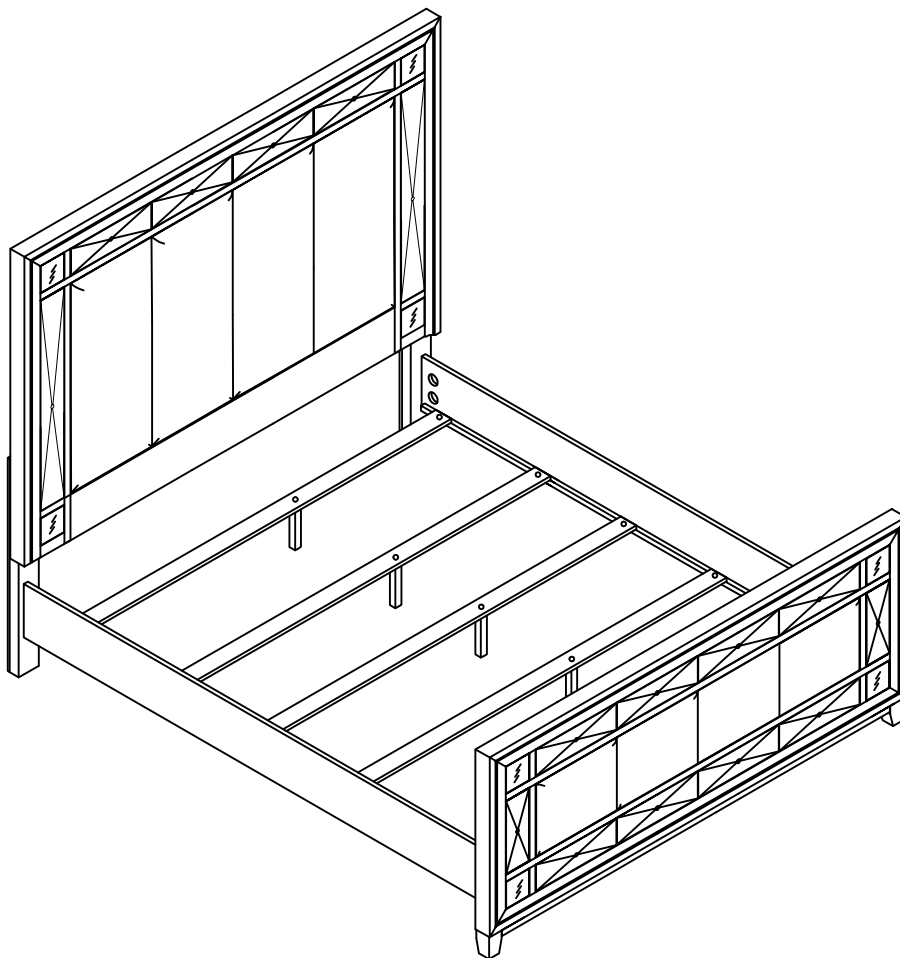

Fine Furniture for every stage of life

204921Q (B1-B3)
Queen Bed

ITEM: 204921Q (B1-B3)

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

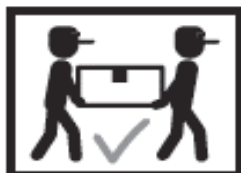


ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

AN HEADBOARD
PANEL

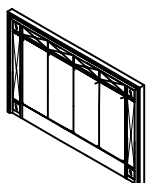

1PC

BN LEFT HEADBOARD
LEG




1PC

CN RIGHT HEADBOARD
LEG



1PC


DN WOOD CLEAT



2PCS

B2 (BOX 2)

EN FOOTBOARD

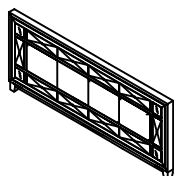

1PC


B3 (BOX 3)

FN BED RAIL




2PCS

GN BED SLAT




4PCS

HN BED SLAT SUPPORT
WITH LEVELER




4PCS

HBN 204921Q (B1)
FROM BOX 1
HEADBOARD
COMPLETE

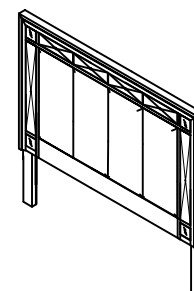

1PC

EN 204921Q (B2)
FROM BOX 2
FOOTBOARD

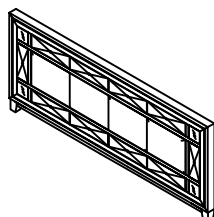

1PC

ITEM: 204921Q (B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 204921Q (B1)

1 BOLT
(5/16" x 38mm - RBW)




16PCS

2 LOCK WASHER
(5/16" - RBW)



16PCS

3 FLAT WASHER
(5/16" - RBW)



16PCS

4 ALLEN WRENCH
(4MM - RBW)



1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 204921Q (B3)

5 THREADED BOLT
(5/16" x 3" - RBW)



8PCS

6 U-SQUARE WASHER
(5/16" - RBW)



8PCS

7 HEX NUT
(5/16" x 14mm - RBW)




8PCS

8 WRENCH
(14MM-RBW)



1PC

9 FLAT HEAD SCREW
(Ø4 x 30mm - RBW)



8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **204921Q (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 1

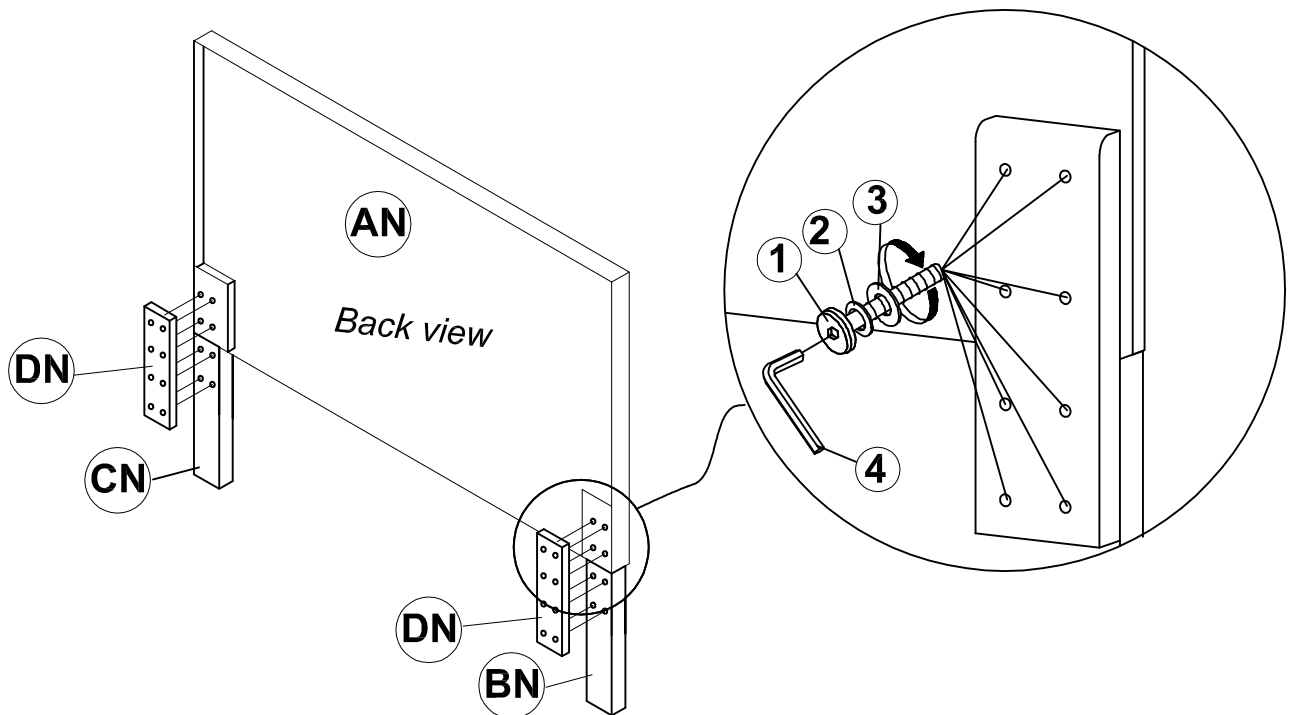


STEP 2

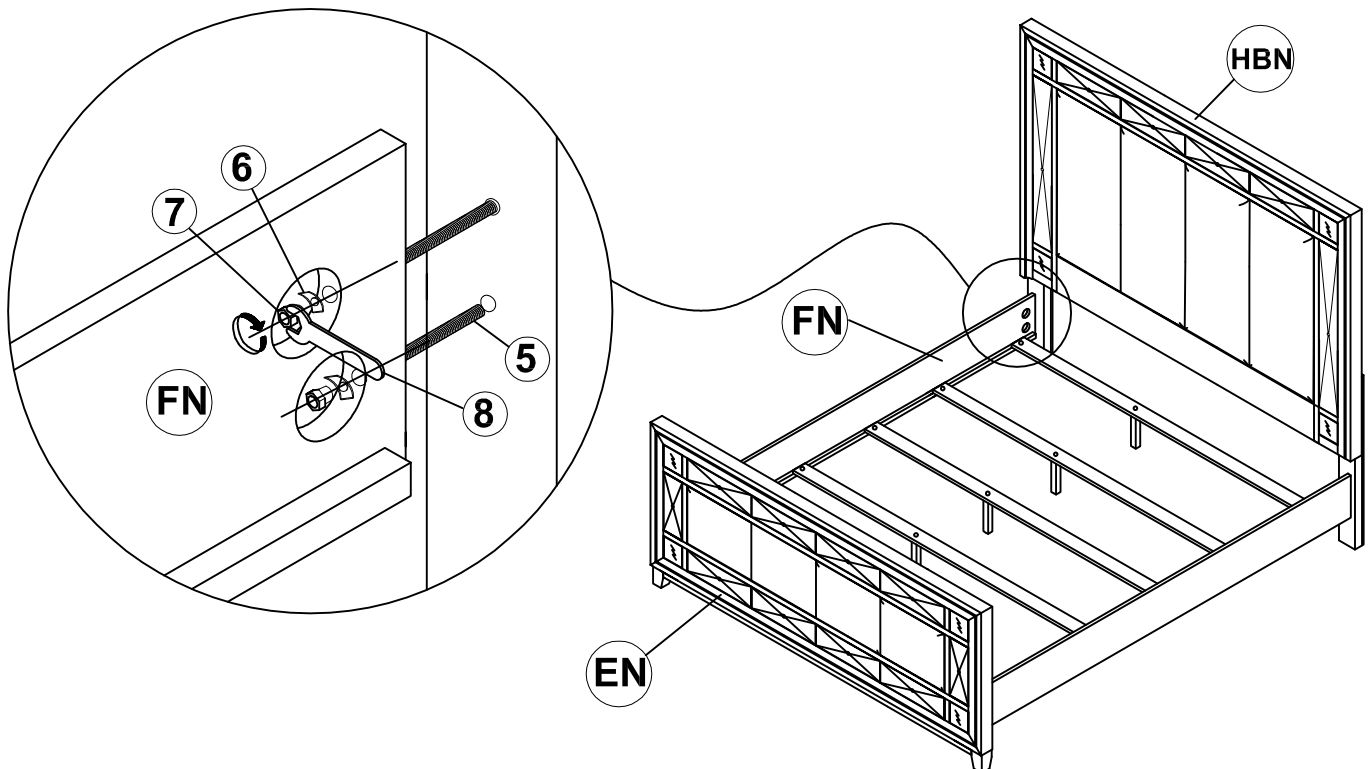


ITEM: **204921Q (B1-B3)**
ASSEMBLY INSTRUCTIONS




STEP 3

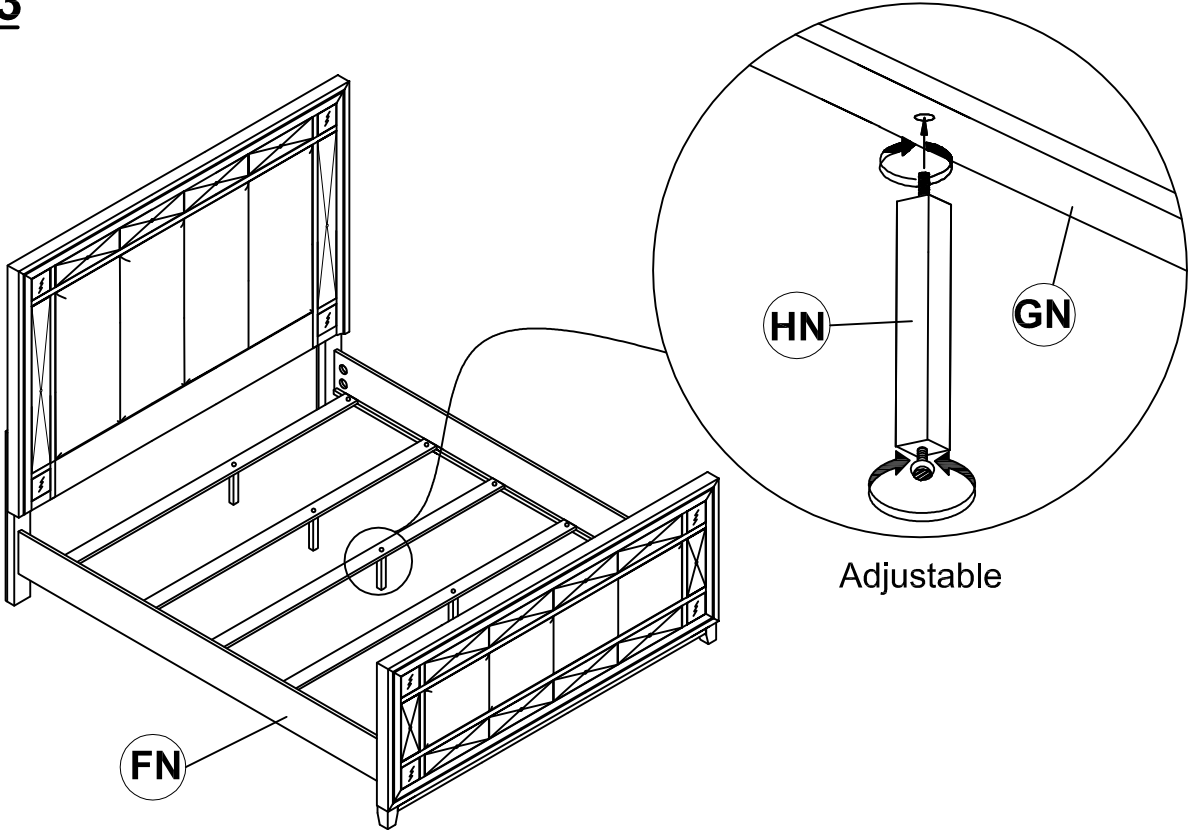

STEP 4

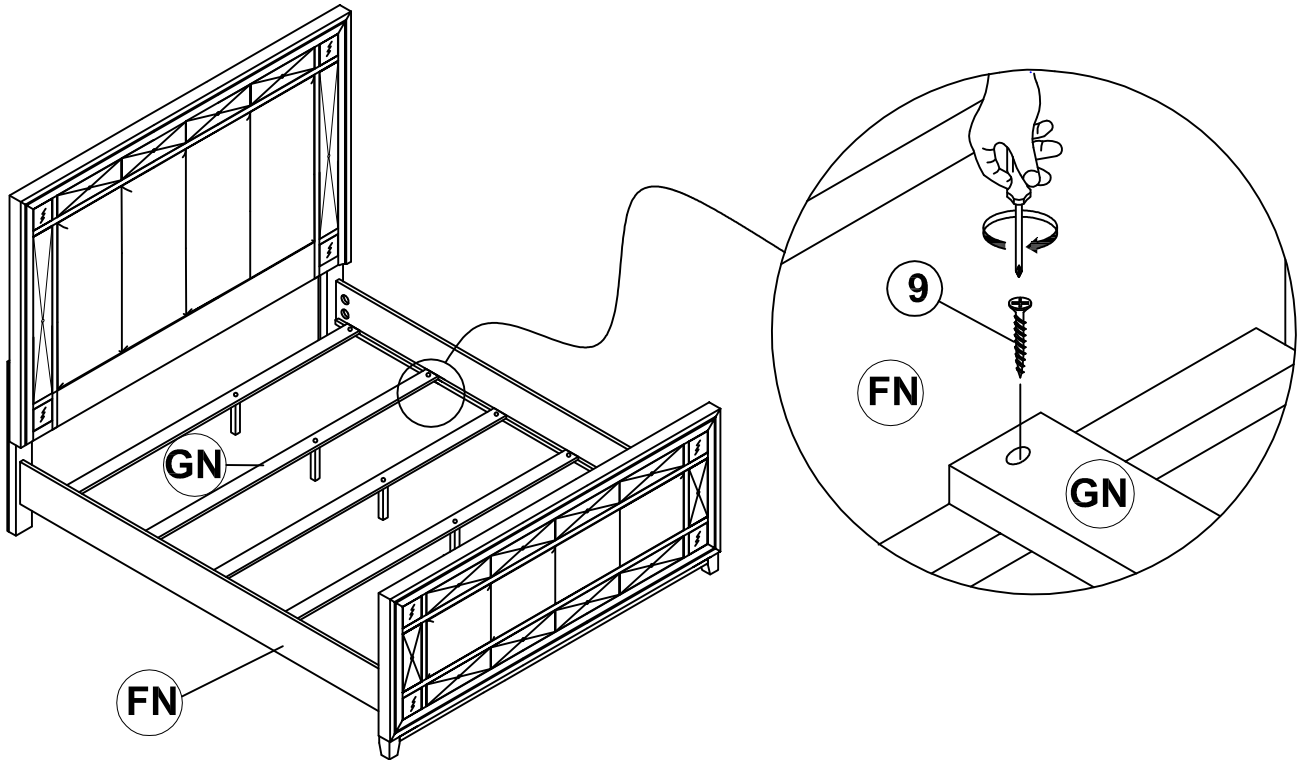


ITEM: **204921Q (B1-B3)**
ASSEMBLY INSTRUCTIONS
STEP 5
COMPLETE

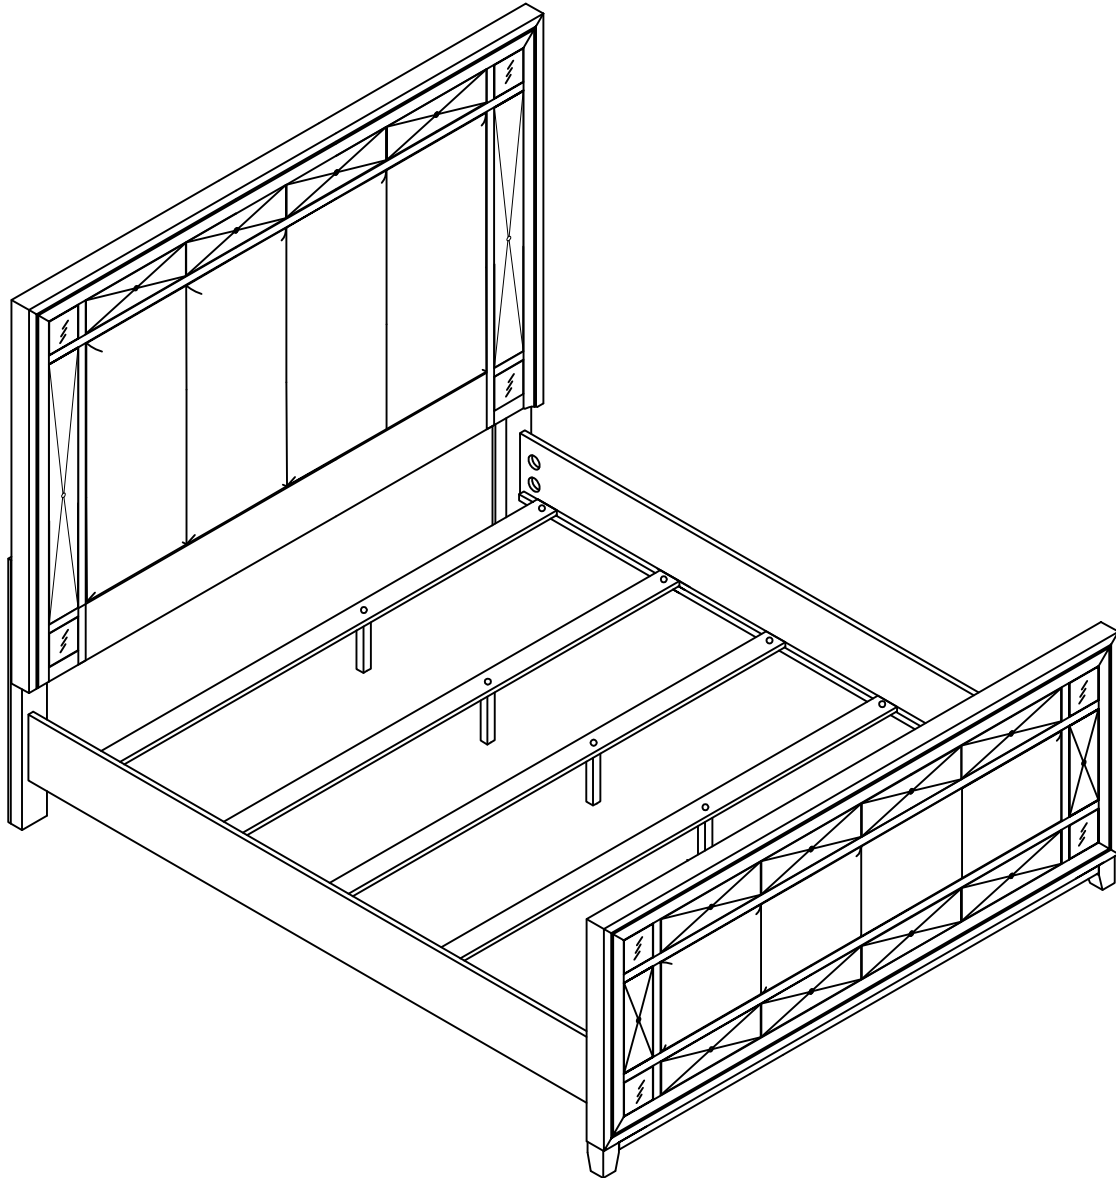

ITEM:204921Q (B1-B3)




Inner Size: 61.25"W X 81.00"D

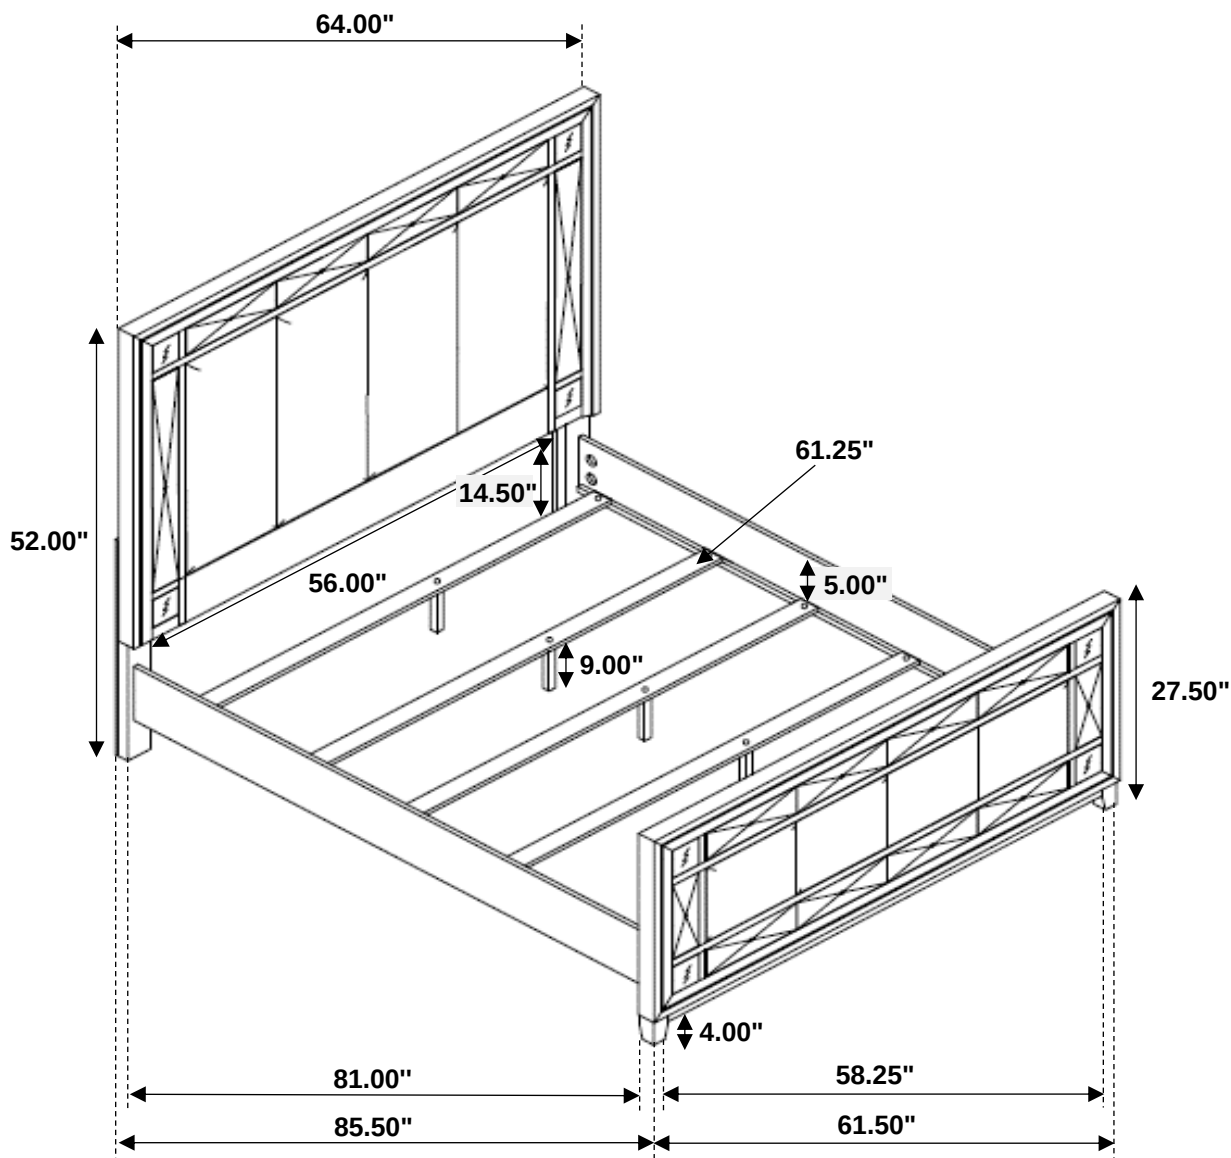

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

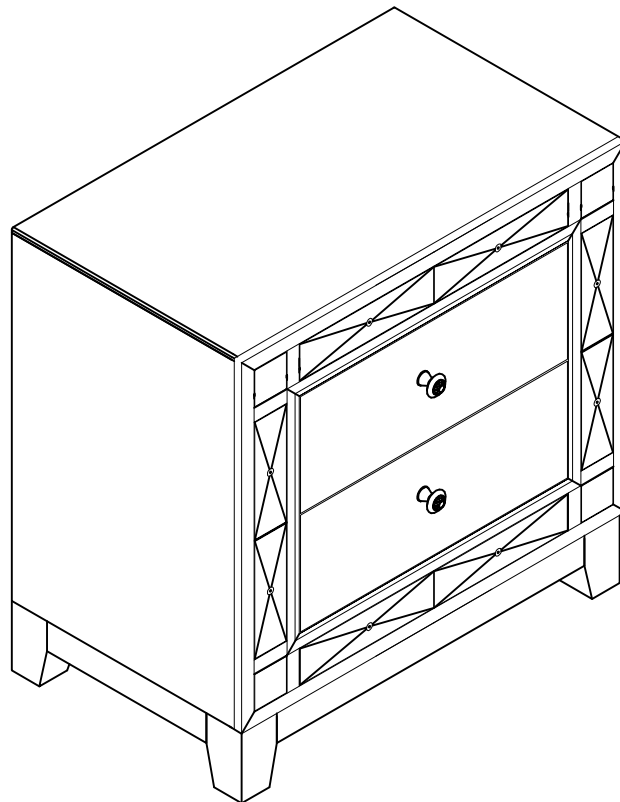

Fine Furniture for every stage of life

204922
Nightstand

ITEM:204922

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

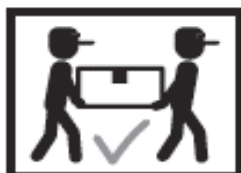


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

AN

NIGHTSTAND

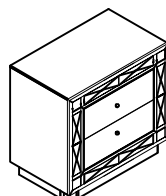

1PC

BN

LEG



4PCS

HARDWARE IDENTIFICATION

1

BOLT
(1/4" x 50mm- RBW)



8PCS

2

LOCK WASHER
(1/4" - RBW)



8PCS

3

FLAT WASHER
(1/4" - RBW)



8PCS

4

ALLEN WRENCH
(4MM - RBW)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item .


ITEM: **204922**

ASSEMBLY INSTRUCTIONS


STEP 1

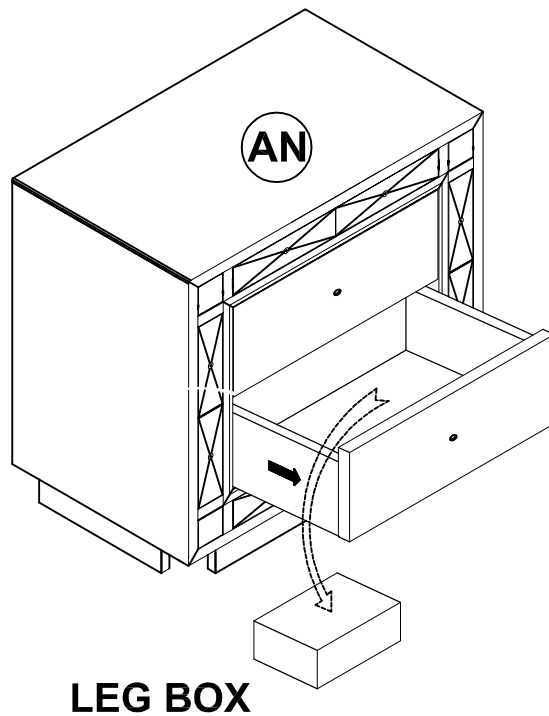

STEP 2

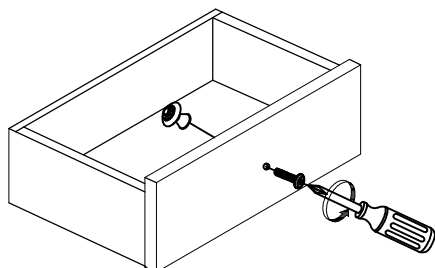


STEP 3

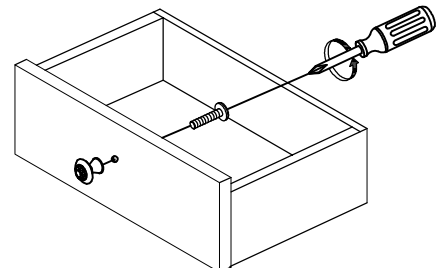

ITEM: **204922**


ASSEMBLY INSTRUCTIONS

STEP 4

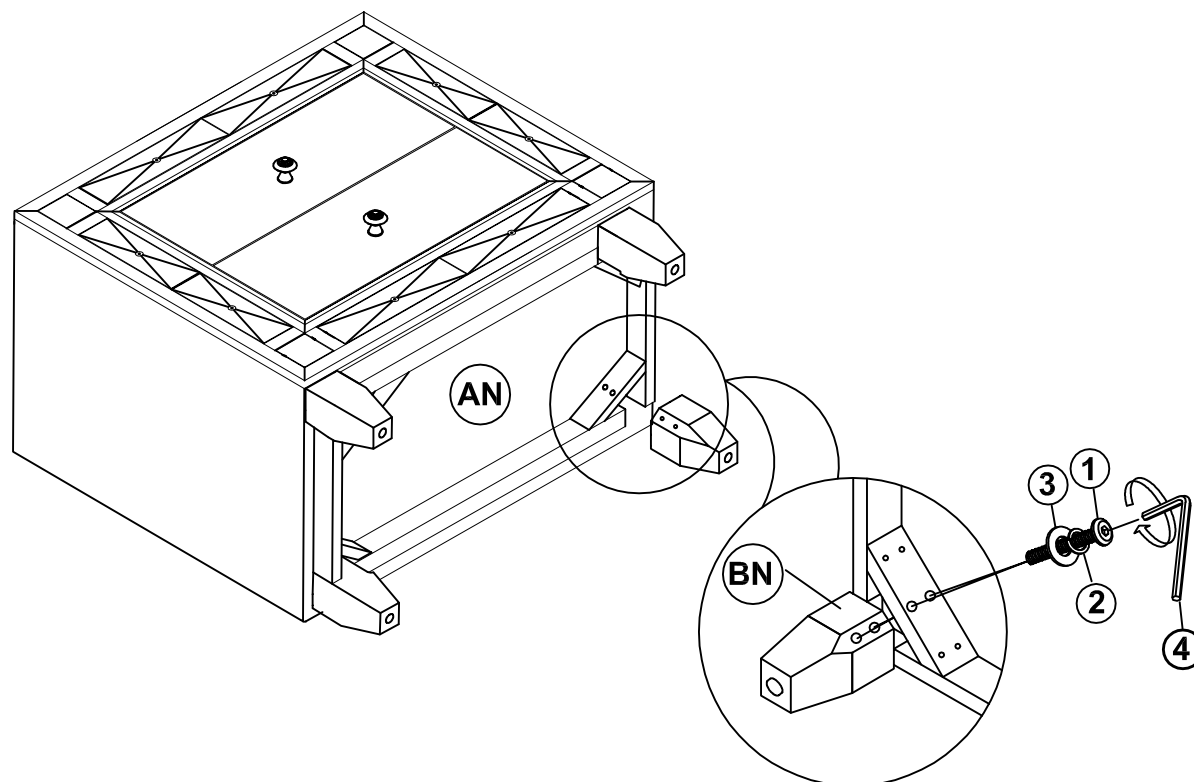

STEP 5


COMPLETE

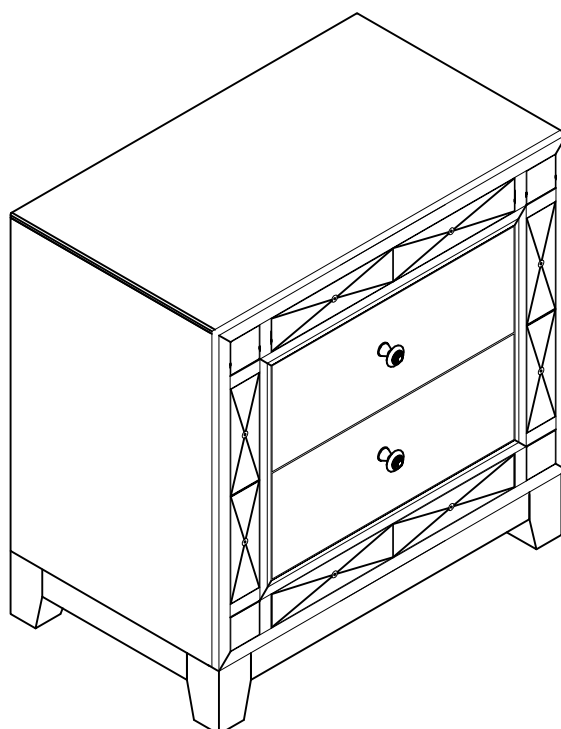

ITEM: **204922**




Inner Size of Drawer : 14.50"W X 13.50"D X 3.50"H X 0.50"T

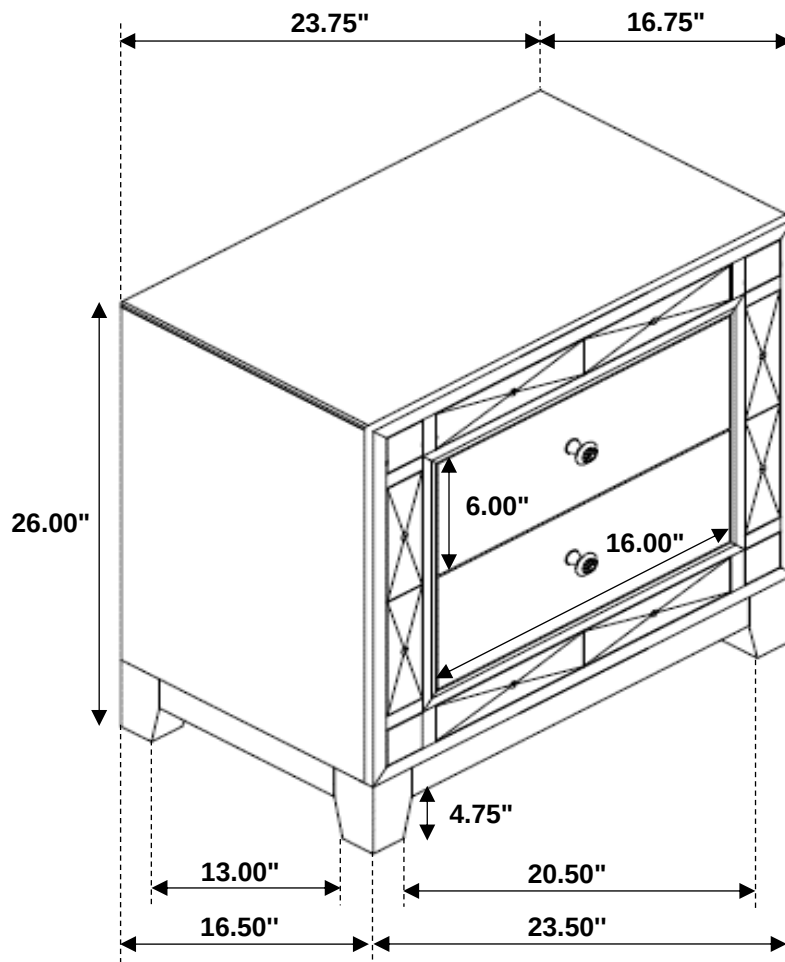

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

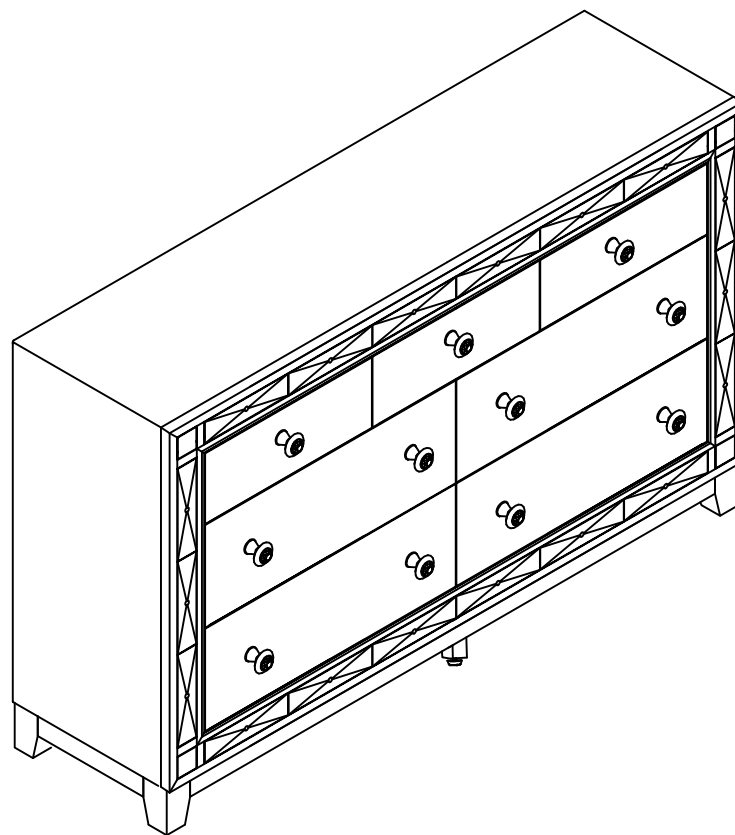

Fine Furniture for every stage of life

204923
Dresser

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

AN DRESSER

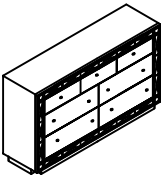

1PC

BN LEG



4PCS

CN CENTER
SUPPORT
LEG WITH
LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(1/4" x 50mm- RBW)



8PCS

2 LOCK WASHER
(1/4" - RBW)



8PCS

3 FLAT WASHER
(1/4" - RBW)



8PCS

4 ALLEN WRENCH
(4MM - RBW)




1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item .


ITEM:204923
ASSEMBLY INSTRUCTIONS
STEP 1

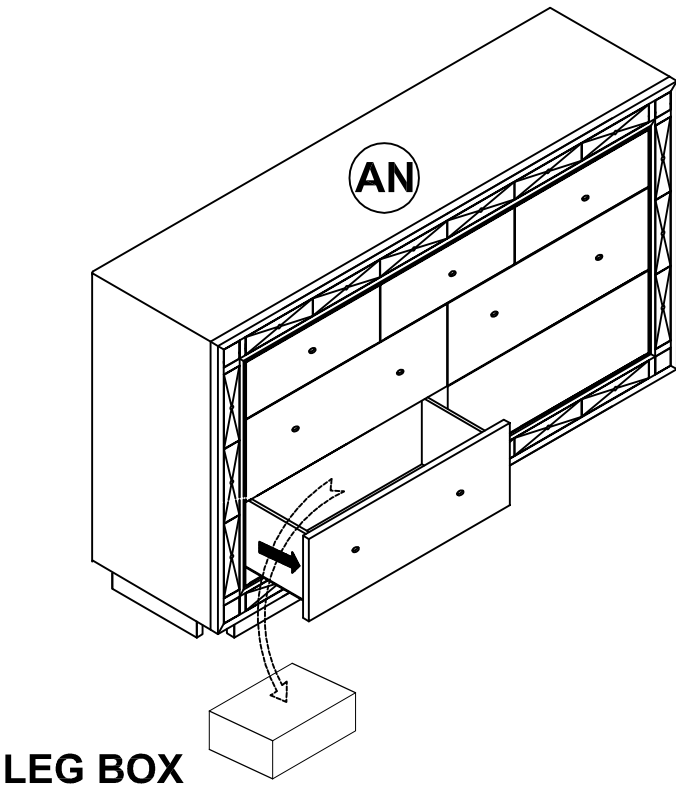

STEP 2

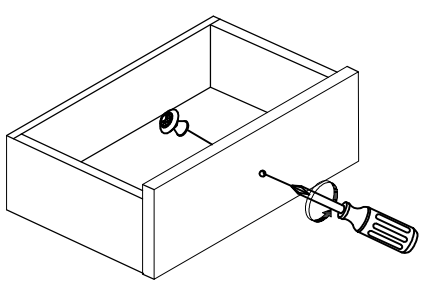


STEP 3

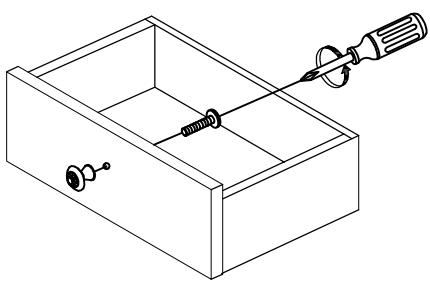


ITEM: **204923**

ASSEMBLY INSTRUCTIONS

STEP 4

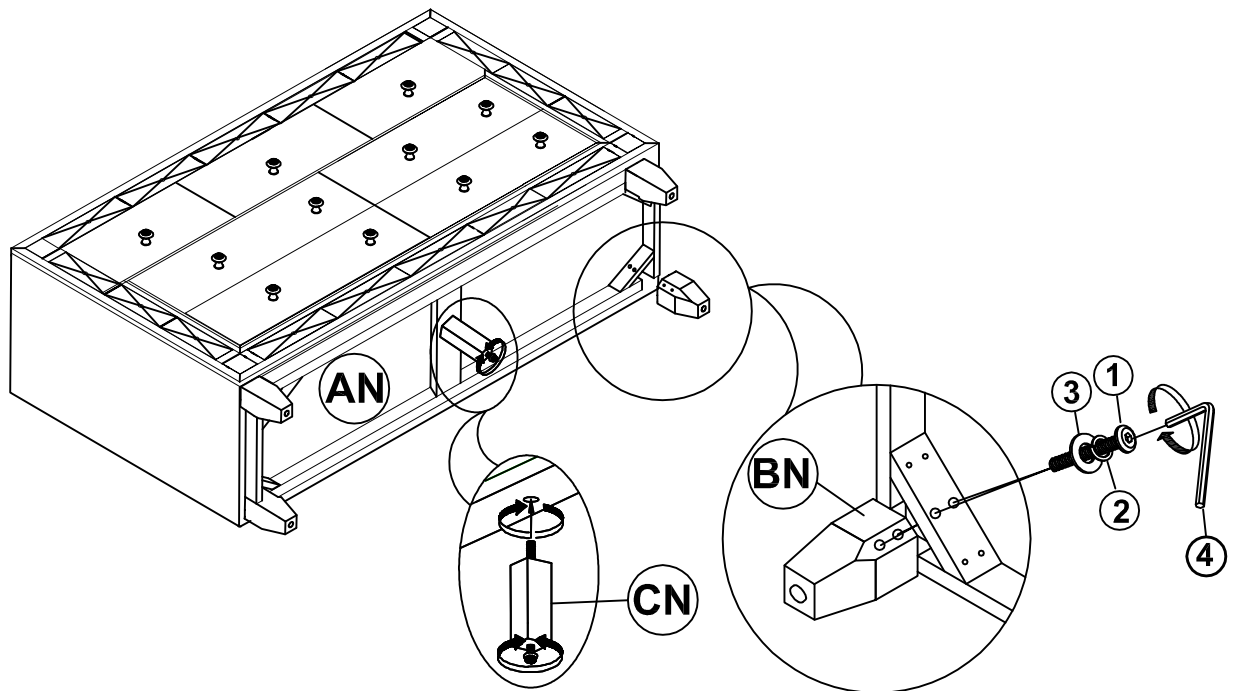

STEP 5 COMPLETE

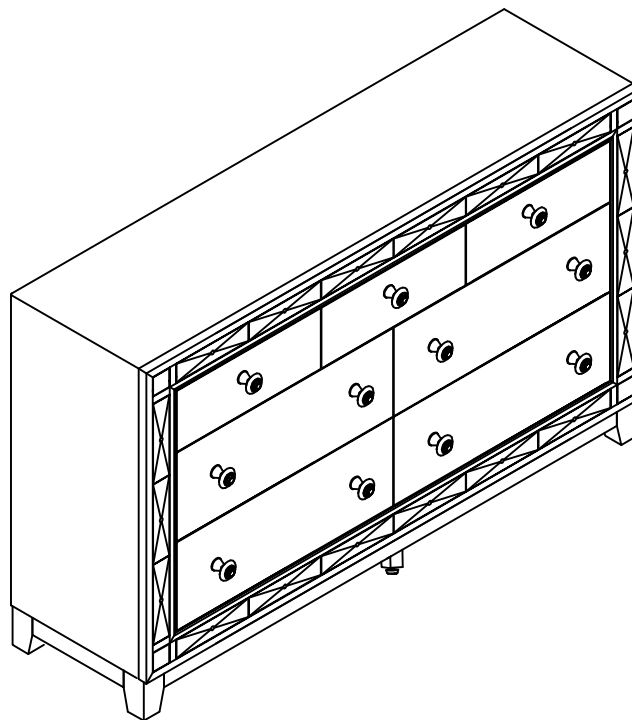

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage .

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

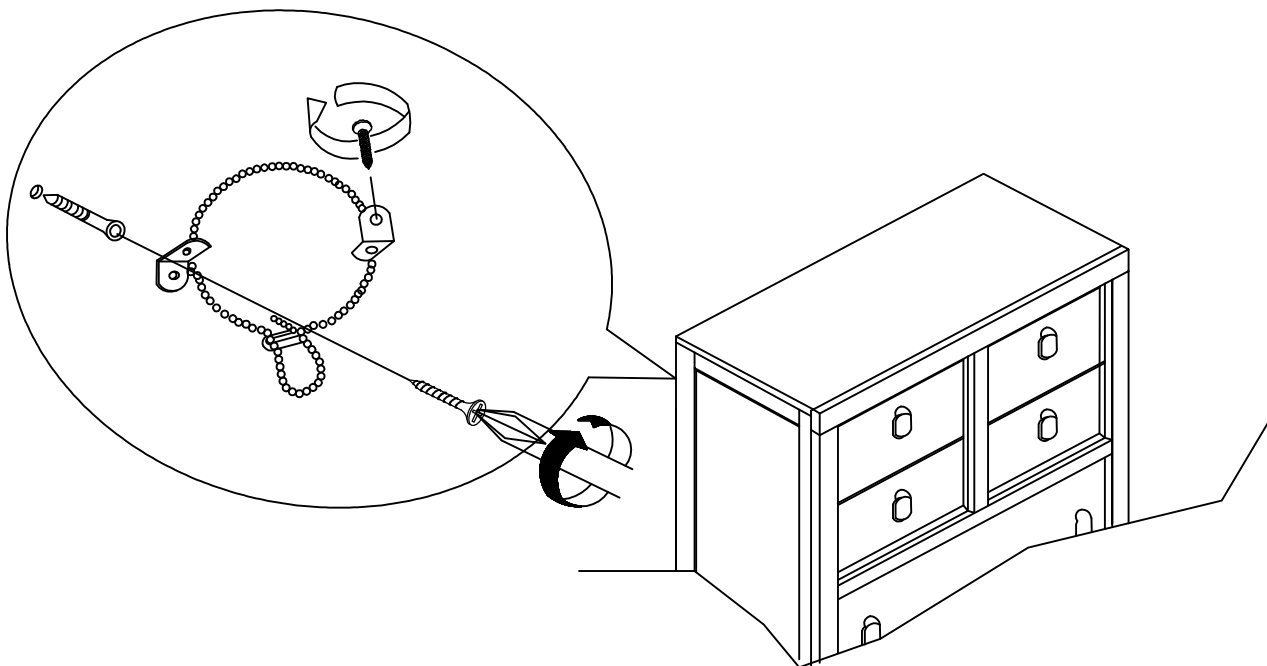

The logo for Coaster Fine Furniture, featuring the word "COASTER" in a large, bold, red sans-serif font, with a red curved line arching over the letters. Below "COASTER" is the phrase "FINE FURNITURE" in a smaller, red sans-serif font.


Inner Size of Drawer B : 23.25"W X 13.50"D X 6.50"H X 0.50"T

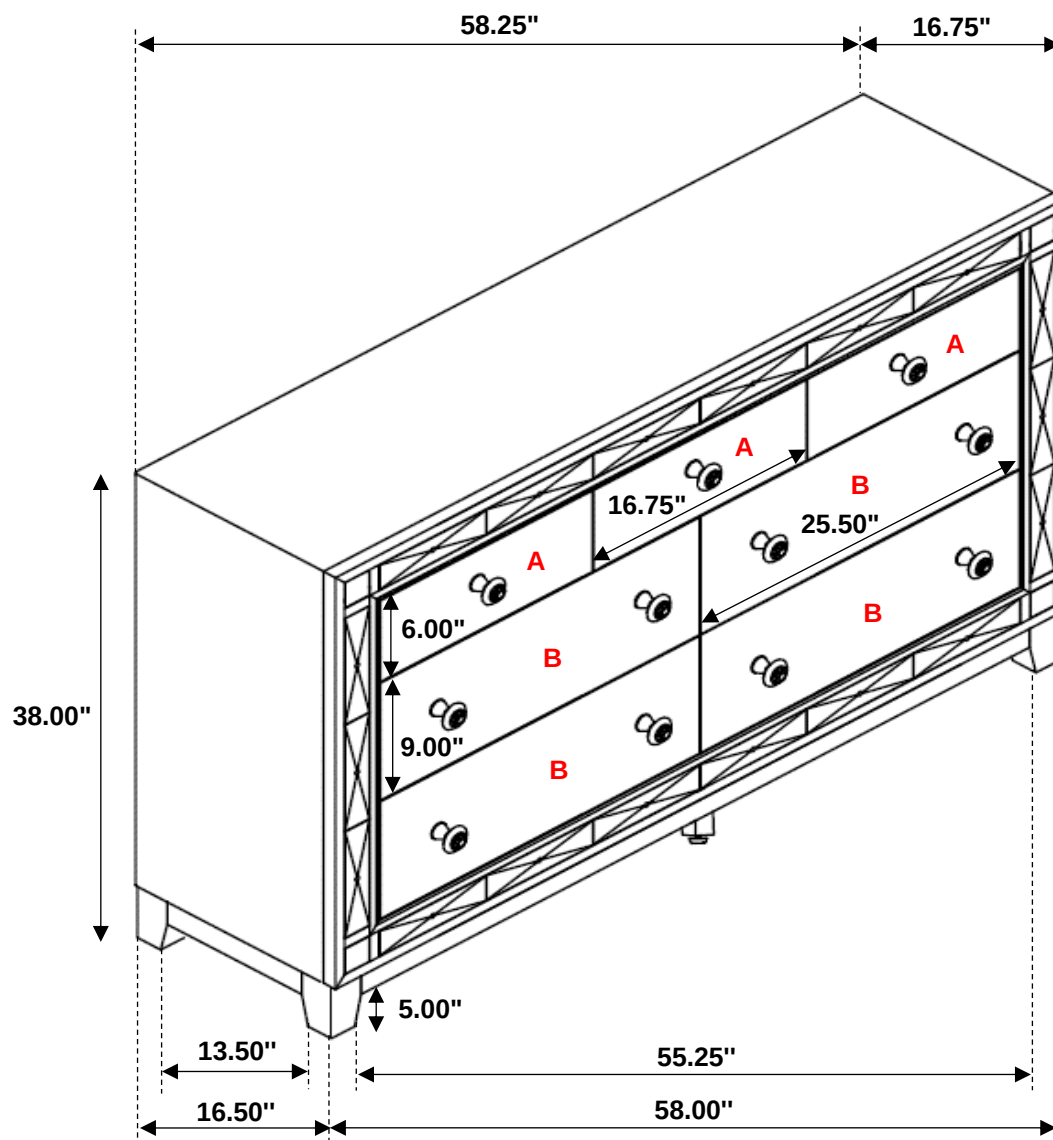

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

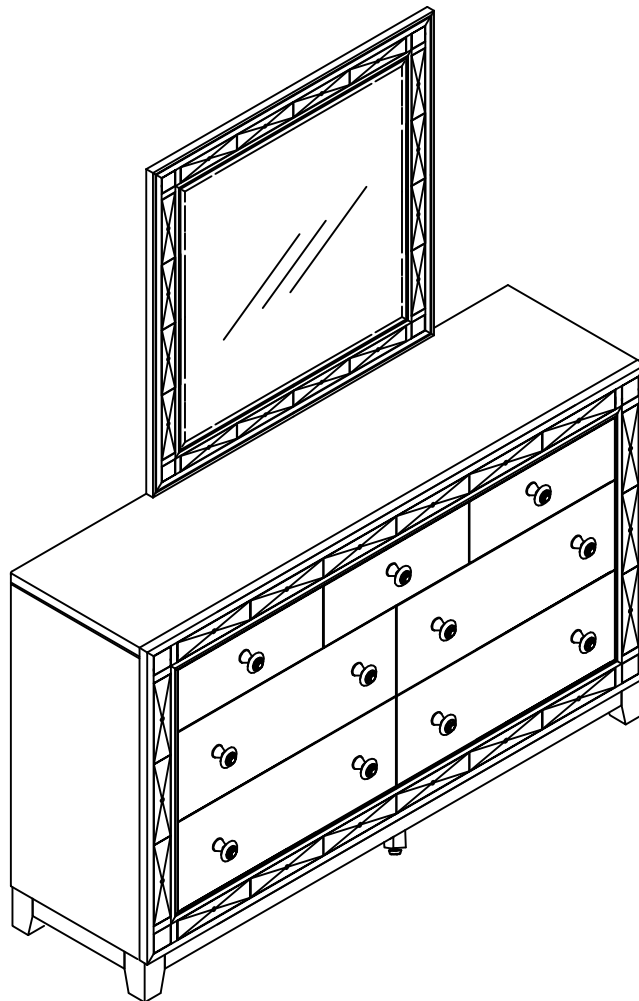

Fine Furniture for every stage of life

204924
Mirror

ITEM: 204924

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!




1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

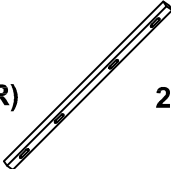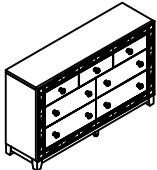AN	MIRROR		1PC	MIRROR SUPPORT BN (PACKED WITH DRESSER)		2PCS
CN	DRESSER FROM BOX ITEM# 204923		1PC			


HARDWARE IDENTIFICATION

1	BOLT (1/4" x 38mm - RBW)		6PCS	2	LOCK WASHER (1/4" - RBW)		6PCS
3	FLAT WASHER (1/4" - RBW)		6PCS	4	ALLEN WRENCH (4MM - RBW)		1PC


ITEM: **204924**

ASSEMBLY INSTRUCTIONS


STEP 1

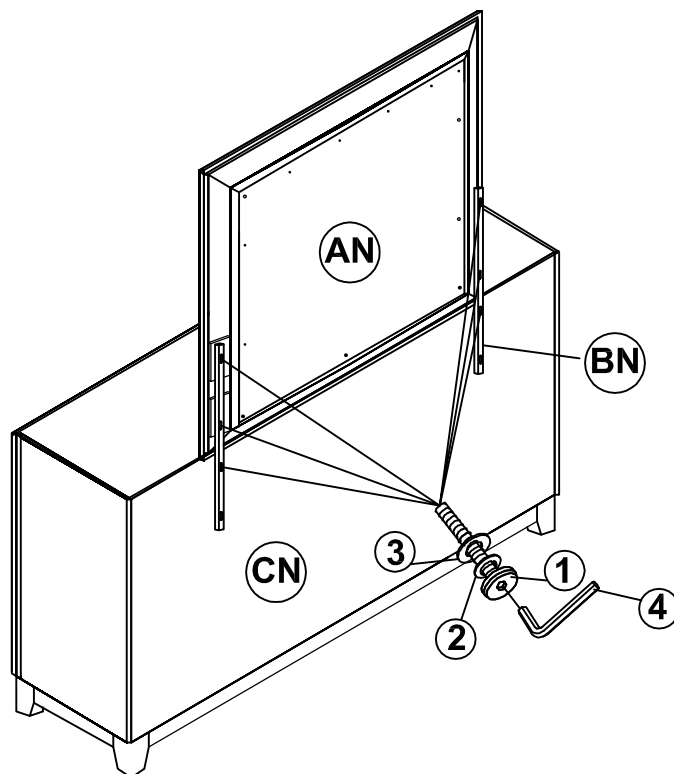

STEP 2
COMPLETE

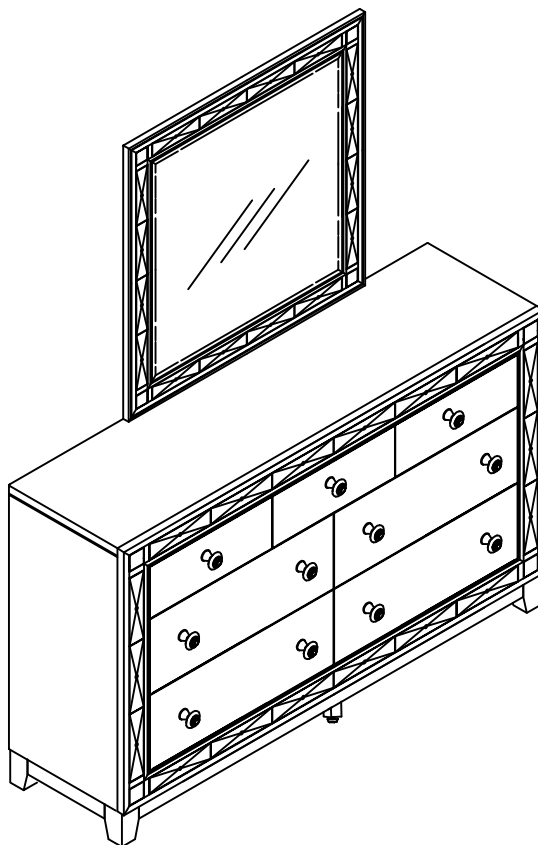

ITEM: **204924**

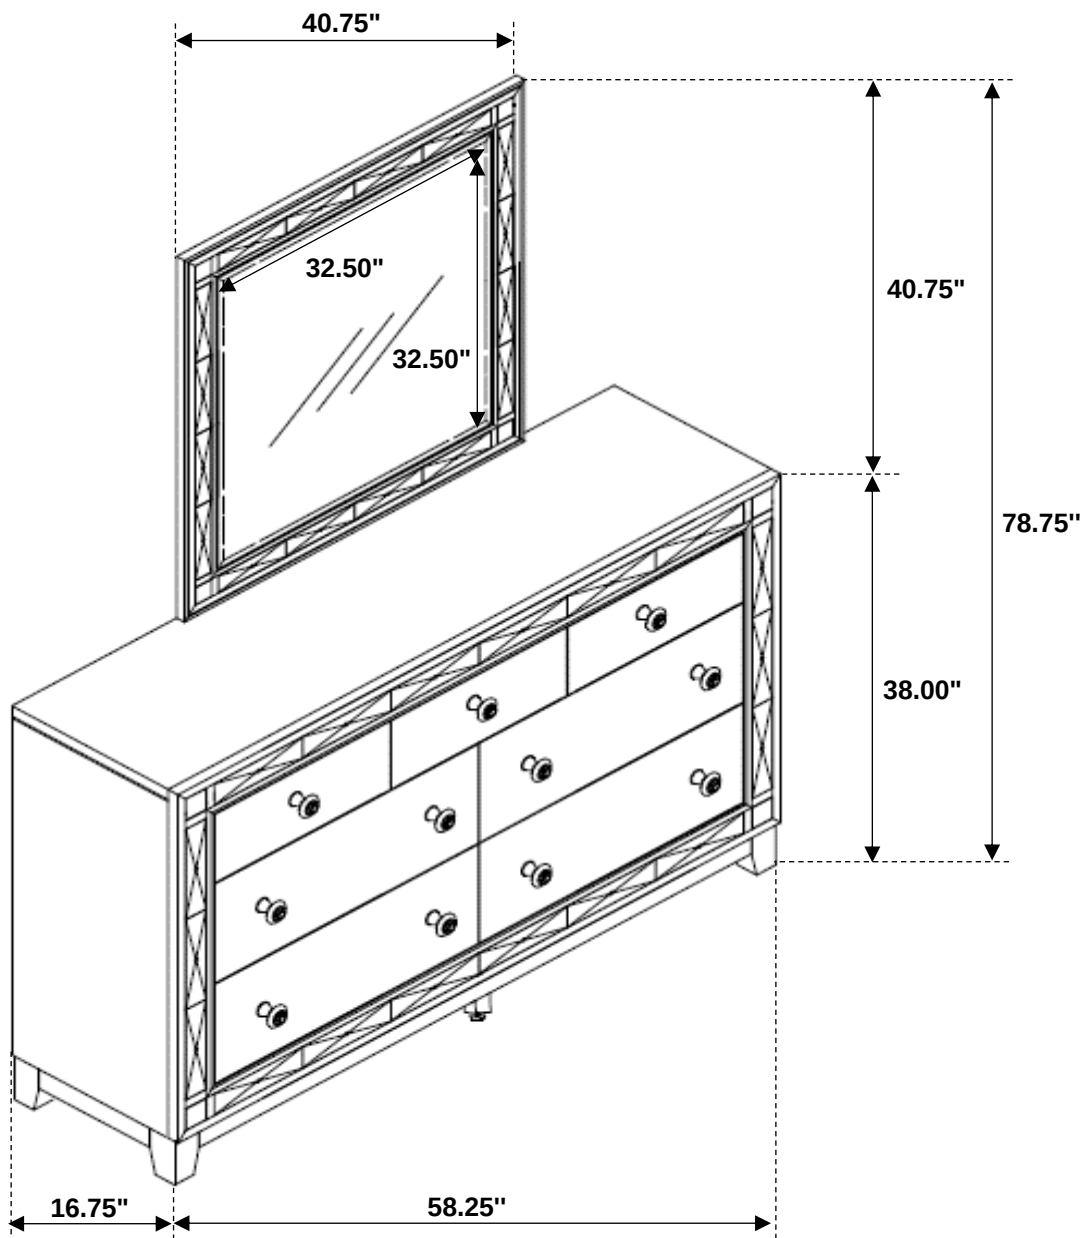

Note: Dimension tolerance $\pm 5\%$