

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 205101KE (B1-B3) *Eastern King Bed*

REVISION 0 : 11/28/2016  
REVISION 1 : 10/17/2017  
REVISION 2 : 06/05/2018  
REVISION 3 : 09/04/2019

# ITEM: 205101KE (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.






ASSEMBLY TIME




40 MINUTES

## PARTS IDENTIFICATION












### B1 ( BOX 1)

AV	HEADBOARD		1PC	CV	HEADBOARD PANEL		1PC
BV	HEADBOARD SUPPORT LEG		2PCS				

### B2 ( BOX 2)

DV1	RIGHT EAR PANEL		1PC	EV	EAR PANEL SUPPORT		2PCS
DV2	LEFT EAR PANEL		1PC				

### B3 ( BOX 3)

FV	FOOTBOARD		1PC	KV	FOOTBOARD LEG		2PCS
GV1	LEFT BED RAIL		1PC	LV	CENTER RAIL		2PCS
GV2	RIGHT BED RAIL		1PC	MV	CENTER RAIL SUPPORT		2PCS
HV	BED SLAT		10PCS	HBV	205101KE (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
IV	BED SLAT WITH HOLES		3PCS	ERV	205101KE (B2) FROM BOX 2 LEFT AND RIGHT EAR PANEL COMPLETE		2PCS
JV	BED SLAT SUPPORT		6PCS				

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 205101KE (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.















### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 205101KE (B3)

1	ALLEN WRENCH (4MM - RBW)		1PC	7	MEDIUM PAN HEAD SCREW (#4 x 25mm - RBW)		4PCS
2	BOLT 1 (Ø1/4" x 30mm - RBW)		4PCS	8	LONG PAN HEAD SCREW (#4 x 38mm - RBW)		32PCS
3	BOLT 2 (Ø1/4" x 38mm - RBW)		10PCS	9	BIG FLAT WASHER (Ø1/4" X 25 X 1.5mm - RBW)		22PCS
4	BOLT 3 (Ø1/4" x 60mm - RBW)		10PCS	10	SMALL FLAT WASHER (Ø1/4" X 19 X 1.5mm - RBW)		22PCS
5	BOLT 4 (Ø1/4" x 90mm - RBW)		8PCS	11	LOCK WASHER (Ø1/4" - RBW)		22PCS
6	SHORT PAN HEAD SCREW (#4 x 20mm - RBW)		4PCS	12	LEVELER (Ø1/4" X 25mm - BLK)		6PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 205101KE (B1-B3)




## ASSEMBLY INSTRUCTIONS

### STEP 1

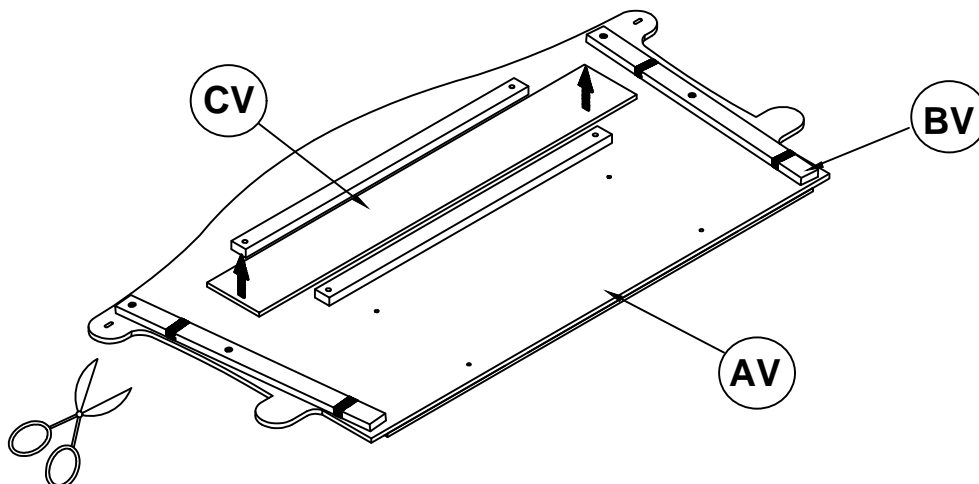


### STEP 2

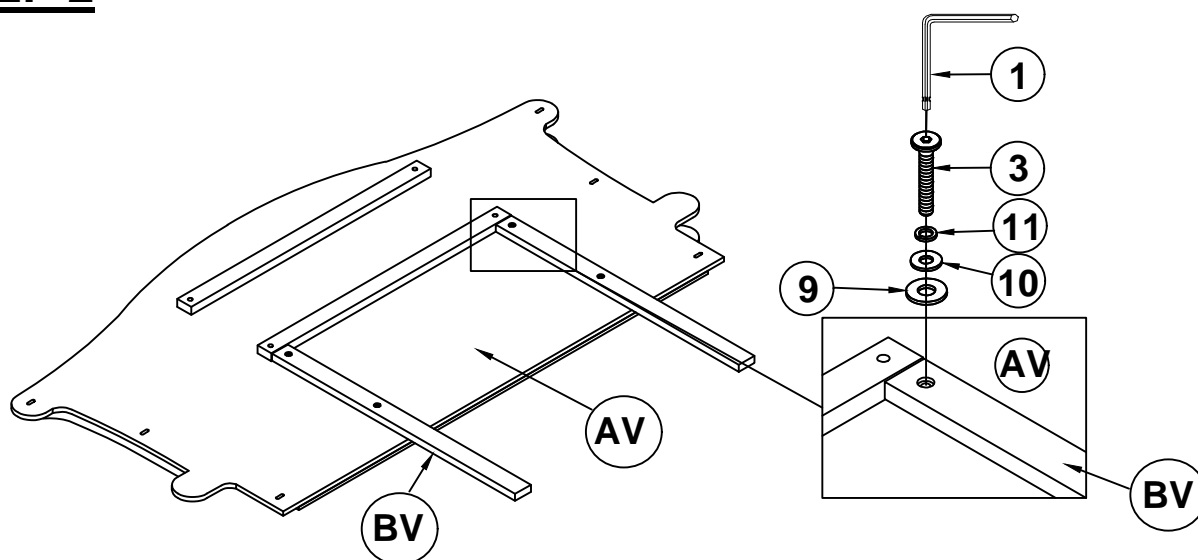

### STEP 3

**NOTE : THE EAR PANELSUPPORTS ARE TO  
LIFT UP THE BED RAILS**

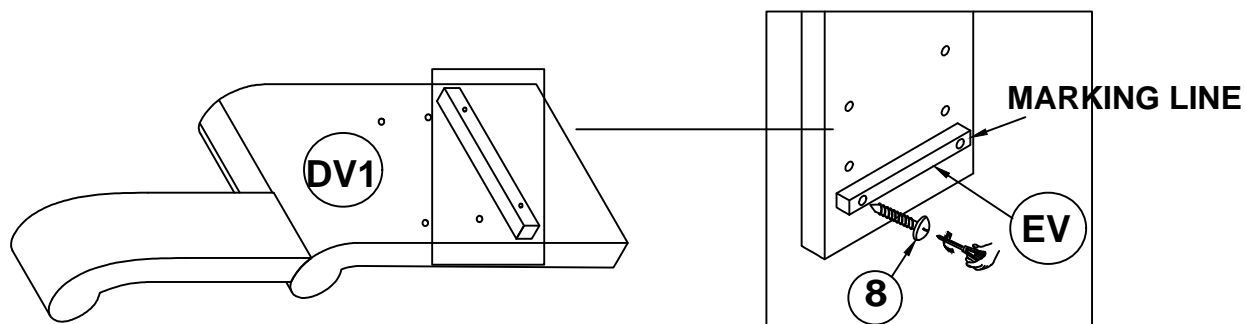


# ITEM: 205101KE (B1-B3)




## ASSEMBLY INSTRUCTIONS


### STEP 4

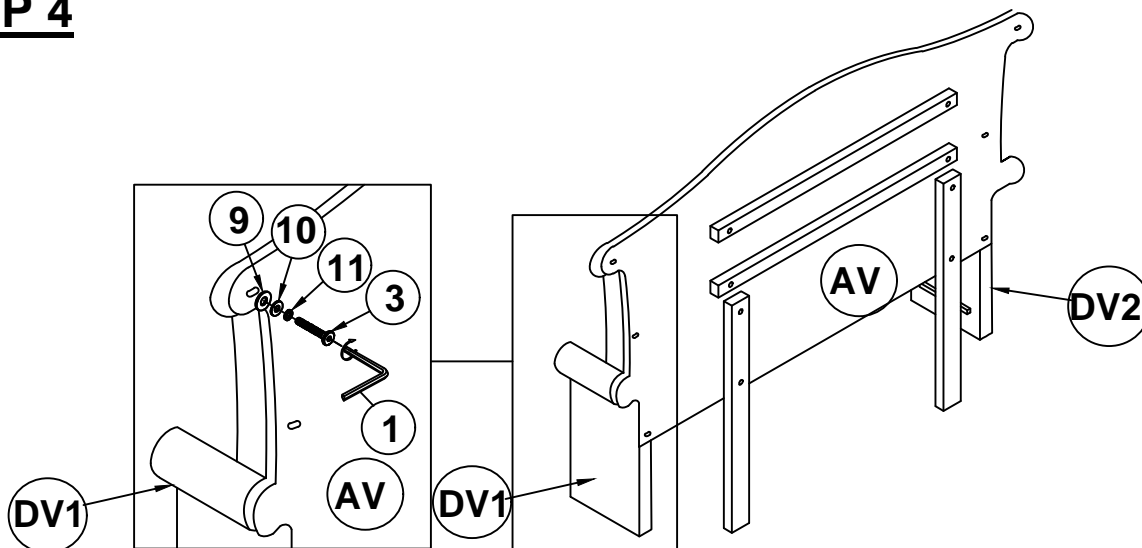

### STEP 5

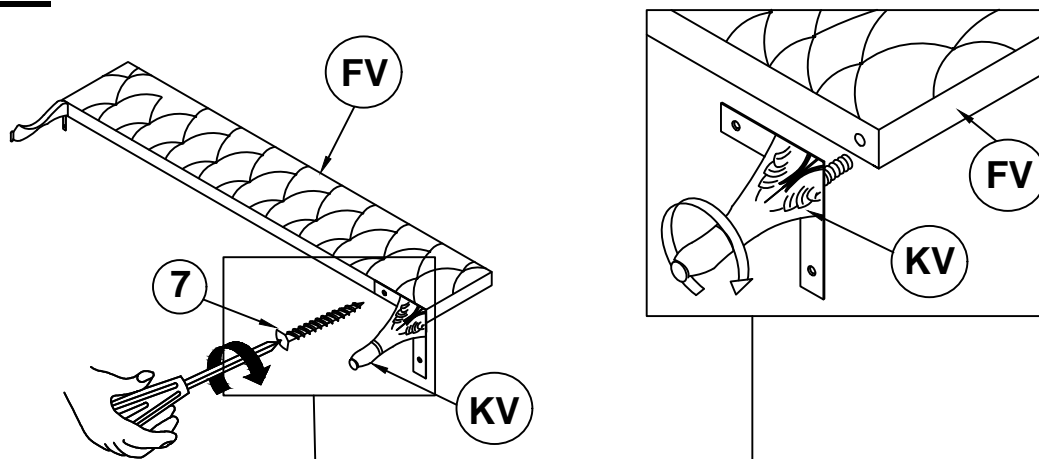

### STEP 6

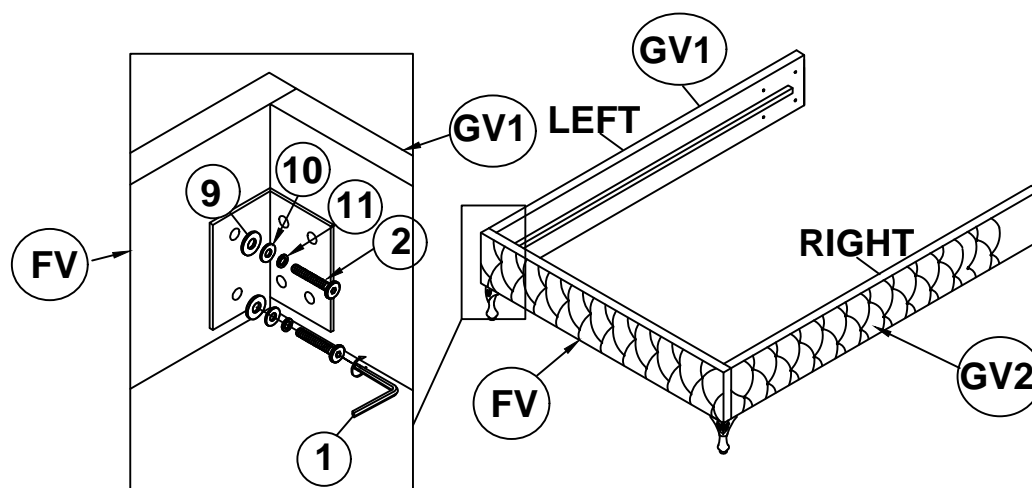


# ITEM: 205101KE (B1-B3)




## ASSEMBLY INSTRUCTIONS


### STEP 7

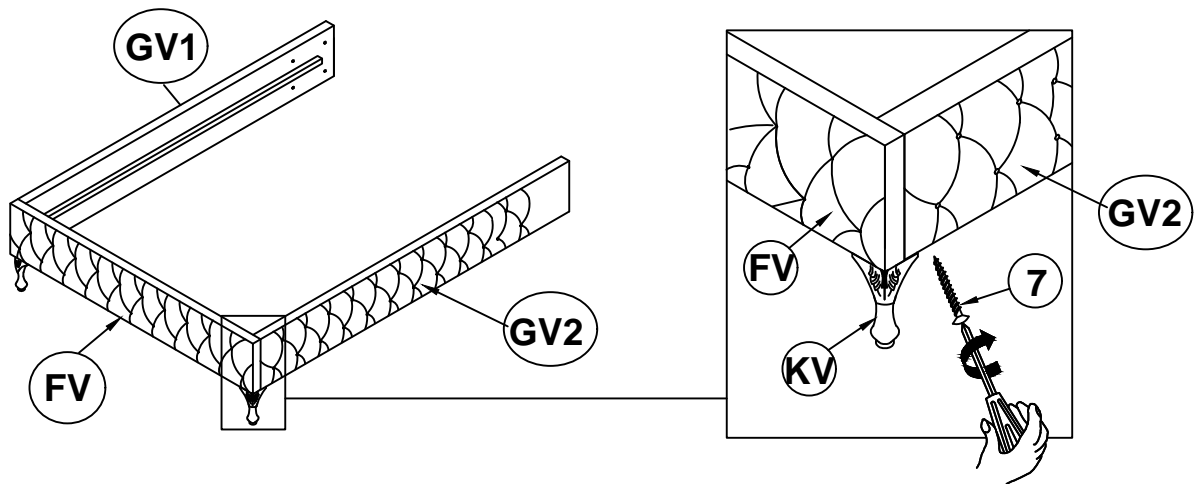

### STEP 8

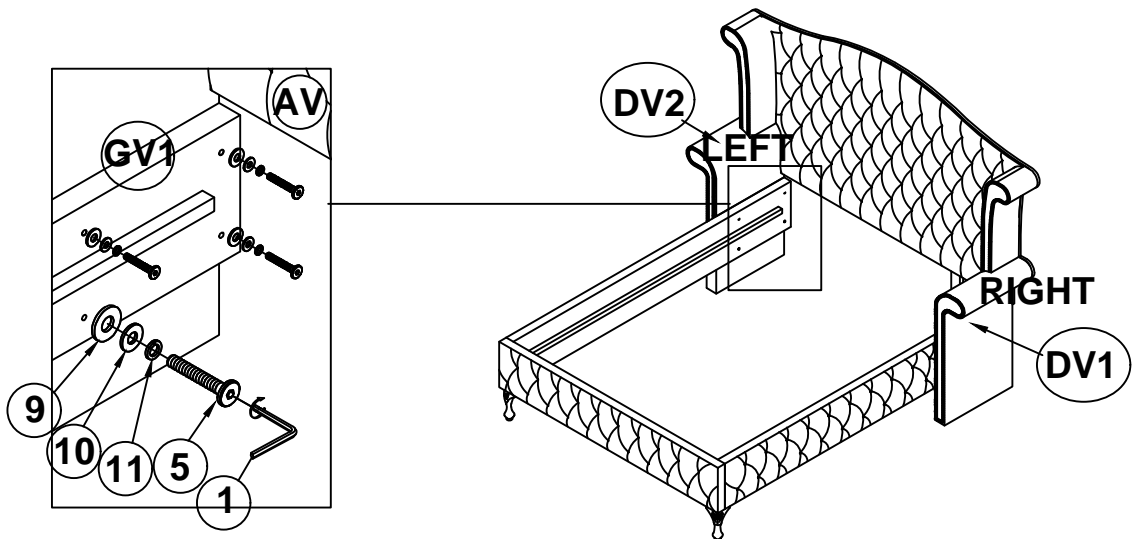

### STEP 9


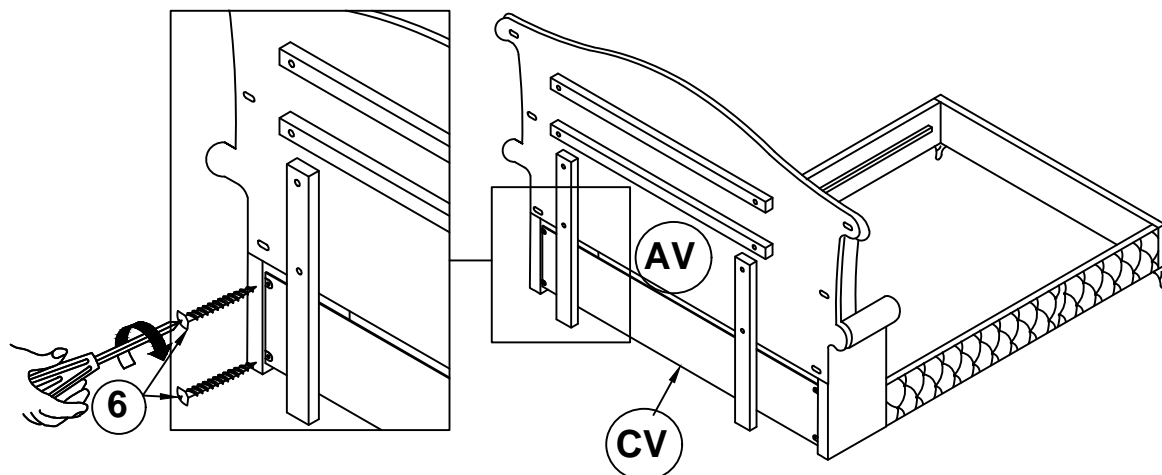


# ITEM: 205101KE (B1-B3)





## ASSEMBLY INSTRUCTIONS



### STEP 10

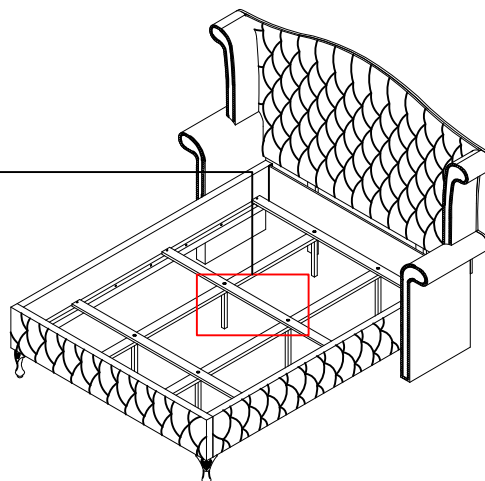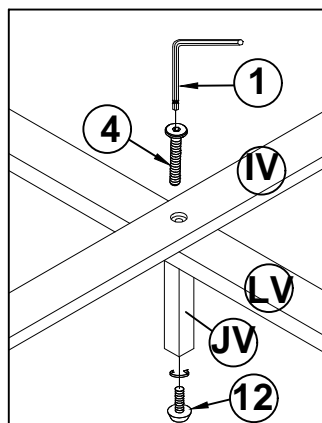

### STEP 11

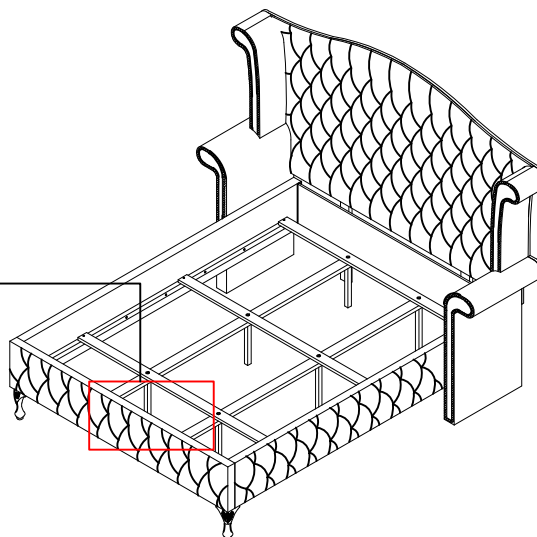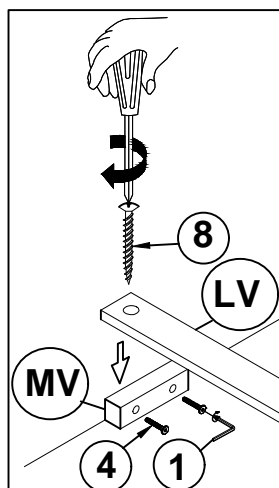

### STEP 12

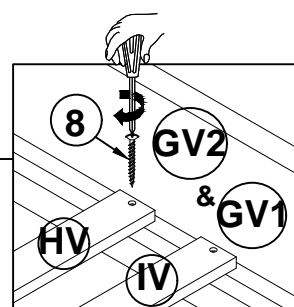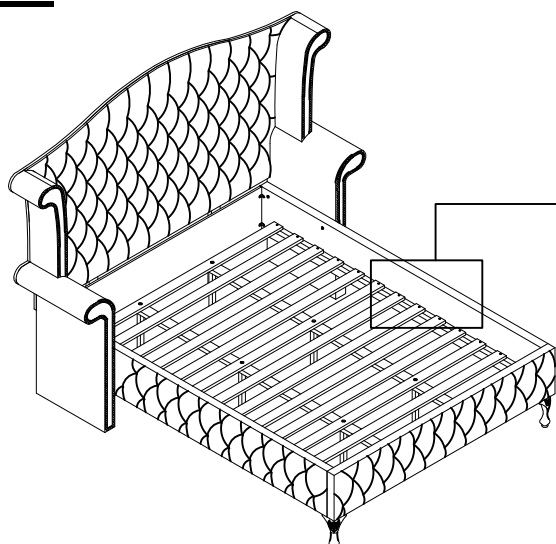


ITEM: **205101KE (B1-B3)**



## ASSEMBLY INSTRUCTIONS

### STEP 13

### COMPLETE

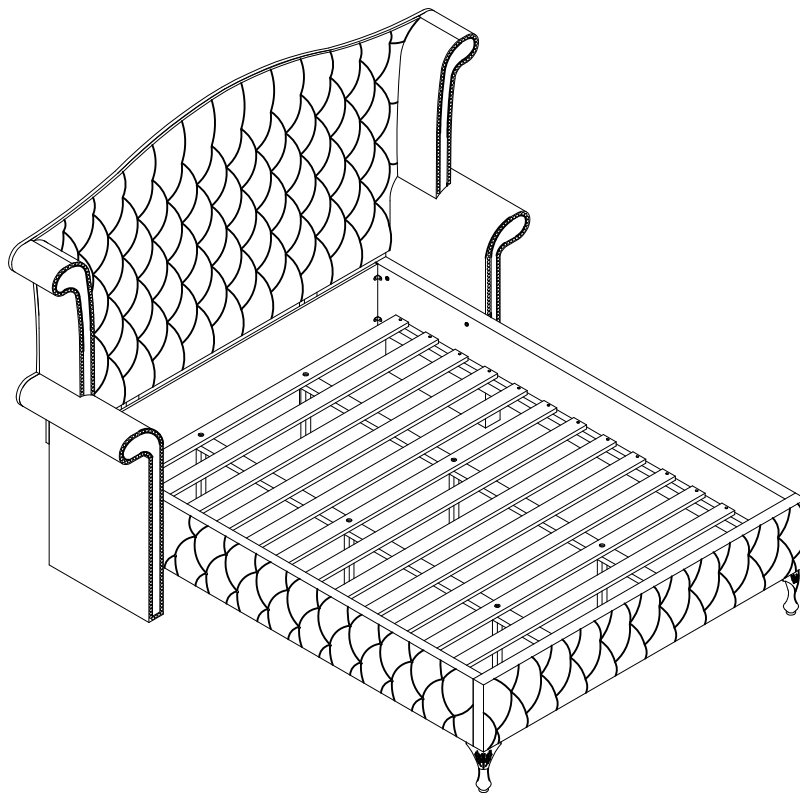




ITEM: **205101KE (B1-B3)**



Inner Size: 77.00"W X 81.00"D

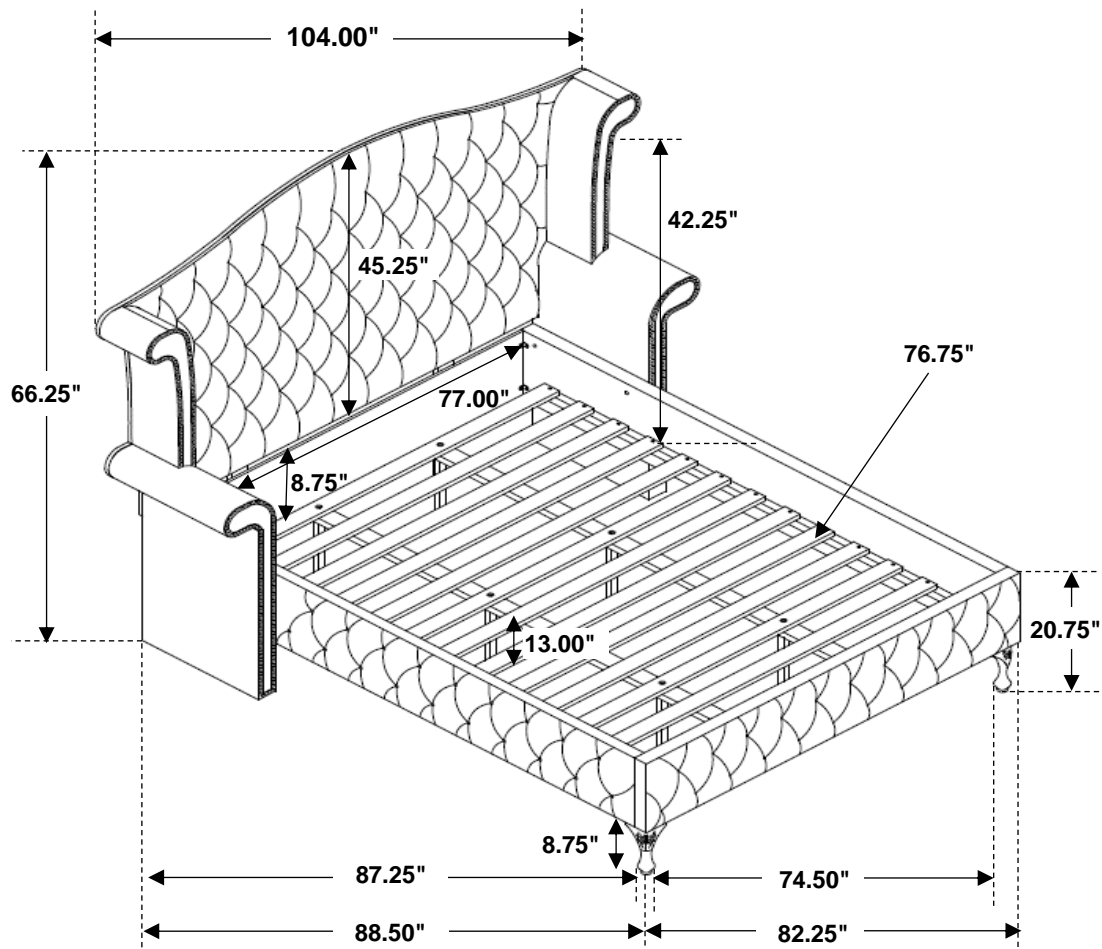

Note: Dimension tolerance  $\pm 5\%$

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**205102**  
***Nightstand***

REVISION 0 : 11/28/2016  
REVISION 1 : 10/17/2017  
REVISION 2 : 06/05/2018  
REVISION 3 : 09/04/2019

ITEM: **205102**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

AV NIGHTSTAND

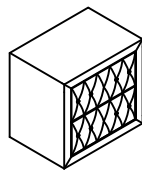

1PC

BV

LEG



4PCS

## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(4MM - RBW)



1PC

3 LOCK WASHER  
(Ø5/16" - RBW)



4PCS

2 BOLT  
(Ø5/16" x 90mm - RBW)



4PCS

4 FLAT WASHER  
(Ø5/16" x 19 x 1.5mm - RBW)



4PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **205102**


## ASSEMBLY INSTRUCTIONS

### STEP 1

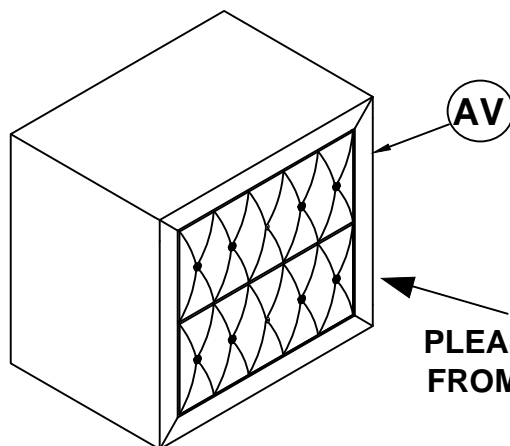

PLEASE TAKE OUT THE LEGS  
FROM THE LAST DRAWER.

### STEP 2

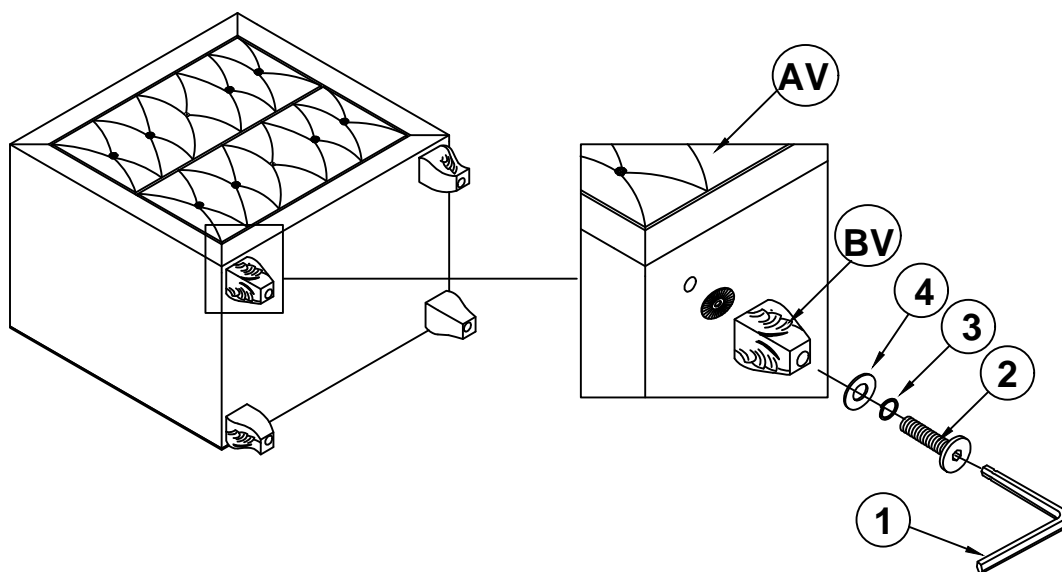


ITEM: **205102**




## ASSEMBLY INSTRUCTIONS

### STEP 3

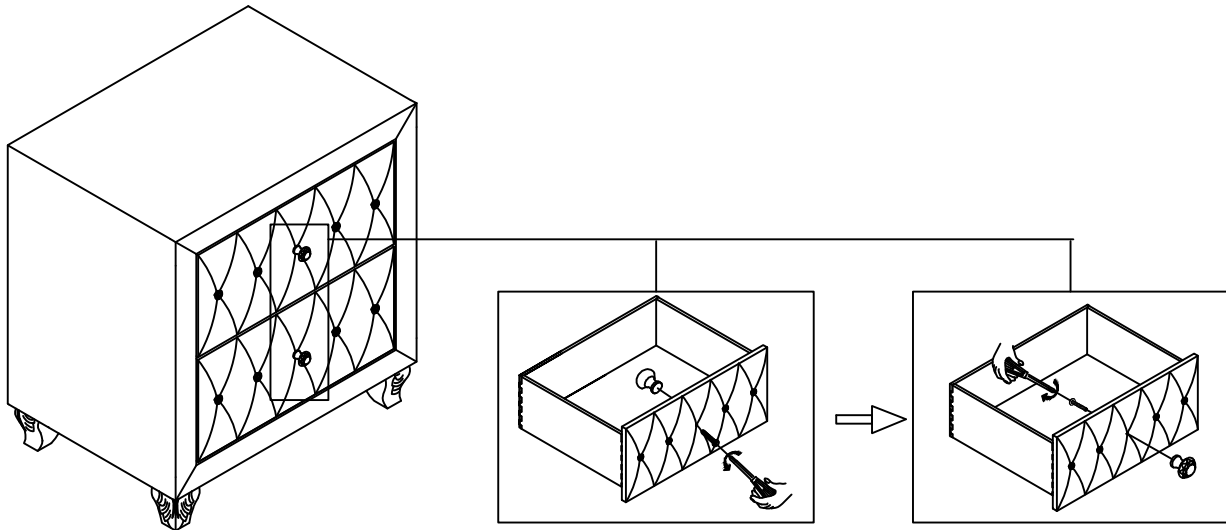

### STEP 4 COMPLETE

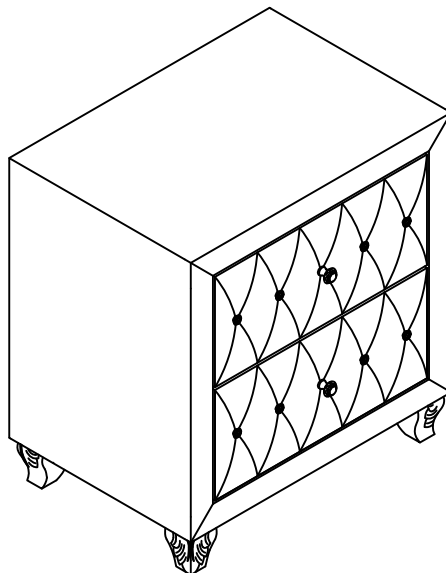

ITEM: **205102**



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

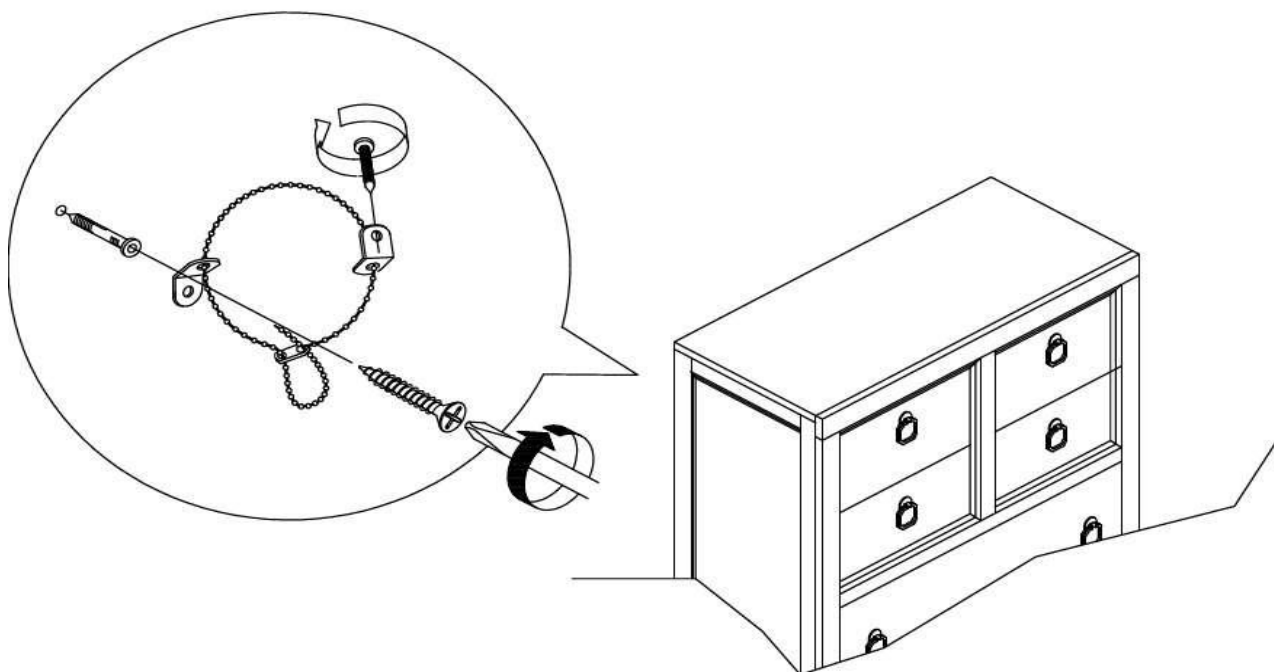

ITEM: **205102**



Inner Size of Drawer : 19.00"W X 14.50"D X 6.00"H X 0.25"T

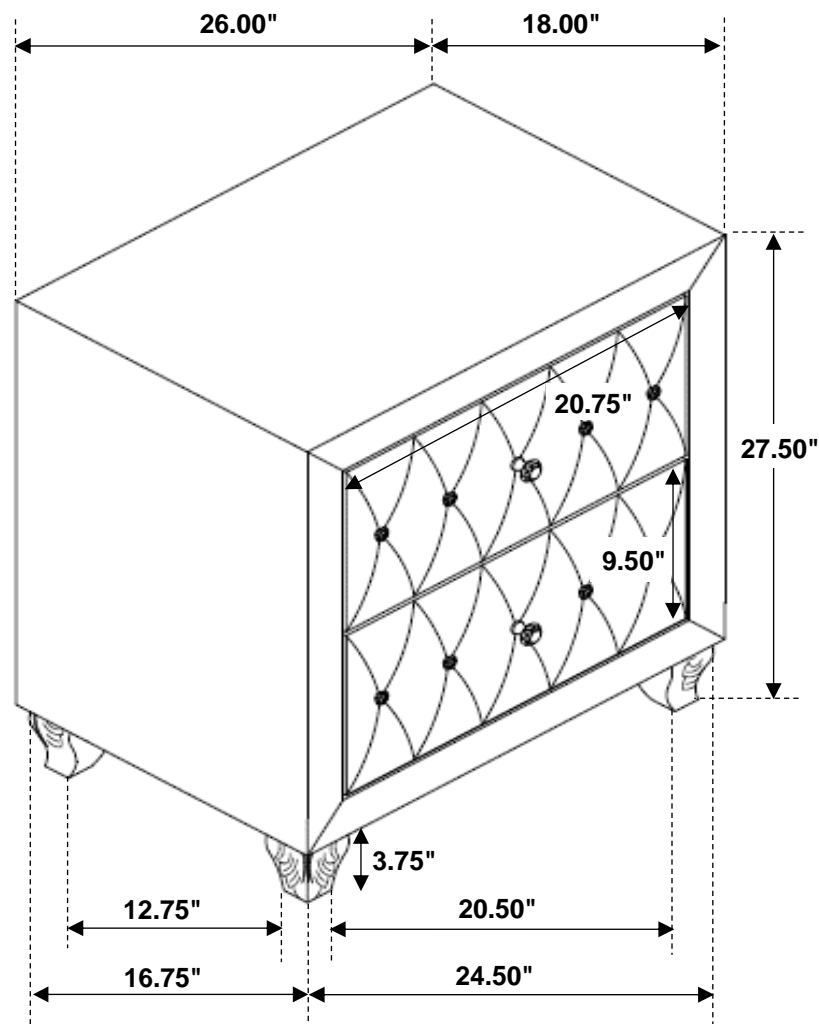

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**205103**  
***Dresser***



ITEM: **205103**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!




1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.







ASSEMBLY TIME

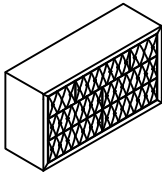10 MINUTES

## PARTS IDENTIFICATION

AV	DRESSER		1PC	BV	LEG		4PCS
CV	CENTER SUPPORT LEG WITH LEVELER		1PC				

## HARDWARE IDENTIFICATION

1	ALLEN WRENCH (4MM - RBW)		1PC	3	LOCK WASHER (Ø5/16" - RBW)		4PCS
2	BOLT (Ø5/16" x 90mm - RBW)		4PCS	4	FLAT WASHER (Ø5/16" x 19 x 1.5mm - RBW)		4PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **205103**




## ASSEMBLY INSTRUCTIONS

### STEP 1

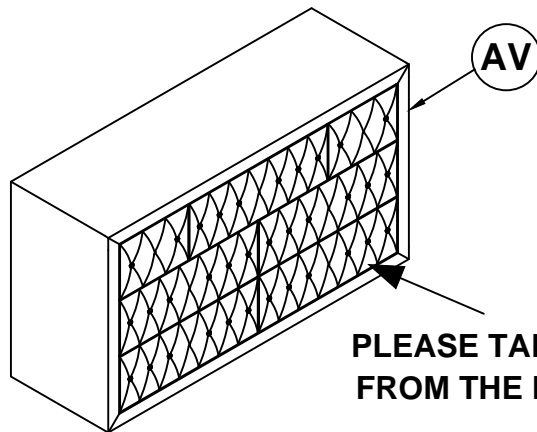

PLEASE TAKE OUT THE LEGS FROM THE LAST DRAWER.

### STEP 2

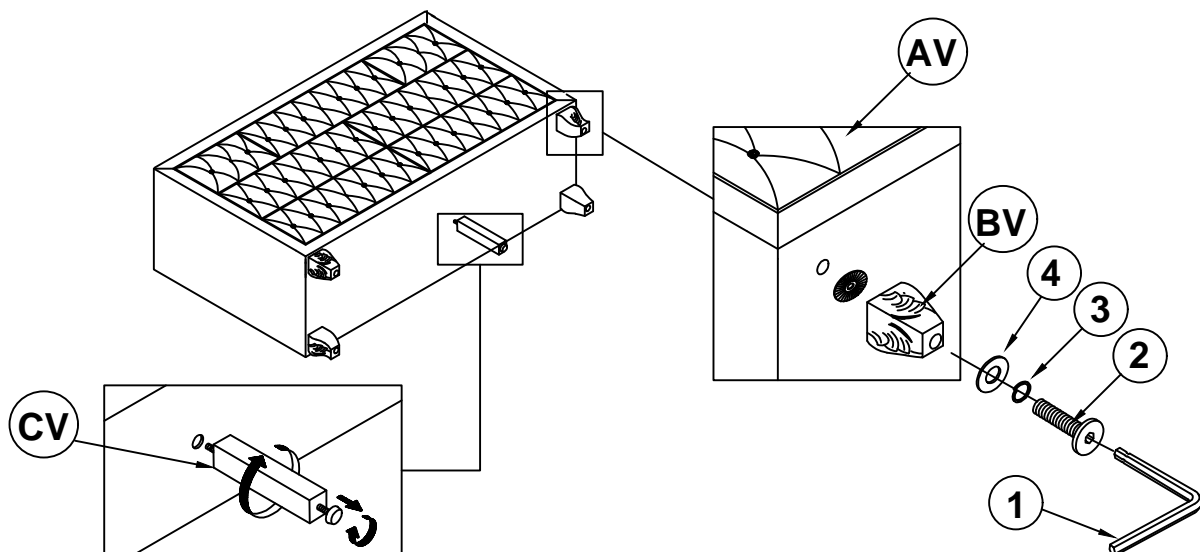


ITEM: **205103**




## ASSEMBLY INSTRUCTIONS

### STEP 3

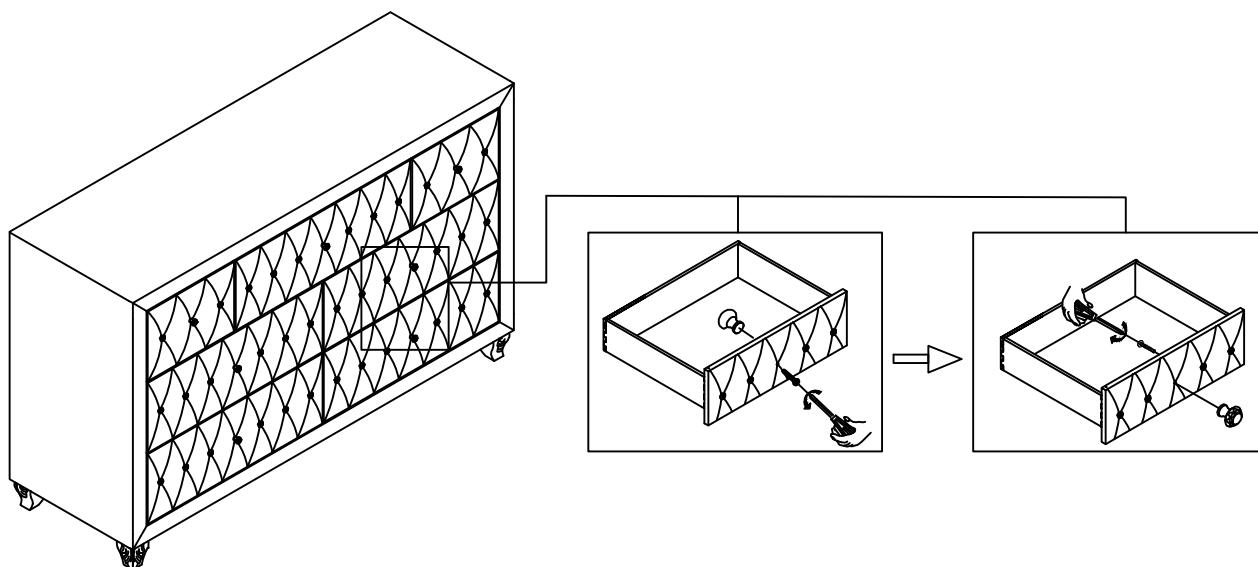

### STEP 4 COMPLETE

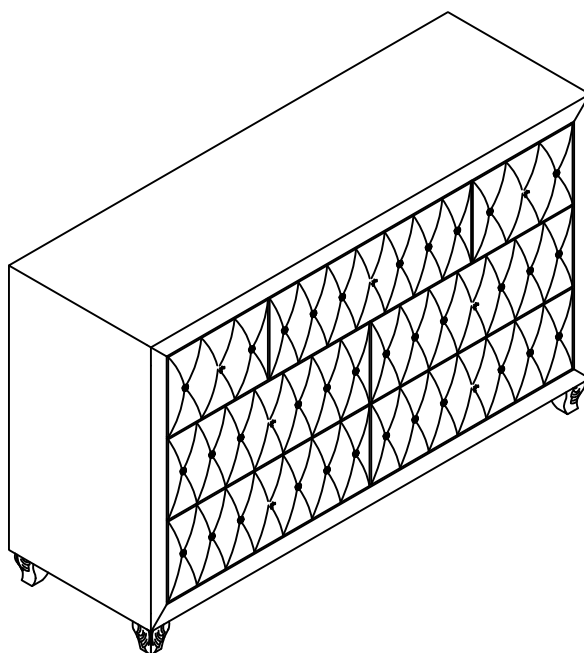

ITEM: **205103**



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

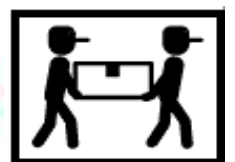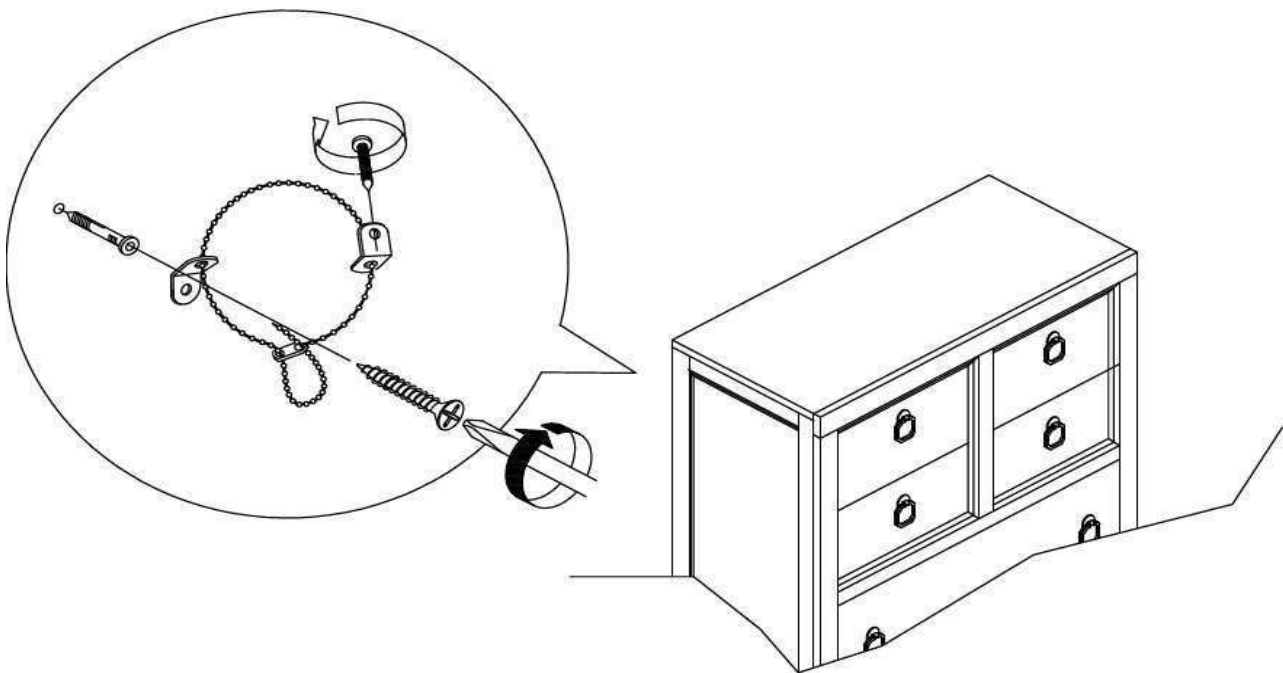


ITEM: 205103



**Inner Size of Drawer A : 11.50"W X 14.50"D X 6.00"H X 0.25"T**

**Inner Size of Drawer B : 25.25"W X 14.50"D X 6.00"H X 0.25"T**

**Inner Size of Drawer C: 25.75"W X 14.50"D X 6.00"H X 0.25"T**

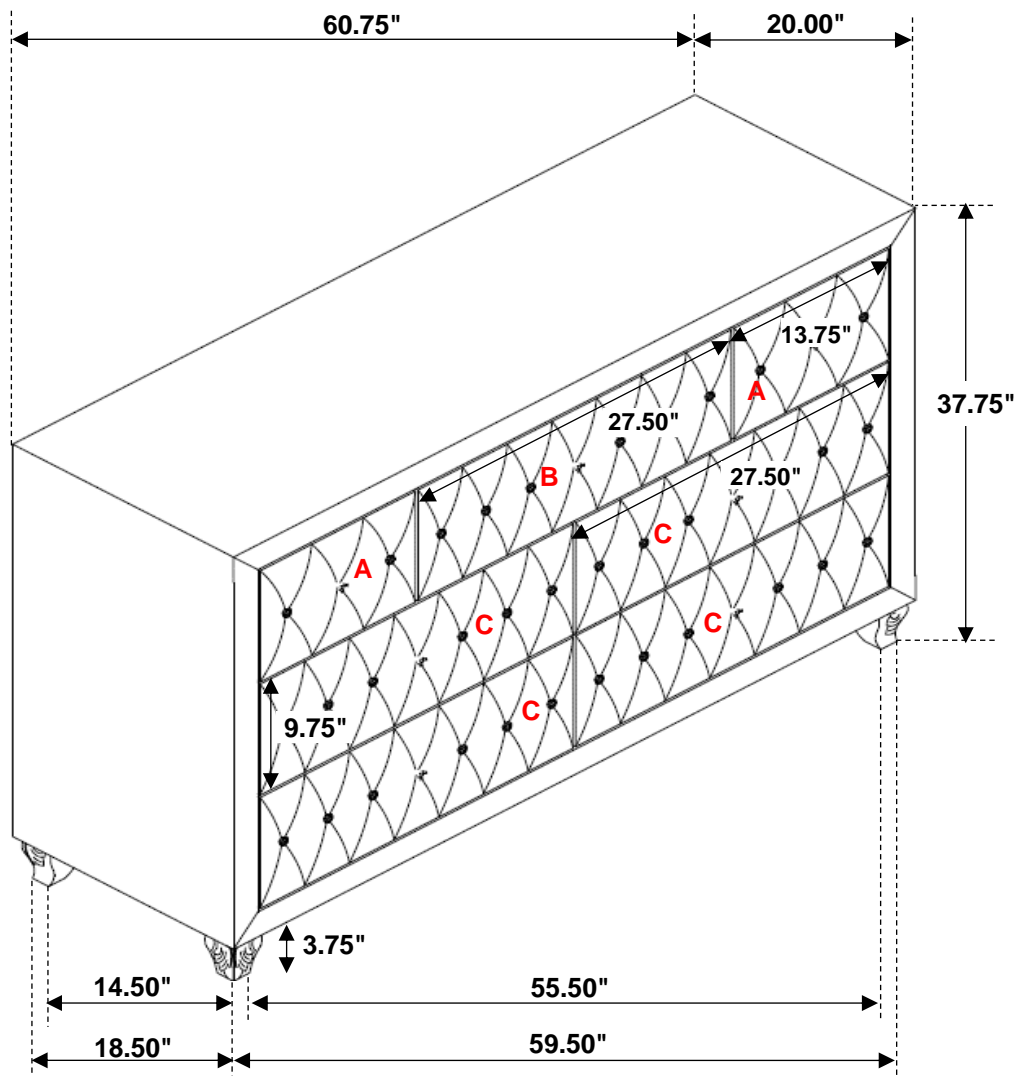

**Note: Dimension tolerance  $\pm 5\%$**