


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

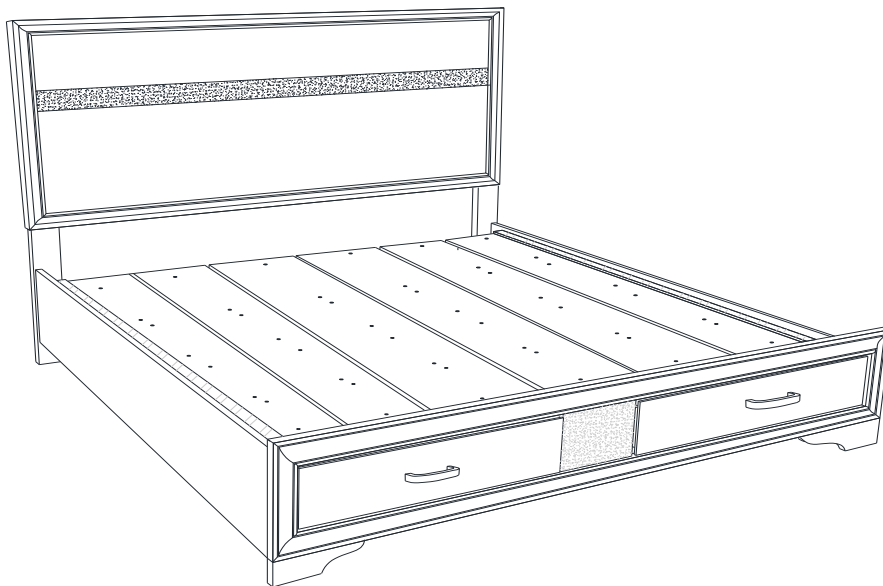

Fine Furniture for every stage of life

205111KW (B1-B3) California King Storage Bed

REVISION 0 : 08/08/2016
REVISION 1 : 09/04/2018
REVISION 2 : 12/07/2018
REVISION 3 : 10/25/2019
REVISION 4 : 12/14/2023

ITEM: 205111KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL




1PC

B FOOTBOARD



1PC

C RIGHT
HEADBOARD
LEG



1PC


D LEFT
HEADBOARD
LEG



1PC

B2 (BOX 2)

E BED RAIL




2PCS

F CONCEAL
PANEL A



4PCS

G CONCEAL
PANEL B




2PCS

H BED SLAT



3PCS

H2 BED SLAT
WITH STOPPER




2PCS

I BED SLAT
SUPPORT WITH
LEVELER



8PCS

J DRAWER BOTTOM
TRESTLE BAR



1PC

K DRAWER
SUPPORT RAIL



2PCS


L DRAWER
SUPPORT LEG
WITH LEVELER



1PC


B3 (BOX 3)

M DRAWER BOX




2PCS

HB 205111KW(B1)
FROM BOX 1
HEADBOARD
COMPLETE

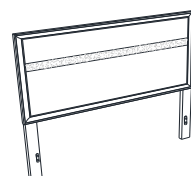

1PC

B 205111KW(B1)
FROM BOX 1
FOOTBOARD

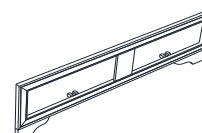

1PC

ITEM: 205111KW (B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 205111KW (B1)

1	BOLT (M6 x 30mm - BLK)		6PCS	3	FLAT WASHER (1/4" ID x 13mm - BLK)		6PCS
2	LOCK WASHER (1/4" - BLK)		6PCS	4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 205111KW (B2)


5	FLAT HEAD SCREW (M4 x 32mm - RBW)		14PCS	9	LOCK WASHER (1/4" - BLK)		2PCS
6	PAN HEAD SCREW (M3.5 x 20mm - BLK)		30PCS	10	FLAT WASHER (1/4" ID x 13mm - BLK)		2PCS
7	SHORT BOLT (M6 x 35mm - BLK)		2PCS	11	SMALL ALLEN WRENCH (M4 x 60mm - BLK)		1PC
8	LONG BOLT (M6 x 50mm - BLK)		9PCS	12	BIG ALLEN WRENCH (M5 x 68mm - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

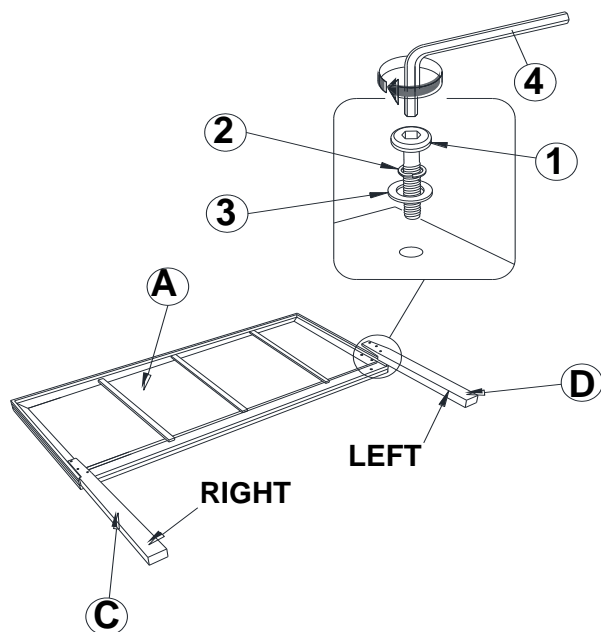


****BACK VIEW****

Note : Please take note of the marking sticker (L&R) on the leg.


STEP 2

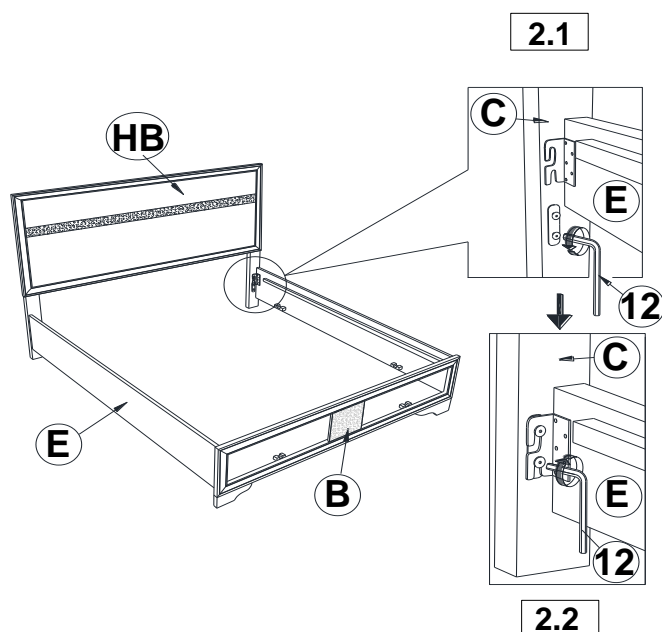

STEP 3

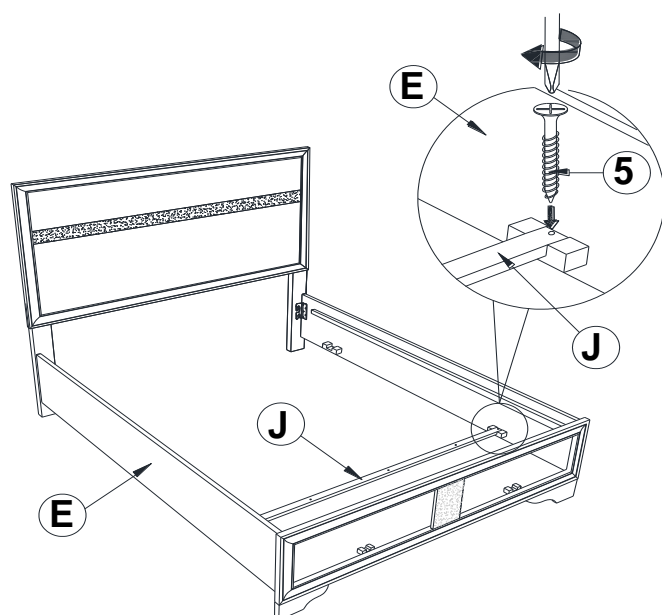


STEP 4

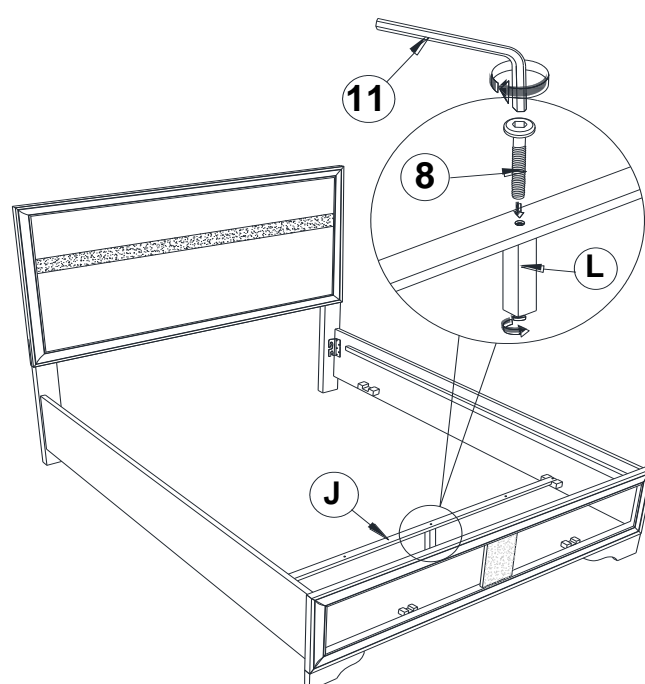


ASSEMBLY INSTRUCTIONS


STEP 5

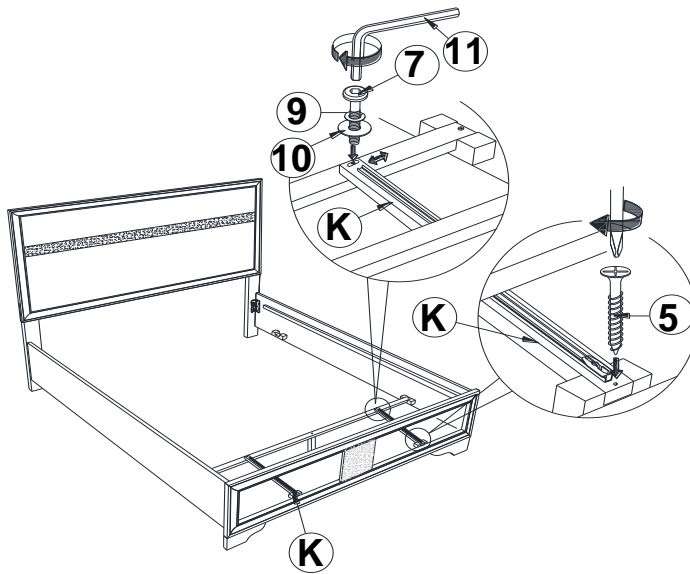


STEP 6

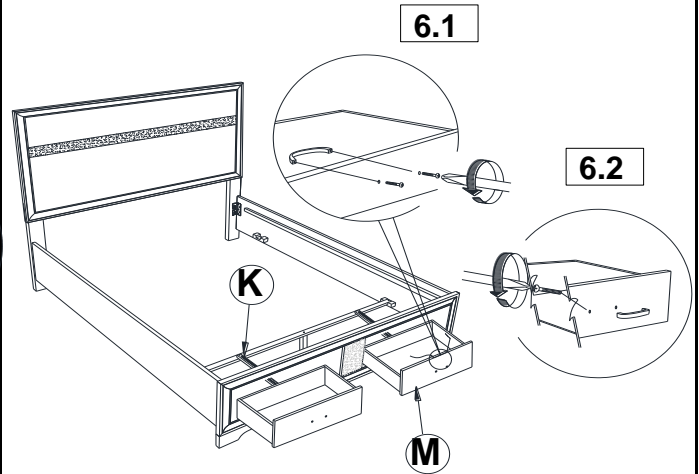

STEP 7


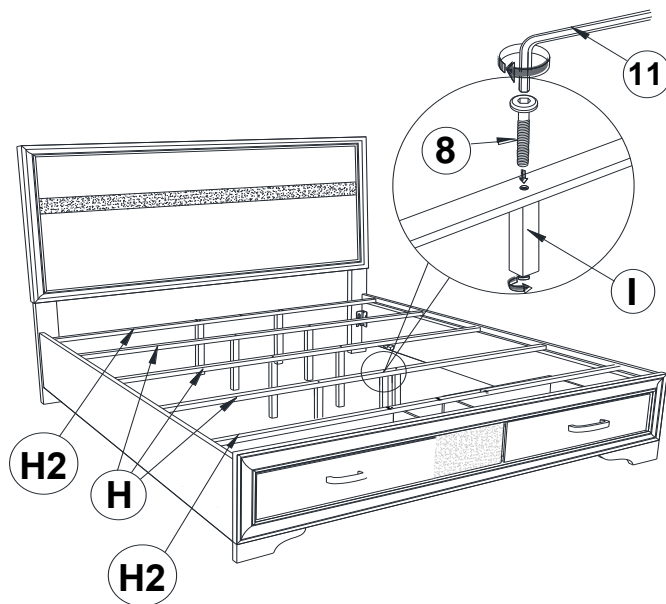


STEP 8

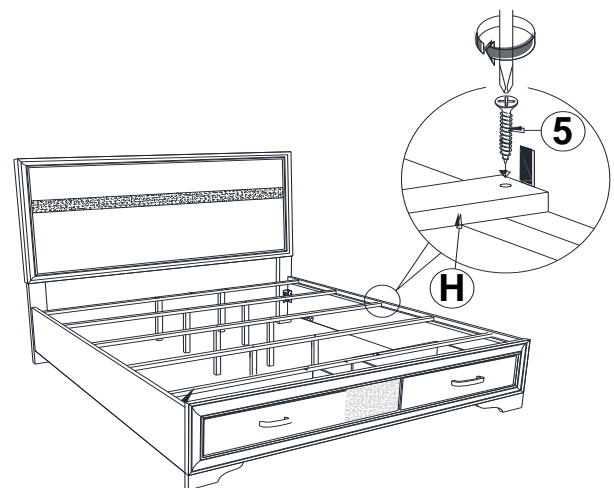


ASSEMBLY INSTRUCTIONS

STEP 9

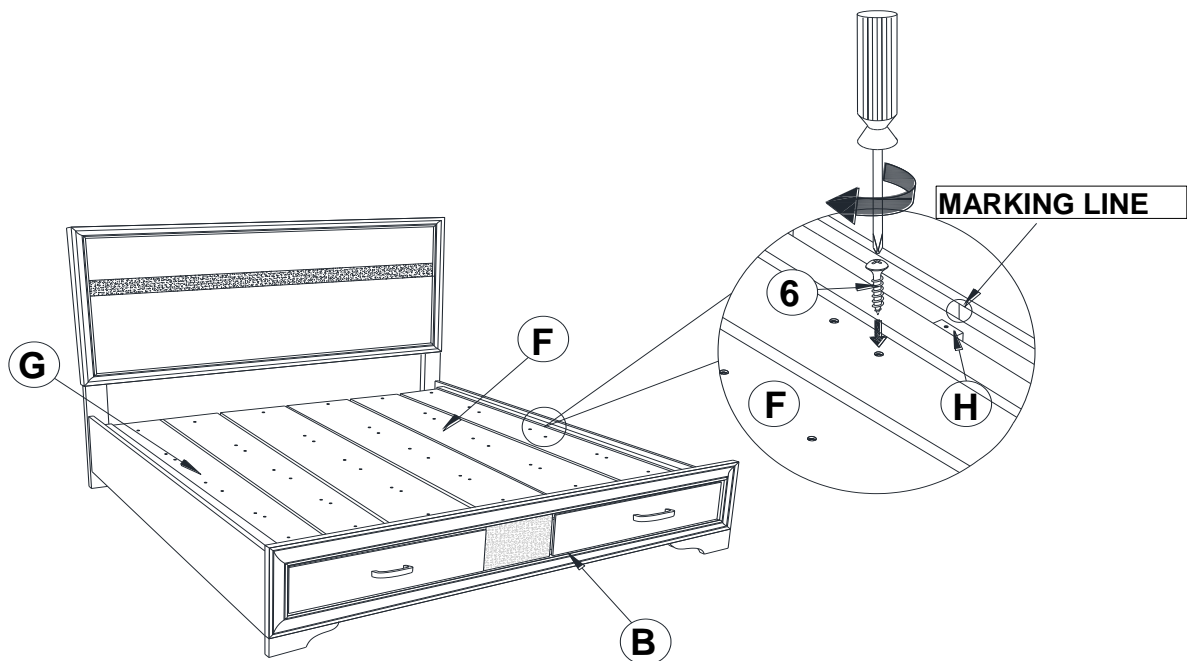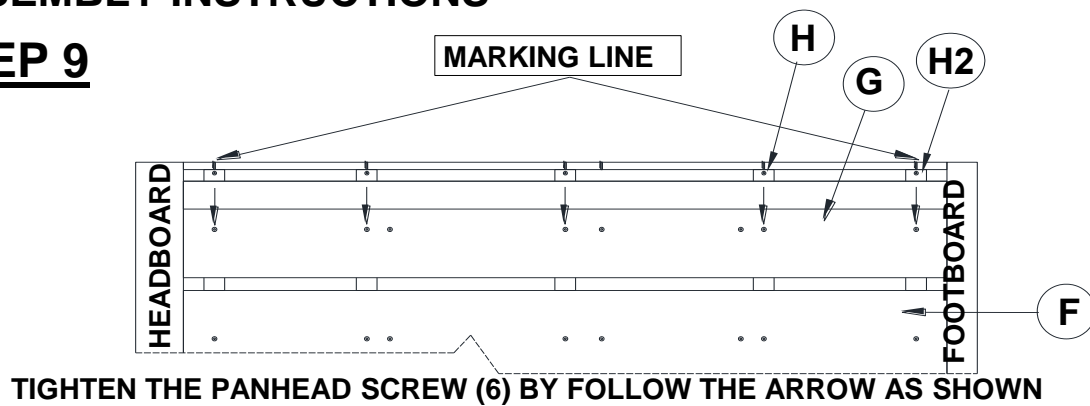

STEP 10 COMPLETE

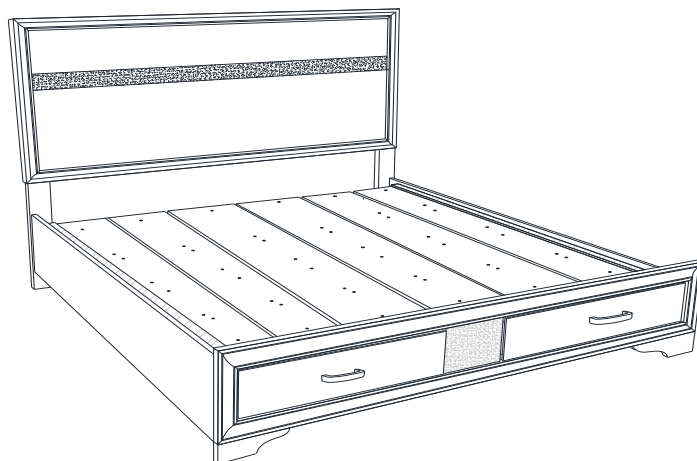


ITEM: **205111KW (B1-B3)**



Inner Size of Bed: 76.75"W X 86.00"D

Inner Size of Drawer : 4.00"W X 15.00"D X 23.25"H X 0.25"T

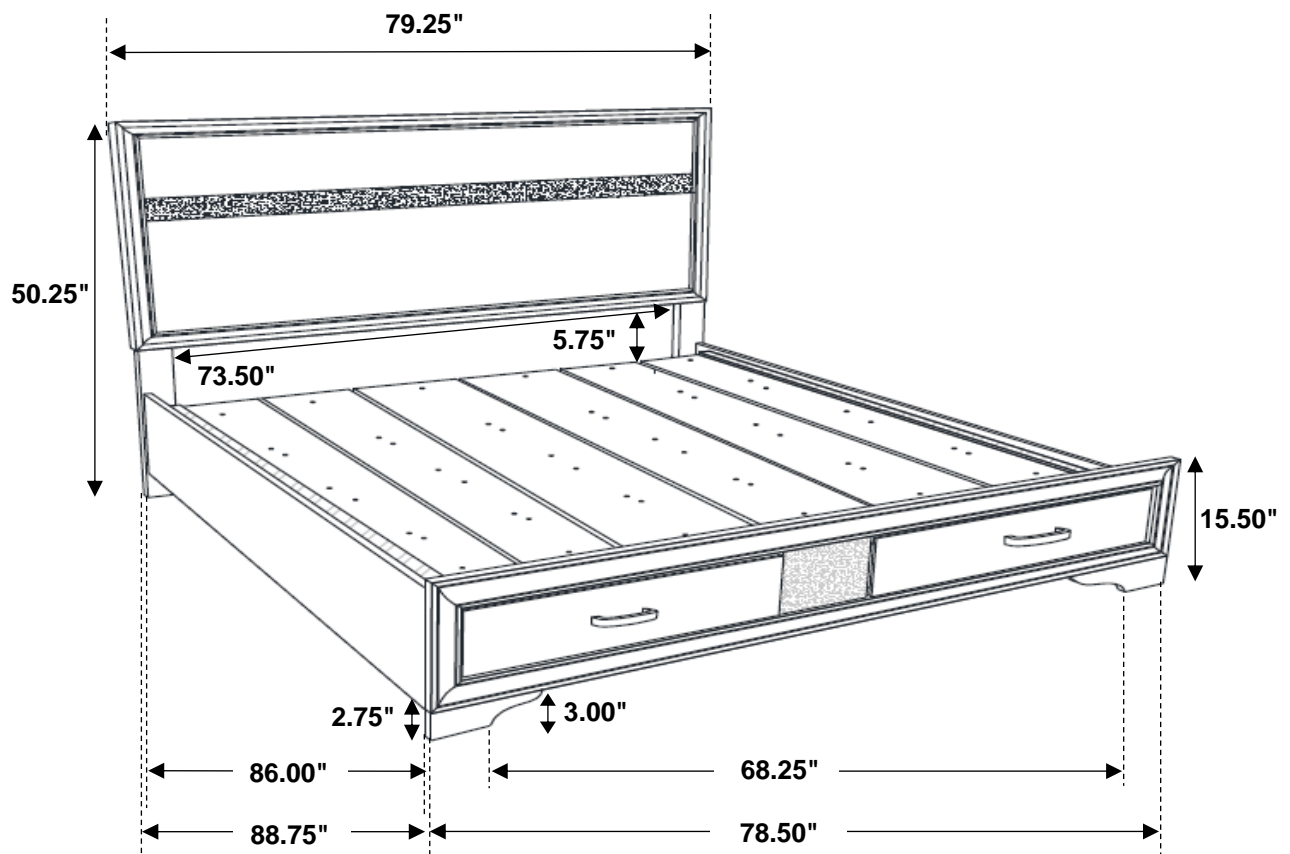

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

205112
Nightstand

REVISION 0 : 08/08/2016
REVISION 1 : 07/24/2017
REVISION 2 : 09/04/2018
REVISION 3 : 10/25/2019

ITEM:205112



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

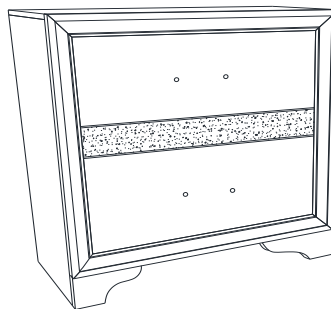


1PC



NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

STEP 1

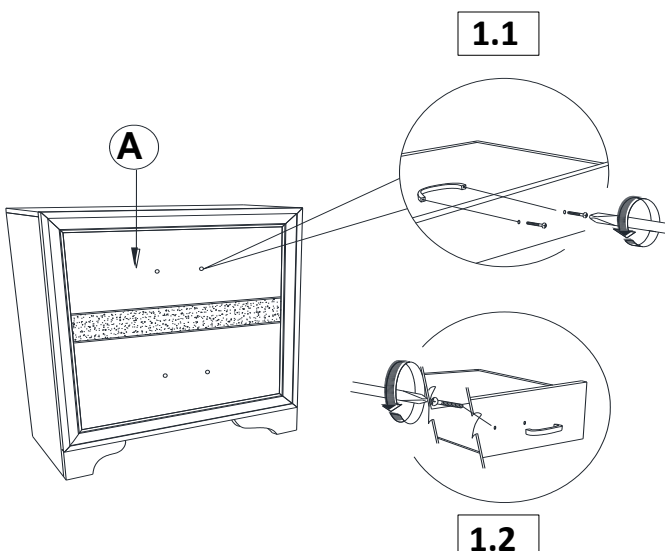

STEP 2 COMPLETE

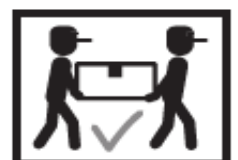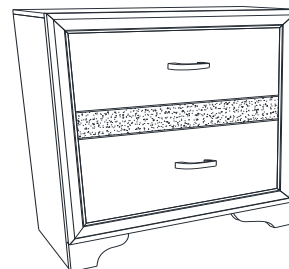


ITEM: **205112**



Inner Size of Drawer A: 18.00"W X 12.50"D X 4.00"H X 0.25"T

Inner Size of Drawer B: 18.00"W X 12.50"D X 1.25"H X 0.25"T

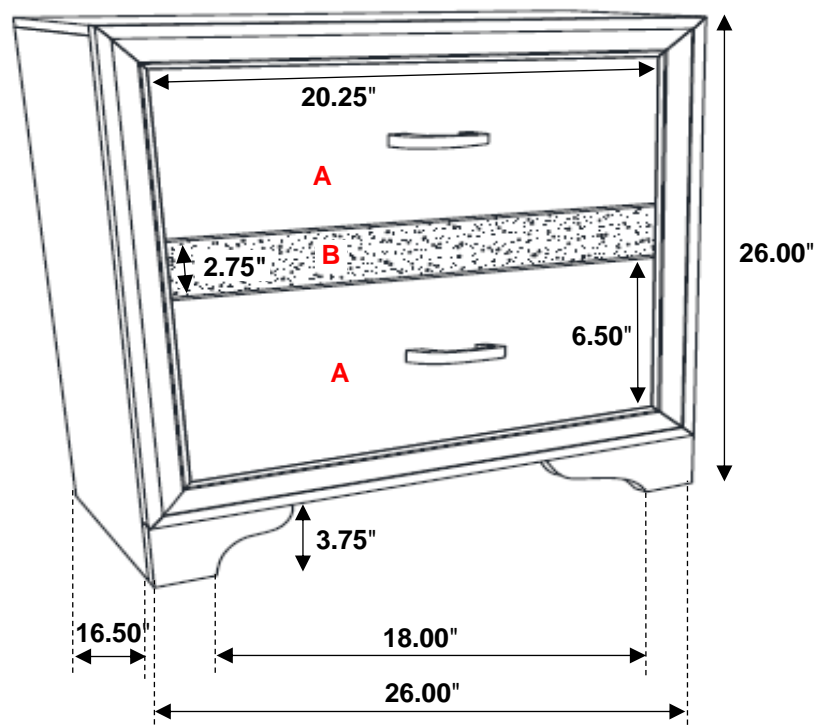

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

205113
Dresser

ITEM: **205113**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

DRESSER

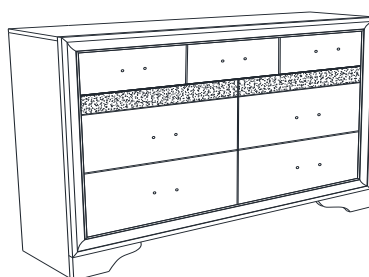


1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

STEP 1

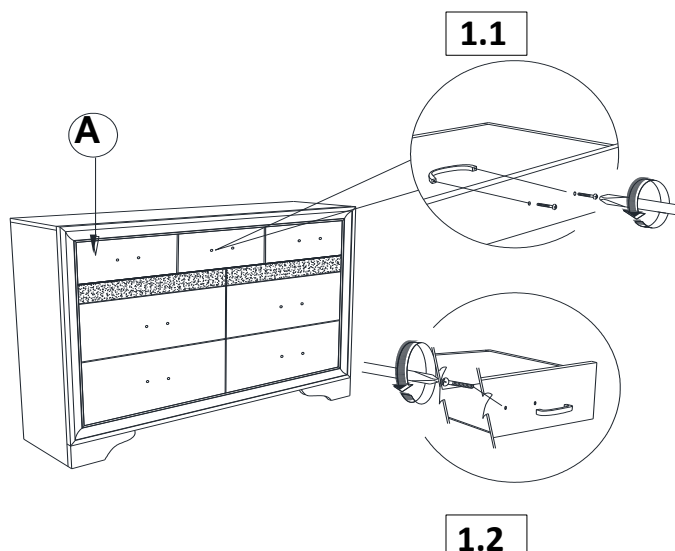

STEP 2 COMPLETE




ITEM: **205113**



Inner Size of Drawer A: 17.00"W X 12.50"D X 5.00"H X 0.25"T

Inner Size of Drawer B: 26.00"W X 12.50"D X 1.25"H X 0.25"T

Inner Size of Drawer C: 26.75" W X 12.50"D X 6.00"H X 0.25"T

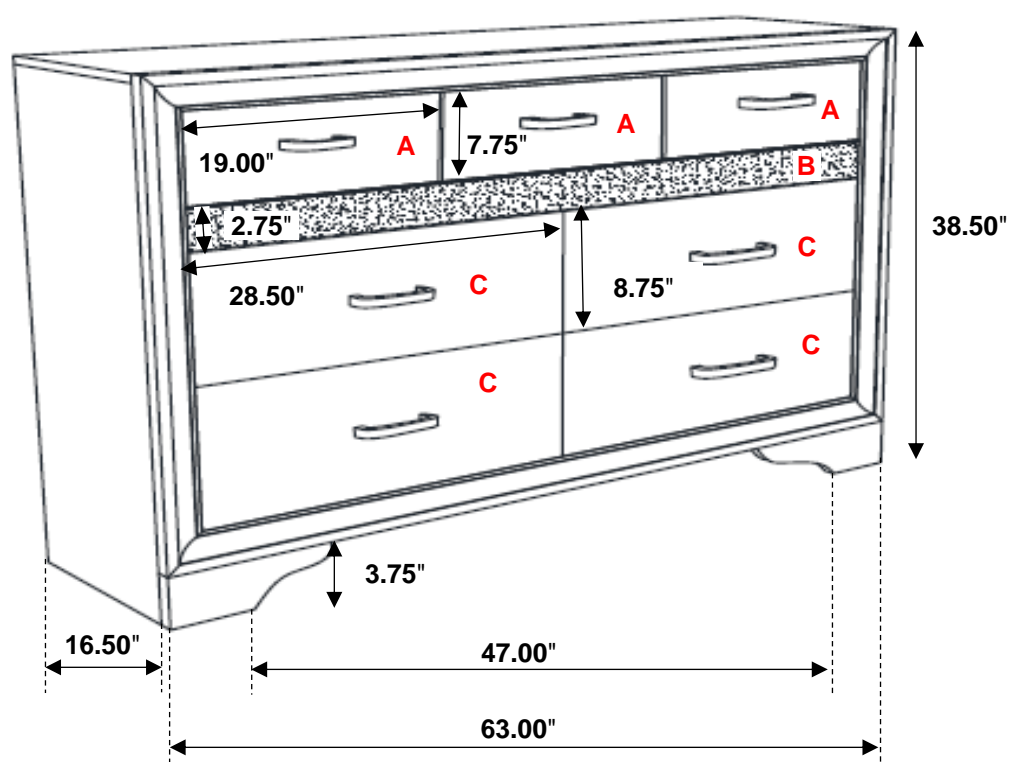

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

205114
Mirror

ITEM: **205114**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!




- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.








ASSEMBLY TIME

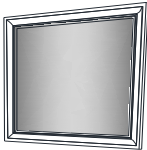10 MINUTES

PARTS IDENTIFICATION

A	MIRROR		1PC	C	MIRROR SUPPORT (PACKED WITH MIRROR)		2PCS
B	DRESSER FROM BOX ITEM #205113		1PC				

HARDWARE IDENTIFICATION

1	SHORT BOLT (M6 x 35mm - BLK)		4PCS	4	FLAT WASHER (1/4"ID x 19mm - BLK)		8PCS
2	LONG BOLT (M6 x 40mm - BLK)		4PCS	5	ALLEN WRENCH (M4 x 60MM - BLK)		1PC
3	LOCK WASHER (1/4" - BLK)		8PCS				


ITEM: **205114**



ASSEMBLY INSTRUCTIONS


STEP 1

ARROW MARKING FACE UPWARD

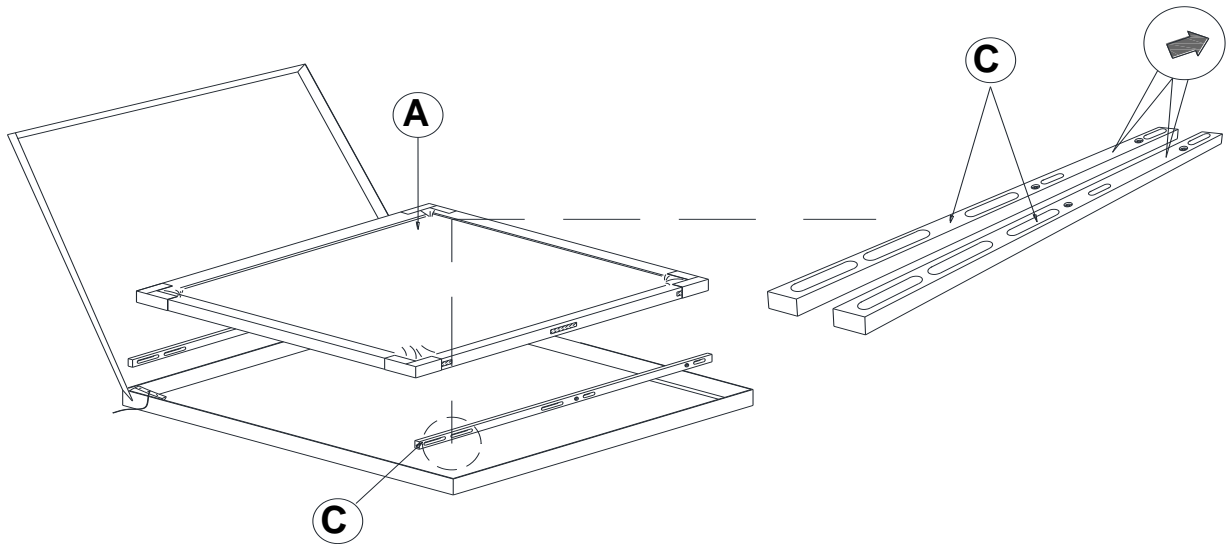

STEP 2

ARROW MARKING FACE UPWARD

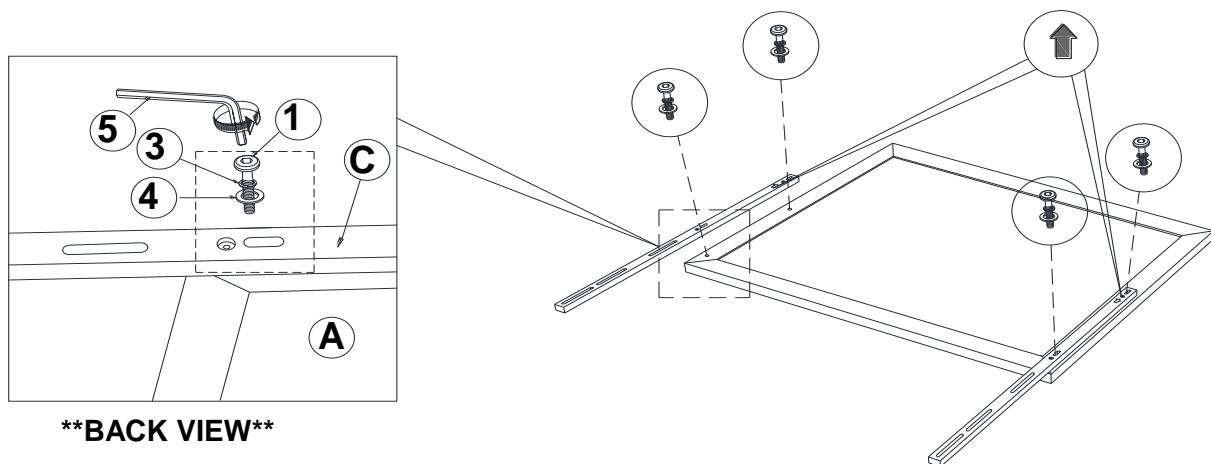


ITEM: **205114**



ASSEMBLY INSTRUCTIONS


STEP 3

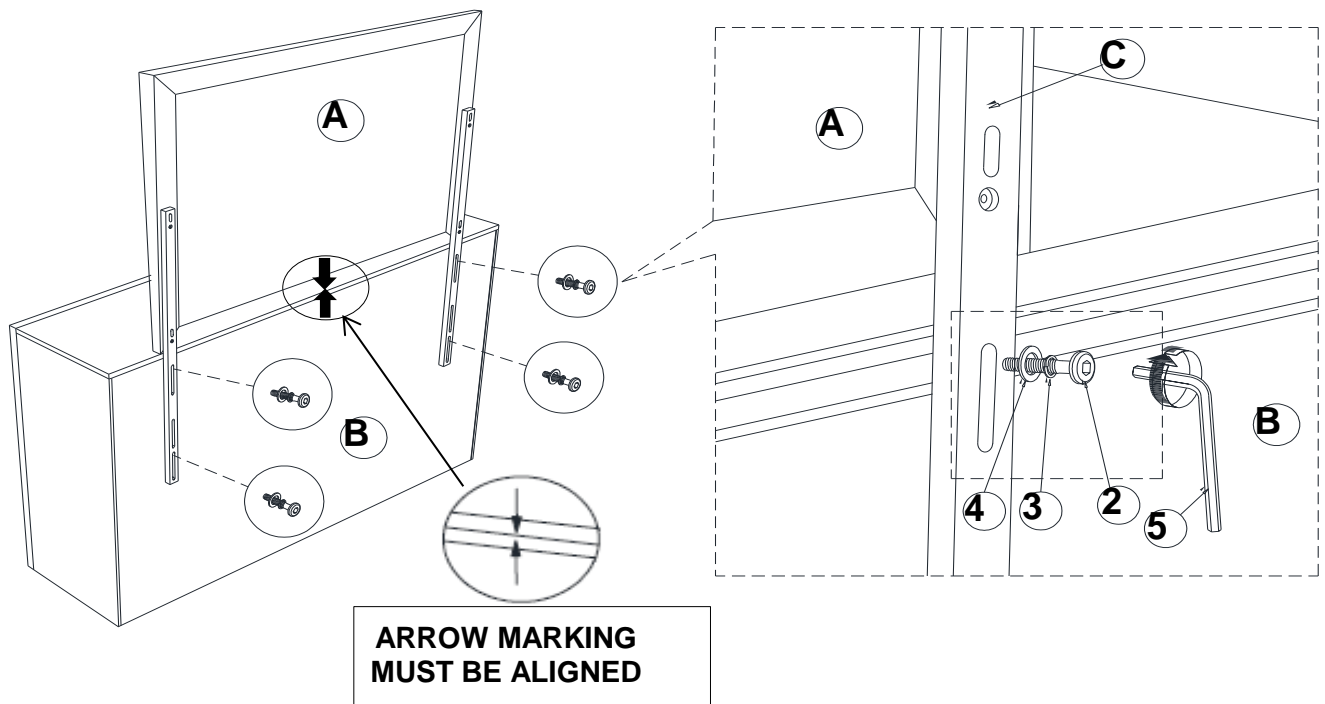

STEP 4 COMPLETE



ITEM: **205114**

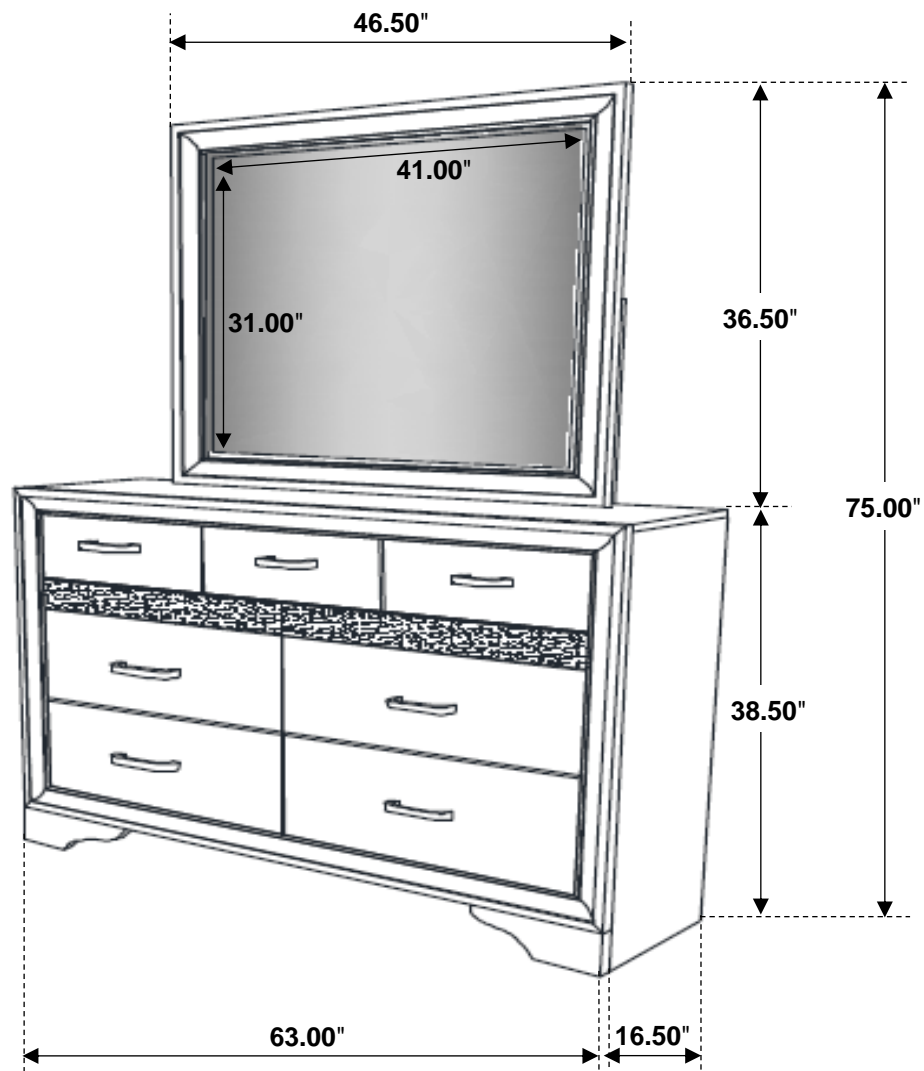

Note: Dimension tolerance $\pm 5\%$