



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

205111T (B1-B3)

Twin Storage Bed

ITEM: 205111T (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL



1PC

B FOOTBOARD



1PC

C RIGHT HEADBOARD LEG



1PC


D LEFT HEADBOARD LEG



1PC

B2 (BOX 2)

E BED RAIL



2PCS

F CONCEAL PANEL




3PCS

G BED SLAT




3PCS

G2 BED SLAT WITH STOPPER



2PCS

H DRAWER BOTTOM TRESTLE BAR



1PC

I DRAWER SUPPORT RAIL



1PC


J DRAWER SUPPORT LEG WITH LEVELER



1PC

B3 (BOX 3)

K DRAWER BOX




1PC

HB 205111T(B1) FROM BOX 1 HEADBOARD COMPLETE



1PC

B 205111T(B1) FROM BOX 1 FOOTBOARD

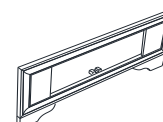

1PC

ITEM: 205111T (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 205111T (B1)

1	BOLT (M6 x 30mm - BLK)		6PCS	3	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
2	LOCK WASHER (1/4" - BLK)		6PCS	4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 205111T (B2)


5	FLAT HEAD SCREW (M4 x 32mm - RBW)		13PCS	9	LOCK WASHER (1/4" - BLK)		1PC
6	PAN HEAD SCREW (M3.5 x 20mm - BLK)		15PCS	10	FLAT WASHER (1/4"ID x 13mm - BLK)		1PC
7	SHORT BOLT (M6 x 35mm - BLK)		1PC	11	SMALL ALLEN WRENCH (M4 x 60mm - BLK)		1PC
8	LONG BOLT (M6 x 50mm - BLK)		1PC	12	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

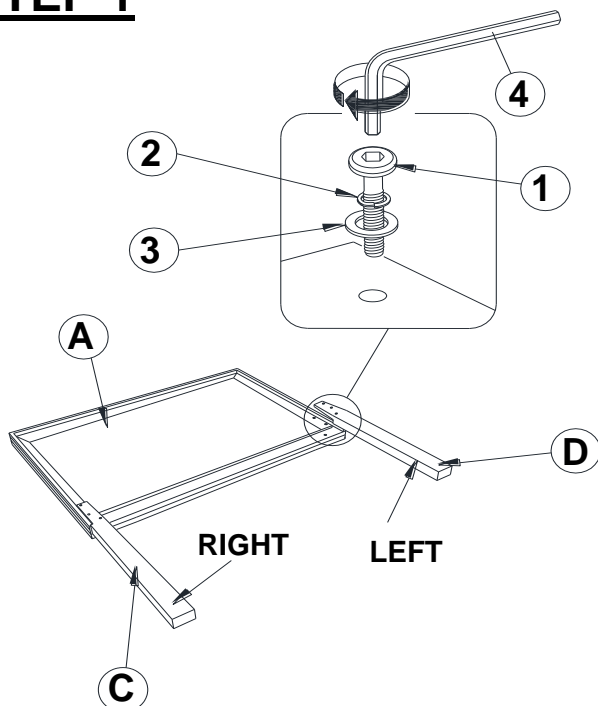


****BACK VIEW****

Note : Please take note of the marking sticker (L&R) on the leg.


STEP 2

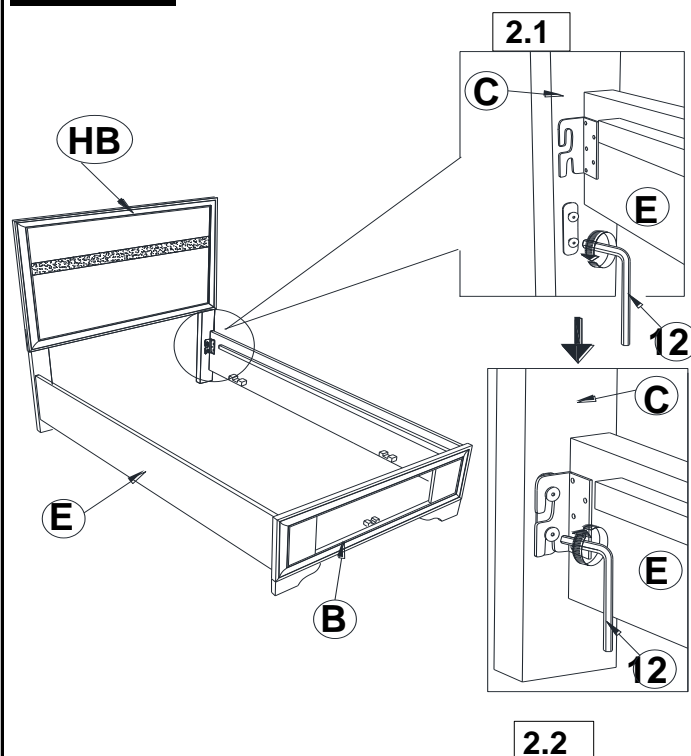

STEP 3

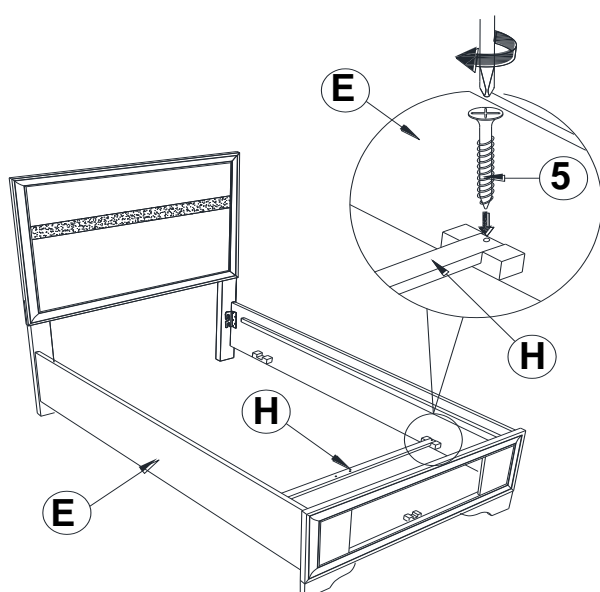


STEP 4

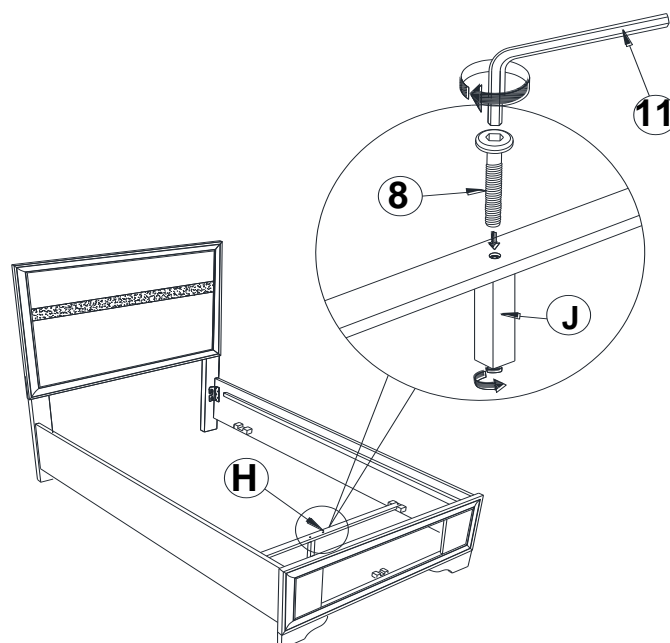


ASSEMBLY INSTRUCTIONS


STEP 5

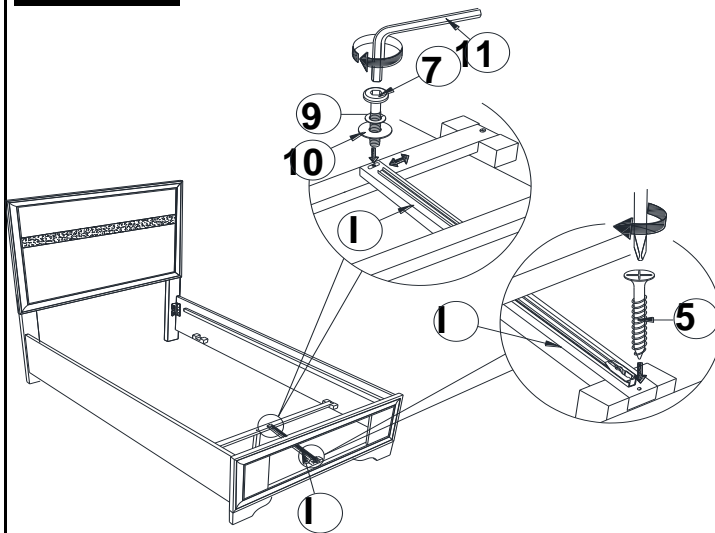

STEP 6

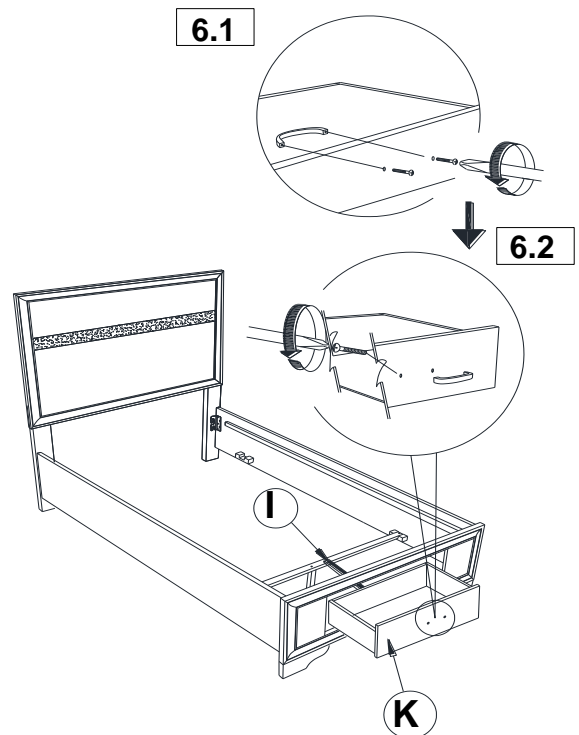


STEP 7

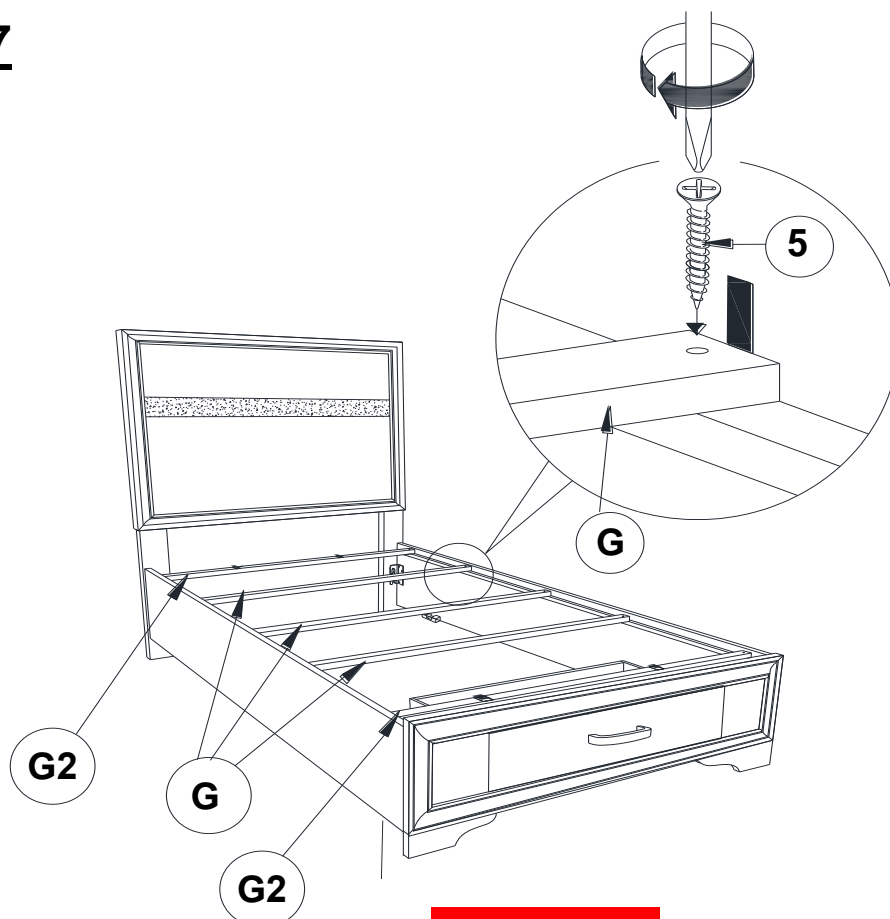


ASSEMBLY INSTRUCTIONS



STEP 8

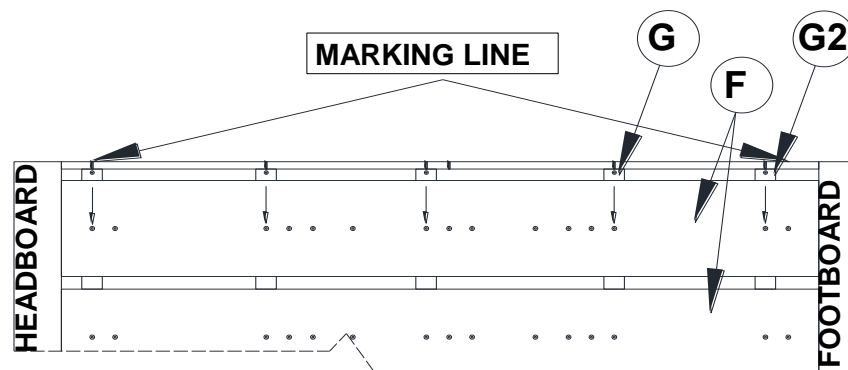

TIGHTEN THE PANHEAD SCREW (6) BY FOLLOW THE ARROW AS SHOWN

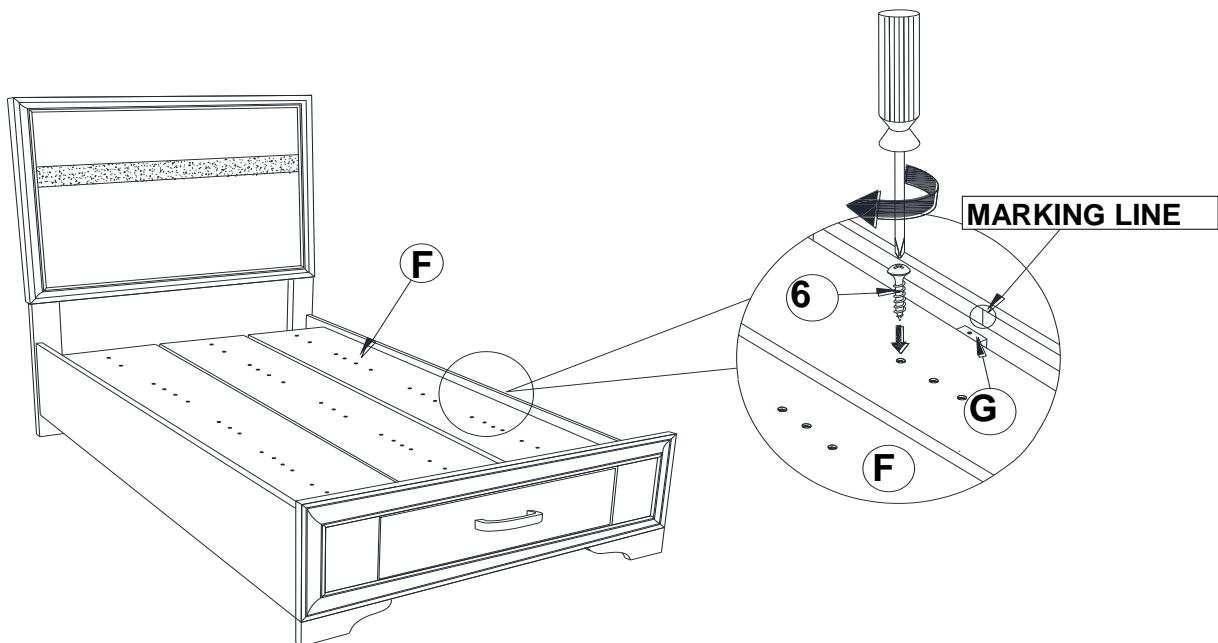

STEP 9 COMPLETE

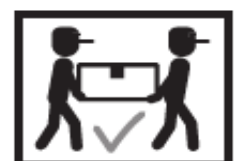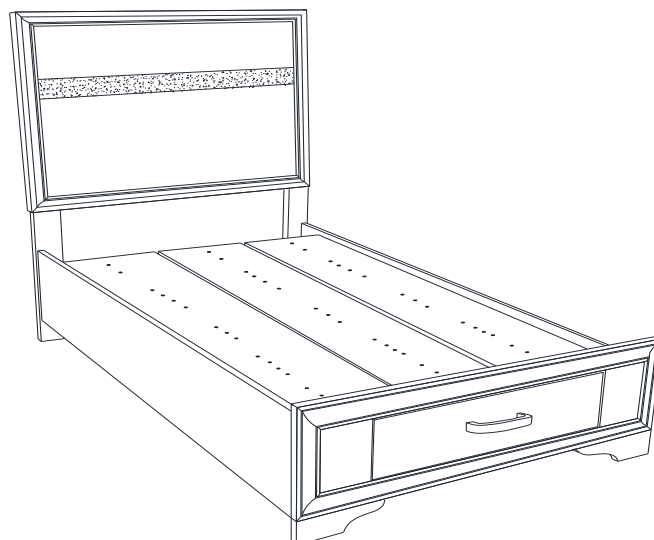


ITEM: 205111T (B1-B3)



Inner Size: 54.50"W X 76.00"D

Inner Size of Drawer: 20.00"W X 15.00"D X 4.00"H X 0.25"T

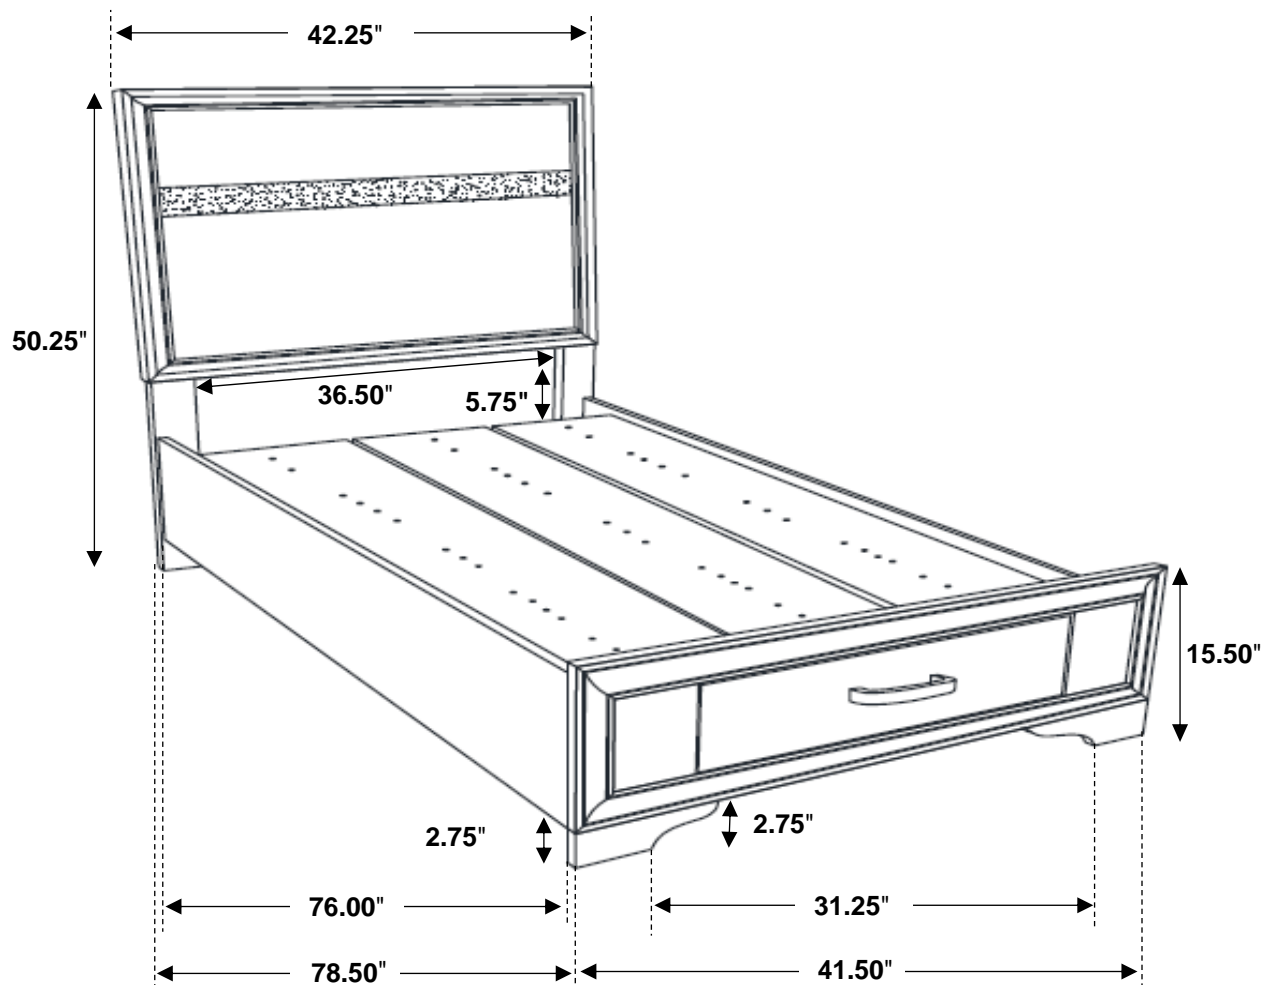

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

205112
Nightstand

REVISION 0 : 08/08/2016
REVISION 1 : 07/24/2017
REVISION 2 : 09/04/2018
REVISION 3 : 10/25/2019

ITEM: **205112**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

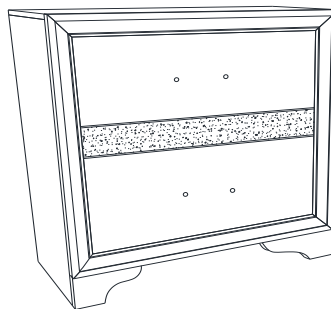


1PC



NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

STEP 1

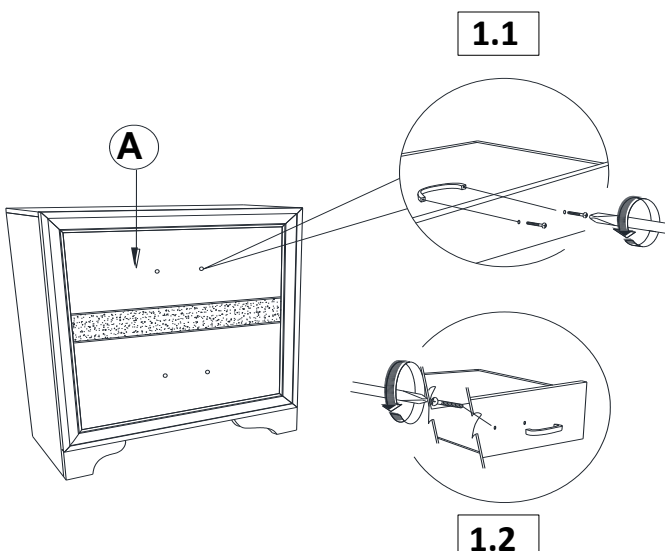

STEP 2 **COMPLETE**

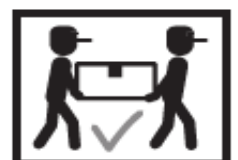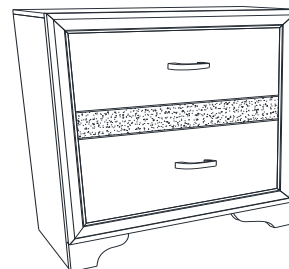


ITEM: **205112**



Inner Size of Drawer A: 18.00"W X 12.50"D X 4.00"H X 0.25"T

Inner Size of Drawer B: 18.00"W X 12.50"D X 1.25"H X 0.25"T

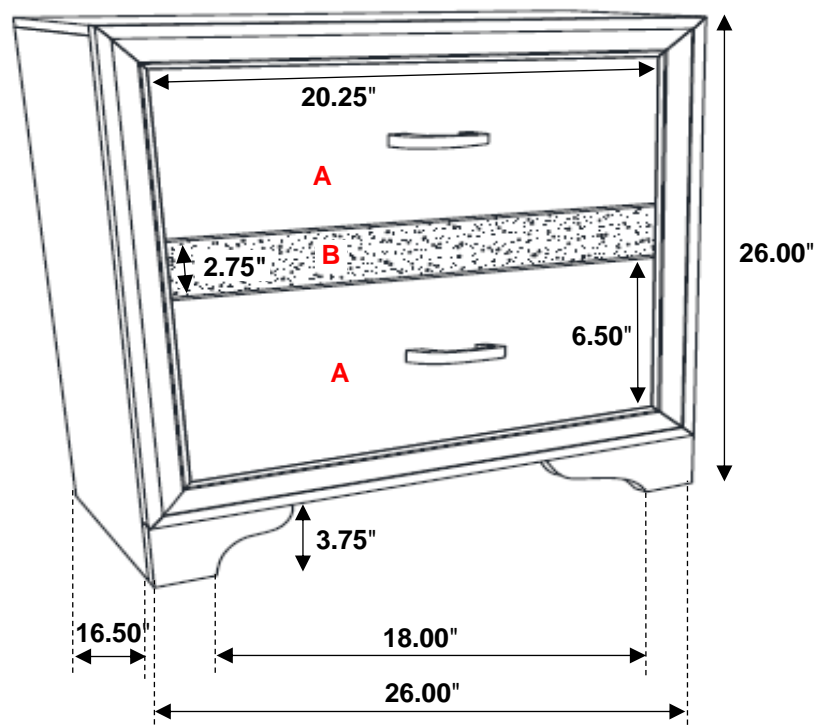

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

205113
Dresser

ITEM: **205113**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

DRESSER

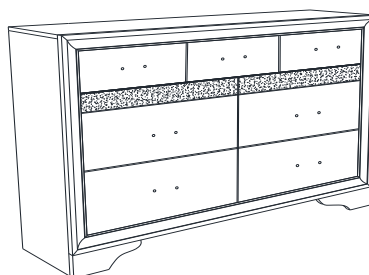


1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

STEP 1

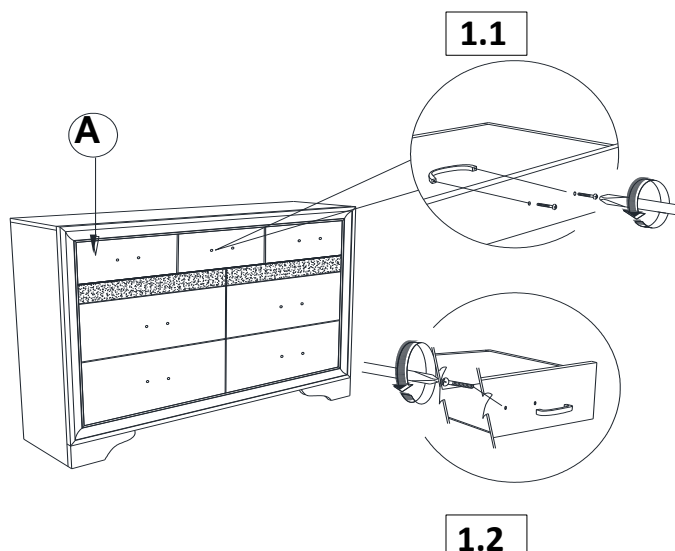

STEP 2 COMPLETE




ITEM: **205113**



Inner Size of Drawer A: 17.00"W X 12.50"D X 5.00"H X 0.25"T

Inner Size of Drawer B: 26.00"W X 12.50"D X 1.25"H X 0.25"T

Inner Size of Drawer C: 26.75" W X 12.50"D X 6.00"H X 0.25"T

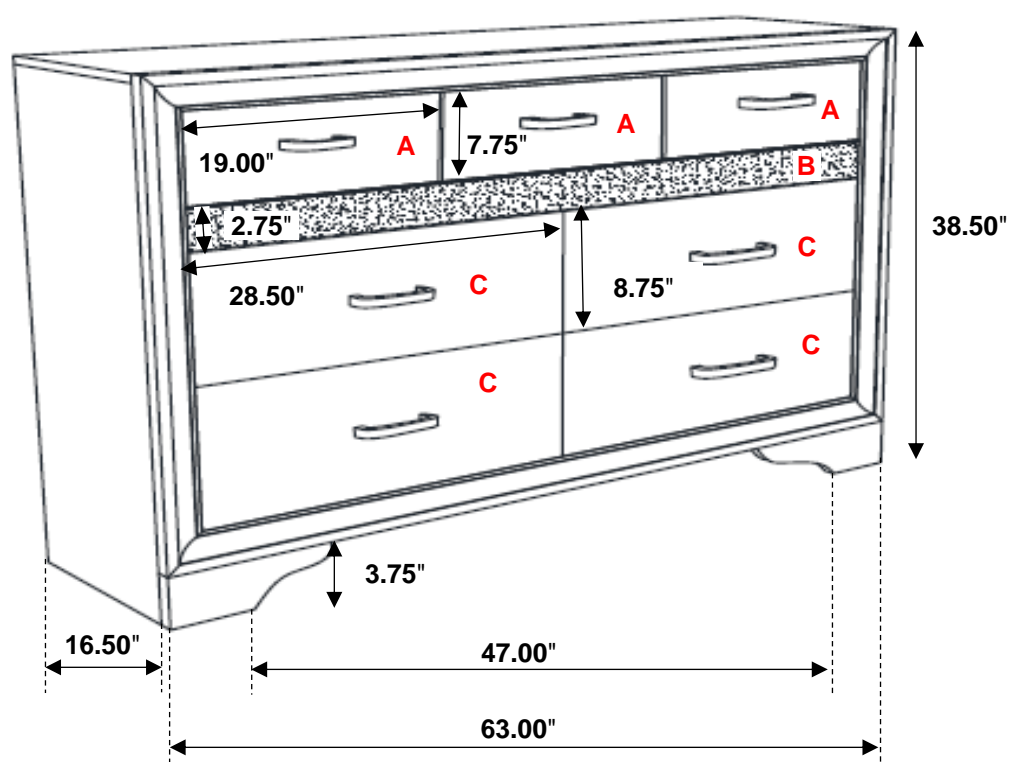

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

205114
Mirror

ITEM: 205114



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION


A MIRROR

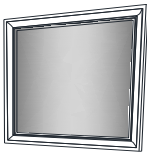

1PC

C

MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

B DRESSER
FROM BOX ITEM
#205113



1PC

HARDWARE IDENTIFICATION

1 SHORT BOLT
(M6 x 35mm - BLK)



4PCS

4

FLAT WASHER
(1/4"ID x 19mm - BLK)



8PCS

2 LONG BOLT
(M6 x 40mm - BLK)



4PCS

5

ALLEN WRENCH
(M4 x 60MM - BLK)



1PC

3 LOCK WASHER
(1/4" - BLK)



8PCS


ITEM: **205114**



ASSEMBLY INSTRUCTIONS


STEP 1

ARROW MARKING FACE UPWARD

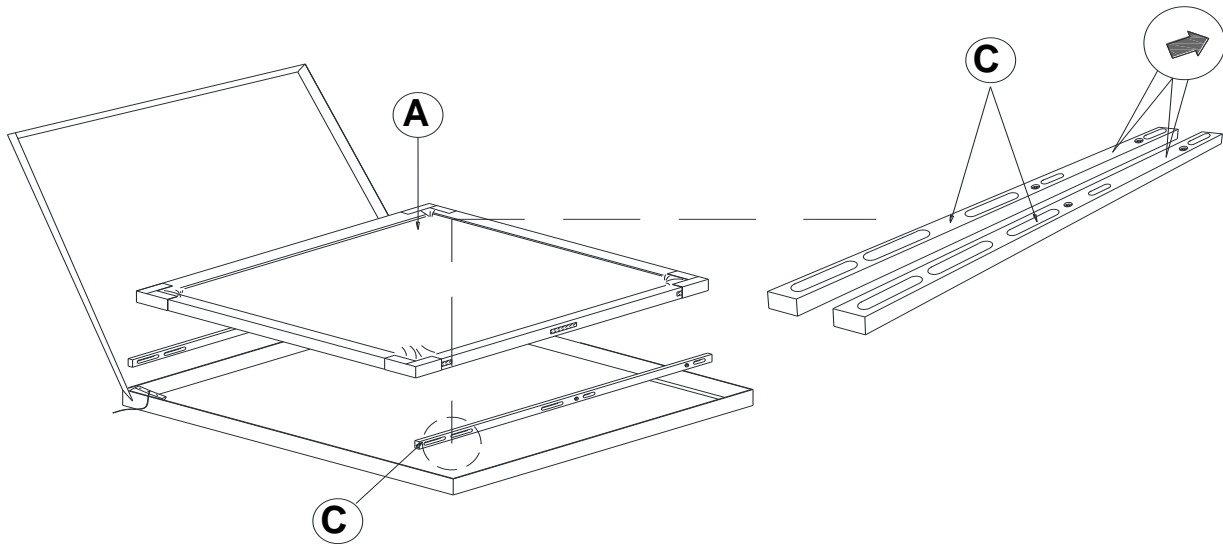

STEP 2

ARROW MARKING FACE UPWARD

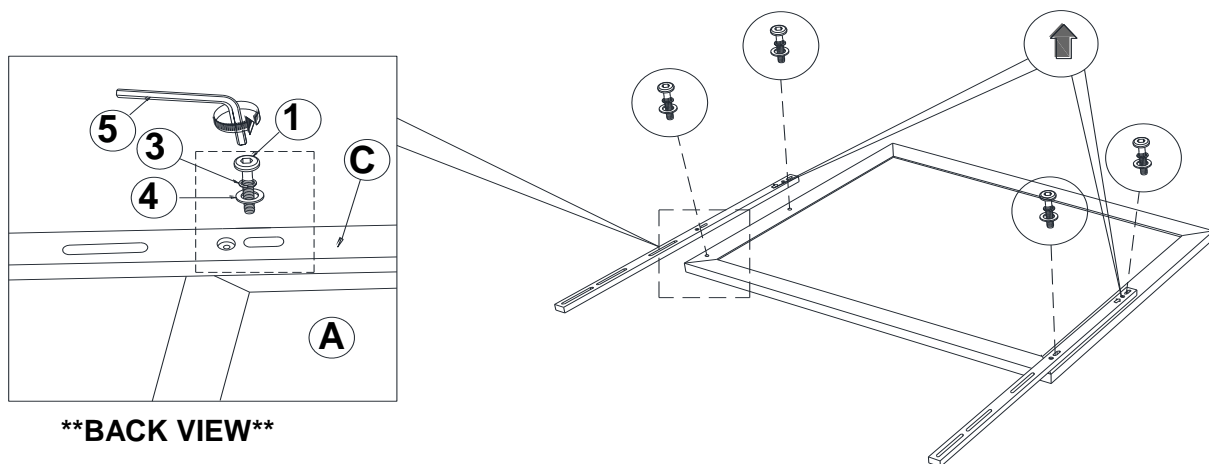


ITEM: **205114**




ASSEMBLY INSTRUCTIONS


STEP 3

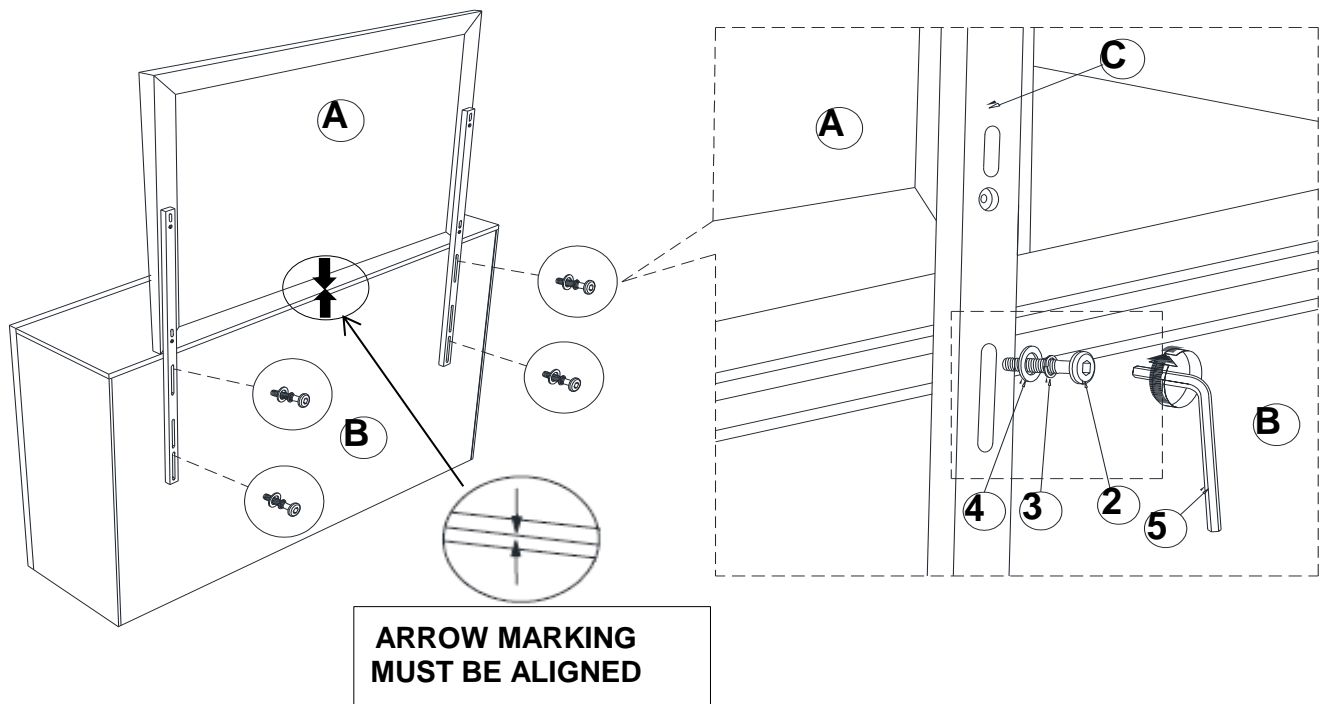

STEP 4 COMPLETE

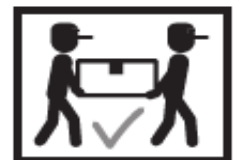

ITEM: **205114**

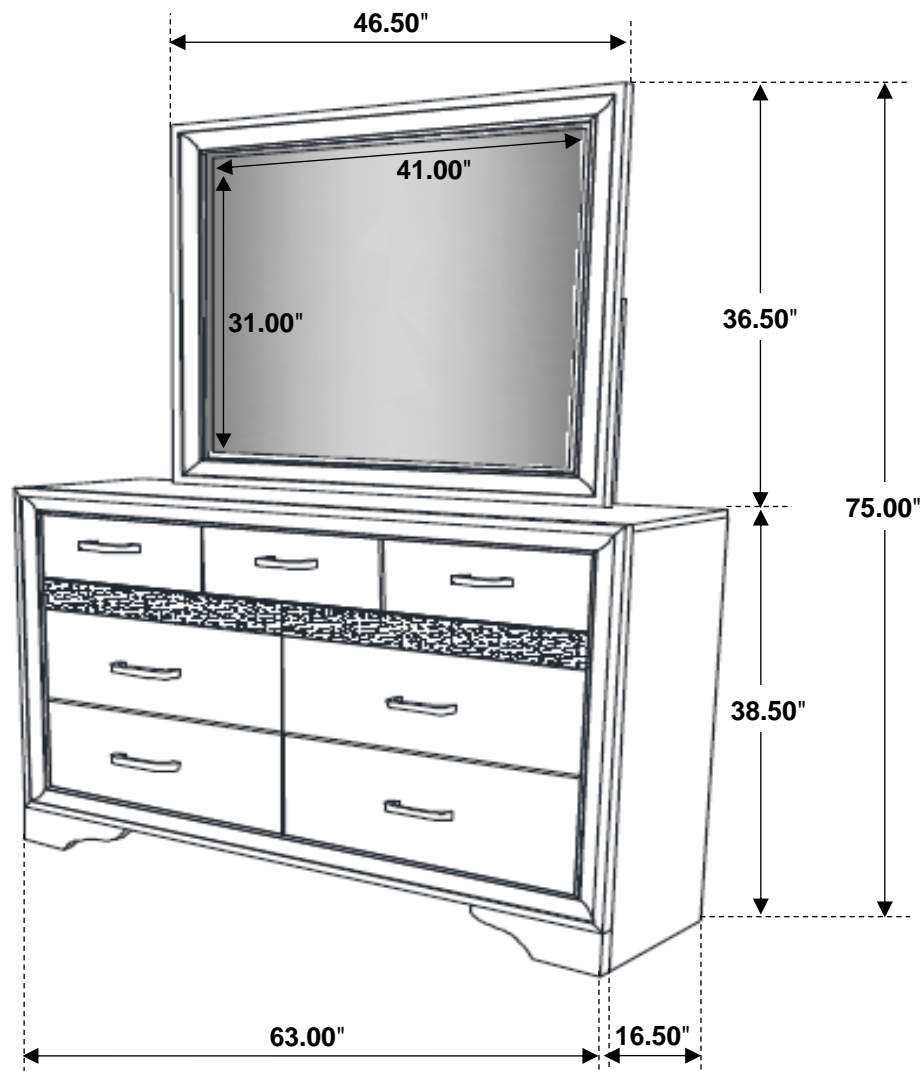

Note: Dimension tolerance $\pm 5\%$