



Fine Furniture for every stage of life

205330KE(B1-B3) Eastern King Storage Bed

REVISION 0 : 11/05/2019 REVISION 1 : 08/07/2020 REVISION 2 : 09/04/2023

COASTER'

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

Α	HEADBOARD PANEL		1PC		
В	LEFT HEADBOARD LEG		1PC		
С	RIGHT HEADBOARD LEG	1 A	1PC		
D	HEADBOARD BOTTOM RAIL		1PC		
B2 (BOX 2)					
E	STORAGE FOOTBOARD		1PC		
F	DRAWER SUPPORT LEG WITH LEVELER		2PCS		
G	ROLL SLAT (10PCS)		1SET		
B3 (BOX 3)					
Н	LEFT BED RAIL		1PC		
1	RIGHT BED RAIL		1PC		
J	CENTER RAIL		1PC		
K	CENTER RAIL SUPPORT WITH LEVELER		2PCS		
L	CONCEAL PANEL		5PCS		
НВ	205330KE (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC		
FB	205330KE (B2) FROM BOX 2 STORAGE FOOTBOARD COMPLETE		1PC		

PAGE 2 OF 9



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 205330KE(B3)


1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	SHORT BOLT (M6 x 50mm - BLK)	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	16PCS
3	LONG BOLT (M6 x 70mm - BLK)	9.2000m	4PCS
4	WOOD DOWEL (M8 x 30mm)		4PCS
5	SHORT PAN HEAD SCREW (M4 x 12mm - BLK)	()	30PCS
6	LONG PAN HEAD SCREW (M4 x 16mm - RBW)		6PCS
7	SHORT FLAT HEAD SCREW (M4 x 20mm - BLK)	Prince	8PCS
8	LONG FLAT HEAD SCREW (#8 x 1 1/8" - BLK)	& Tutture	20PCS
9	L BRACKET (BKT-4HC-01(2.0mm) - RBW)		2PCS
10	HEX NUT (M6 - RBW)	(2PCS
11	U BRACKET (26 x 63 x 70mm - RBW)		2PCS
12	WRENCH (2 x 24.5 x 85 - RBW)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ASSEMBLY INSTRUCTIONS STEP 1

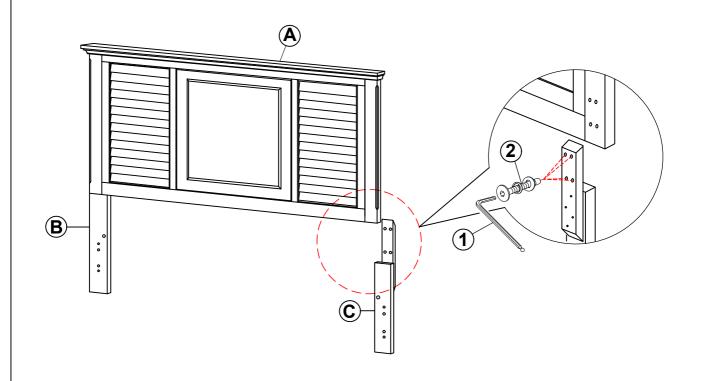


STEP 2

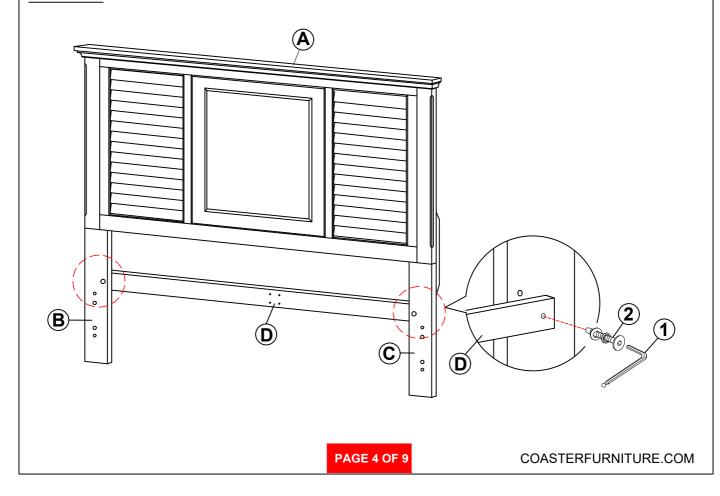





ASSEMBLY INSTRUCTIONS STEP 3

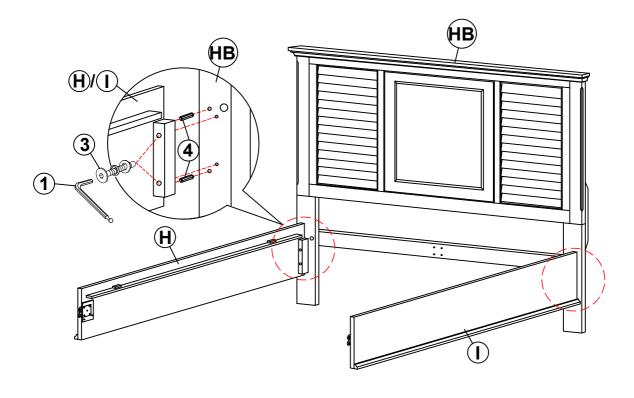



STEP 4

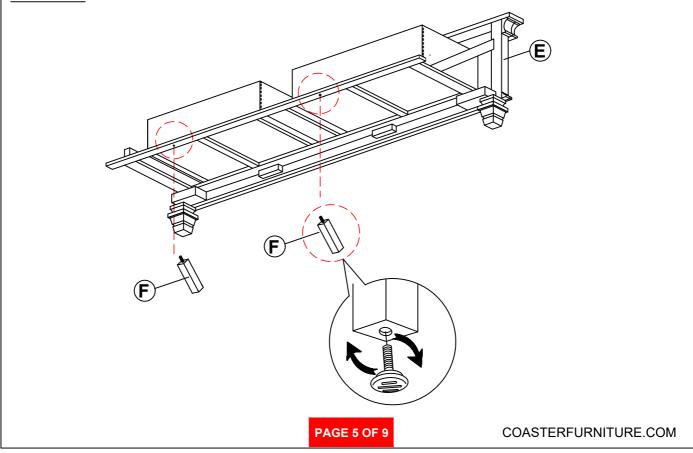

ASSEMBLY INSTRUCTIONS STEP 5 HB FB

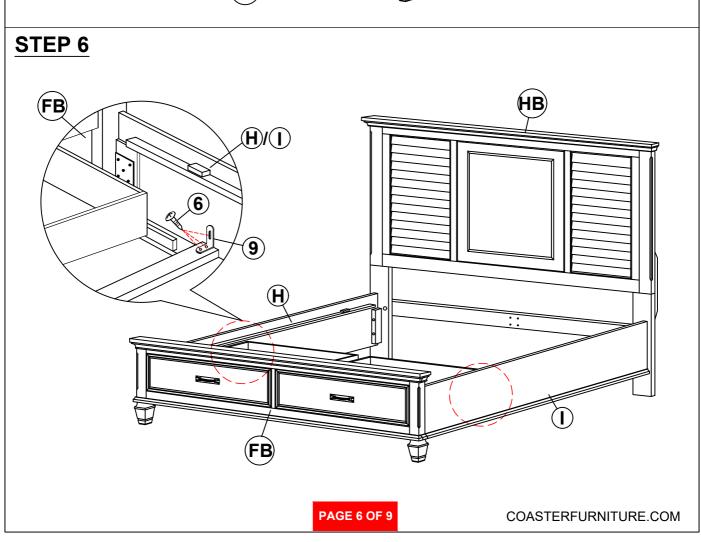


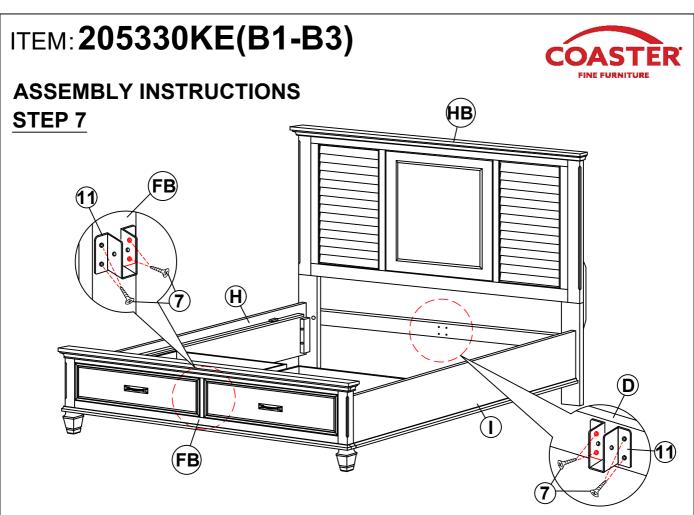

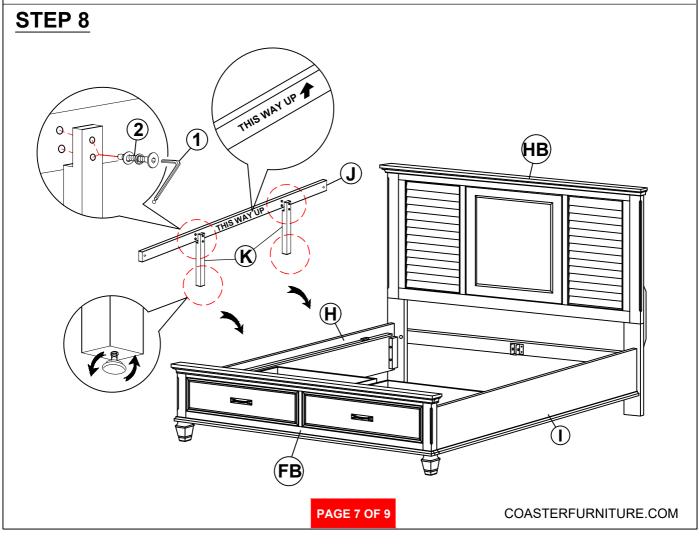




ASSEMBLY INSTRUCTIONS STEP 9

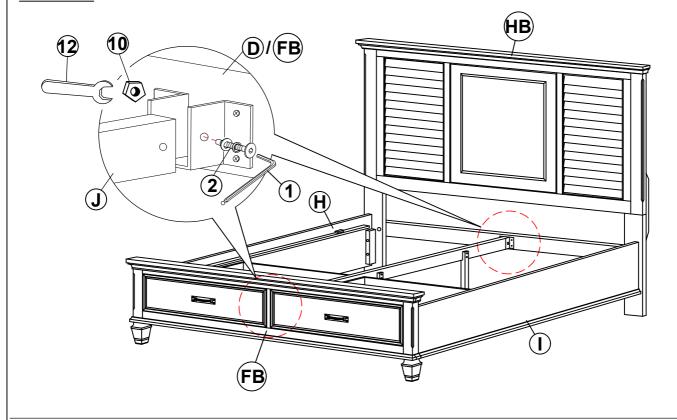


STEP 10

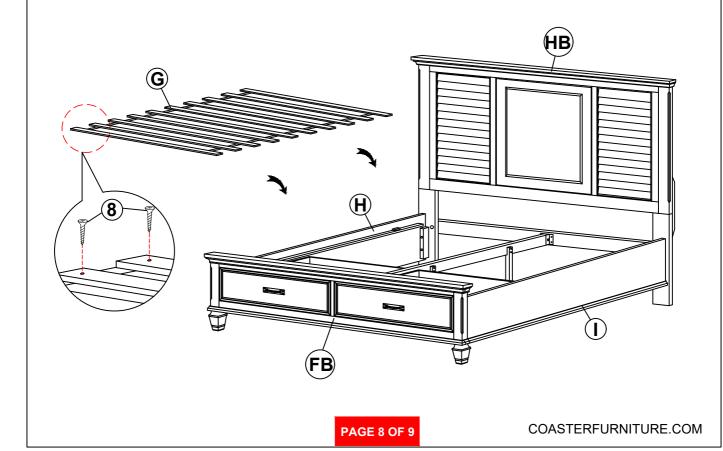




ASSEMBLY INSTRUCTIONS STEP 11

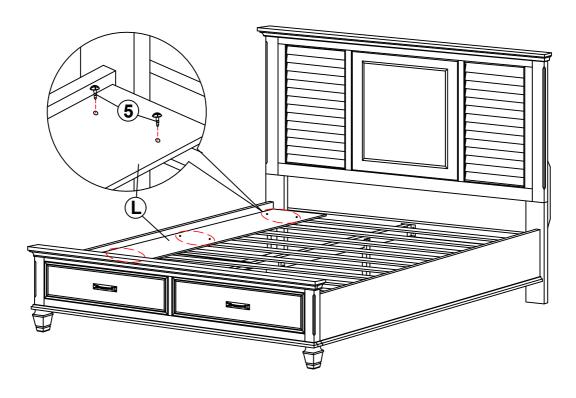

STEP 12 COMPLETE

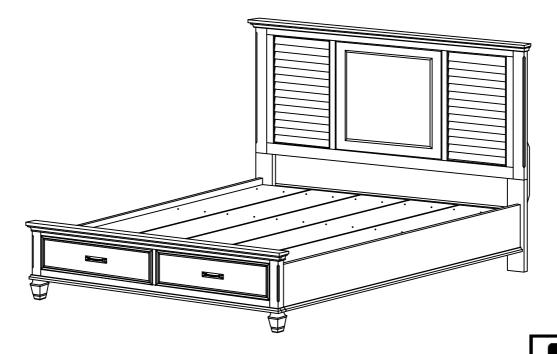


COASTERFURNITURE.COM



Inner Size: 77.00"W X 81.00"D

Inner Size of Drawer: 32.00"W X 18.75"D X 5.75"H X 0.50"T

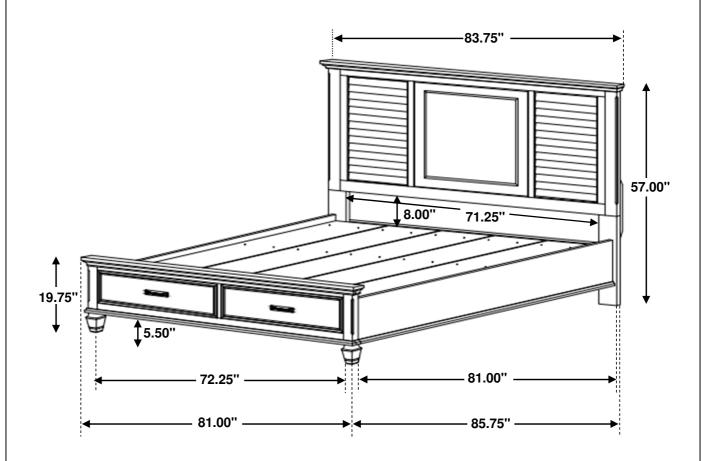





Fine Furniture for every stage of life

205332 Nightstand

REVISION 0 : 11/18/2019 REVISION 1 : 07/05/2024

PAGE 1 OF 2

COASTERFURNITURE.COM



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

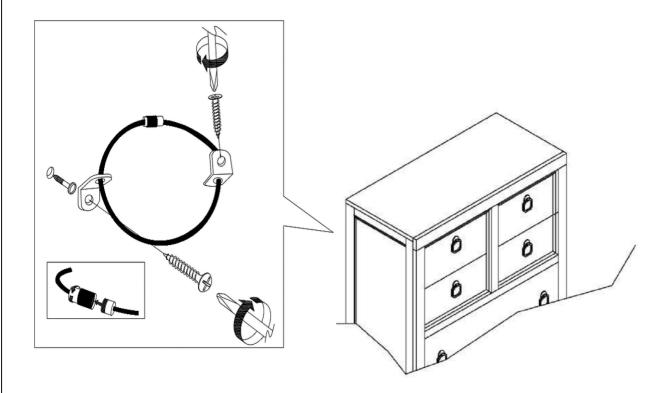








Inner Size of Drawer : 18.50"W x 12.25"D x 5.50"H x 0.50"T

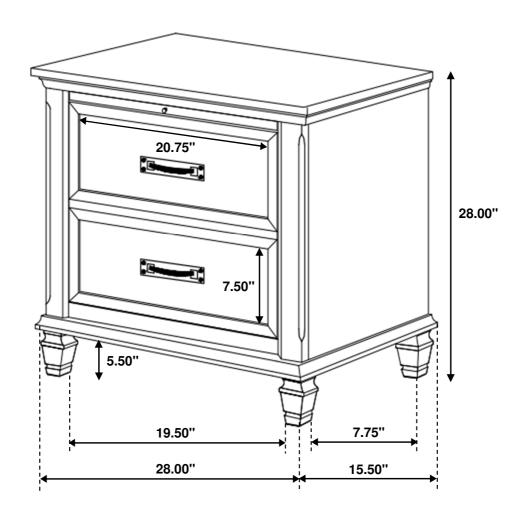





Fine Furniture for every stage of life

205333 Dresser

REVISION 0 : 11/29/2016 REVISION 1 : 12/13/2018 REVISION 2 : 11/18/2019 REVISION 3 : 07/05/2024

PAGE 1 OF 3

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION


A DRESSER



1PC

ASSEMBLY INSTRUCTIONS

STEP 1 COMPLETE

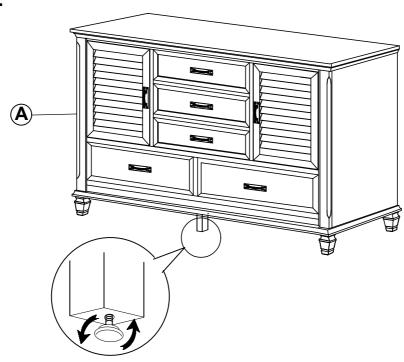



COASTERFURNITURE.COM

PAGE 2 OF 3



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

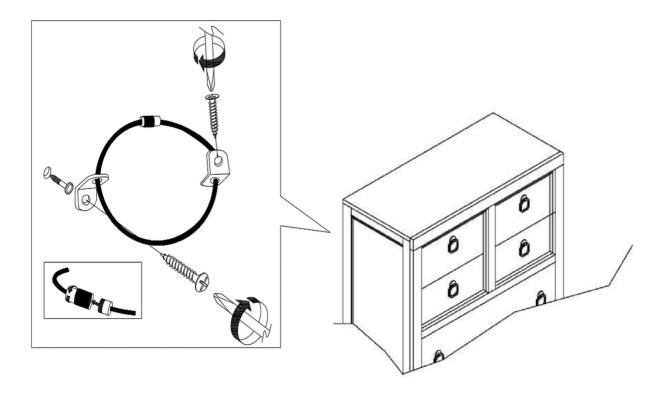








Inner Size of Drawer A: 25.75"W x 12.75"D x 4.00"H x 0.50"T Inner Size of Drawer B: 26.00"W x 12.75"D x 7.00"H x 0.50"T

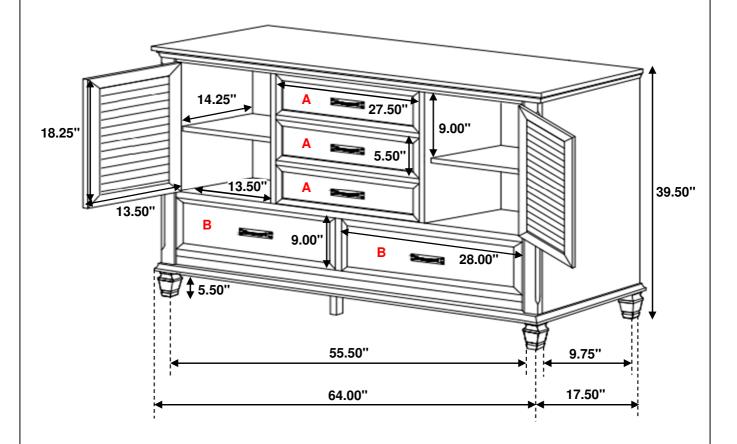





Fine Furniture for every stage of life

205334 *Mirror*

REVISION 0 : 11/29/2016 REVISION 1 : 12/13/2018 REVISION 2 : 11/18/2019 REVISION 3 : 08/07/2020 REVISION 4 : 09/21/2023



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

(PACKED WITH DRESSER)

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

DRESSER
*FROM BOX ITEM#205333

MIRROR SUPPORT

HARDWARE IDENTIFICATION

1 SHORT FLAT HEAD SCREW
(M4 x 32mm - BLK)

4PCS

4PCS

(M4 x 45mm - BLK)

NOTE:


C

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

2PCS



ASSEMBLY INSTRUCTIONS STEP 1

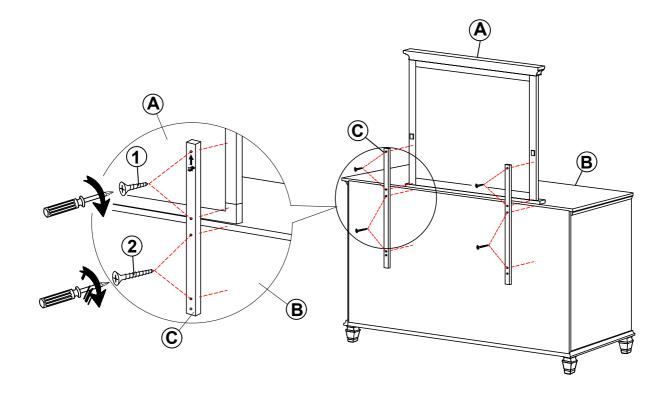

STEP 2 COMPLETE



