

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

206101KW (B1-B3)
California King Bed

REVISION 0 : 06/05/2018
REVISION 1 : 09/04/2019

ITEM: 206101KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD



1PC

B HEADBOARD
SUPPORT LEG



2PCS

C HEADBOARD PANEL



1PC

B2 (BOX 2)

D RIGHT EAR PANEL



1PC

E LEFT EAR PANEL



1PC

F EAR PANEL SUPPORT



2PCS

B3 (BOX 3)

G FOOTBOARD



1PC

H LEFT BED RAIL



1PC

I RIGHT BED RAIL



1PC

J BED SLAT



10PCS

K BED SLAT WITH
HOLES



3PCS

L BED SLAT
SUPPORT



6PCS

M FOOTBOARD LEG



2PCS

N CENTER RAIL



2PCS

O CENTER RAIL
SUPPORT



2PCS

206101KW (B1)
FROM BOX 1
HEADBOARD COMPLETE



1PC

206101KW (B2)
FROM BOX 2
LEFT AND RIGHT EAR
PANEL COMPLETE



2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 206101KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.















WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 206101KW (B3)


| | | | | | | | |
|---|--|---|-------|----|---|---|-------|
| 1 | ALLEN WRENCH (4MM - RBW) |  | 1PC | 7 | MEDIUM PAN HEAD SCREW (#4 x 25mm - RBW) |  | 4PCS |
| 2 | BOLT 1 (Ø1/4" x 30mm - RBW) |  | 4PCS | 8 | LONG PAN HEAD SCREW (#4 x 38mm - RBW) |  | 32PCS |
| 3 | BOLT 2 (Ø1/4" x 38mm - RBW) |  | 10PCS | 9 | BIG FLAT WASHER (Ø1/4" X 25 X 1.5mm - RBW) |  | 22PCS |
| 4 | BOLT 3 (Ø1/4" x 60mm - RBW) |  | 10PCS | 10 | SMALL FLAT WASHER (Ø1/4" X 19 X 1.5mm - RBW) |  | 22PCS |
| 5 | BOLT 4 (Ø1/4" x 90mm - RBW) |  | 8PCS | 11 | LOCK WASHER (Ø1/4" - RBW) |  | 22PCS |
| 6 | SHORT PAN HEAD SCREW (#4 x 20mm - RBW) |  | 4PCS | 12 | LEVELER (Ø1/4" X 25mm - BLK) |  | 6PCS |

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

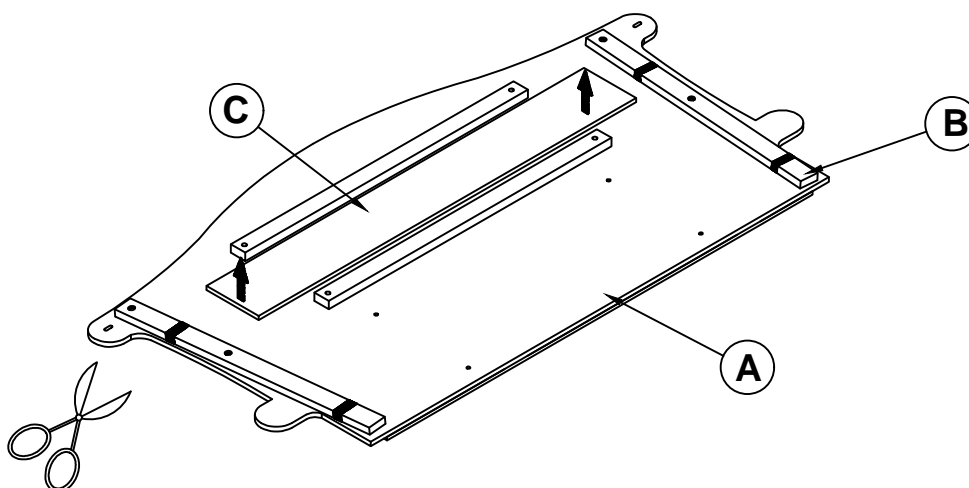


STEP 2

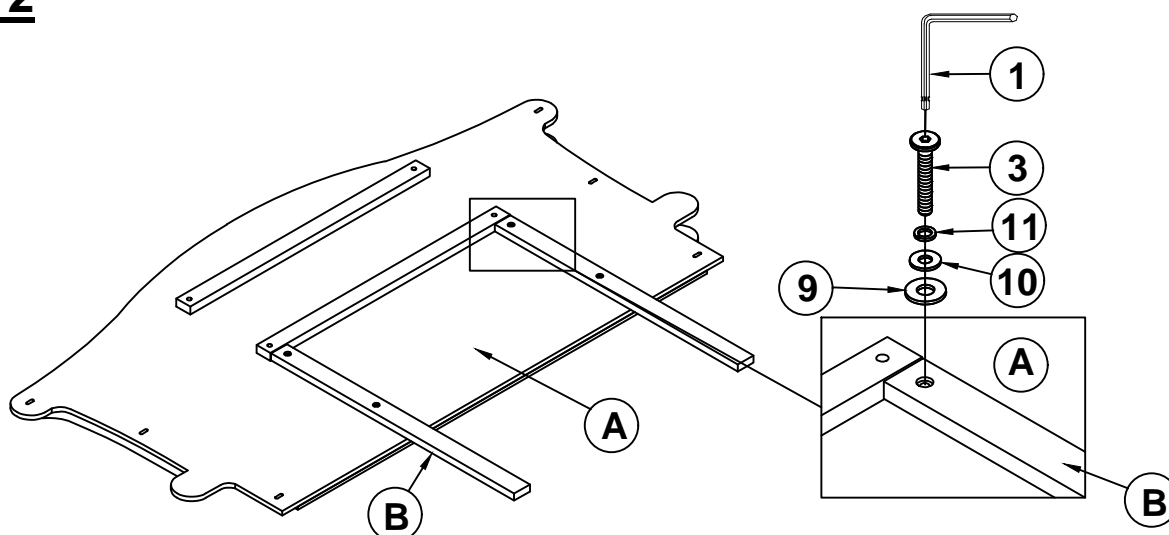


STEP 3

**NOTE : THE EAR PANELSUPPORTS ARE TO
LIFT UP THE BED RAILS**

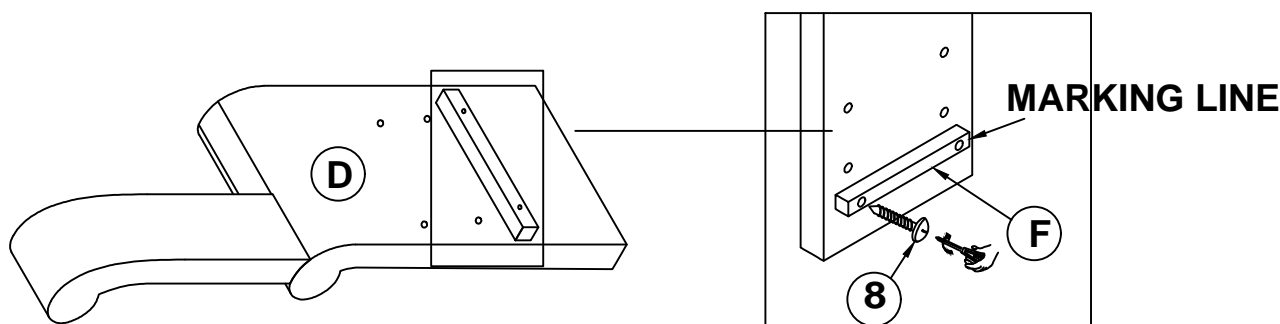


ASSEMBLY INSTRUCTIONS


STEP 4

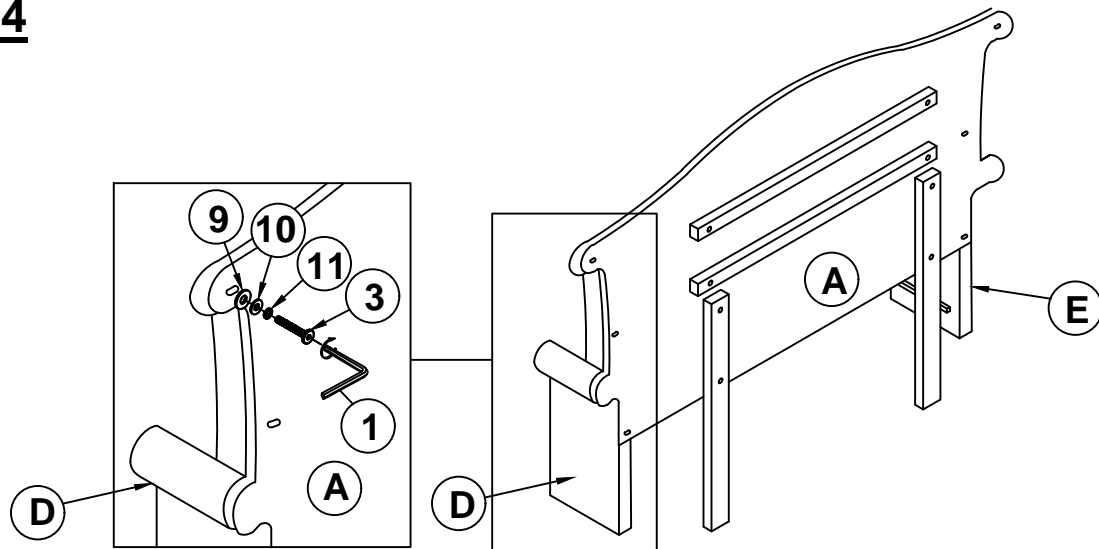

STEP 5

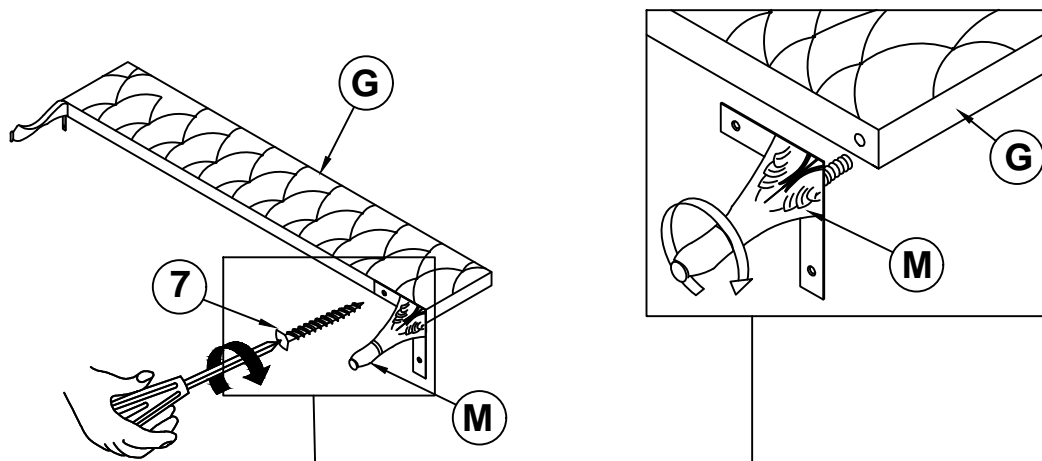


STEP 6

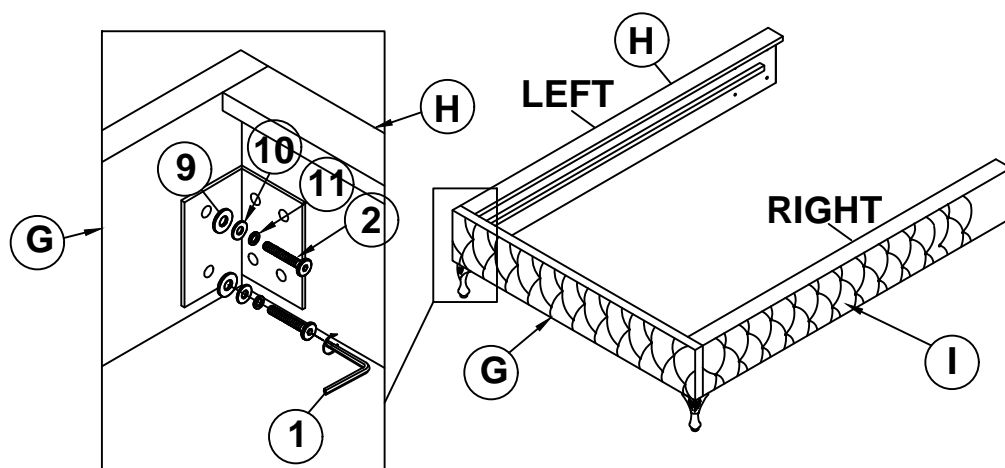


ASSEMBLY INSTRUCTIONS


STEP 7

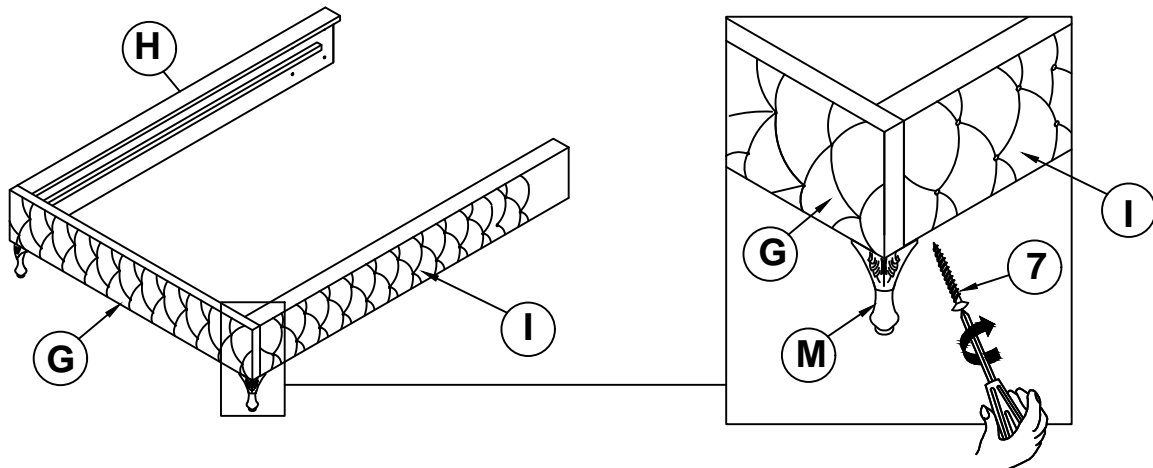

STEP 8


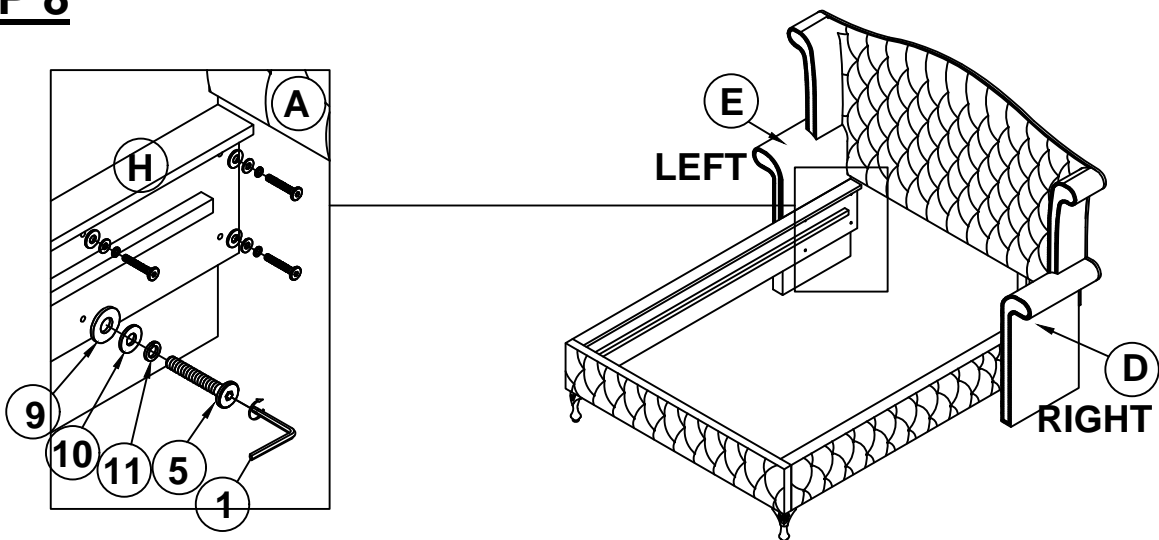


STEP 9


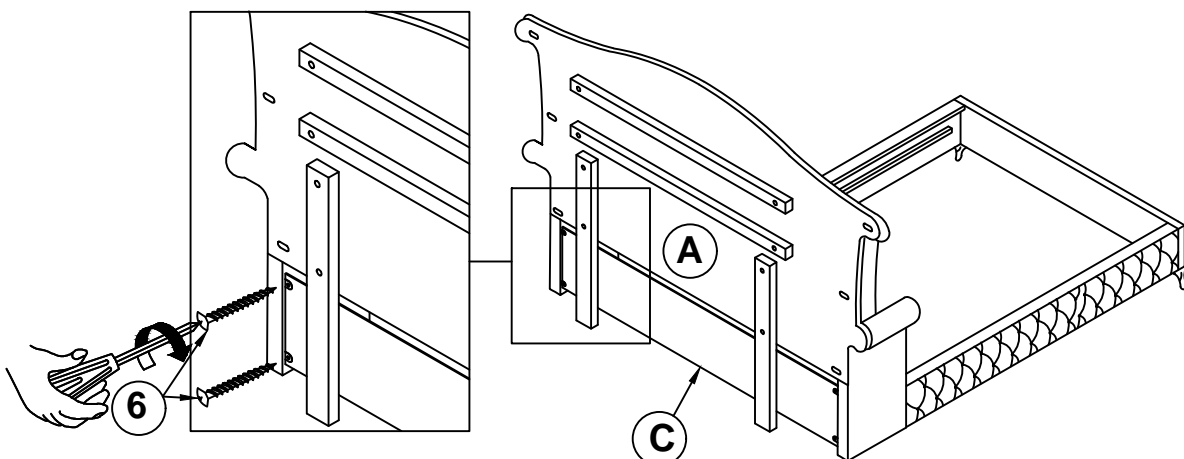


ASSEMBLY INSTRUCTIONS



STEP 10

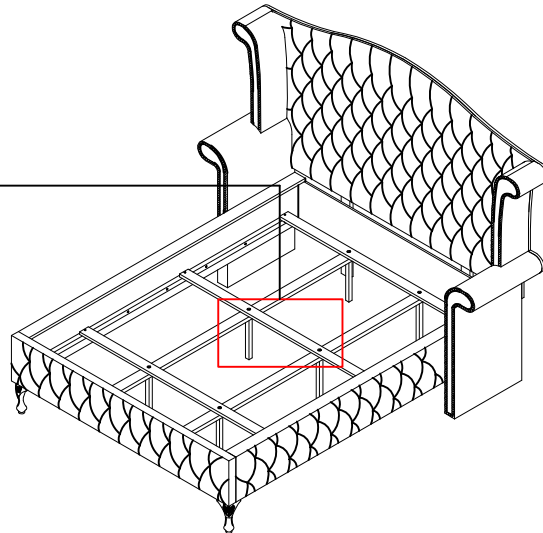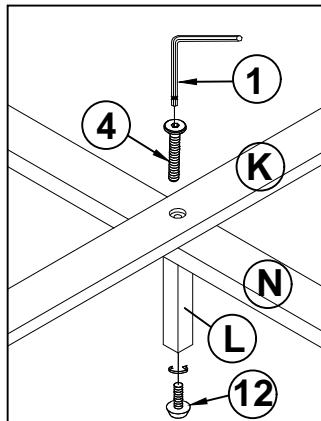

STEP 11

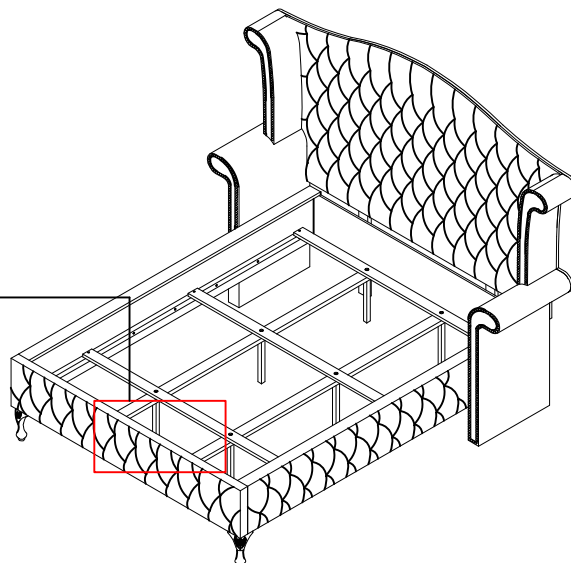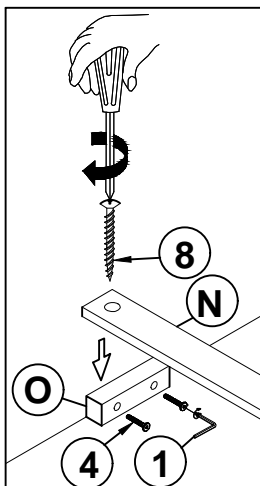

STEP 12

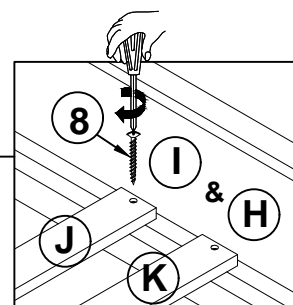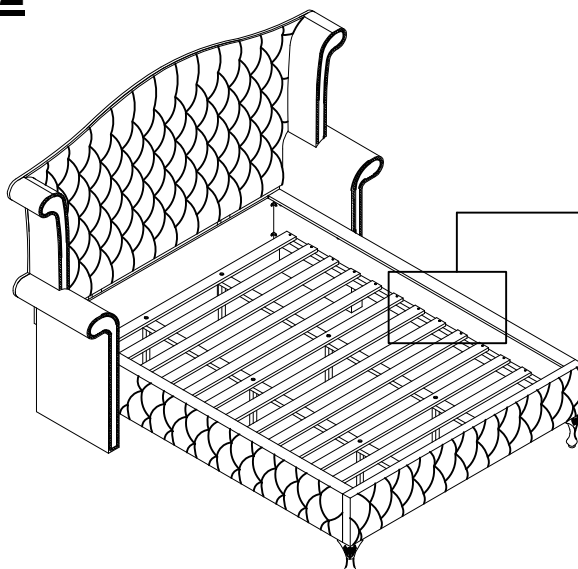


ITEM: **206101KW (B1-B3)**



ASSEMBLY INSTRUCTIONS

STEP 13


COMPLETE

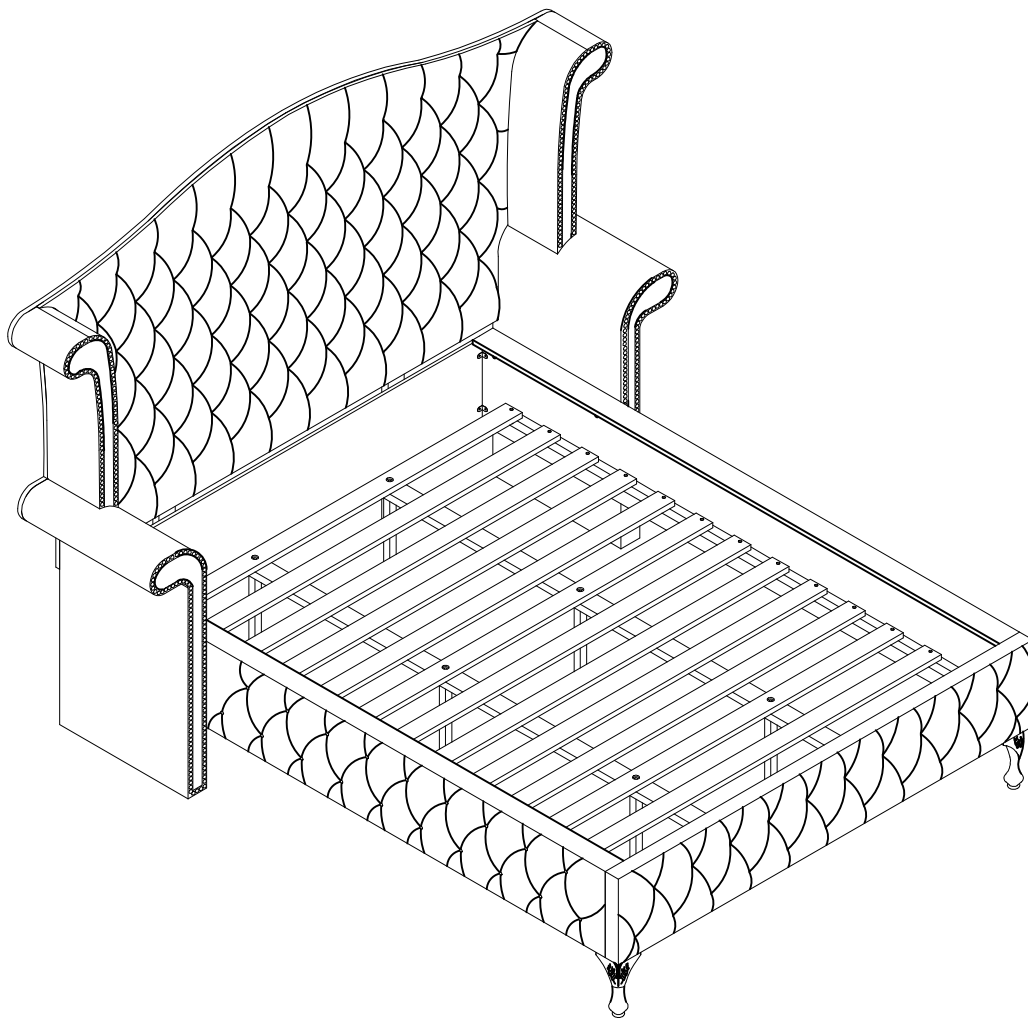

ITEM: **206101KW (B1-B3)**



Inner Size: 73.50"W X 85.25"D

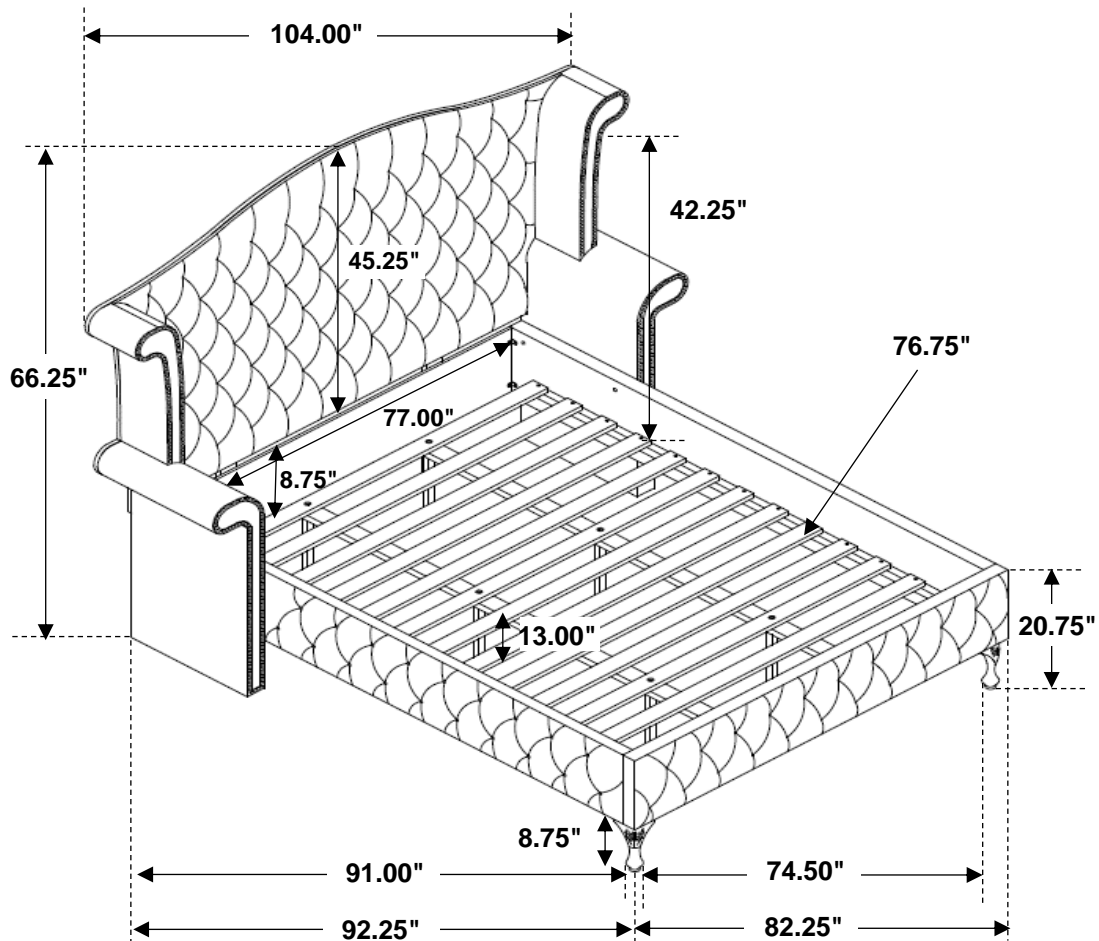

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

206102
Nightstand

ITEM: **206102**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B

LEG



4PCS

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(4MM - RBW)



1PC

3 LOCK WASHER
(Ø5/16" - RBW)



4PCS

2 BOLT
(Ø5/16" x 90mm - RBW)



4PCS

4 FLAT WASHER
(Ø5/16" x 19 x 1.5mm - RBW)



4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **206102**


ASSEMBLY INSTRUCTIONS

STEP 1

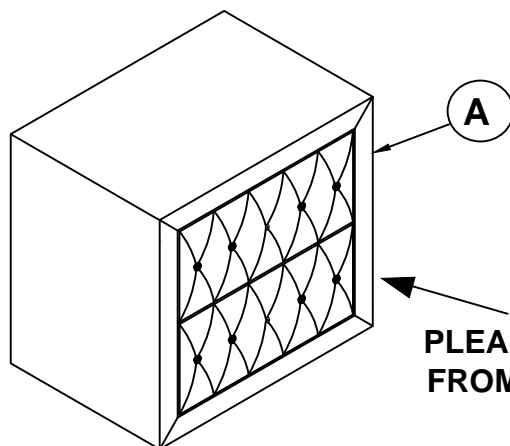

PLEASE TAKE OUT THE LEGS
FROM THE LAST DRAWER.

STEP 2

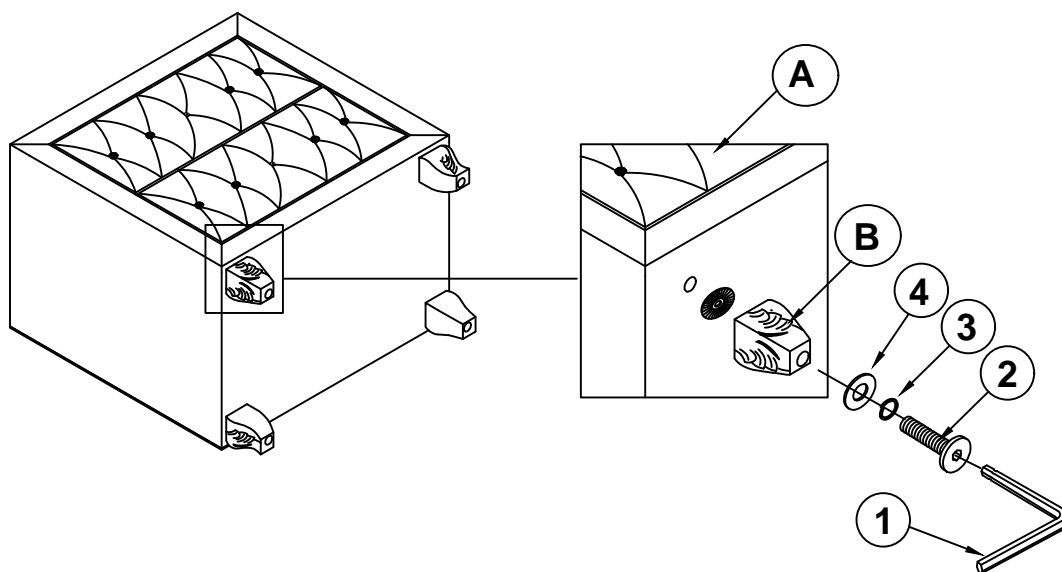


ITEM: **206102**




ASSEMBLY INSTRUCTIONS

STEP 3

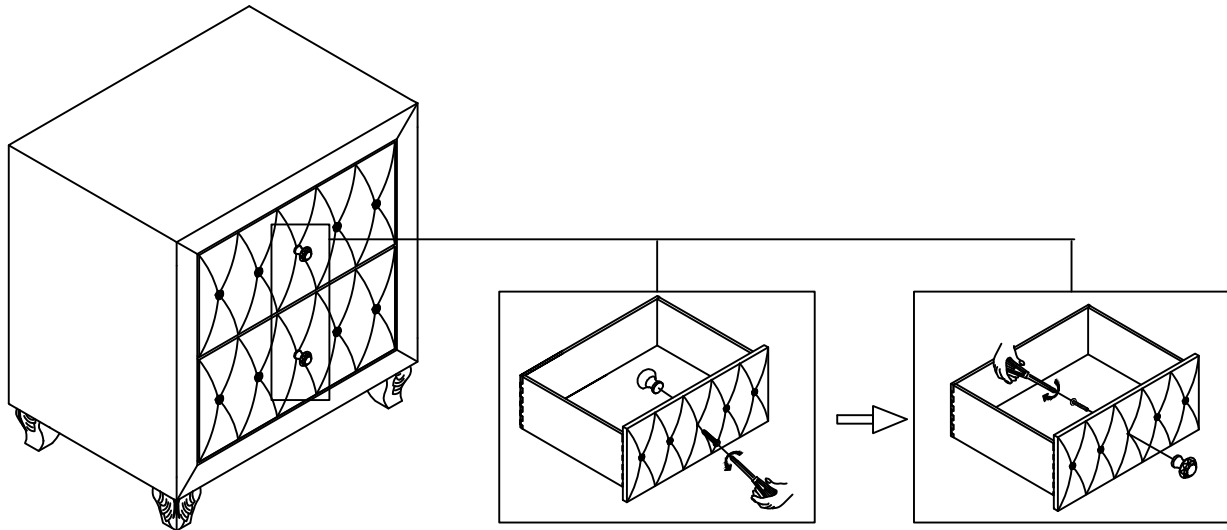

STEP 4 COMPLETE

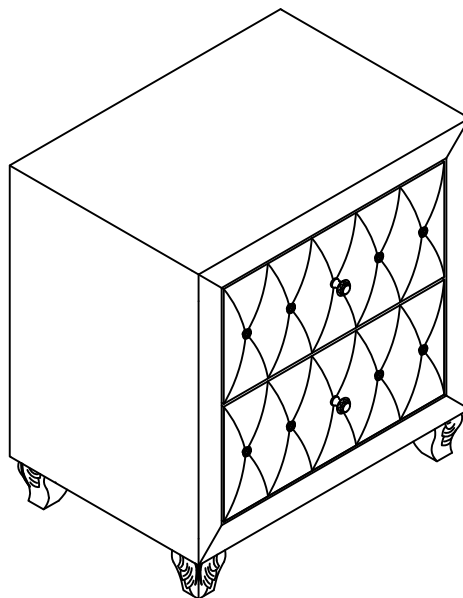

ITEM: **206102**



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

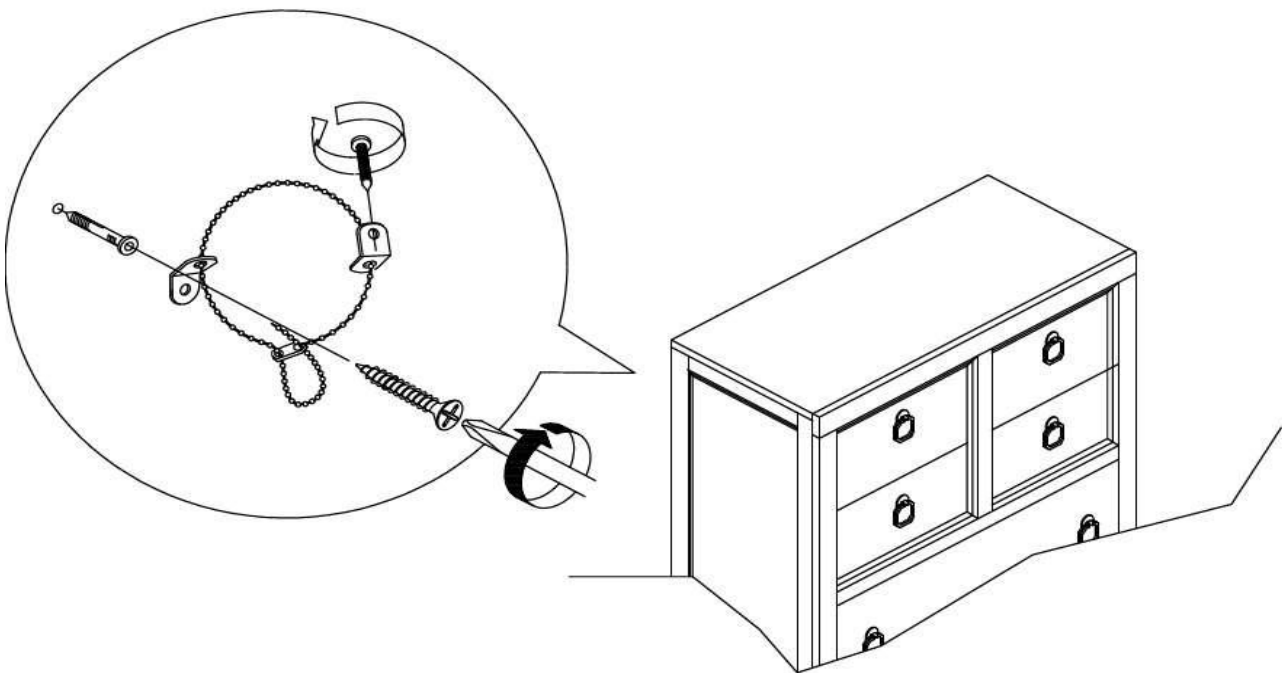

ITEM: **206102**



Inner Size of Drawer : 19.00"W X 14.50"D X 6.00"H X 0.25"T

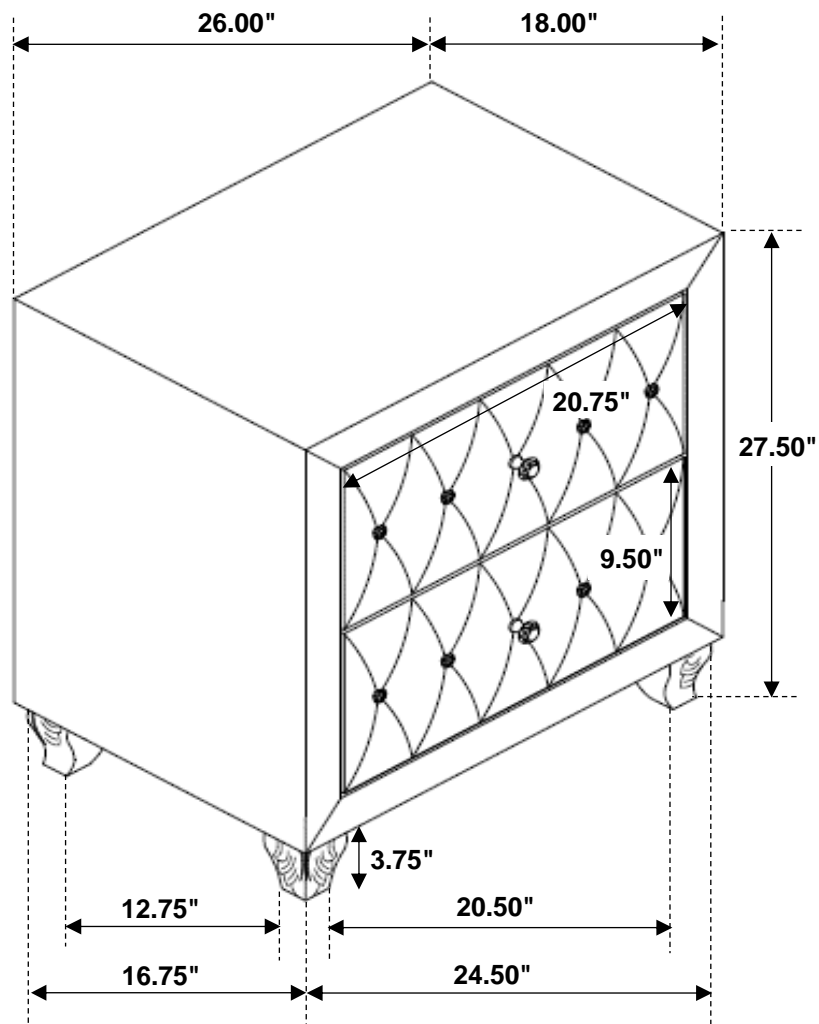

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

206103
Dresser

ITEM: **206103**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER

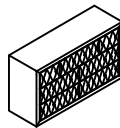


1PC

B LEG



4PCS

C CENTER SUPPORT
LEG WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(4MM - RBW)



1PC

3 LOCK WASHER
(Ø5/16" - RBW)



4PCS

2 BOLT
(Ø5/16" x 90mm - RBW)



4PCS

4 FLAT WASHER
(Ø5/16" x 19 x 1.5mm - RBW)



4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **206103**


ASSEMBLY INSTRUCTIONS

STEP 1

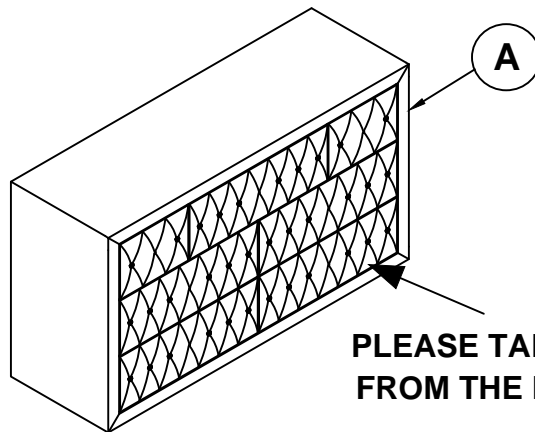

PLEASE TAKE OUT THE LEGS
FROM THE LAST DRAWER.

STEP 2

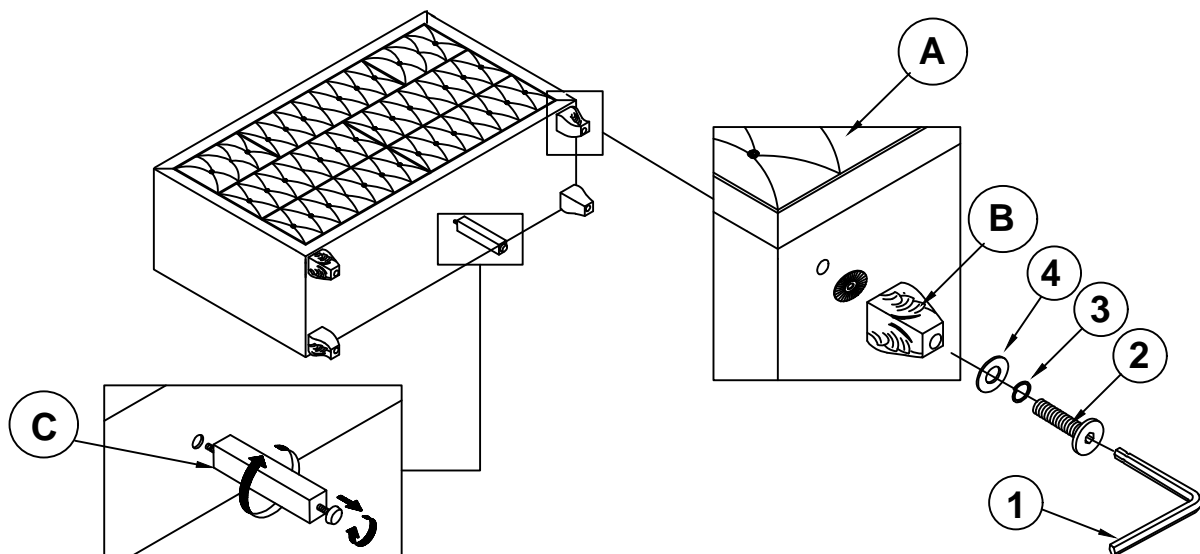


ITEM: **206103**





ASSEMBLY INSTRUCTIONS

STEP 3

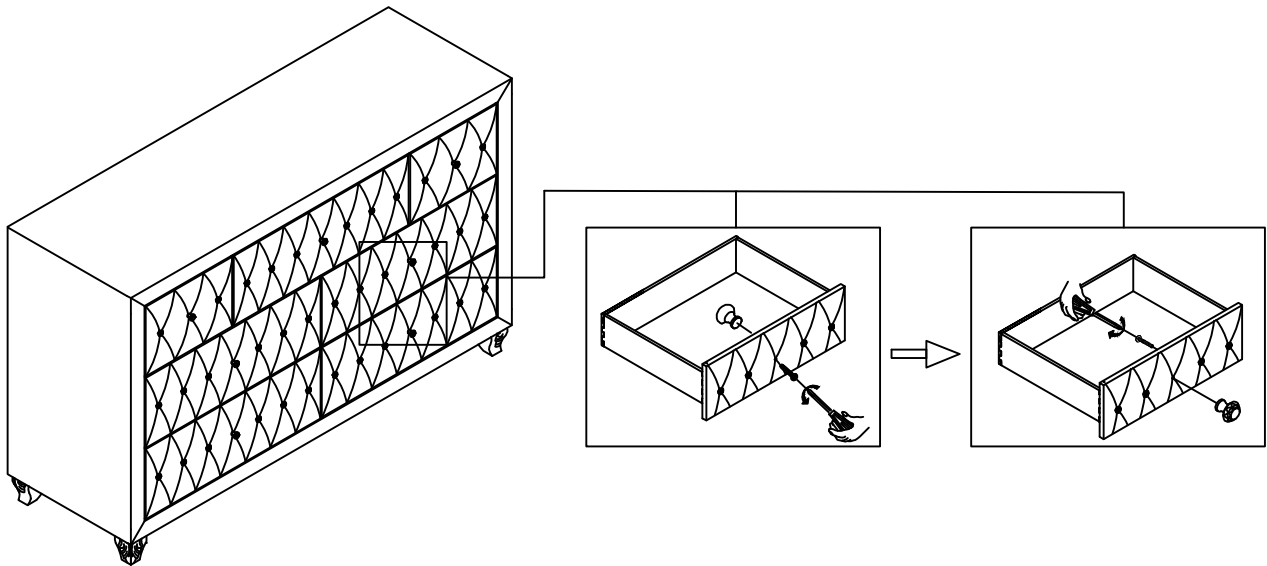

STEP 4 COMPLETE

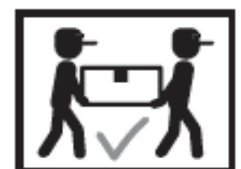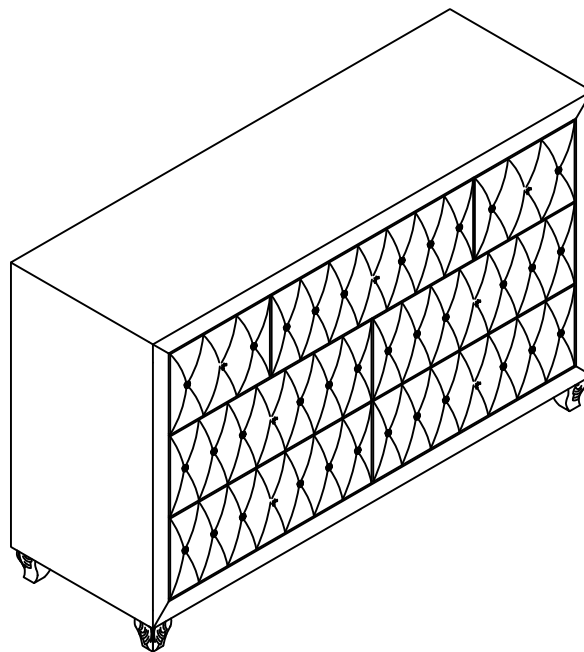

ITEM: **206103**



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

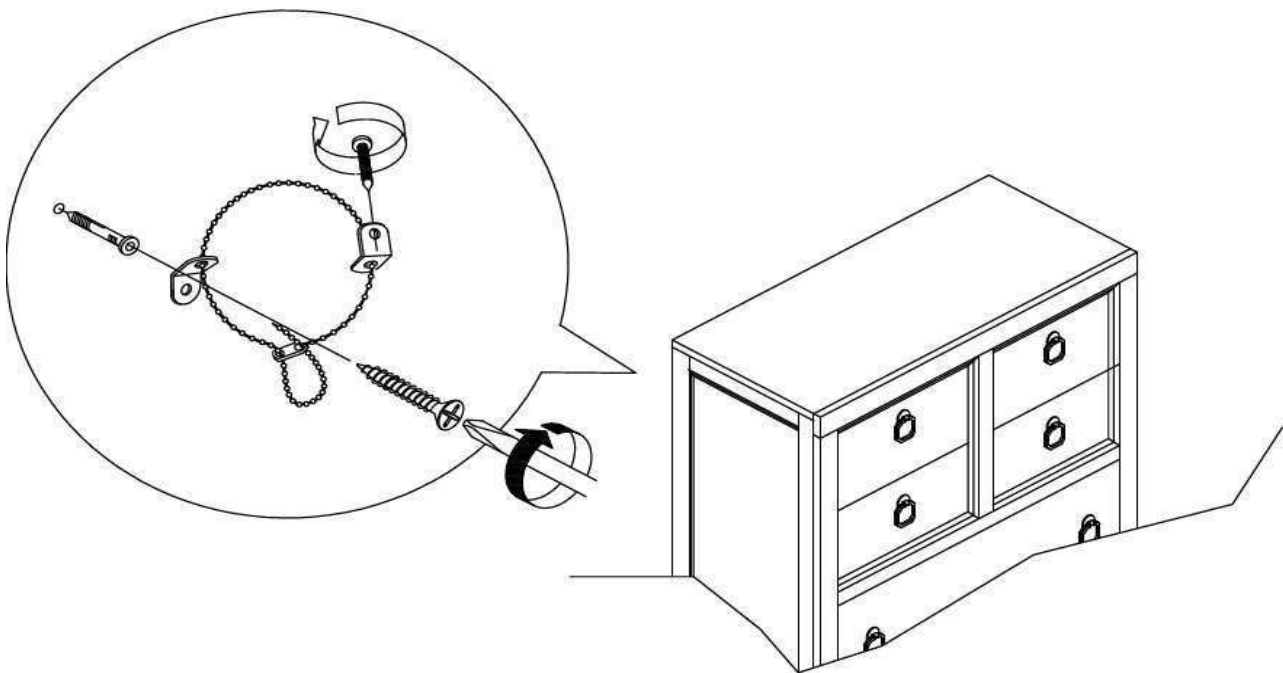


ITEM: **206103**



Inner Size of Drawer A : 11.50"W X 14.50"D X 6.00"H X 0.25"T

Inner Size of Drawer B : 25.25"W X 14.50"D X 6.00"H X 0.25"T

Inner Size of Drawer C: 25.75"W X 14.50"D X 6.00"H X 0.25"T

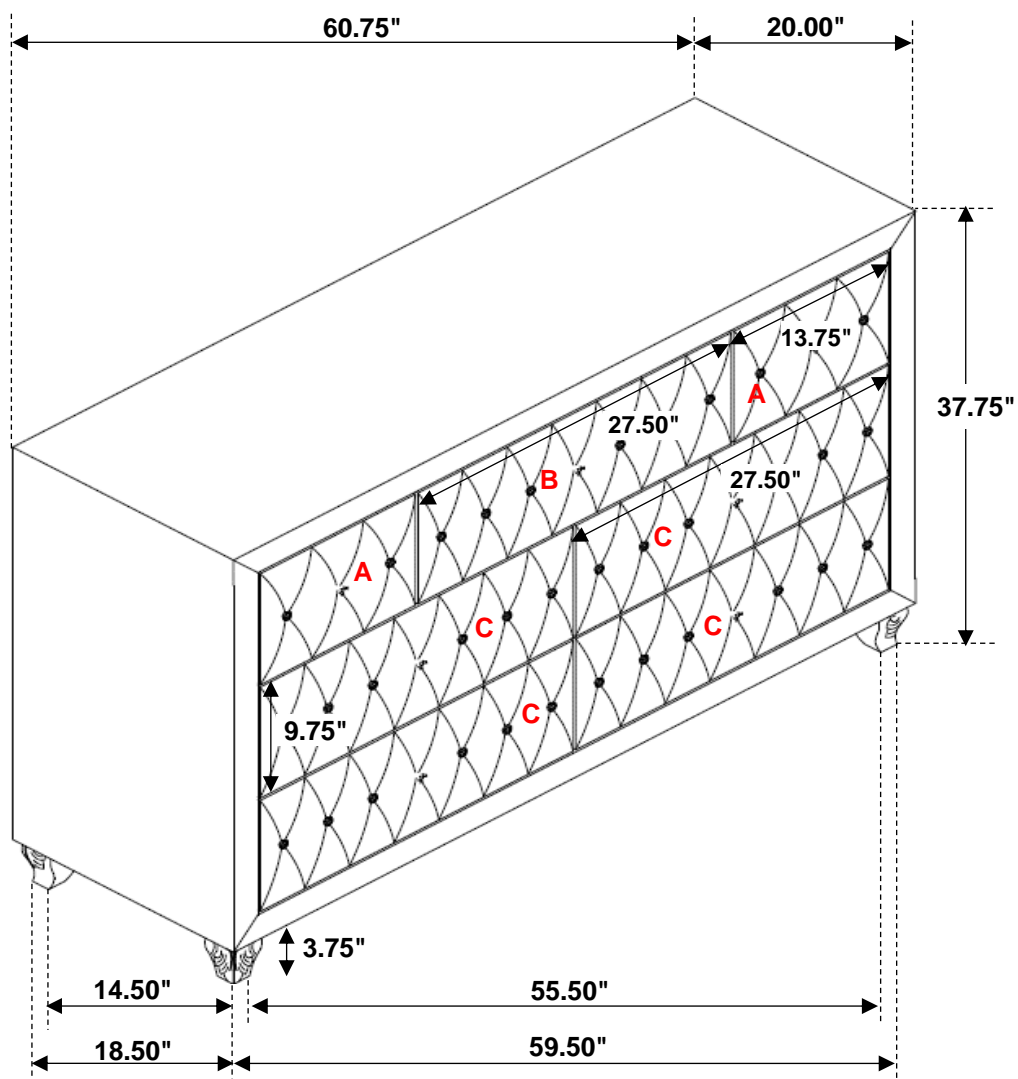

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

206104
Mirror

ITEM: **206104**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION


A **DRESSER**
FROM BOX ITEM
#206103

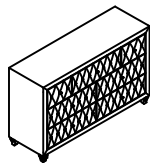

1PC

B

MIRROR

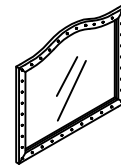

1PC

C **MIRROR SUPPORT**
(PACKED WITH MIRROR)



2PCS

HARDWARE IDENTIFICATION

1 **ALLEN WRENCH**
(4MM - RBW)



1PC

3

LOCK WASHER
(Ø1/4" - RBW)



8PCS

2 **BOLT**
(Ø1/4" x 45mm - RBW)



8PCS

4

FLAT WASHER
(Ø1/4" x 19 x 1.5mm - RBW)




8PCS

ITEM: **206104**




ASSEMBLY INSTRUCTIONS

STEP 1

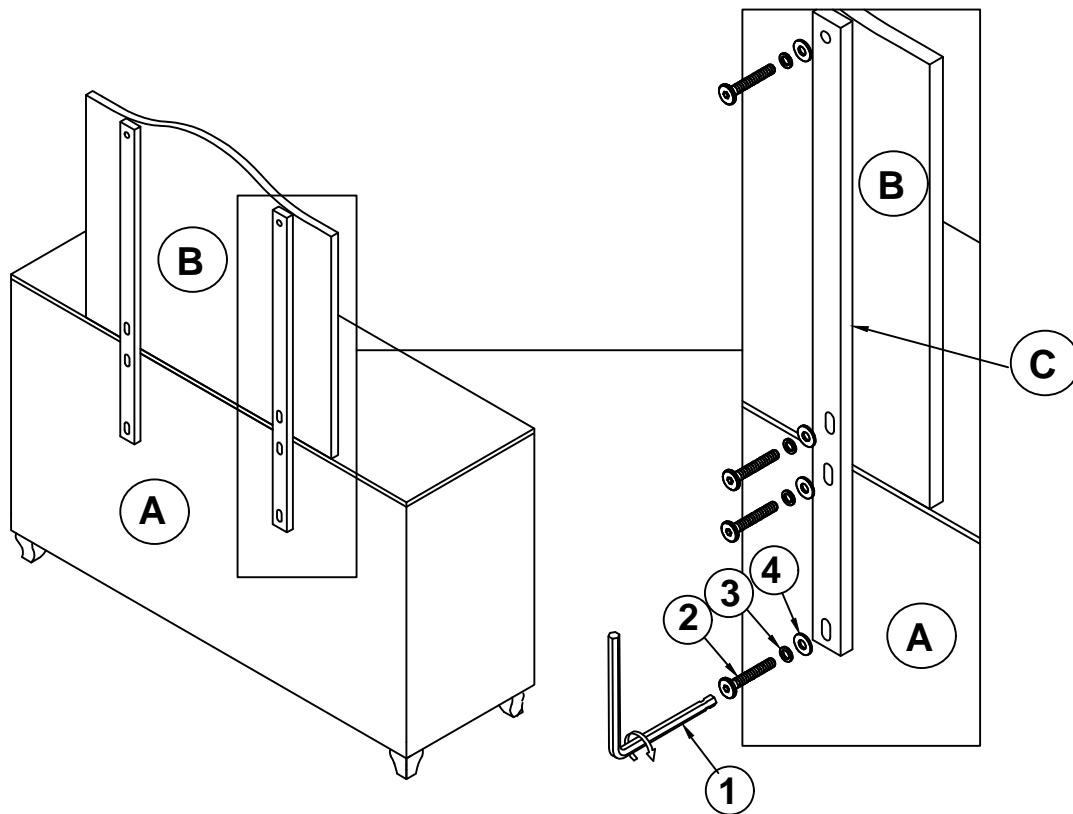


STEP 2

COMPLETE

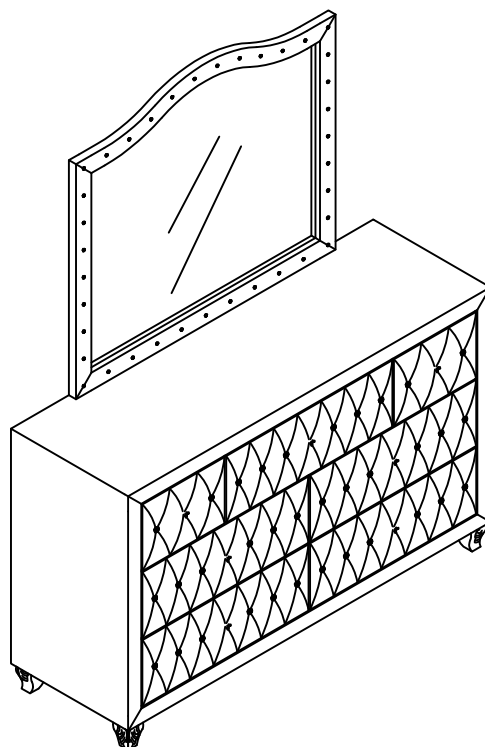

ITEM: **206104**

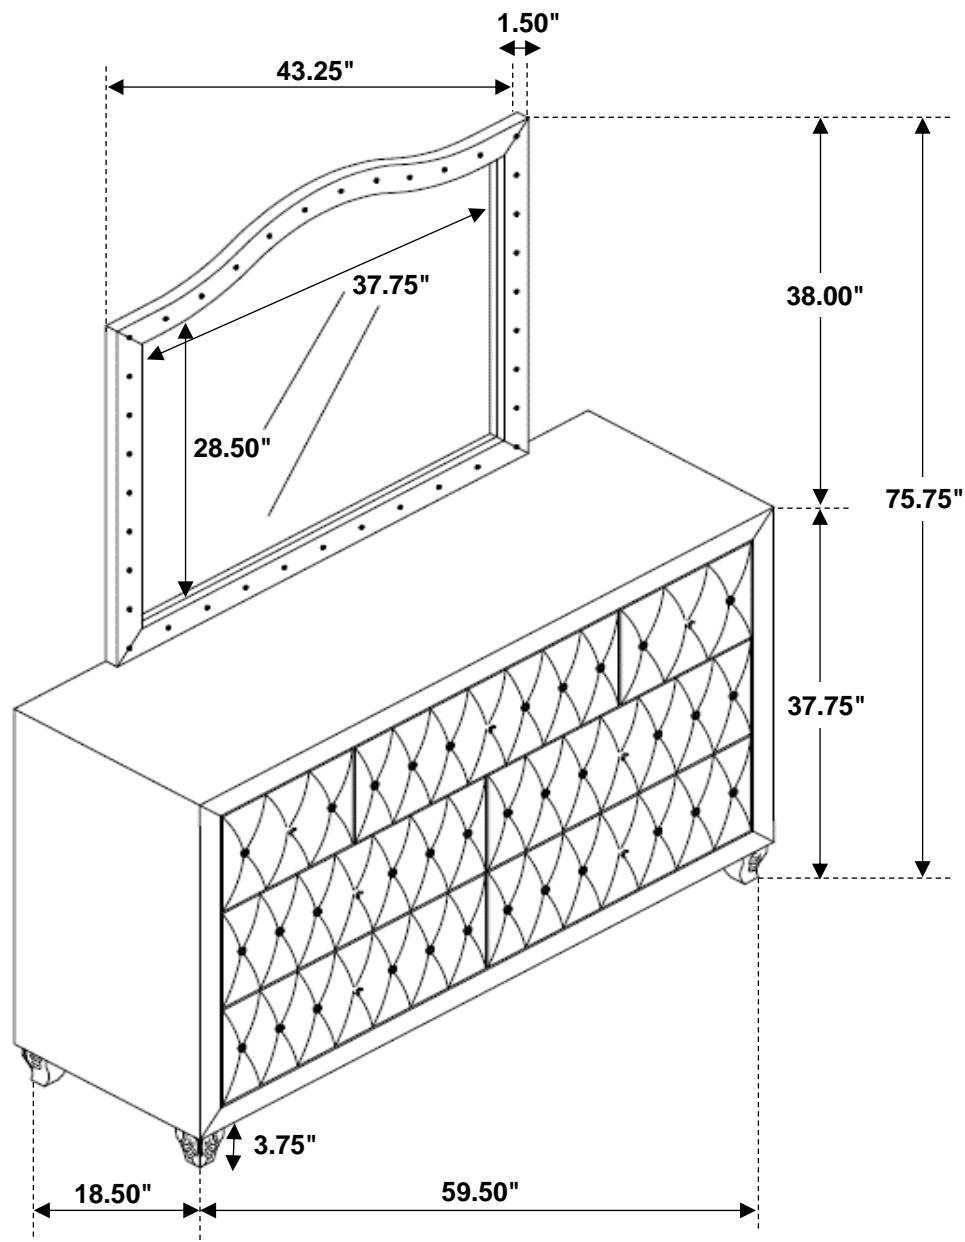

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

206105
Chest

ITEM: **206105**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHEST



1PC

B

LEG



4PCS

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(4MM - RBW)



1PC

3 LOCK WASHER
(Ø5/16" - RBW)



4PCS

2 BOLT
(Ø5/16" x 90mm - RBW)



4PCS

4 FLAT WASHER
(Ø5/16" x 19 x 1.5mm - RBW)



4PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **206105**




ASSEMBLY INSTRUCTIONS

STEP 1

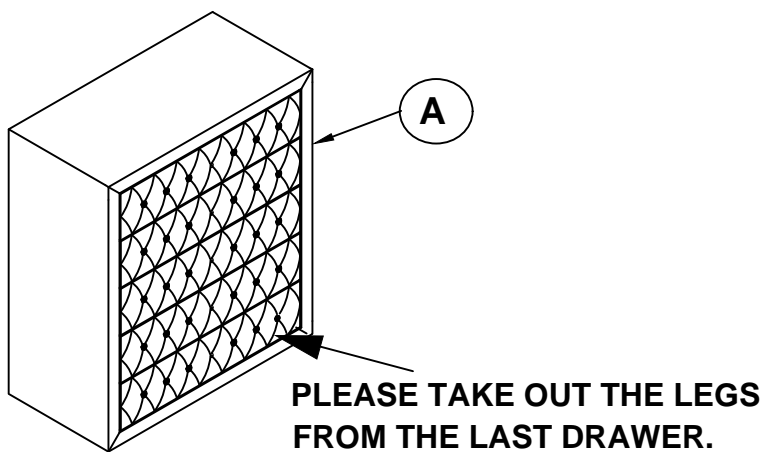

STEP 2

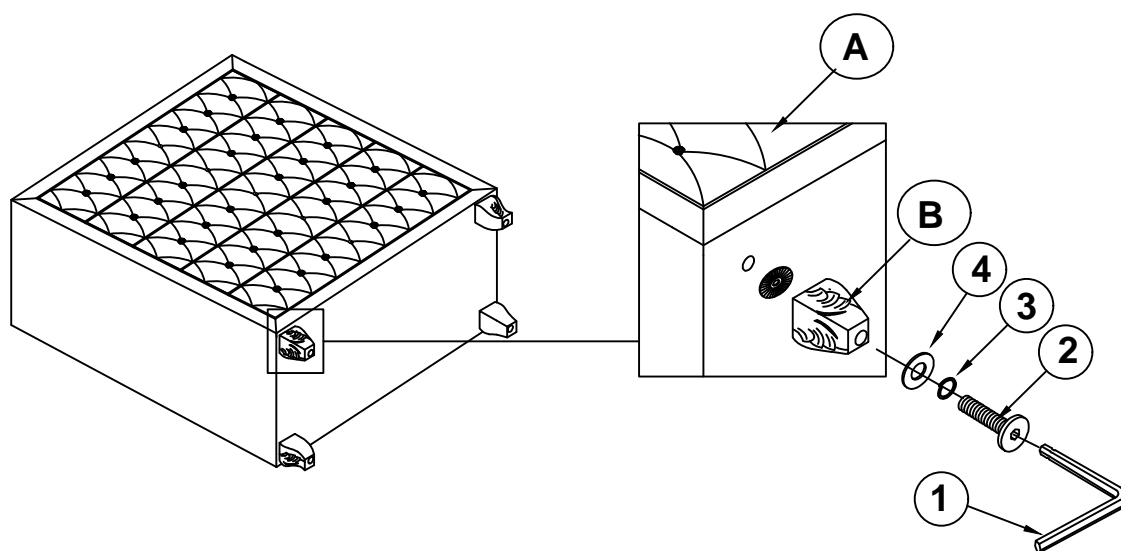


ITEM: **206105**




ASSEMBLY INSTRUCTIONS

STEP 3

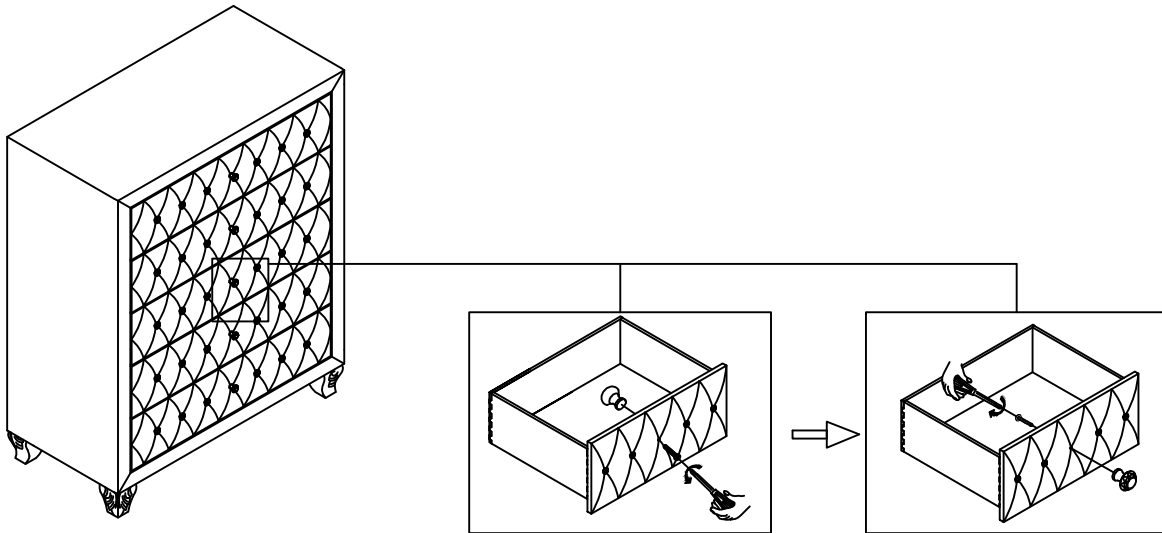

STEP 4 COMPLETE

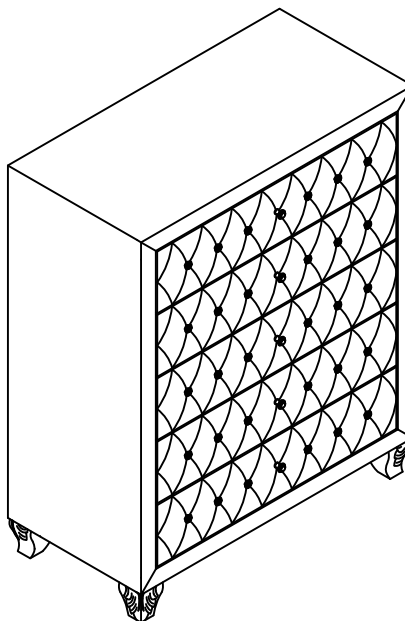

ITEM: **206105**



ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

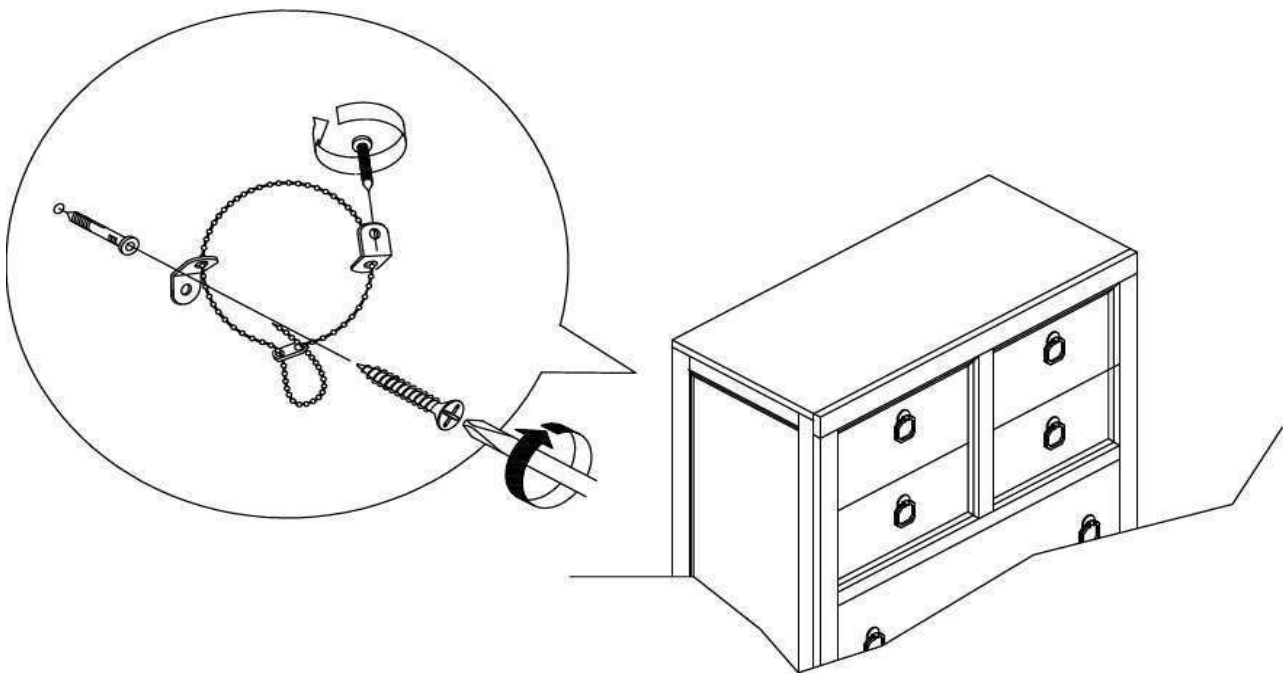

ITEM: **206105**



Inner Size of Drawer : 33.50"W X 14.75"D X 4.50"H X 0.25"T

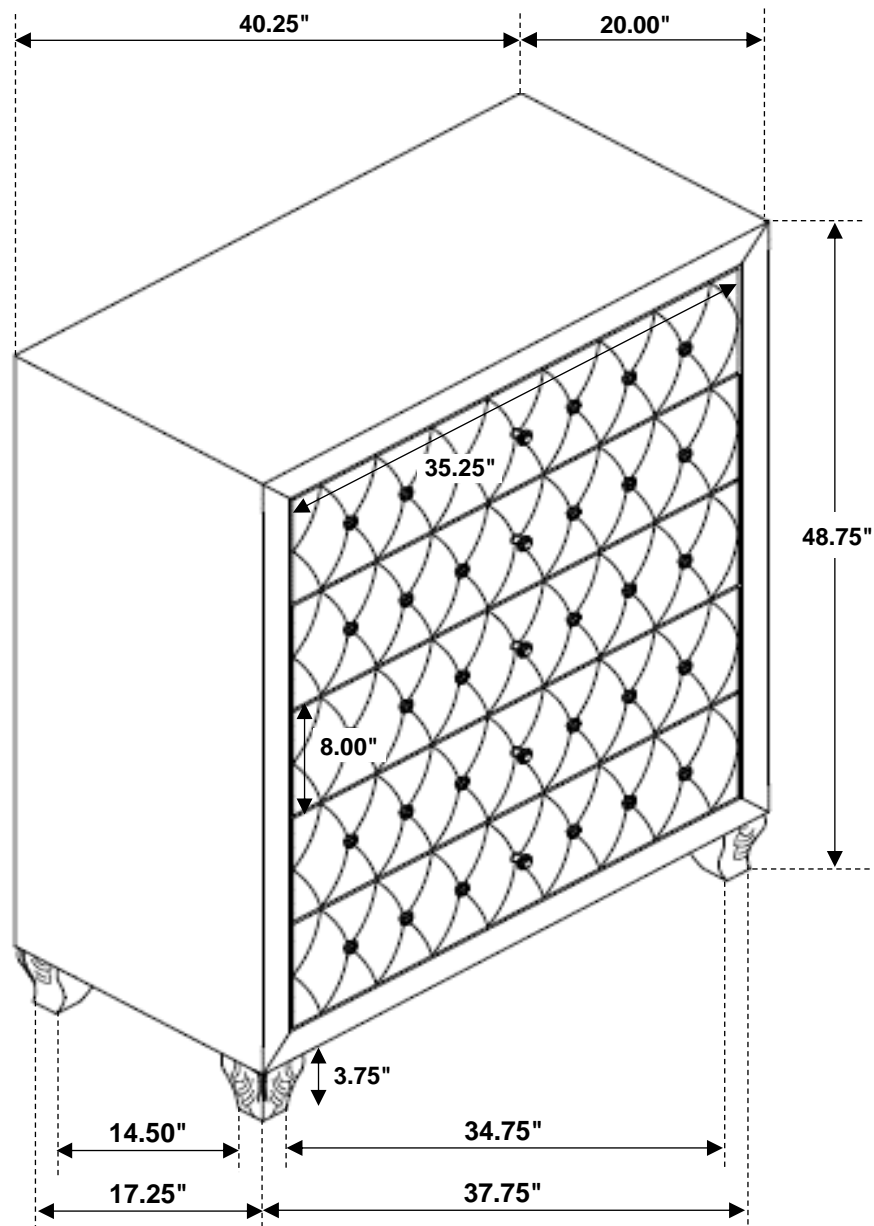

Note: Dimension tolerance $\pm 5\%$