

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 206101Q (B1-B3) Queen Bed

REVISION 0 : 06/05/2018  
REVISION 1 : 09/04/2019  
REVISION 2 : 07/03/2024

# ITEM: 206101Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

## PARTS IDENTIFICATION


### B1 ( BOX 1)

A HEADBOARD



1PC

B HEADBOARD  
SUPPORT LEG



2PCS

C HEADBOARD PANEL



1PC

### B2 ( BOX 2)

D RIGHT EAR PANEL



1PC

E LEFT EAR PANEL



1PC

F EAR PANEL SUPPORT



2PCS

### B3 ( BOX 3)

G FOOTBOARD




1PC

H LEFT BED RAIL



1PC

I RIGHT BED RAIL



1PC

J BED SLAT



10PCS

K BED SLAT WITH  
HOLES



3PCS

L BED SLAT  
SUPPORT



6PCS

M FOOTBOARD LEG



2PCS

N CENTER RAIL



2PCS

O CENTER RAIL  
SUPPORT



2PCS

206101Q (B1)  
FROM BOX 1  
HEADBOARD COMPLETE



1PC

206101Q (B2)  
FROM BOX 2  
LEFT AND RIGHT EAR  
PANEL COMPLETE



2PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 206101Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.















### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 206101Q (B3)


1	ALLEN WRENCH (4MM - RBW)		1PC	7	MEDIUM PAN HEAD SCREW (#4 x 25mm - RBW)		4PCS
2	BOLT 1 (Ø1/4" x 30mm - RBW)		4PCS	8	LONG PAN HEAD SCREW (#4 x 38mm - RBW)		32PCS
3	BOLT 2 (Ø1/4" x 38mm - RBW)		10PCS	9	BIG FLAT WASHER (Ø1/4" X 25 X 1.5mm - RBW)		22PCS
4	BOLT 3 (Ø1/4" x 60mm - RBW)		10PCS	10	SMALL FLAT WASHER (Ø1/4" X 19 X 1.5mm - RBW)		22PCS
5	BOLT 4 (Ø1/4" x 90mm - RBW)		8PCS	11	LOCK WASHER (Ø1/4" - RBW)		22PCS
6	SHORT PAN HEAD SCREW (#4 x 20mm - RBW)		4PCS	12	LEVELER (Ø1/4" X 25mm - BLK)		6PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

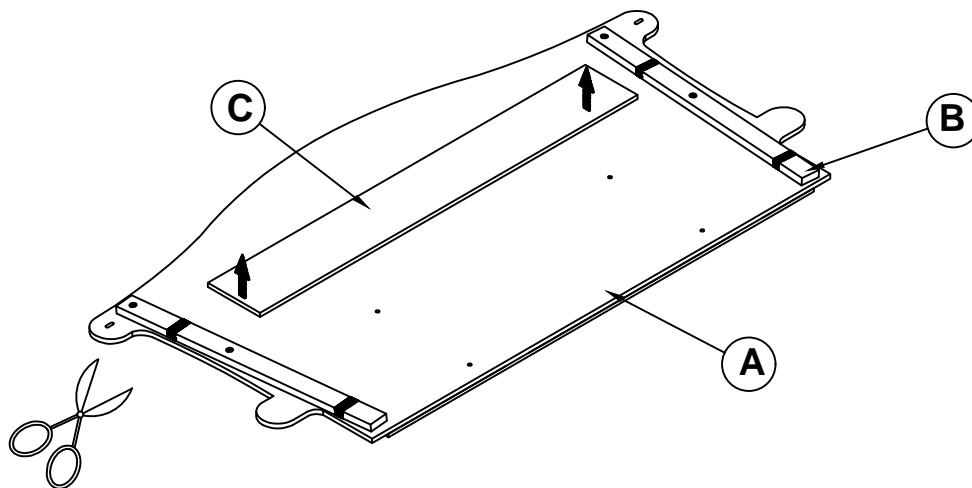


**STEP 2**

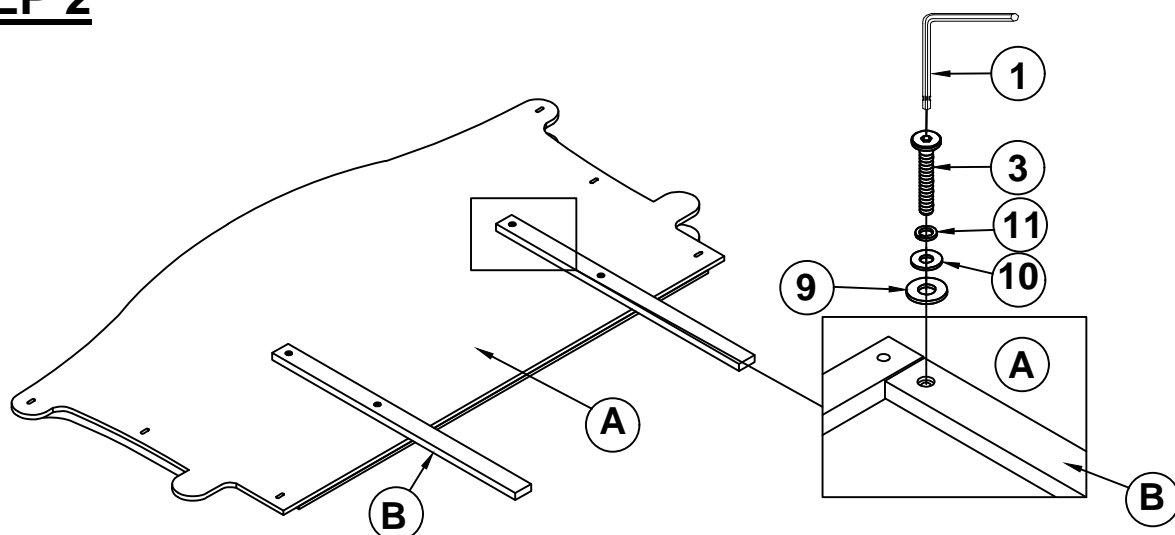


**STEP 3**

**NOTE : THE EAR PANELSUPPORTS ARE TO  
LIFT UP THE BED RAILS**

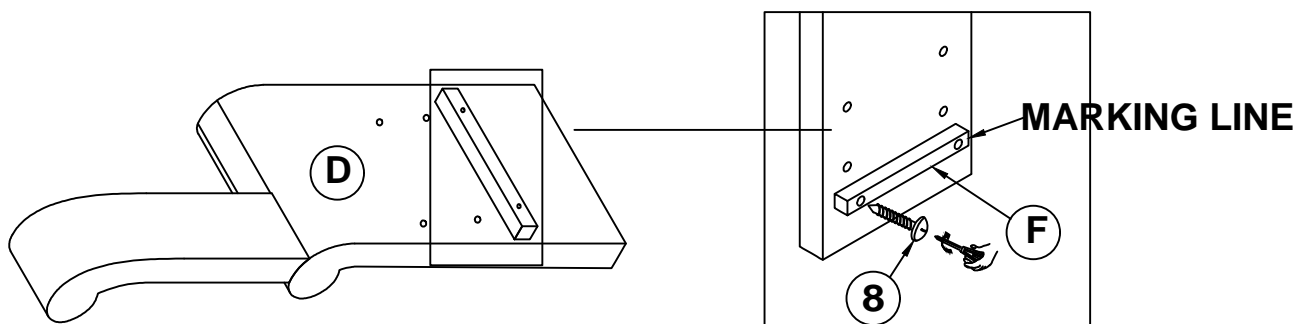


**ASSEMBLY INSTRUCTIONS**


**STEP 4**

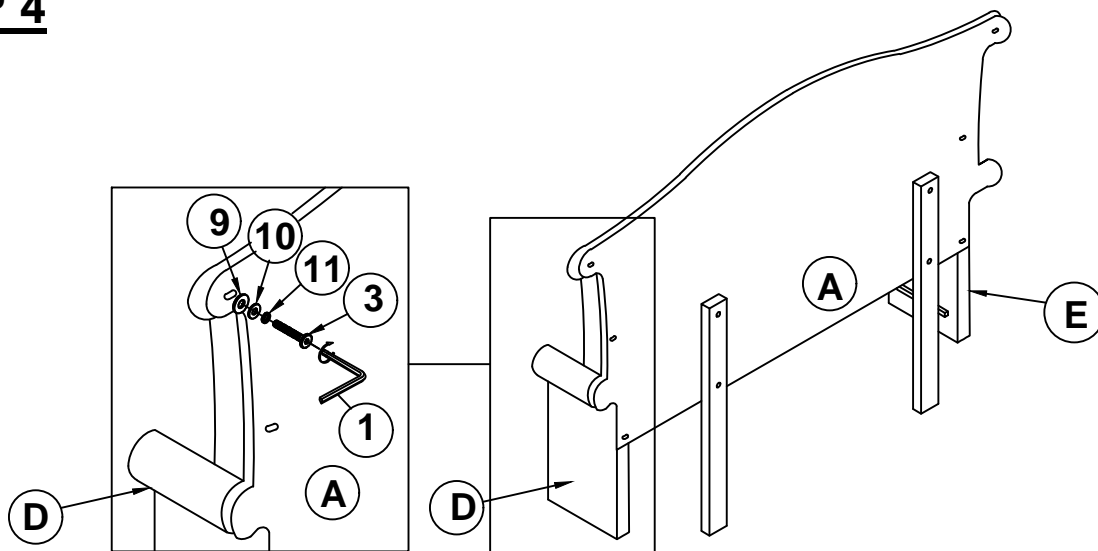

**STEP 5**

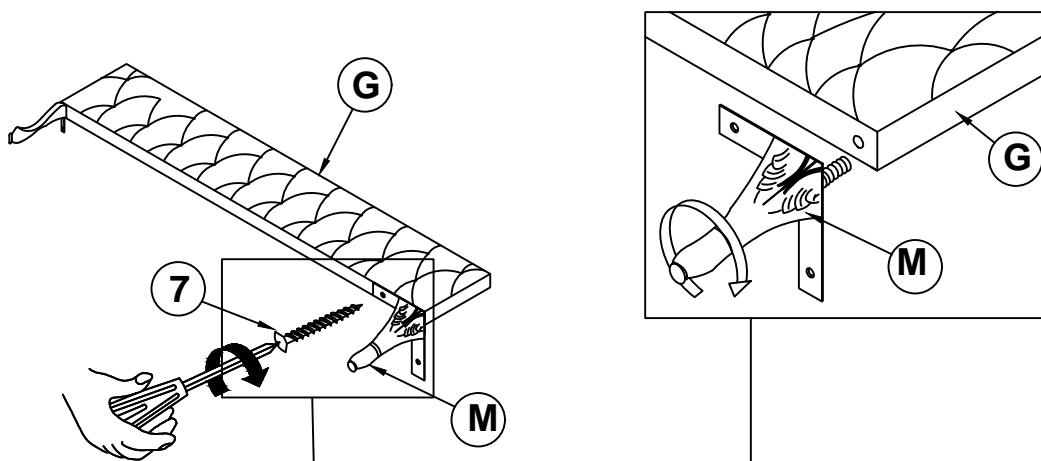


**STEP 6**

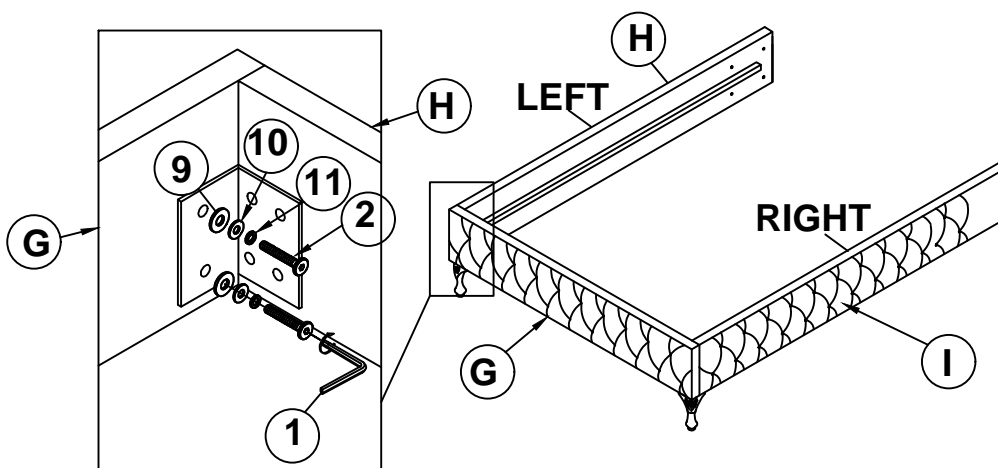


**ASSEMBLY INSTRUCTIONS**


**STEP 7**

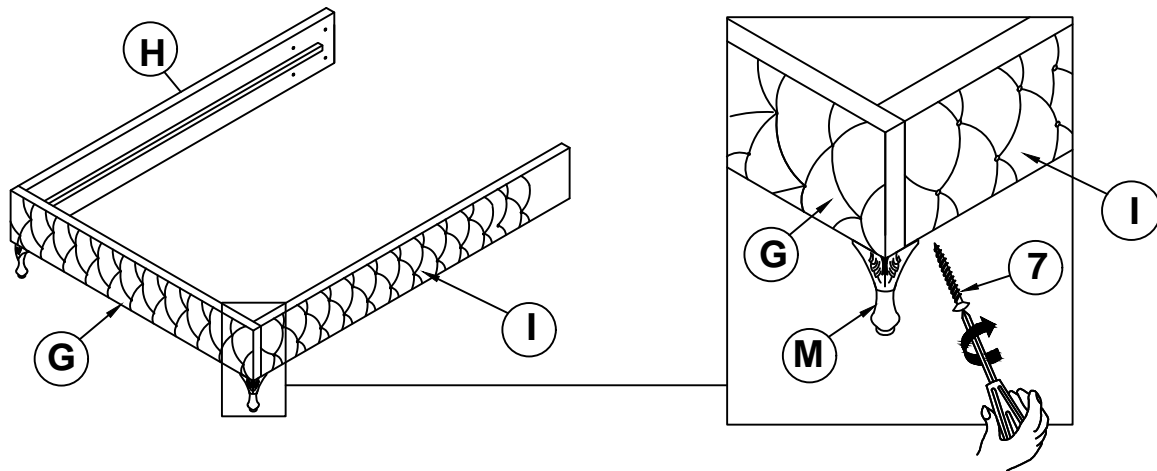

**STEP 8**


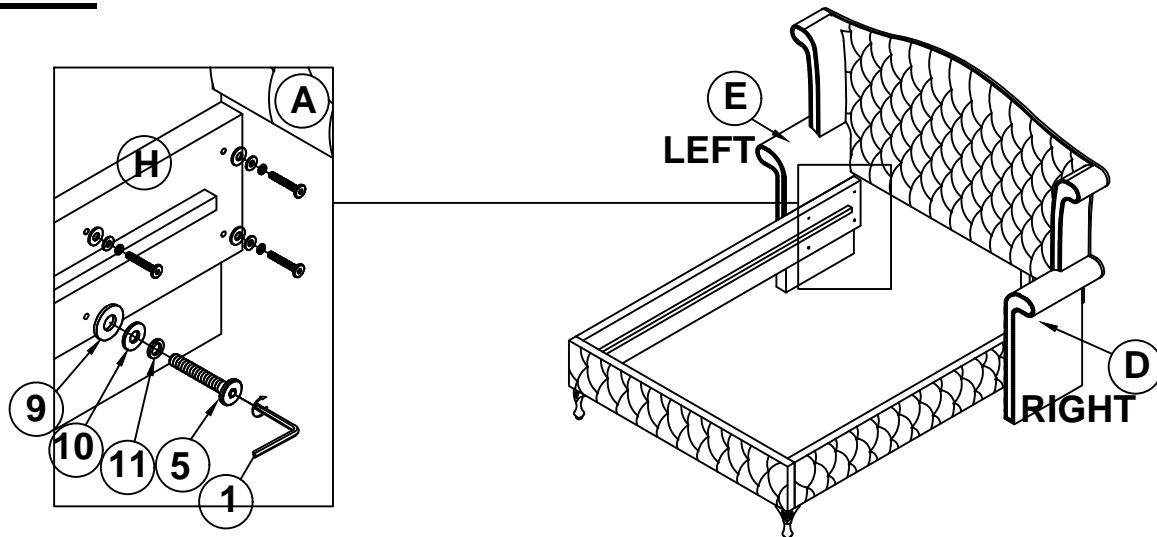


**STEP 9**


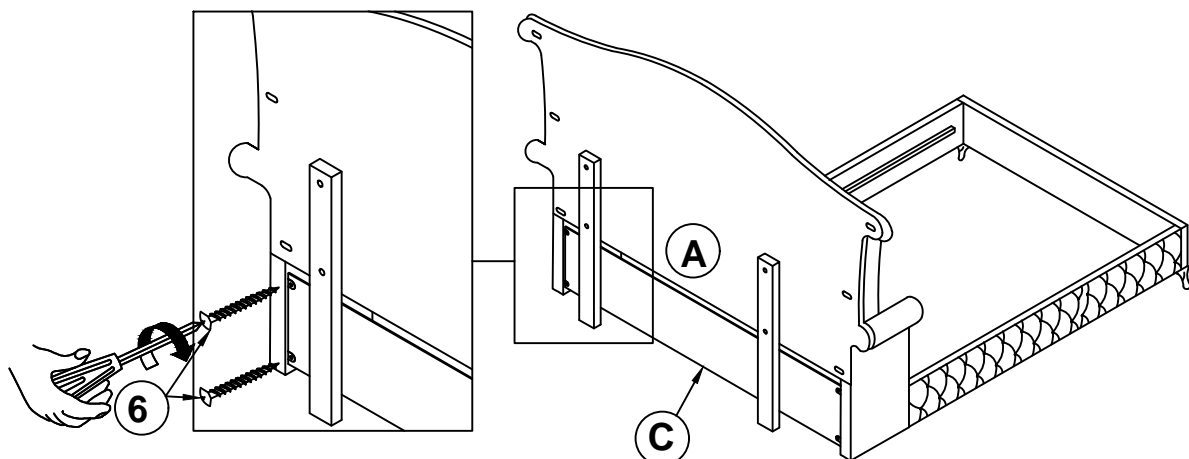


**ASSEMBLY INSTRUCTIONS**



**STEP 10**

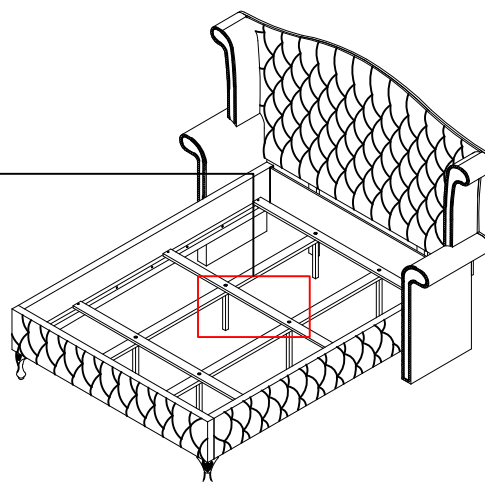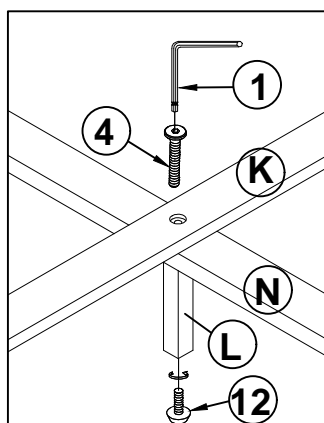

**STEP 11**

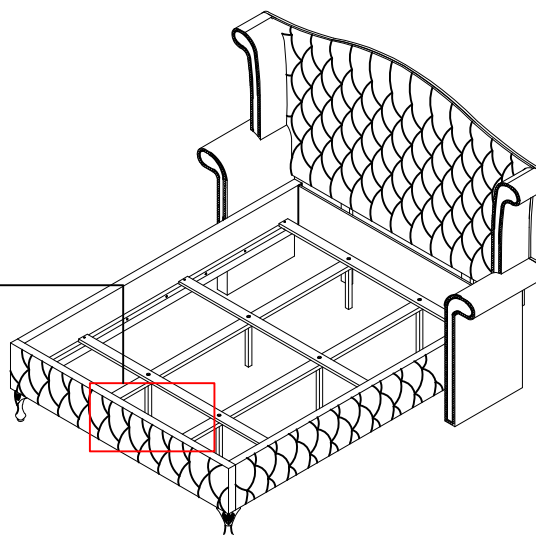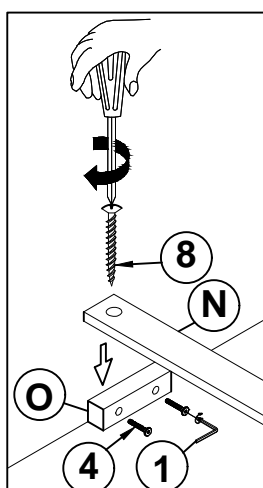

**STEP 12**

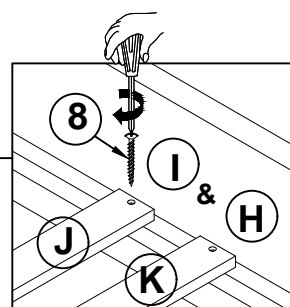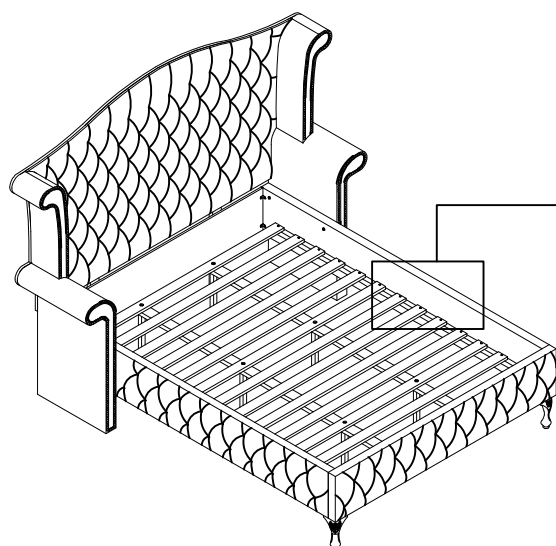


ITEM: **206101Q (B1-B3)**



## ASSEMBLY INSTRUCTIONS

### STEP 13

**COMPLETE**

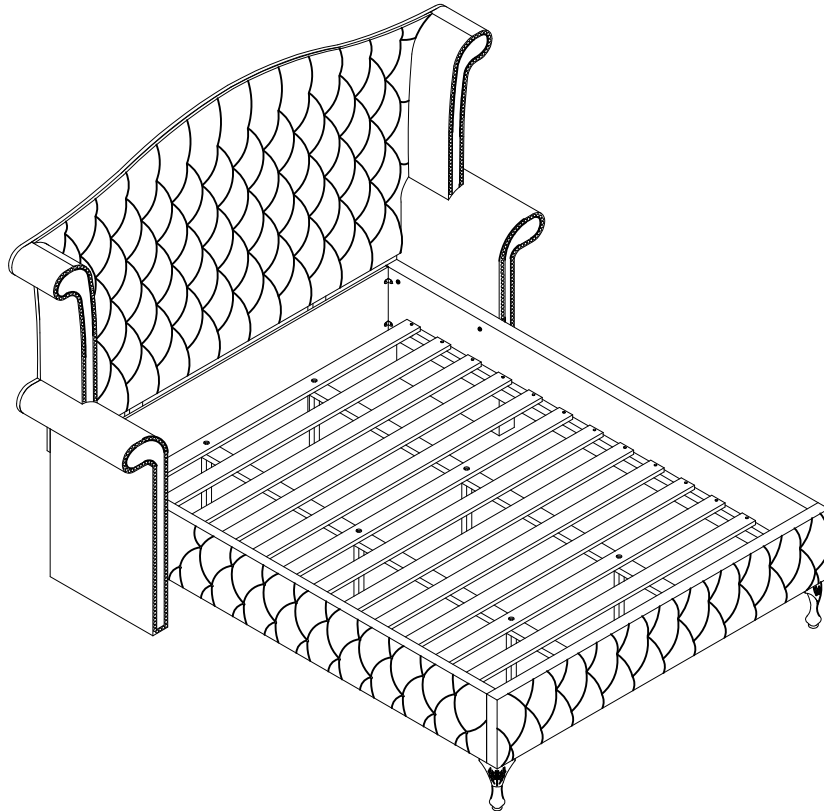




ITEM: **206101Q (B1-B3)**



Inner Size: 61.00"W X 81.00"D

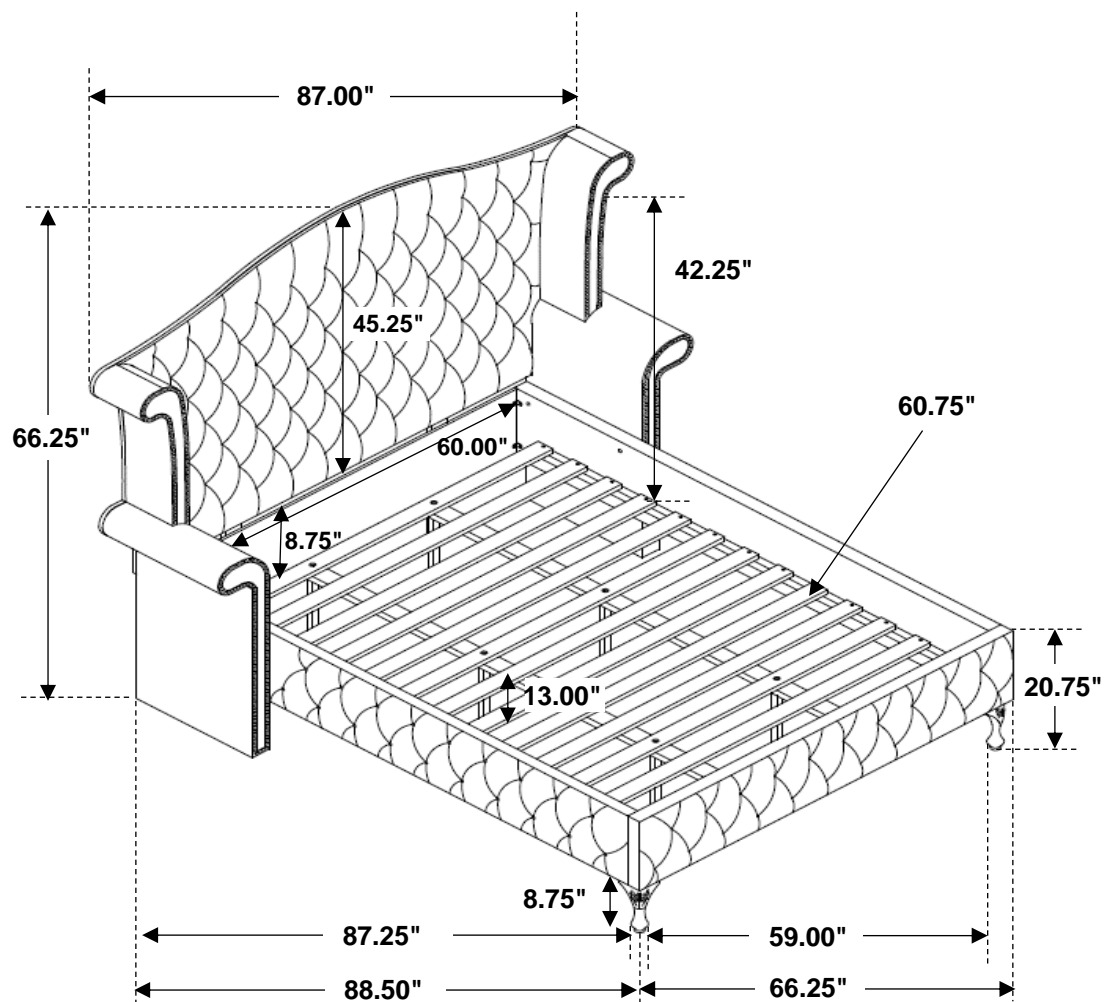

Note: Dimension tolerance  $\pm 5\%$

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**206102**  
***Nightstand***

ITEM: **206102**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B

LEG



4PCS

## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(4MM - RBW)



1PC

3 LOCK WASHER  
(Ø5/16" - RBW)



4PCS

2 BOLT  
(Ø5/16" x 90mm - RBW)



4PCS

4 FLAT WASHER  
(Ø5/16" x 19 x 1.5mm - RBW)



4PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **206102**

## ASSEMBLY INSTRUCTIONS

### STEP 1

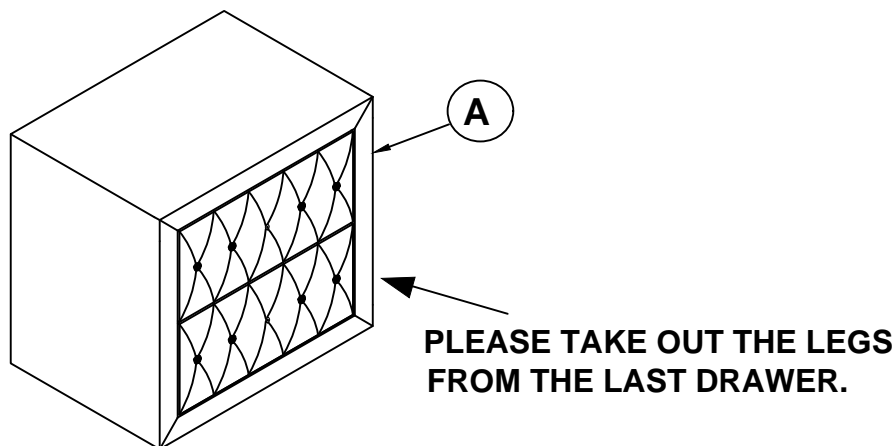

### STEP 2

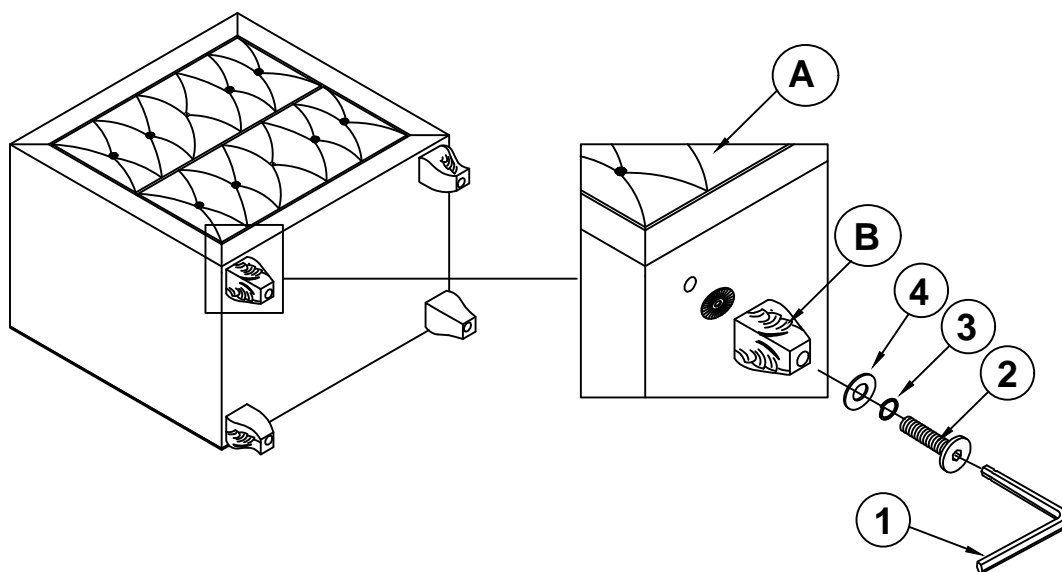


ITEM: **206102**




## ASSEMBLY INSTRUCTIONS

### STEP 3

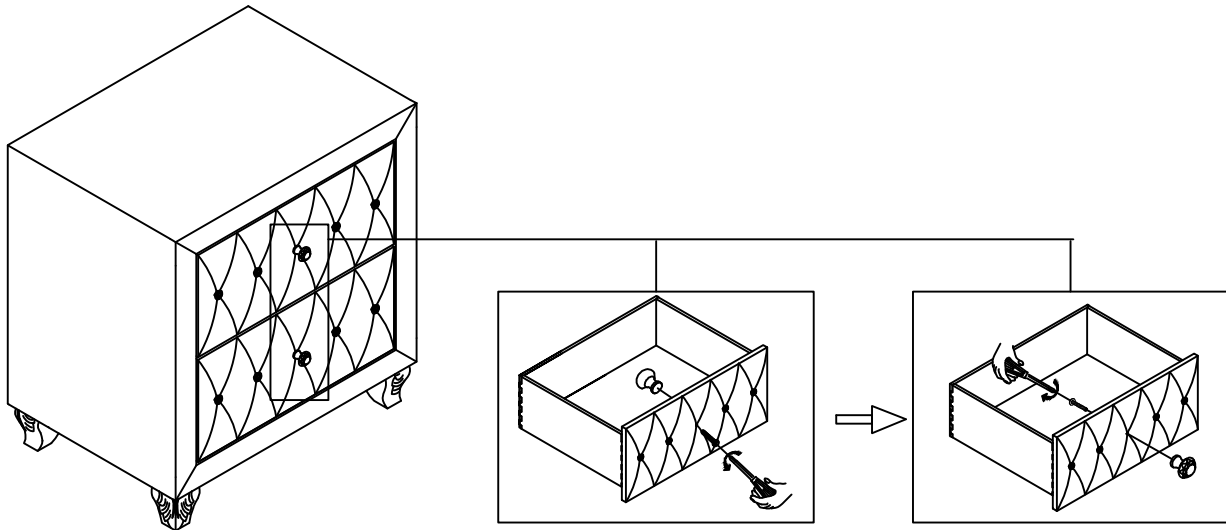

### STEP 4 COMPLETE

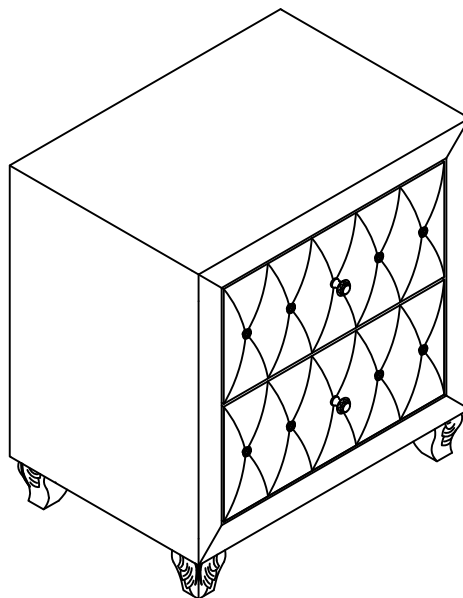

ITEM: **206102**



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

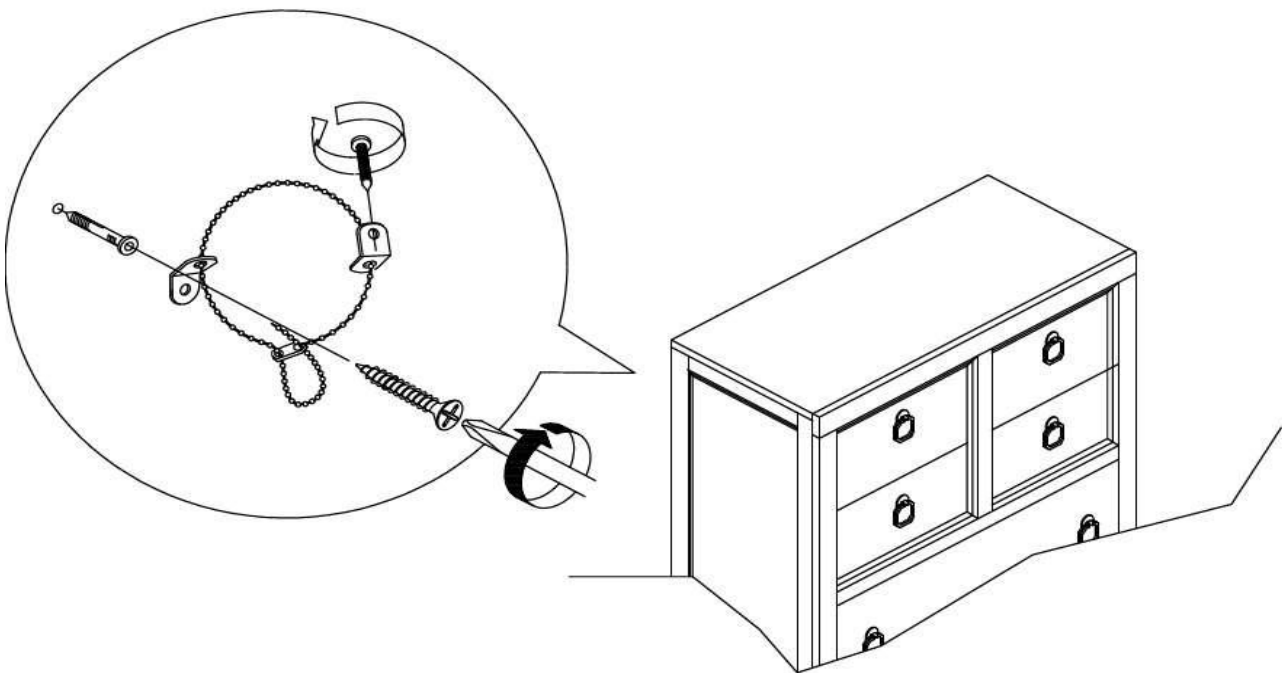

ITEM: **206102**



Inner Size of Drawer : 19.00"W X 14.50"D X 6.00"H X 0.25"T

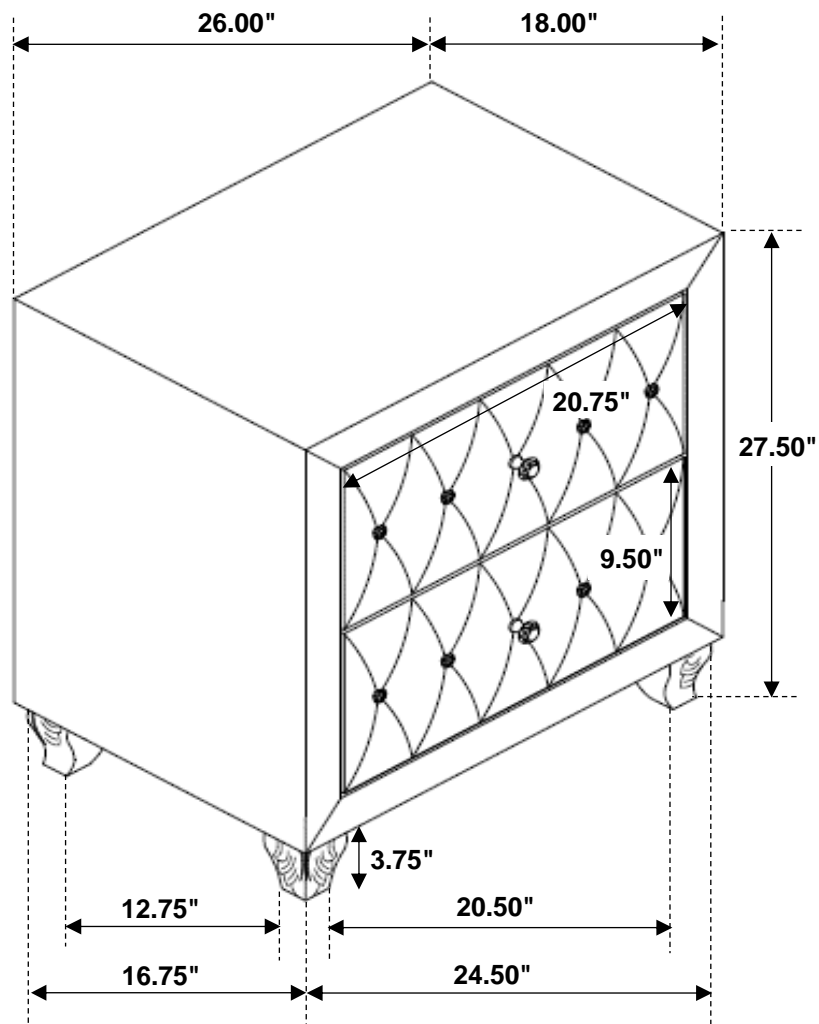

Note: Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**206103**  
***Dresser***



ITEM: **206103**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A DRESSER

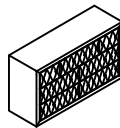


1PC

B LEG



4PCS

C CENTER SUPPORT  
LEG WITH LEVELER



1PC

## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(4MM - RBW)



1PC

3 LOCK WASHER  
(Ø5/16" - RBW)



4PCS

2 BOLT  
(Ø5/16" x 90mm - RBW)



4PCS

4 FLAT WASHER  
(Ø5/16" x 19 x 1.5mm - RBW)



4PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **206103**


## ASSEMBLY INSTRUCTIONS

### STEP 1

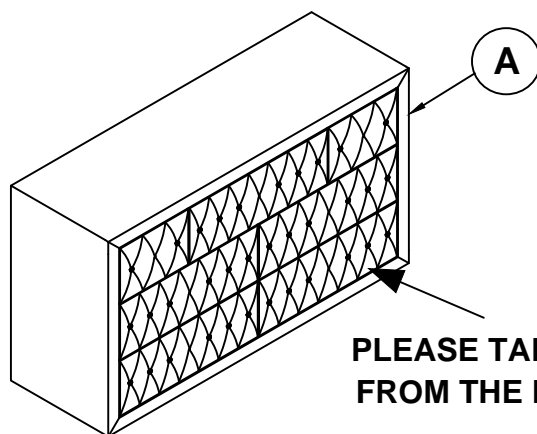

PLEASE TAKE OUT THE LEGS FROM THE LAST DRAWER.

### STEP 2

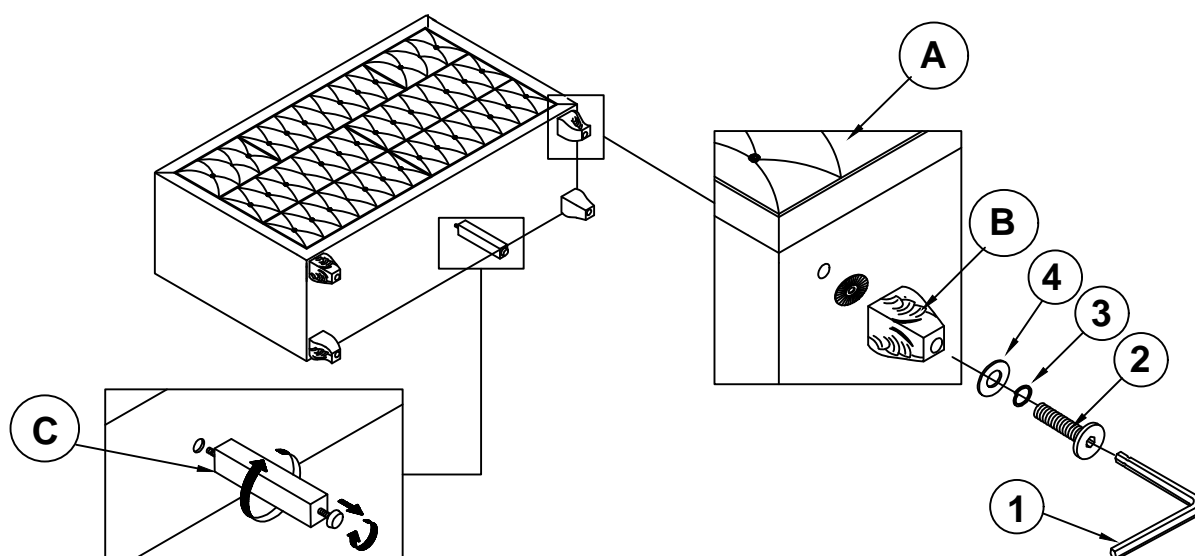


ITEM: **206103**





## ASSEMBLY INSTRUCTIONS

### STEP 3

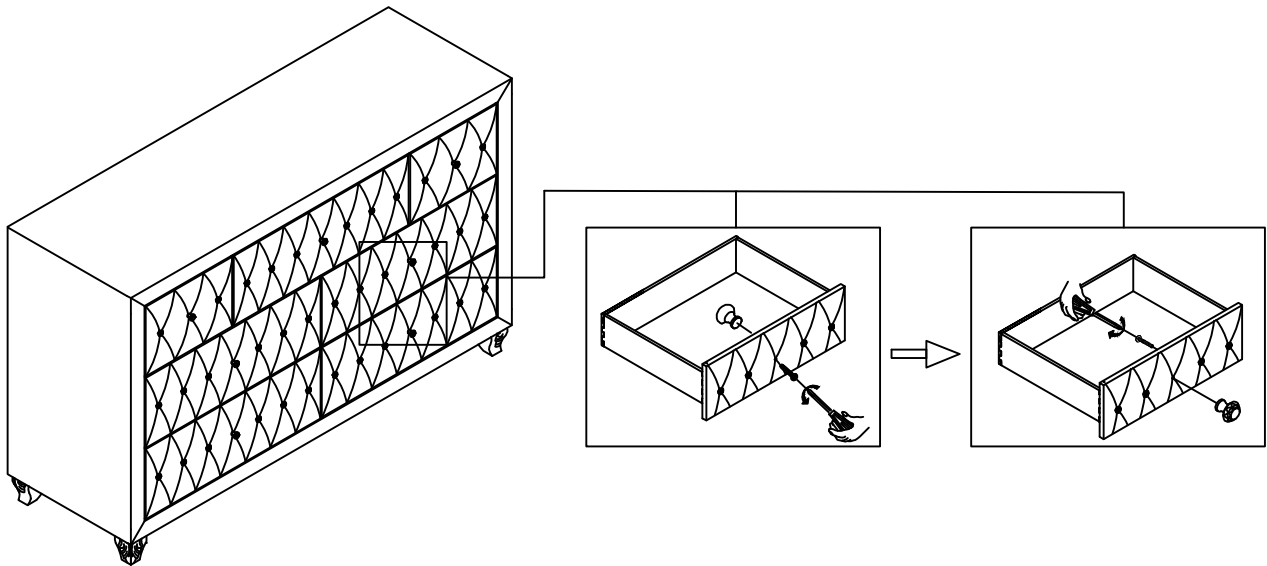

### STEP 4 COMPLETE

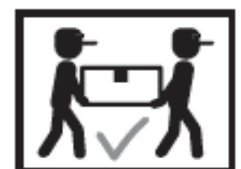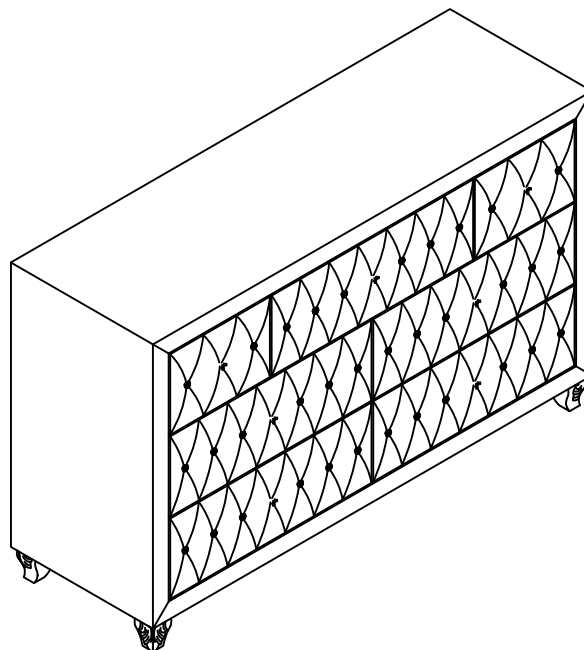

ITEM: **206103**



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

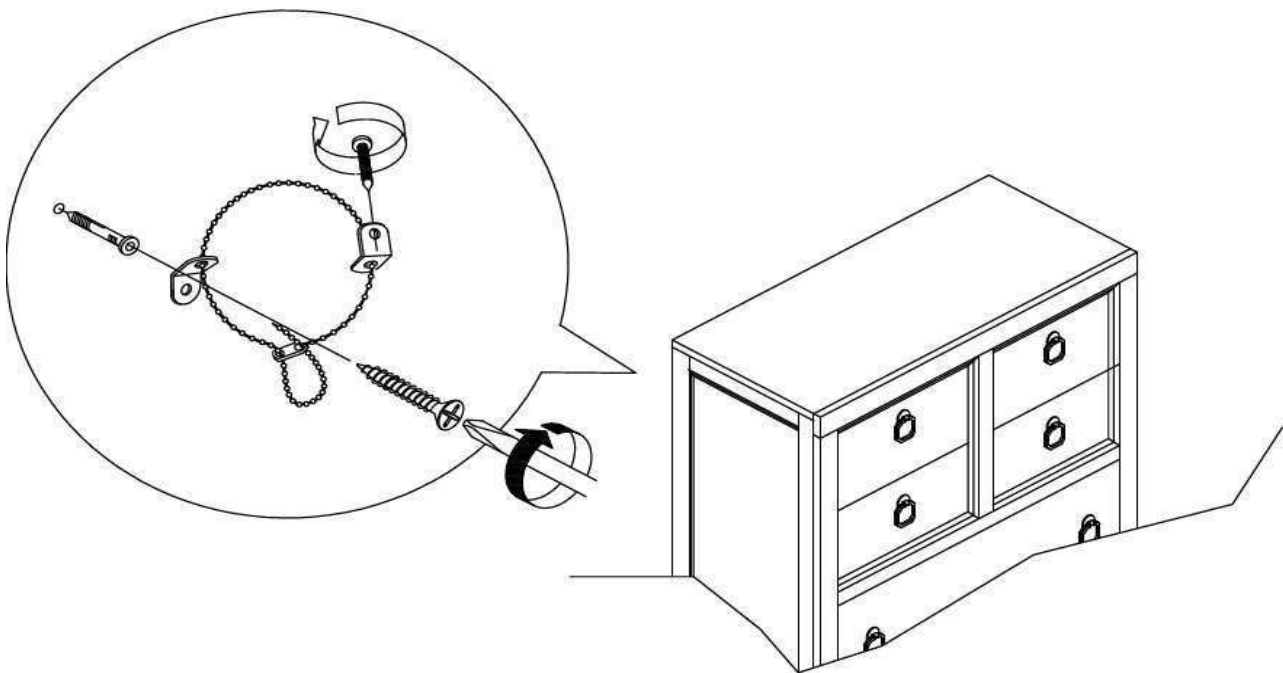


ITEM: **206103**



Inner Size of Drawer A : 11.50"W X 14.50"D X 6.00"H X 0.25"T

Inner Size of Drawer B : 25.25"W X 14.50"D X 6.00"H X 0.25"T

Inner Size of Drawer C: 25.75"W X 14.50"D X 6.00"H X 0.25"T

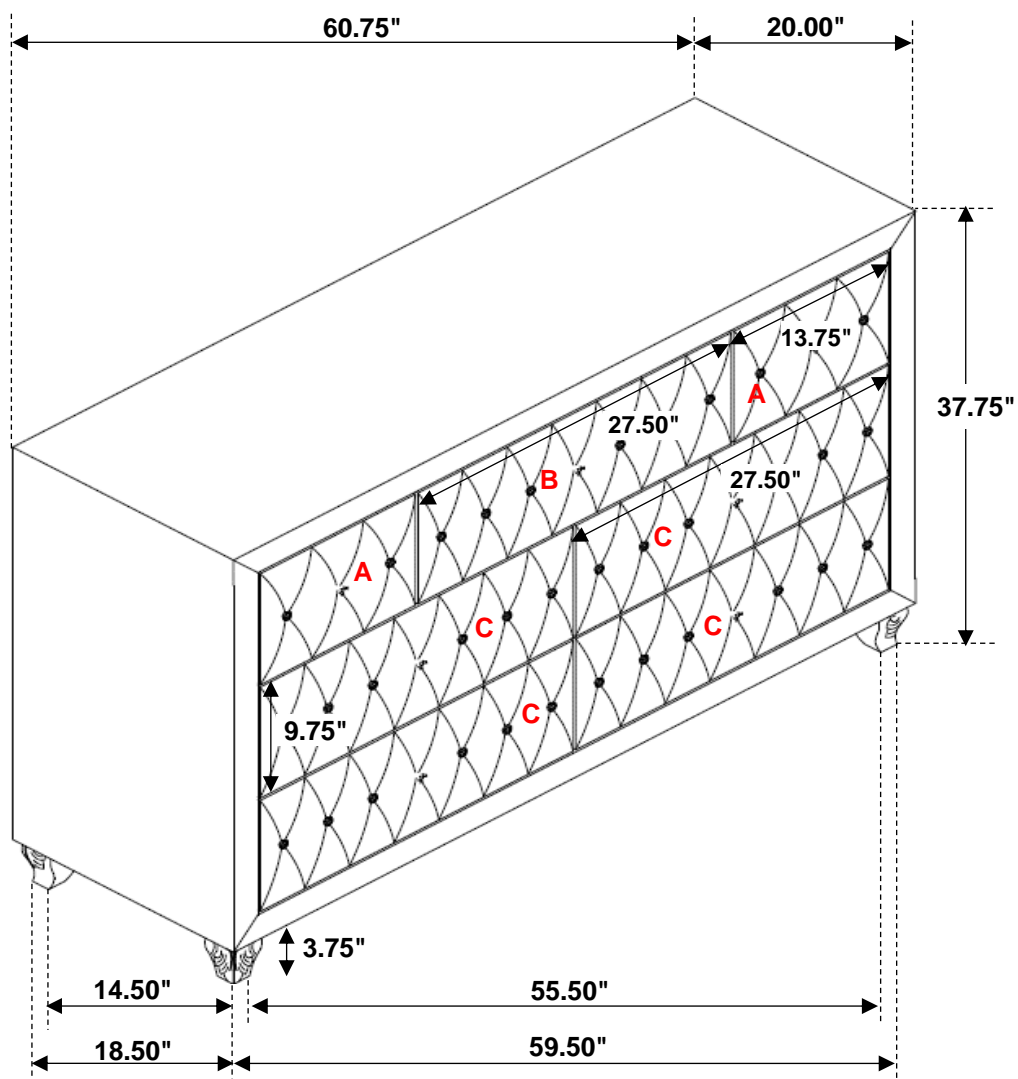

Note: Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**206104**  
***Mirror***

ITEM: **206104**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION


**A** **DRESSER**  
**FROM BOX ITEM**  
**#206103**

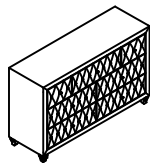

1PC

**B**

**MIRROR**

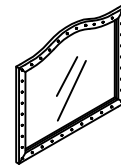

1PC

**C** **MIRROR SUPPORT**  
**(PACKED WITH MIRROR)**



2PCS

## HARDWARE IDENTIFICATION

**1** **ALLEN WRENCH**  
**(4MM - RBW)**



1PC

**3**

**LOCK WASHER**  
**(Ø1/4" - RBW)**



8PCS

**2** **BOLT**  
**(Ø1/4" x 45mm - RBW)**



8PCS

**4**

**FLAT WASHER**  
**(Ø1/4" x 19 x 1.5mm - RBW)**




8PCS

ITEM: **206104**




## ASSEMBLY INSTRUCTIONS

### STEP 1

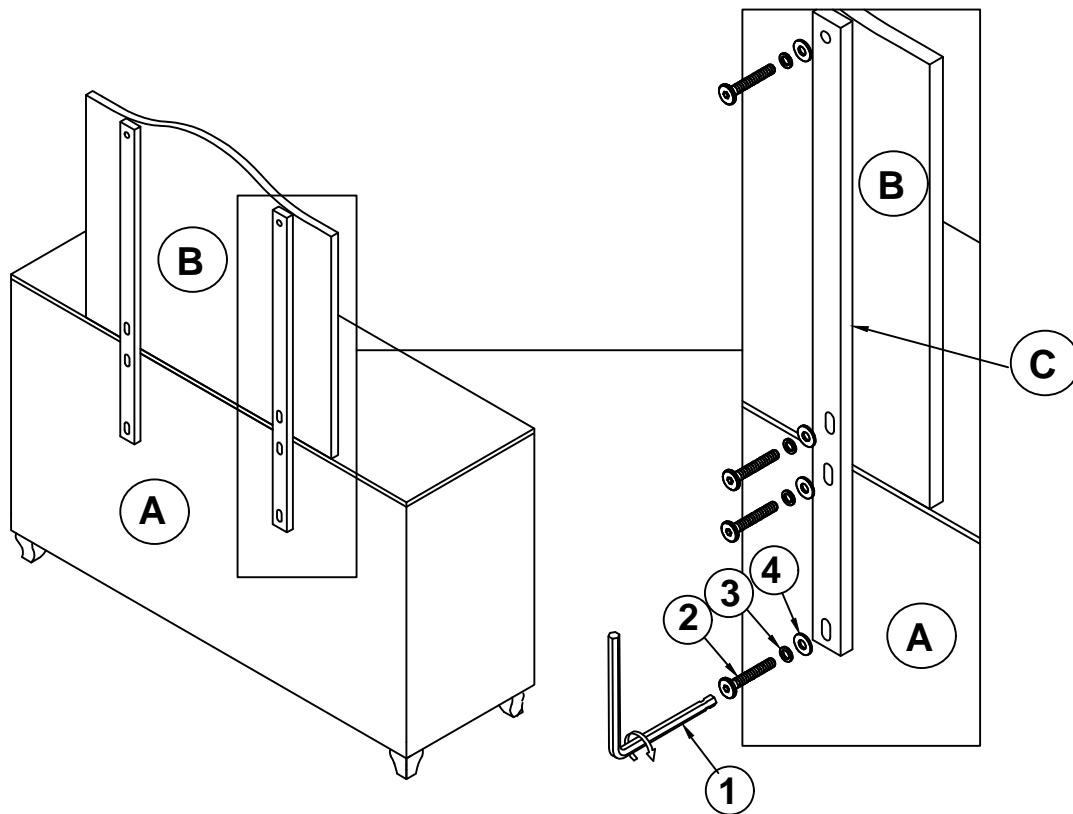


### STEP 2

### COMPLETE

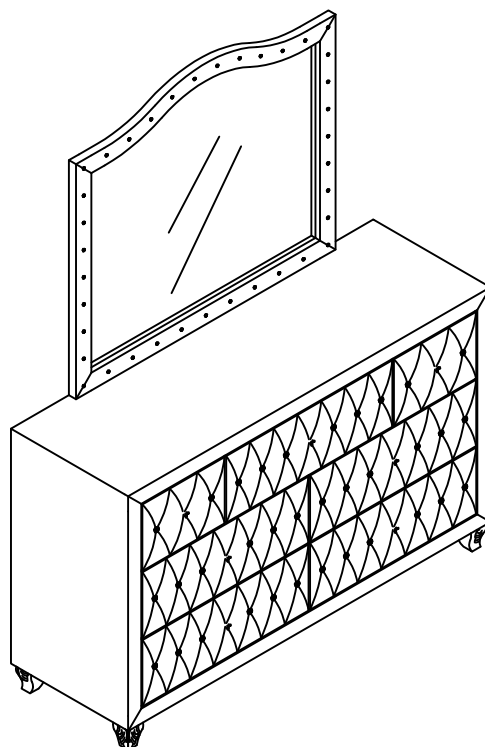



ITEM: **206104**

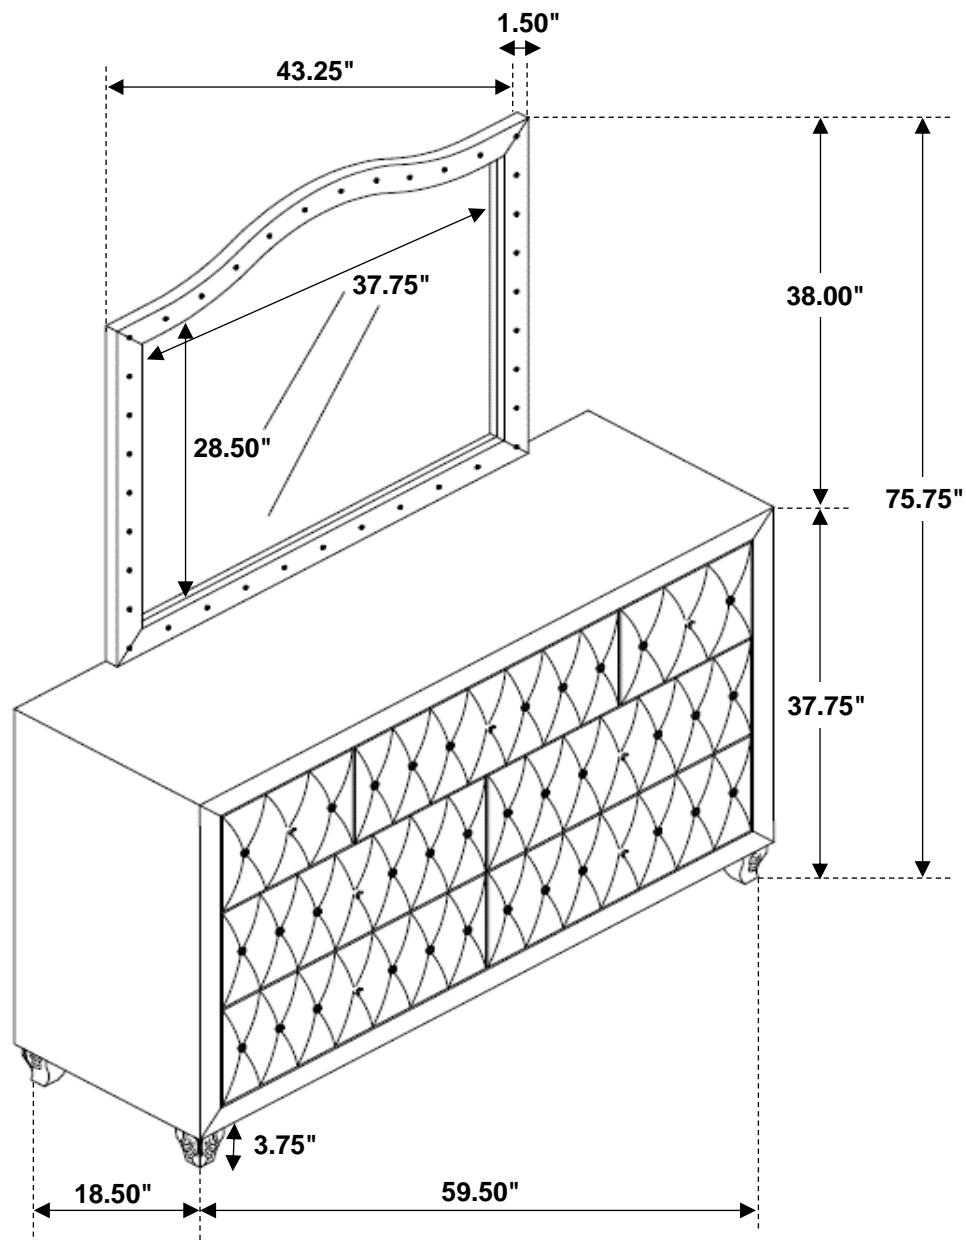

**Note: Dimension tolerance  $\pm 5\%$**