

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 206361Q (B1-B3) Queen Storage Bed

REVISION 0 : 05/23/2017  
REVISION 1 : 06/30/2017  
REVISION 2 : 09/07/2018  
REVISION 3 : 12/06/2018  
REVISION 4 : 10/25/2019  
REVISION 5 : 12/14/2023

# ITEM: 206361Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION


### B1 ( BOX 1 )

A HEADBOARD  
PANEL



1PC

B FOOTBOARD



1PC

C RIGHT  
HEADBOARD  
LEG



1PC


D LEFT  
HEADBOARD  
LEG



1PC

### B2 ( BOX 2 )

E BED RAIL

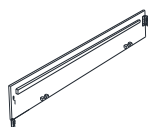


2PCS

F CONCEAL  
PANEL




5PCS

G BED SLAT



3PCS

G2 BED SLAT  
WITH STOPPER




2PCS

H BED SLAT  
SUPPORT WITH  
LEVELER



5PCS

I DRAWER BOTTOM  
TRESTLE BAR



1PC

J DRAWER  
SUPPORT RAIL



2PCS


K DRAWER  
SUPPORT LEG  
WITH LEVELER



1PC


### B3 ( BOX 3 )

L DRAWER BOX




2PCS

HB 206361Q(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

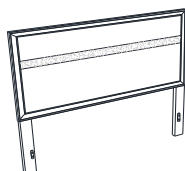

1PC

B 206361Q(B1)  
FROM BOX 1  
FOOTBOARD

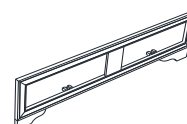

1PC

# ITEM: 206361Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 206361Q (B1)

1	<b>BOLT</b> (M6 x 30mm - BLK)		6PCS	3	<b>FLAT WASHER</b> (1/4" ID x 13mm - BLK)		6PCS
2	<b>LOCK WASHER</b> (1/4" - BLK)		6PCS	4	<b>ALLEN WRENCH</b> (M4 x 60mm - BLK)		1PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 206361Q (B2)

5	<b>FLAT HEAD SCREW</b> (M4 x 32mm - RBW)		14PCS	9	<b>LOCK WASHER</b> (1/4" - BLK)		2PCS
6	<b>PAN HEAD SCREW</b> (M3.5 x 20mm - BLK)		25PCS	10	<b>FLAT WASHER</b> (1/4" ID x 13mm - BLK)		2PCS
7	<b>SHORT BOLT</b> (M6 x 35mm - BLK)		2PCS	11	<b>SMALL ALLEN WRENCH</b> (M4 x 60mm - BLK)		1PC
8	<b>LONG BOLT</b> (M6 x 50mm - BLK)		6PCS	12	<b>BIG ALLEN WRENCH</b> (M5 x 68mm - BLK)		1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **206361Q (B1-B3)**

**COASTER**  
FINE FURNITURE

## ASSEMBLY INSTRUCTIONS


### STEP 1

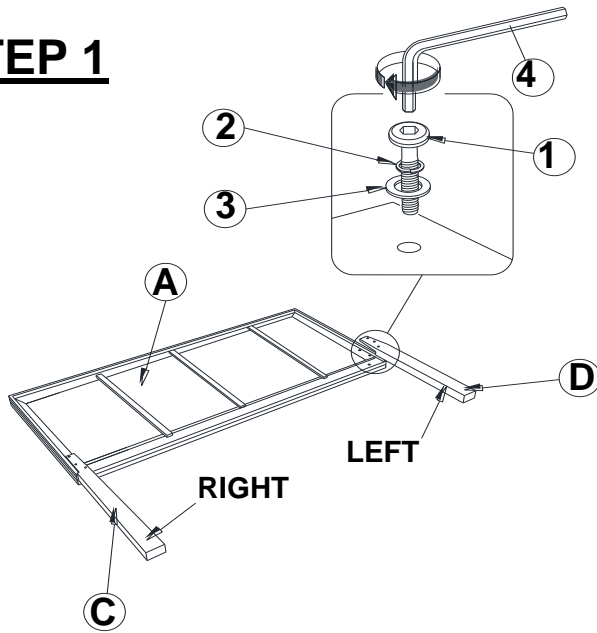


**\*\*BACK VIEW\*\***

Note : Please take note of the marking sticker (L&R) on the leg.


### STEP 2

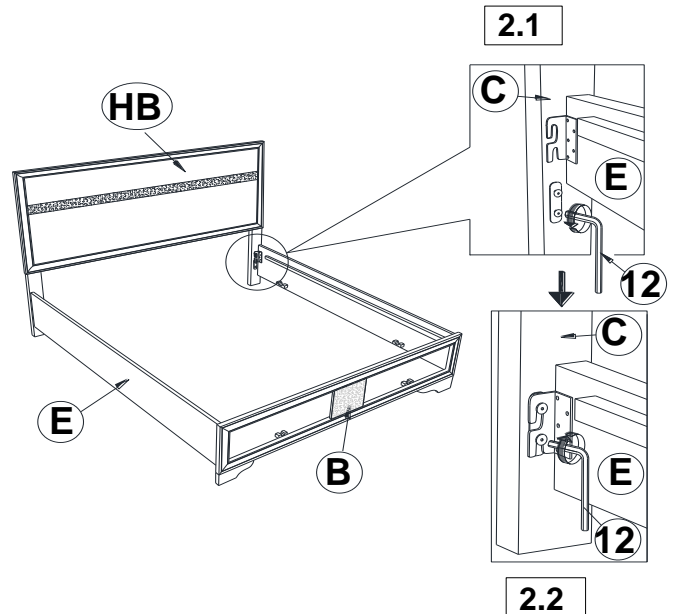

### STEP 3

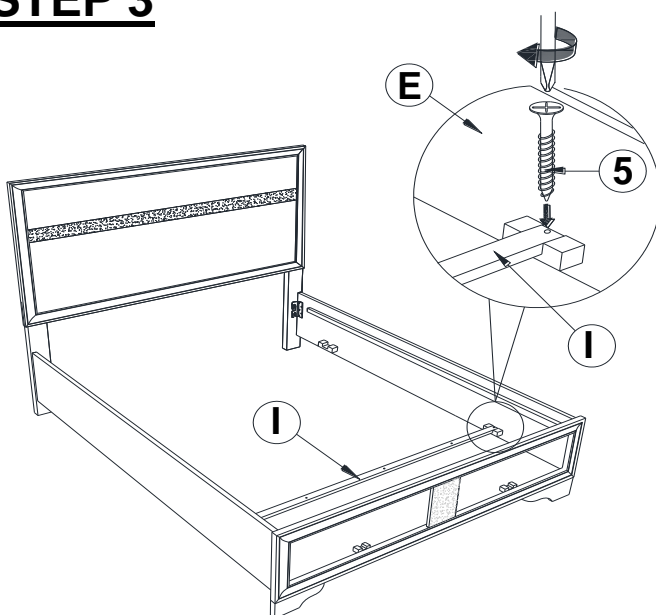

### STEP 4

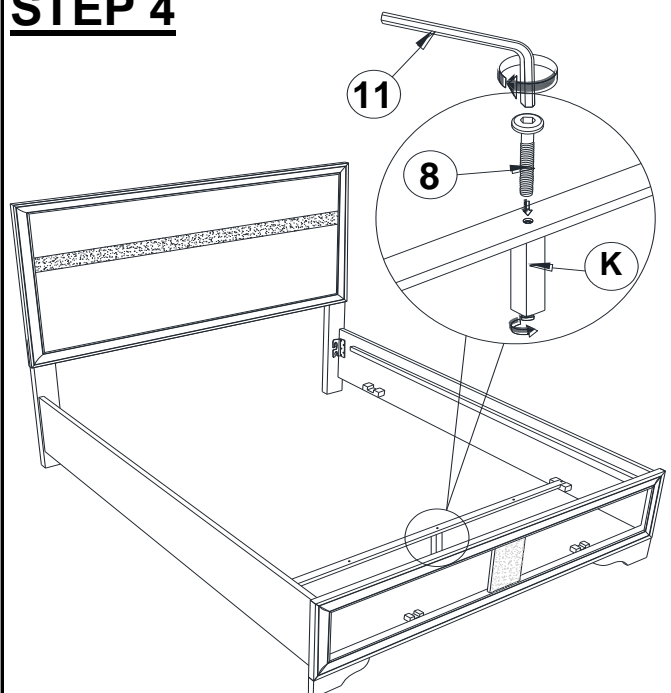


ITEM: **206361Q (B1-B3)**




## ASSEMBLY INSTRUCTIONS


### STEP 5

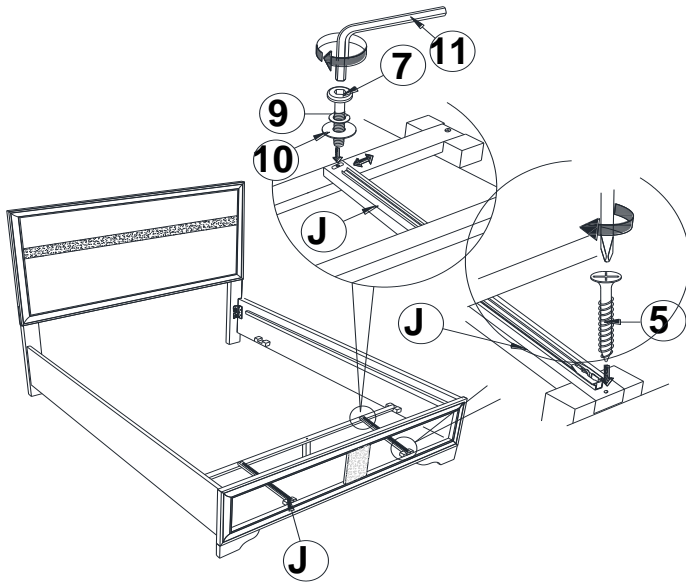


### STEP 6

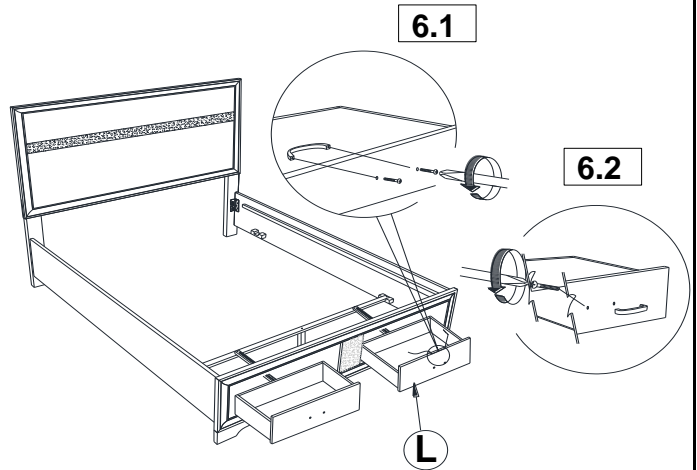

### STEP 7

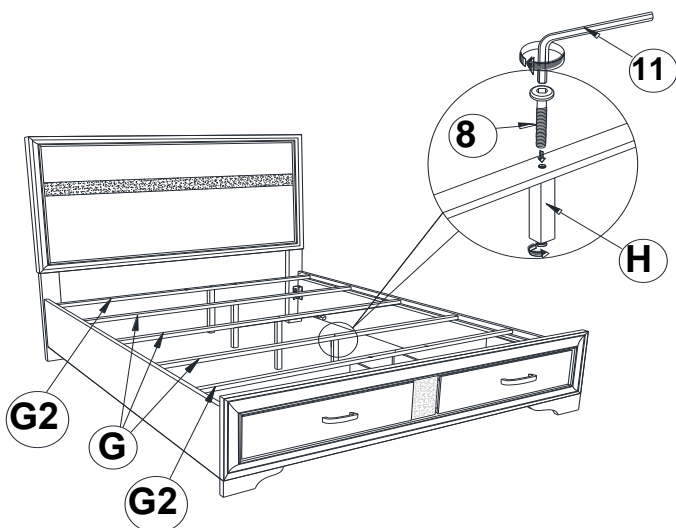

### STEP 8

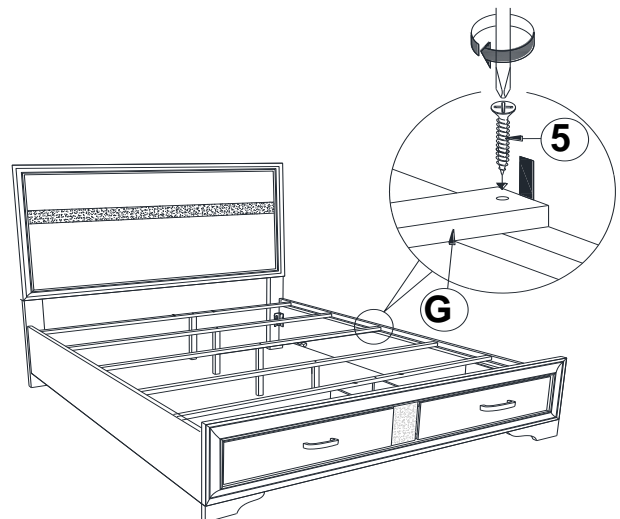


ITEM: **206361Q (B1-B3)**




## ASSEMBLY INSTRUCTIONS


### STEP 9

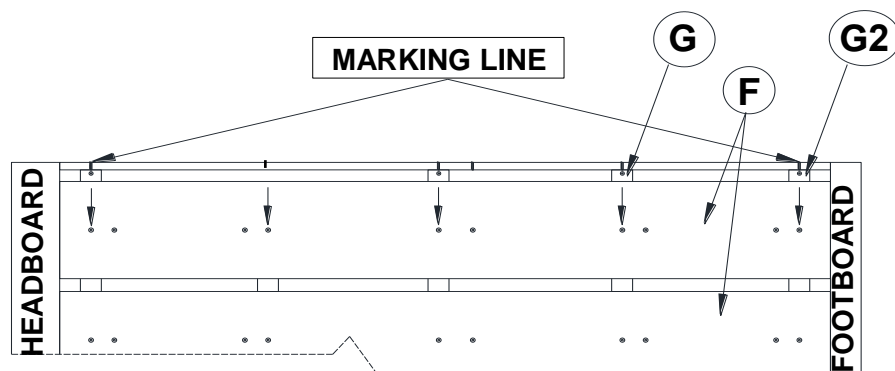

TIGHTEN THE PANHEAD SCREW (6) BY FOLLOW THE ARROW AS SHOWN

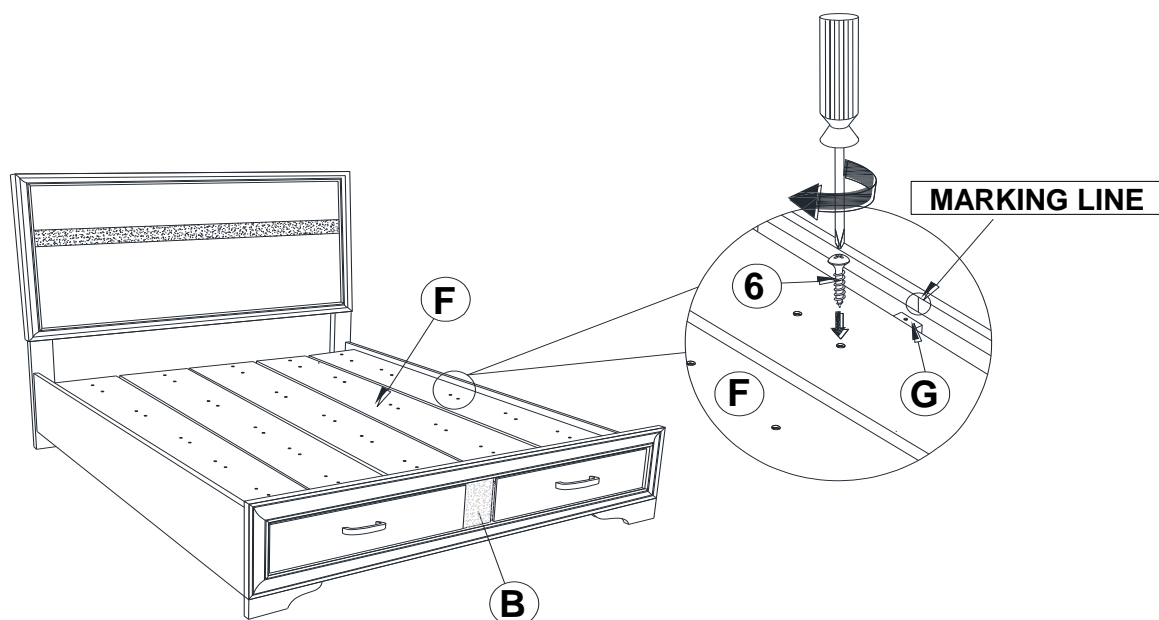

### STEP 10 COMPLETE

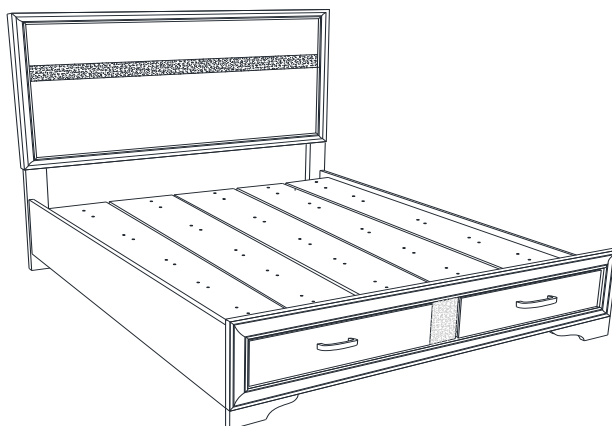


# ITEM: 206361Q (B1-B3)



Inner Size of Bed: 60.75"W X 81.00"D

Inner Size of Drawer : 4.00"W X 15.00"D X 23.25"H X 0.25"T

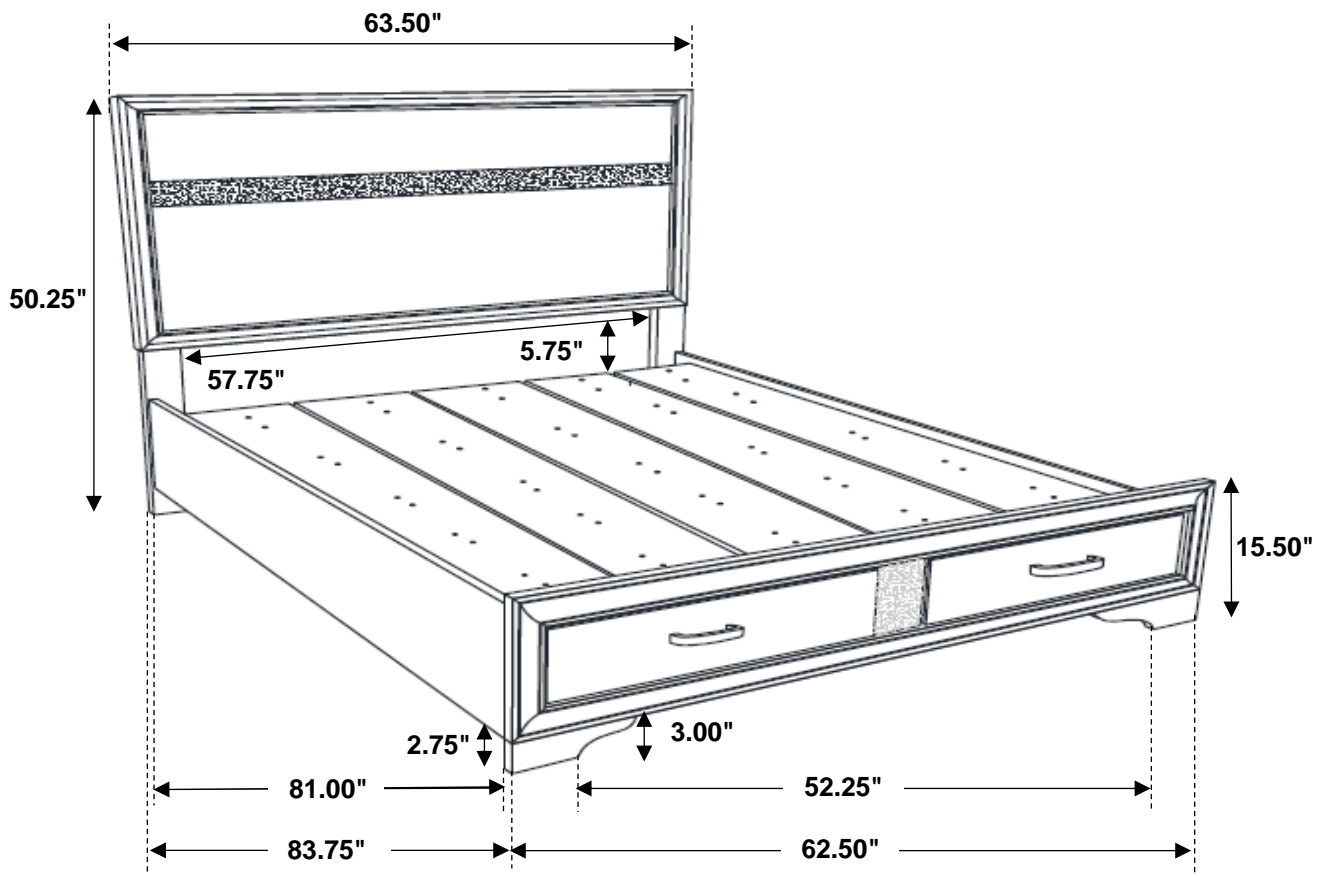

Note: Dimension tolerance  $\pm 5\%$