



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 215651Q(B1&B2) Queen Bed

# ITEM: 215651Q(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.










ASSEMBLY TIME


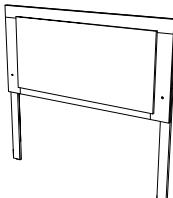

20 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	FOOTBOARD		1PC
C	LEFT HEADBOARD LEG		1PC
D	RIGHT HEADBOARD LEG		1PC
E	BED SLAT		4PCS
F	BED SLAT SUPPORT WITH LEVELER		4PCS
G	ADAPTER		1PC

### B2 (BOX 2)

H	BED RAIL		2PCS
HB	215651Q(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
B	215651Q(B1) FROM BOX 1 FOOTBOARD		1PC

# ITEM: 215651Q(B1&B2)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 215651Q(B1)

1	<b>BOLT</b> (M6 x 30mm - BLK)		6PCS
2	<b>LOCK WASHER</b> (1/4" - BLK)		6PCS
3	<b>FLAT WASHER</b> (1/4" x 13mm - BLK)		6PCS
4	<b>SMALL ALLEN WRENCH</b> (M4 x 65mm - BLK)		1PC
5	<b>BIG ALLEN WRENCH</b> (M5 x 65mm - BLK)		1PC
6	<b>FLAT HEAD SCREW</b> (M4 x 32mm - RBW)		8PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215651Q(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 1


Note : Please put item on soft surface.

Please take note of the marking sticker (L&R) on the leg.

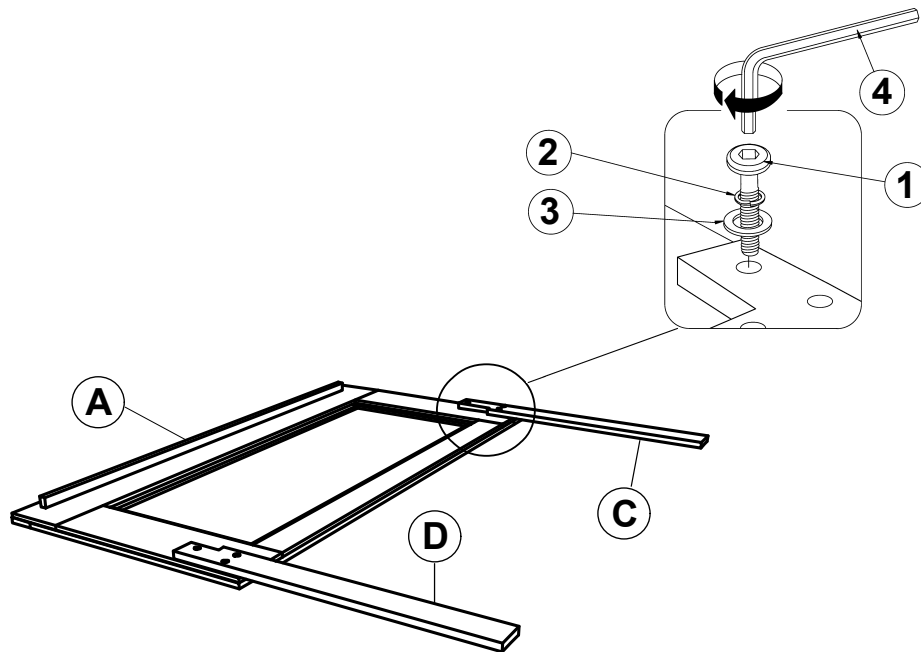

**\*\*BACK VIEW\*\***

### STEP 2

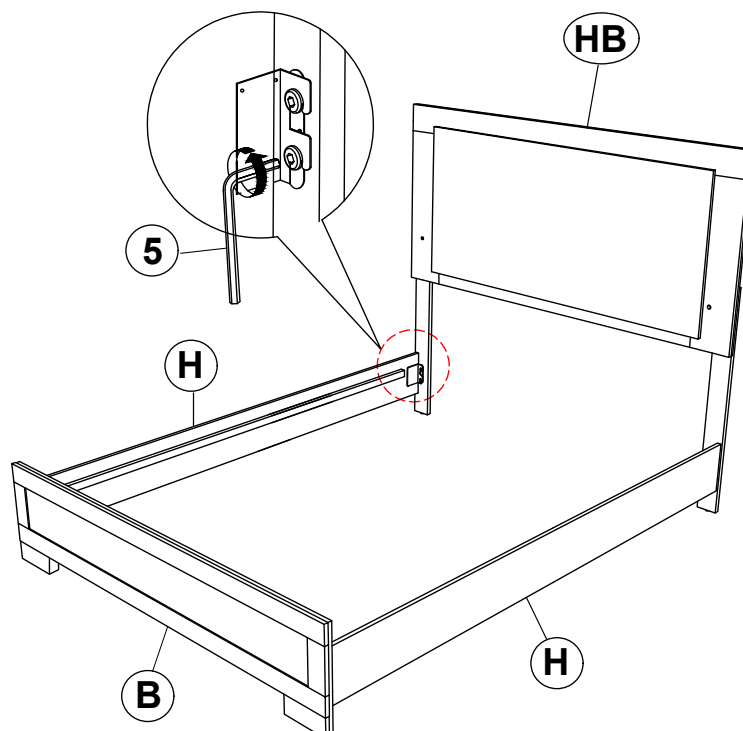


ITEM: **215651Q(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 3

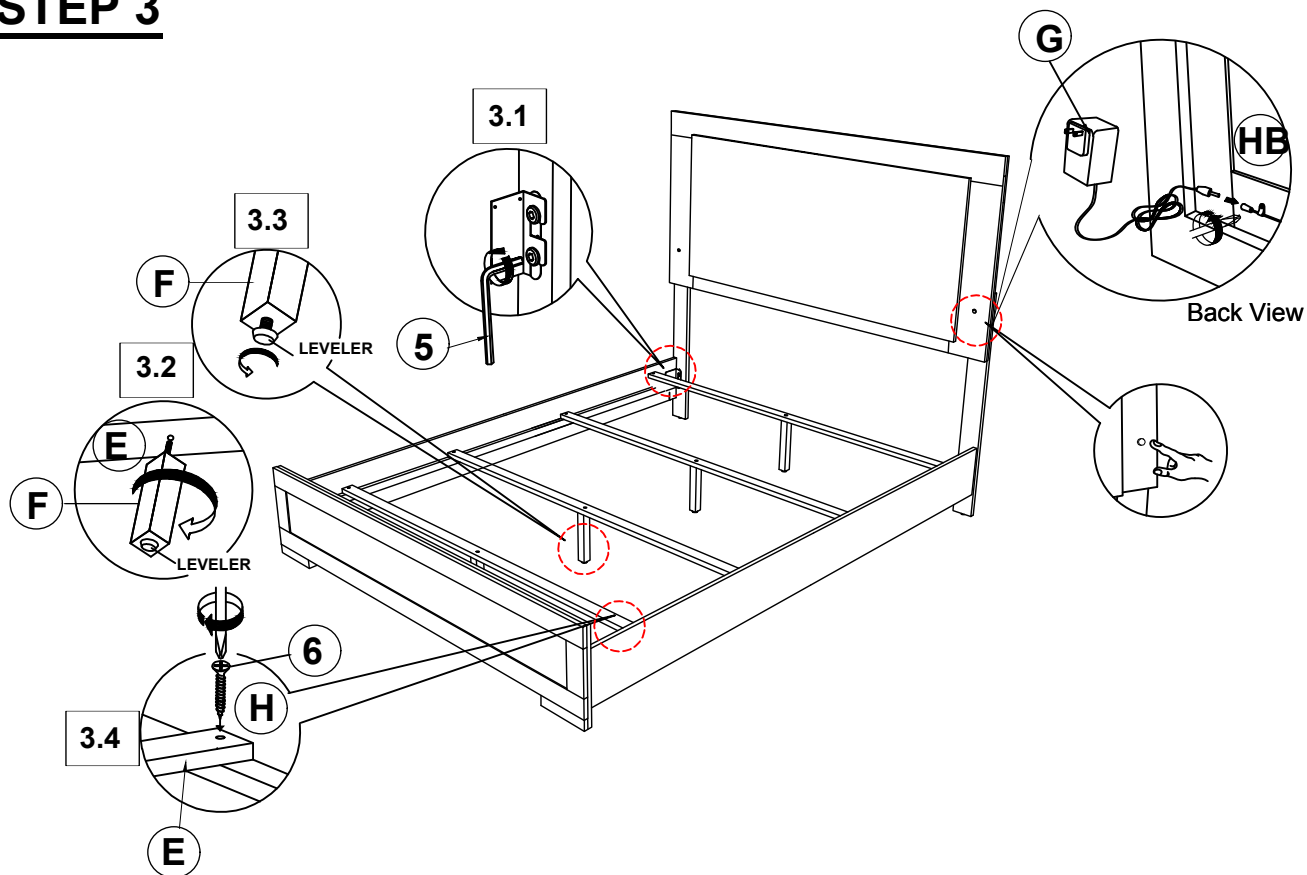

### STEP 4 COMPLETE

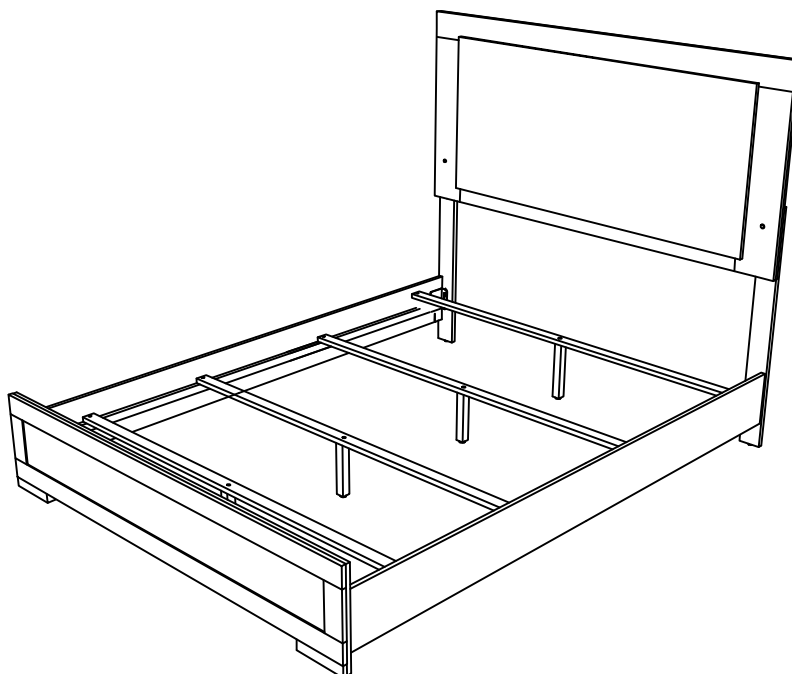



Technical drawing of a bed frame with dimensions:

- Headboard width: 63.50"
- Headboard height: 51.50"
- Headboard depth: 16.50"
- Headboard panel width: 57.50"
- Headboard panel height: 4.00"
- Headboard panel depth: 5.75"
- Headboard panel thickness: 3.50"
- Headboard panel width (inner): 60.75"
- Headboard panel height (inner): 12.50"
- Headboard panel width (outer): 49.25"
- Headboard panel height (outer): 81.25"
- Headboard panel width (total): 62.50"
- Headboard panel height (total): 83.25"

**COASTERFURNITURE.COM**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**215652**  
***Nightstand***

ITEM: **215652**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A NIGHTSTAND

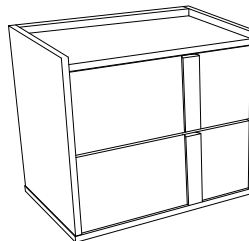


1PC

B LEG WITH LABEL B



2PCS

C LEG WITH LABEL C




2PCS

## HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW  
(M4 x 28mm - RBW)



12PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: **215652**


## ASSEMBLY INSTRUCTIONS




### STEP 1

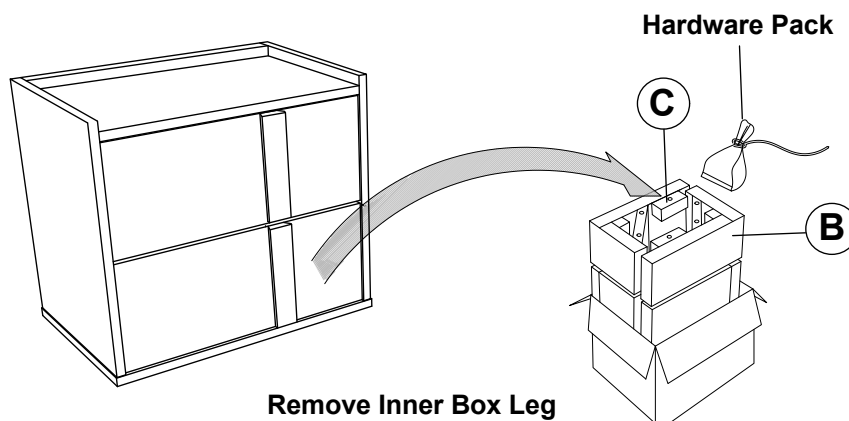

### STEP 2

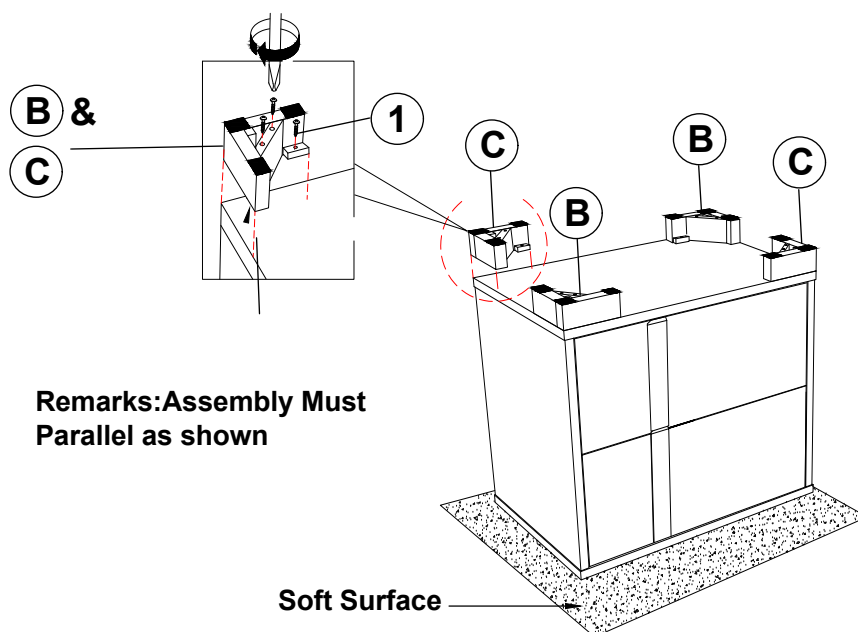


### STEP 3 COMPLETE

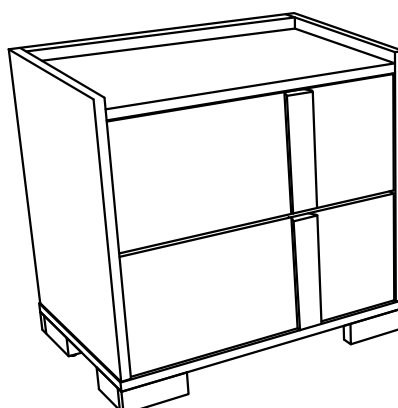

ITEM: **215652**



Inner Size of Drawer : 20.25"W x 11.25"D x 4.00"H x 0.25"T

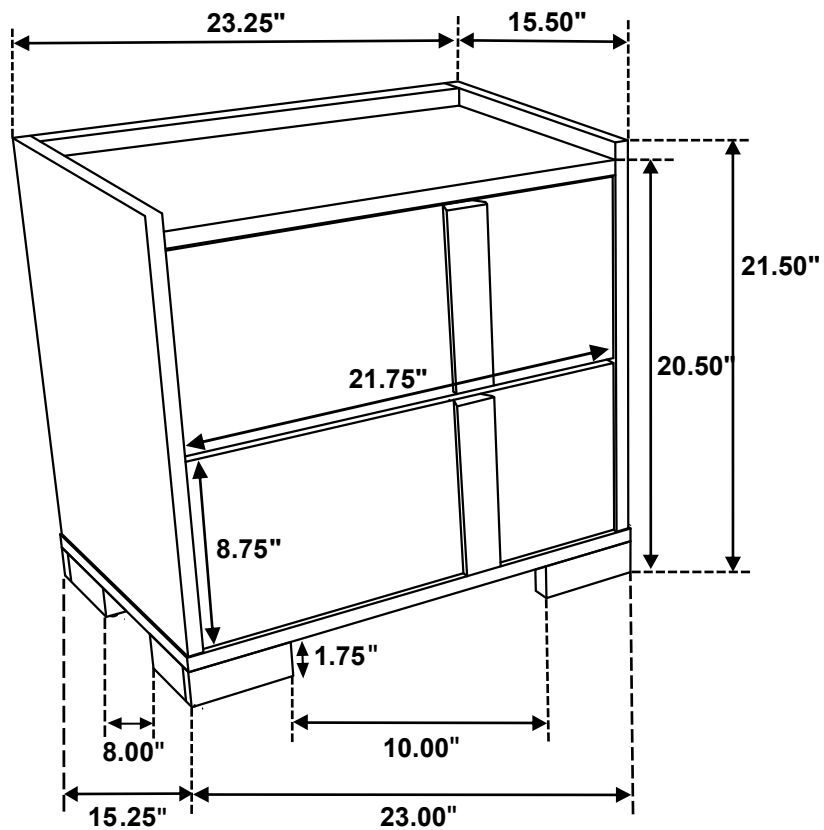

Note : Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215653**  
***Dresser***

ITEM: **215653**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A


NIGHTSTAND

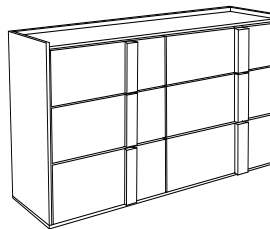

1PC

B


LEG WITH LABEL B



2PCS

C


LEG WITH LABEL C



2PCS

D

CENTER SUPPORT LEG WITH  
LAVELLER



1PC

## HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW  
(M4 x 28mm - RBW)



16PCS

2

WOOD DOWEL  
(M6 x 30mm)



2PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215653**


## ASSEMBLY INSTRUCTIONS




### STEP 1

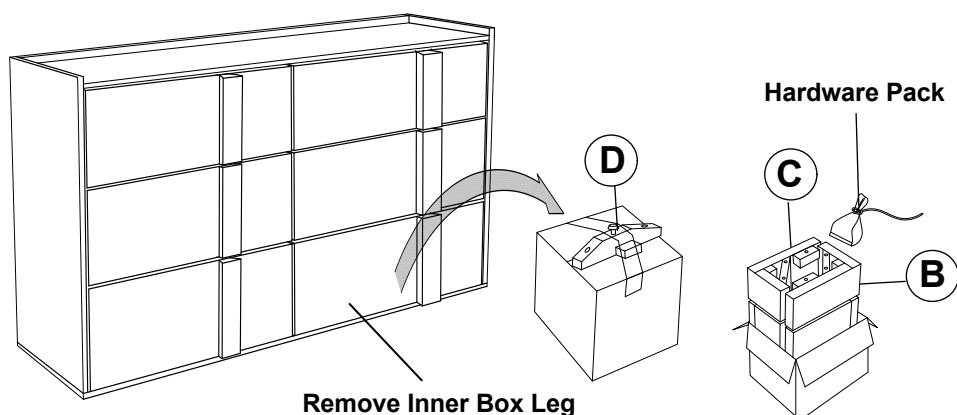

### STEP 2

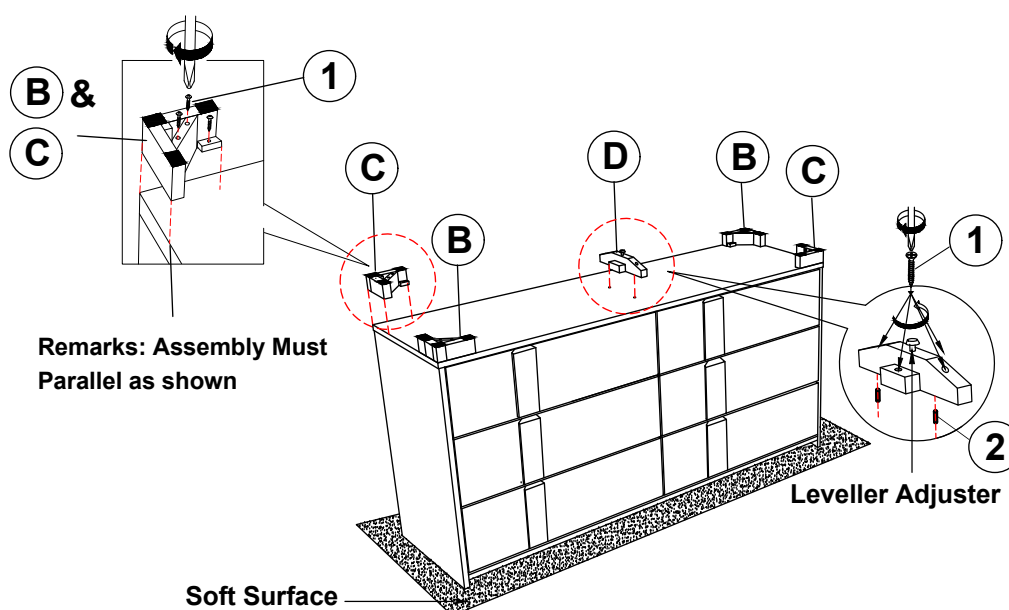


### STEP 3 COMPLETE

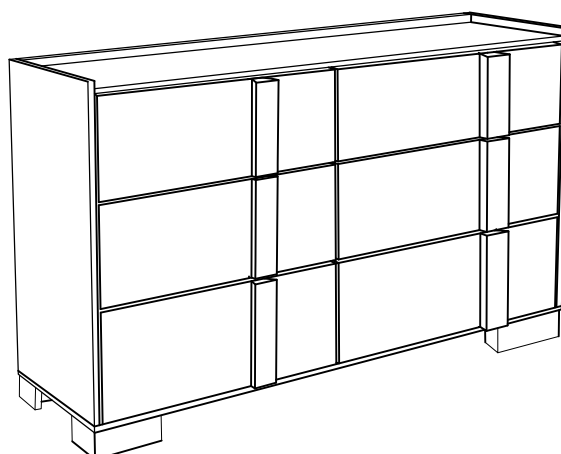

ITEM: **215653**



**Inner Size of Drawer : 28.50"W x 11.00"D x 10.50"H x 0.25"T**

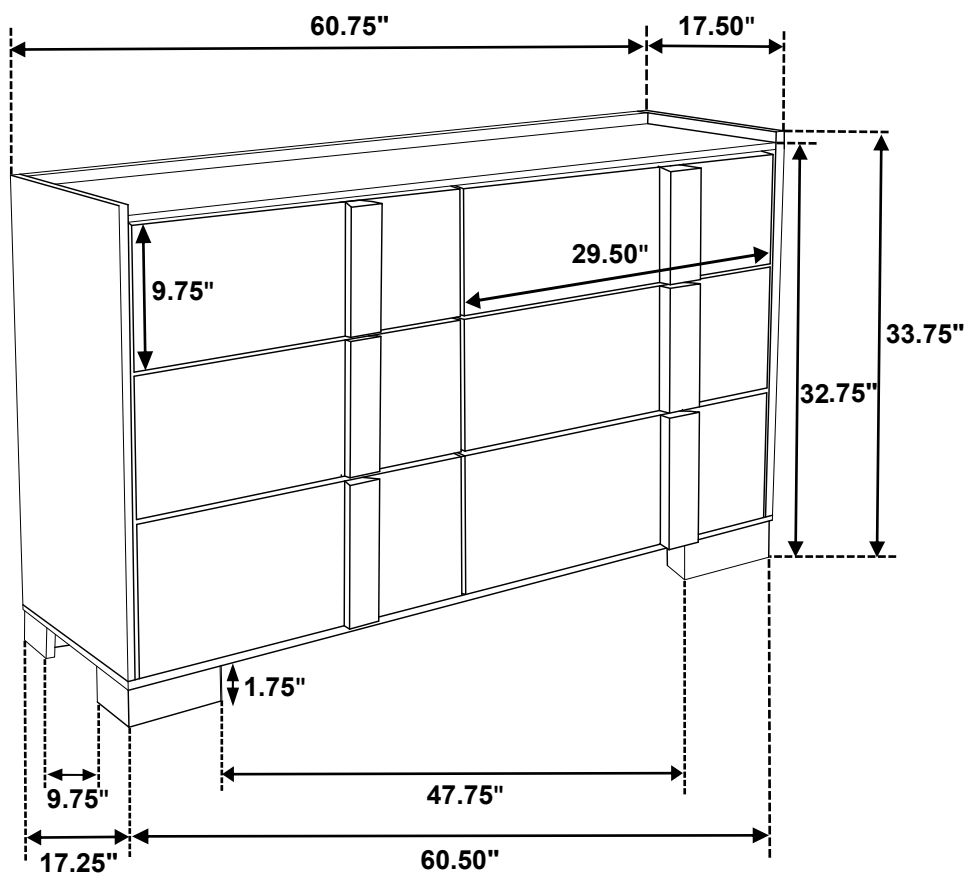

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215654**  
***Mirror***

ITEM: **215654**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


## PARTS IDENTIFICATION

A MIRROR

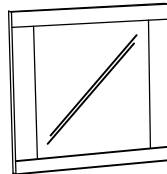


1PC

B DRESSER FROM  
BOX ITEM #215653

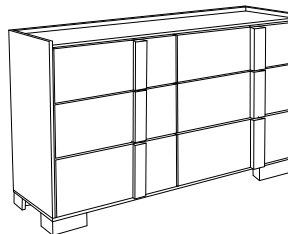

1PC

C MIRROR SUPPORT  
(PACKED WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW  
(M4 x 32mm - RBW)



10PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: **215654**

## ASSEMBLY INSTRUCTIONS




### STEP 1

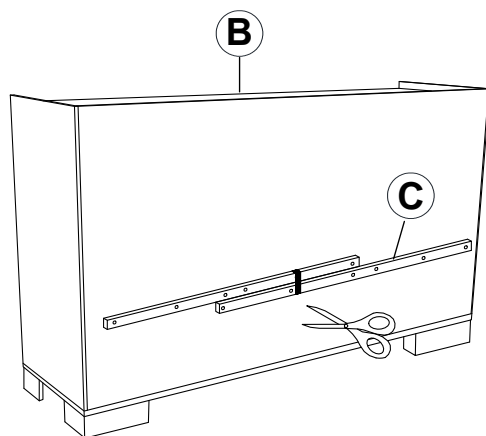


**\*\*BACK VIEW\*\***

### STEP 2

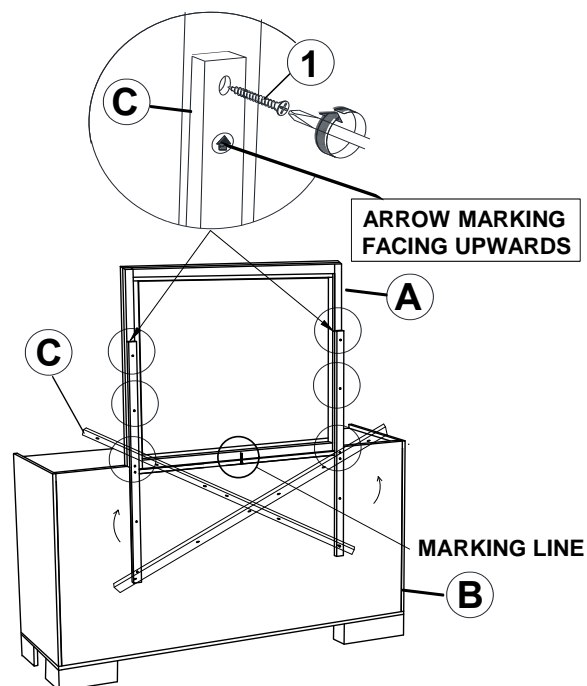


**\*\*BACK VIEW\*\***

### STEP 3

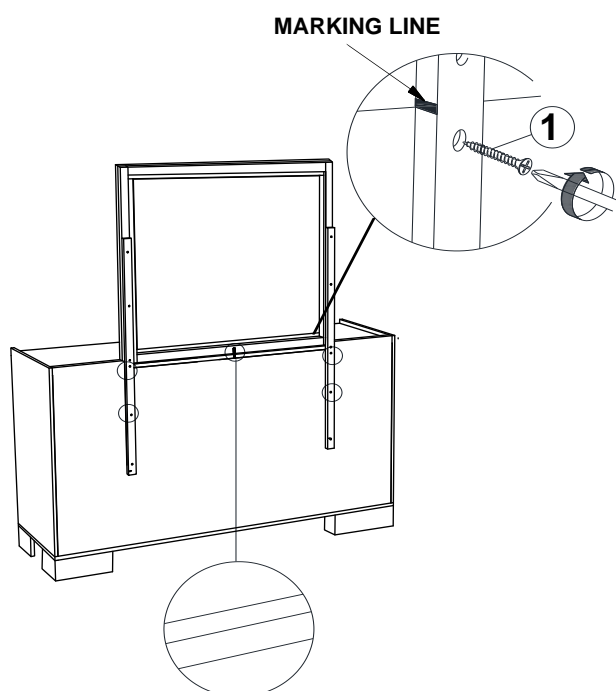


**REMARK**  
**MARKING LINE MUST BE ALIGNED**

### STEP 4 **COMPLETE**

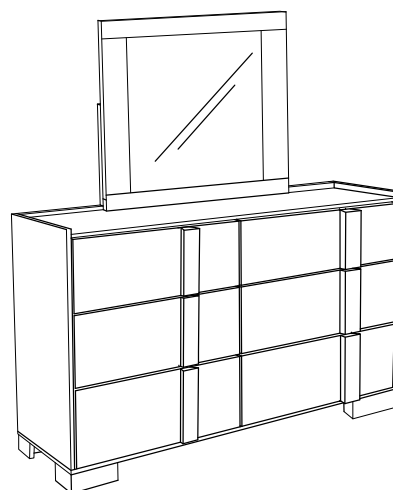

ITEM: **215654**

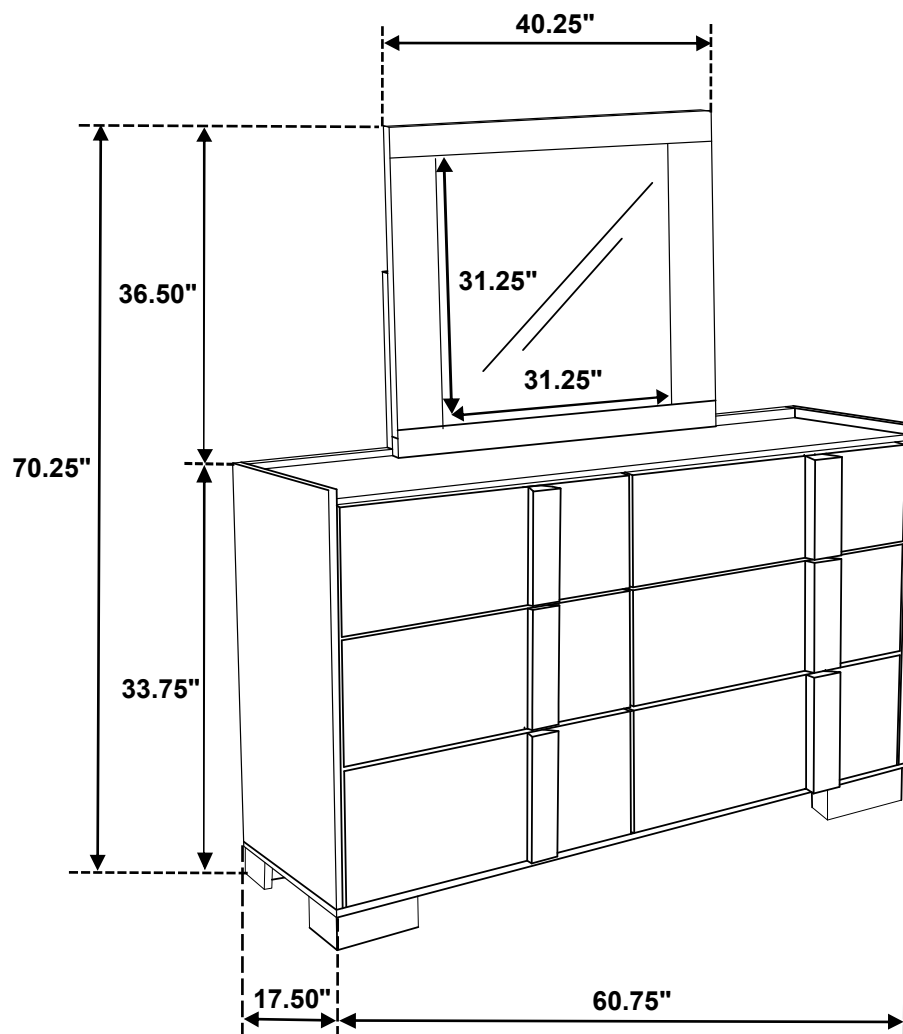

**Note : Dimension tolerance  $\pm 5\%$**