


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

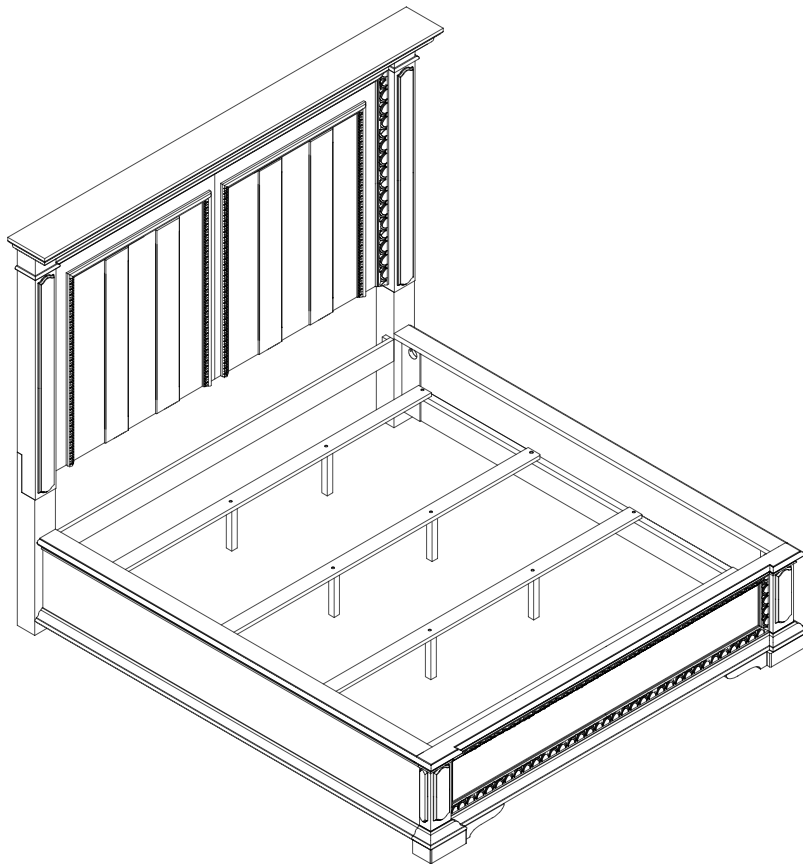

Fine Furniture for every stage of life

215871KW (B1-B3)
California King Bed

ITEM: 215871KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL

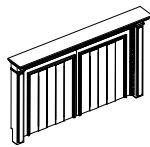


1PC

B RIGHT
HEADBOARD LEG



1PC

C LEFT
HEADBOARD LEG



1PC


D HEADBOARD
BOTTOM RAIL



1PC

B2 (BOX 2)


E FOOTBOARD



1PC

B3 (BOX 3)

F BED RAIL



2PCS

G BED SLAT



4PCS


H BED SLAT SUPPORT
WITH LEVELER



8PCS


HB

215871KW(B1)
FROM BOX 1
HEADBOARD
COMPLETE

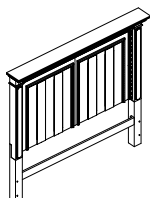

1PC

E 215871 KW (B2)
FROM BOX 2
FOOTBOARD



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215871KW(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!








1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 215871KW(B1)

| | | | | | | | |
|---|--|---|-------|---|--|---|-------|
| 1 | BOLT (\emptyset 5/16" x 45MM - RBW) |  | 14PCS | 3 | FLAT WASHER (\emptyset 5/16" - RBW) |  | 14PCS |
| 2 | LOCK WASHER (\emptyset 5/16" - RBW) |  | 14PCS | 4 | ALLEN WRENCH (4MMx60MM - RBW) |  | 1PC |

Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 215871KW(B3)

| | | | | | | | |
|---|---|---|------|---|---|---|------|
| 5 | THREADED BOLT (\emptyset 5/16" x 90MM - RBW) |  | 8PCS | 8 | WRENCH (12MM - RBW) |  | 1PC |
| 6 | HALF ROUND NUT (\emptyset 5/16" - RBW) |  | 8PCS | 9 | FLAT HEAD SCREW (\emptyset 4 x 30MM - RBW) |  | 8PCS |
| 7 | HEX NUT (\emptyset 5/16" x 12MM - RBW) |  | 8PCS | | | | |


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 215871KW(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

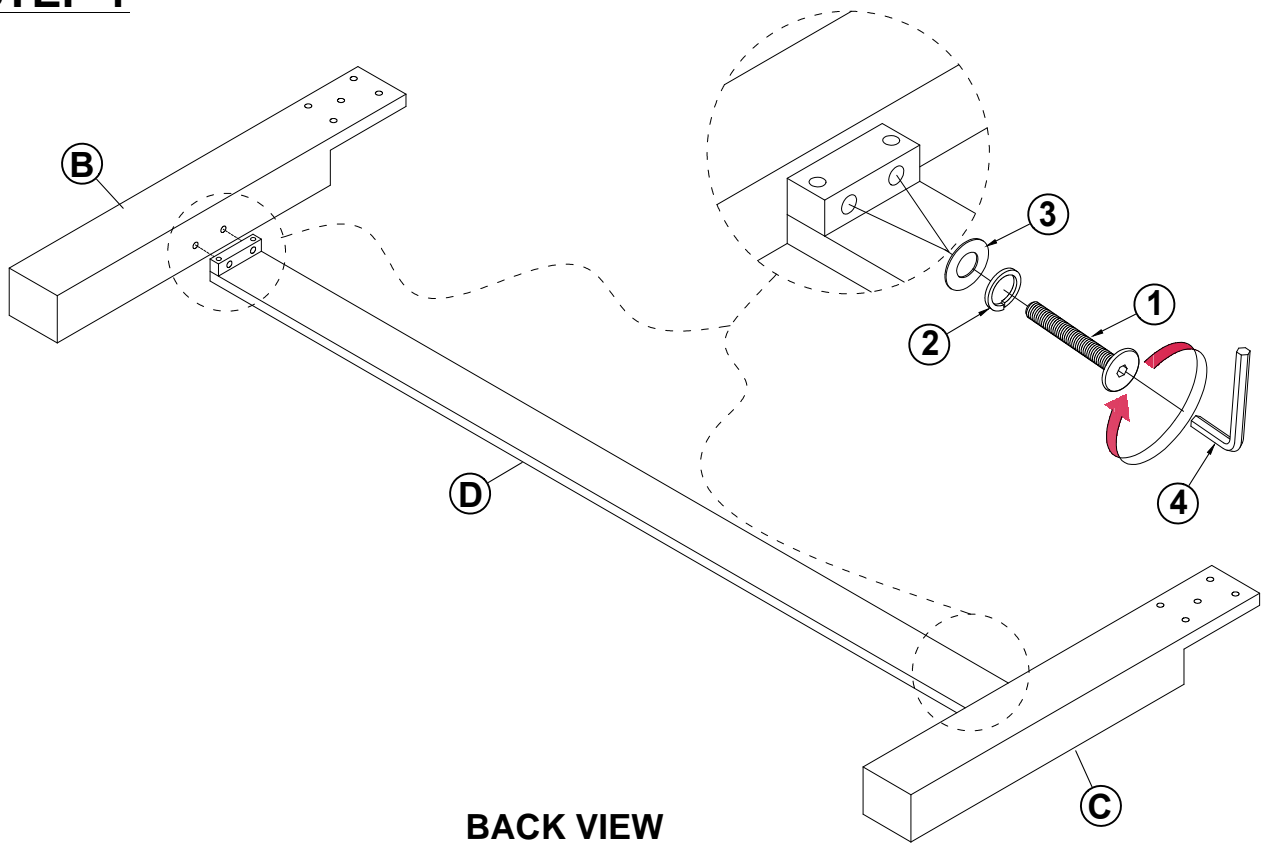


STEP 2

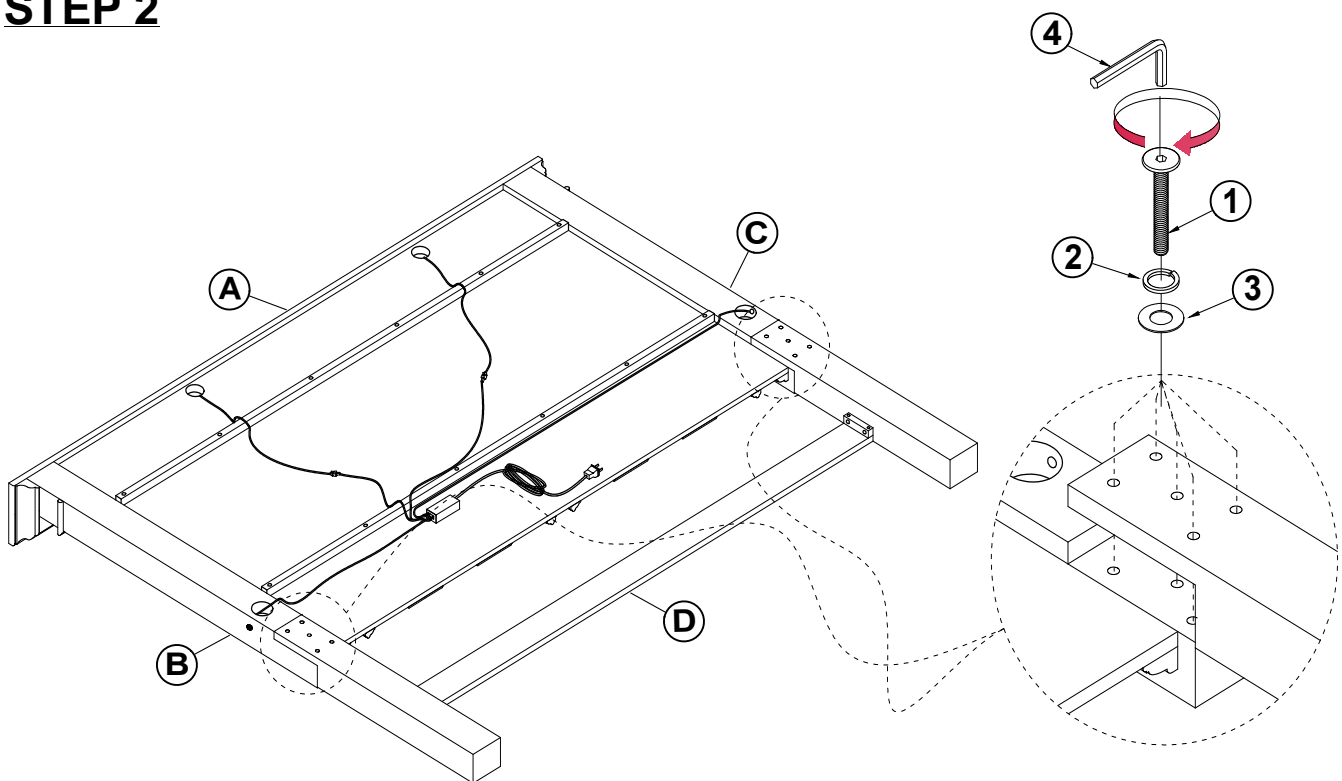


ITEM: **215871KW(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

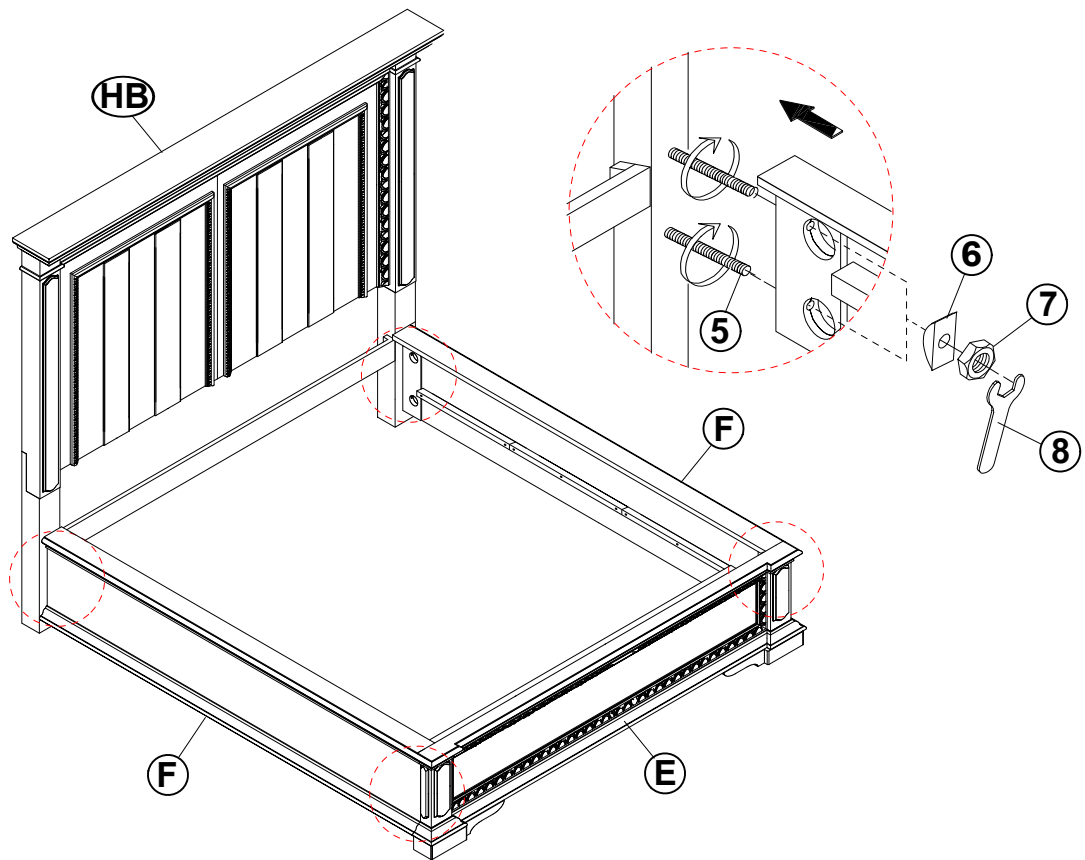


STEP 4


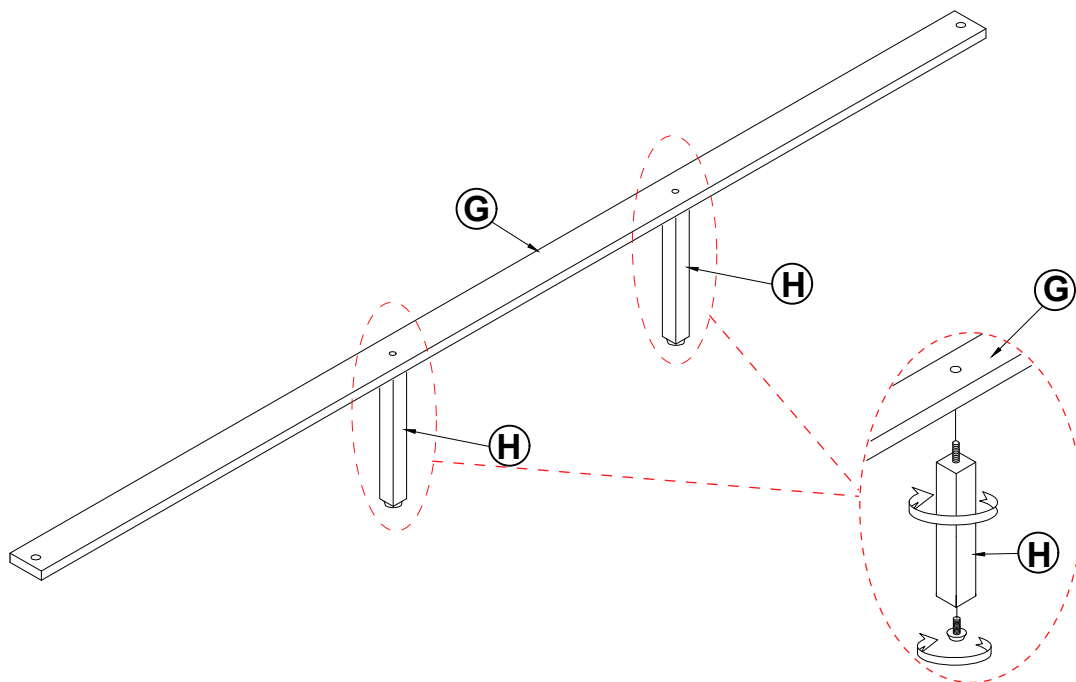


ITEM: **215871KW(B1-B3)**

ASSEMBLY INSTRUCTIONS
STEP 5

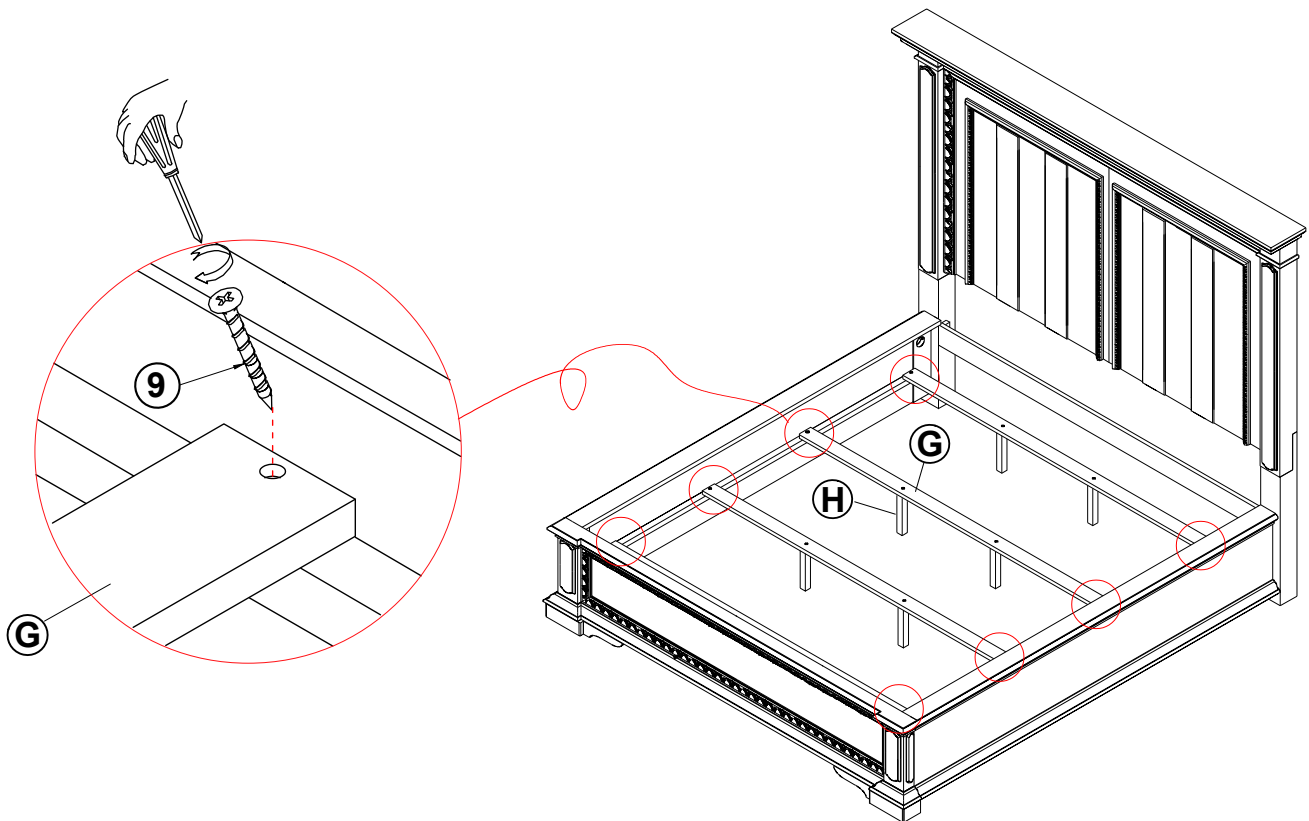


STEP 6
COMPLETE

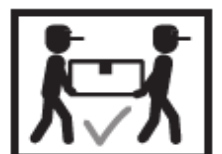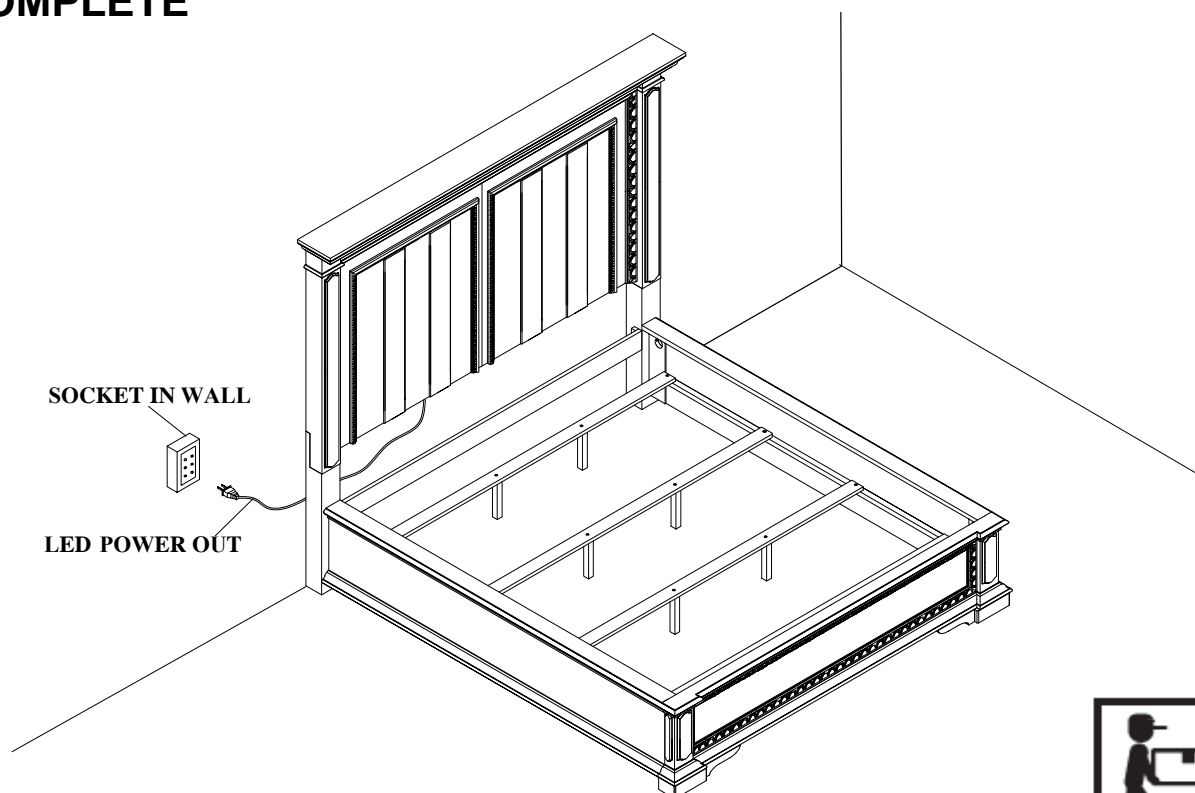

ITEM: **215871KW(B1-B3)**



Inner Size : 73.00"W X 86.00"D

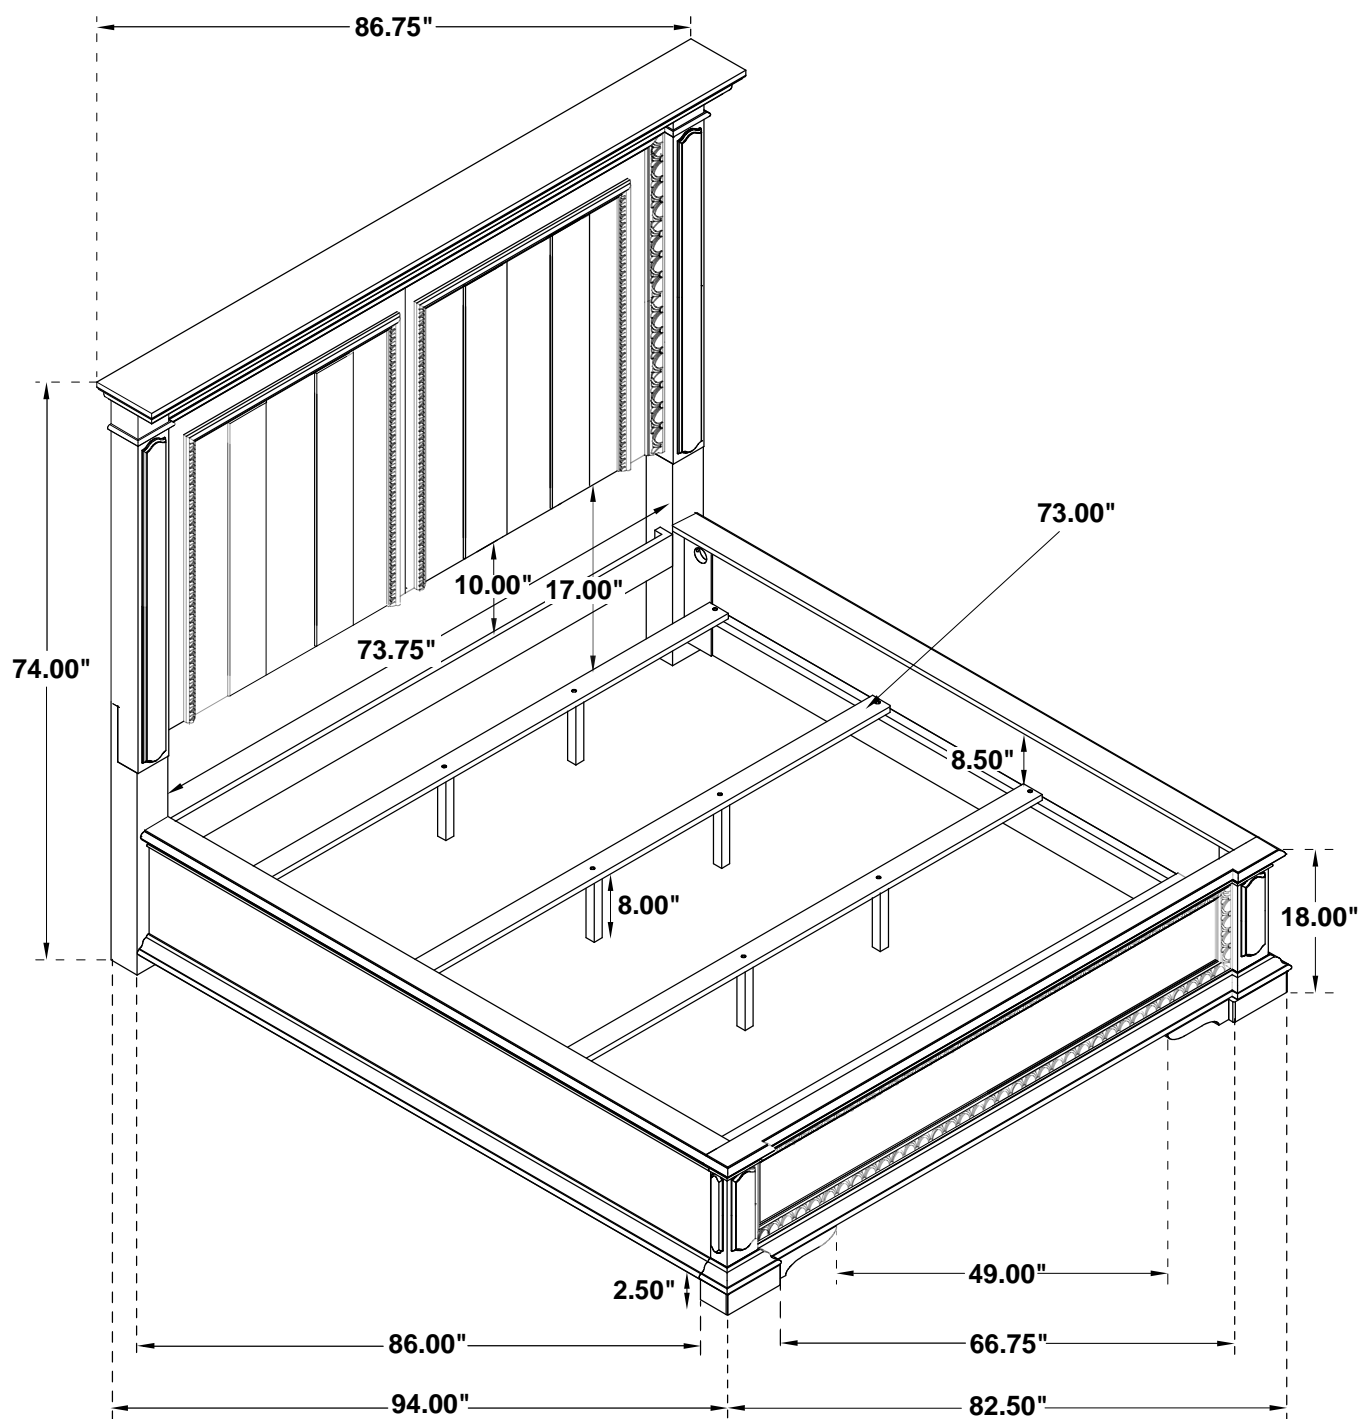

Note: Dimension tolerance $\pm 5\%$