


*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*

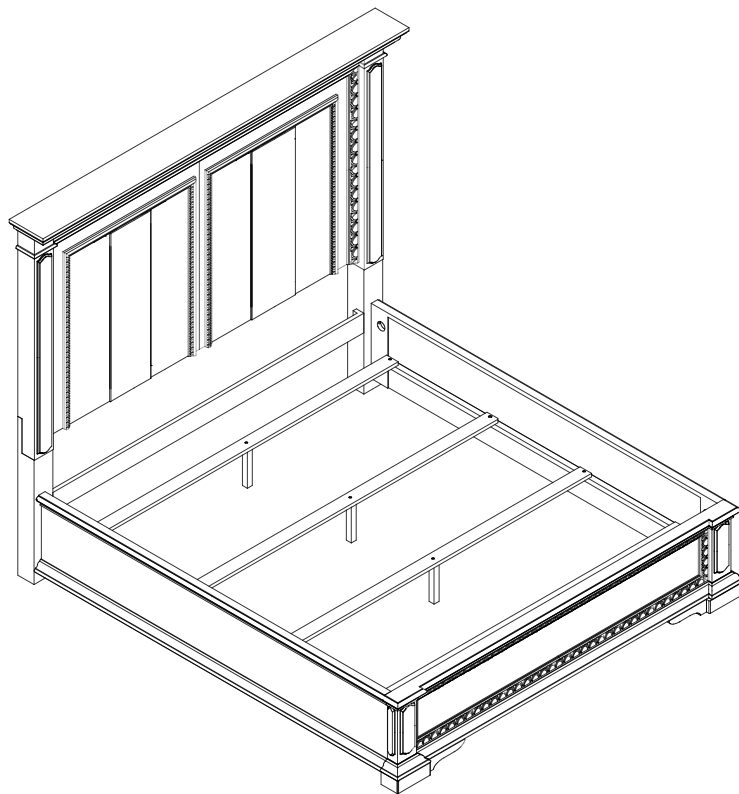

*Fine Furniture for every stage of life*

**215871Q(B1-B3)**  
***Queen Bed***

# ITEM: 215871Q (B1-B3)

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION


### B1 (BOX 1)

A HEADBOARD  
PANEL

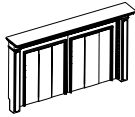


1PC

C LEFT  
HEADBOARD LEG




1PC

B RIGHT  
HEADBOARD LEG



1PC

D HEADBOARD  
BOTTOM RAIL



1PC

### B2 (BOX 2)


E FOOTBOARD



1PC

### B3 (BOX 3)

F BED RAIL

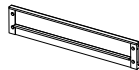

2PCS

H BED SLAT SUPPORT  
WITH LEVELER




4PCS

G BED SLAT



4PCS

HB 215871Q (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

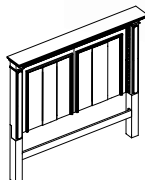

1PC

E 215871Q (B2)  
FROM BOX 2  
FOOTBOARD



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 215871Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!



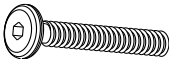


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 215871Q(B1)

1	<b>BOLT</b> (Ø5/16" x 45MM - RBW)		14PCS	3	<b>FLAT WASHER</b> (Ø5/16" - RBW)		14PCS
2	<b>LOCK WASHER</b> (Ø5/16" - RBW)		14PCS	4	<b>ALLEN WRENCH</b> (4MMx60MM - RBW)		1PC

### Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 215871Q(B3)

5	<b>THREADED BOLT</b> (Ø5/16" x 90MM - RBW)		8PCS	8	<b>WRENCH</b> (12MM - RBW)		1PC
6	<b>HALF ROUND NUT</b> (Ø5/16" - RBW)		8PCS	9	<b>FLAT HEAD SCREW</b> (Ø4 x 30MM - RBW)		8PCS
7	<b>HEX NUT</b> (Ø5/16" x 12MM - RBW)		8PCS				


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 215871Q (B1-B3)


## ASSEMBLY INSTRUCTIONS

### STEP 1

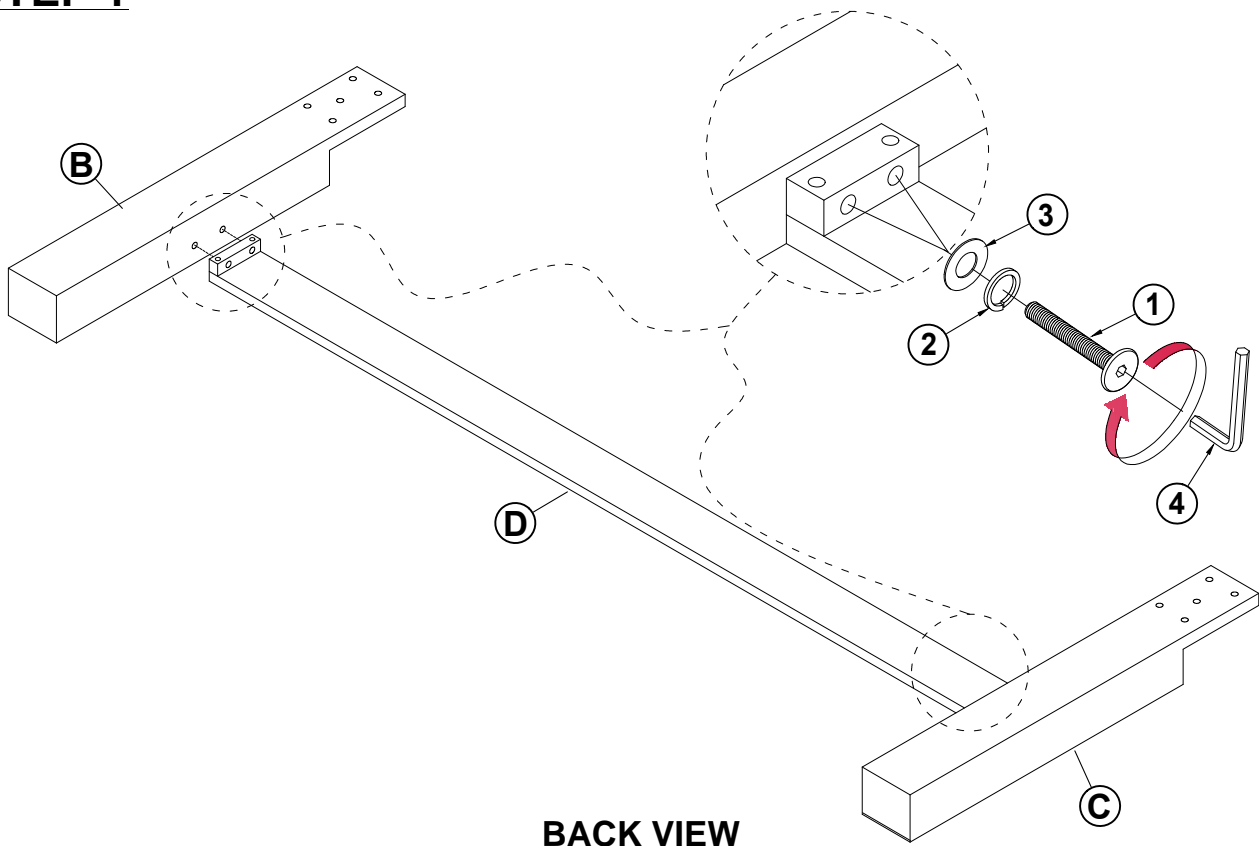

BACK VIEW

### STEP 2

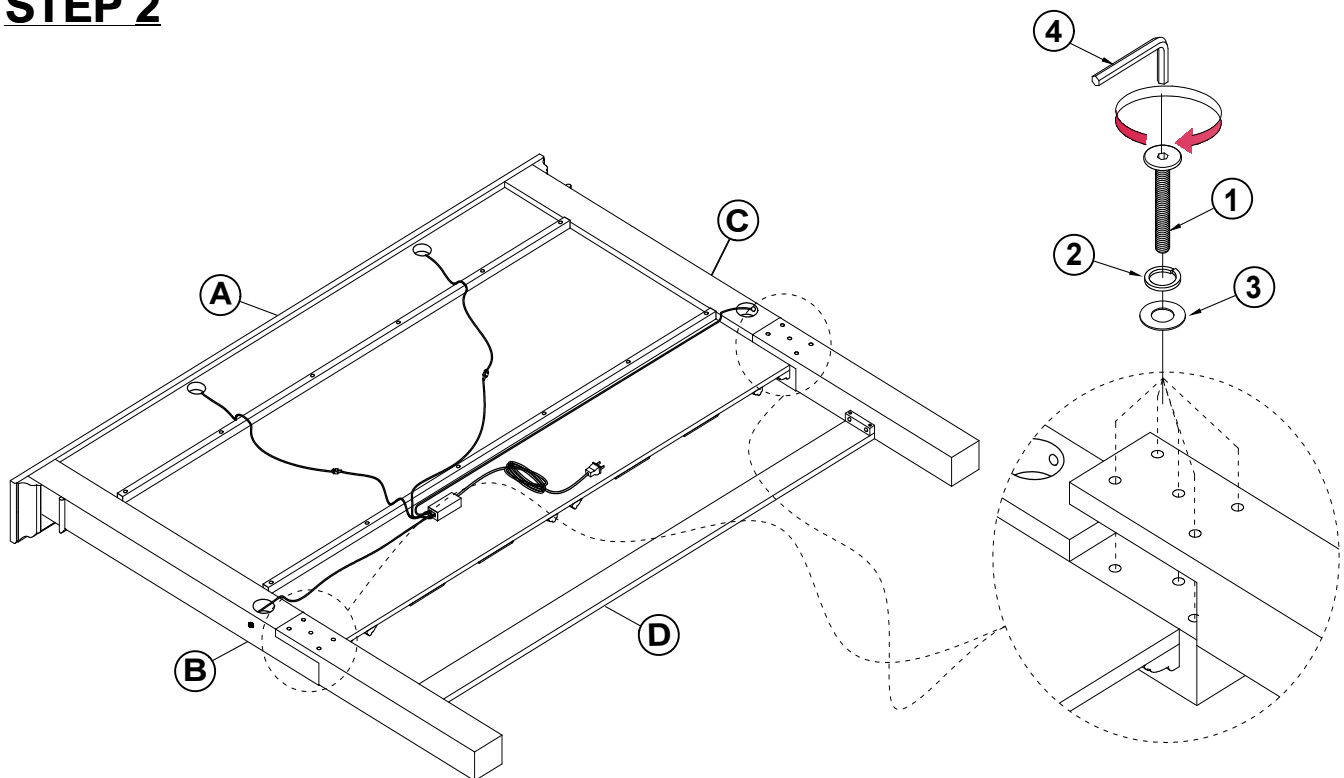





ITEM: **215871Q (B1-B3)**

**ASSEMBLY INSTRUCTIONS**

**STEP 3**

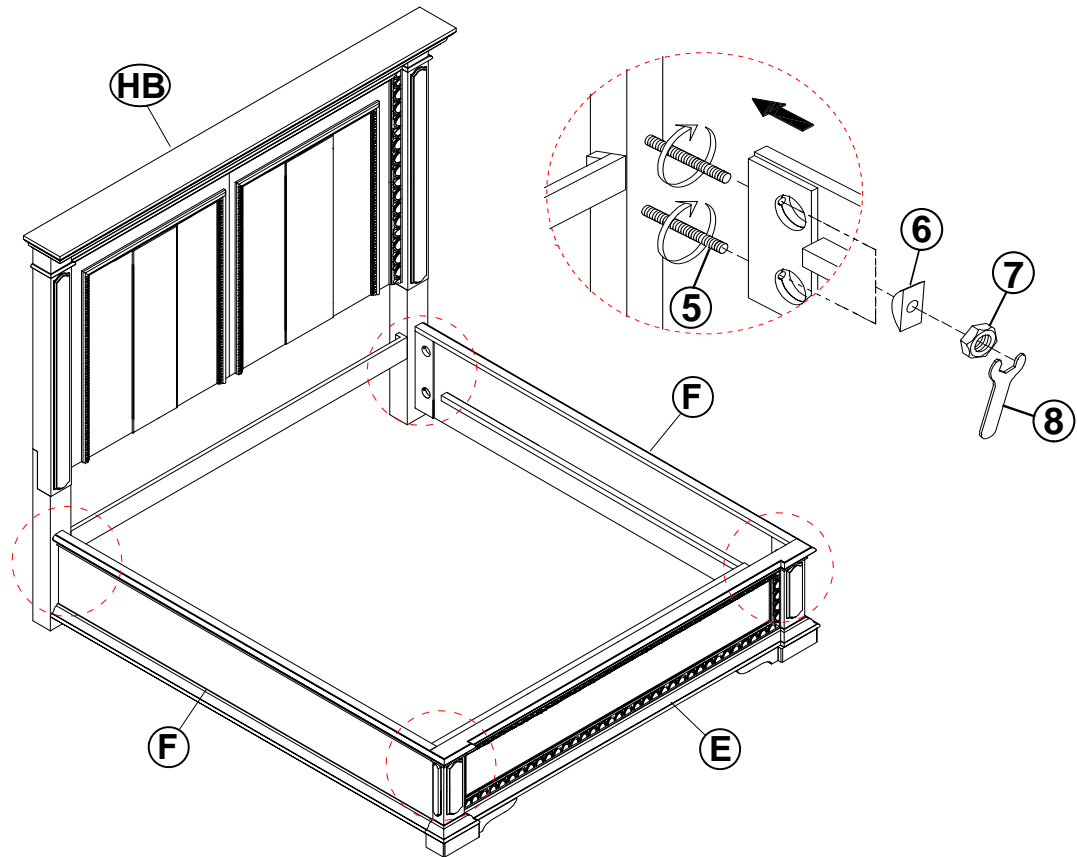


**STEP 4**

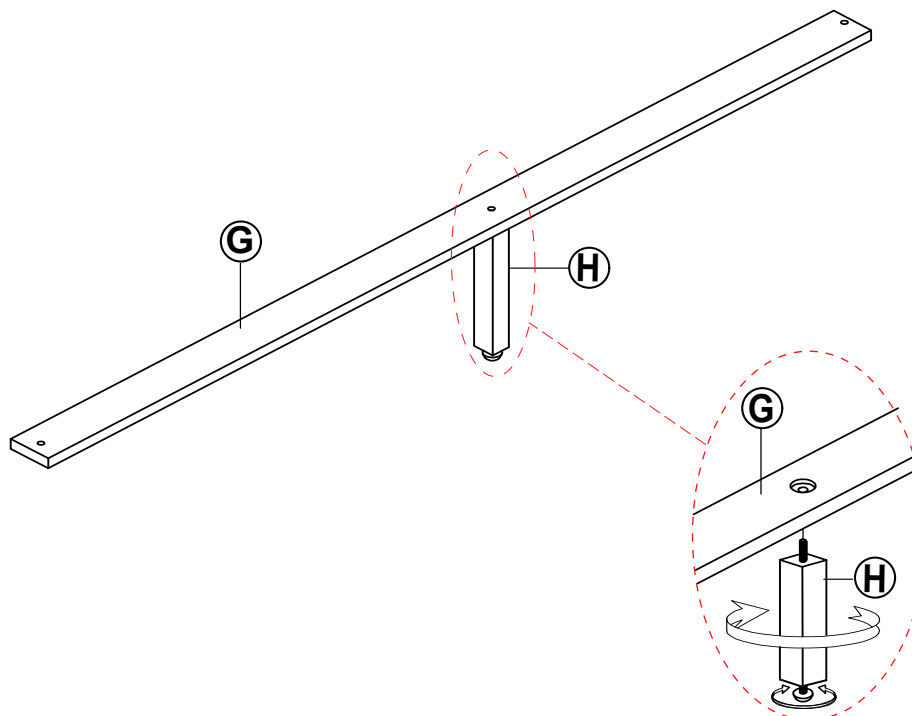



ITEM: **215871Q (B1-B3)**

## ASSEMBLY INSTRUCTIONS

### STEP 5

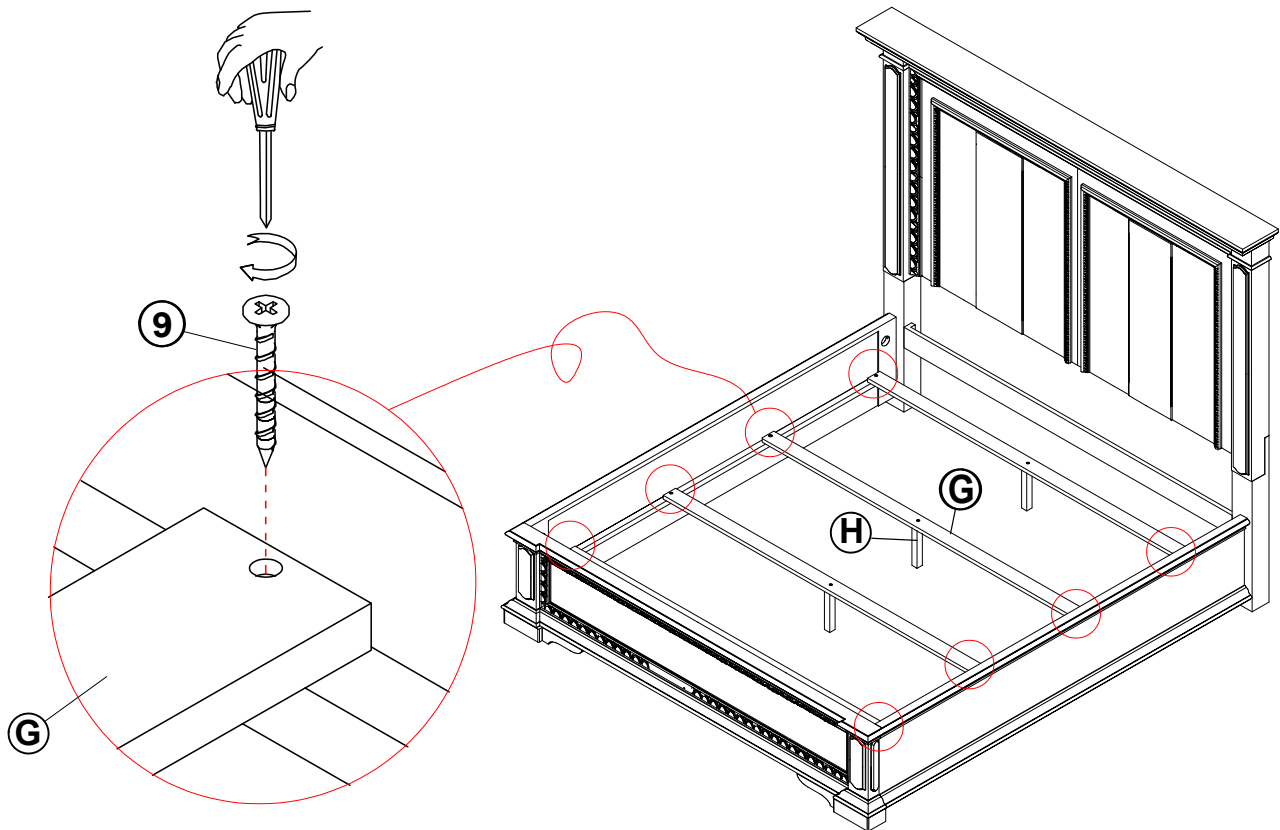


### STEP 6 COMPLETE

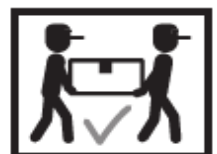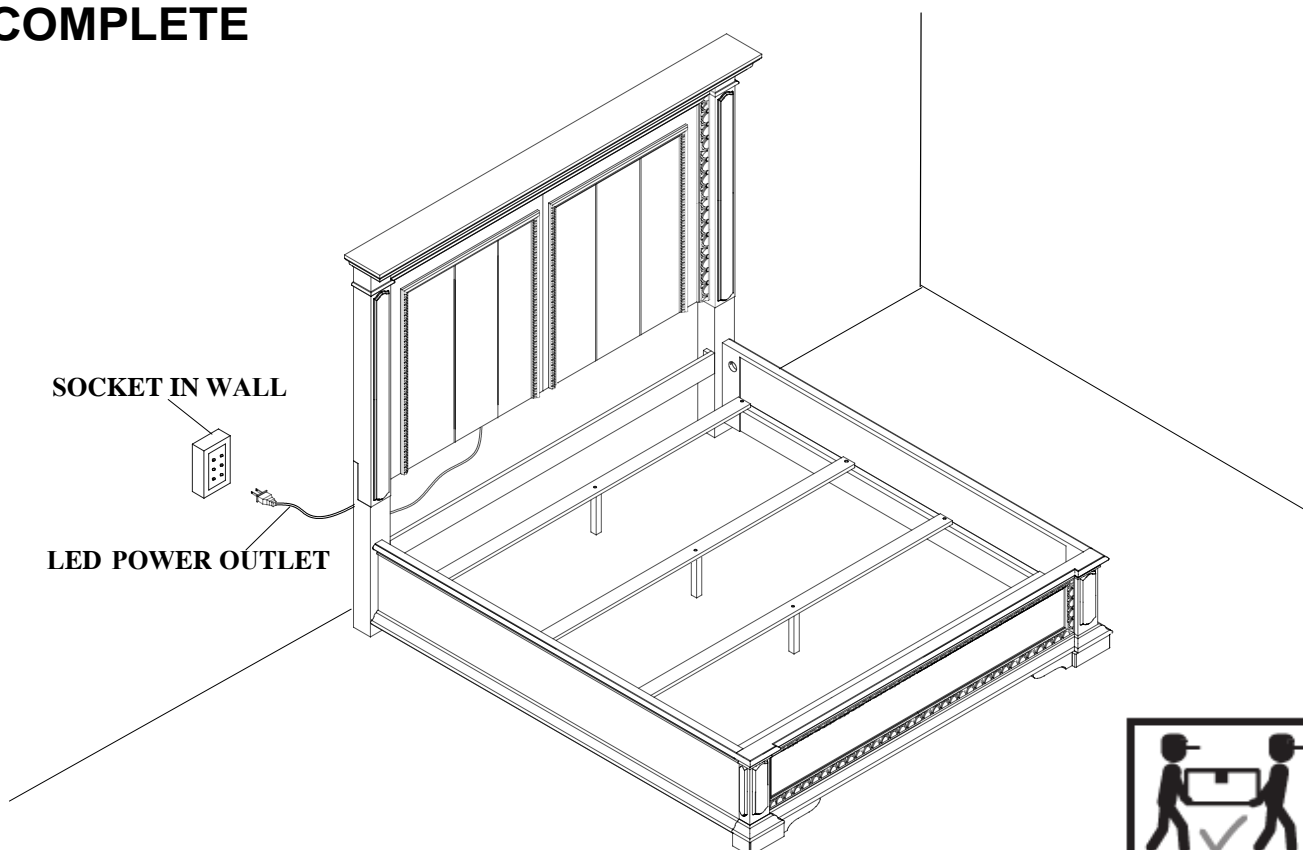

ITEM: **215871Q (B1-B3)**



Inner Size : 61.00"W X 81.50"D

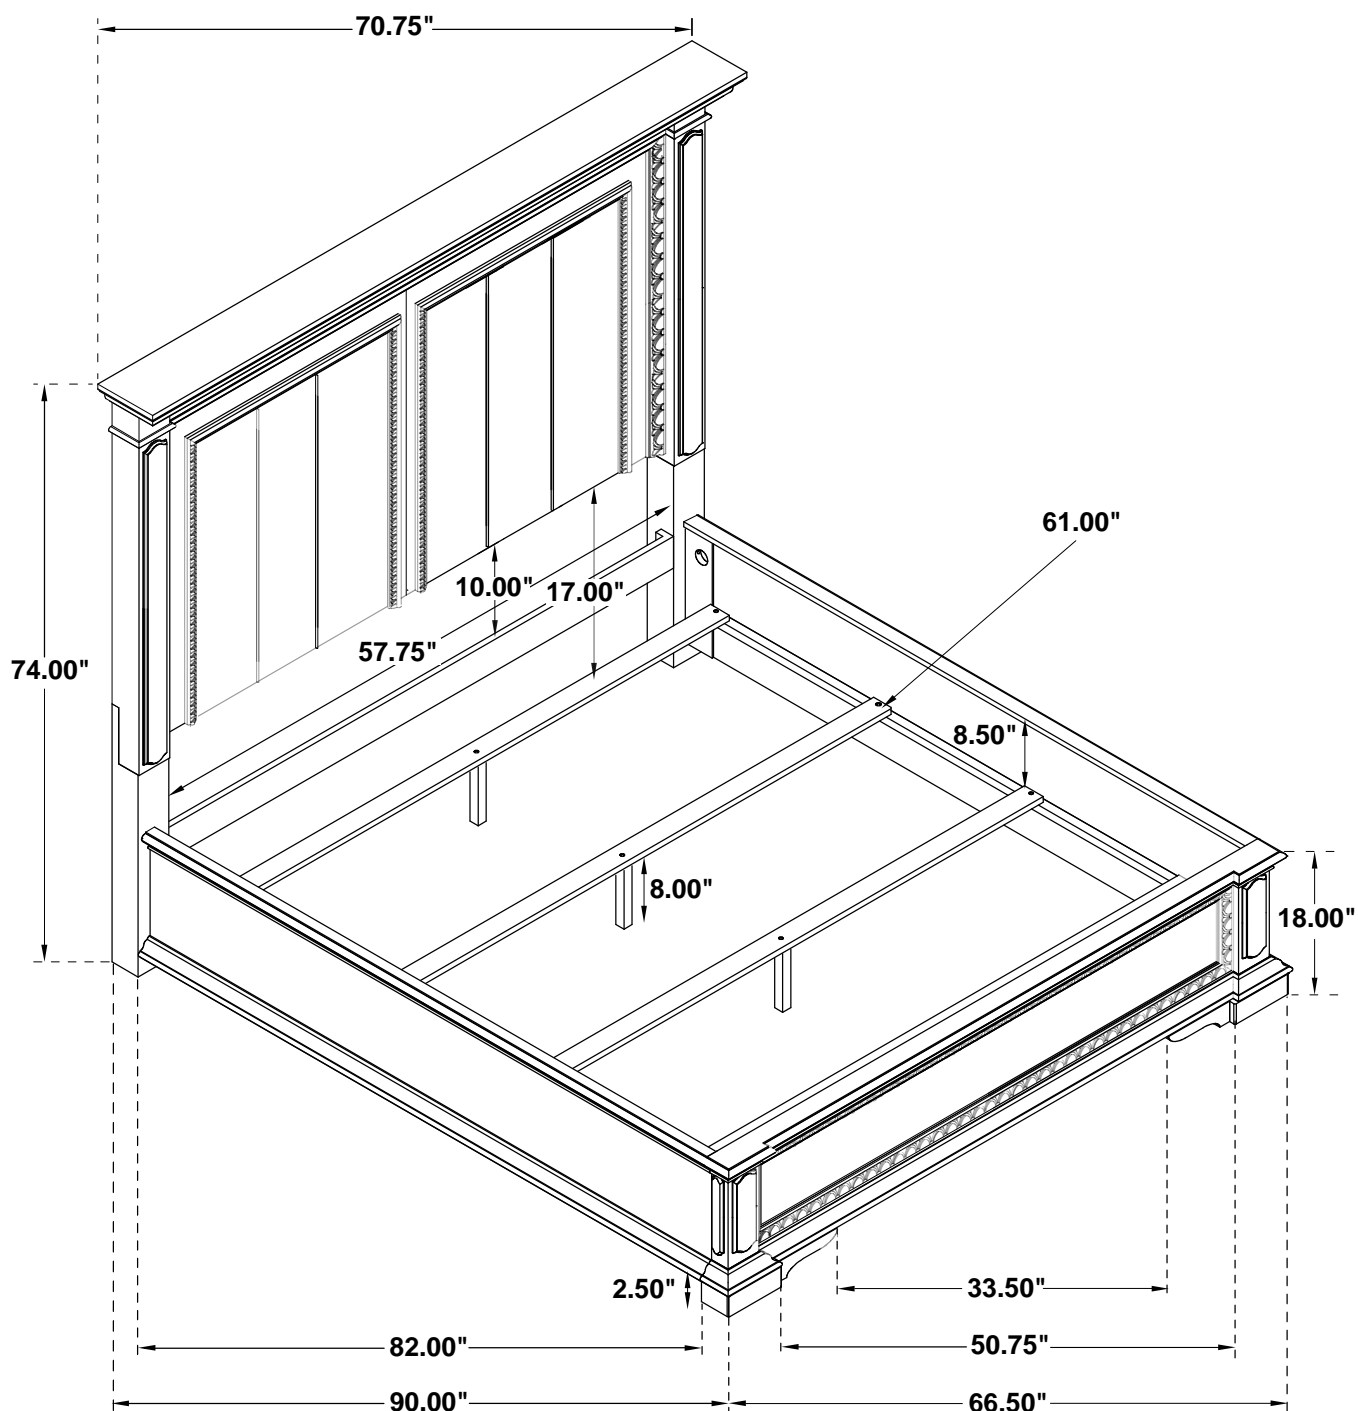

Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215872**  
**Nightstand**

## TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

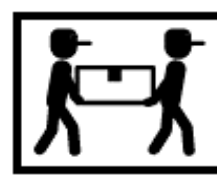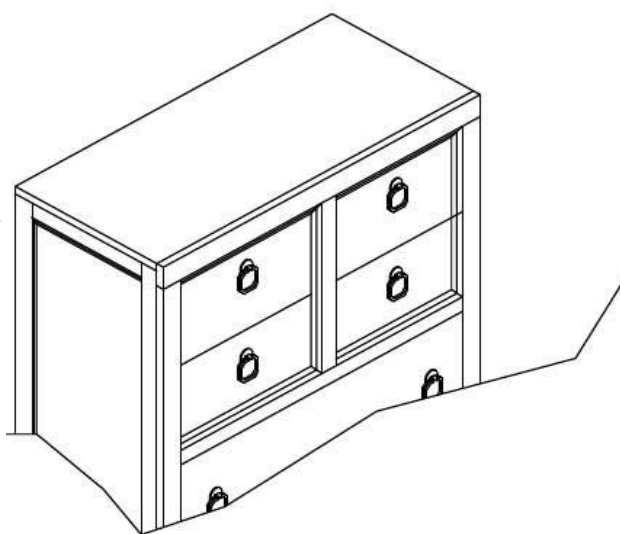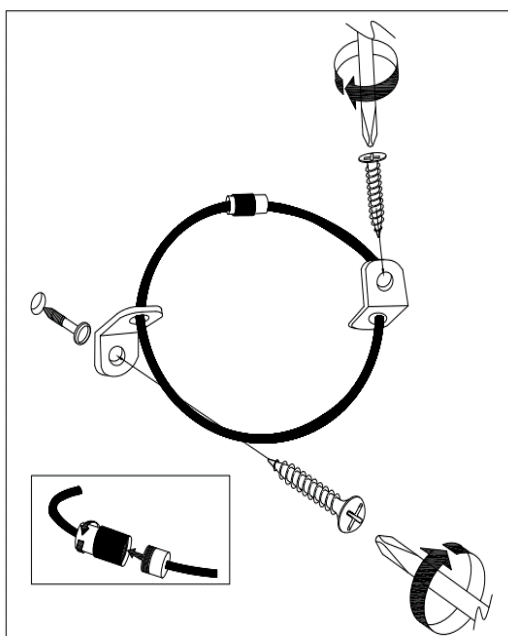

ITEM: **215872**



Inner Size of Drawer : 20.00"W X 10.75"D X 8.25"H X 0.50"T

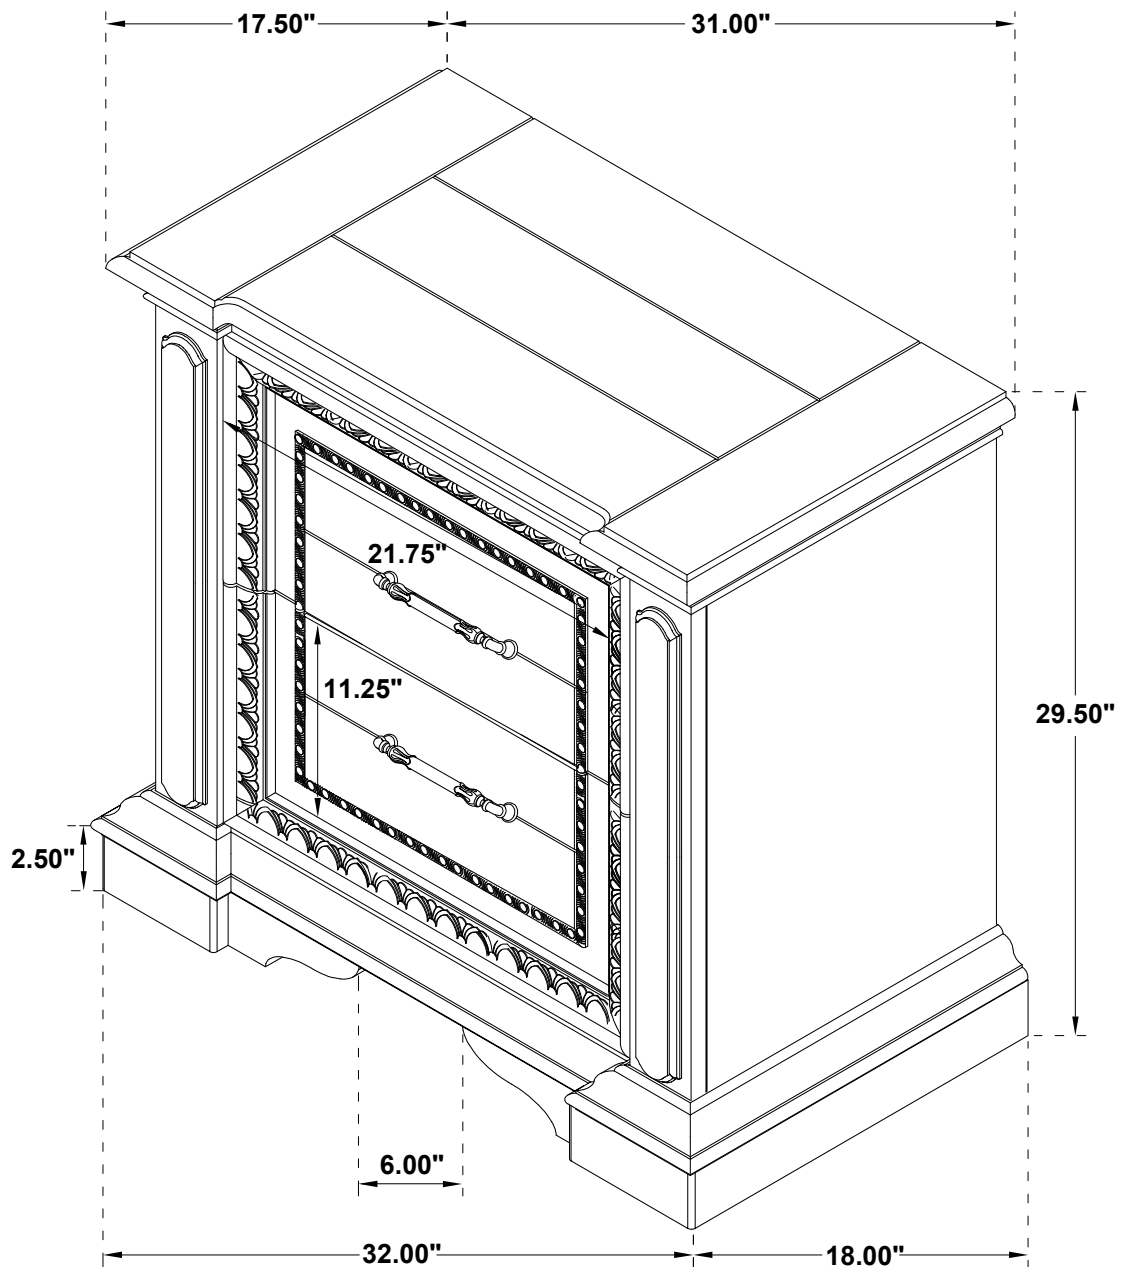

Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215873**  
**Dresser**



## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

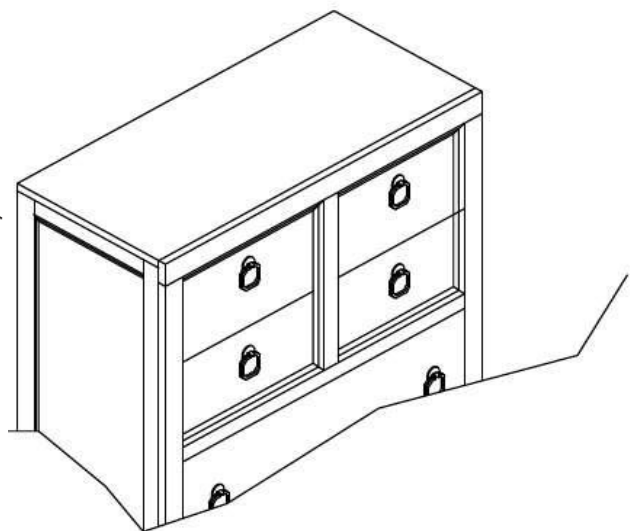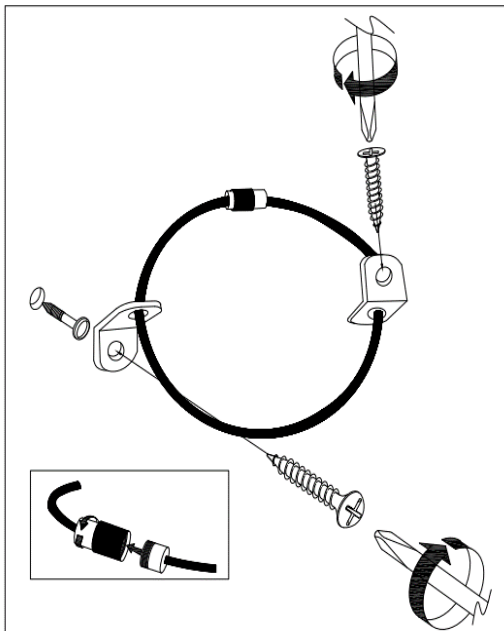




ITEM: **215873**



Inner Size of Drawer A : 29.75"W X 13.25"D X 7.50"H X 0.50"T


Inner Size of Drawer B : 29.75"W X 13.25"D X 5.50"H X 0.50"T

Inner Size of Drawer C : 29.75"W X 12.75"D X 2.50"H X 0.50"T

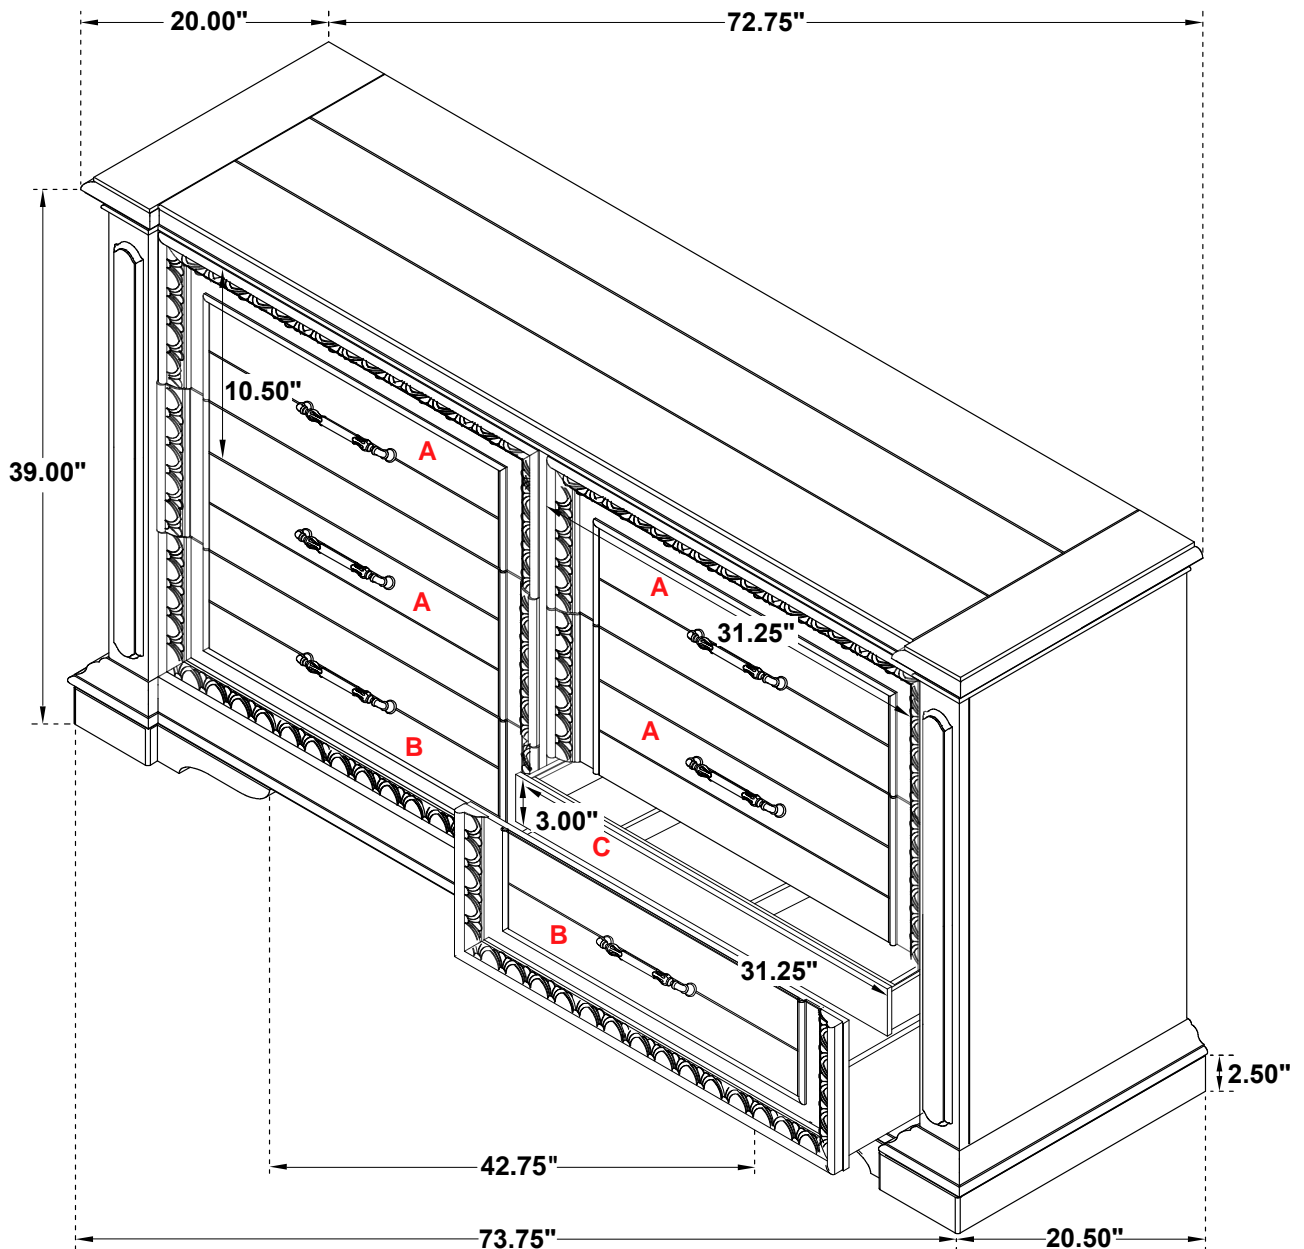

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

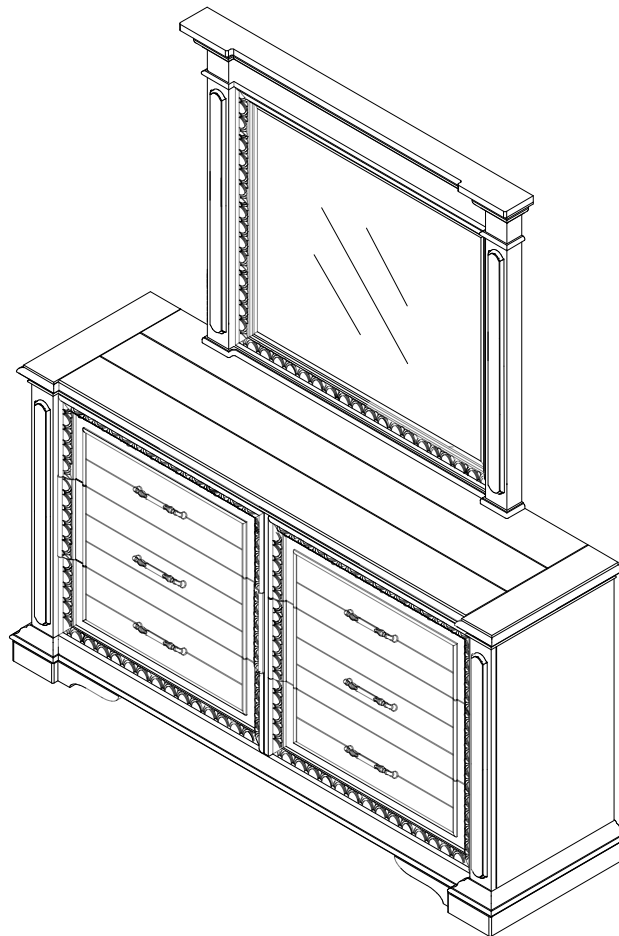

*Fine Furniture for every stage of life*

**215874**  
**Mirror**

ITEM:215874



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A  
DRESSER  
FROM BOX  
ITEM #215873

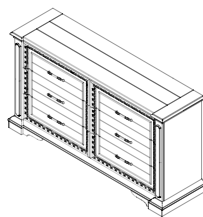

1PC

B MIRROR



1PC


C  
MIRROR SUPPORT  
(PACKED WITH  
DRESSER)



2PCS

## HARDWARE IDENTIFICATION

1  
BOLT  
( $\Phi 1/4"$  x 38mm - RBW)



6PCS

3  
FLAT WASHER  
( $\Phi 1/4"$  - RBW)



6PCS

2  
LOCK WASHER  
( $\Phi 1/4"$  - RBW)



6PCS

4  
ALLEN WRENCH  
(4mm x 60mm - RBW)




1PC



ITEM: **215874**

## ASSEMBLY INSTRUCTIONS


### STEP 1

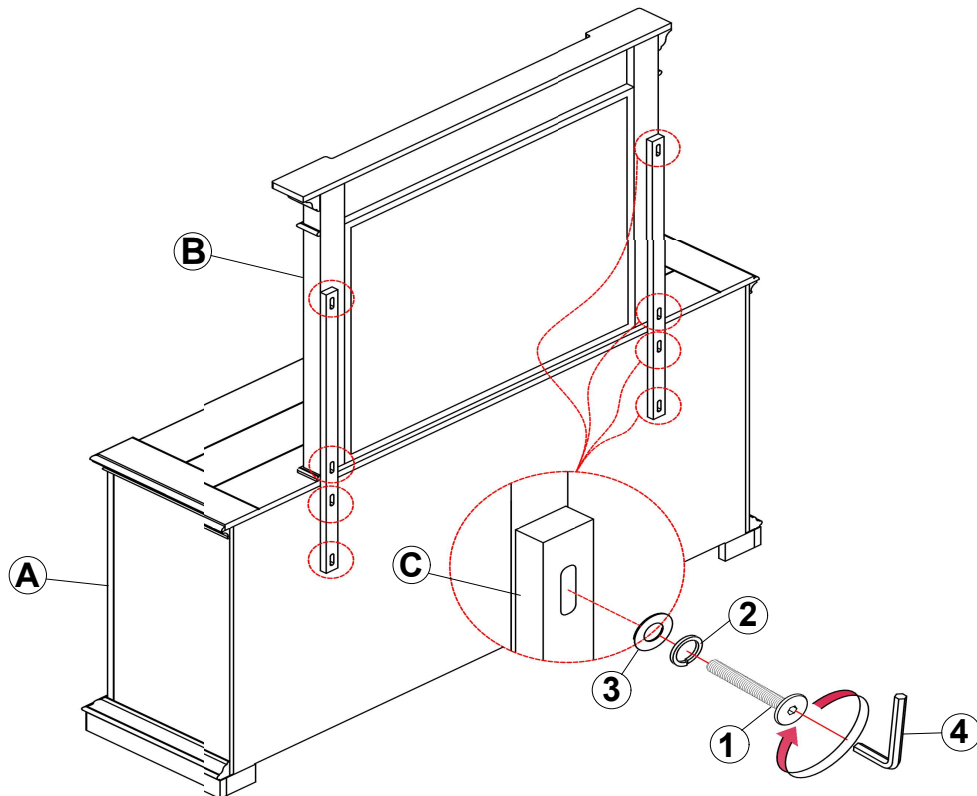

### STEP 2 COMPLETE

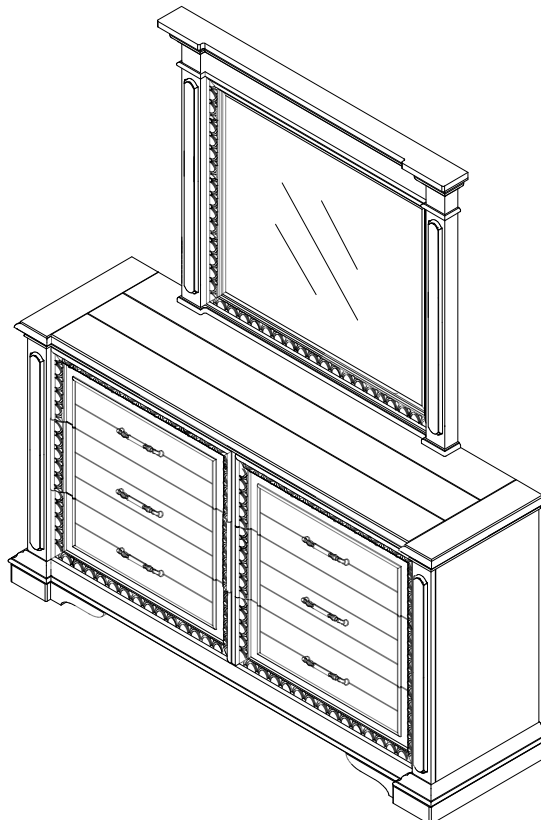

ITEM: **215874**

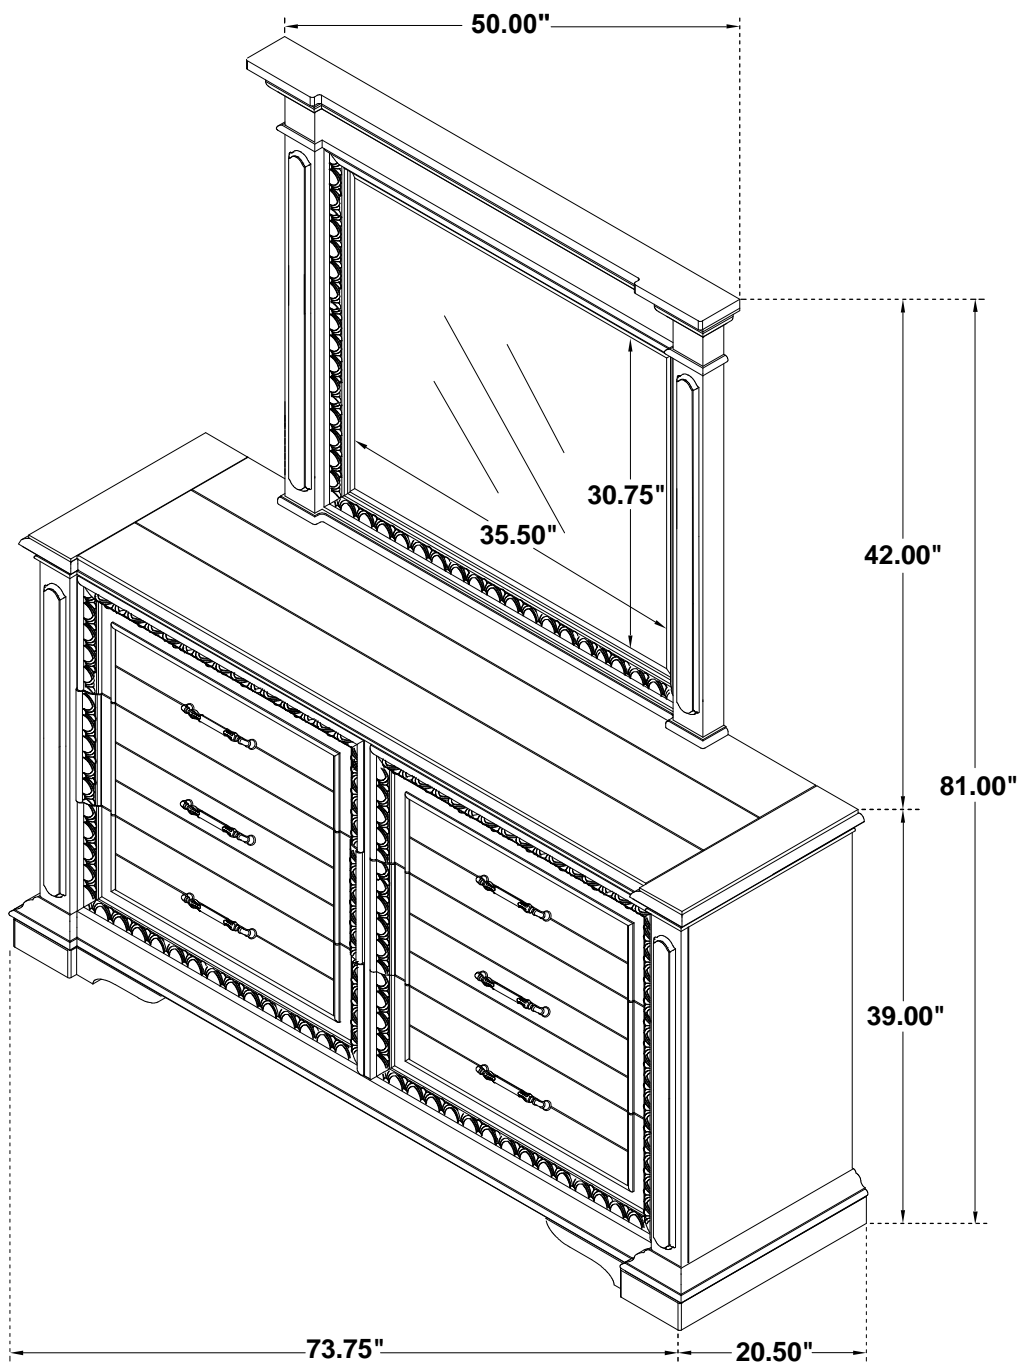

**Note: Dimension tolerance  $\pm 5\%$**



# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**215875**  
**Chest**

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

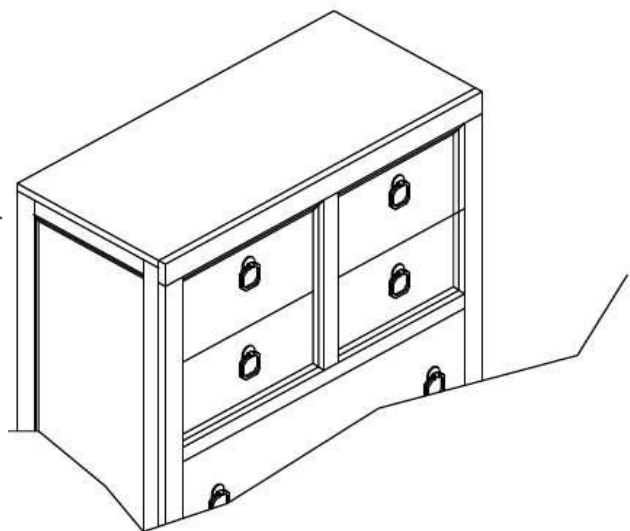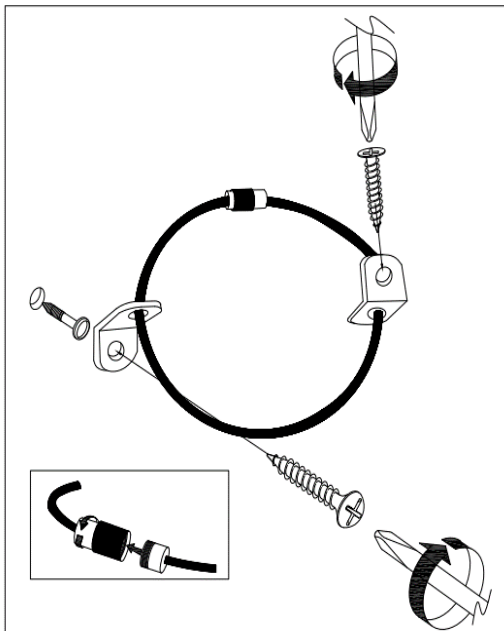

ITEM: **215875**

Inner Size of Drawer : 33.25"W X 13.25"D X 7.00"H X 0.50"T

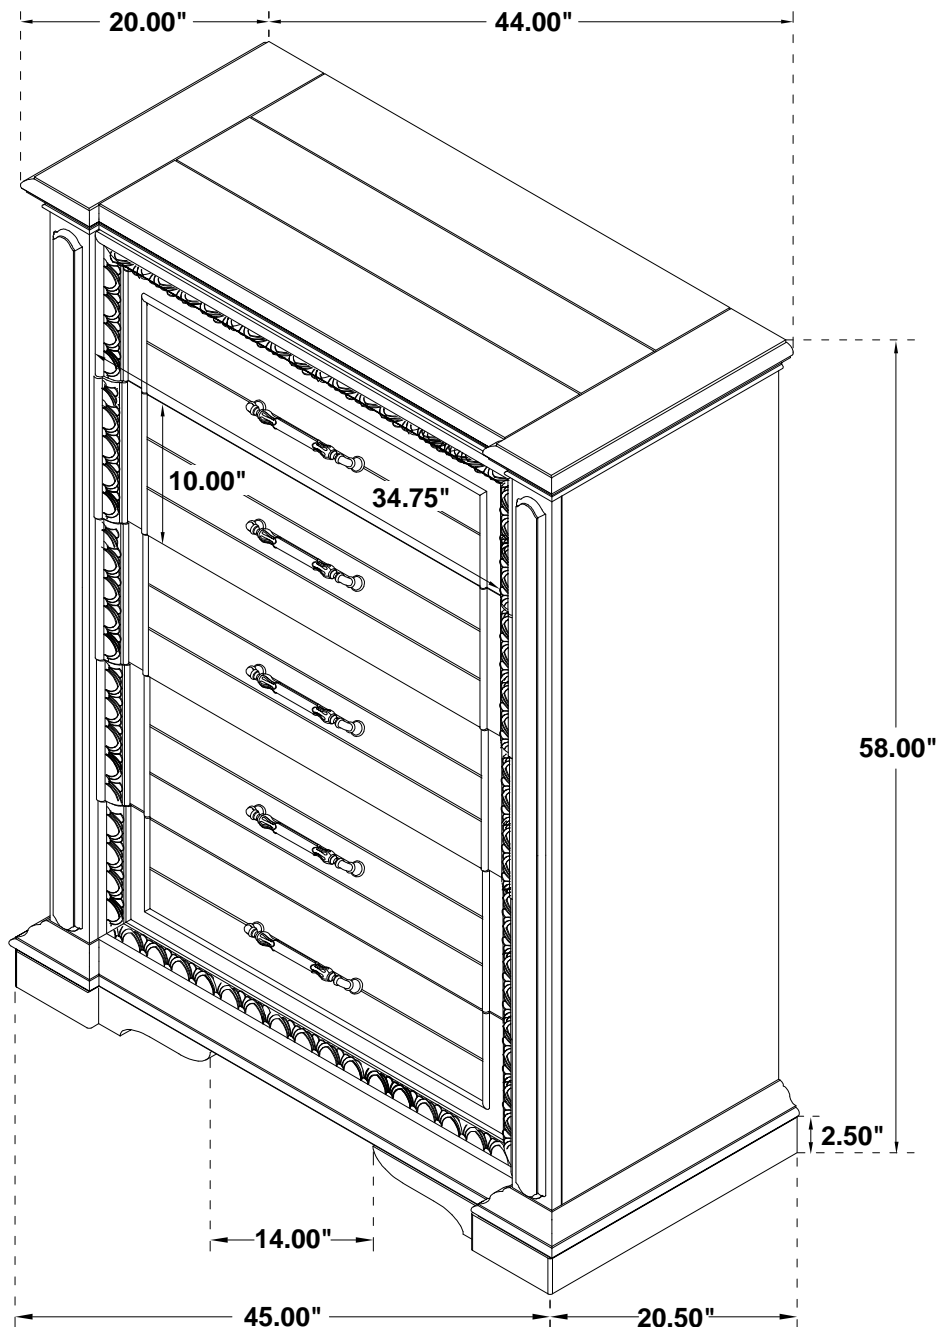

Note: Dimension tolerance  $\pm 5\%$