


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

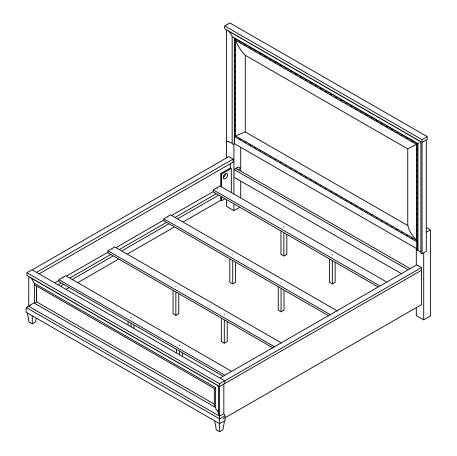

Fine Furniture for every stage of life

215921KE (B1-B3) Eastern King Bed

REVISION 0: 06/06/2025

PAGE 1 OF 6

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

HEADBOARD PANEL



1PC

В **HEADBOARD LEG**



1PC

LEFT HEADBOARD LEG



1PC

HEADBOARD BOTTOM D RAIL



1PC

B2 (BOX 2)

FOOTBOARD PANEL



1PC

RIGHT FOOTBOARD LEG



1PC

LEFT FOOTBOARD LEG



1PC

B3 (BOX 3)

BED RAIL



2PCS

BED SLAT




4PCS

BED SLAT SUPPORT WITH LEVELER



8PCS

215921KE(B1) FROM BOX 1 HB **HEADBOARD COMPLETE**



1PC

215921KE(B2) FROM BOX 2 **FOOTBOARD** COMPLETE



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS



- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

\mathbb{A}

WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 215921KE(B1)

1	LONG BOLT (Ø5/16" x 50MM- RBW)	10PCS	3	FLAT WASHER (Ø5/16" - RBW)	10PCS
2	LOCK WASHER (Ø5/16" - RBW)	10PCS	4	ALLEN WRENCH (4MMx60MM - RBW)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 215921KE(B2)


5	SHORT BOLT (Ø5/16" x 38MM- RBW)	4PCS	7	FLAT WASHER (Ø5/16" - RBW)	4PCS
6	LOCK WASHER (Ø5/16" - RBW)	4PCS	8	ALLEN WRENCH (4MMx60MM - RBW)	1PC


Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 215921KE(B3)


9	THREADED BOLT (Ø5/16" x 90MM - RBW)		8PCS	12	WRENCH (14MM - RBW)		1PC
10	HALF ROUND NUT (Ø5/16" - RBW)	EOE	8PCS	13	FLAT HEAD SCREW (Ø4 x 30MM - RBW)) mmmm	8PCS
11	HEX NUT (Ø5/16" x 14MM - RBW)		8PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

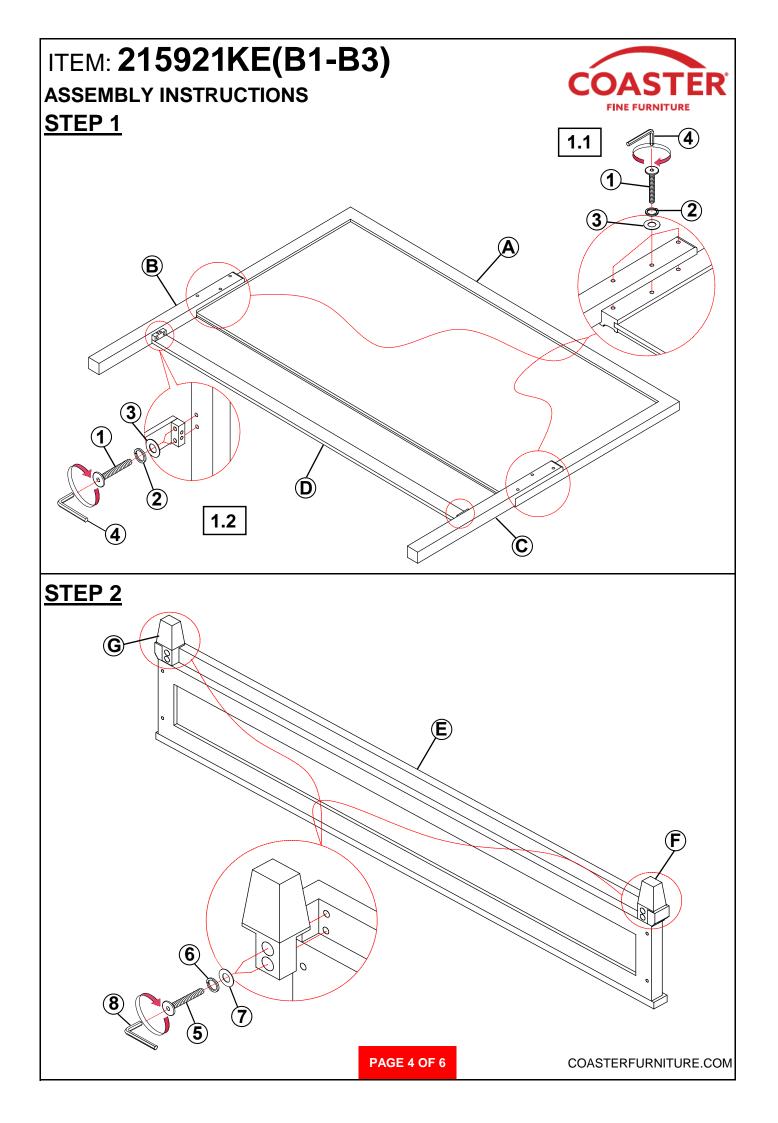


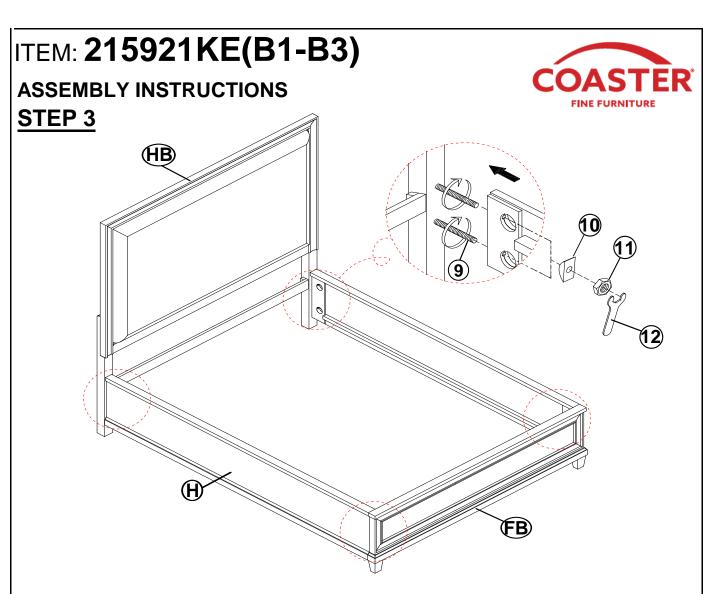

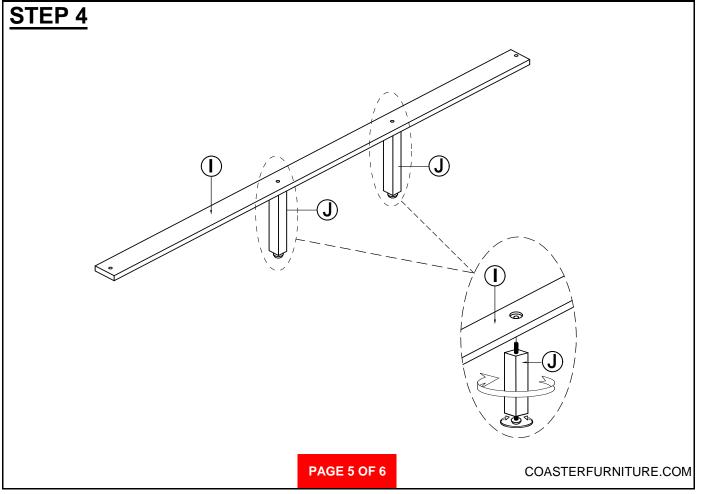


ASSEMBLY INSTRUCTIONS STEP 5



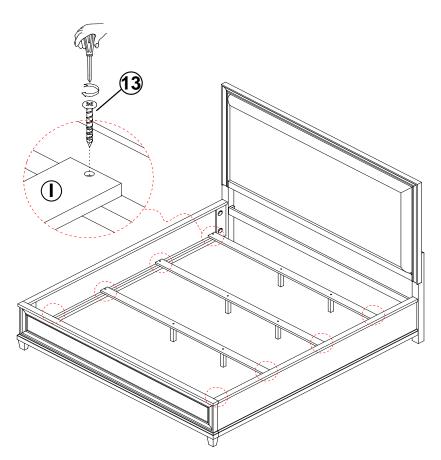

STEP 6 COMPLETE

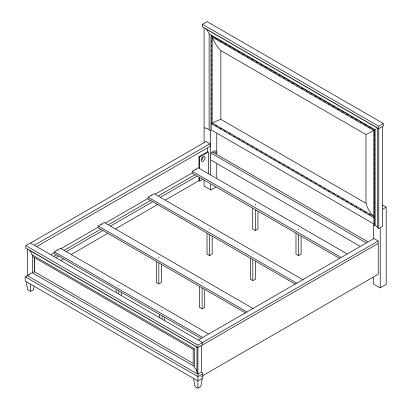


COASTERFURNITURE.COM

PAGE 6 OF 6



Inner Size: 77.00"W X 81.50"D

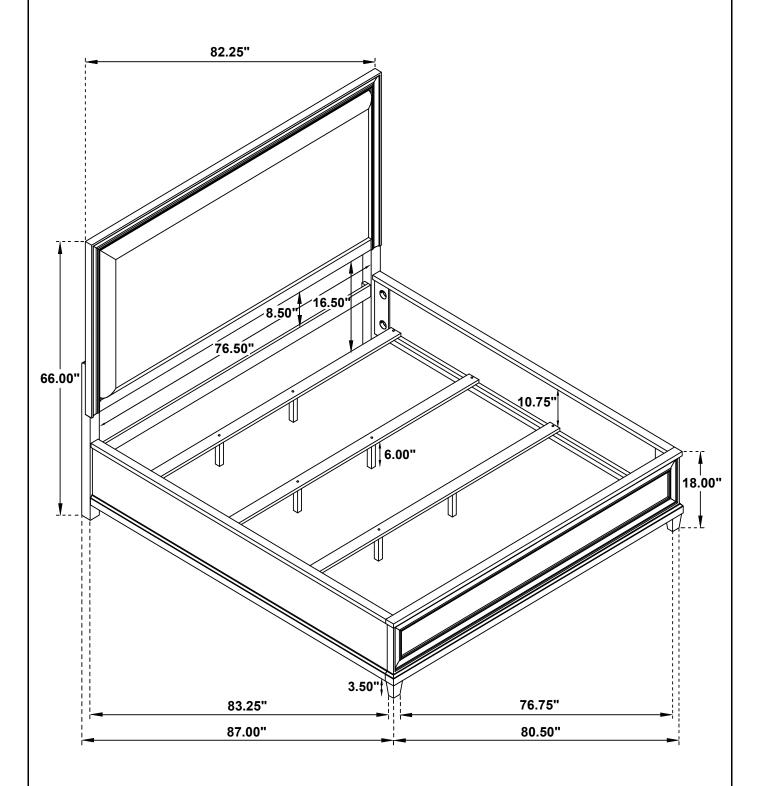

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215922 <u>Nightstand</u>

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B LEG

0

4PCS

HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 45mm - RBW)



8PCS

3 FLAT WASHER (Φ5/16" - RBW)



8PCS

2 LOCK WASHER (Φ5/16" - RBW)



8PCS


4 ALLEN WRENCH (4mm x 60mm - RBW)




1PC

ITEM: 215922 ASSEMBLY INSTRUCTIONS STEP 1



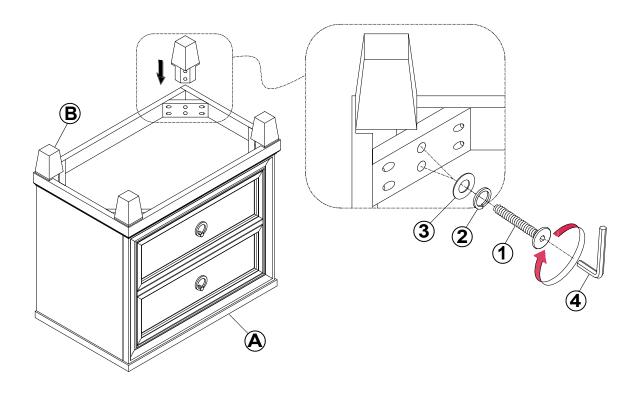

STEP 2 COMPLETE

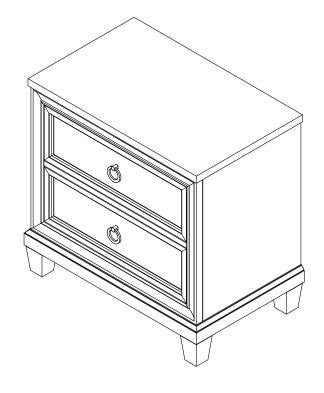

K



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

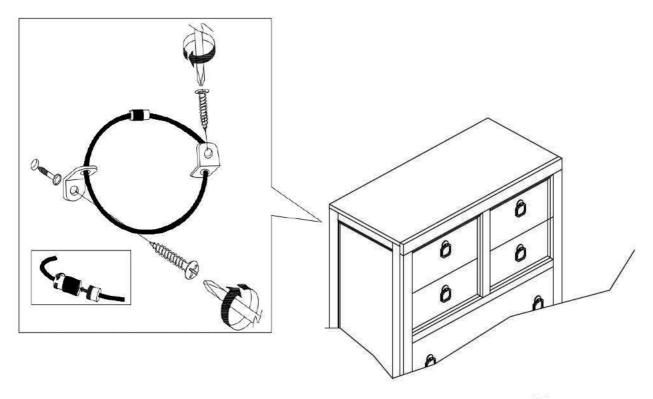








Inner Size of Drawer: 21.25"W X 12.50"D X 5.75"H X 0.50"T

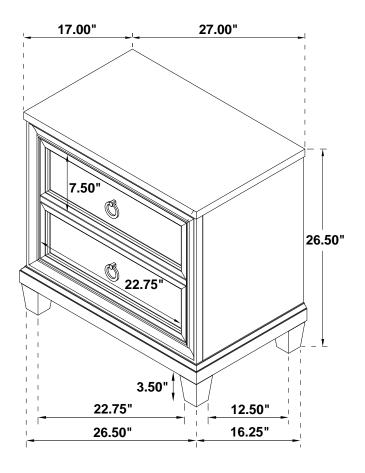

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215923 *Dresser*

ASSEMBLY INSTRUCTIONS

COASTER*

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B LEG

4PCS

C CENTER SUPPORT LEG WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 45mm - RBW)



8PCS

FLAT WASHER (Ф5/16" - RBW)



8PCS

2 LOCK WASHER (Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH (4mm x 60mm - RBW)




1PC


ASSEMBLY INSTRUCTIONS

STEP 1



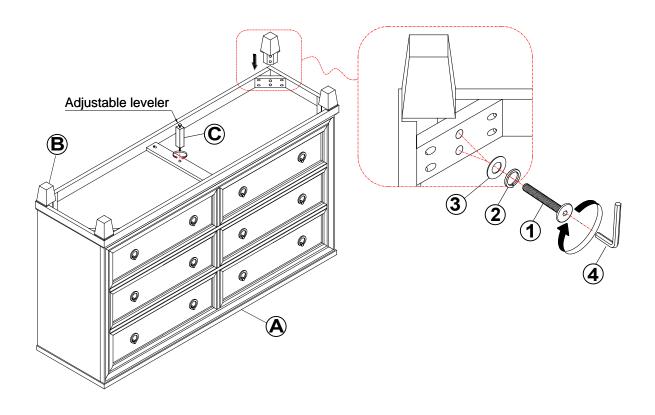

STEP 2 COMPLETE

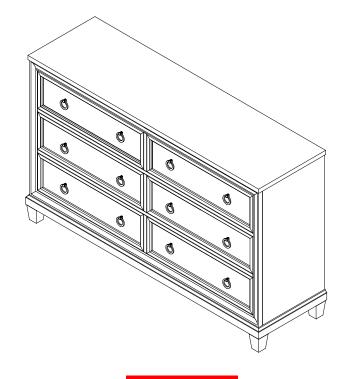

PAGE 3 OF 4



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

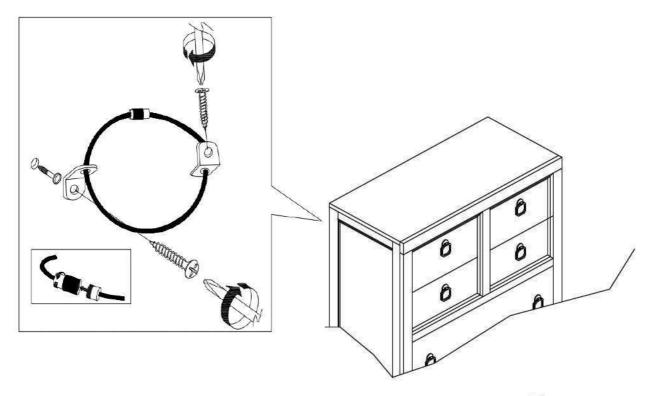





Inner Size of Drawer: 27.00"W X 13.50"D X 6.25"H X 0.50"T

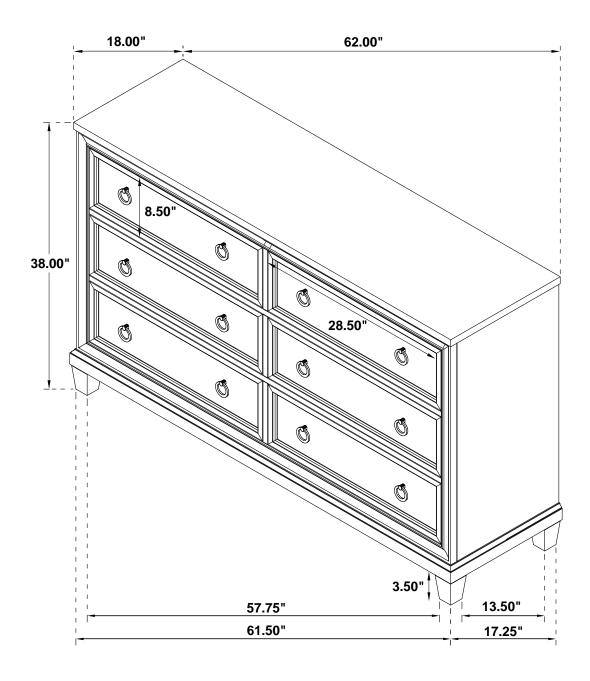

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215924 *Mirror*

ASSEMBLY INSTRUCTIONS

COASTER*

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

DRESSER
A FROM BOX
ITEM #215923



1PC

B MIRROR



1PC

C MIRROR SUPPORT (PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT (Φ1/4" x 38mm - RBW)



6PCS

FLAT WASHER (Φ1/4" - RBW)



6PCS

2 LOCK WASHER (Φ1/4" - RBW)




6PCS

4 ALLEN WRENCH (4mm x 60mm - RBW)



1PC




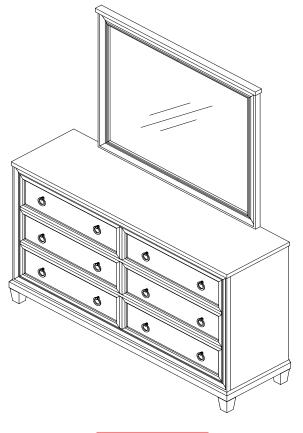

COASTERFURNITURE.COM

PAGE 3 OF 3



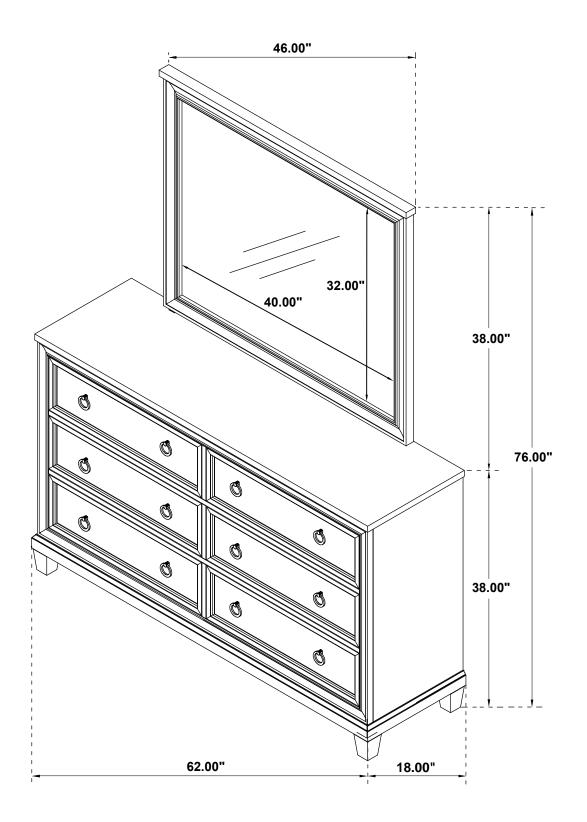

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215925 *Chest*

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A CHEST



1PC

LEG

00

4PCS

HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 45mm - RBW)



8PCS

FLAT WASHER (Φ5/16" - RBW)



8PCS

2 LOCK WASHER (Φ5/16" - RBW)



8PCS


4 ALLEN WRENCH (4mm x 60mm - RBW)



1PC

ITEM: 215925 ASSEMBLY INSTRUCTIONS STEP 1



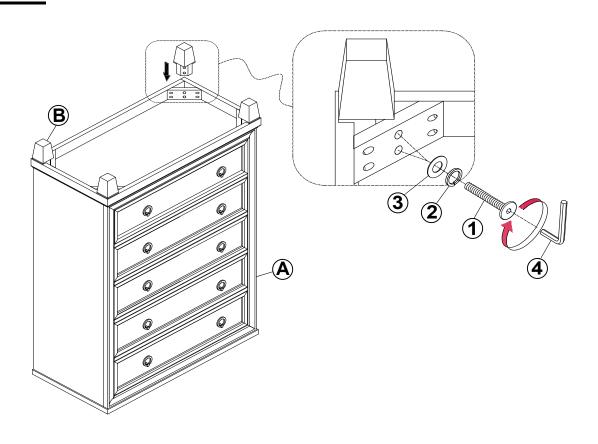

STEP 2 COMPLETE



İΝ

COASTERFURNITURE.COM



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

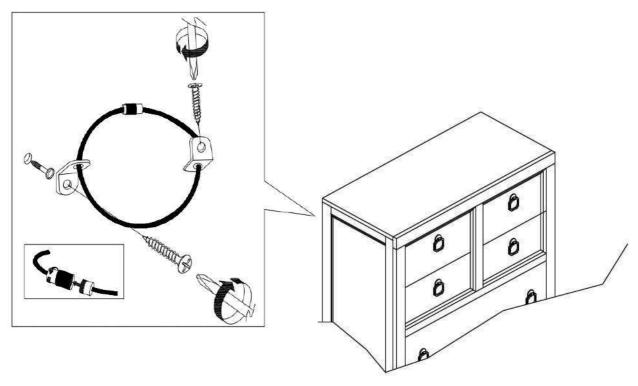








Inner Size of Drawer: 30.25"W X 13.50"D X 5.75"H X 0.50"T

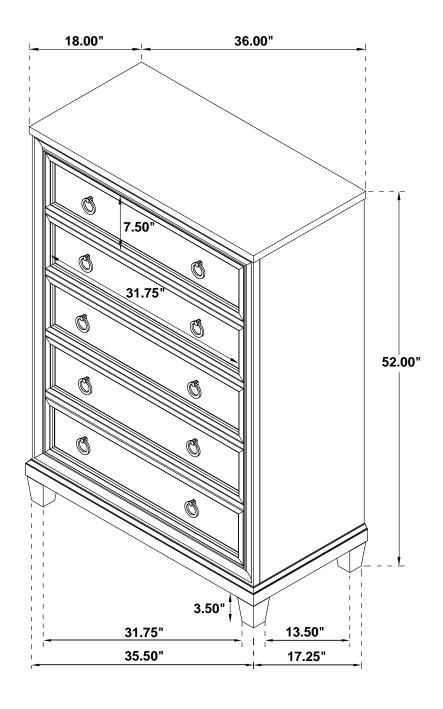

Note: Dimension tolerance ±5%