


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

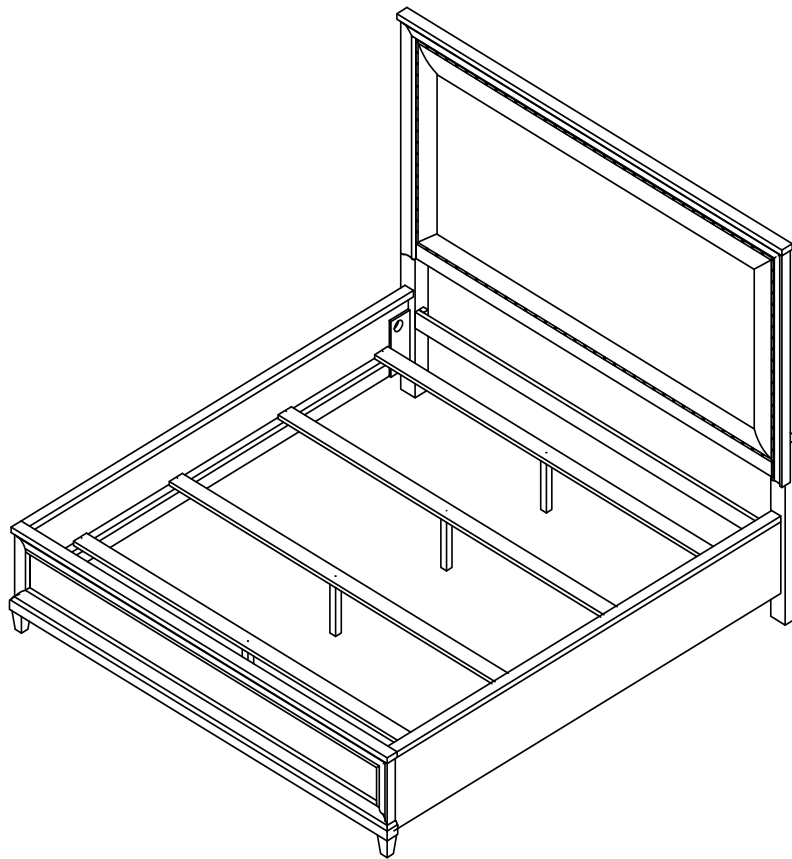

Fine Furniture for every stage of life

215921Q(B1-B3)
Queen Bed

ITEM: 215921Q(B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

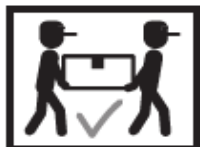


ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL

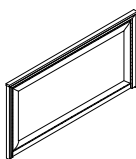

1PC

C LEFT HEADBOARD LEG




1PC

B RIGHT HEADBOARD LEG



1PC


D HEADBOARD BOTTOM RAIL



1PC

B2 (BOX 2)

E FOOTBOARD PANEL

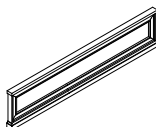

1PC

G LEFT FOOTBOARD LEG



1PC


F RIGHT FOOTBOARD LEG



1PC


B3 (BOX 3)

H BED RAIL

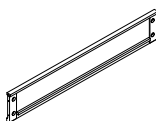


2PCS

J BED SLAT SUPPORT WITH LEVELER




4PCS

I BED SLAT




4PCS

HB 215921Q(B1)
FROM BOX 1
HEADBOARD
COMPLETE

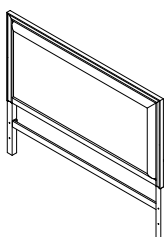

1PC

FB 215921Q(B2)
FROM BOX 2
FOOTBOARD
COMPLETE

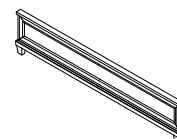

1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215921Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION



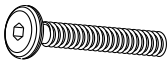


Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 215921Q(B1)

1	LONG BOLT (\emptyset 5/16" x 50MM - RBW)		10PCS	3	FLAT WASHER (\emptyset 5/16" - RBW)		10PCS
2	LOCK WASHER (\emptyset 5/16" - RBW)		10PCS	4	ALLEN WRENCH (4MMx60MM - RBW)		1PC

Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 215921Q(B2)

5	SHORT BOLT (\emptyset 5/16" x 38MM - RBW)		4PCS	7	FLAT WASHER (\emptyset 5/16" - RBW)		4PCS
6	LOCK WASHER (\emptyset 5/16" - RBW)		4PCS	8	ALLEN WRENCH (4MMx60MM - RBW)		1PC

Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 215921Q(B3)

9	THREADED BOLT (\emptyset 5/16" x 90MM - RBW)		8PCS	12	WRENCH (14MM - RBW)		1PC
10	HALF ROUND NUT (\emptyset 5/16" - RBW)		8PCS	13	FLAT HEAD SCREW (\emptyset 4 x 30MM - RBW)		8PCS
11	HEX NUT (\emptyset 5/16" x 14MM - RBW)		8PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **215921Q(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 1

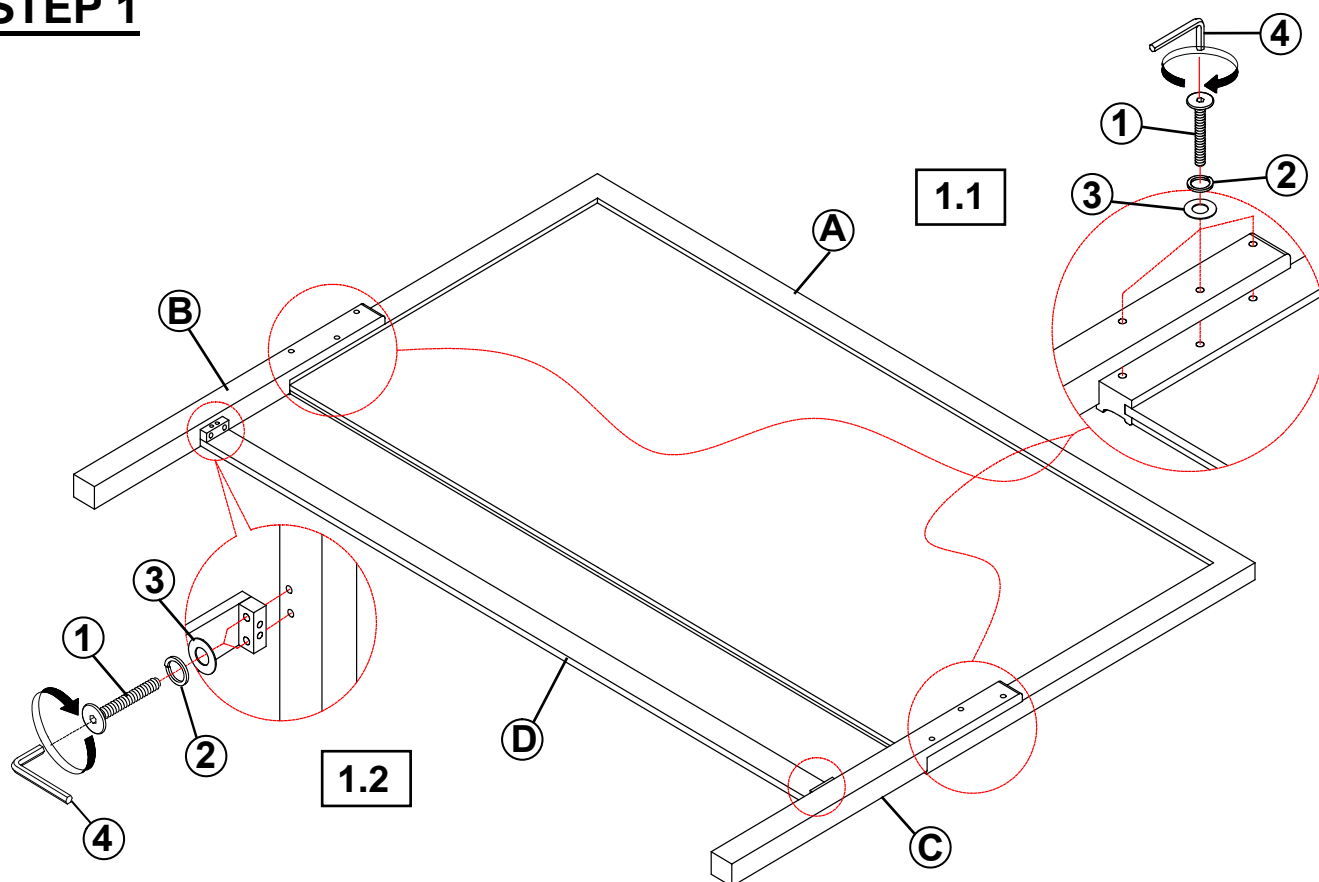


STEP 2

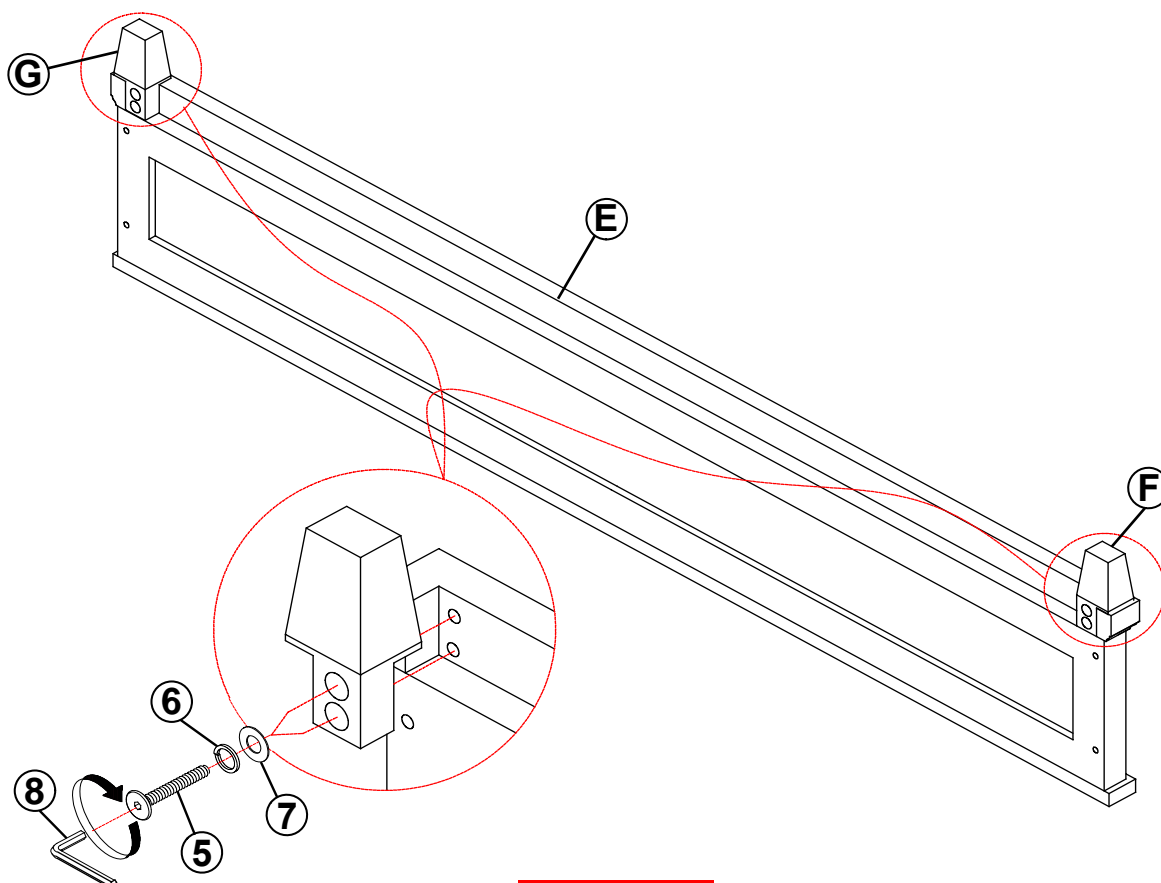


ITEM: **215921Q(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

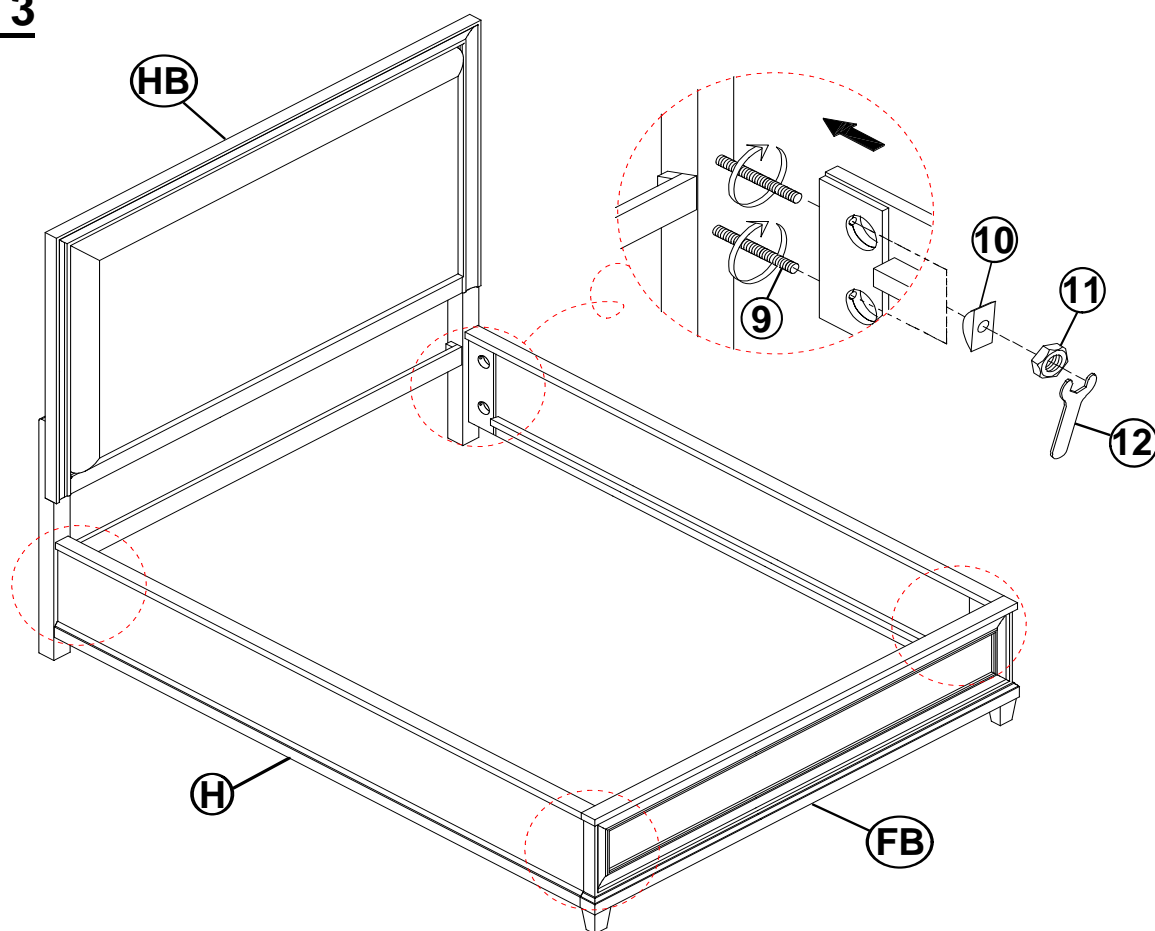


STEP 4

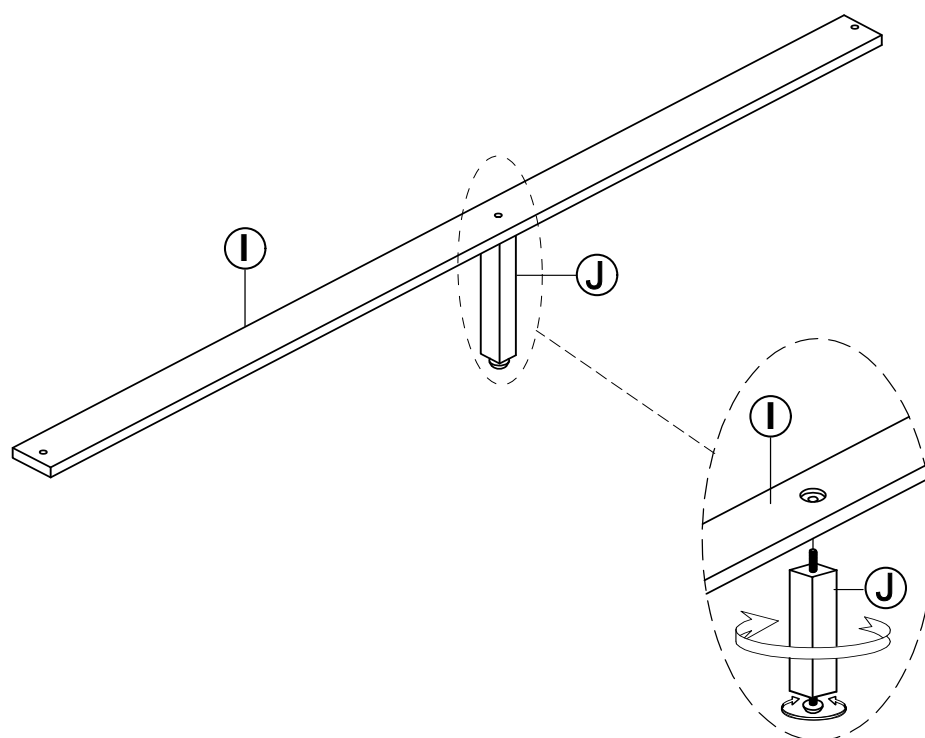


ITEM: **215921Q(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 5

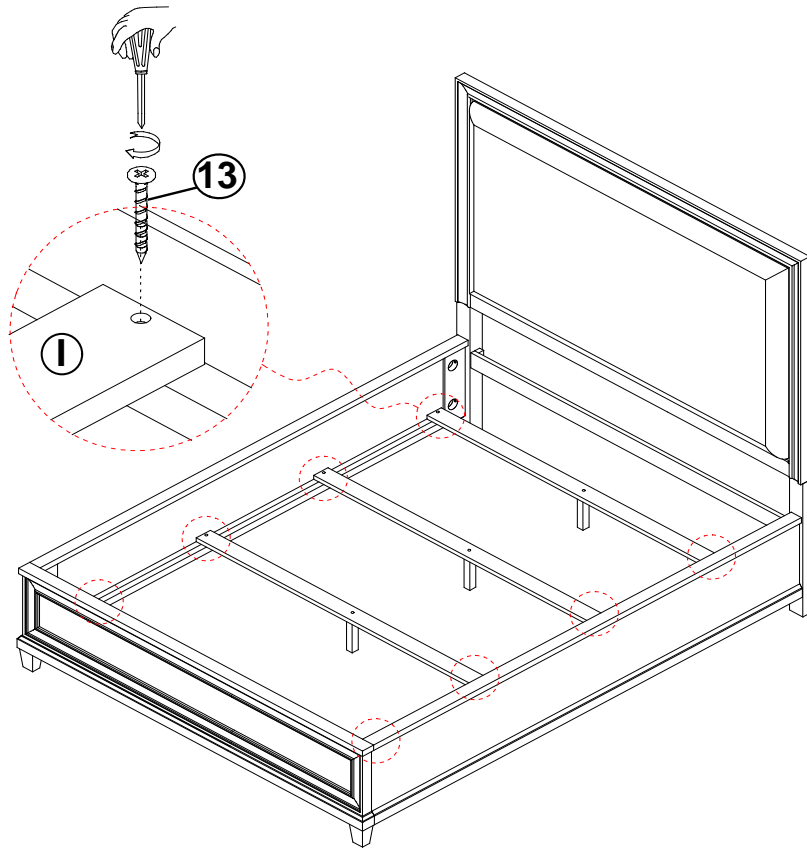


STEP 6 COMPLETE

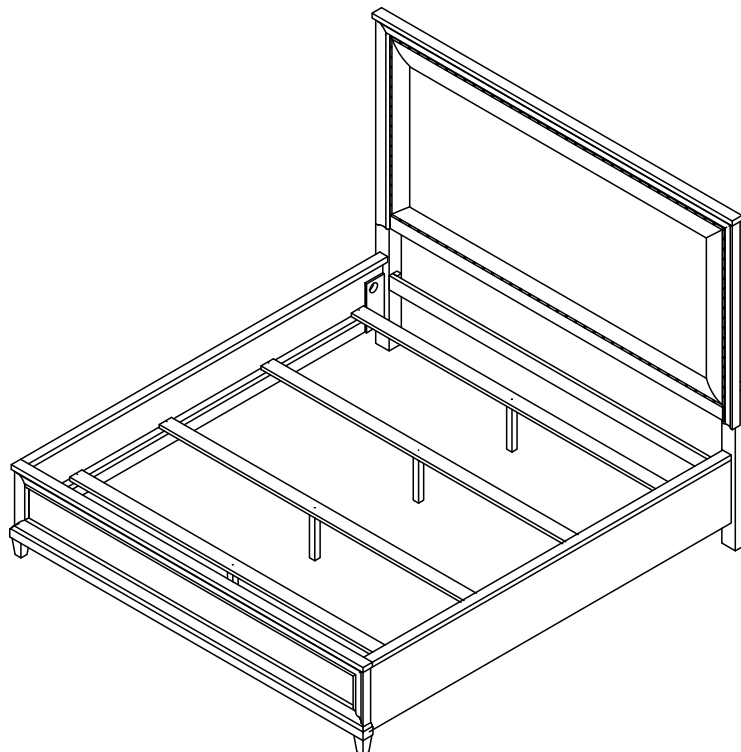

ITEM: **215921Q(B1-B3)**



Inner Size : 61.00"W X 81.50"D

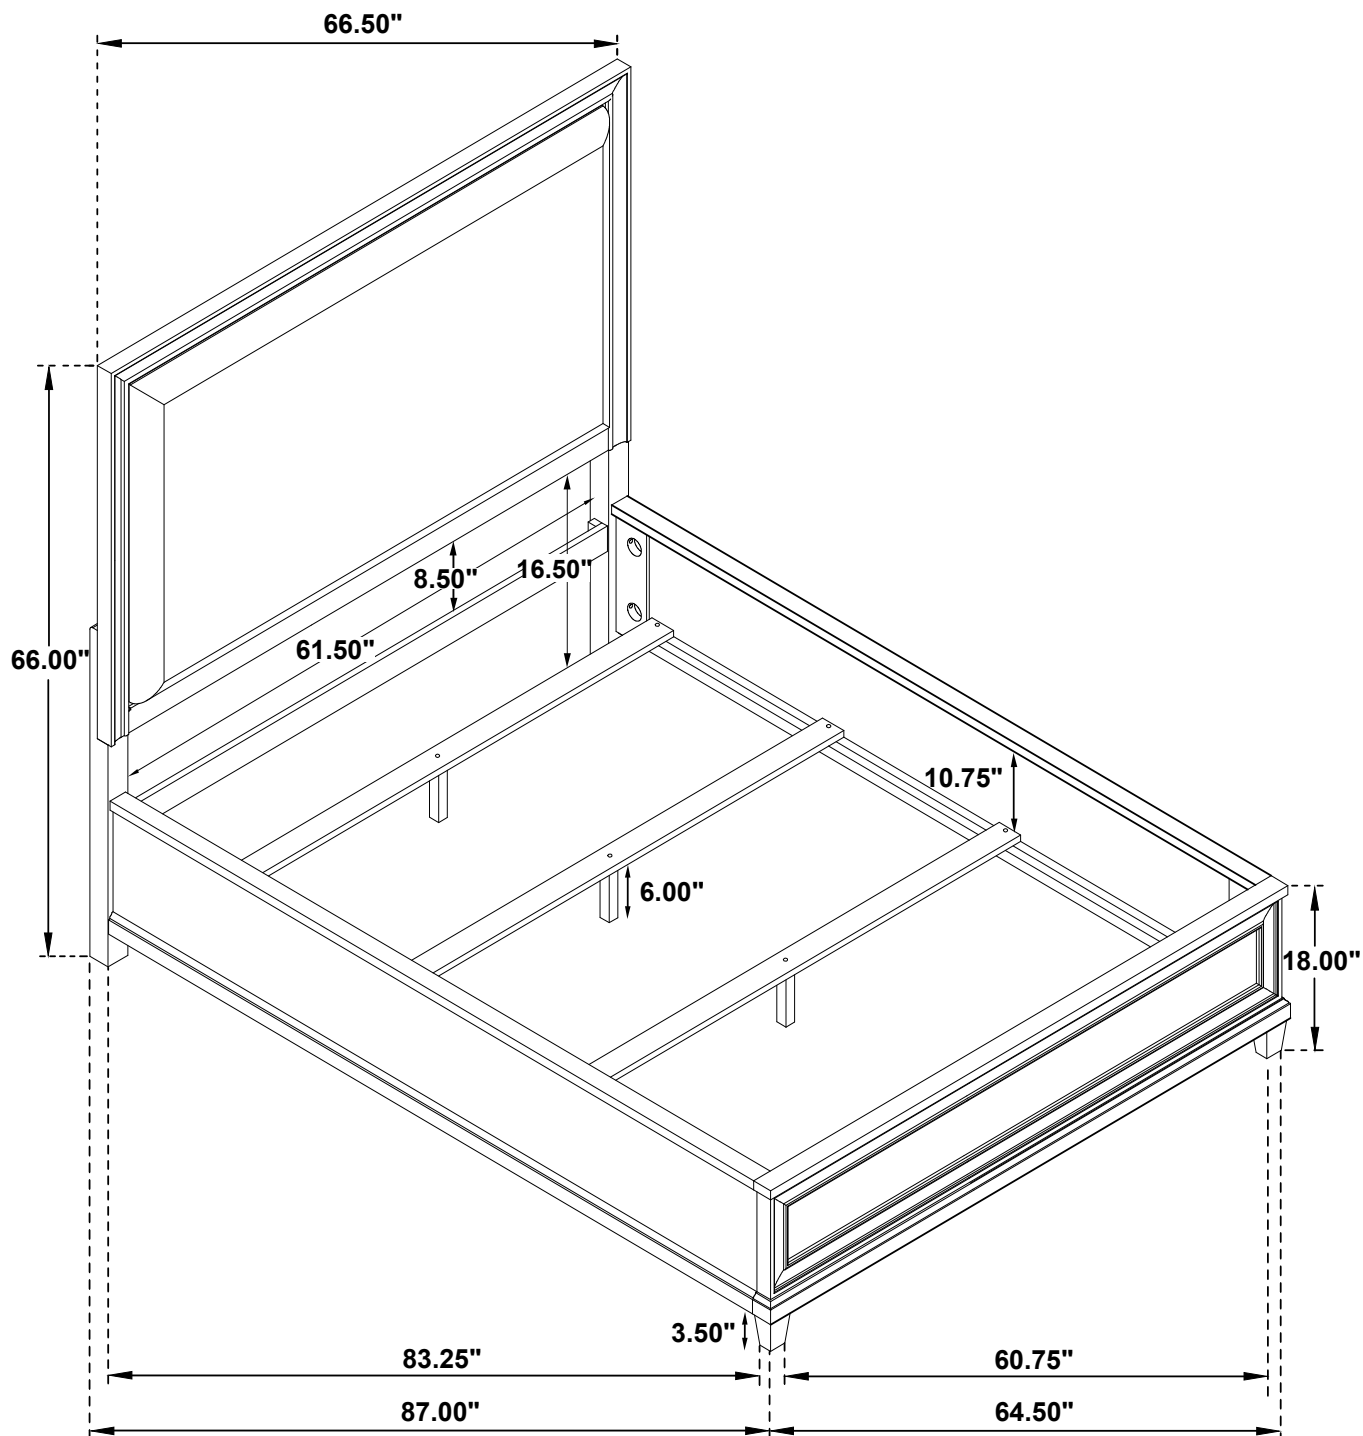

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

215922
Nightstand

ITEM:215922

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

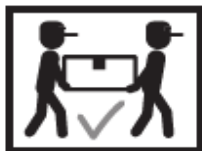


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

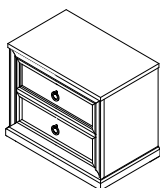

1PC


B LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 45mm - RBW)



8PCS

3 FLAT WASHER
(Φ5/16" - RBW)



8PCS

2 LOCK WASHER
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH
(4mm x 60mm - RBW)




1PC



ITEM: **215922**

ASSEMBLY INSTRUCTIONS

STEP 1

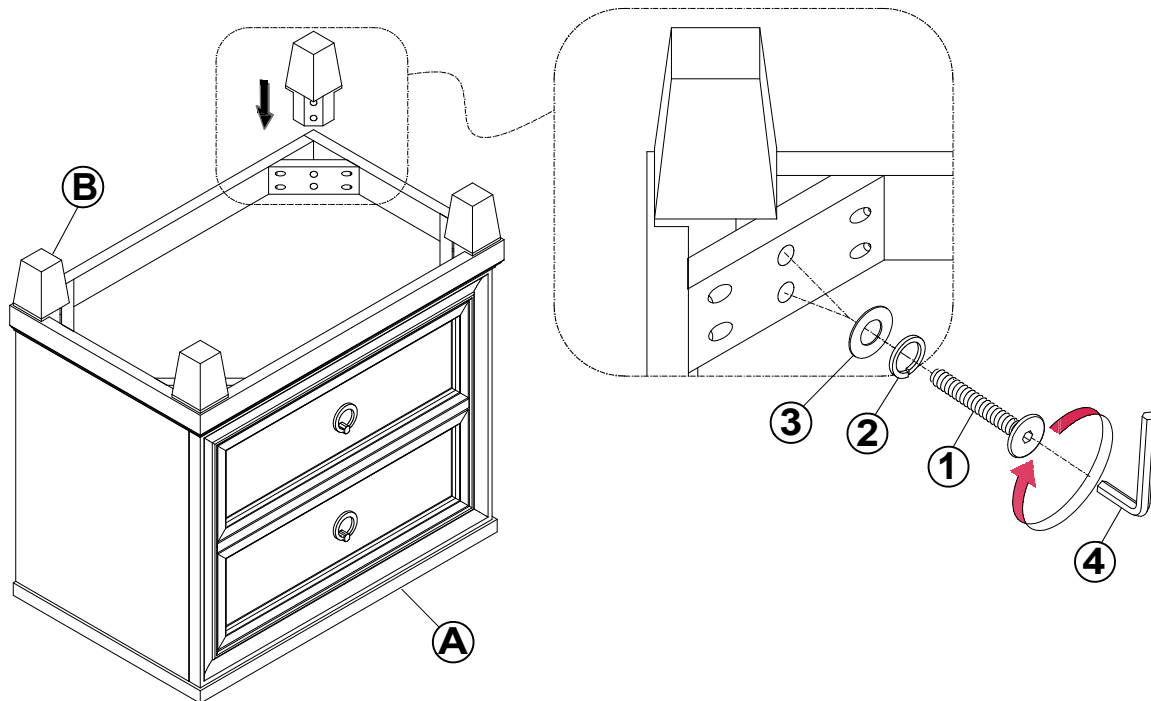

STEP 2 COMPLETE

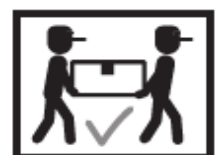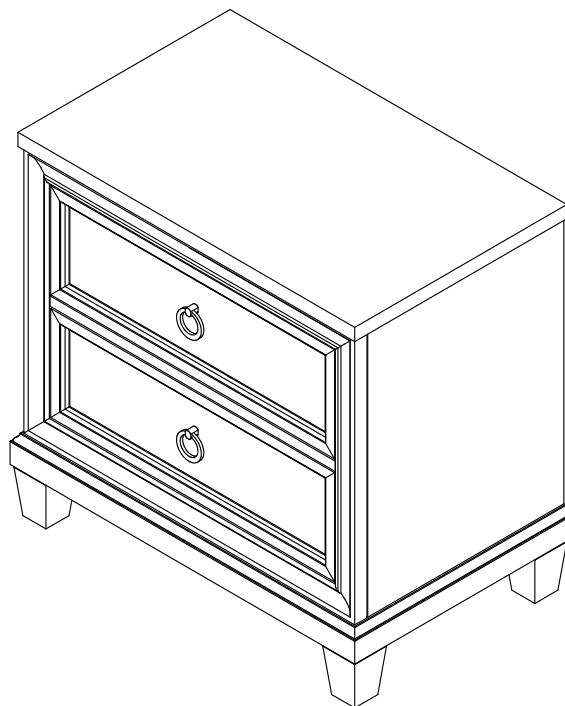

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

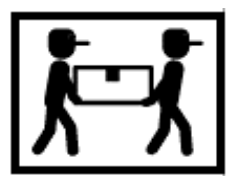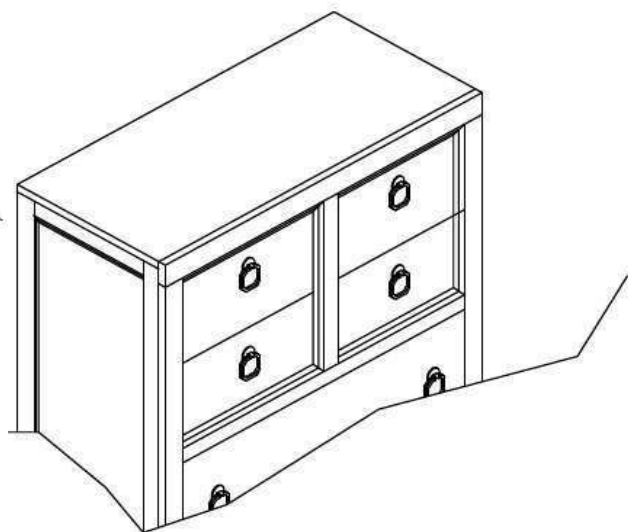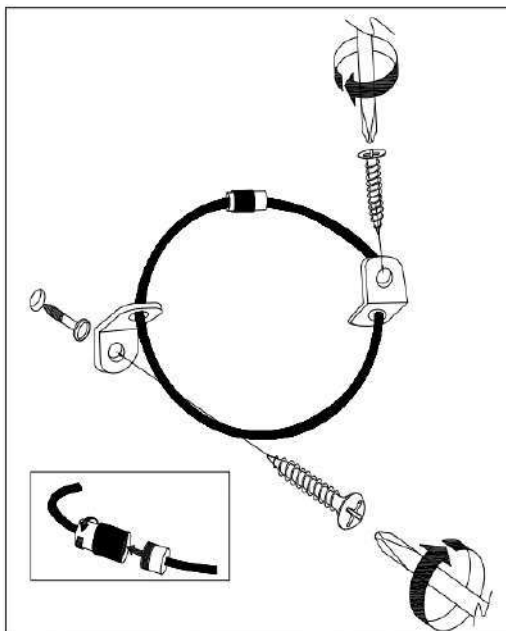

ITEM: **215922**



Inner Size of Drawer : 21.25"W X 12.50"D X 5.75"H X 0.50"T

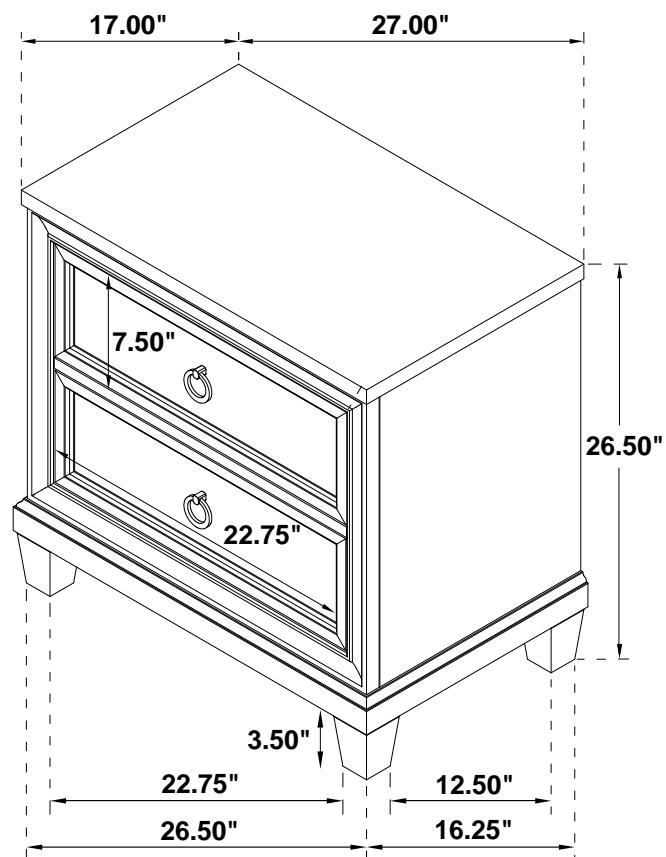

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215923
Dresser

ITEM:215923



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER

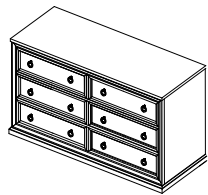


1PC

B LEG



4PCS


C CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 45mm - RBW)



8PCS

3 FLAT WASHER
(Φ5/16" - RBW)



8PCS

2 LOCK WASHER
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH
(4mm x 60mm - RBW)




1PC

ITEM: **215923**


ASSEMBLY INSTRUCTIONS



STEP 1

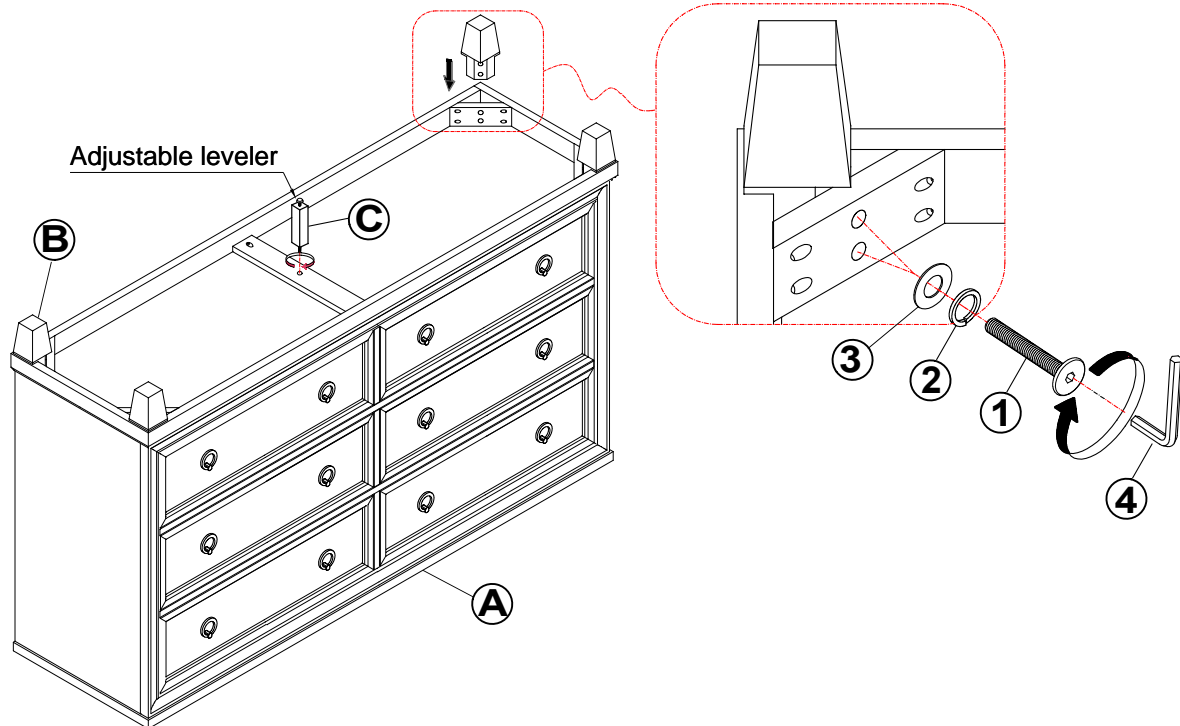

STEP 2 COMPLETE

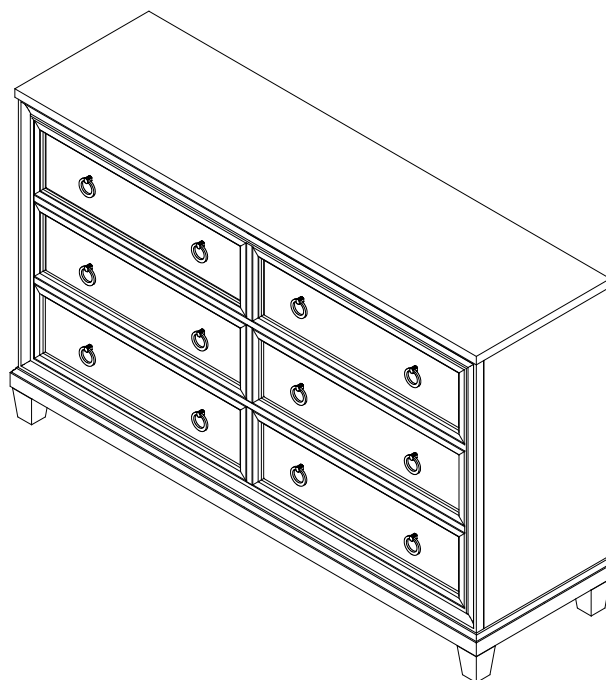

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

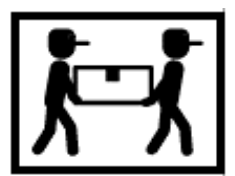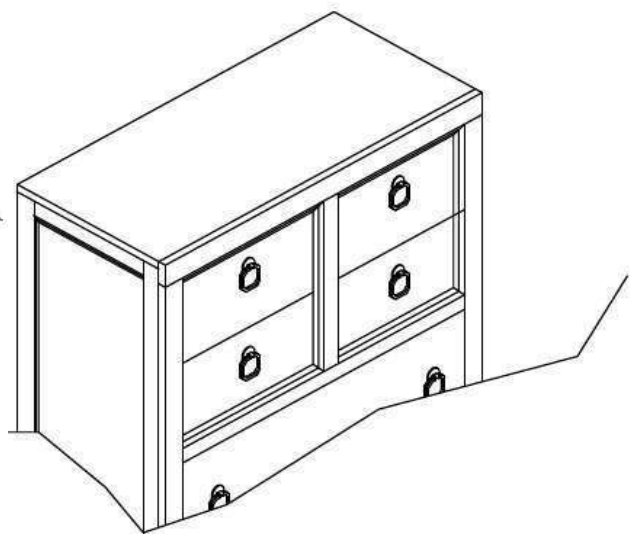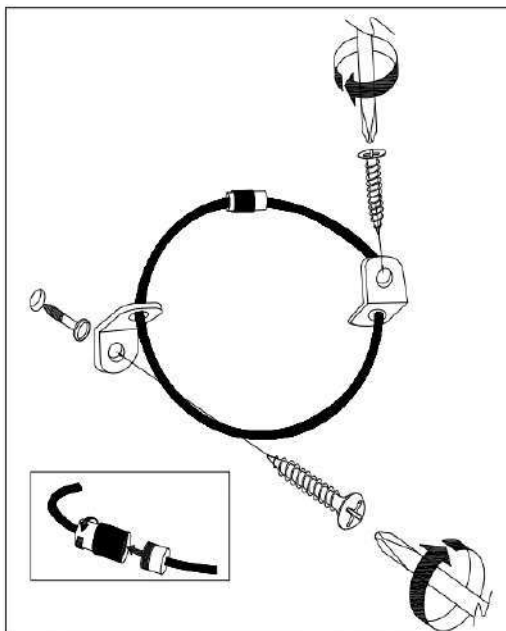

ITEM:215923



Inner Size of Drawer : 27.00"W X 13.50"D X 6.25"H X 0.50"T

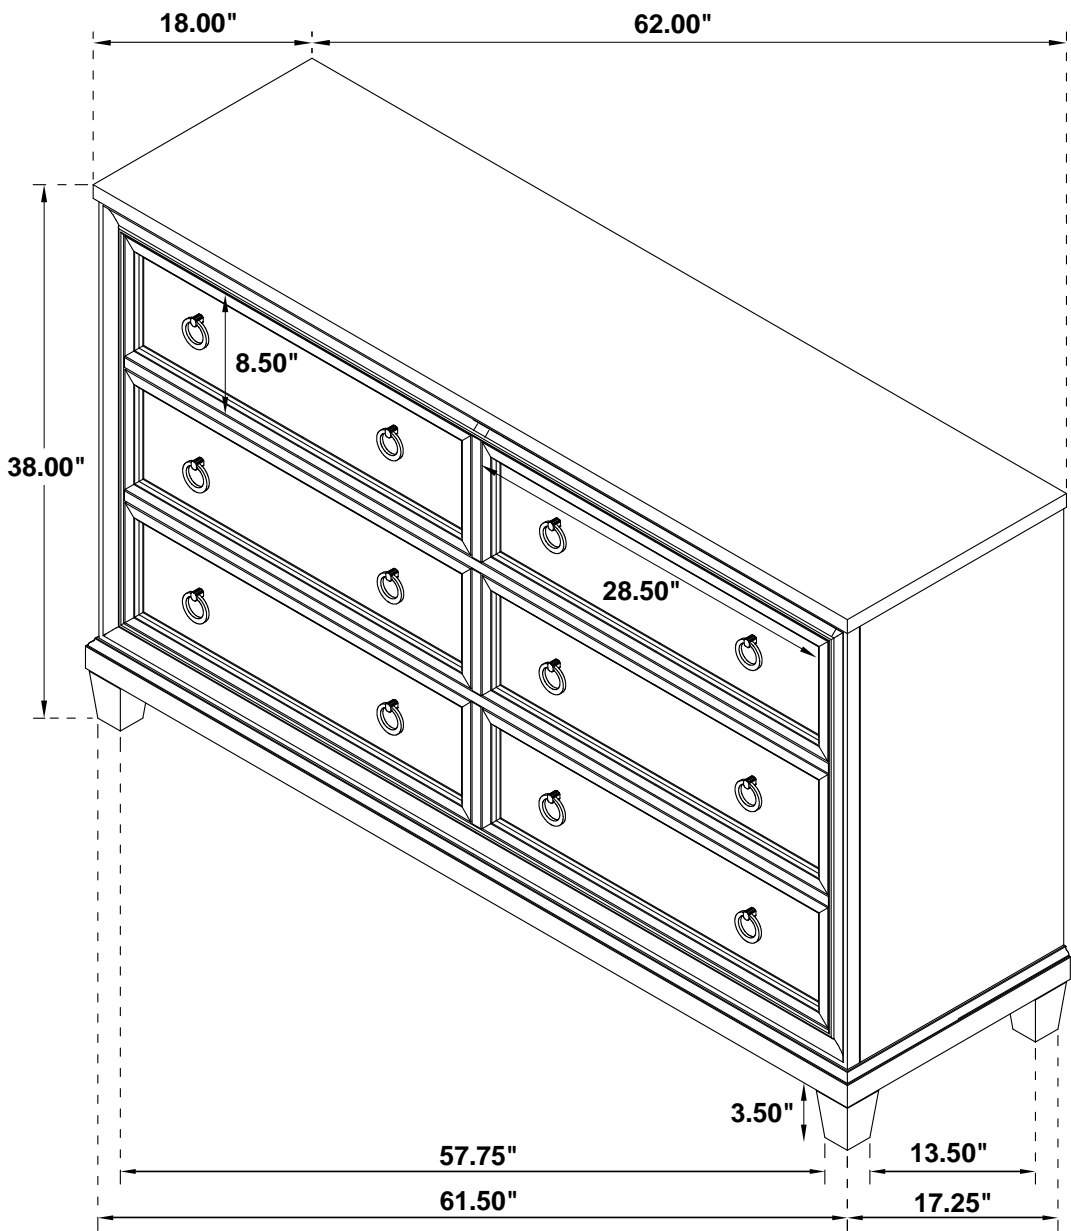

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215924
Mirror

ITEM: **215924**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER
FROM BOX
ITEM #215923

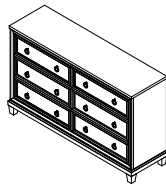

1PC

B MIRROR



1PC


C MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
($\Phi 1/4"$ x 38mm - RBW)



6PCS

3 FLAT WASHER
($\Phi 1/4"$ - RBW)



6PCS

2 LOCK WASHER
($\Phi 1/4"$ - RBW)



6PCS

4 ALLEN WRENCH
(4mm x 60mm - RBW)




1PC



ITEM: **215924**

ASSEMBLY INSTRUCTIONS


STEP 1

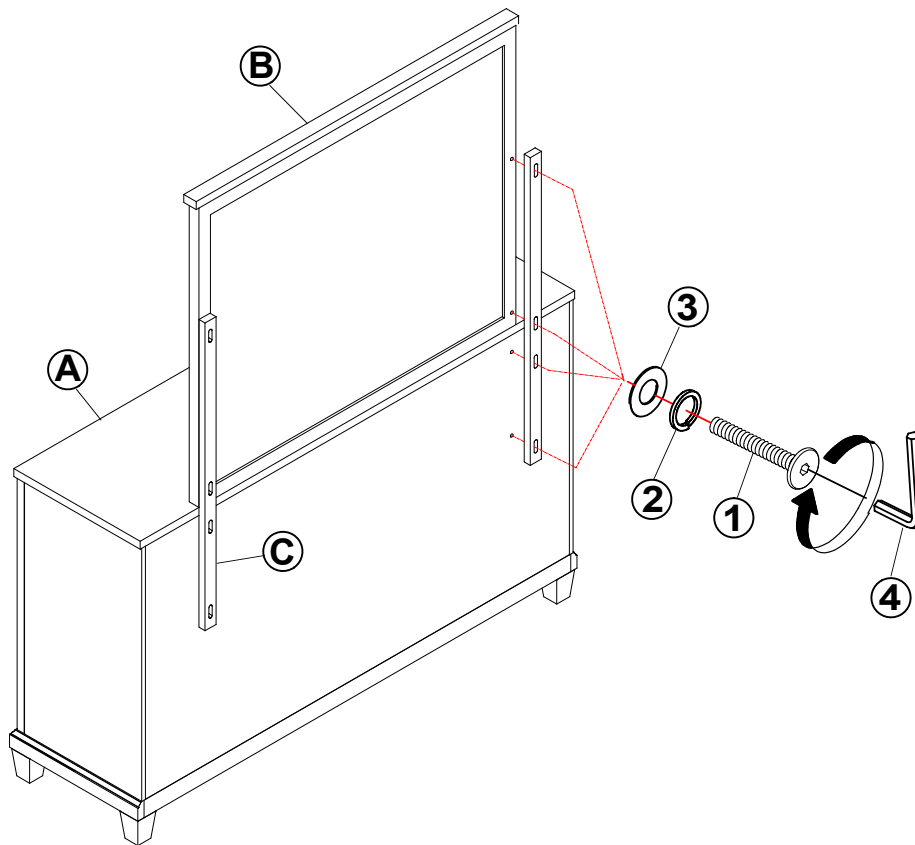

STEP 2 COMPLETE

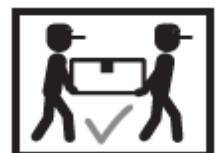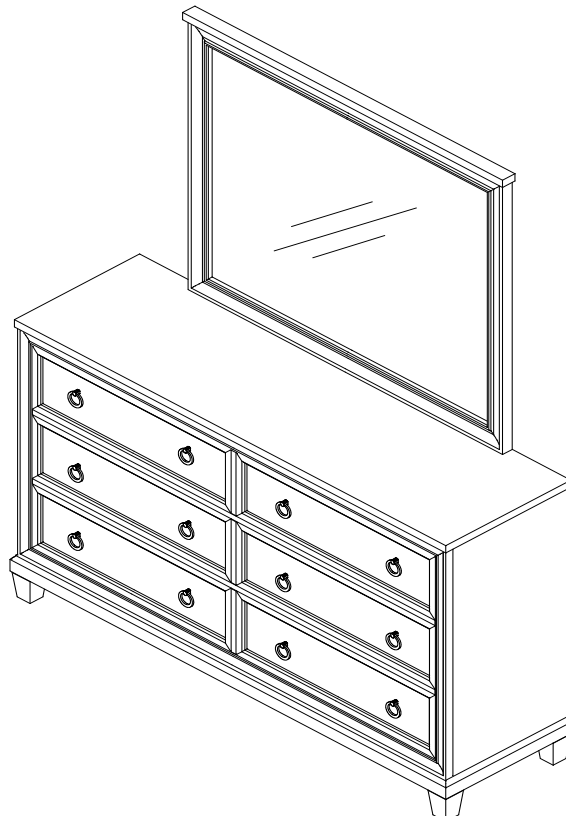

ITEM: **215924**

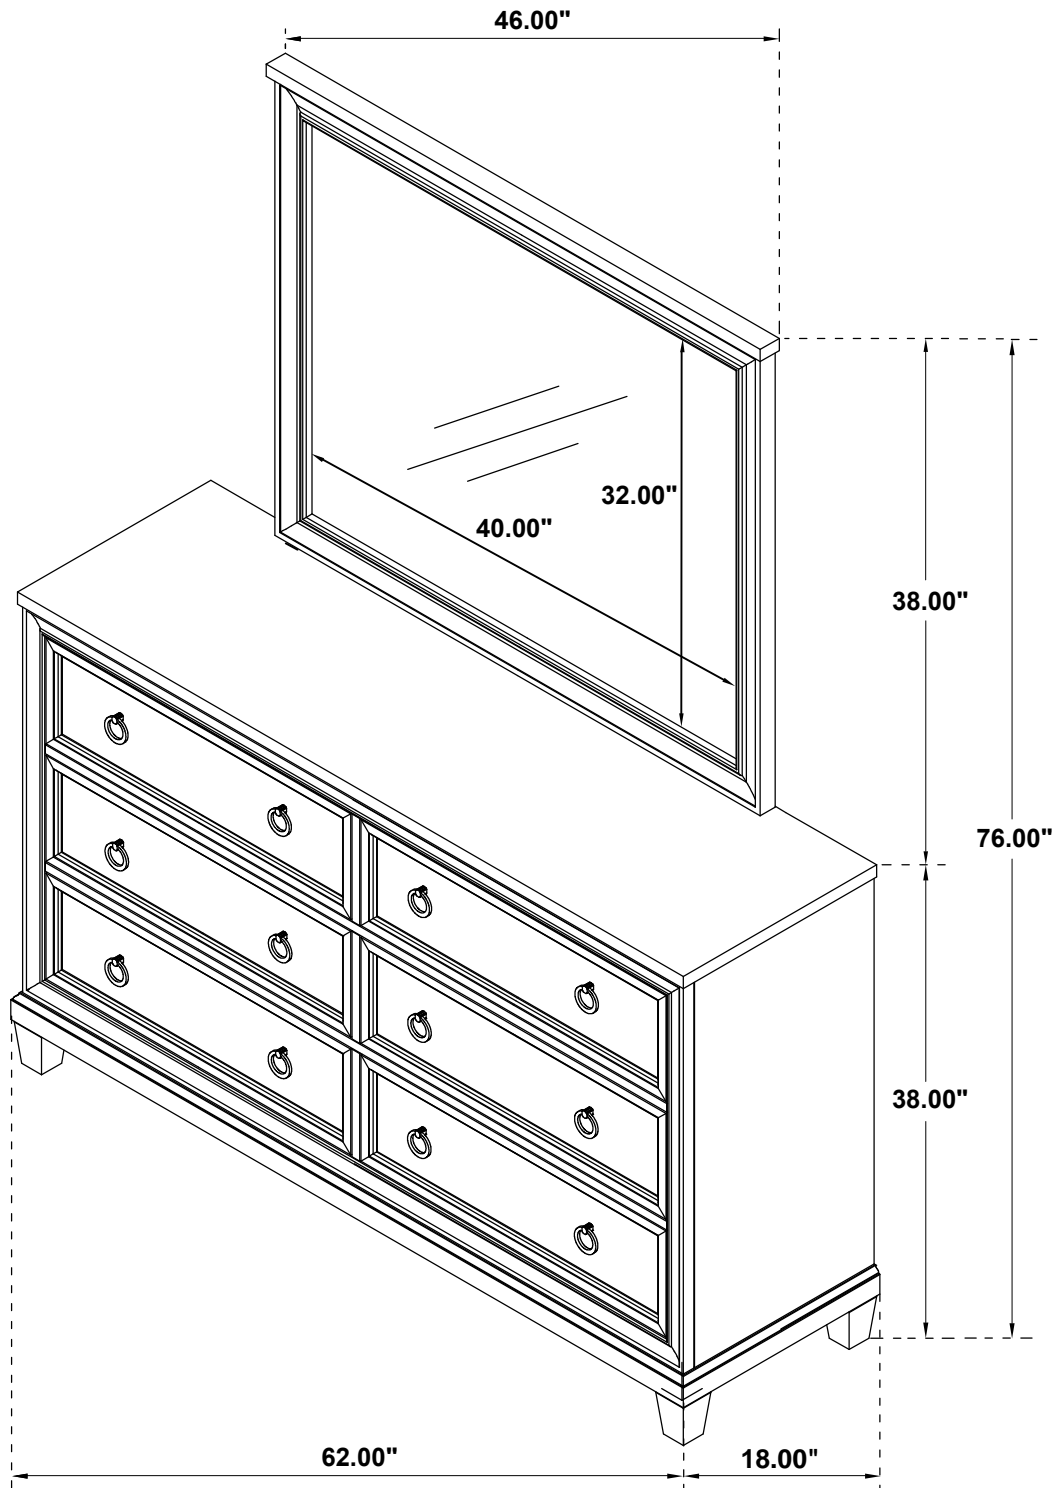

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215925
Chest

ITEM:215925

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

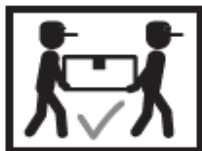


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A CHEST

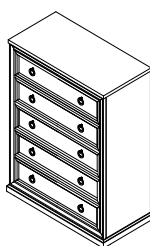

1PC


B LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 45mm - RBW)



8PCS

3 FLAT WASHER
(Φ5/16" - RBW)



8PCS

2 LOCK WASHER
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH
(4mm x 60mm - RBW)




1PC


ITEM: **215925**

ASSEMBLY INSTRUCTIONS

STEP 1

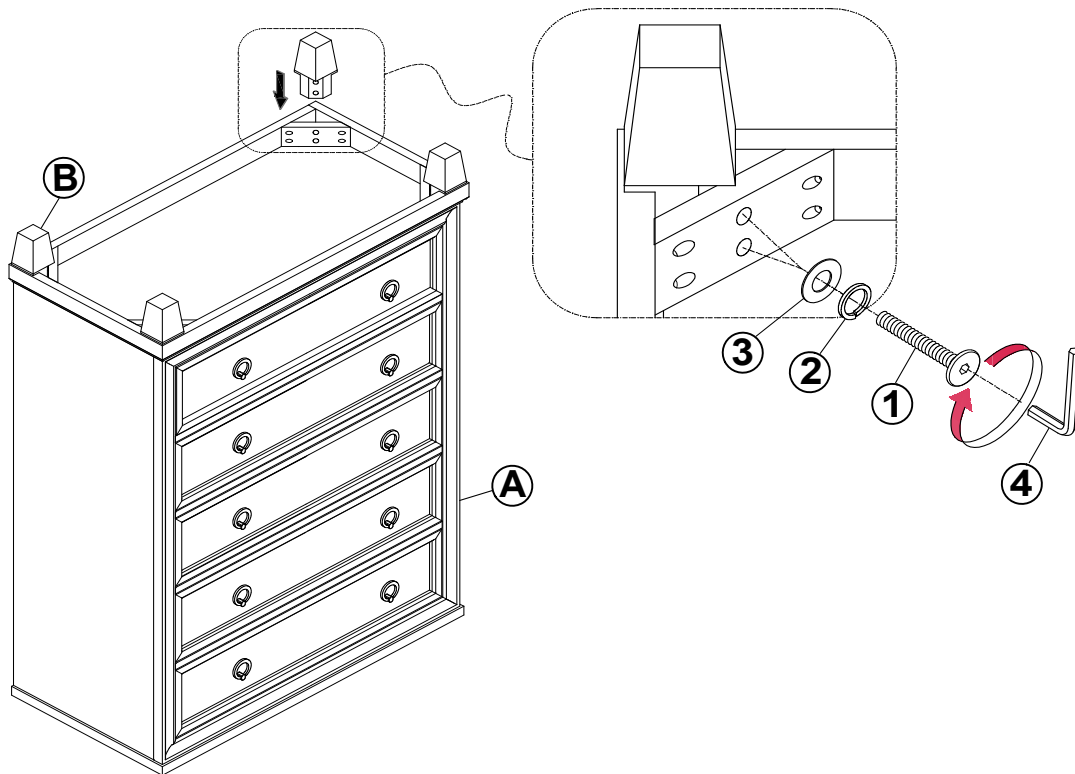

STEP 2 COMPLETE

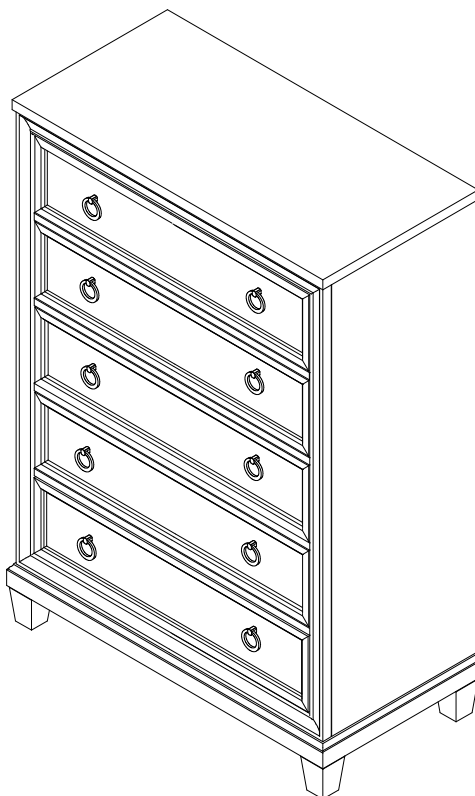

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

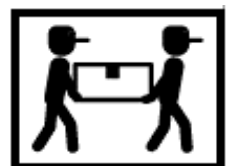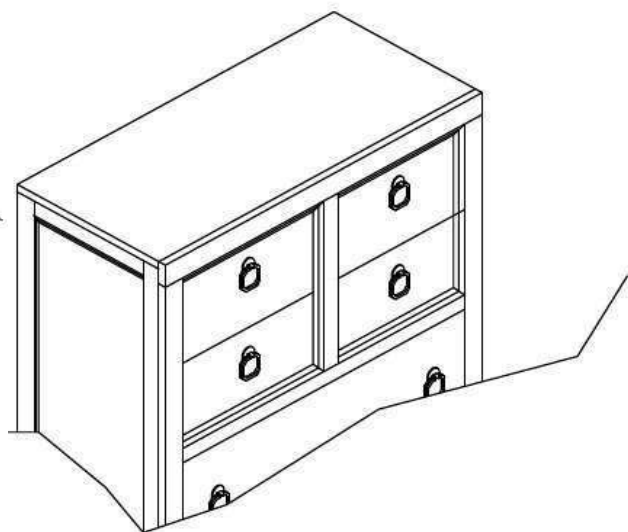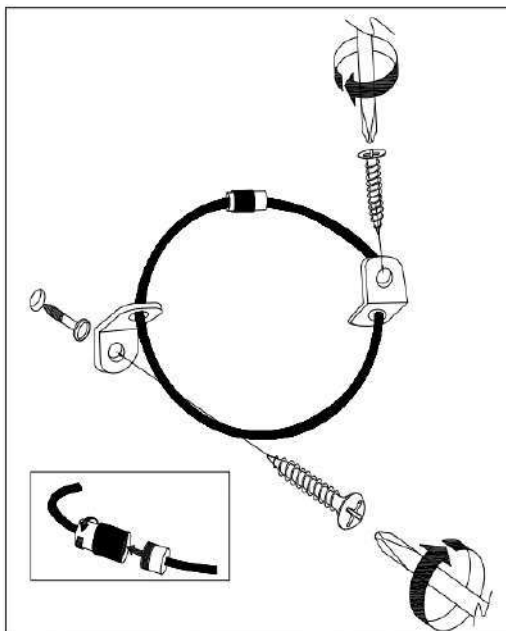

ITEM: **215925**



Inner Size of Drawer : 30.25"W X 13.50"D X 5.75"H X 0.50"T

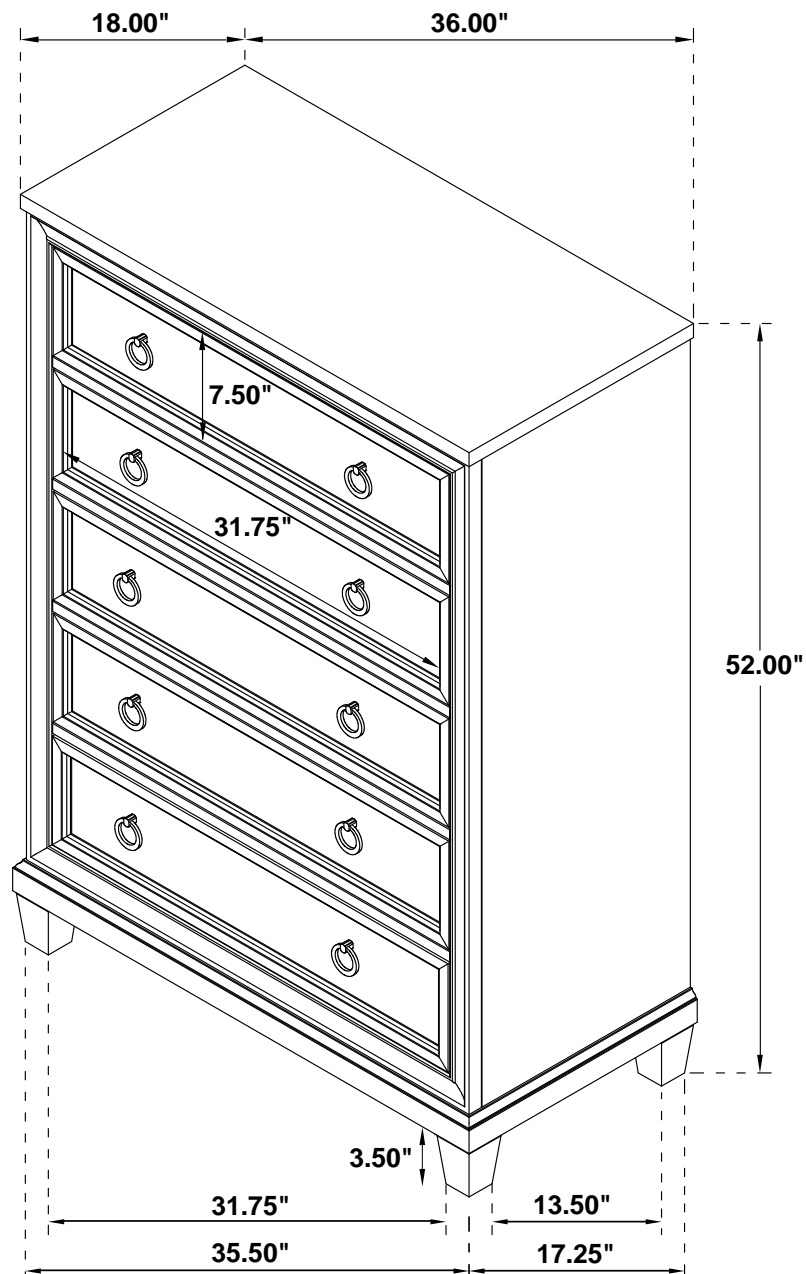

Note: Dimension tolerance $\pm 5\%$