



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

222491Q(B1-B3)
Queen Bed

ITEM: 222491Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL



1PC

B LEFT
HEADBOARD LEG



1PC

C RIGHT
HEADBOARD LEG



1PC


D HEADBOARD
BOTTOM RAIL



1PC

B2 (BOX 2)

E FOOTBOARD



1PC

B3 (BOX 3)

F BED RAIL



2PCS

G BED SLAT




4PCS

H BED SLAT SUPPORT
WITH LEVELER




4PCS

HB 222491Q (B1)
FROM BOX 1
HEADBOARD
COMPLETE



1PC

E 222491Q (B2)
FROM BOX 2
FOOTBOARD
COMPLETE



1PC

ITEM: 222491Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222491Q (B1)

1	BOLT (Ø5/16" x 45mm - BLK)		12PCS	3	FLAT WASHER (5/16" x 19 x 1.5mm - BLK)		12PCS
2	LOCK WASHER (5/16" - BLK)		12PCS	4	ALLEN WRENCH (74 x 30 x 4mm - BLK)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOATED IN 222491Q (B3)

5	FLAT HEAD SCREW (4 x 32mm - BLK)		8PCS	8	HEX NUT (5/16" x 17mm - BLK)		8PCS
6	THREADED BOLT (5/16" x 75mm - BLK)		8PCS	9	WRENCH (13MM - BLK)		1PC
7	U-SQUARE WASHER (25 x 15 x 2mm - BLK)		8PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **222491Q(B1-B3)**
ASSEMBLY INSTRUCTIONS



STEP 1

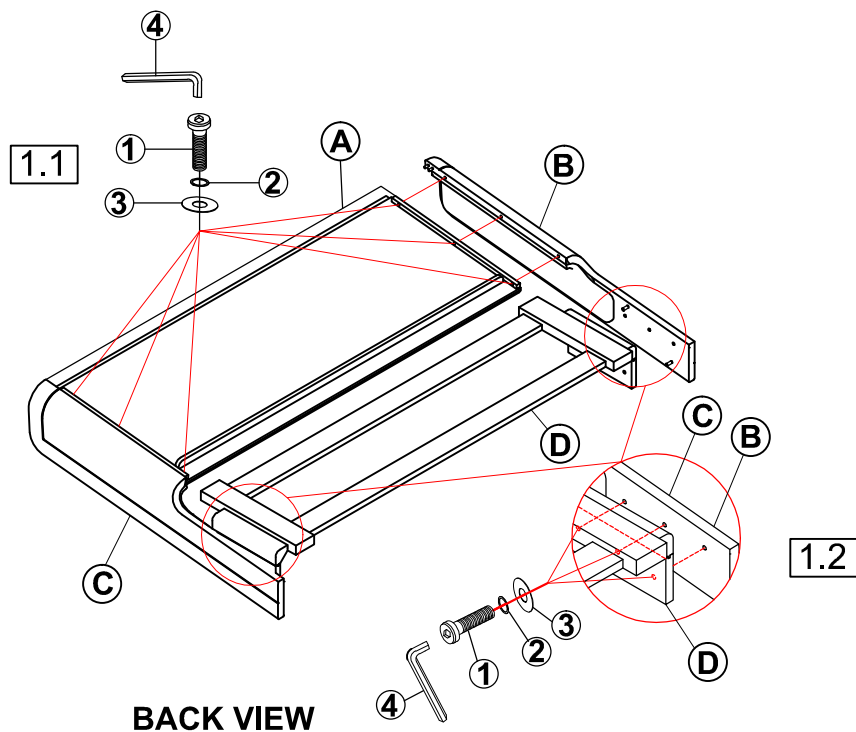


STEP 2

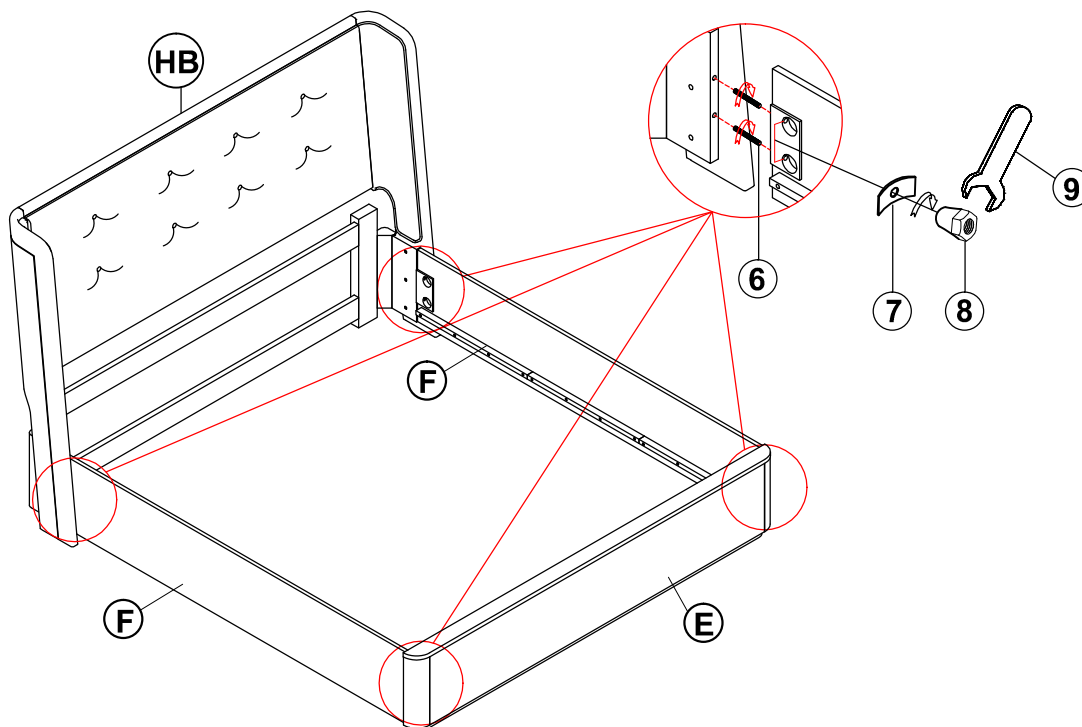



ITEM: **222491Q(B1-B3)**
ASSEMBLY INSTRUCTIONS



STEP 3

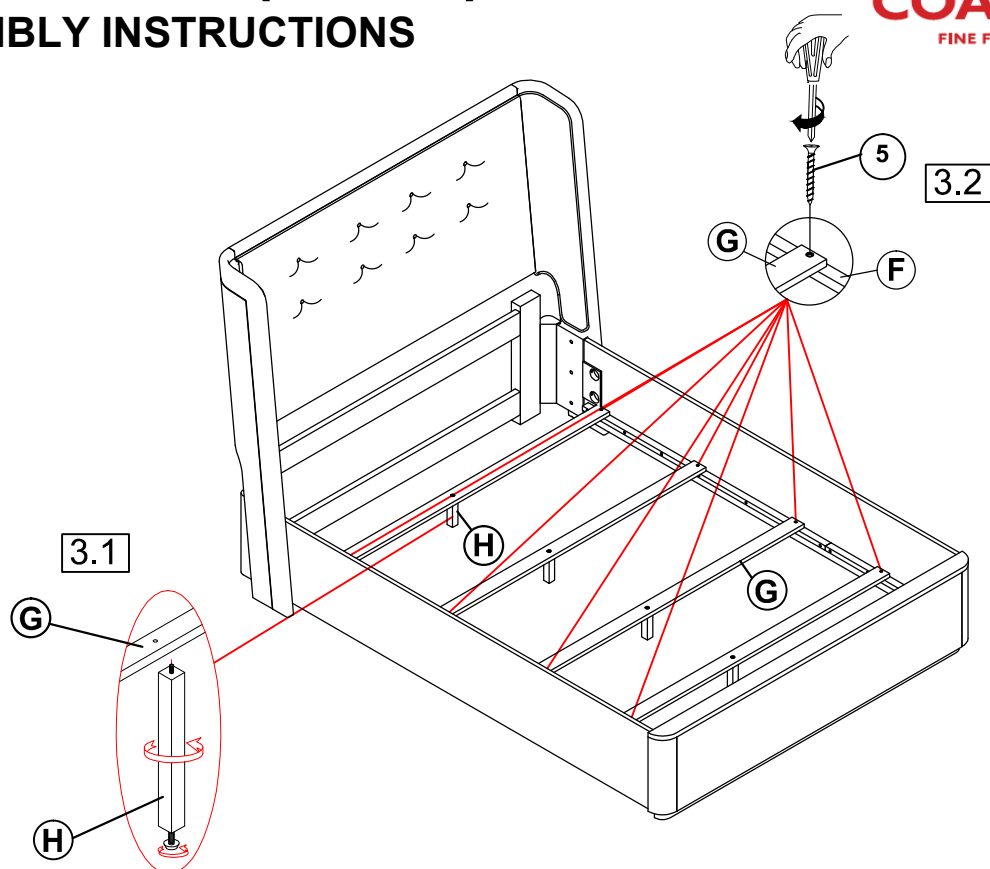


STEP 4
COMPLETE

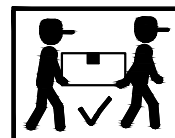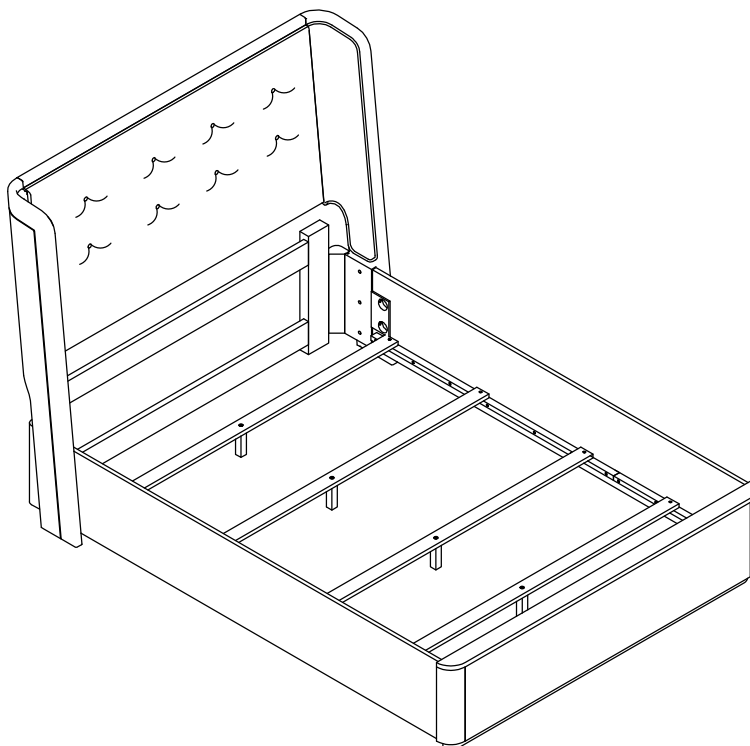

ITEM: **222491Q(B1-B3)**



Inner Size : 61.00"W x 81.00"D

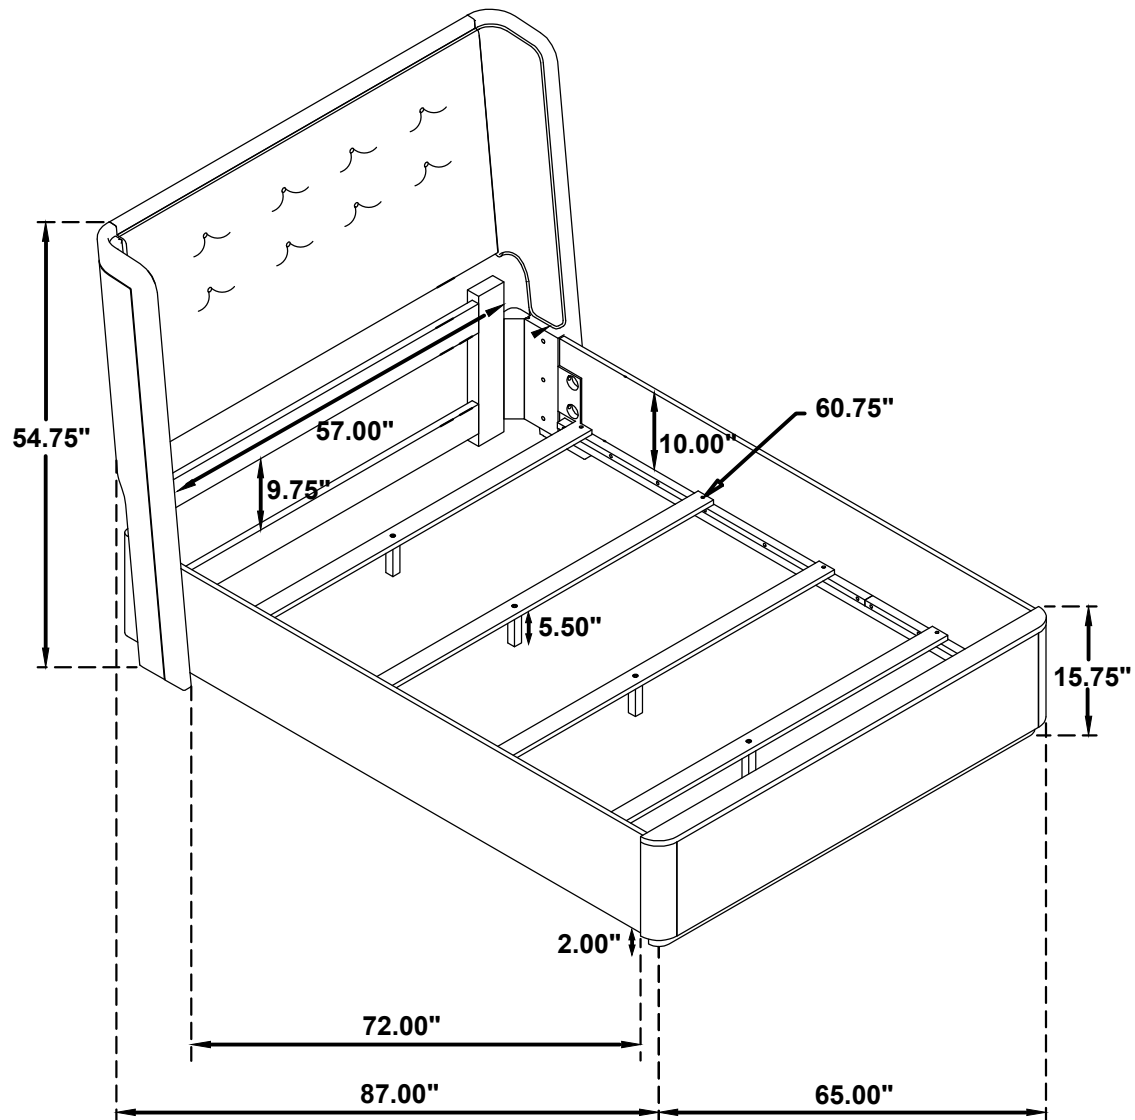

Note : Dimension tolerance $\pm 5\%$