

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**222520Q(B1-B3)**  
**Queen Bed**

# ITEM: 222520Q(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION


### B1 (BOX 1)

A HEADBOARD PANEL

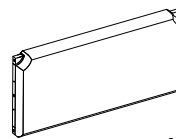


1PC

B HEADBOARD BOTTOM RAIL



1PC

C FOOTBOARD



1PC

D CONCEAL PANEL



4PCS


### B2 (BOX 2)

E BED RAIL



2PCS

F ROLL SLAT (10 PCS)

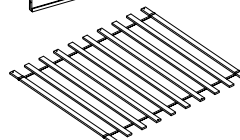

1SET

G CENTER RAIL



1PC


H CENTER RAIL SUPPORT  
WITH LEVELER



4PCS

### B3 (BOX 3)

I LEFT HEADBOARD POST  
WITH LABEL "I"



1PC

J RIGHT HEADBOARD POST  
WITH LABEL "J"



1PC

K LEFT FOOTBOARD POST  
WITH LABEL "K"



1PC

L RIGHT FOOTBOARD POST  
WITH LABEL "L"



1PC

M CANOPY SHORT RAIL  
WITH LABEL "M"



2PCS

N CANOPY LONG RAIL  
WITH LABEL "N"



2PCS

# ITEM: 222520Q(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222520Q(B1)

|   |                                          |                                                                                     |       |
|---|------------------------------------------|-------------------------------------------------------------------------------------|-------|
| 1 | <b>LONG BOLT</b><br>(5/16" x 50mm - BLK) |    | 12PCS |
| 2 | <b>LOCK WASHER</b><br>(1.6 x 14mm - BLK) |    | 12PCS |
| 3 | <b>FLAT WASHER</b><br>(2 x 19mm - BLK)   |    | 8PCS  |
| 4 | <b>CURVE WASHER</b><br>(2 x 27mm - BLK)  |    | 4PCS  |
| 5 | <b>ALLEN WRENCH</b><br>(M5 x 65mm - BLK) |    | 1PC   |
| 6 | <b>WOOD DOWEL</b><br>(10 x 40mm - BRW)   |  | 12PCS |

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222520Q(B2)

|    |                                                    |                                                                                     |      |
|----|----------------------------------------------------|-------------------------------------------------------------------------------------|------|
| 2  | <b>LOCK WASHER</b><br>(1.6 x 14mm - BLK)           |  | 4PCS |
| 3  | <b>FLAT WASHER</b><br>(2 x 19mm - BLK)             |  | 4PCS |
| 7  | <b>SHORT BOLT</b><br>(5/16" x 19mm - BLK)          |  | 4PCS |
| 8  | <b>SHORT THREADED BOLT</b><br>(5/16" x 80mm - WHT) |  | 8PCS |
| 9  | <b>HEX NUT</b><br>(5/16" x 13mm - WHT)             |  | 8PCS |
| 10 | <b>HALF ROUND NUT</b><br>(22 x 17 x 10mm - WHT)    |  | 8PCS |
| 11 | <b>WRENCH</b><br>(13mm - WHT)                      |  | 1PC  |
| 12 | <b>FLAT HEAD SCREW</b><br>(8 x 32mm - BLK)         |  | 8PCS |

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222520Q(B3)

|    |                                                    |                                                                                      |      |
|----|----------------------------------------------------|--------------------------------------------------------------------------------------|------|
| 9  | <b>HEX NUT</b><br>(5/16" x 13mm - WHT)             |   | 8PCS |
| 10 | <b>HALF ROUND NUT</b><br>(22 x 17 x 10mm - WHT)    |   | 8PCS |
| 13 | <b>LONG THREADED BOLT</b><br>(5/16" x 150mm - WHT) |  | 8PCS |

### NOTE :


Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 222520Q(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 1

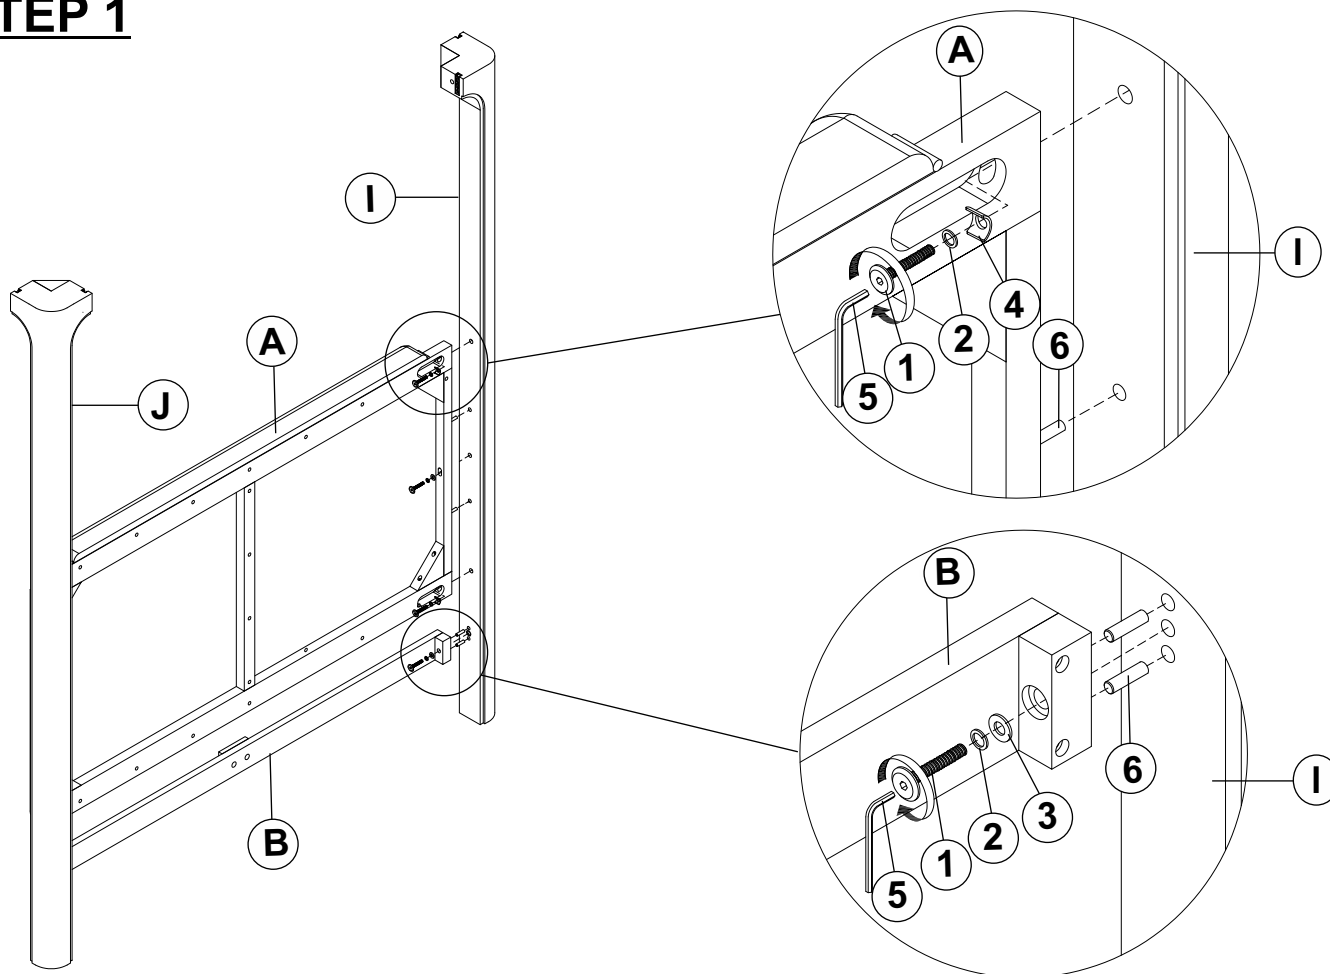

### STEP 2

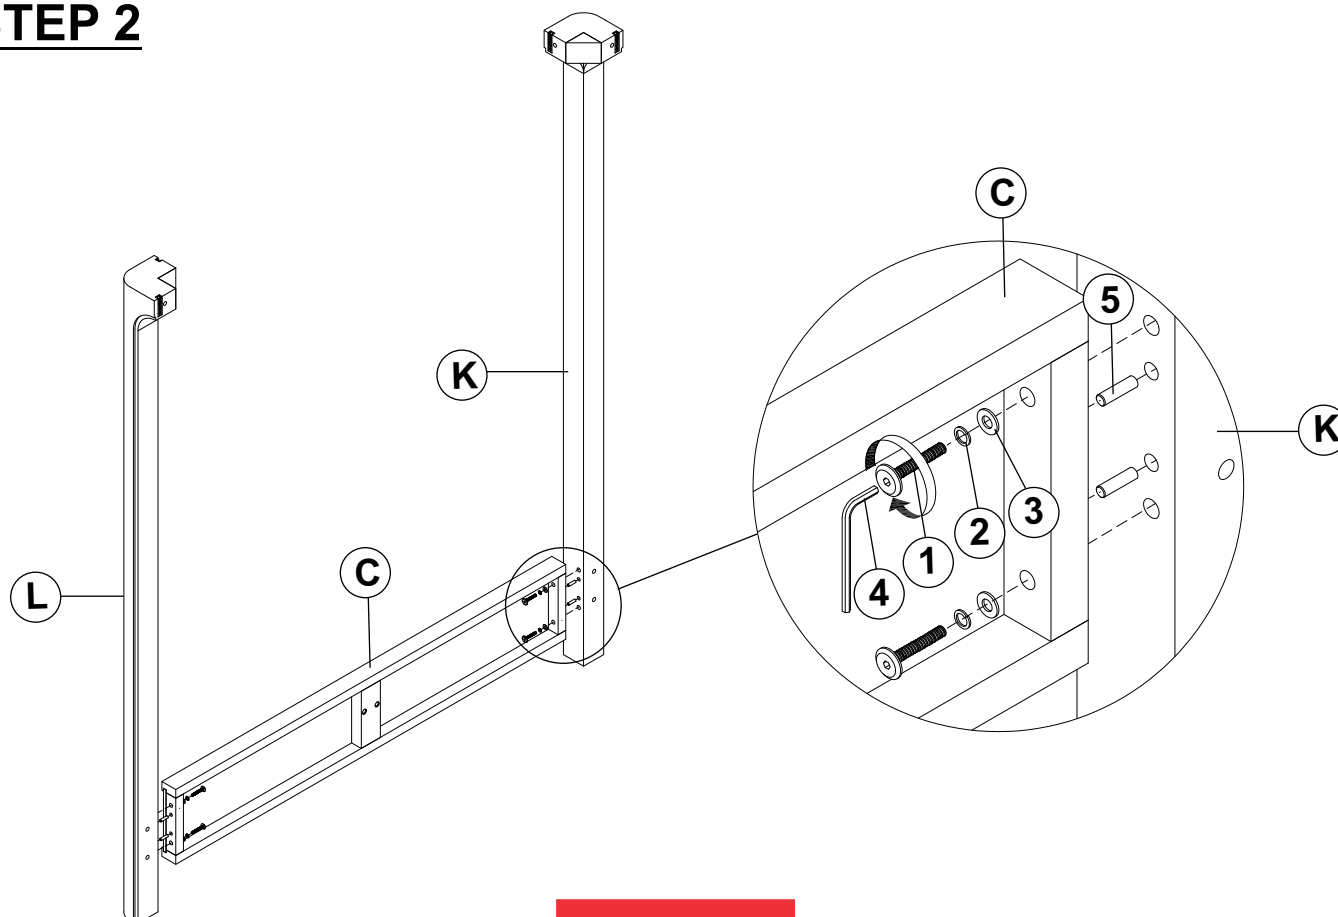


ITEM: **222520Q(B1-B3)**

## ASSEMBLY INSTRUCTIONS




### STEP 3


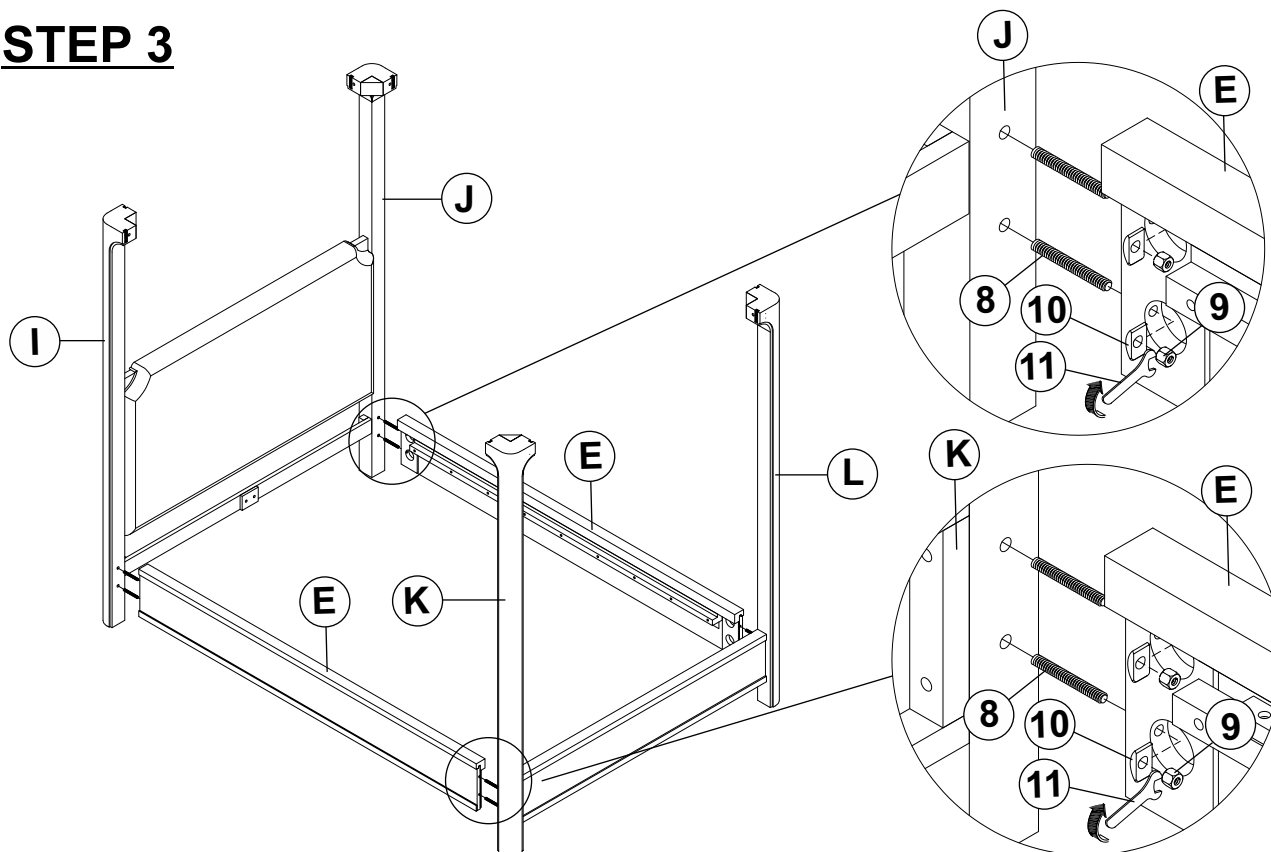


### STEP 4

4.1

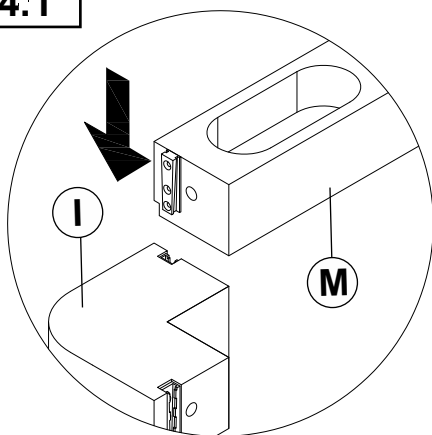


4.2

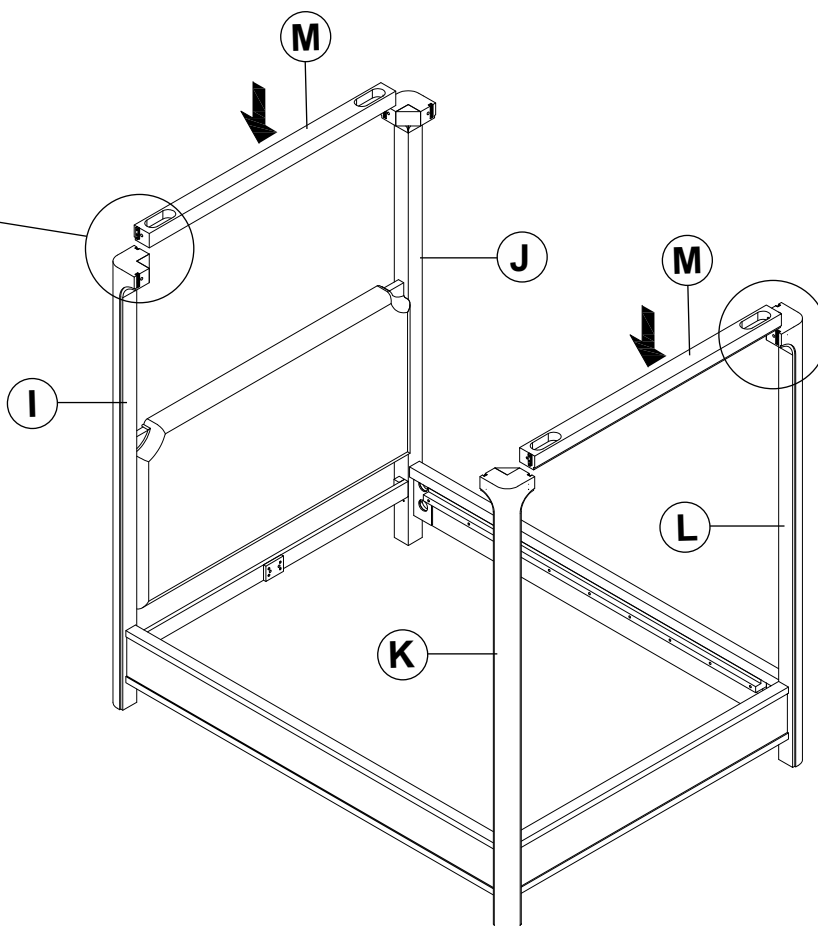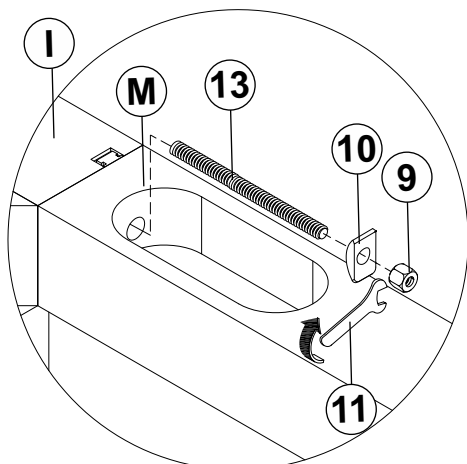


# ITEM: 222520Q(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 5

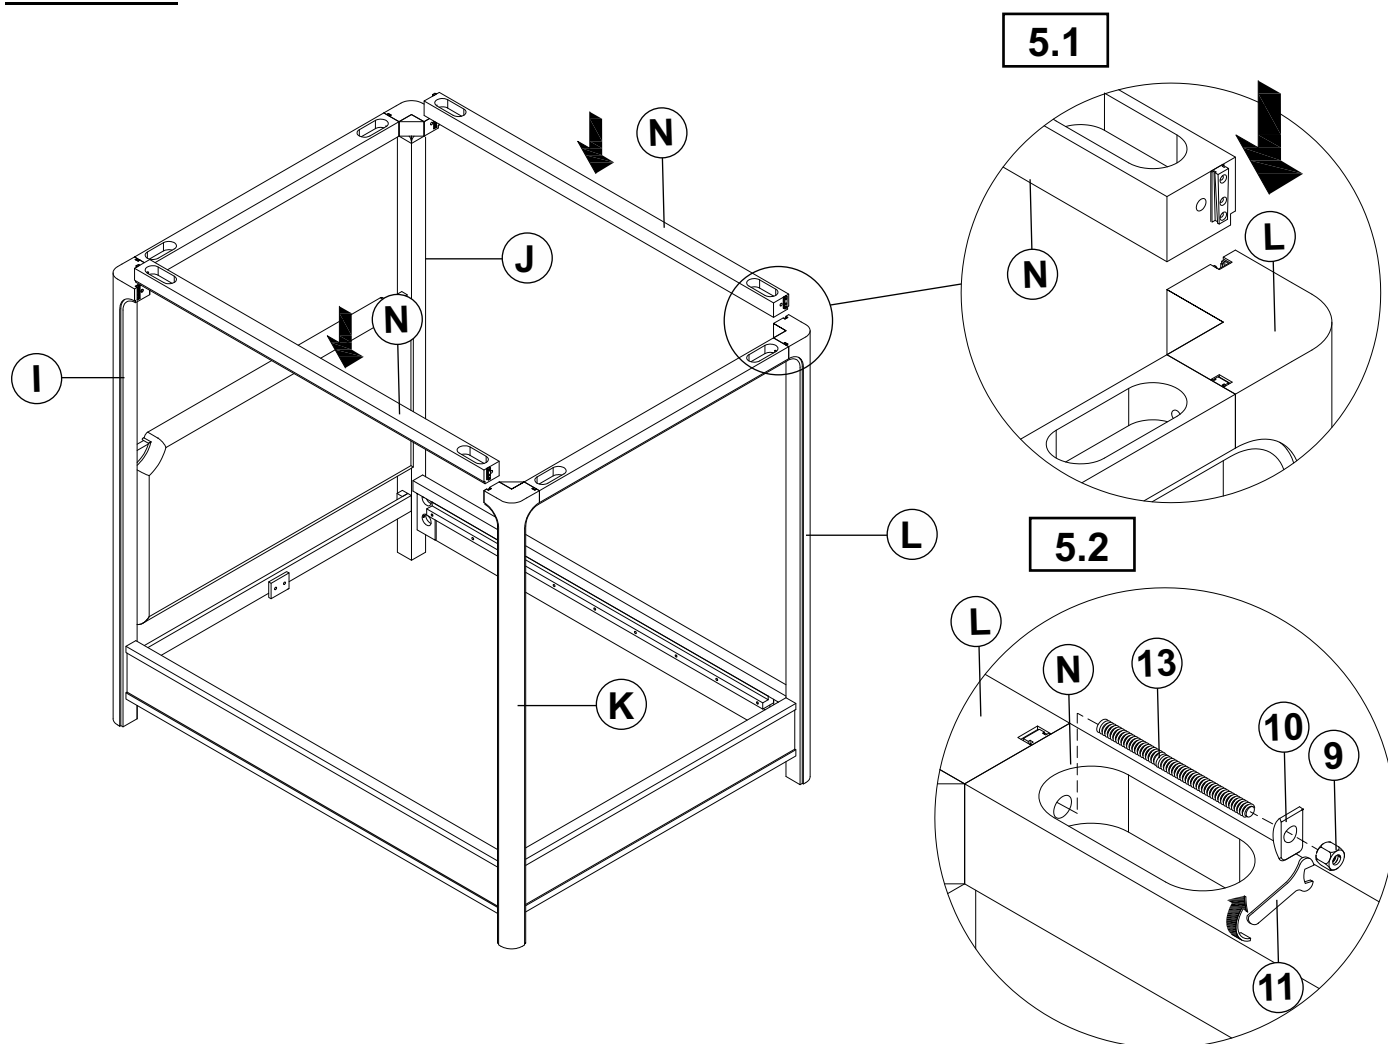

### STEP 6

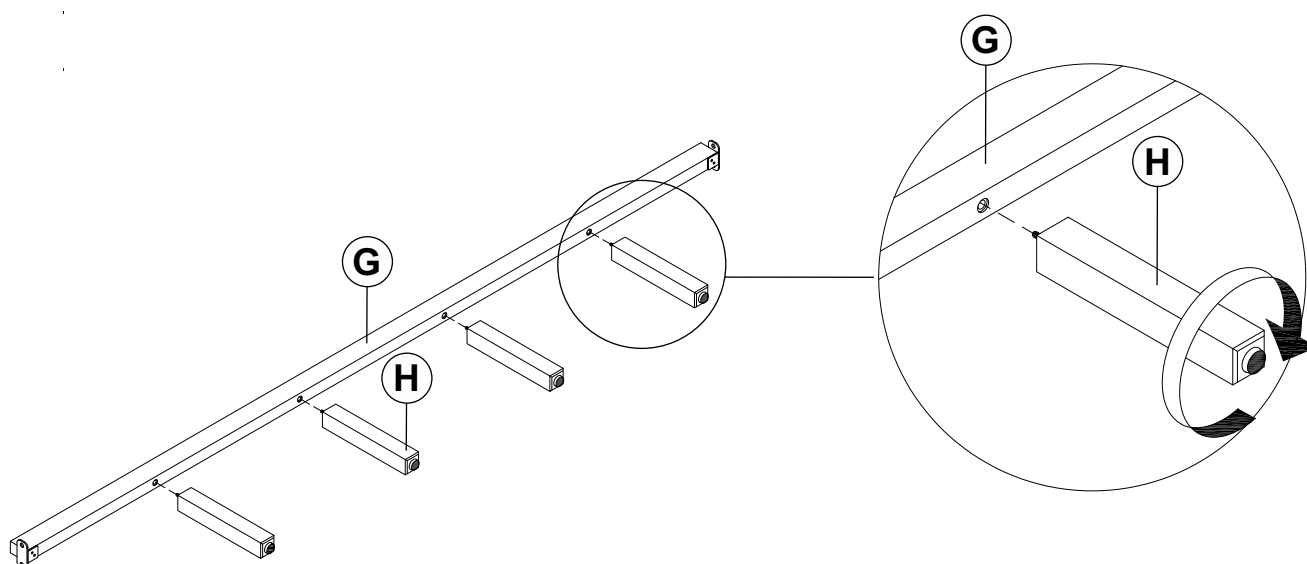


# ITEM: 222520Q(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 7

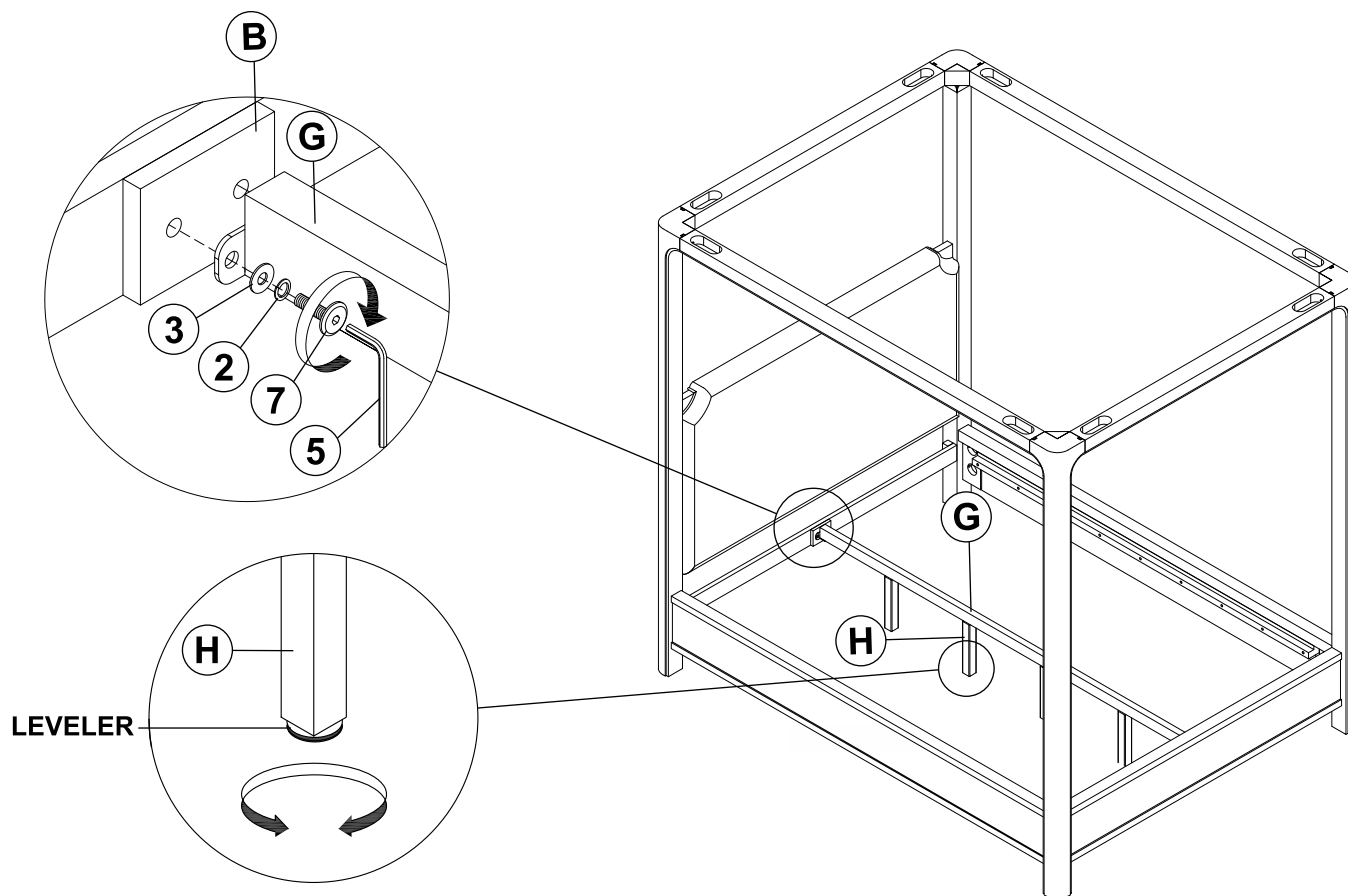

### STEP 8

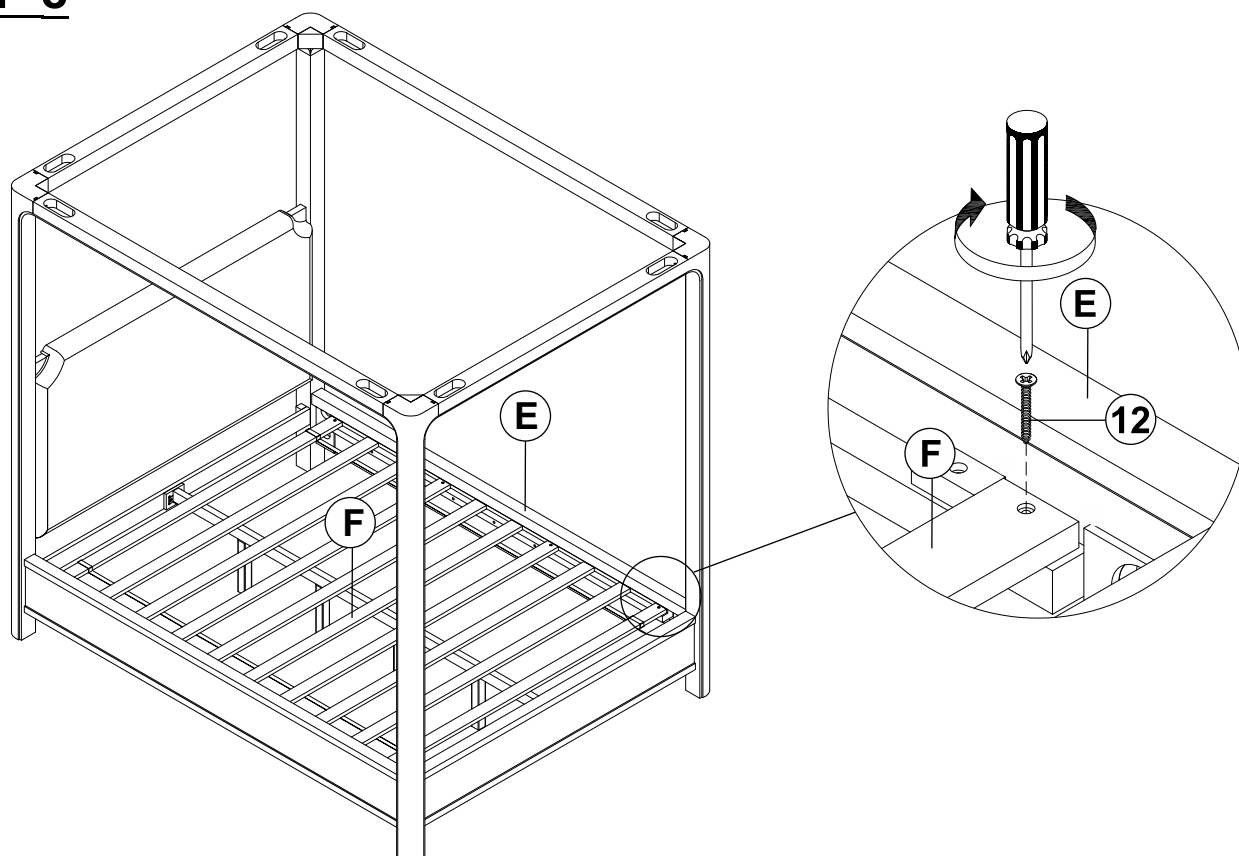


# ITEM: 222520Q(B1-B3)


## ASSEMBLY INSTRUCTIONS



### STEP 9

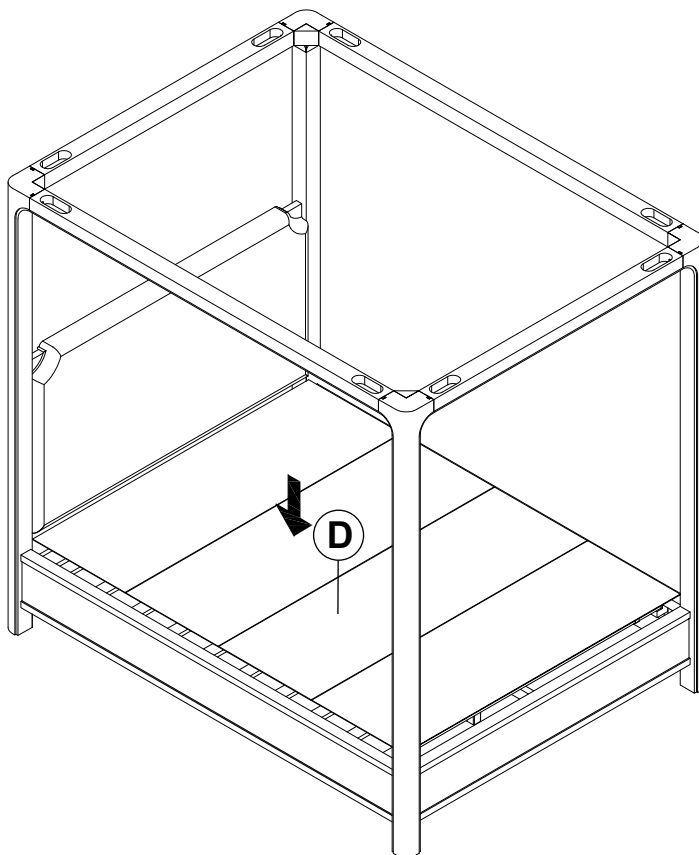


### STEP 10 COMPLETE

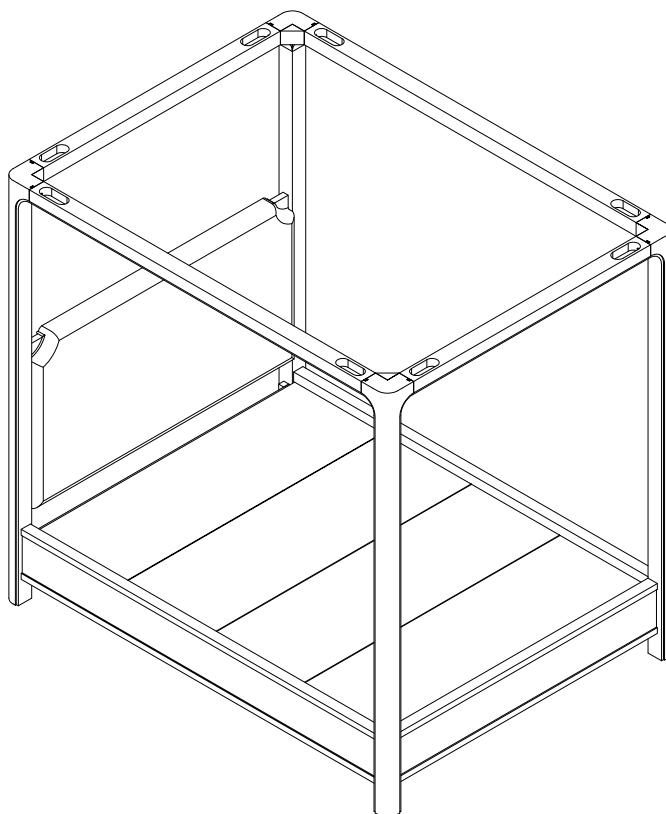

ITEM: **222520Q(B1-B3)**



Inner Size : 61.00"W x 82.00"D

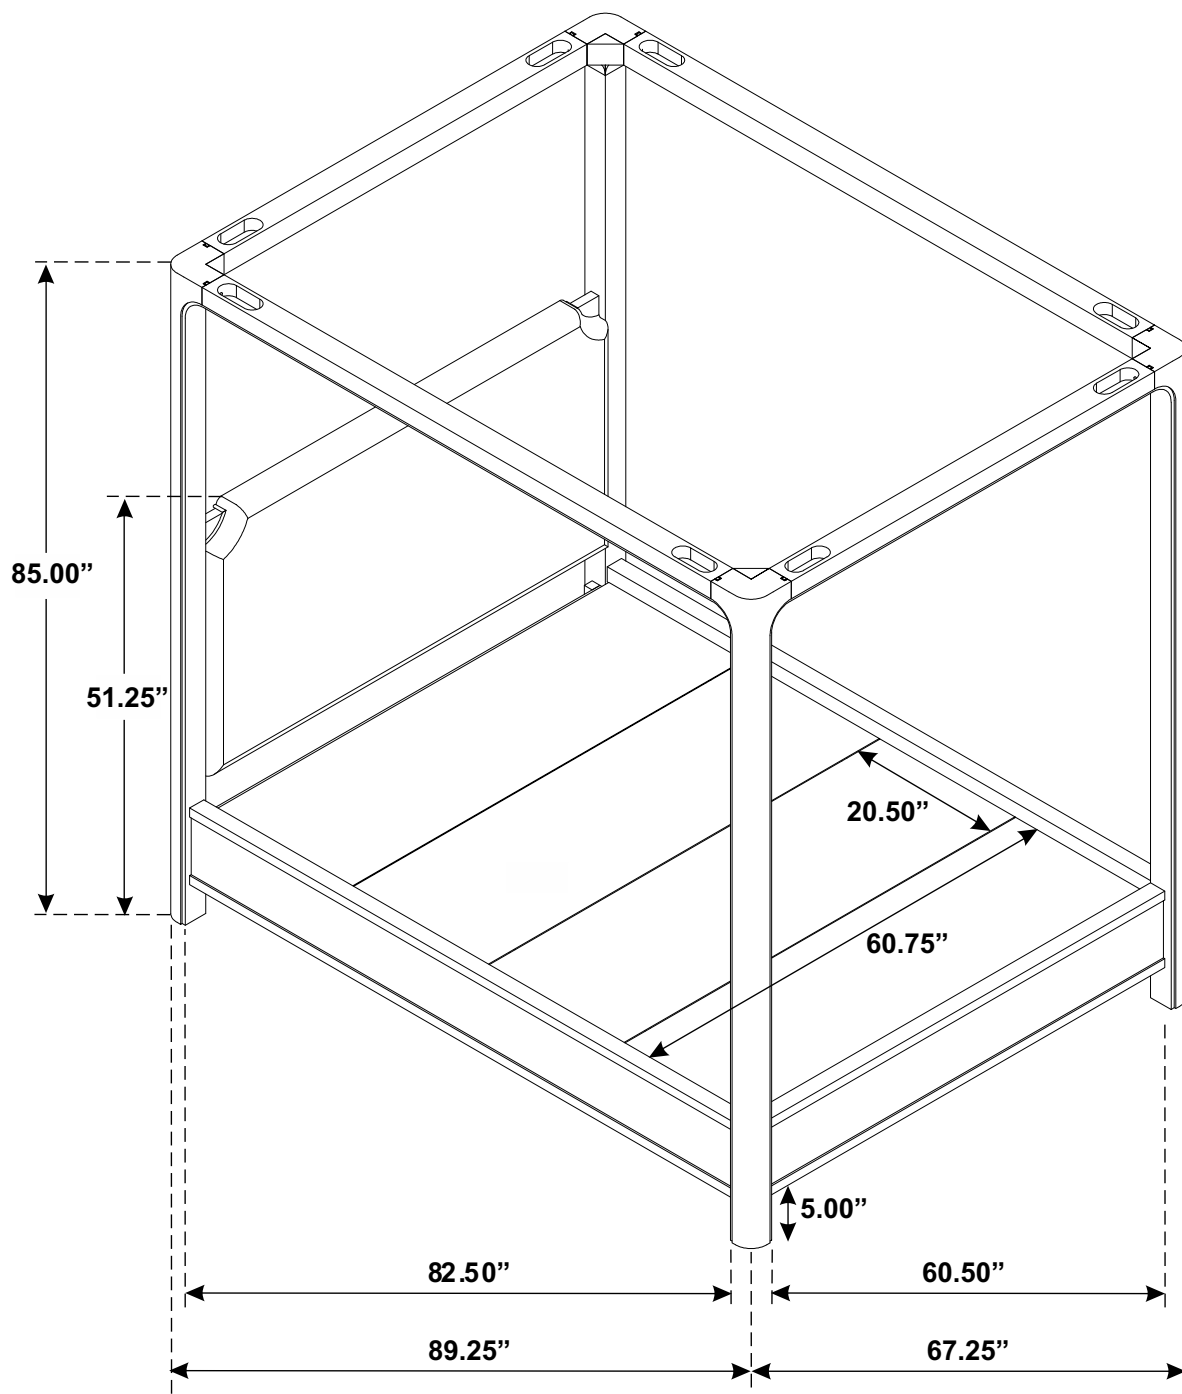

Note: Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**222522**  
**Nightstand**

ITEM: **222522**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PART IDENTIFICATION



A NIGHTSTAND

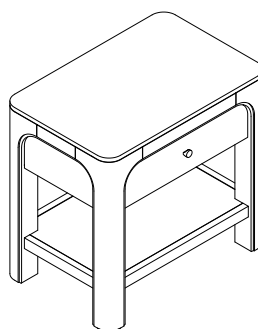

1 PC

## ASSEMBLY INSTRUCTIONS

### STEP 1 COMPLETE

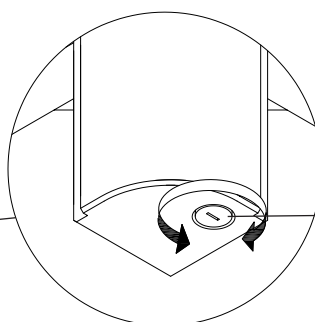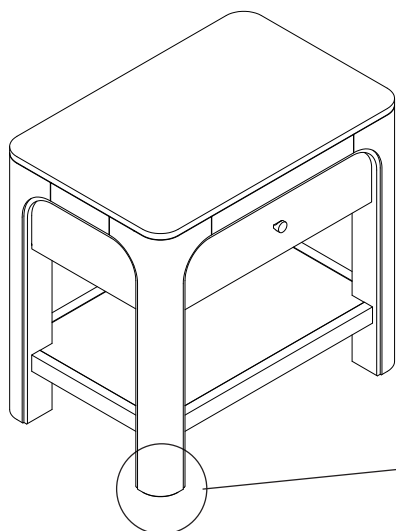


LEVELER



ITEM: **222522**



**Inner Size of Drawer : 19.25"W x 12.75"D x 2.75"H x 0.50"T**

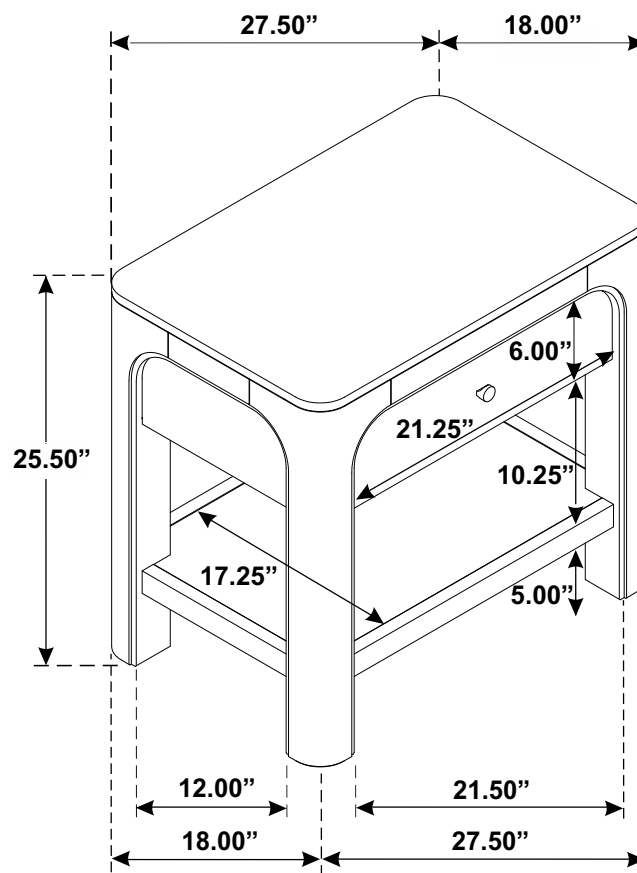

**Note: Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**222523**  
**Dresser**

ITEM: **222523**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PART IDENTIFICATION


A DRESSER

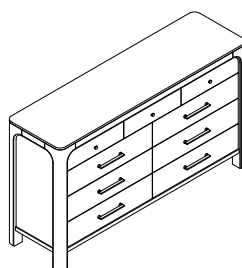

1 PC

## ASSEMBLY INSTRUCTIONS

### STEP 1 COMPLETE

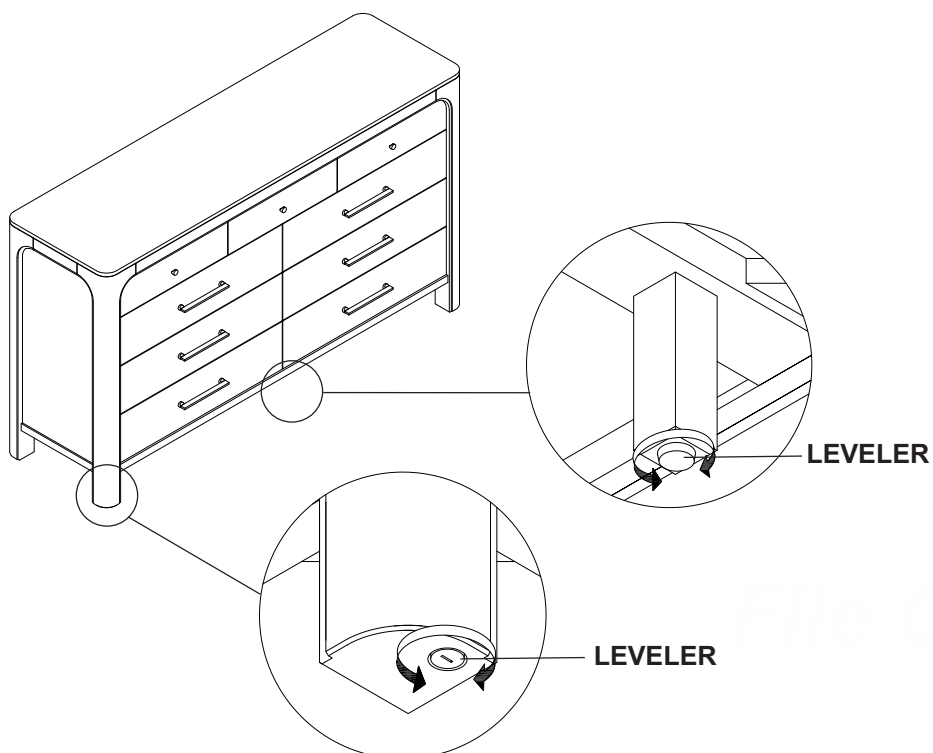

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

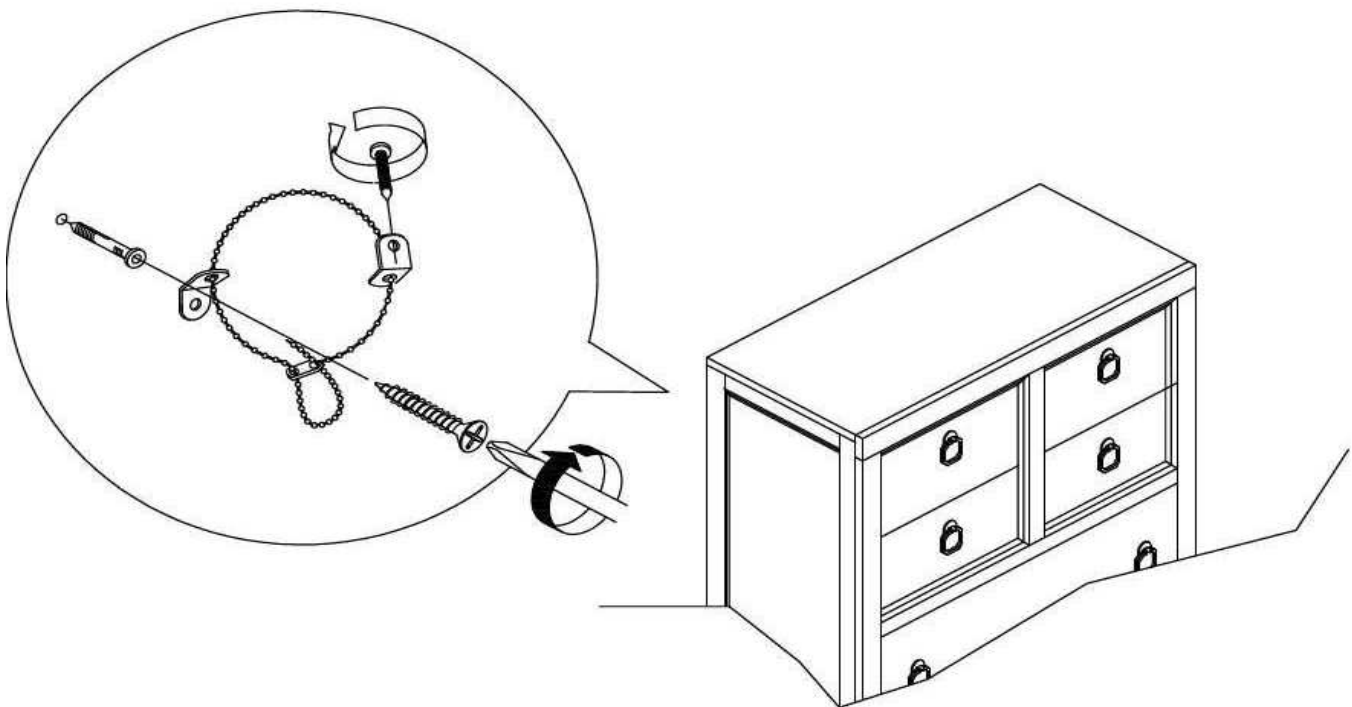

ITEM: **222523**



Inner Size of Drawer A : 18.50"W x 12.75"D x 3.25"H x 0.50"T  
Inner Size of Drawer B : 18.00"W x 12.75"D x 3.25"H x 0.50"T  
Inner Size of Drawer C : 29.25"W x 12.75"D x 5.50"H x 0.50"T

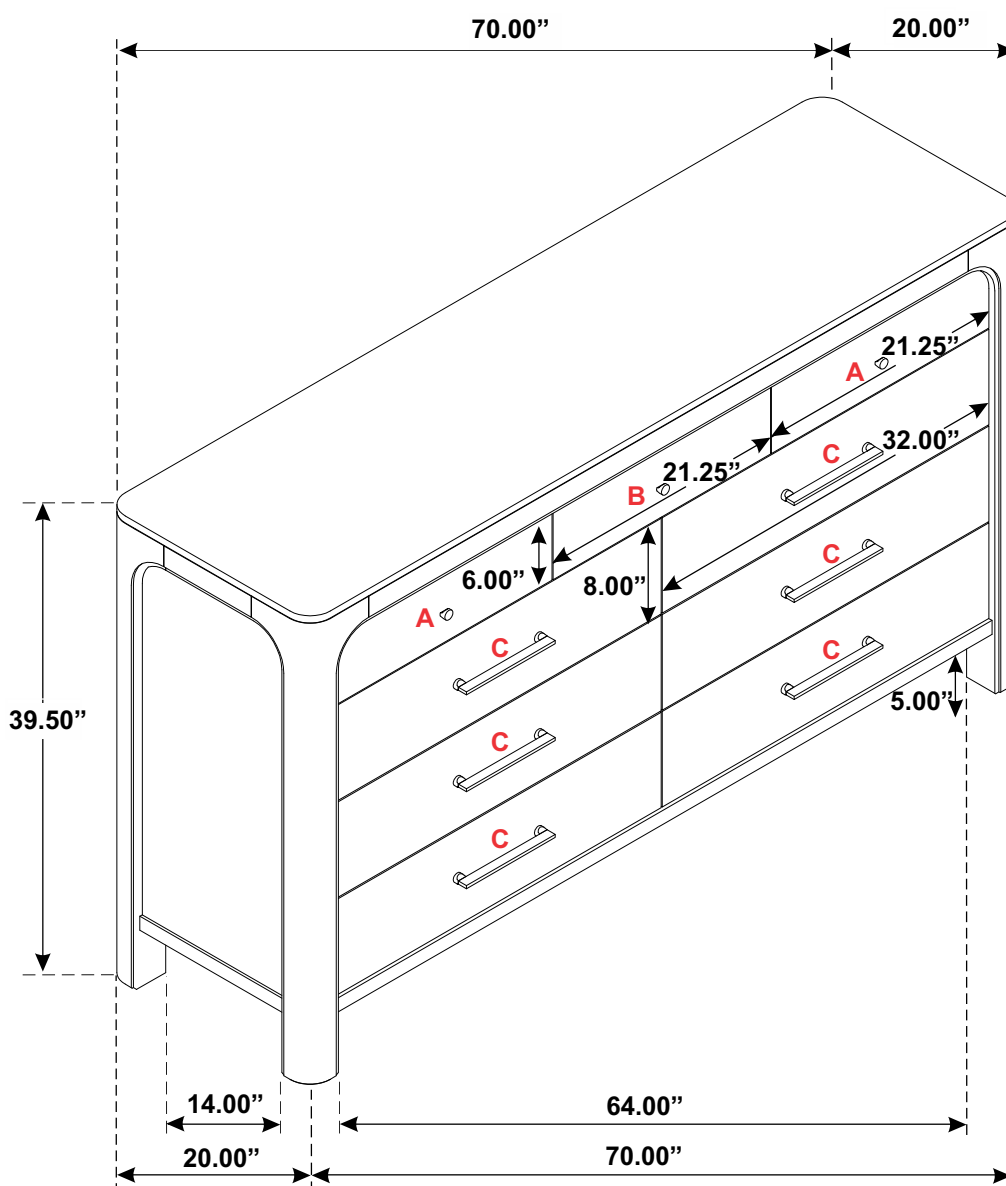

Note: Dimension tolerance  $\pm 5\%$

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**222524**  
**Mirror**

ITEM: **222524**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


## PART IDENTIFICATION

- A DRESSER**  
**\*FROM BOX ITEM 222523\***



**1PC**

- B MIRROR**



**1PC**


- C MIRROR SUPPORT**  
**( PACKED WITH MIRROR )**



**2PCS**

## HARDWARE IDENTIFICATION

- 1 BOLT**  
**(5/16" x 35mm - BLK)**



**8PCS**

- 2 LOCK WASHER**  
**(1.6 x 14mm - BLK)**



**8PCS**

- 3 FLAT WASHER**  
**(2 x 19mm - BLK)**



**8PCS**

- 4 ALLEN WRENCH**  
**(M5 x 65mm - BLK)**




**1PC**


ITEM: **222524**

## ASSEMBLY INSTRUCTIONS


### STEP 1

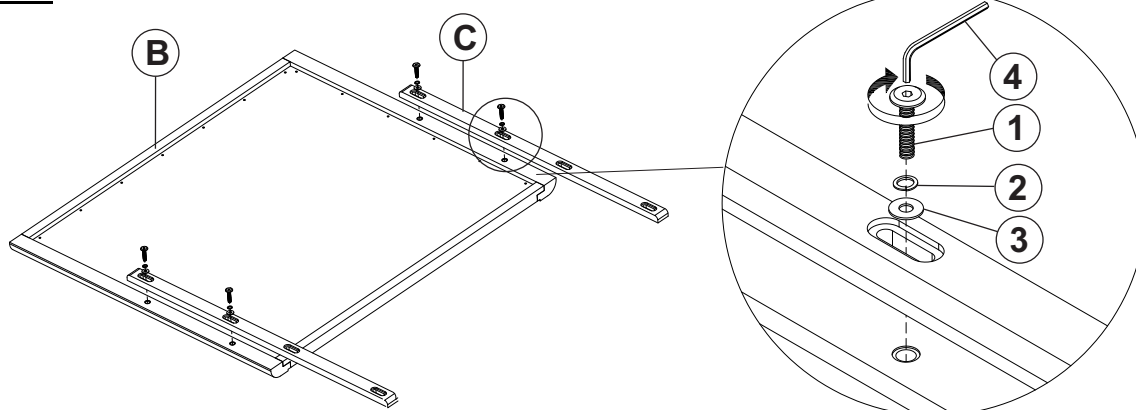


### STEP 2

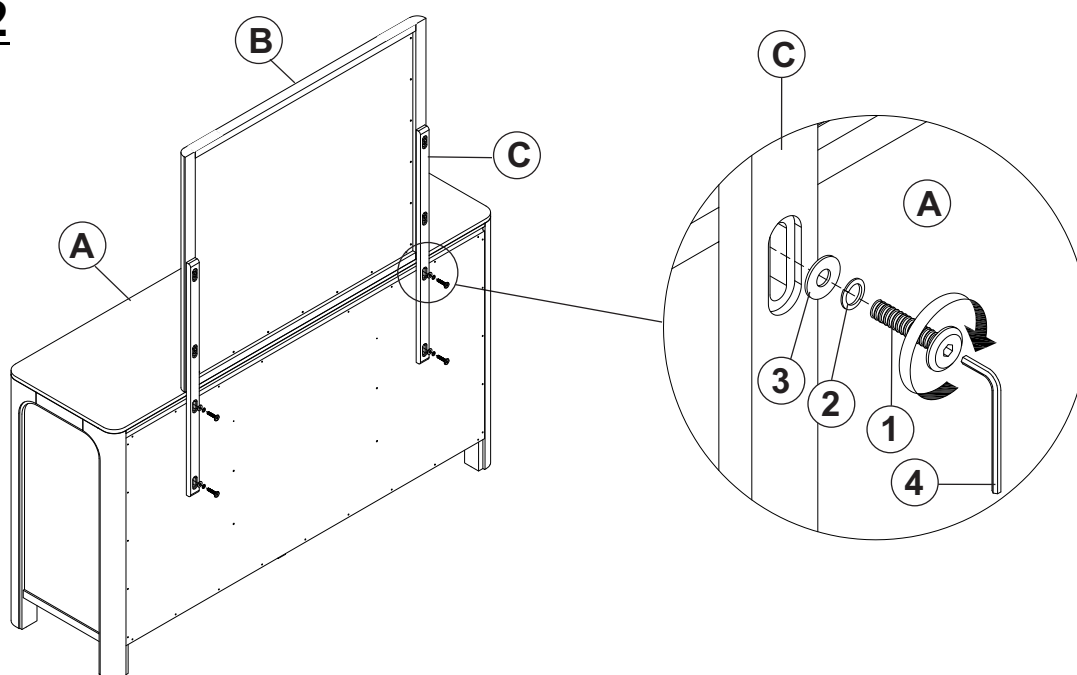

### STEP 3 **COMPLETE**

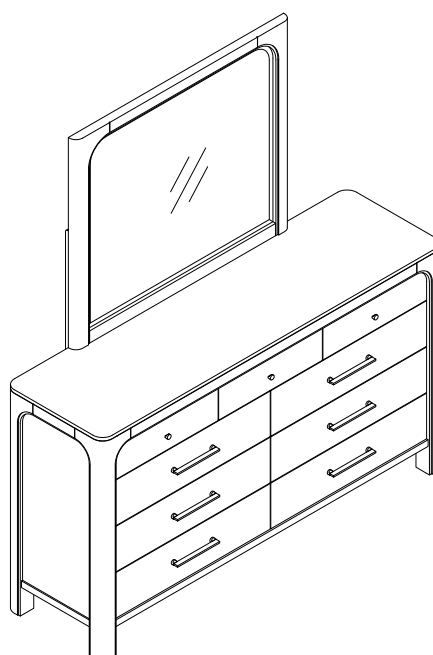

ITEM: **222524**

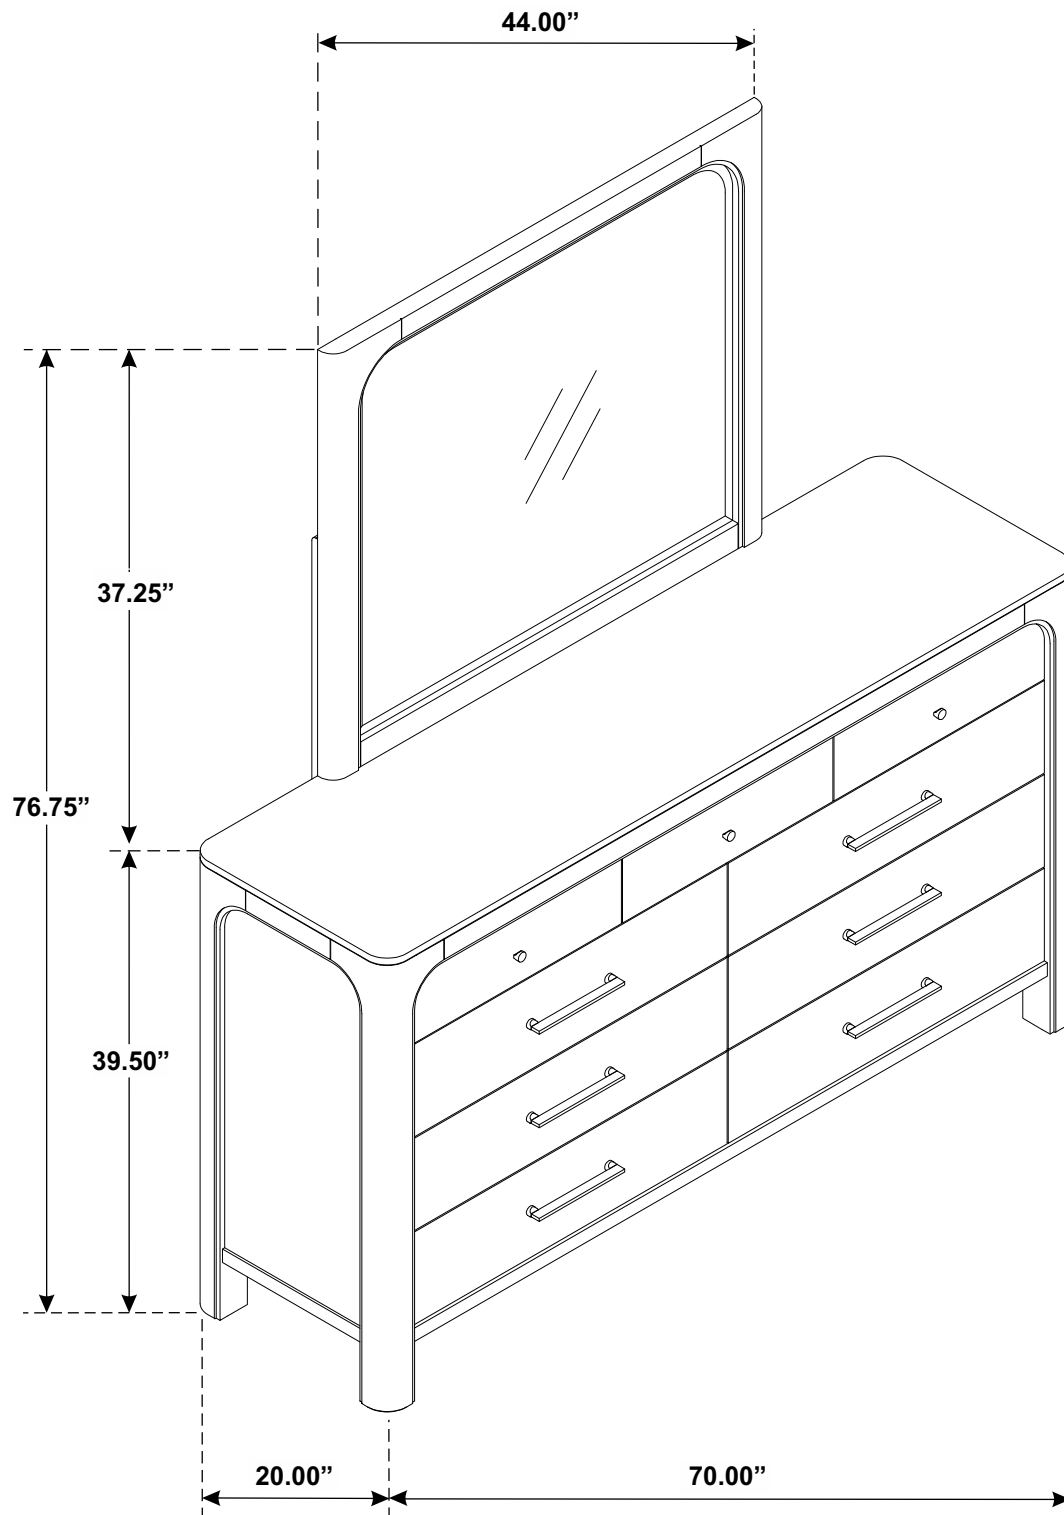

**Note: Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**222525**  
**Chest**

ITEM: **222525**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PART IDENTIFICATION



A CHEST

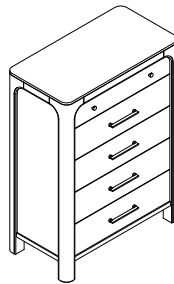

1 PC

## ASSEMBLY INSTRUCTIONS

### STEP 1 COMPLETE

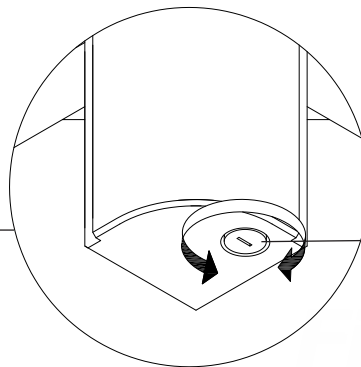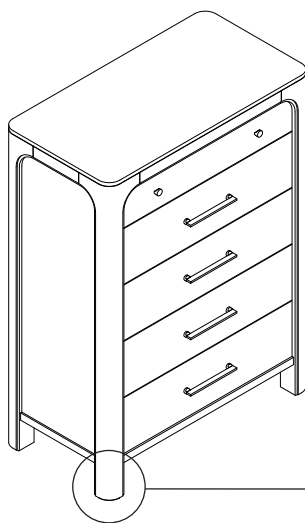

LEVELER



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

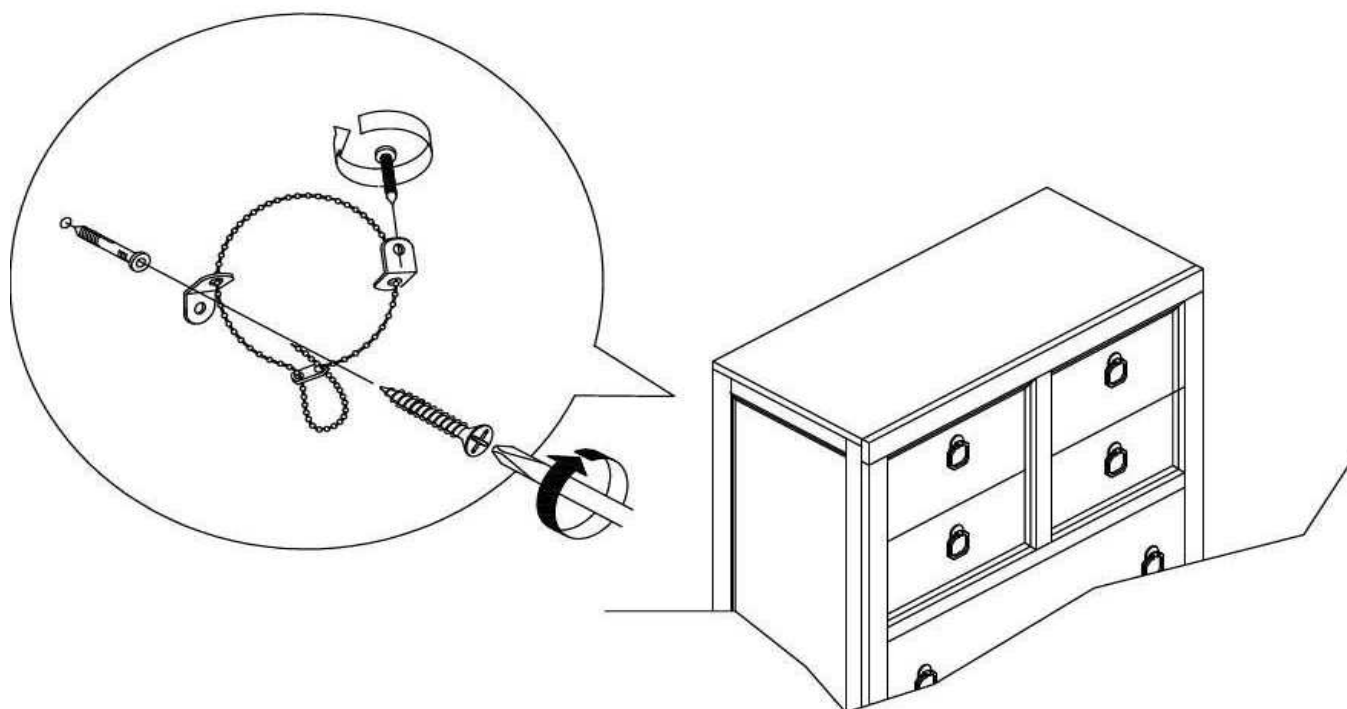

ITEM: **222525**



Inner Size of Drawer A : 29.75"W x 12.75"D x 3.25"H x 0.50"T  
 Inner Size of Drawer B : 29.75"W x 12.75"D x 3.25"H x 0.50"T  
 Inner Size of Drawer C : 29.75"W x 12.75"D x 6.50"H x 0.50"T  
 Inner Size of Hidden Drawer : 29.75"W x 11.50"D x 1.75"H x 0.50"T

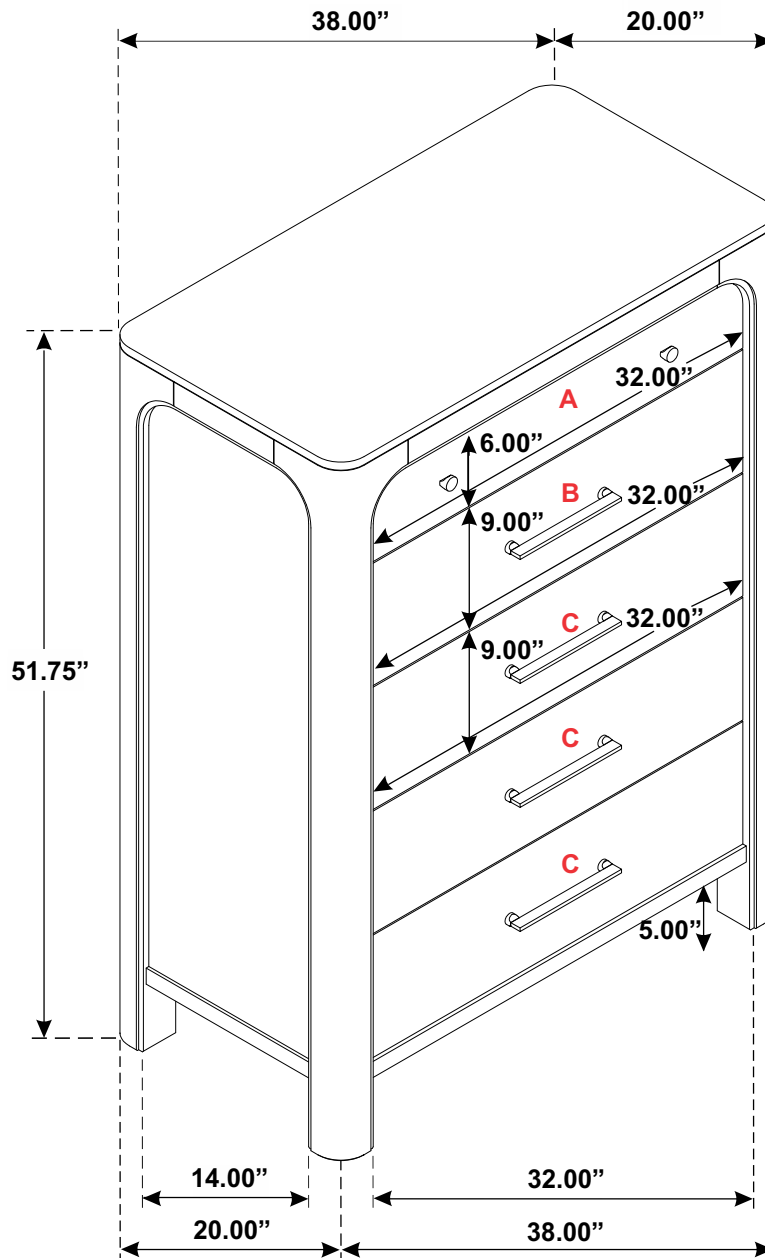

**Note: Dimension tolerance  $\pm 5\%$**