

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222520Q(B1-B3)
Queen Bed

ITEM: 222520Q(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL

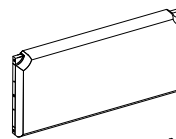


1PC

B HEADBOARD BOTTOM RAIL



1PC

C FOOTBOARD



1PC

D CONCEAL PANEL



4PCS


B2 (BOX 2)

E BED RAIL



2PCS

F ROLL SLAT (10 PCS)

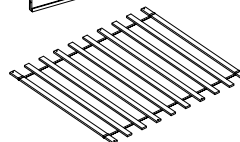

1SET

G CENTER RAIL



1PC


H CENTER RAIL SUPPORT
WITH LEVELER



4PCS

B3 (BOX 3)

I LEFT HEADBOARD POST
WITH LABEL "I"



1PC

J RIGHT HEADBOARD POST
WITH LABEL "J"



1PC

K LEFT FOOTBOARD POST
WITH LABEL "K"



1PC

L RIGHT FOOTBOARD POST
WITH LABEL "L"



1PC

M CANOPY SHORT RAIL
WITH LABEL "M"



2PCS

N CANOPY LONG RAIL
WITH LABEL "N"



2PCS

ITEM: 222520Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









WARNING!









1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION



Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222520Q(B1)

1	LONG BOLT (5/16" x 50mm - BLK)		12PCS
2	LOCK WASHER (1.6 x 14mm - BLK)		12PCS
3	FLAT WASHER (2 x 19mm - BLK)		8PCS
4	CURVE WASHER (2 x 27mm - BLK)		4PCS
5	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
6	WOOD DOWEL (10 x 40mm - BRW)		12PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222520Q(B2)

2	LOCK WASHER (1.6 x 14mm - BLK)		4PCS
3	FLAT WASHER (2 x 19mm - BLK)		4PCS
7	SHORT BOLT (5/16" x 19mm - BLK)		4PCS
8	SHORT THREADED BOLT (5/16" x 80mm - WHT)		8PCS
9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
11	WRENCH (13mm - WHT)		1PC
12	FLAT HEAD SCREW (8 x 32mm - BLK)		8PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 222520Q(B3)

9	HEX NUT (5/16" x 13mm - WHT)		8PCS
10	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
13	LONG THREADED BOLT (5/16" x 150mm - WHT)		8PCS

NOTE :


Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 222520Q(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 1

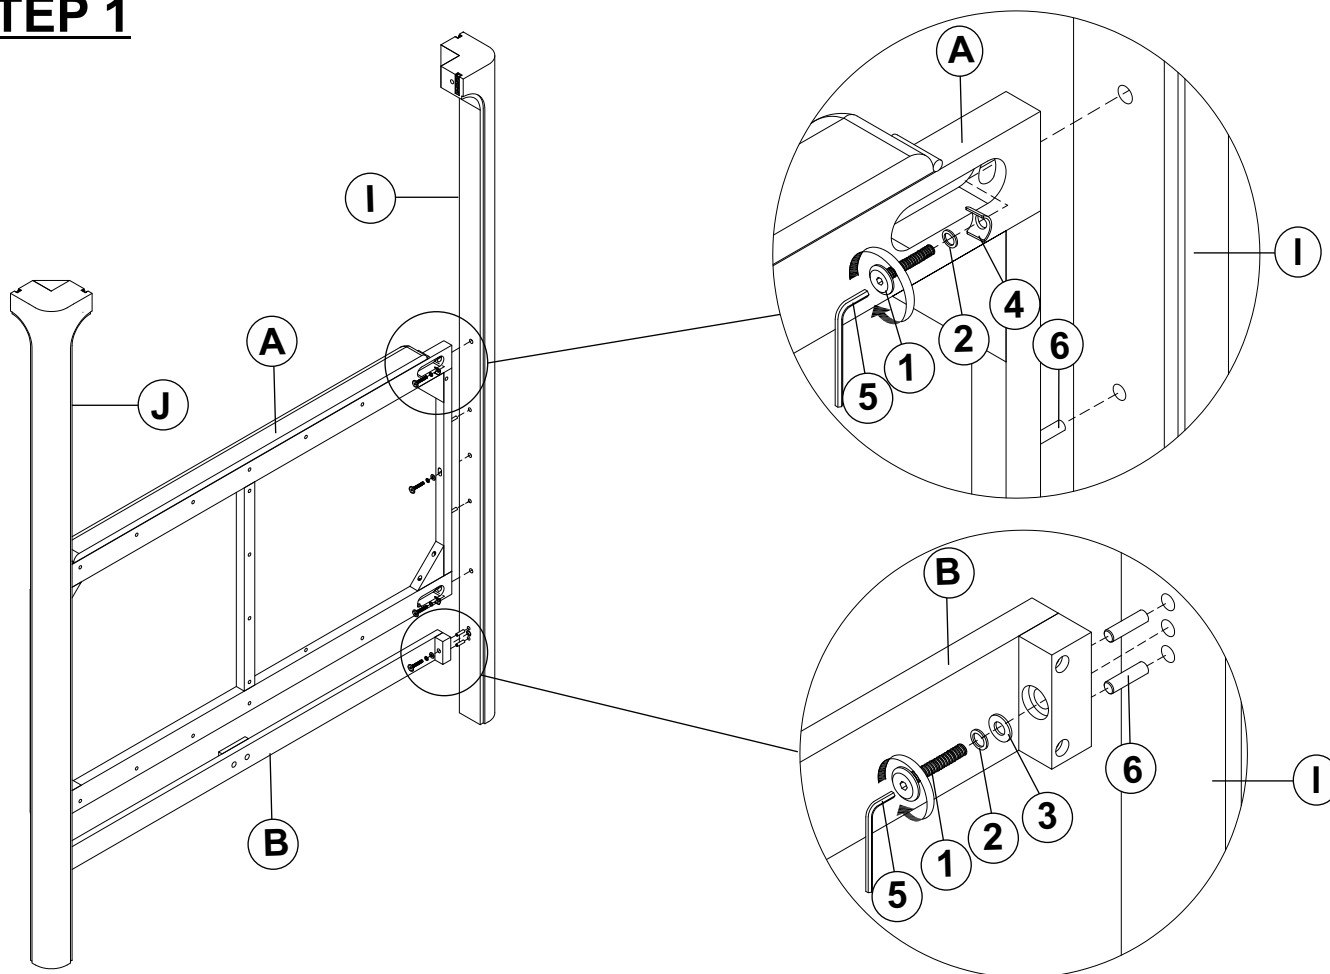

STEP 2

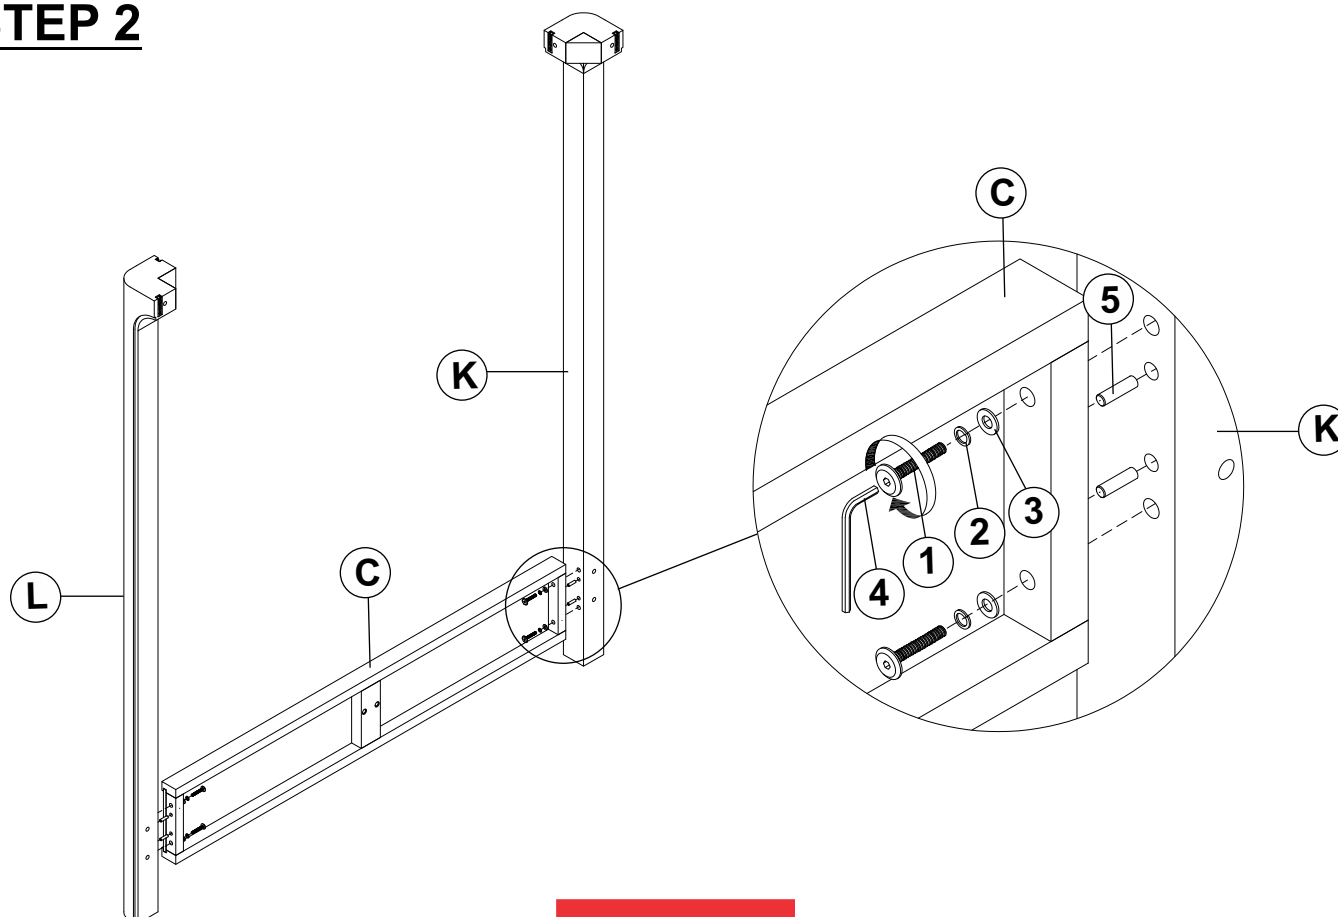


ITEM: **222520Q(B1-B3)**

ASSEMBLY INSTRUCTIONS




STEP 3


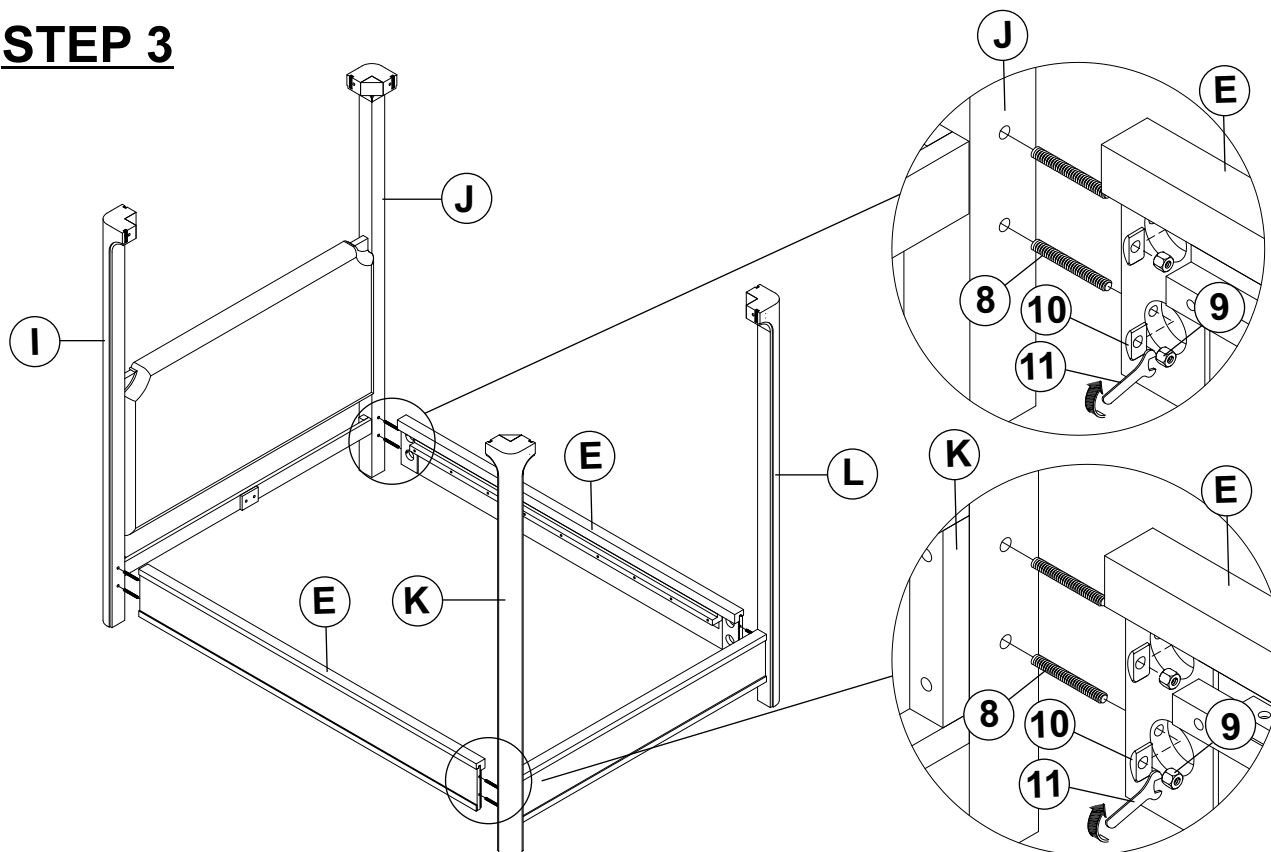


STEP 4

4.1

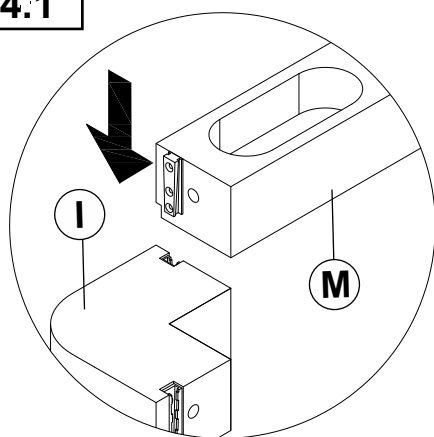


4.2

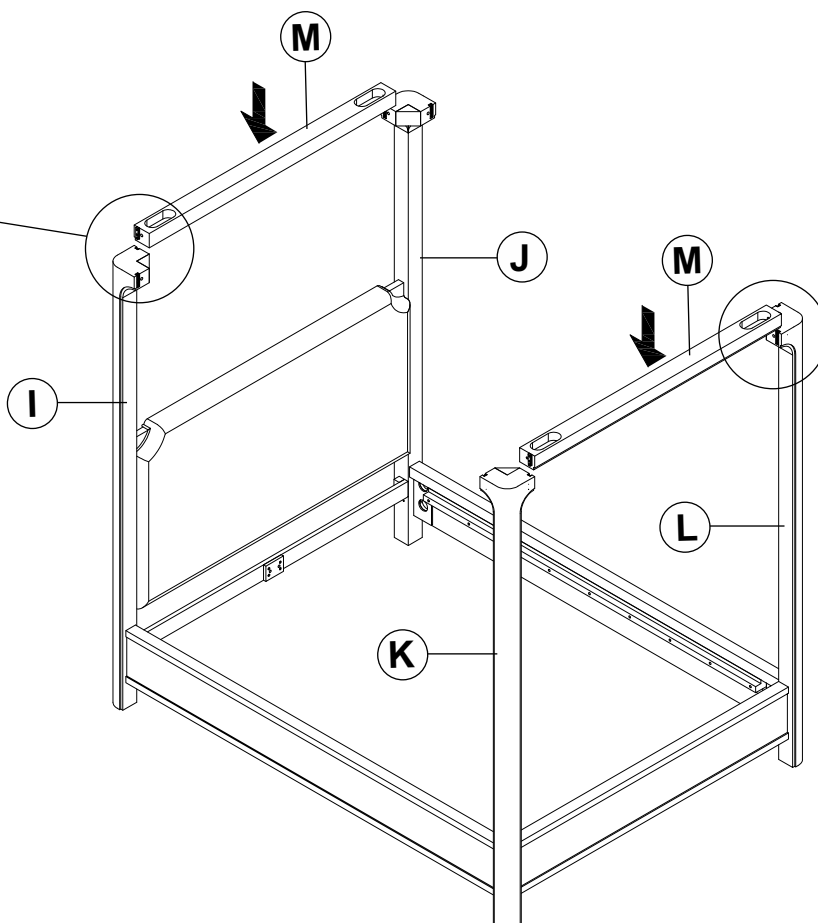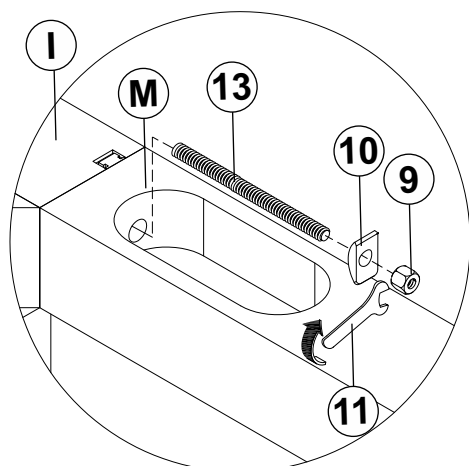


ITEM: 222520Q(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 5

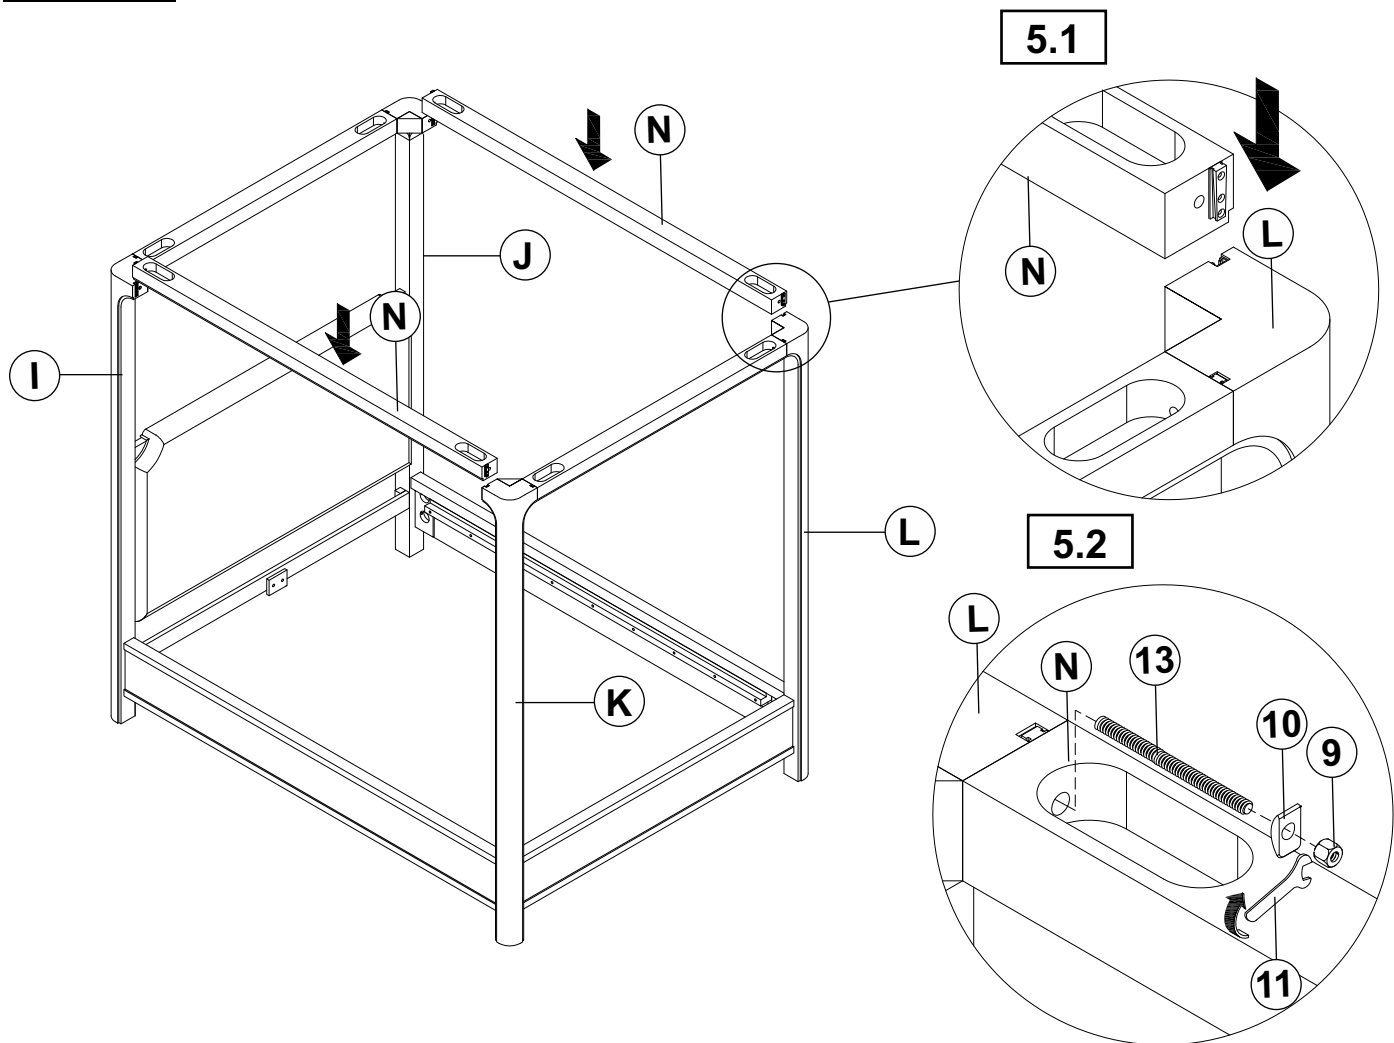

STEP 6

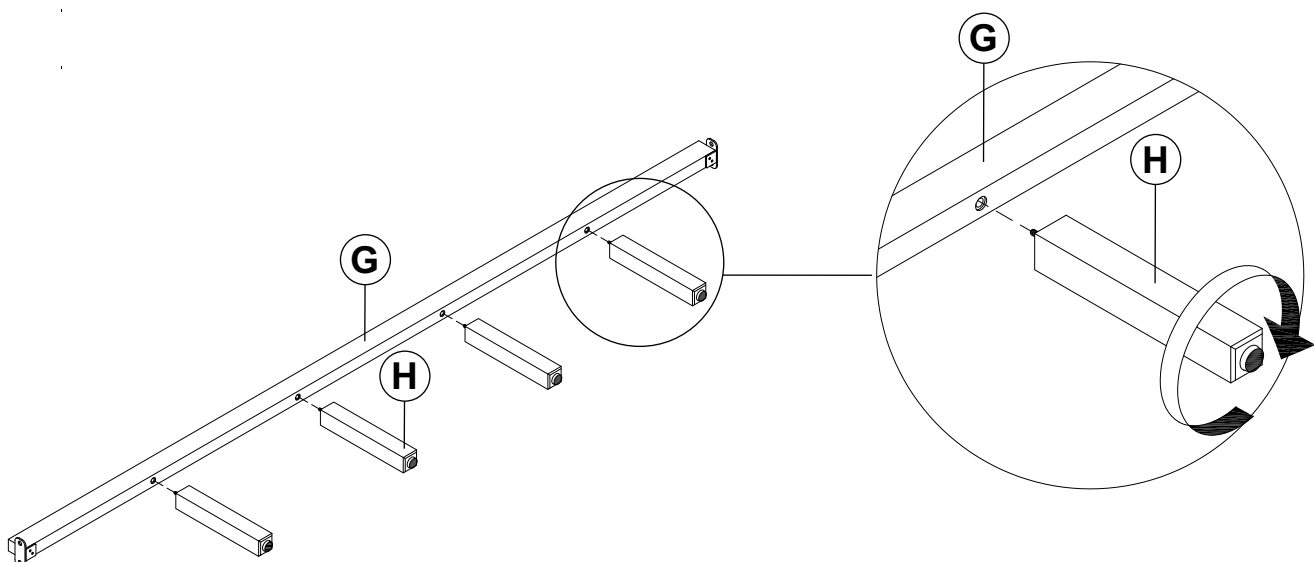


ITEM: 222520Q(B1-B3)


ASSEMBLY INSTRUCTIONS



STEP 7

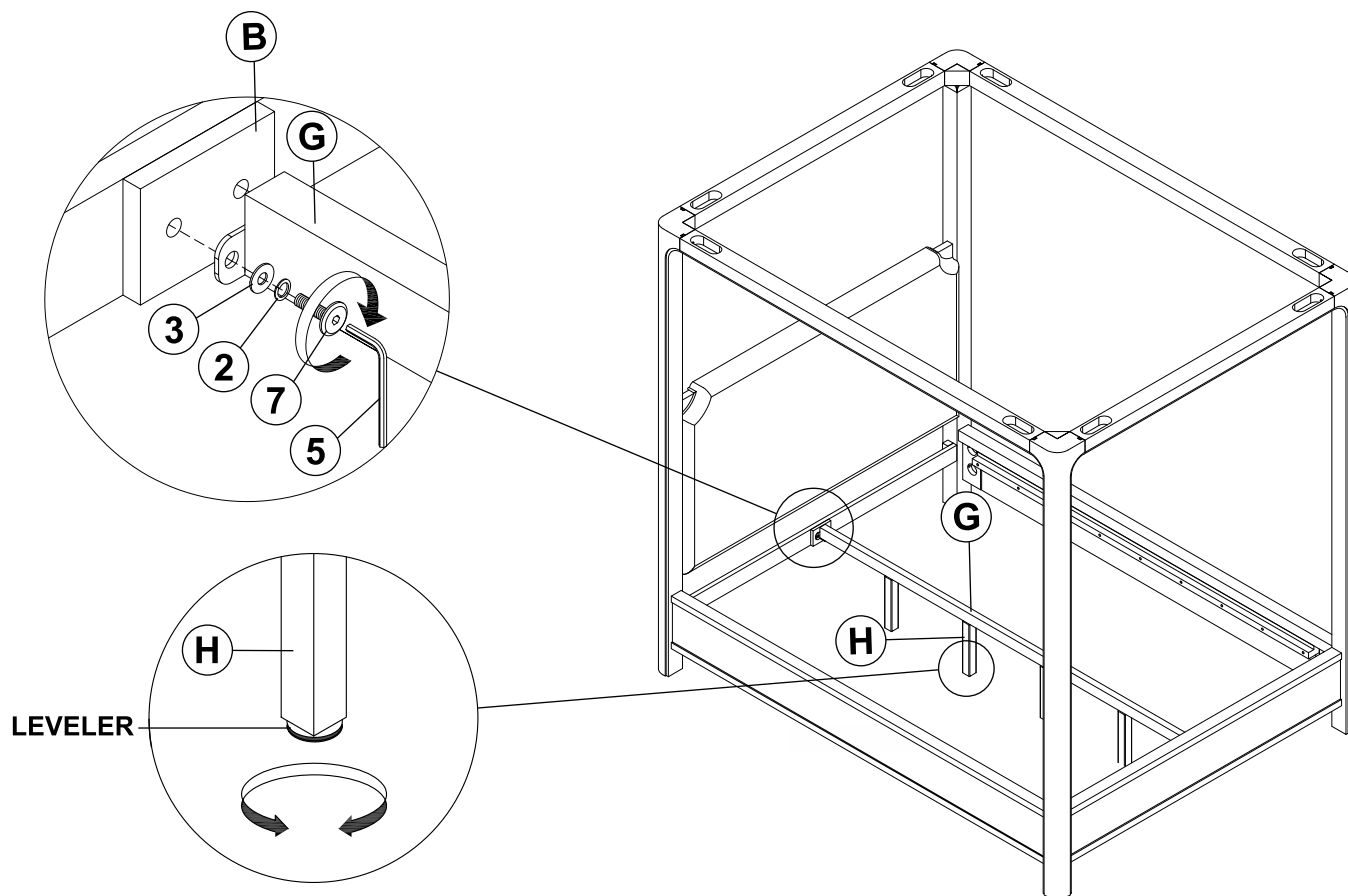

STEP 8

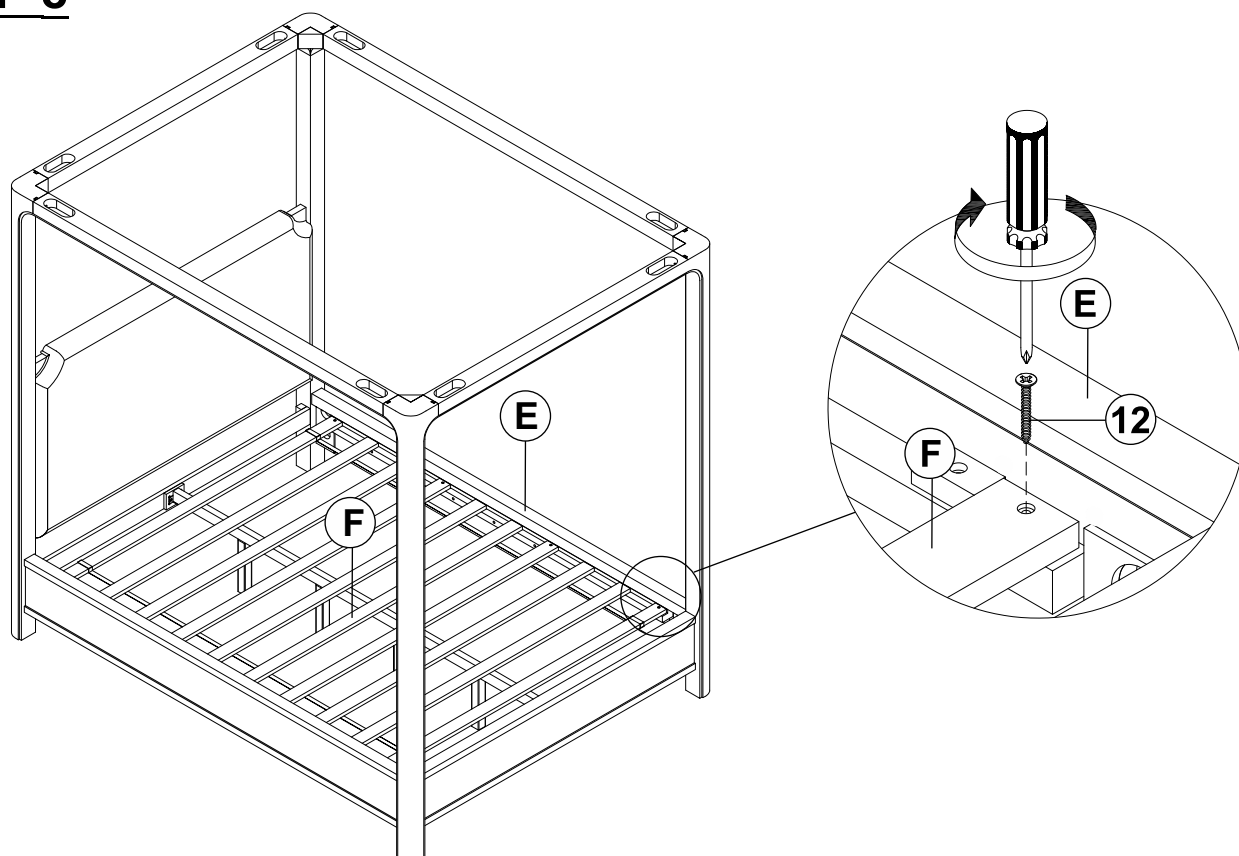


ITEM: **222520Q(B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 9

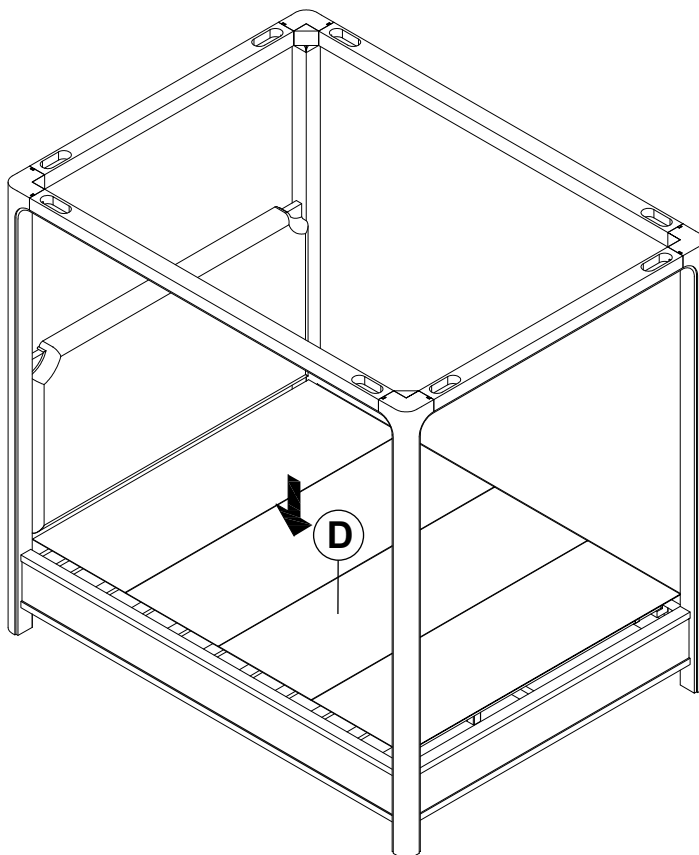


STEP 10 COMPLETE

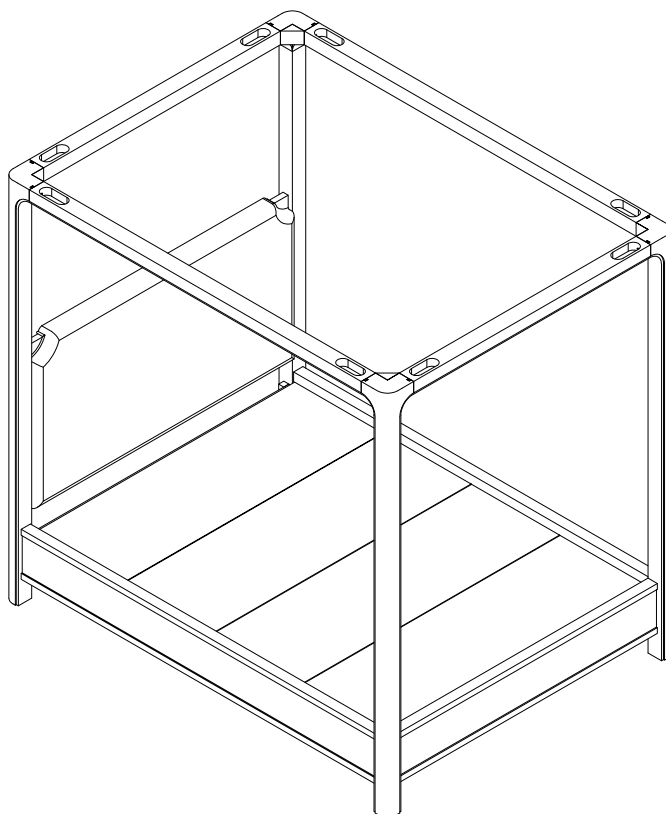

ITEM: **222520Q(B1-B3)**



Inner Size : 61.00"W x 82.00"D

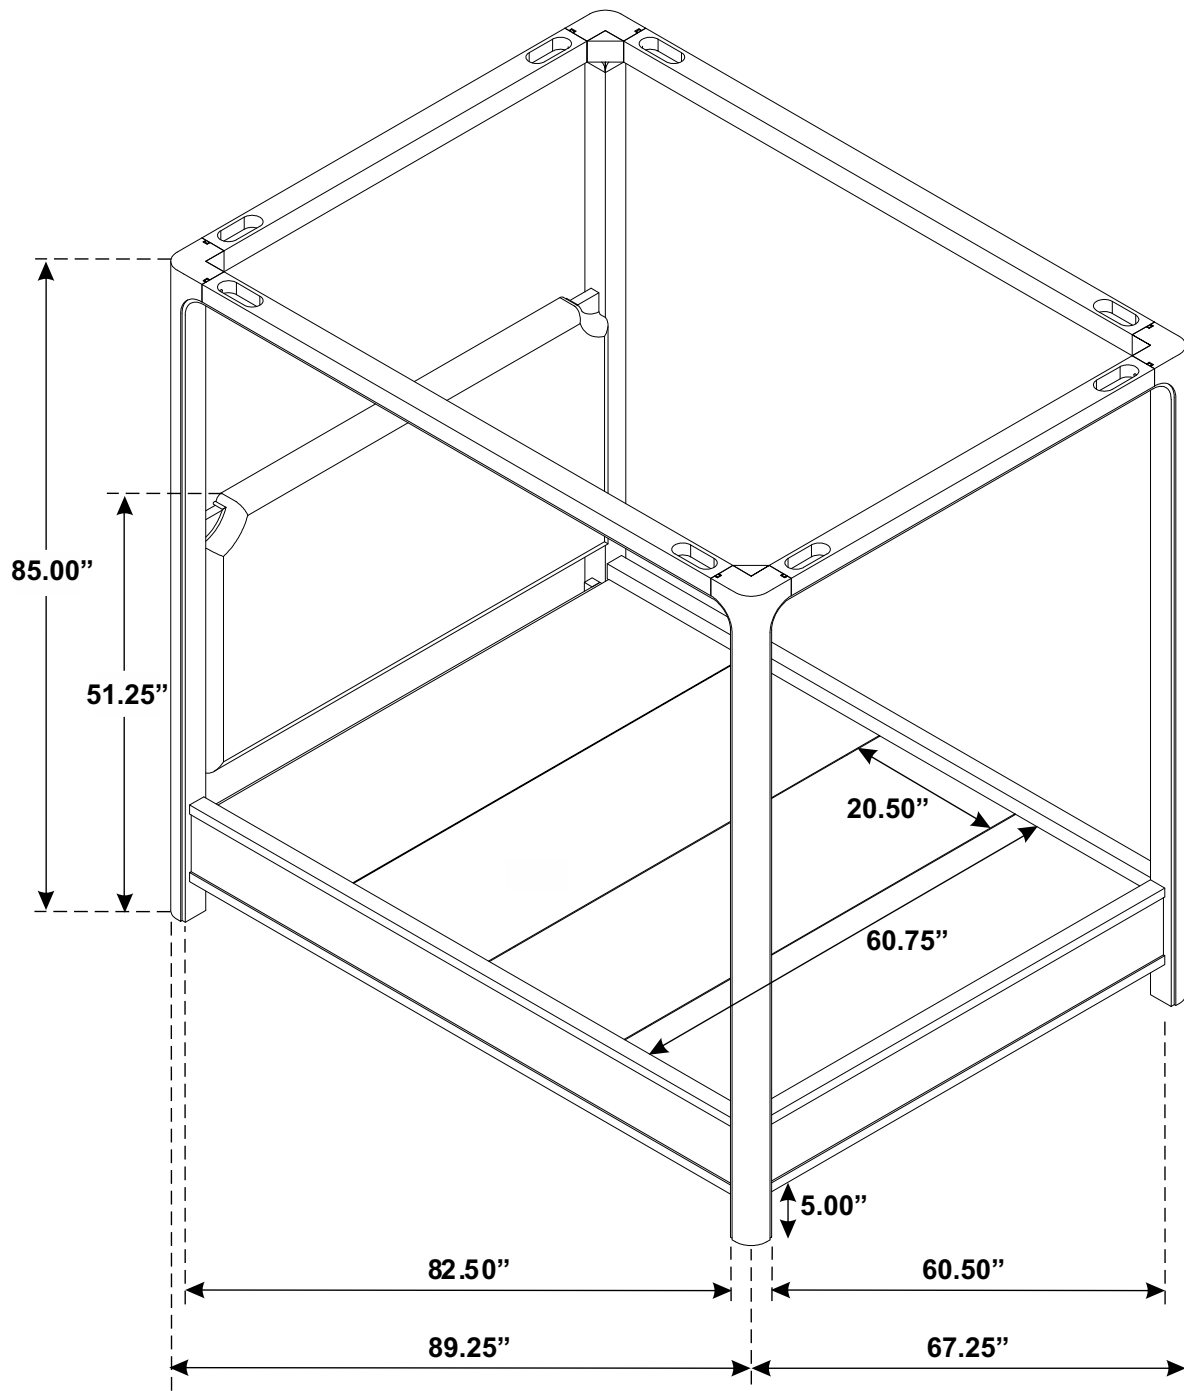

Note: Dimension tolerance $\pm 5\%$