


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

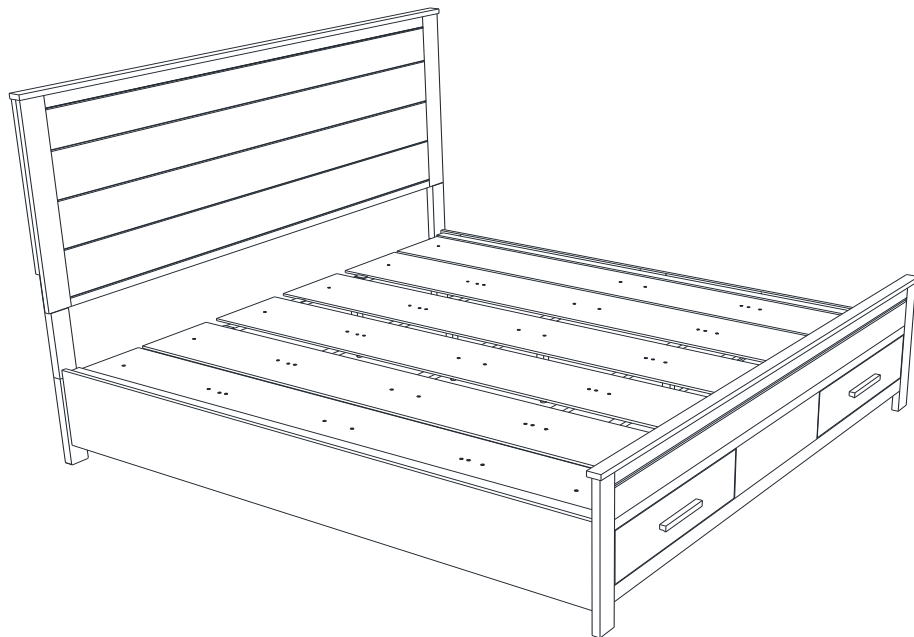

Fine Furniture for every stage of life

222631KW (B1-B3)
California King Storage Bed

ITEM: 222631KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL



1PC


B FOOTBOARD
FRAME

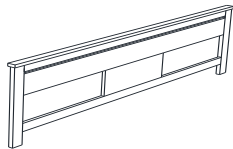

1PC


B2 (BOX 2)

E BED RAIL




2PCS

F BED SLAT




3PCS

G BED SLAT WITH
MARKING

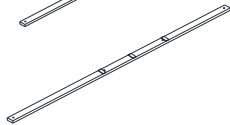


2PCS

H CONCEAL
PANEL




4PCS

I CONCEAL
PANEL WITH
SIDE CROWN



2PCS

C RIGHT
HEADBOARD
LEG




1PC

D LEFT
HEADBOARD
LEG



1PC

J DRAWER
BOTTOM
TRESTLE BAR



1PC

K DRAWER
SUPPORT RAIL



2PCS

L BED SLAT
SUPPORT WITH
LEVELER



10PCS


M DRAWER
SUPPORT LEG
WITH LEVELER



1PC


B3 (BOX 3)

N DRAWER BOX




2PCS

HB 222631KW(B1)
FROM BOX 1
HEADBOARD
COMPLETE

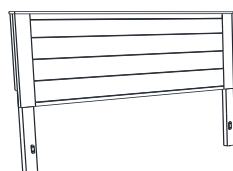

1PC

B 222631KW(B1)
FROM BOX 1
FOOTBOARD
FRAME

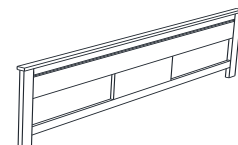

1PC

ITEM: 222631KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222631KW (B1)

1	BOLT (M6 x 30mm - BLK)		6PCS	3	FLAT WASHER (1/4" ID x 13mm - BLK)		6PCS
2	LOCK WASHER (1/4" - BLK)		6PCS	4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222631KW (B2)


5	FLAT HEAD SCREW (M4 x 32mm - RBW)		14PCS	9	LOCK WASHER (1/4" - BLK)		2PCS
6	PAN HEAD SCREW (M3.5 x 20mm - BLK)		30PCS	10	FLAT WASHER (1/4" ID x 13mm - BLK)		2PCS
7	SHORT BOLT (M6 x 35mm - BLK)		2PCS	11	SMALL ALLEN WRENCH (M4 x 60mm - BLK)		1PC
8	LONG BOLT (M6 x 50mm - BLK)		11PCS	12	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

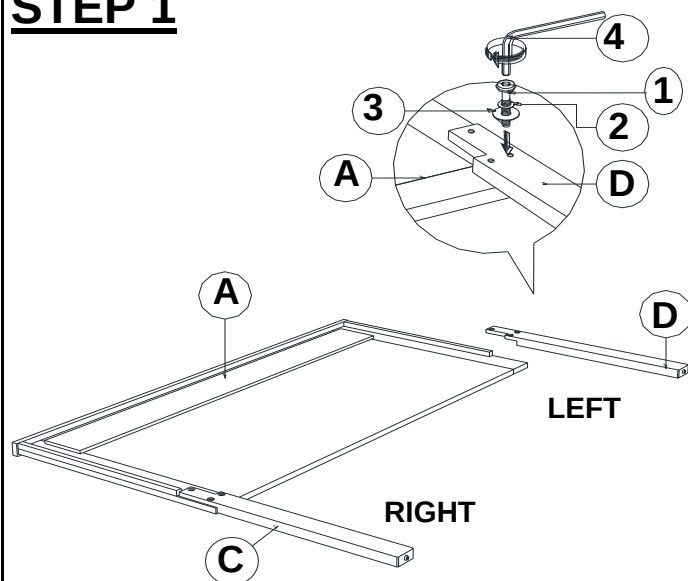


****BACK VIEW****

Note : Please take note of the marking sticker (L&R) on the leg.


STEP 2

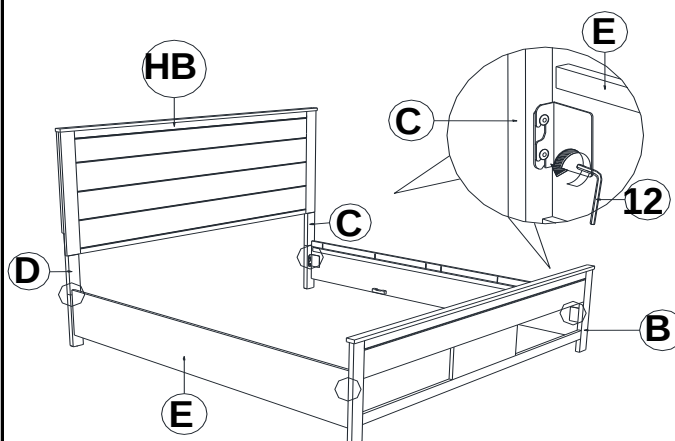

STEP 3

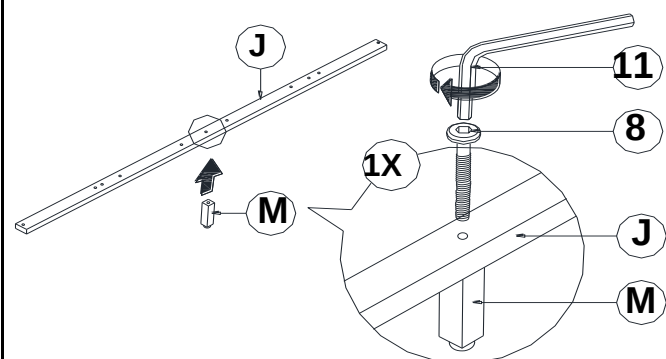


STEP 4

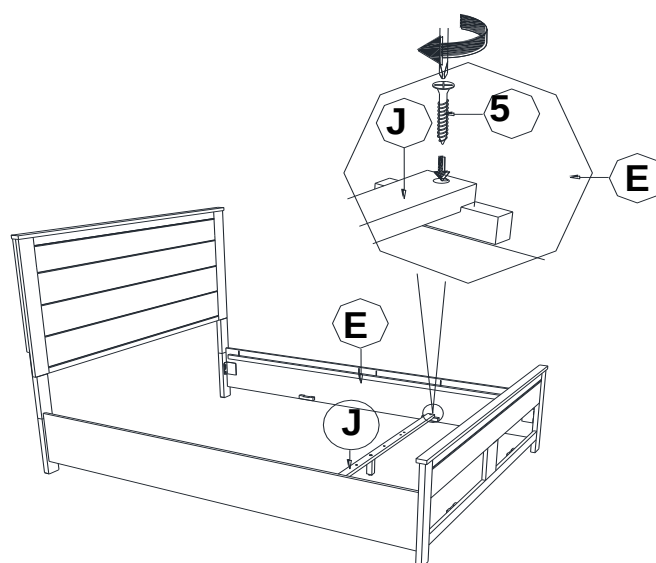


ASSEMBLY INSTRUCTIONS


STEP 5

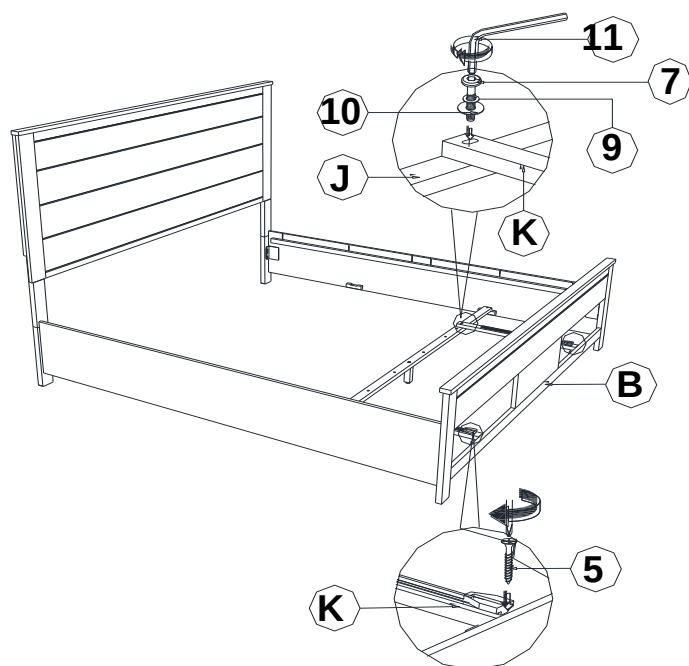


STEP 6

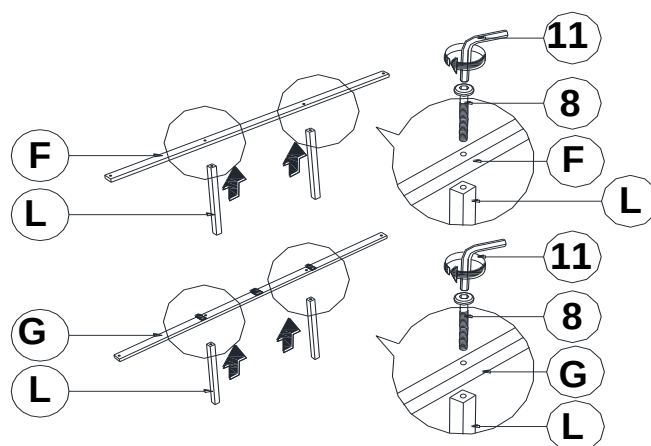

STEP 7


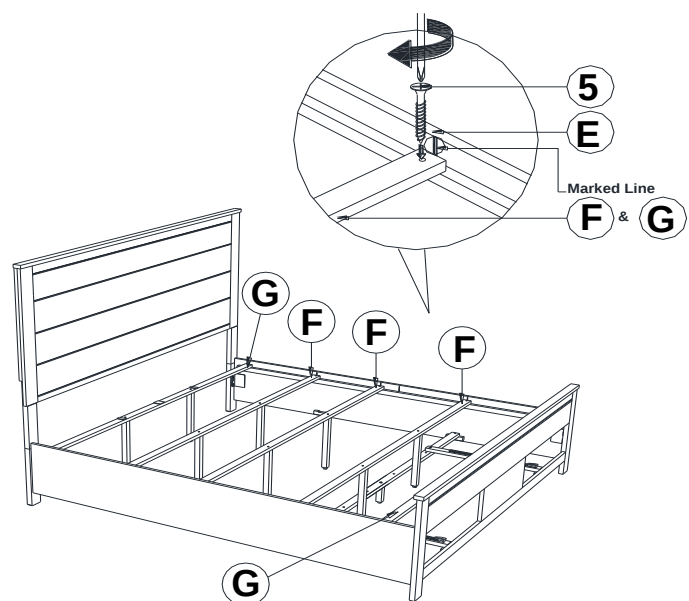


STEP 8

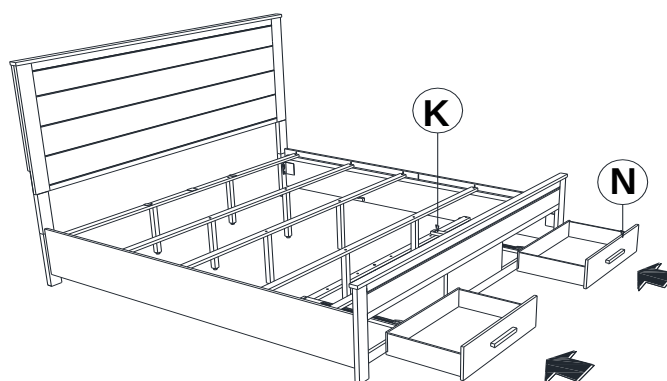


ASSEMBLY INSTRUCTIONS

STEP 9

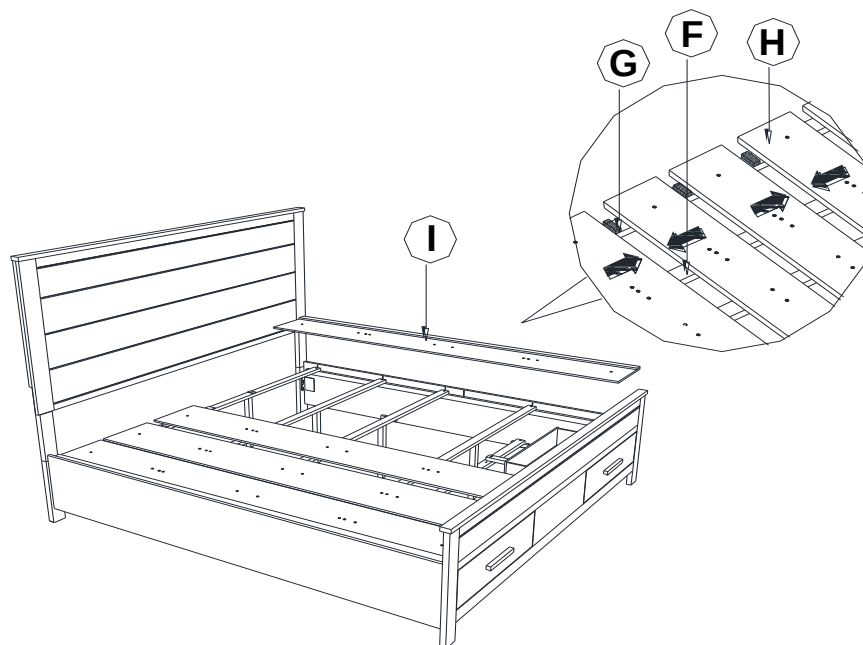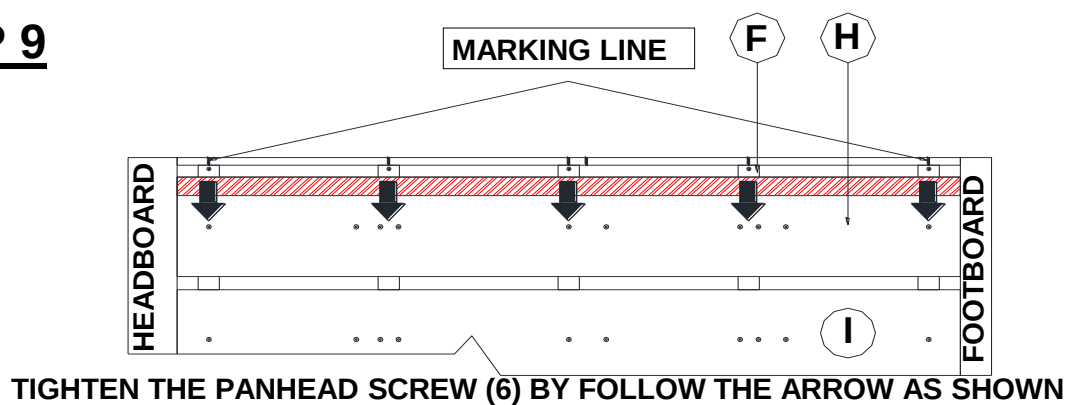

STEP 10 COMPLETE

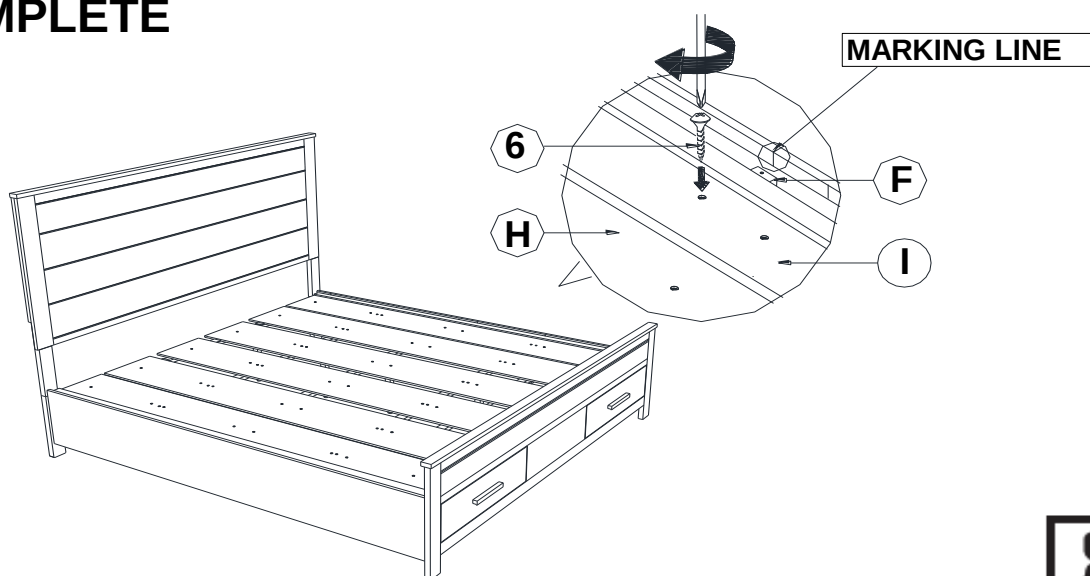


ITEM: 222631KW (B1-B3)



Inner Size of Bed: 77.00"W X 86.00"D

Inner Size of Drawer : 23.25"W X 15.00"D X 5.00"H X 0.25"T

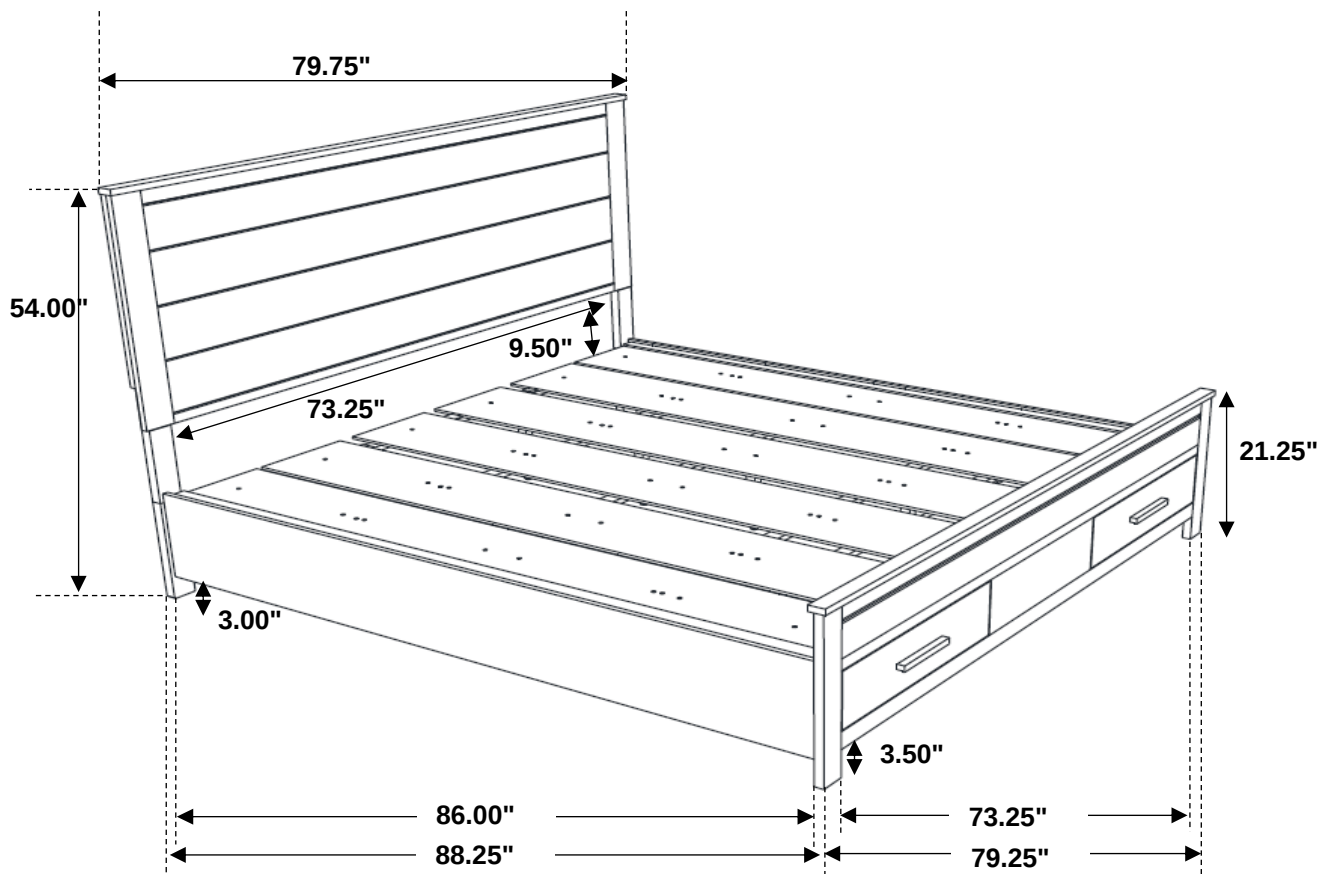

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222632
Nightstand

ITEM:222632



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

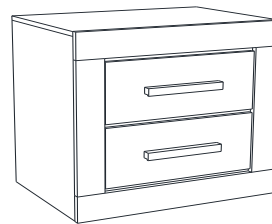

1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 50mm - BLK)



4PCS

2 LOCK WASHER
(1/4" - BLK)



4PCS

3 FLAT WASHER
(1/4"ID x 13mm - BLK)



4PCS

4 ALLEN WRENCH
(M4 x 110mm - BLK)




1PC

ITEM: **222632**


ASSEMBLY INSTRUCTIONS




STEP 1

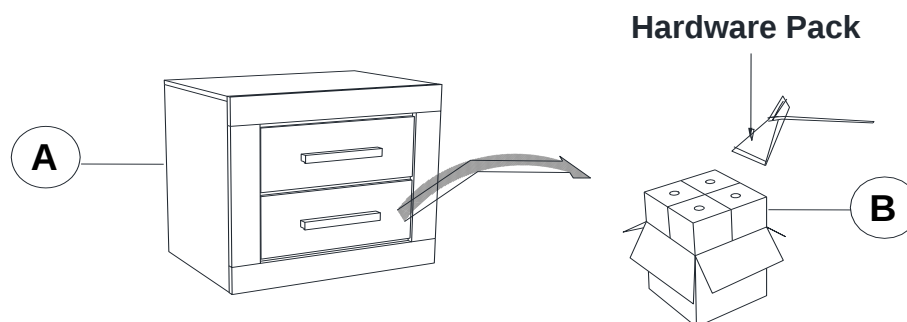

STEP 2

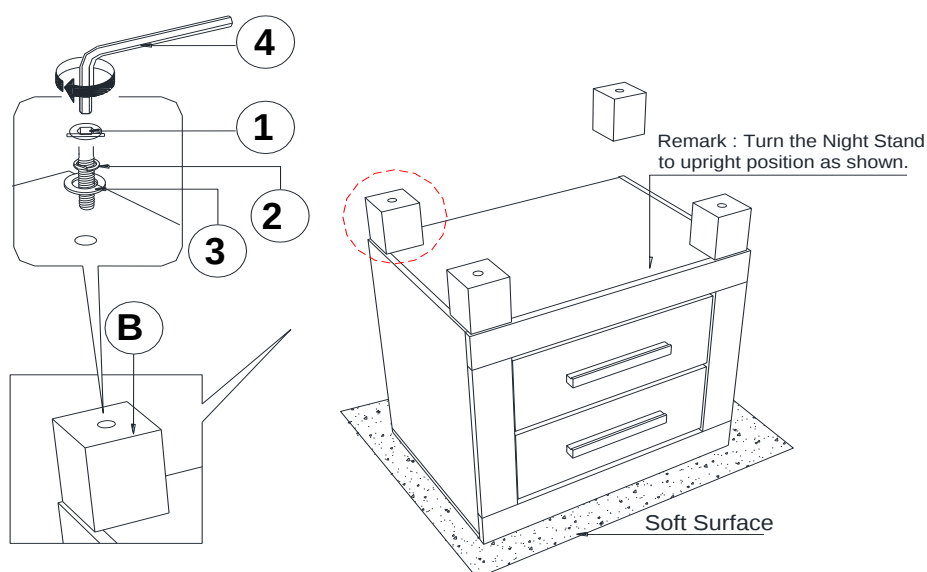


STEP 3 COMPLETE

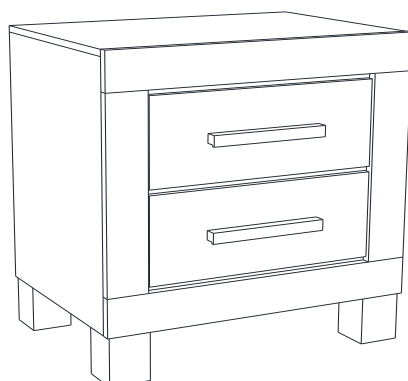

ITEM: **222632**



Inner Size of Drawer : 15.00"W X 12.50"D X 4.00"H X 0.25"T

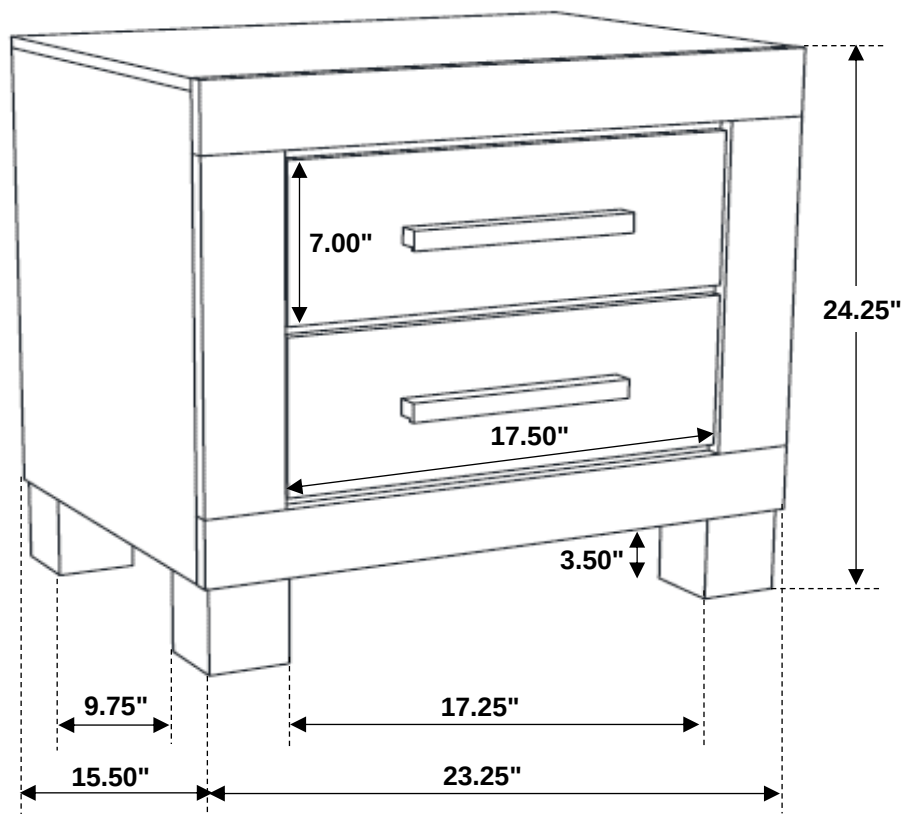

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222633
Dresser

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

DRESSER



1PC

B

LEG



4PCS

HARDWARE IDENTIFICATION

1

BOLT
(M6 x 50mm - BLK)



4PCS

2

LOCK WASHER
(1/4" - BLK)



4PCS

3

FLAT WASHER
(1/4"ID x 13mm - BLK)



4PCS

4

ALLEN WRENCH
(M4 x 110mm - BLK)




1PC

ITEM: **222633**


ASSEMBLY INSTRUCTIONS




STEP 1

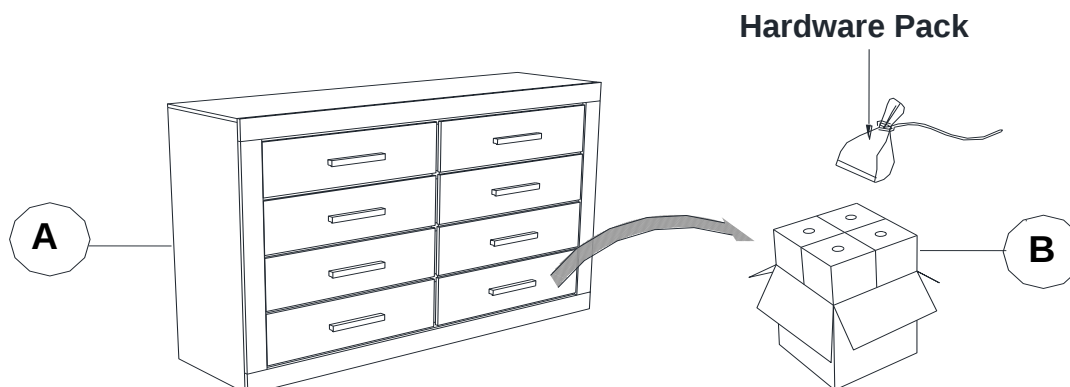

STEP 2

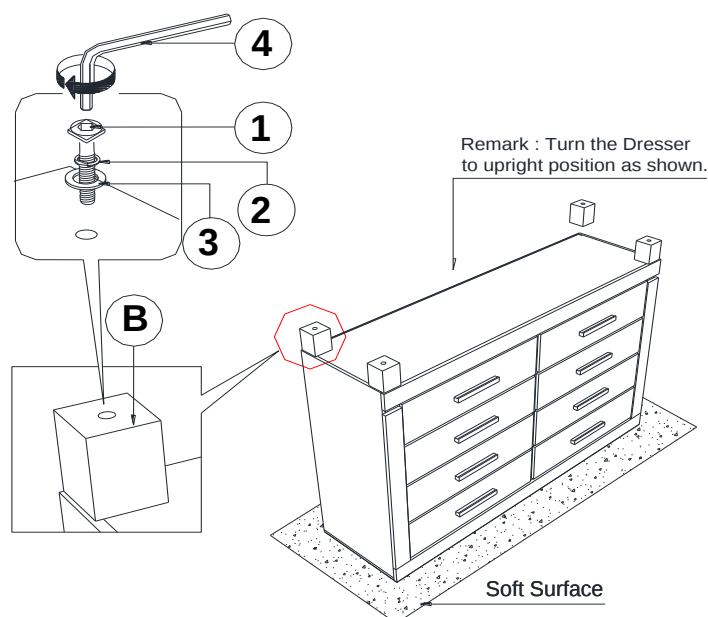


STEP 3 COMPLETE

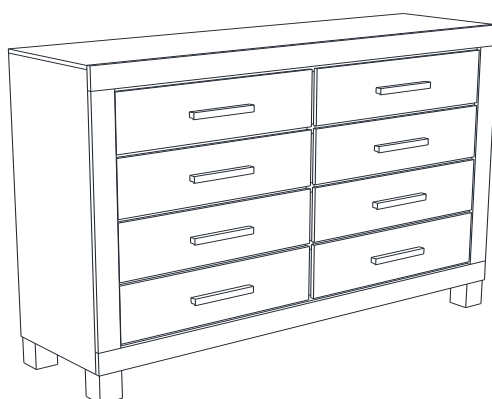

ITEM: **222633**



Inner Size of Drawer : 23.25"W X 12.50"D X 4.00"H X 0.25"T

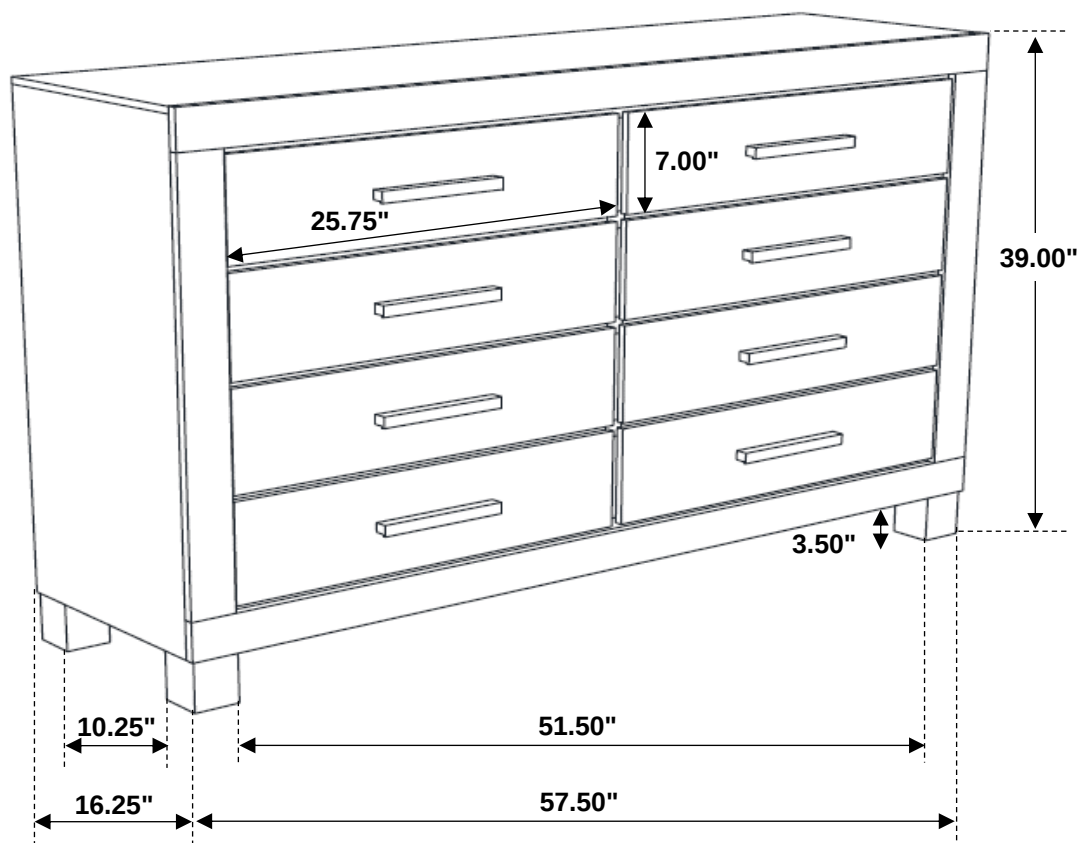

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222634
Mirror

ITEM: 222634



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A MIRROR

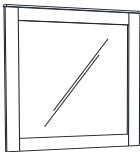

1PC

C MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS

B DRESSER
FROM BOX ITEM
#222633



1PC

HARDWARE IDENTIFICATION

1 SHORT BOLT
(M6 x 35mm - BLK)



4PCS

4 FLAT WASHER
(1/4"ID x 19mm - BLK)



8PCS

2 LONG BOLT
(M6 x 40mm - BLK)



4PCS

5 ALLEN WRENCH
(M4 x 60mm - BLK)



1PC

3 LOCK WASHER
(1/4" - BLK)



8PCS


ITEM: **222634**



ASSEMBLY INSTRUCTIONS


STEP 1

ARROW MARKING FACE UPWARD

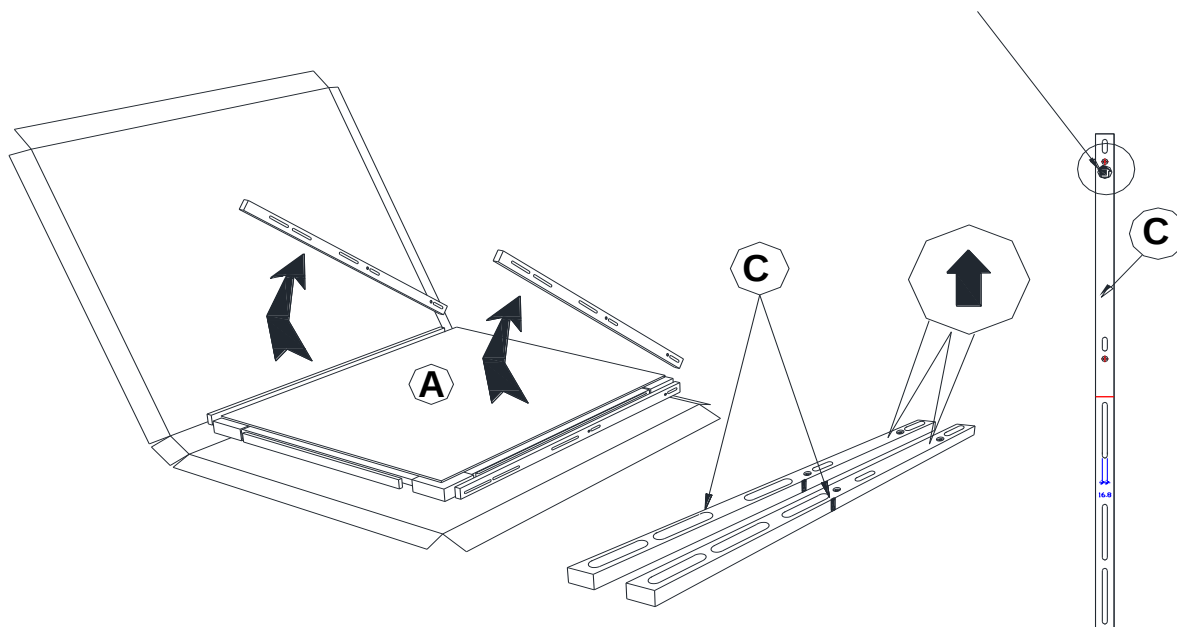

STEP 2

ARROW MARKING FACE UPWARD

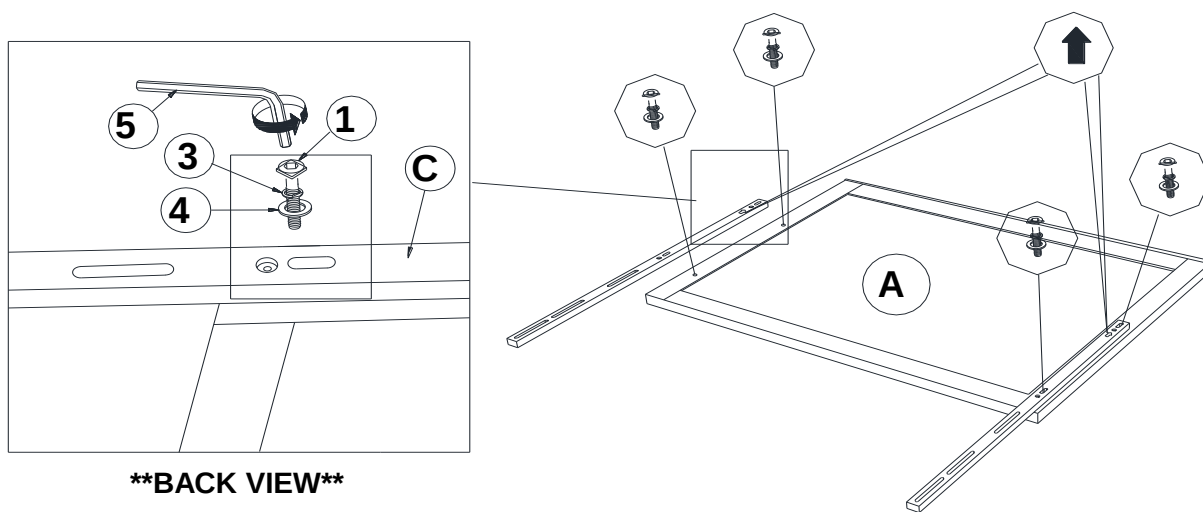


ITEM: **222634**




ASSEMBLY INSTRUCTIONS


STEP 3

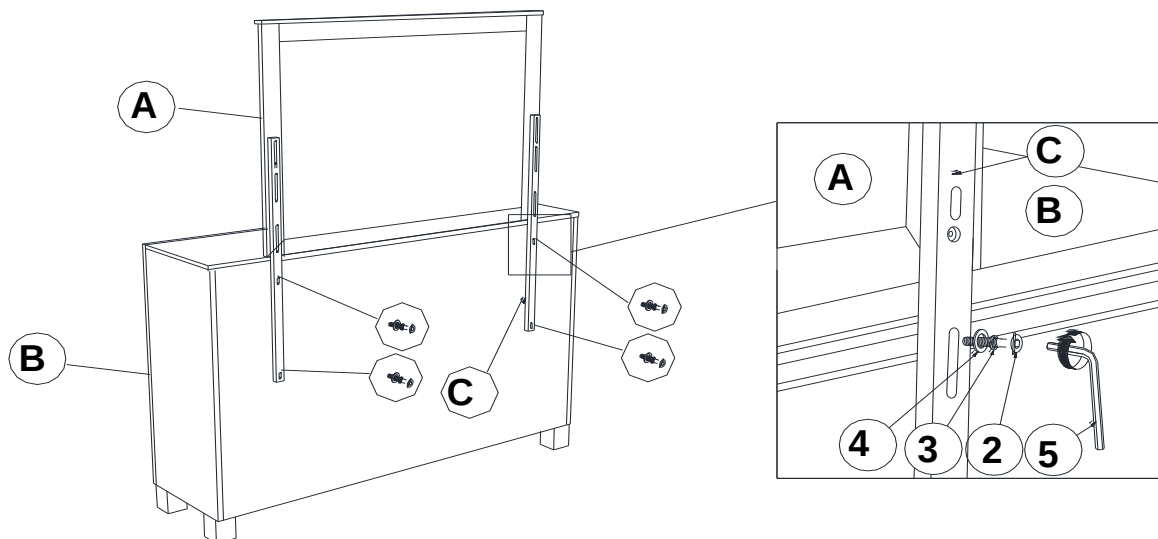

STEP 4 COMPLETE

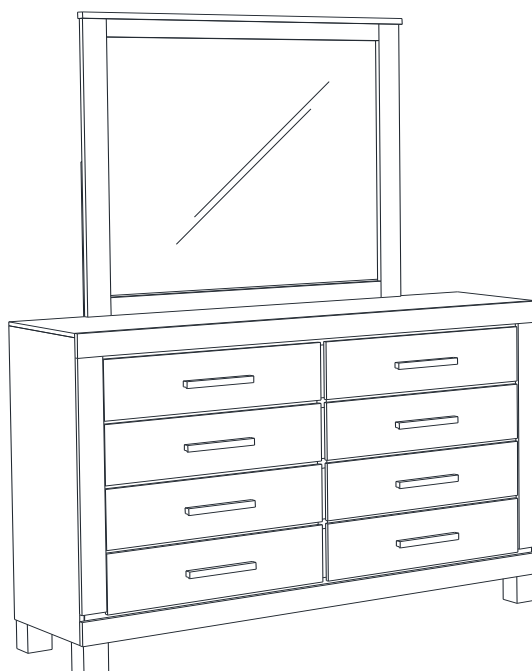

ITEM: **222634**

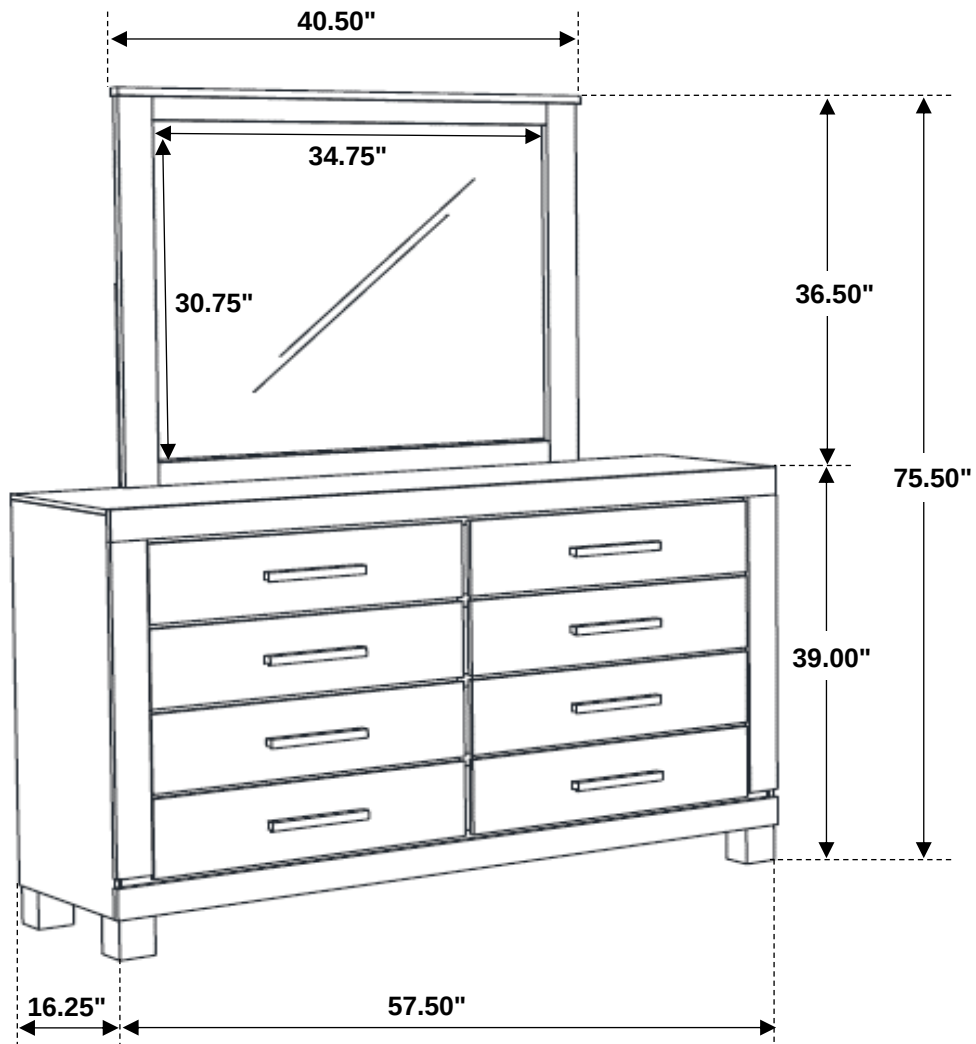

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

222635
Chest

ITEM:222635



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A	CHEST		1PC
B	LEG		4PCS

HARDWARE IDENTIFICATION


1	BOLT (M6 x 50mm - BLK)		4PCS
2	LOCK WASHER (1/4" - BLK)		4PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)		4PCS
4	ALLEN WRENCH (M4 x 110mm - BLK)		1PC

ITEM: **222635**


ASSEMBLY INSTRUCTIONS



STEP 1

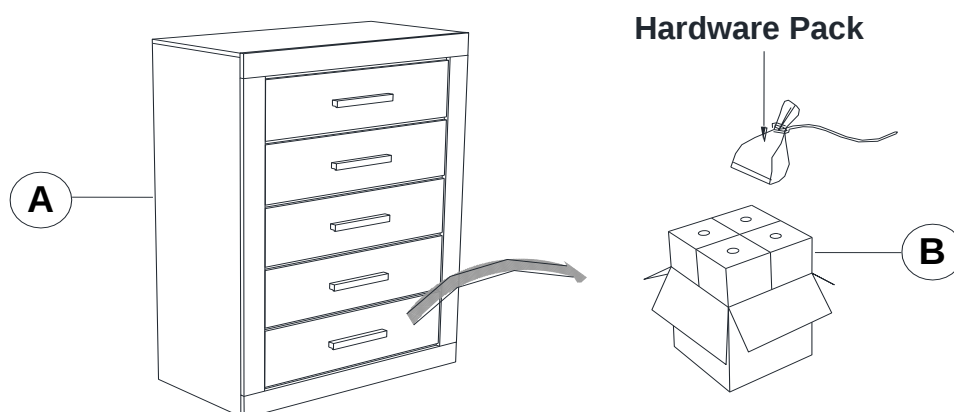

STEP 2

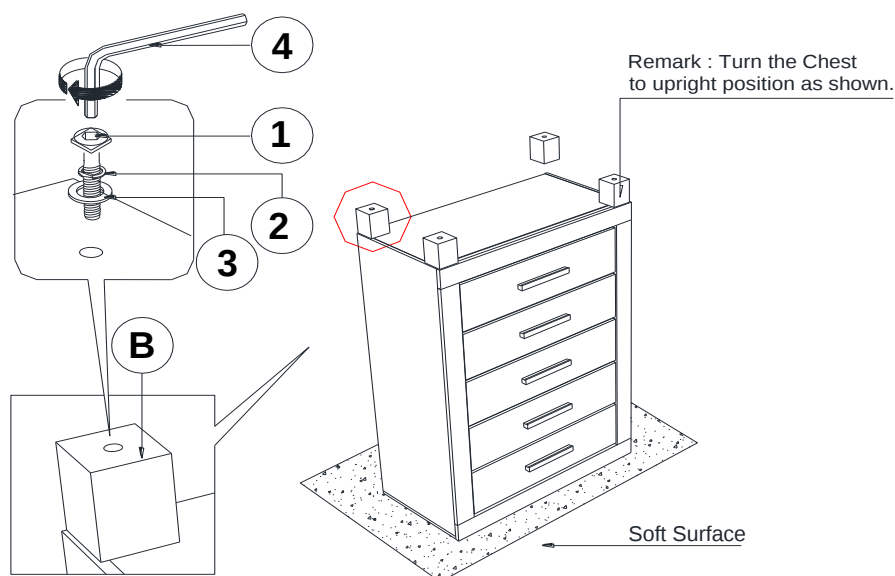


STEP 3 COMPLETE



ITEM: **222635**



Inner Size of Drawer : 23.25"W X 12.50"D X 4.00"H X 0.25"T

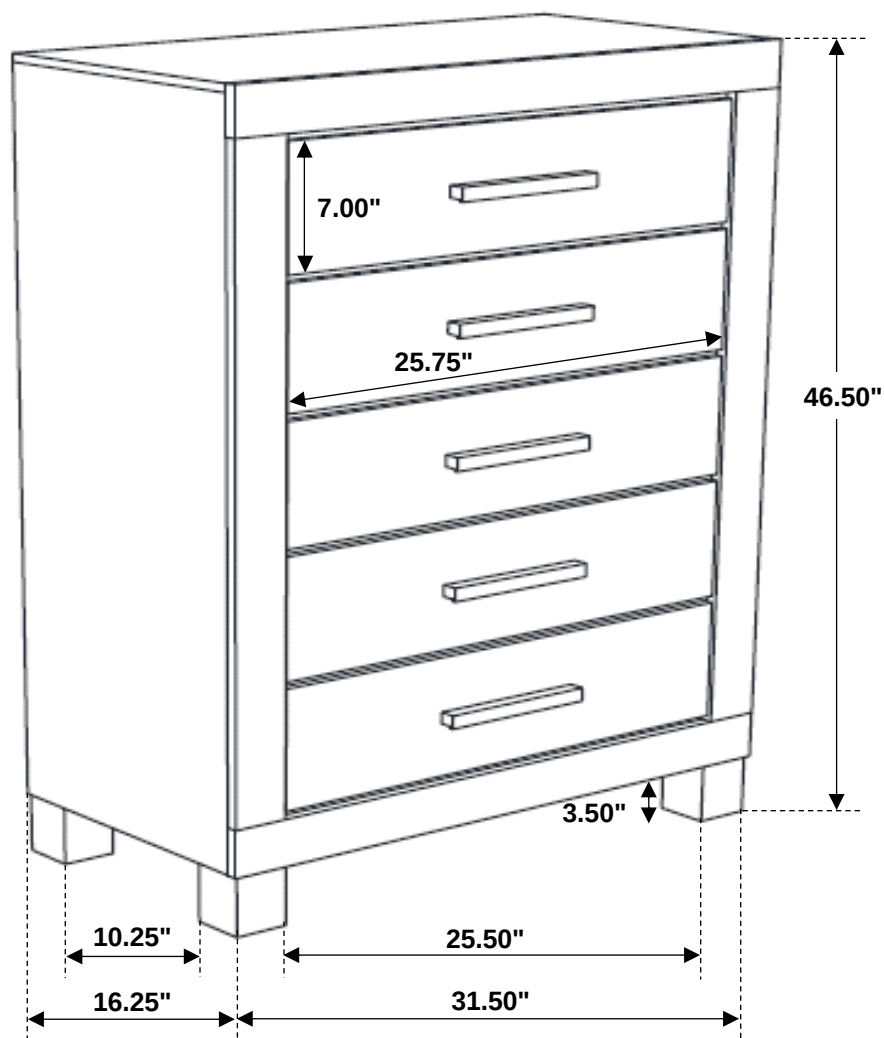

Note: Dimension tolerance $\pm 5\%$