

Fine Furniture for every stage of life

REVISION 0: 12/11/2019

222631Q (B1-B3) Queen Storage Bed

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



HEADBOARD COMPLETE

HB

ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

		IANIOII	<u>JLIVII</u>	<u>i ioaiioii</u>		
<u>B1</u>	(BOX 1)		Ī			
Α	HEADBOARD PANEL		1PC	RIGHT C HEADBOARD LEG		1PC
В	FOOTBOARD FRAME		1PC	LEFT D HEADBOARD LEG		1PC
<u>B2</u>	(BOX 2)					
E	BED RAIL		2PCS	DRAWER I BOTTOM TRESTLE BAR		1PC
F	BED SLAT		3PCS	J DRAWER SUPPORT RAIL		2PCS
G	BED SLAT WITH MARKING		2PCS	BED SLAT K SUPPORT WITH LEVELER		5PCS
н	CONCEAL PANEL		5PCS	DRAWER L SUPPORT LEG WITH LEVELER	0	1PC
<u>B3</u>	(BOX 3)					
M	DRAWER BOX		2PCS	222631Q(B1) FROM BOX 1 FOOTBOARD		1PC
	222631Q(B1) FROM BOX 1		450	FRAME		

1PC

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222631Q (B1)

1	BOLT (M6 x 30mm - BLK)	6PCS	3	FLAT WASHER (1/4"ID x 13mm - BLK)	6PCS
2	LOCK WASHER (1/4" - BLK)	6PCS	4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 222631Q (B2)


5	FLAT HEAD SCREW (M4 x 32mm - RBW)		14PCS	9	LOCK WASHER (1/4" - BLK)	2PCS
6	PAN HEAD SCREW (M3.5 x 20mm - BLK)	**(D=00000=(-))	25PCS	10	FLAT WASHER (1/4"ID x 13mm - BLK)	2PCS
7	SHORT BOLT (M6 x 35mm - BLK)		2PCS	11	SMALL ALLEN WRENCH (M4 x 60mm - BLK)	1PC
8	LONG BOLT (M6 x 50mm - BLK)		6PCS	12	BIG ALLEN WRENCH (M5 x 65mm - BLK)	1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

COASTER

ASSEMBLY INSTRUCTIONS

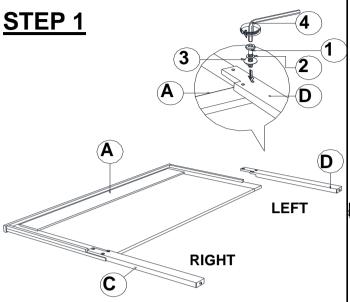


STEP 2

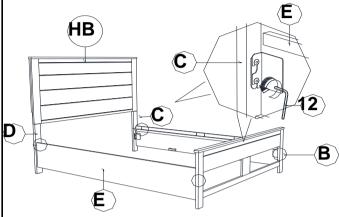


BACK VIEW

Note: Please take note of the marking sticker (L&R) on the leg.

STEP 3

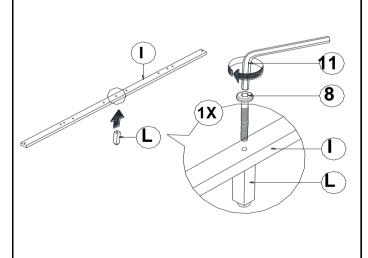

STEP 4

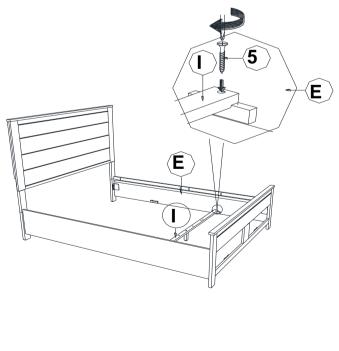


PAGE 4 OF 6

ITEM:**222631Q (В1-В3)**


COASTER

ASSEMBLY INSTRUCTIONS


STEP 5

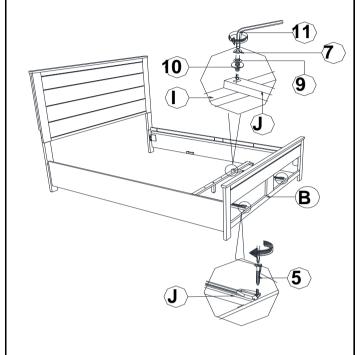


STEP 6

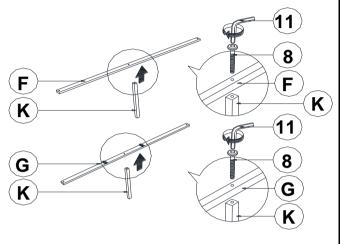


STEP 7

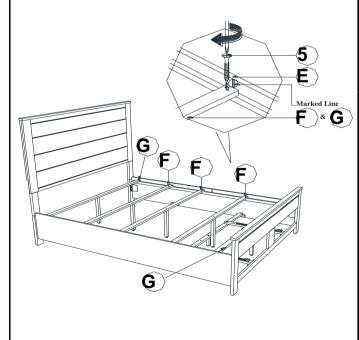

STEP 8

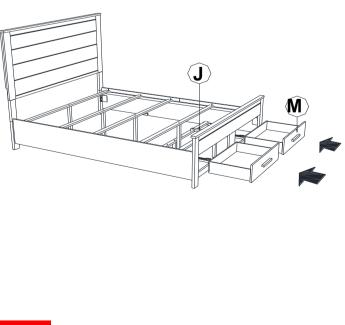


PAGE 5 OF 6

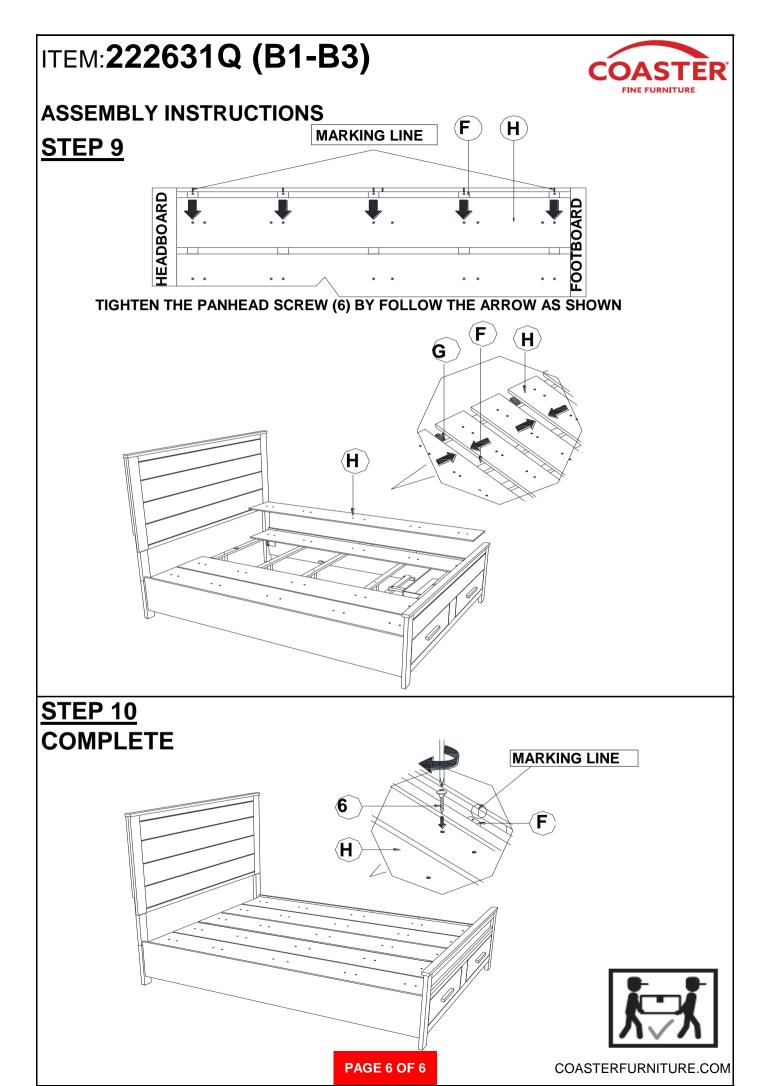



Inner Size of Bed: 61.00"W X 81.00"D

Inner Size of Drawer: 23.25"W X 15.00"D X 5.00"H X 0.25"T

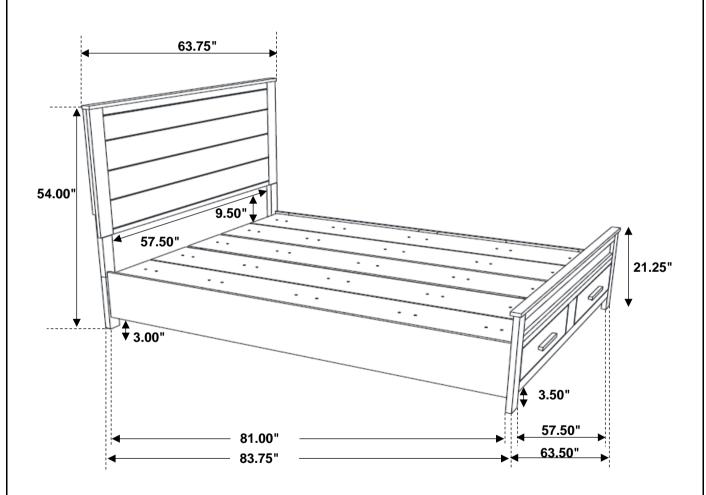





Fine Furniture for every stage of life

222632 Nightstand

REVISION 0: 12/11/2019

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B LEG



4PCS

HARDWARE IDENTIFICATION


1	BOLT (M6 x 50mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)	4PCS
4	ALLEN WRENCH (M4 x 110mm - BLK)	1PC

ASSEMBLY INSTRUCTIONS


STEP 1



Hardware Pack

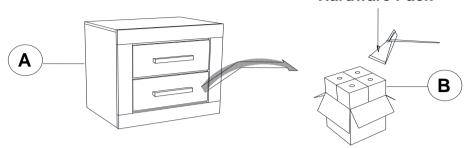

STEP 2

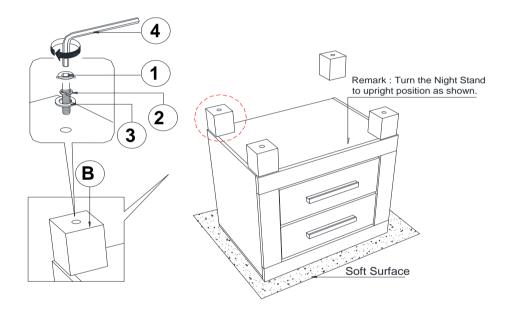


STEP 3 COMPLETE







Inner Size of Drawer: 15.00"W X 12.50"D X 4.00"H X 0.25"T

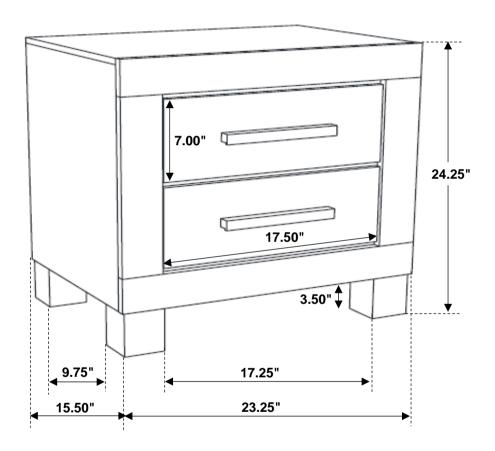





Fine Furniture for every stage of life

222633 Dresser

REVISION 0 : 12/11/2019 COASTERFURNITURE.COM
PAGE 1 OF 3

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1	BOLT (M6 x 50mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)	4PCS
4	ALLEN WRENCH (M4 x 110mm - BLK)	1PC

ASSEMBLY INSTRUCTIONS


STEP 1



Hardware Pack



STEP 2

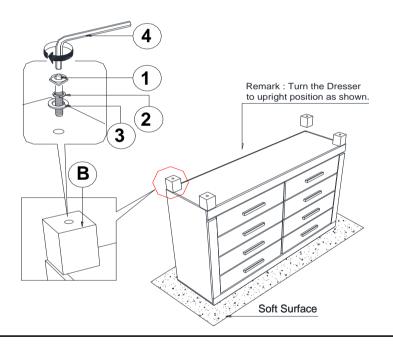

STEP 3 COMPLETE






PAGE 3 OF 3



Inner Size of Drawer: 23.25"W X 12.50"D X 4.00"H X 0.25"T

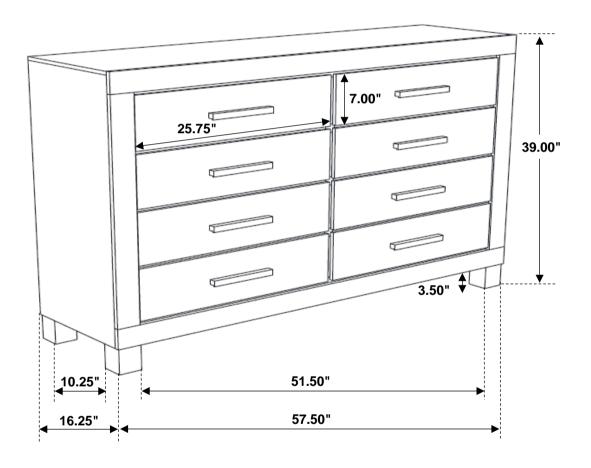





Fine Furniture for every stage of life

222634 *Mirror*

REVISION 0 : 12/11/2019 REVISION 1 : 08/25/2023

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR



1PC

C MIRROR SUPPORT (PACKED WITH MIRROR)



2PCS

DRESSER
B FROM BOX ITEM
#222633



1PC

HARDWARE IDENTIFICATION

1 SHORT BOLT (M6 x 35mm - BLK)



4PCS

FLAT WASHER (1/4"ID x 19mm - BLK)



8PCS

2 LONG BOLT (M6 x 40mm - BLK)



4PCS

5 ALLEN WRENCH (M4 x 60mm - BLK)



1PC

3 LOCK WASHER (1/4" - BLK)




8PCS



ASSEMBLY INSTRUCTIONS


STEP 1



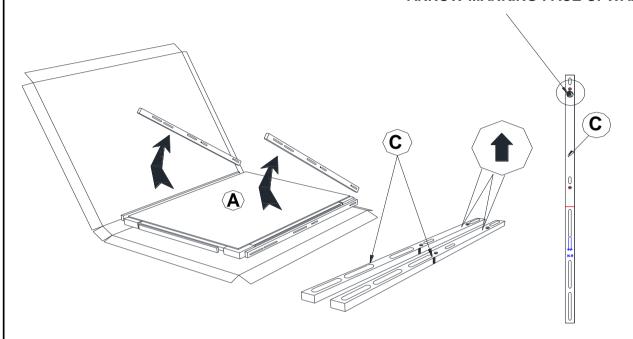

STEP 2

ARROW MARKING FACE UPWARD

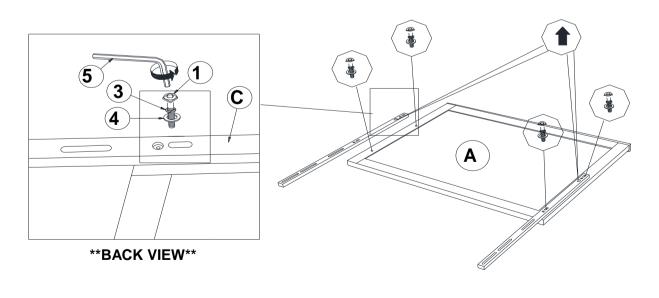


PAGE 3 OF 4



ASSEMBLY INSTRUCTIONS

STEP 3

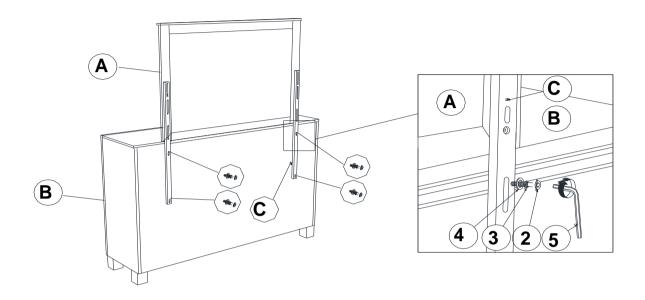


STEP 4 COMPLETE







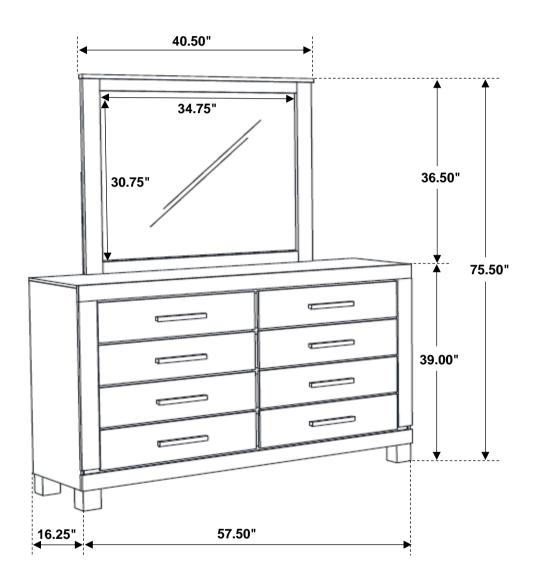





Fine Furniture for every stage of life

222635 Chest

REVISION 0: 12/11/2019

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A CHEST



1PC

B LEG



4PCS


HARDWARE IDENTIFICATION

1	BOLT (M6 x 50mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)	4PCS
4	ALLEN WRENCH (M4 x 110mm - BLK)	1PC


ASSEMBLY INSTRUCTIONS

STEP 1



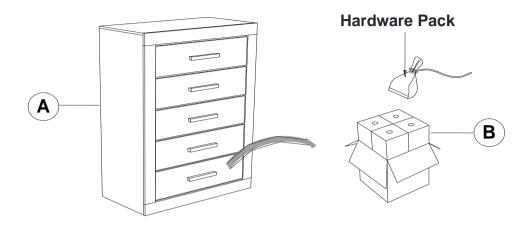

STEP 2

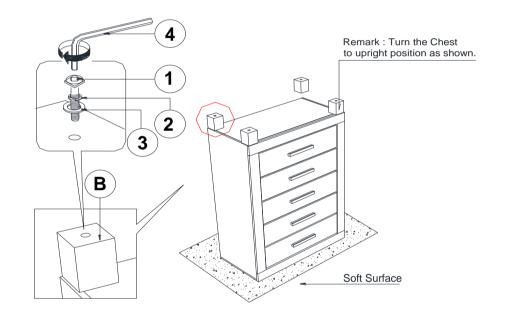

STEP 3 COMPLETE







Inner Size of Drawer: 23.25"W X 12.50"D X 4.00"H X 0.25"T

