

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 222961KE(B1-B3) Eastern King Bed

REVISION 0: 09/23/2019 REVISION 1: 12/28/2020

PAGE 1 OF 6



COASTERFURNITURE.COM

#### **ASSEMBLY INSTRUCTIONS**


#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



**ASSEMBLY TIME** 

25 MINUTES

#### PARTS IDENTIFICATION

B1 ( BOX 1 )				
Α	HEADBOARD PANEL		1PC	
В	LEFT HEADBOARD LEG (WITH "L" LABEL)		1PC	
С	RIGHT HEADBOARD LEG (WITH "R" LABEL)		1PC	
D	HEADBOARD BOTTOM RAIL		1PC	
E	WOOD CLEAT		2PCS	
B2 ( BOX 2 )				
F	FOOTBOARD		1PC	
G	BED SLAT		4PCS	
Н	BED SLAT SUPPORT WITH LEVELER		8PCS	
B3 ( BOX 3 )				
I	BED RAIL		2PCS	
НВ	222961KE (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	
F	222961KE (B2) FROM BOX 2 FOOTBOARD		1PC	

PAGE 2 OF 6



#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

#### HARDWARE IDENTIFICATION

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222961KE (B1)


1	SMALL ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BIG ALLEN WRENCH (M5 - SR)		1PC
3	SHORT BOLT WITH WASHER (M8 x 20mm-BLK)	9	8PCS
4	MEDIUM BOLT WITH WASHER (M6 x 40mm-BLK)	9 <b>9</b>	8PCS
5	LONG BOLT WITH WASHER (M6 x 60mm-BLK)	9000m	2PCS
6	LONG BOLT WITH SMALL WASHER (M6 x 60mm-BLK)	<b>9000</b> 00000	2PCS
7	WOOD DOWEL (M8 x 30mm - BLK)		8PCS
8	FLAT HEAD SCREW (#8 x 28mm - BLK)	<b>A</b> TIME	8PCS

#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



## ASSEMBLY INSTRUCTIONS STEP 1

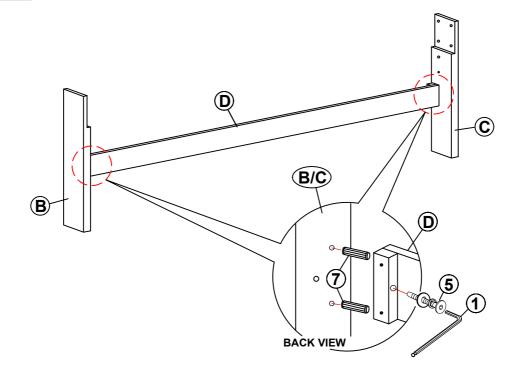


### STEP 2

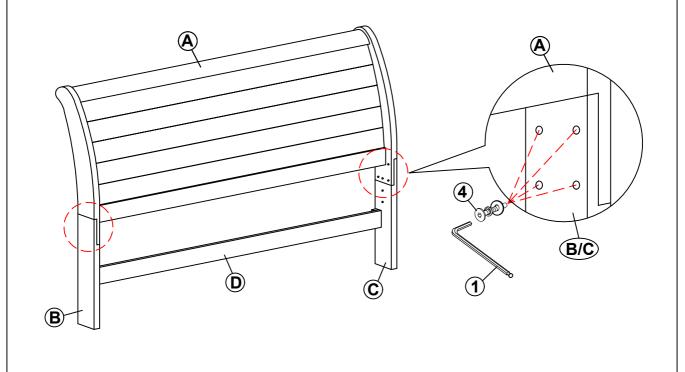


PAGE 4 OF 6



## ASSEMBLY INSTRUCTIONS STEP 3

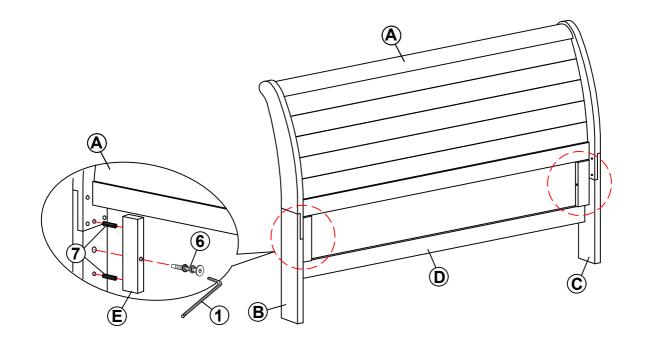


### STEP 4

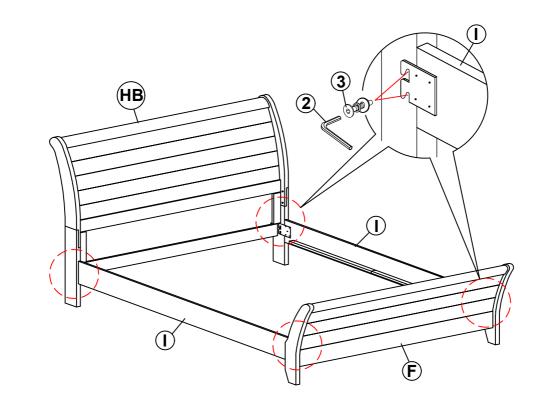


PAGE 5 OF 6



## ASSEMBLY INSTRUCTIONS STEP 5

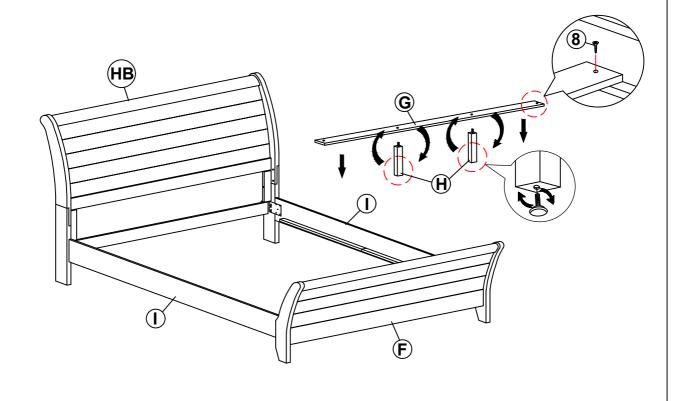


## STEP 6 COMPLETE

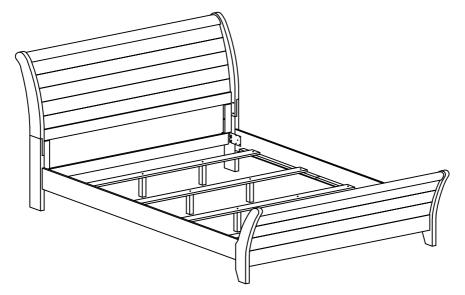





Inner Size: 77.00"W X 81.00"D

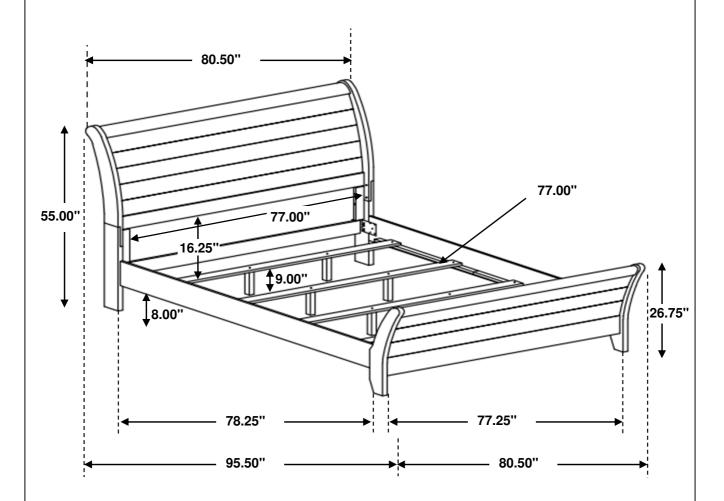

Note: Dimension tolerance ±5%