

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223031Q (B1-B3)**  
***Queen Bed***

# ITEM: 223031Q (B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD  
PANEL

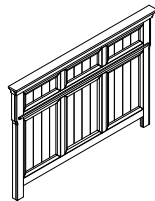

1 PC

B HEADBOARD  
BOTTOM RAIL




1 PC

C RIGHT  
HEADBOARD LEG



1 PC


D LEFT  
HEADBOARD LEG



1 PC

### B2 (BOX 2)

E FOOTBOARD  
PANEL

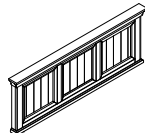

1 PC


F FOOTBOARD LEG



2 PCS

### B3 (BOX 3)

G BED RAIL

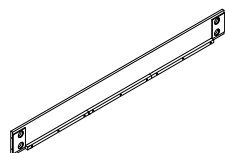


2 PCS

H BED SLAT




4 PCS

I BED SLAT SUPPORT  
WITH LEVELER




4 PCS

HB 223031Q (B1)  
\*FROM BOX 1  
HEADBOARD

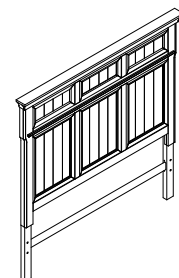

1 PC

FB 223031Q (B2)  
\*FROM BOX 2  
FOOTBOARD

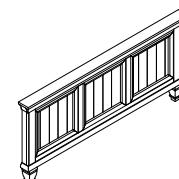

1 PC

# ITEM: 223031Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.











### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## HARDWARE IDENTIFICATION





### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223031Q (B1)

1	<b>BIG BOLT</b> (M8 x 50mm - BLK)		6 PCS	5	<b>SMALL BOLT</b> (M6 x 40mm - BLK)		2 PCS
2	<b>BIG LOCK WASHER</b> (M8 - BLK)		6 PCS	6	<b>SMALL LOCK WASHER</b> (M6 - BLK)		2 PCS
3	<b>BIG FLAT WASHER</b> (M8 - BLK)		6 PCS	7	<b>SMALL FLAT WASHER</b> (M6 - BLK)		2 PCS
4	<b>BIG ALLEN WRENCH</b> (M5 - BLK)		1 PC	8	<b>SMALL ALLEN WRENCH</b> (M4 - BLK)		1 PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223031Q (B2)

9	<b>THREADED BOLT</b> (M10 x 70mm - SR)		2 PCS
---	-------------------------------------------	-------------------------------------------------------------------------------------	-------

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223031Q (B3)

10	<b>THREADED BOLT</b> (M8 x 100mm - RBW)		8 PCS
11	<b>HEX NUT</b> (M8 x 15mm - RBW)		8 PCS
12	<b>WRENCH</b> (M13 - SR)		1 PC
13	<b>PAN HEAD SCREW</b> (4 x 32mm - SR)		8 PCS

### NOTE:


Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 223031Q (B1-B3)


## ASSEMBLY INSTRUCTIONS

### 223031Q (B1) - BOX 1



#### STEP 1

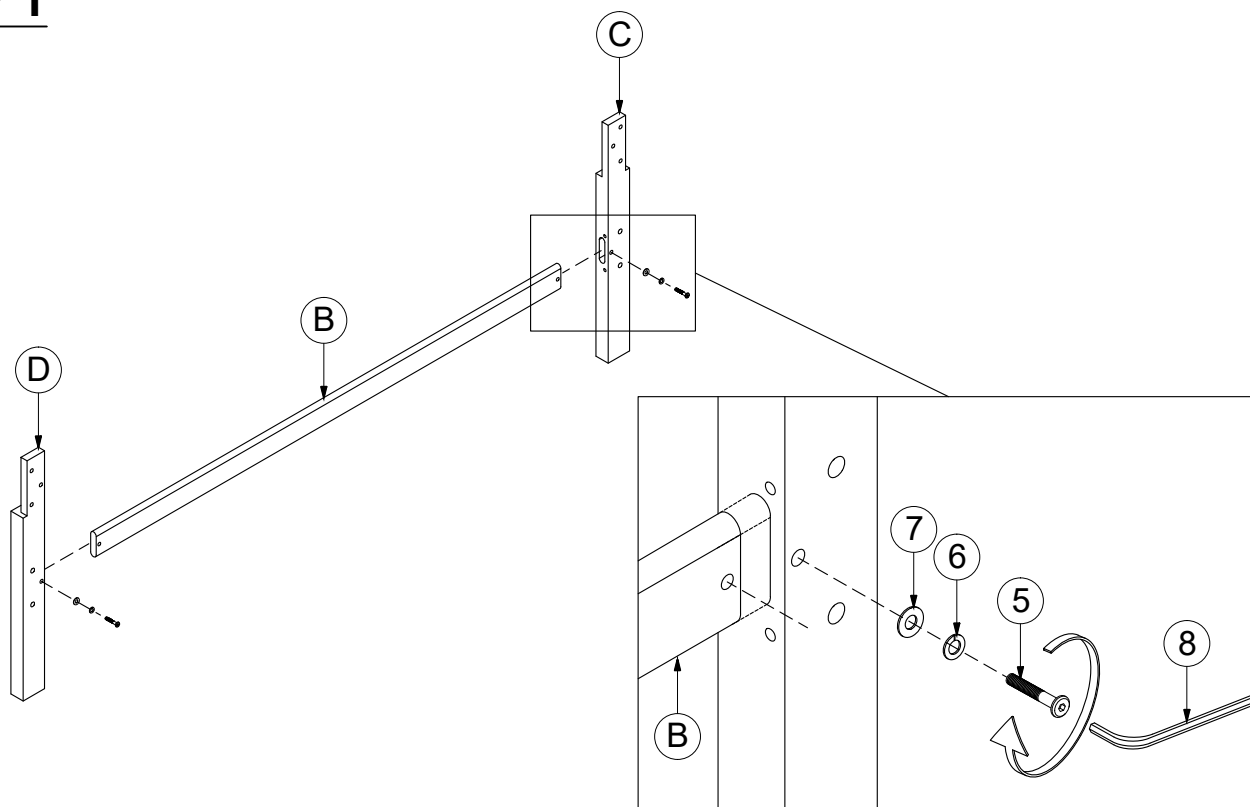


#### STEP 2

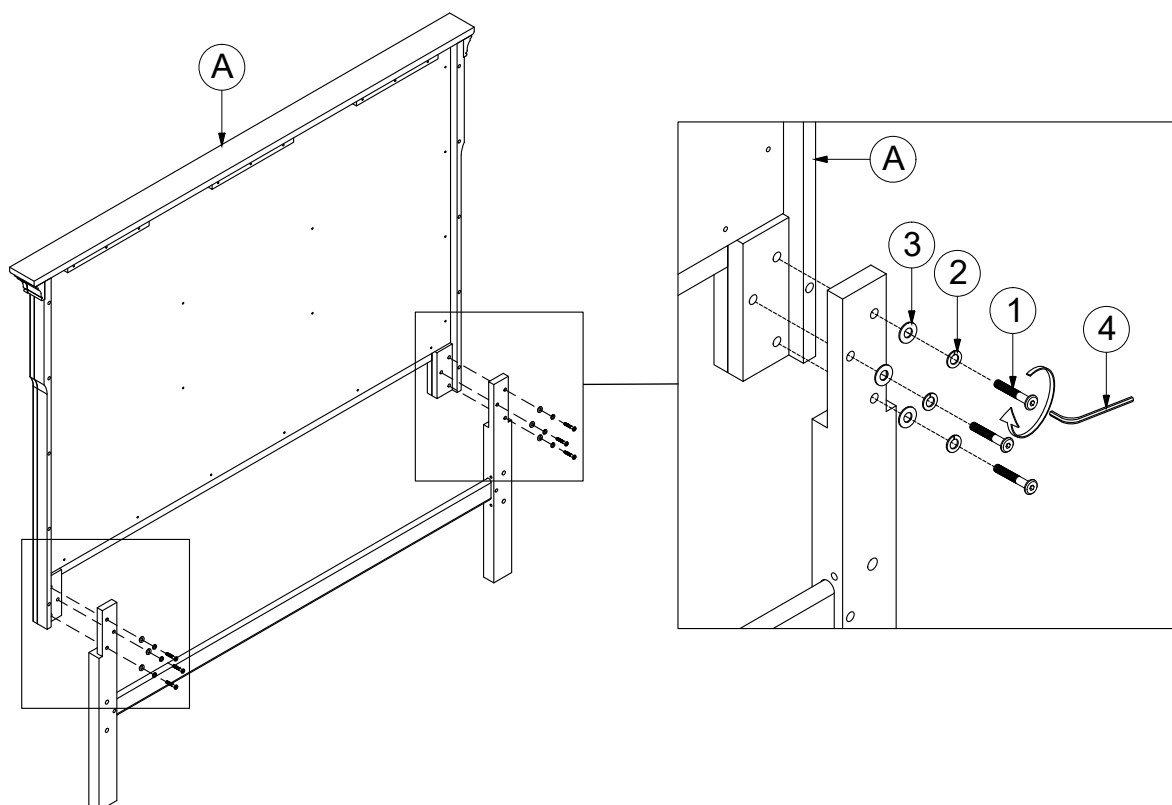

### STEP 3

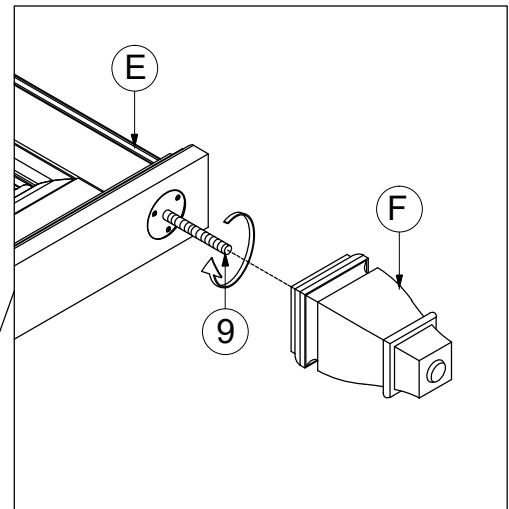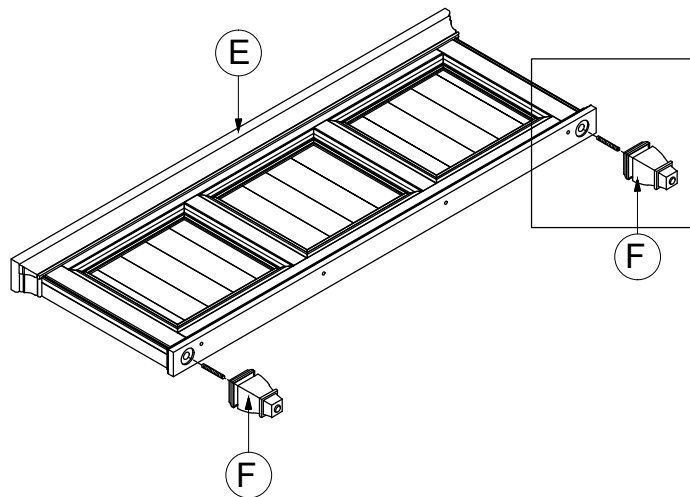


## STEP 4

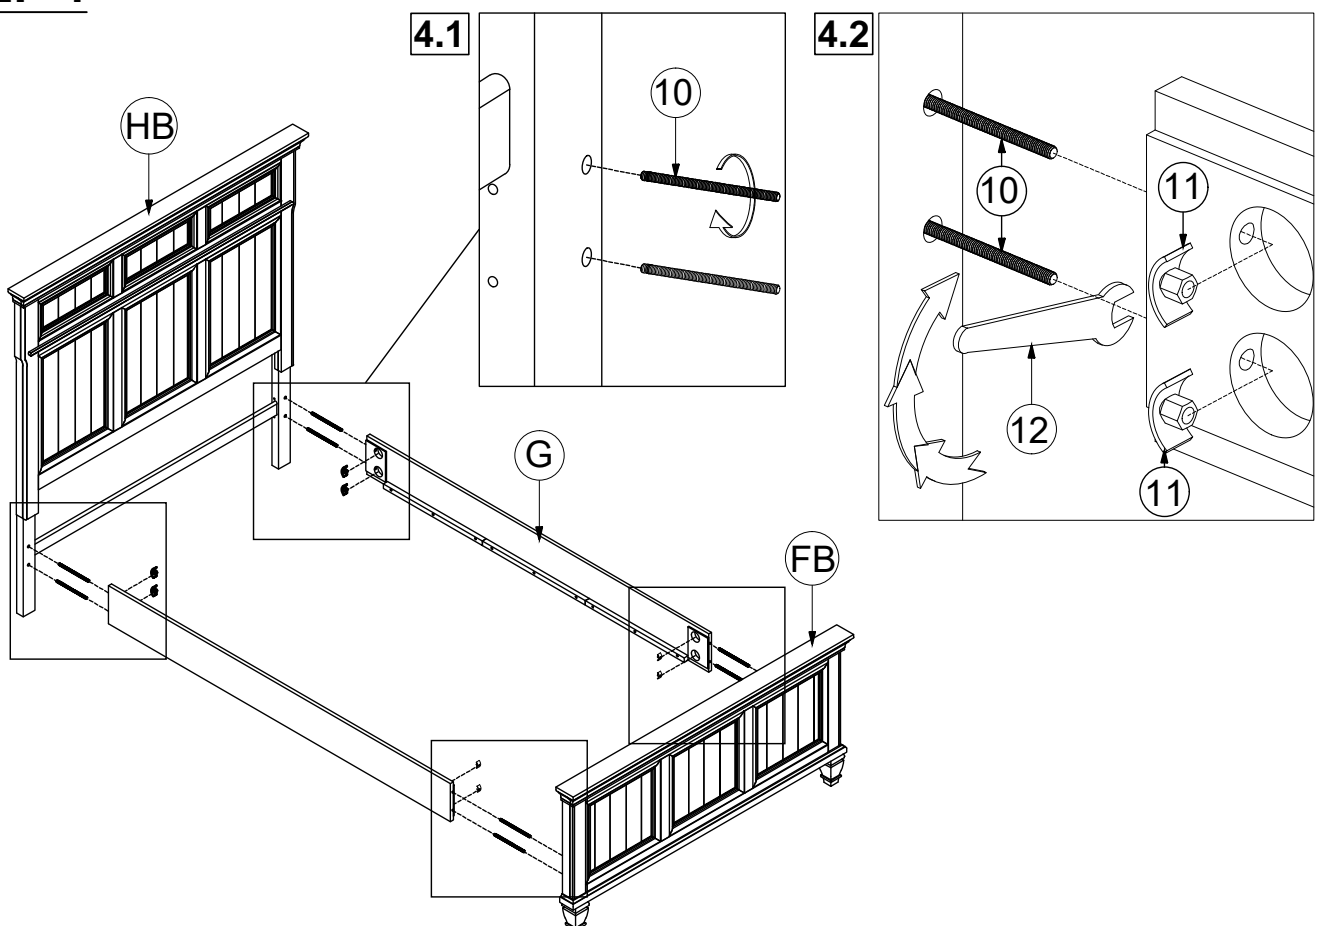


# ITEM: 223031Q (B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 5

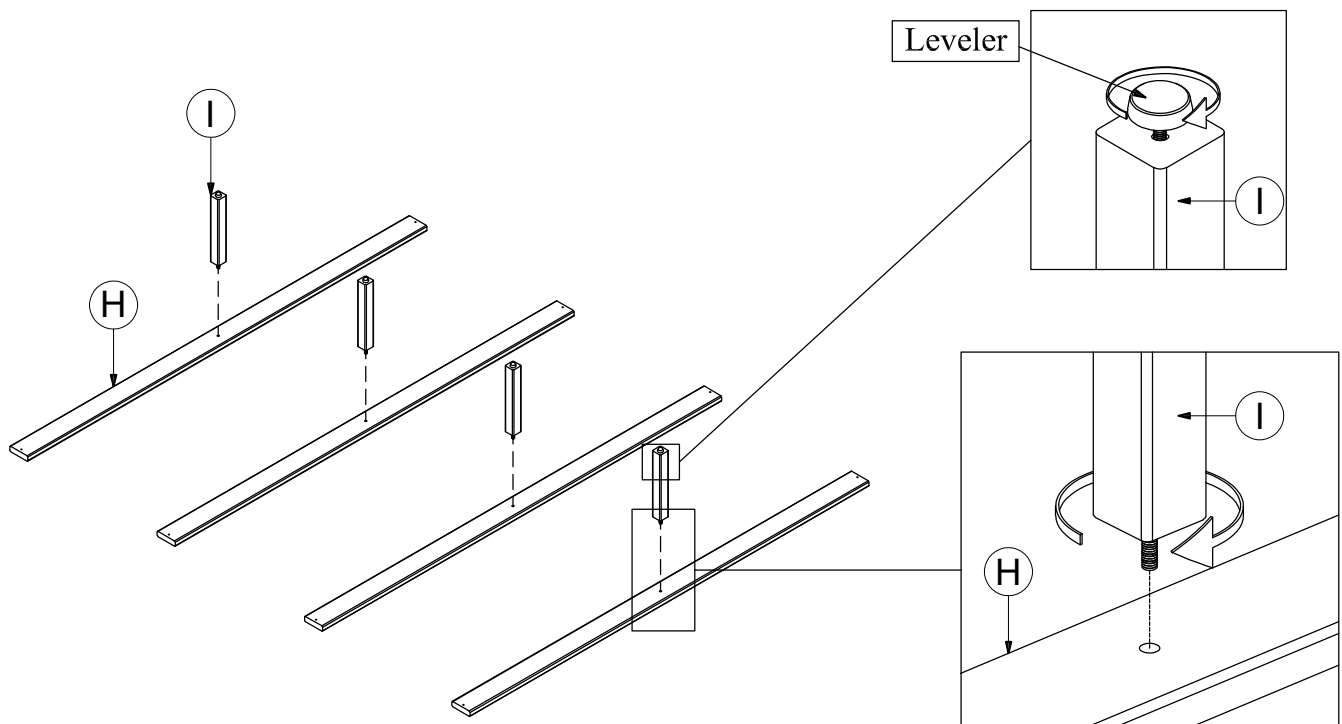

### STEP 6

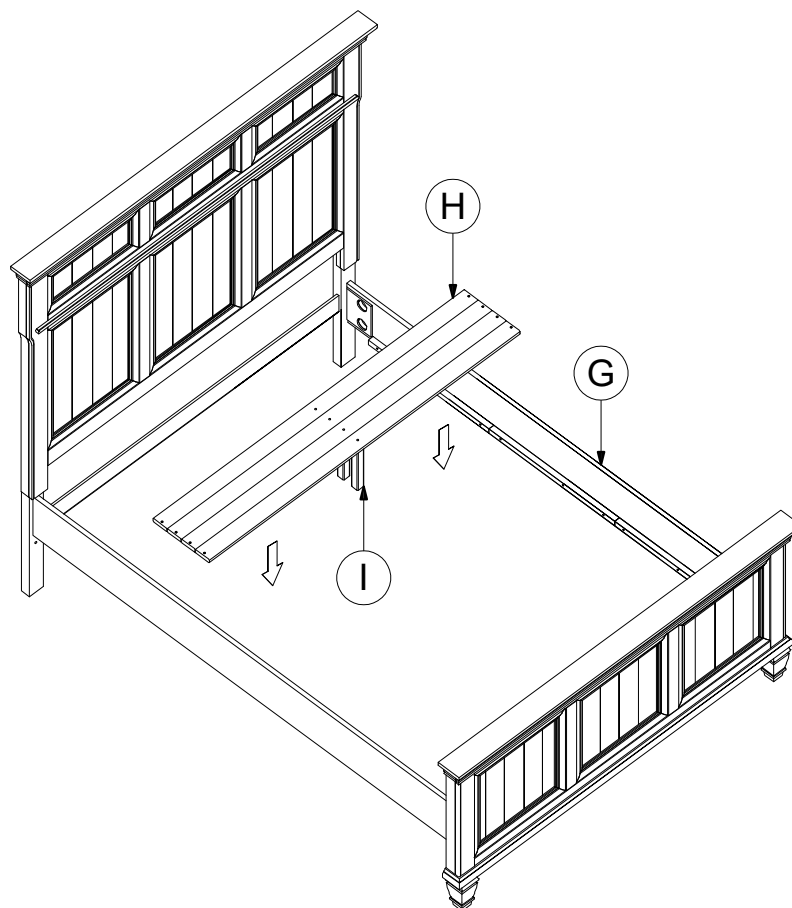


ITEM: **223031Q (B1-B3)**


## ASSEMBLY INSTRUCTIONS

### STEP 7

**COASTER**  
FINE FURNITURE

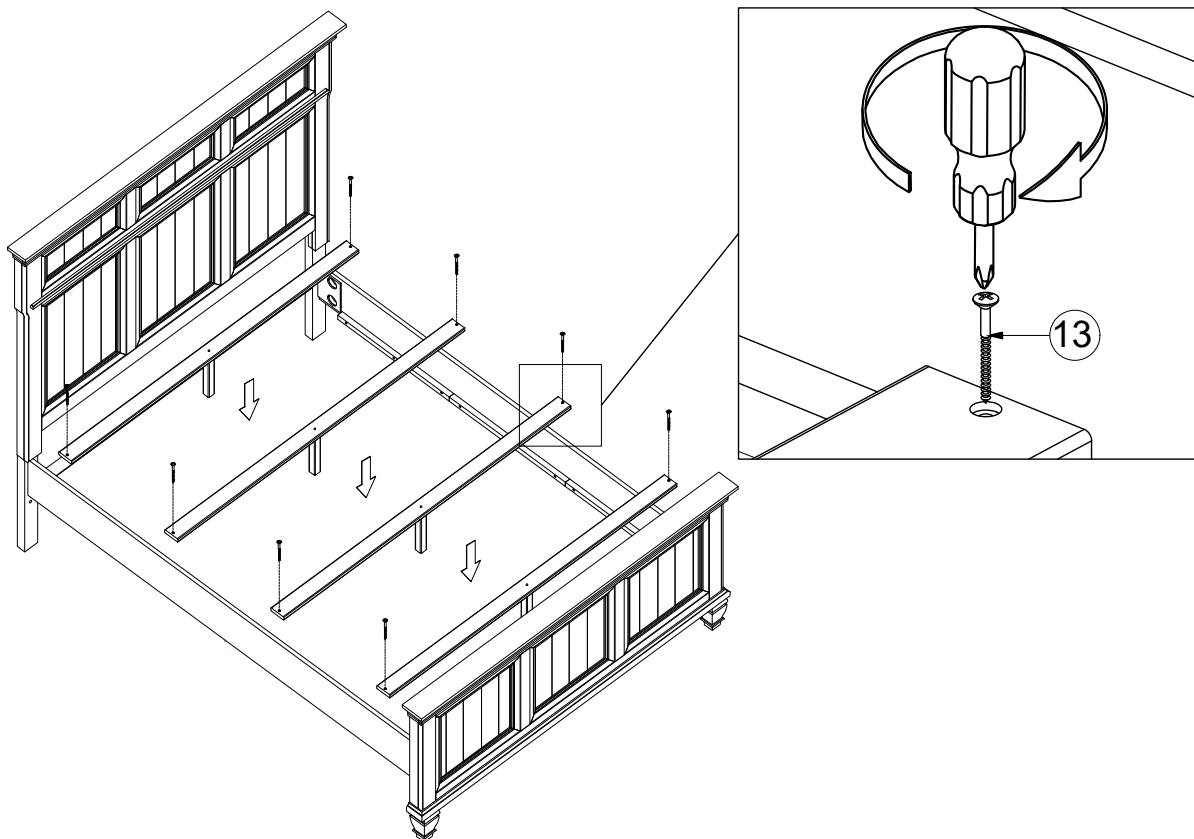


### STEP 8 **COMPLETE**

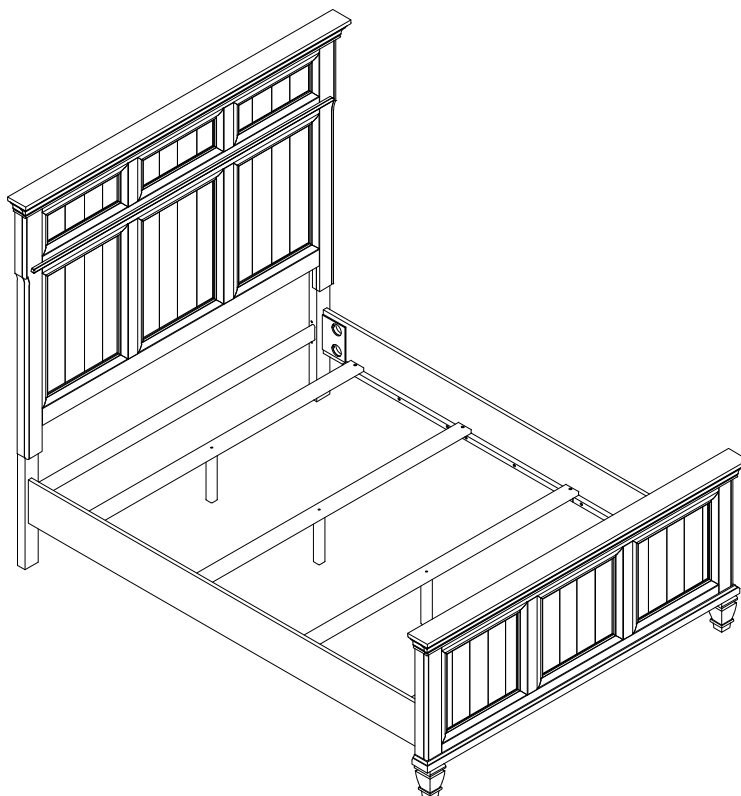

ITEM: **223031Q (B1-B3)**



Inner Size : 61.00"W X 81.00"D

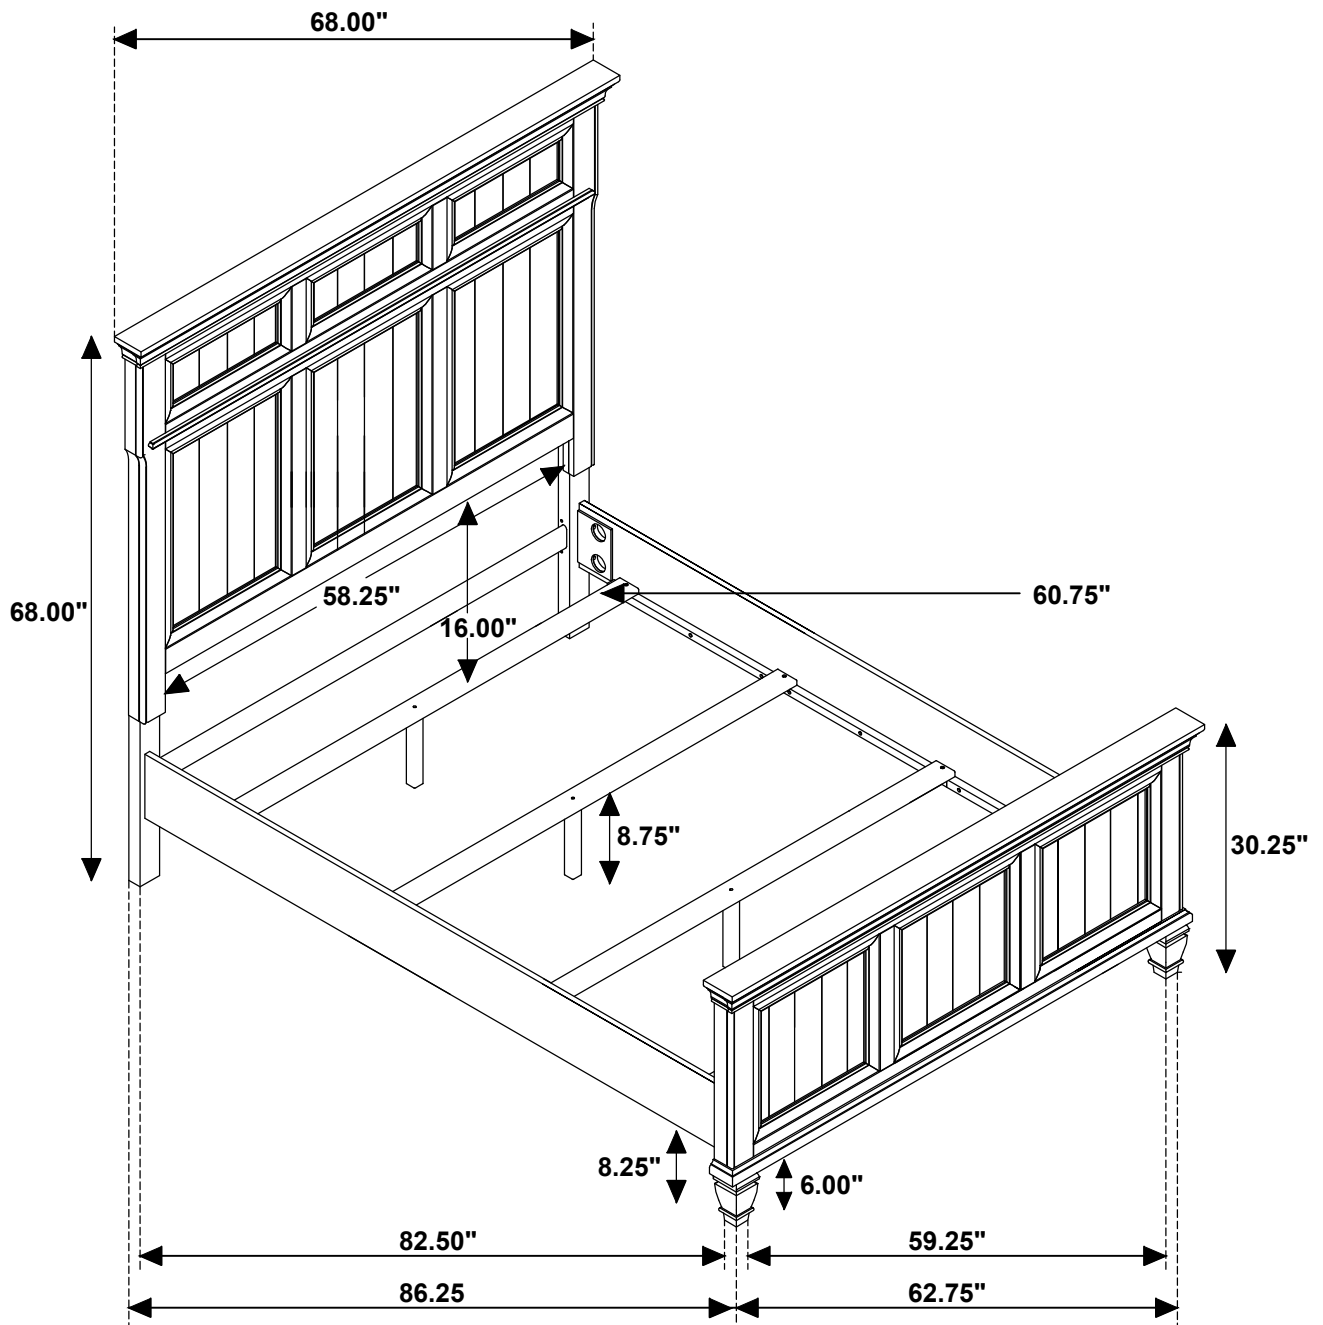

Note : Dimension tolerance  $\pm 5\%$



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223032**  
***Nightstand***

ITEM: **223032**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND

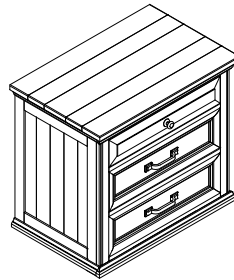

1 PC

B LEG



4 PCS

## HARDWARE IDENTIFICATION

1 **THREADED BOLT**  
(3/8" x 2 3/4" - SR)




4 PCS


ITEM: **223032**

## ASSEMBLY INSTRUCTIONS

### STEP 1

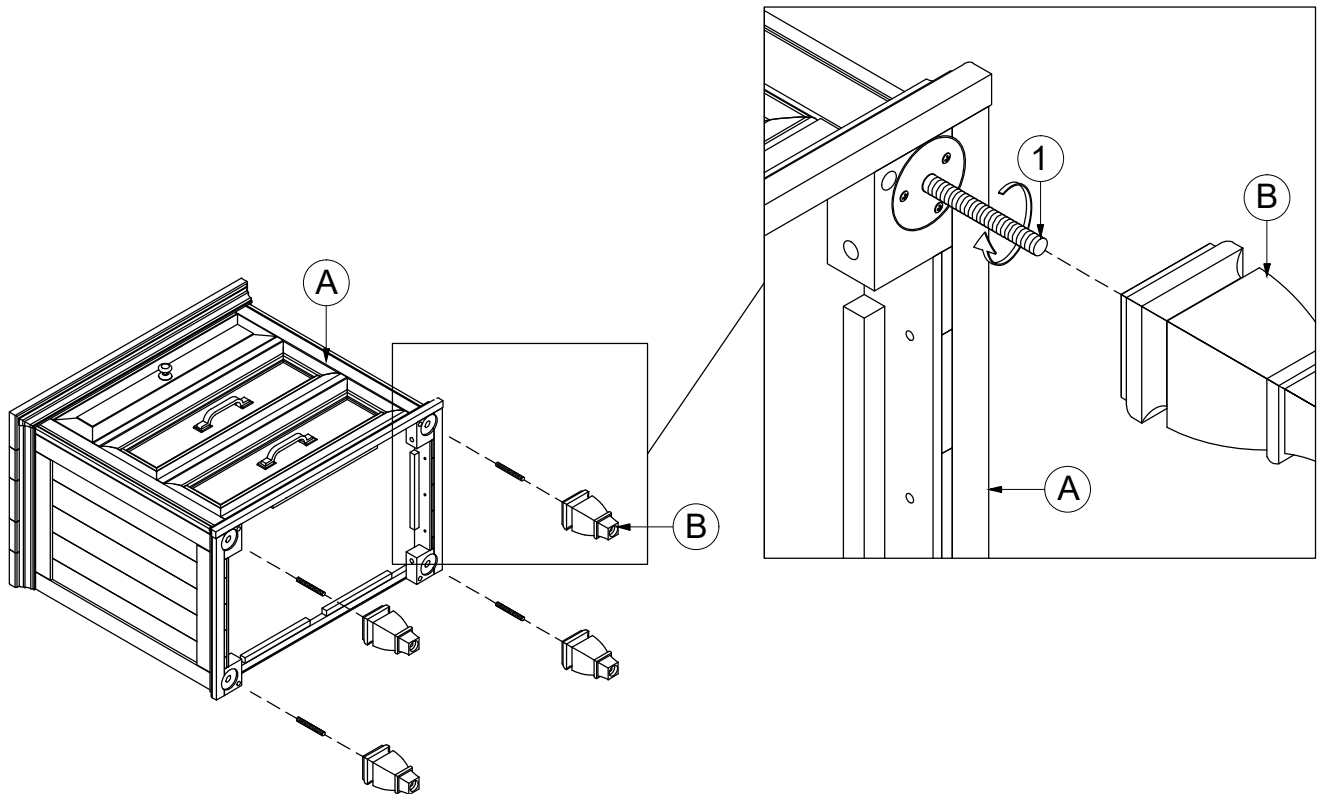

### STEP 2 COMPLETE

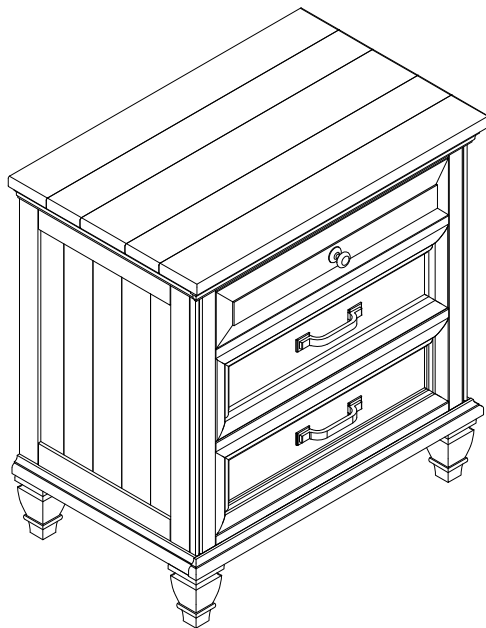

ITEM: **223032**

## ANTI-TIPPING INSTALLMENT INSTRUCTION FURNITURE TIPPING RESTRAINT



### WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


### STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

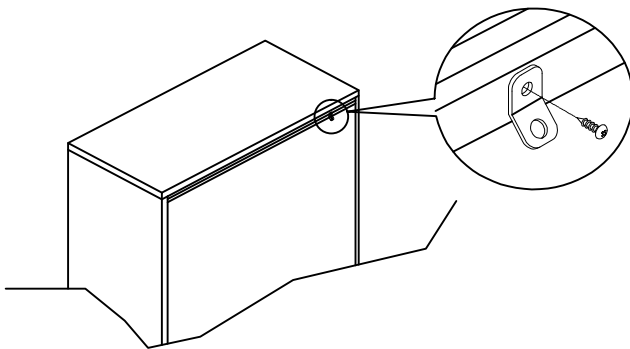


### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

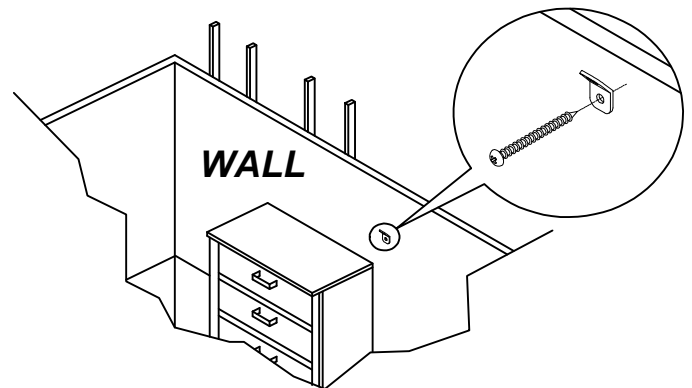

### STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

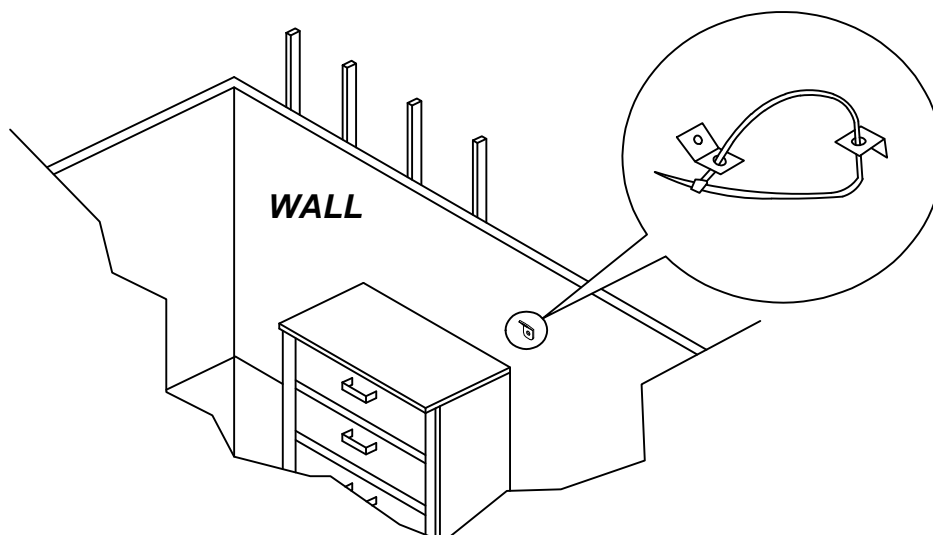


ITEM: **223032**



**Inner Size of Drawer A : 20.50"W X 13.00"D X 3.25"H X 0.50"T**

**Inner Size of Drawer B : 20.50"W X 13.00"D X 5.75"H X 0.50"T**

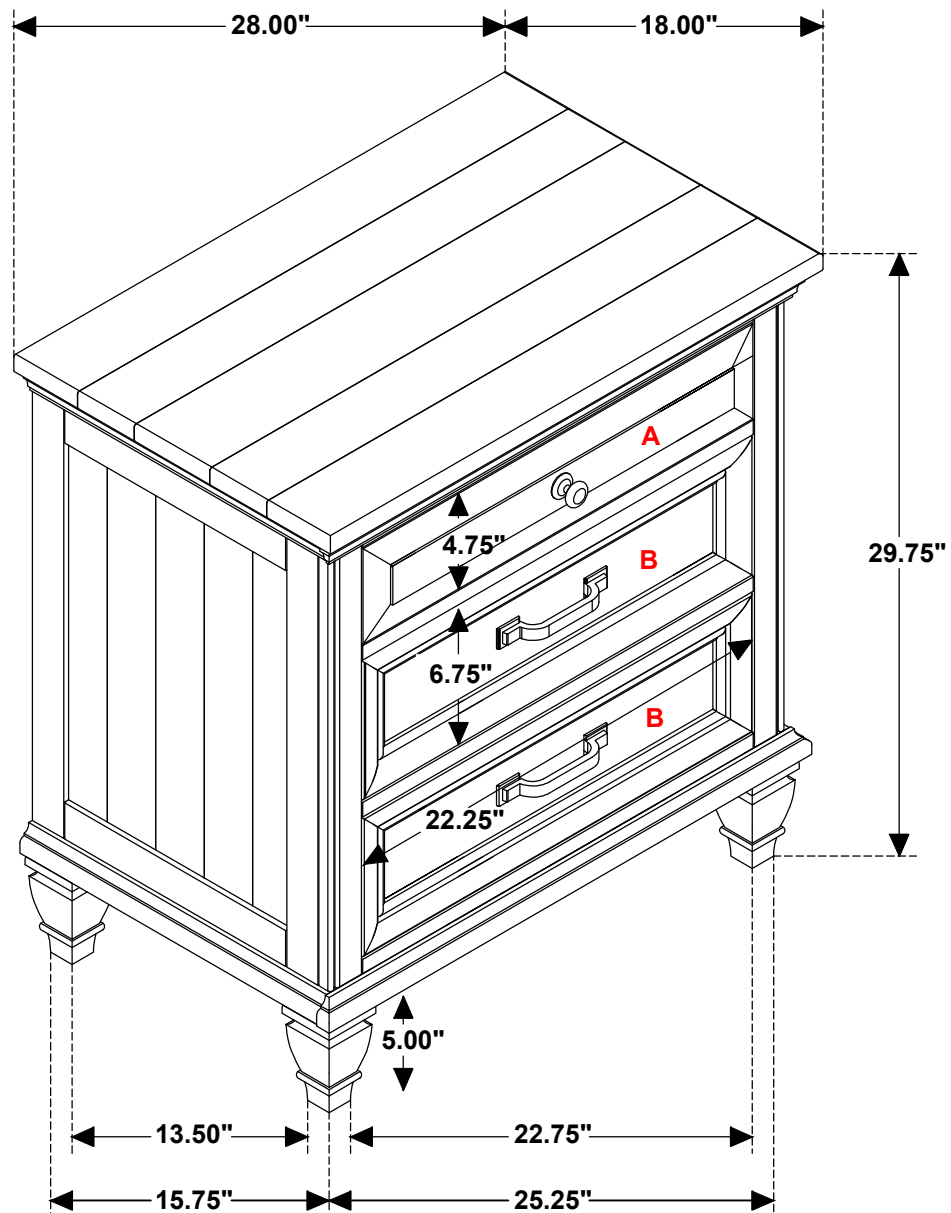

**Note : Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



**223033**  
***Dresser***

ITEM: **223033**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A

DRESSER

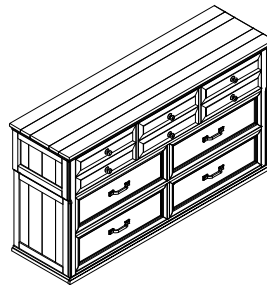

1 PC

B

LEG



4 PCS

C

CENTER SUPPORT LEG  
WITH LEVELER



1 PC

## HARDWARE IDENTIFICATION

1

THREADED BOLT  
(3/8" x 2 3/4" - SR)




4 PCS

ITEM: **223033**

## ASSEMBLY INSTRUCTIONS

### STEP 1

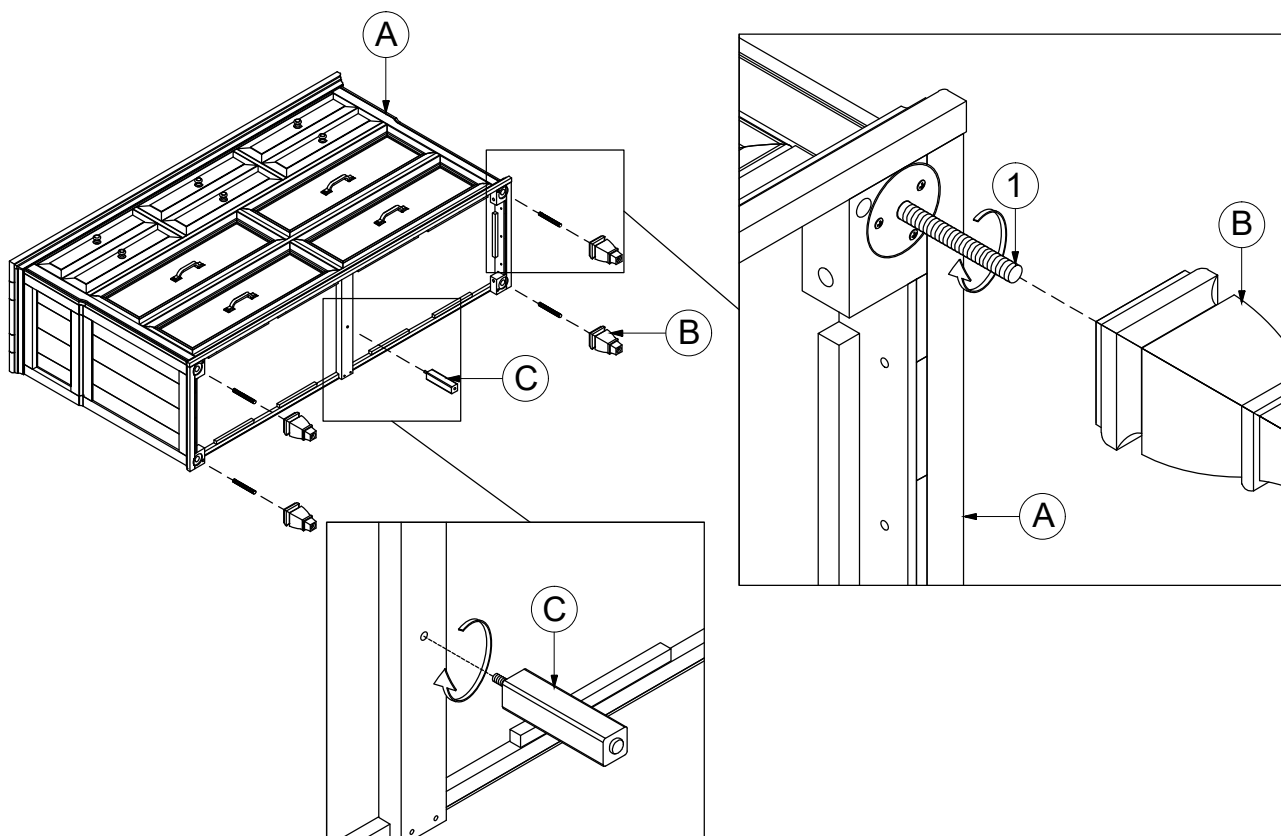

### STEP 2 COMPLETE





ITEM: **223033**

## ANTI-TIPPING INSTALLMENT INSTRUCTION FURNITURE TIPPING RESTRAINT



### WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


### STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

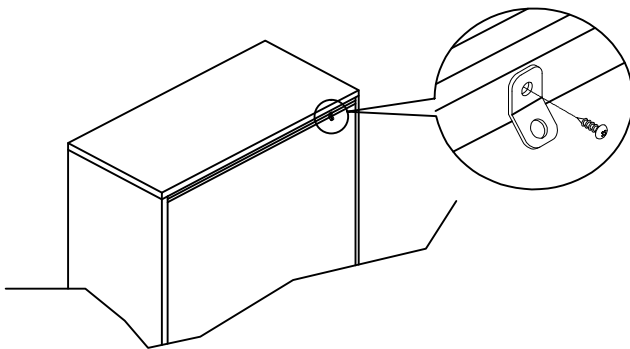


### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

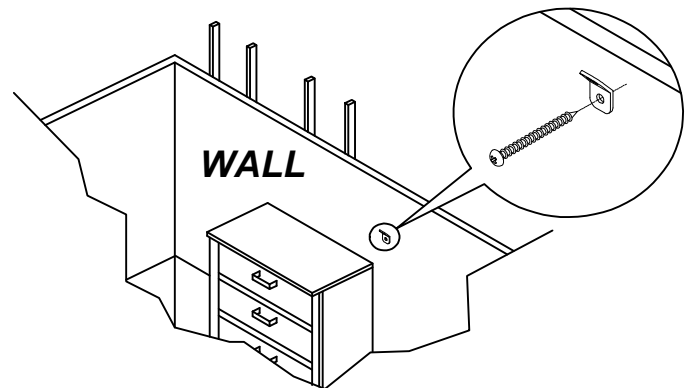

### STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

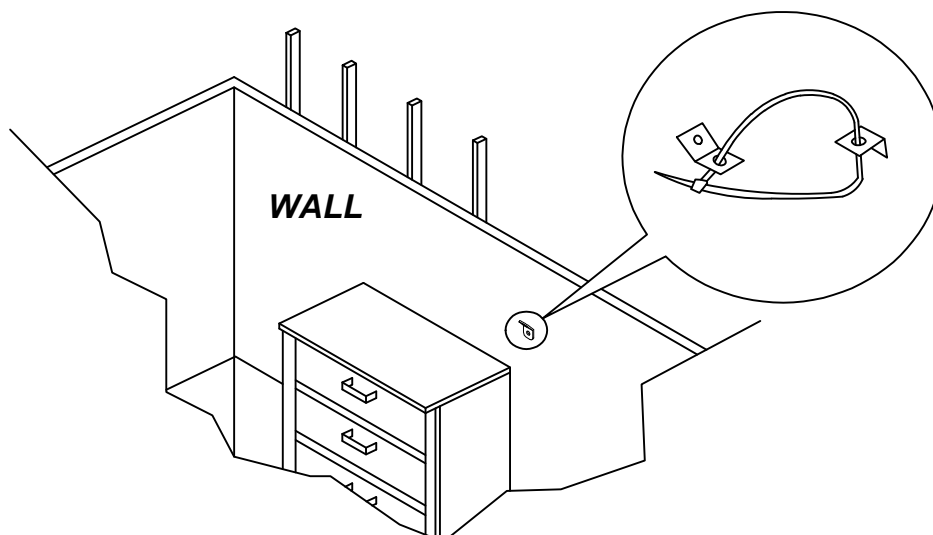


ITEM: **223033**



Inner Size of Drawer A : 18.50"W X 13.00"D X 9.00"H X 0.50"T

Inner Size of Drawer B : 18.50"W X 13.00"D X 3.75"H X 0.50"T

Inner Size of Drawer C : 28.75"W X 13.00"D X 9.00"H X 0.50"T

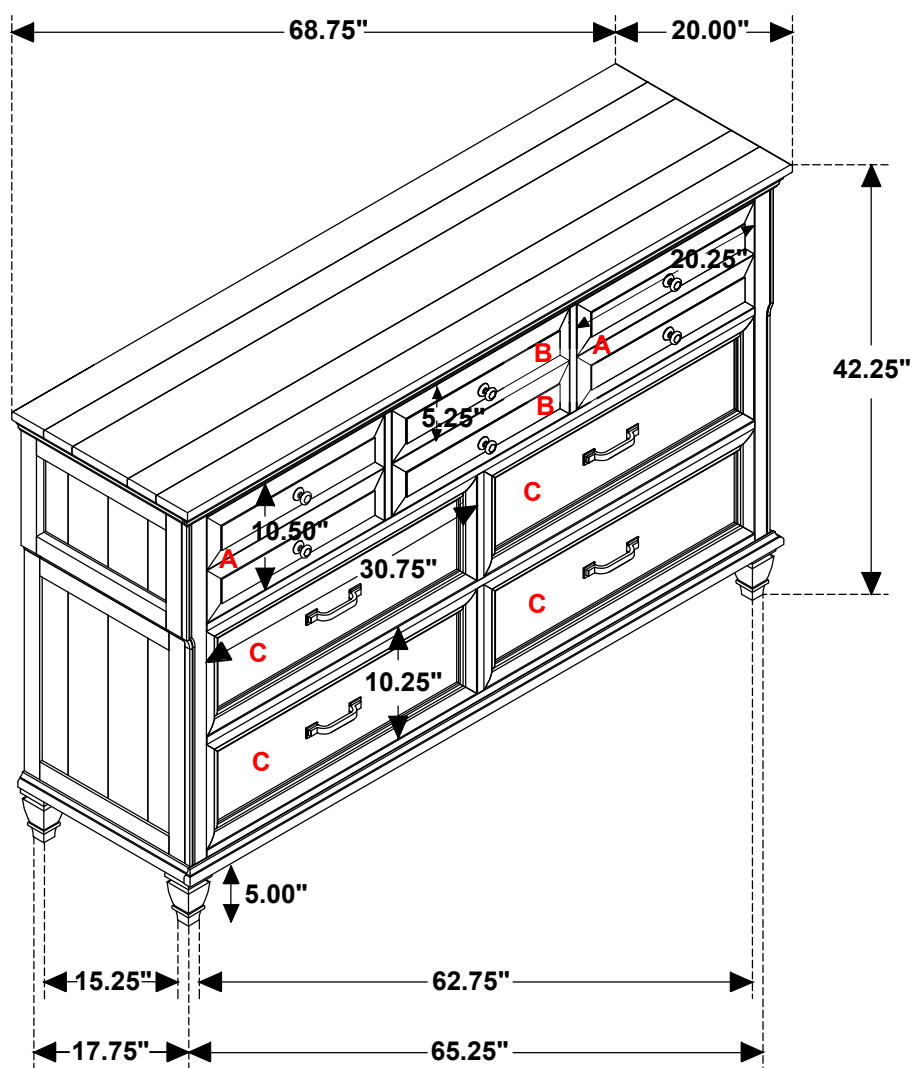

Note : Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223034**  
***Mirror***

ITEM: **223034**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A MIRROR

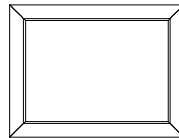

1 PC

B DRESSER  
\*FROM BOX ITEM # 223033

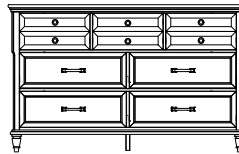

1 PC

C MIRROR SUPPORT  
(PACKED WITH MIRROR)



2 PCS

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40mm - BLK)



8 PCS

2 LOCK WASHER  
(M6 - BLK)



8 PCS

3 FLAT WASHER  
(M6 - BLK)



8 PCS

4 ALLEN WRENCH  
(M4 - BLK)





1 PC


ITEM: **223034**

## ASSEMBLY INSTRUCTIONS

### STEP 1

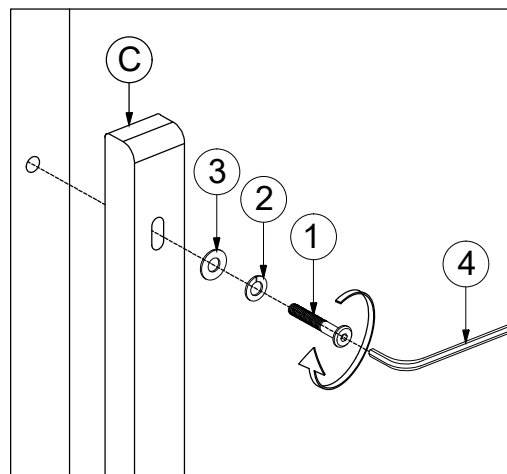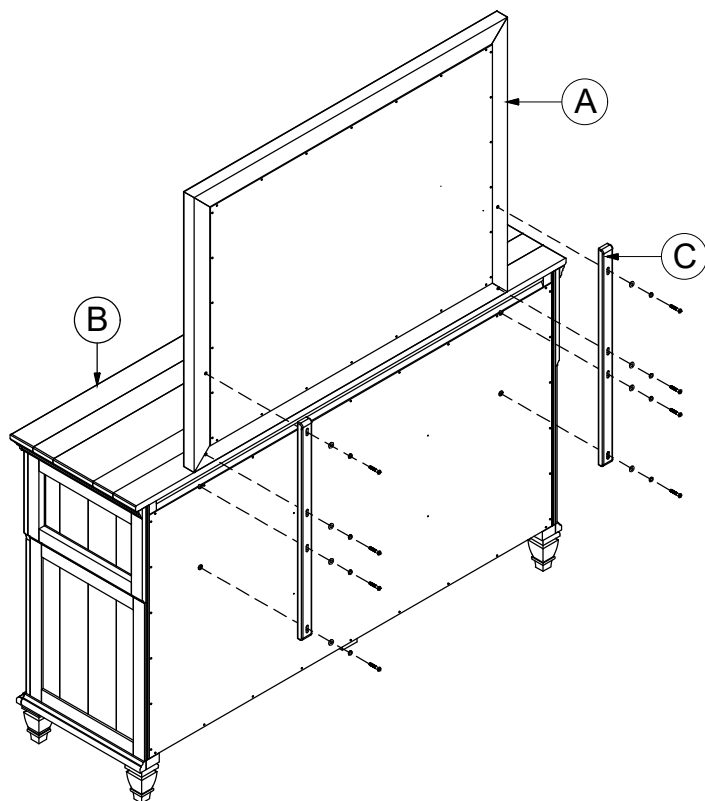

### STEP 2 **COMPLETE**

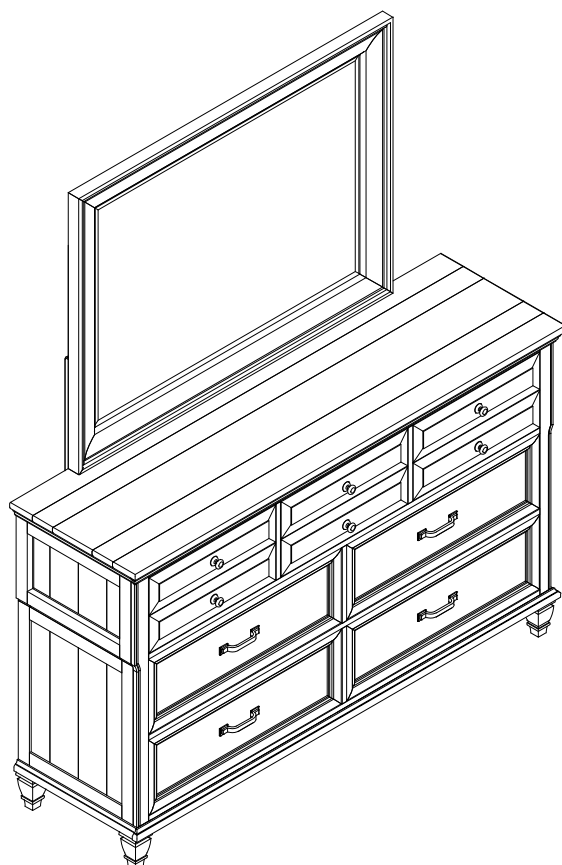

ITEM: **223034**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A MIRROR

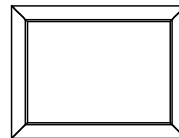

1 PC


D LONG HANGING BAR  
(3mm X 32mm X 540mm - BLK)



2 PCS


## HARDWARE IDENTIFICATION

5 PAN HEAD SCREW  
(8 x 2" - SR)







6 PCS

6 PLASTIC ANCHOR




6 PCS

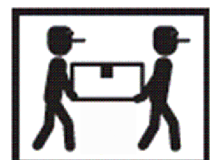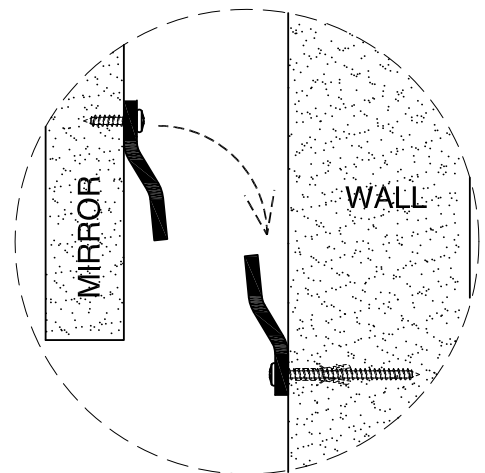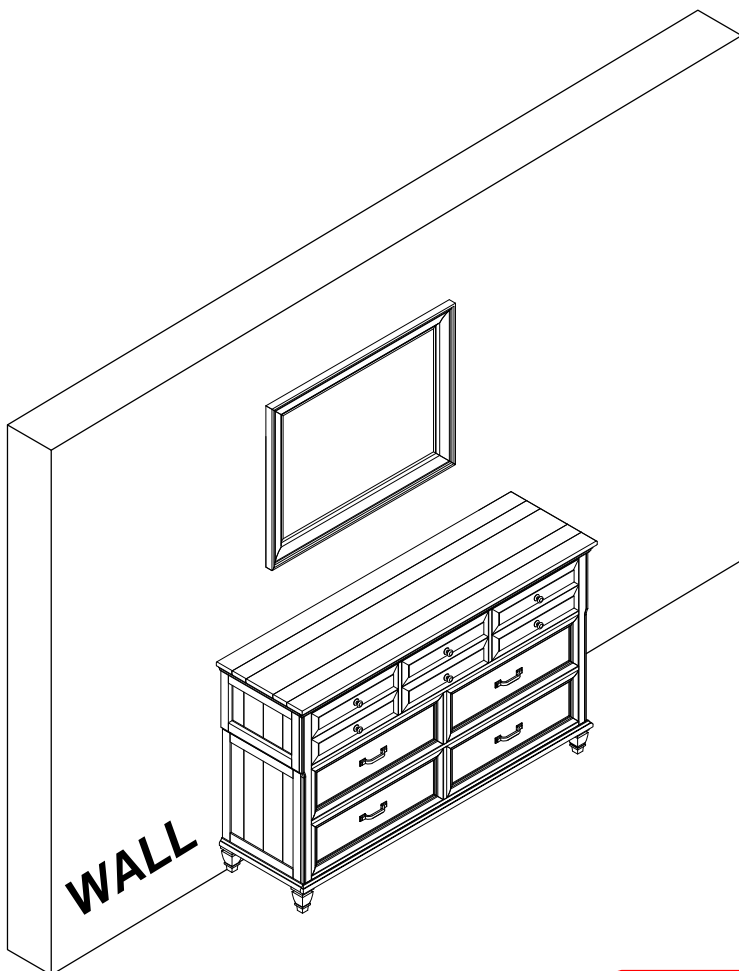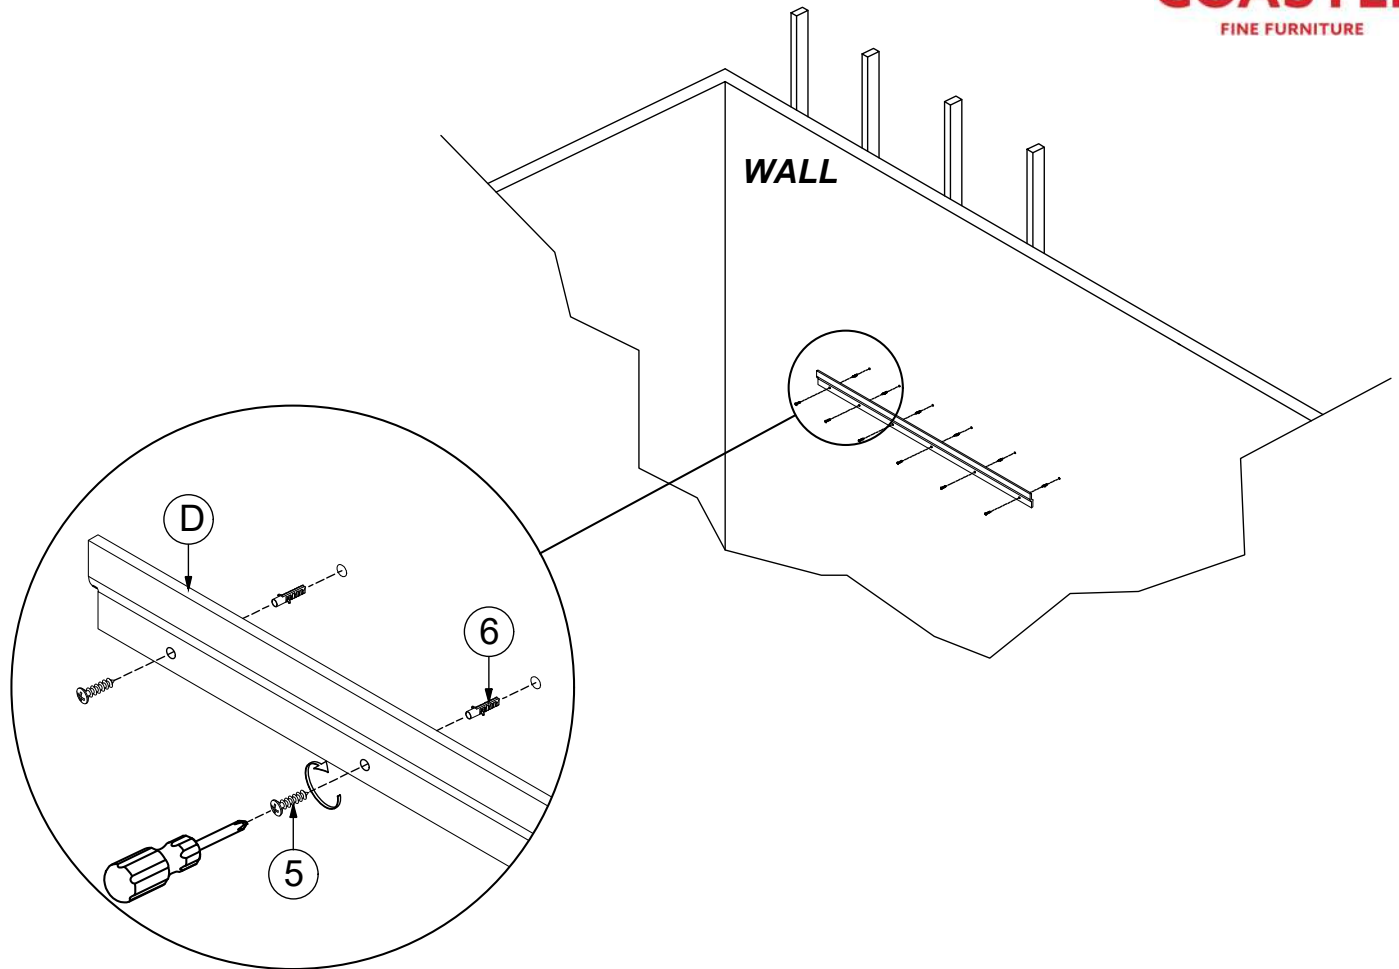

ITEM: **223034**

**COASTER**  
FINE FURNITURE

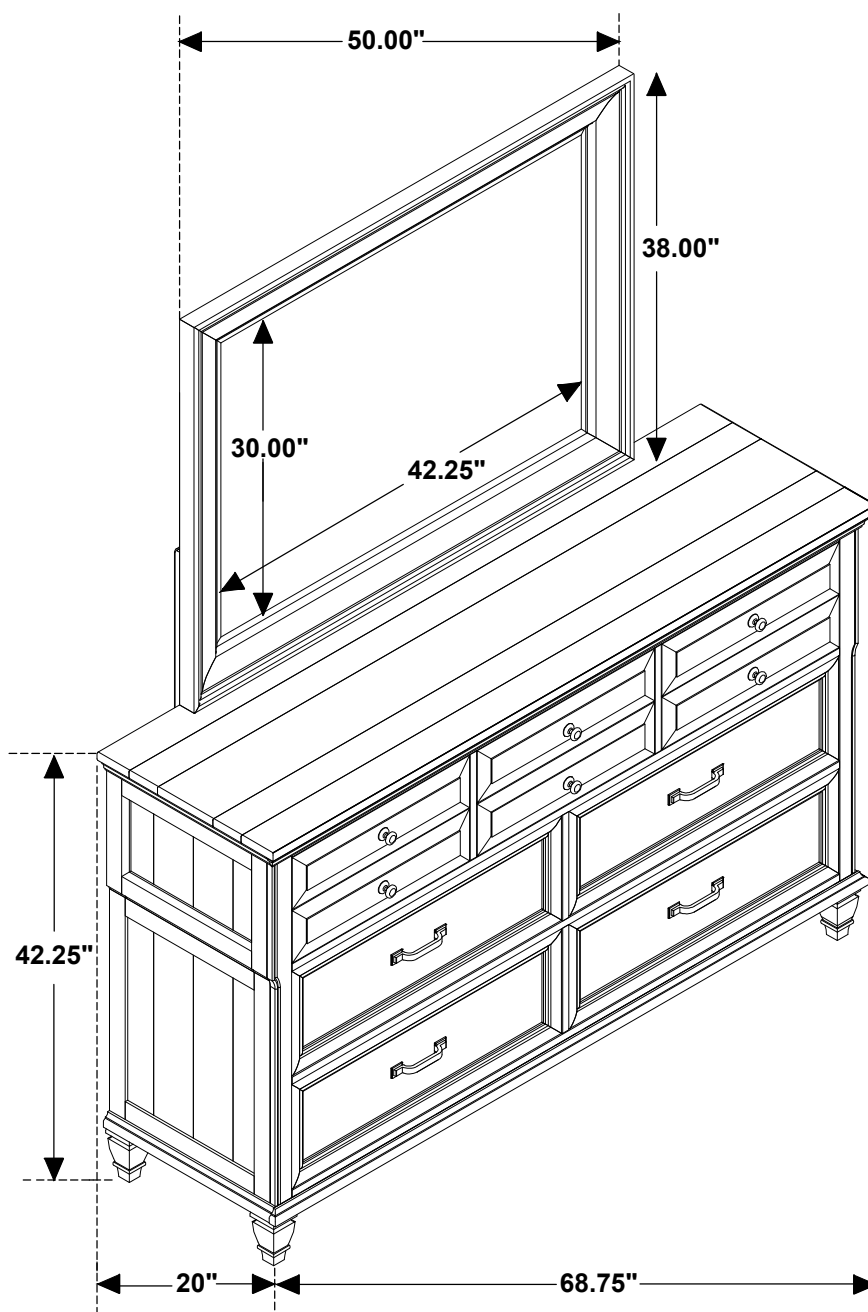

**Note : Dimension tolerance  $\pm 5\%$**



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223035**  
***Chest***

ITEM: **223035**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A CHEST



1 PC

B LEG



4 PCS

## HARDWARE IDENTIFICATION

1  
THREADED BOLT  
(3/8" x 2 3/4" - SR)




4 PCS

ITEM: **223035**

## ASSEMBLY INSTRUCTIONS

### STEP 1

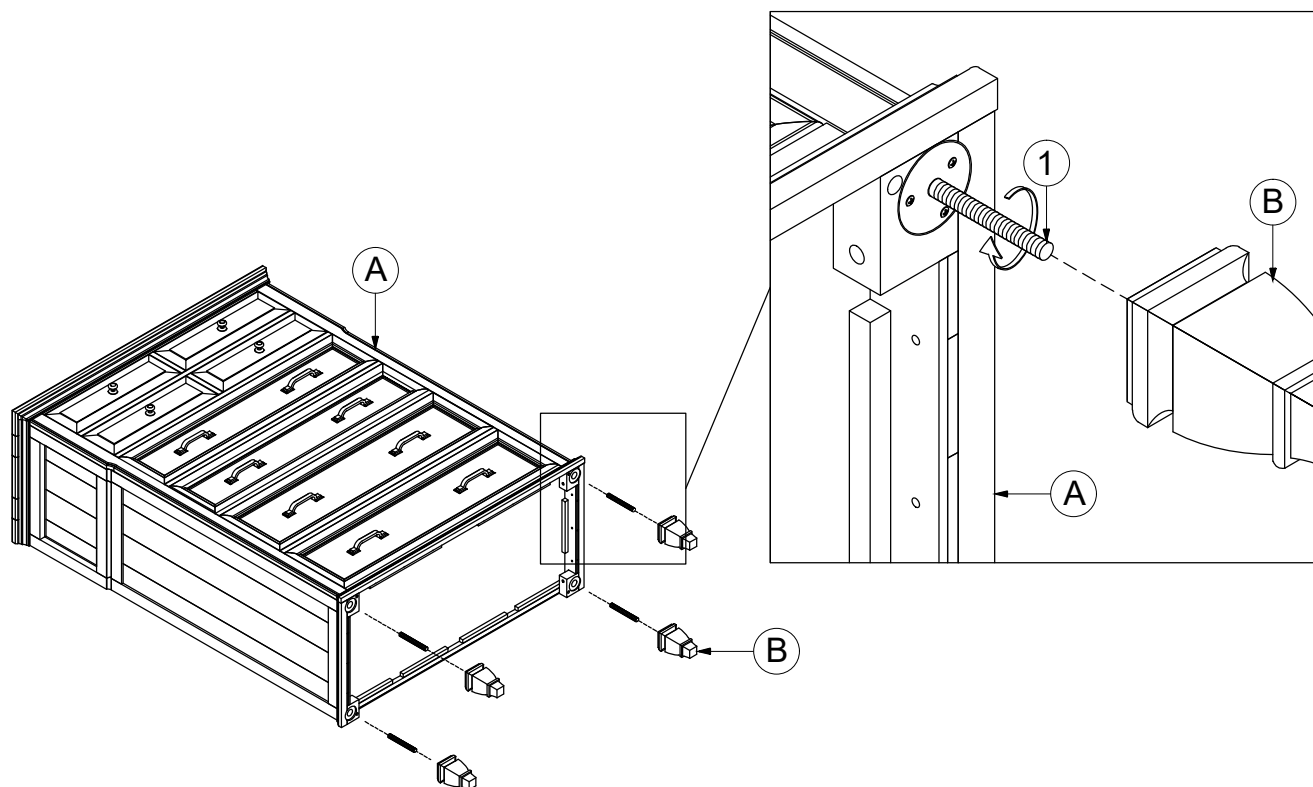

### STEP 2 COMPLETE



ITEM: **223035**

## ANTI-TIPPING INSTALLMENT INSTRUCTION FURNITURE TIPPING RESTRAINT



### WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


### STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

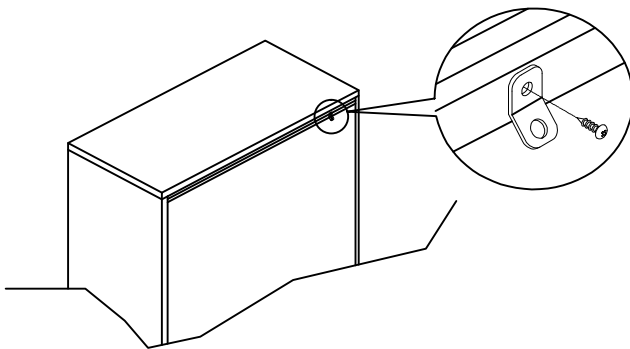



### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

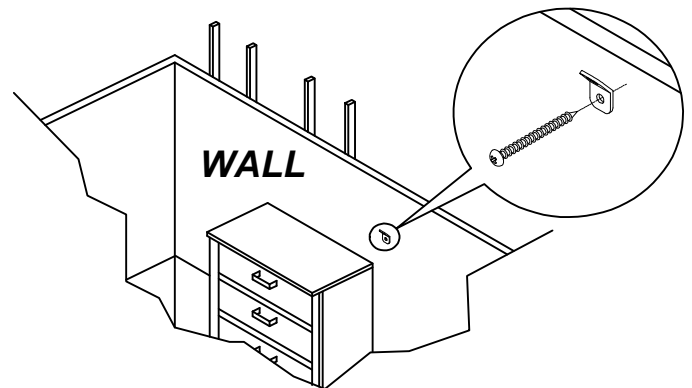

### STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

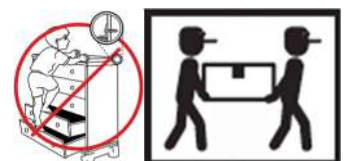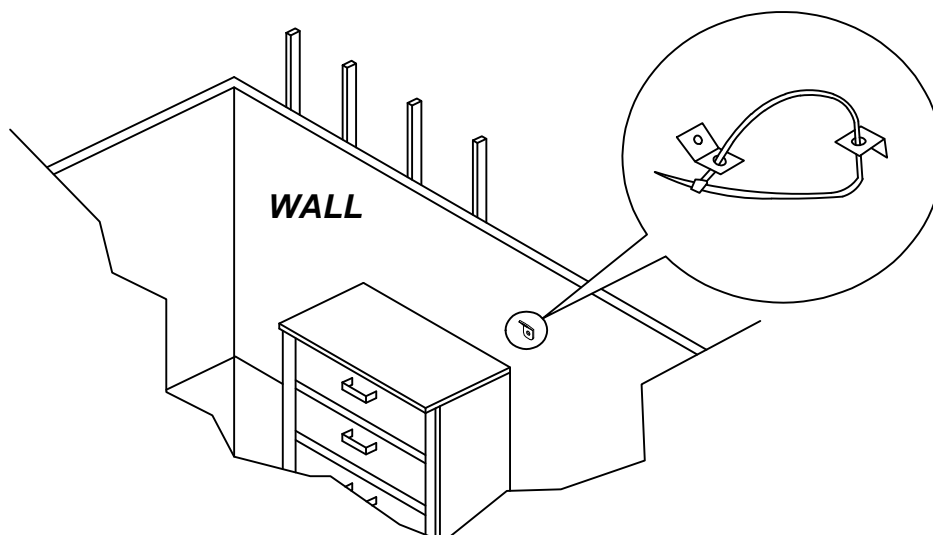


ITEM: **223035**



Inner Size of Drawer A : 16.50"W X 13.00"D X 4.50"H X 0.50"T

Inner Size of Drawer B : 35.75"W X 13.00"D X 7.00"H X 0.50"T

Inner Size of Drawer C : 35.75"W X 13.00"D X 9.25"H X 0.50"T

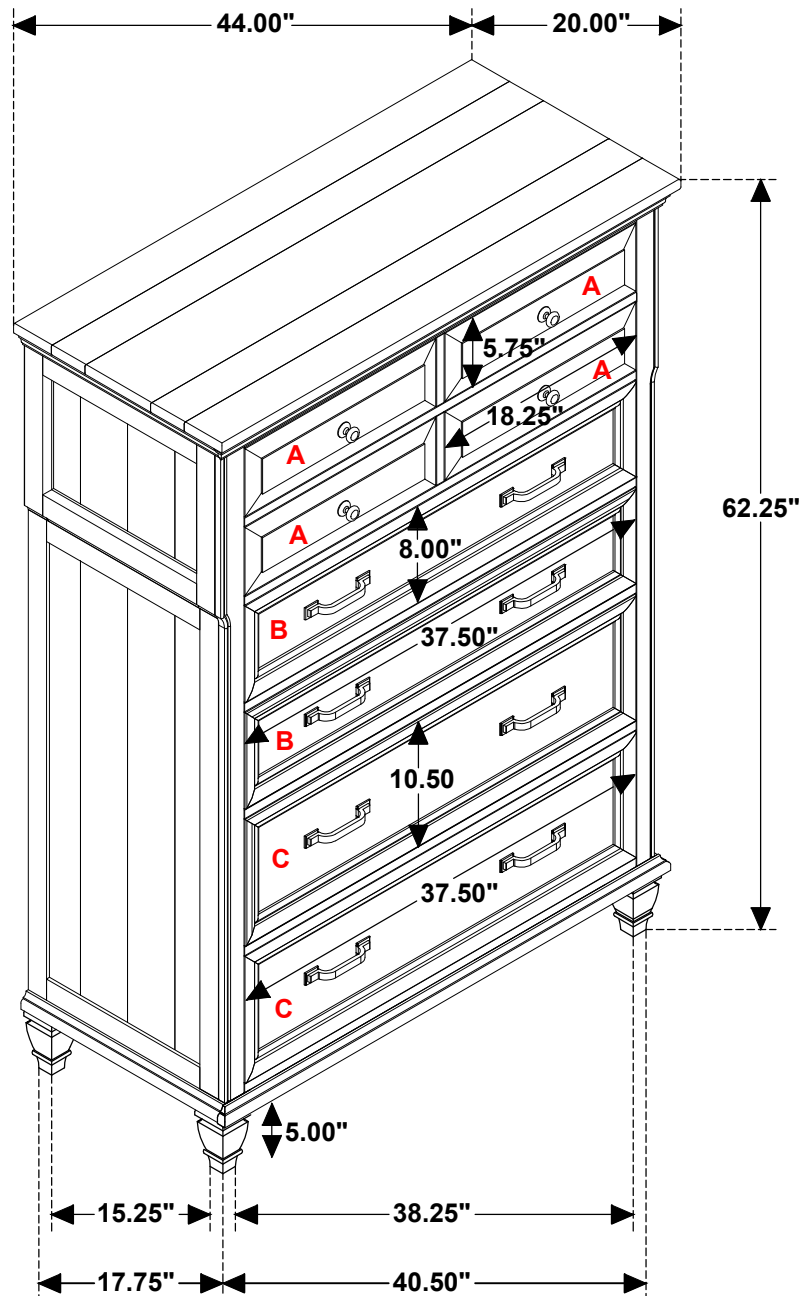

Note : Dimension tolerance  $\pm 5\%$