



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223111KE (B1&B2)**  
***Eastern King Bed***

# ITEM: 223111KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A	HEADBOARD PANEL		1PC	H	LEFT SHELF INSIDE PANEL		1PC
B	HEADBOARD SUPPORT		3PCS	I	SHELF BACK PANEL		2PCS
C	HEADBOARD TOP PANEL		1PC	J	SHELF FRONT PANEL		6PCS
D	DIVIDER PANEL		2PCS	K	SHELF TOP PANEL		4PCS
E	LEFT BOOK CASE SIDE PANEL		1PC	L	SHELF BOTTOM PANEL		2PCS
F	RIGHT SHELF INSIDE PANEL		1PC	M	CASTER WITH SCREW		8SETS
G	RIGHT BOOKCASE SIDE PANEL		1PC	N	FOOTBOARD		1PC

### B2 (BOX 2)

O	BED RAIL		2PCS	Q	BED SLAT SUPPORT WITH LEVELER		8PCS
P	BED SLAT		4PCS				

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

# ITEM: 223111KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223111KE (B1)

1	SHORT BOLT (M8 x 30MM - RBW)		8PCS	6	FLAT HEAD SCREW (M4 x 32MM - RBW)		8PCS
2	MEDIUM BOLT (M6 x 35MM - RBW)		56PCS	7	CAM BOLT (7MMx 24MM - RBW)		4PCS
3	LONG BOLT (M6 x 40MM - RBW)		26PCS	8	CAM LOCK (15MM x 9.5MM - RBW)		4PCS
4	LOCK WASHER (1/4" x 12 Ø - RBW)		74PCS	9	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC
5	FLAT WASHER (1/4" x 19 Ø - RBW)		74PCS	10	BIG ALLEN WRENCH (M5 x 65MM - BLK)		1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **223111KE (B1&B2)**

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

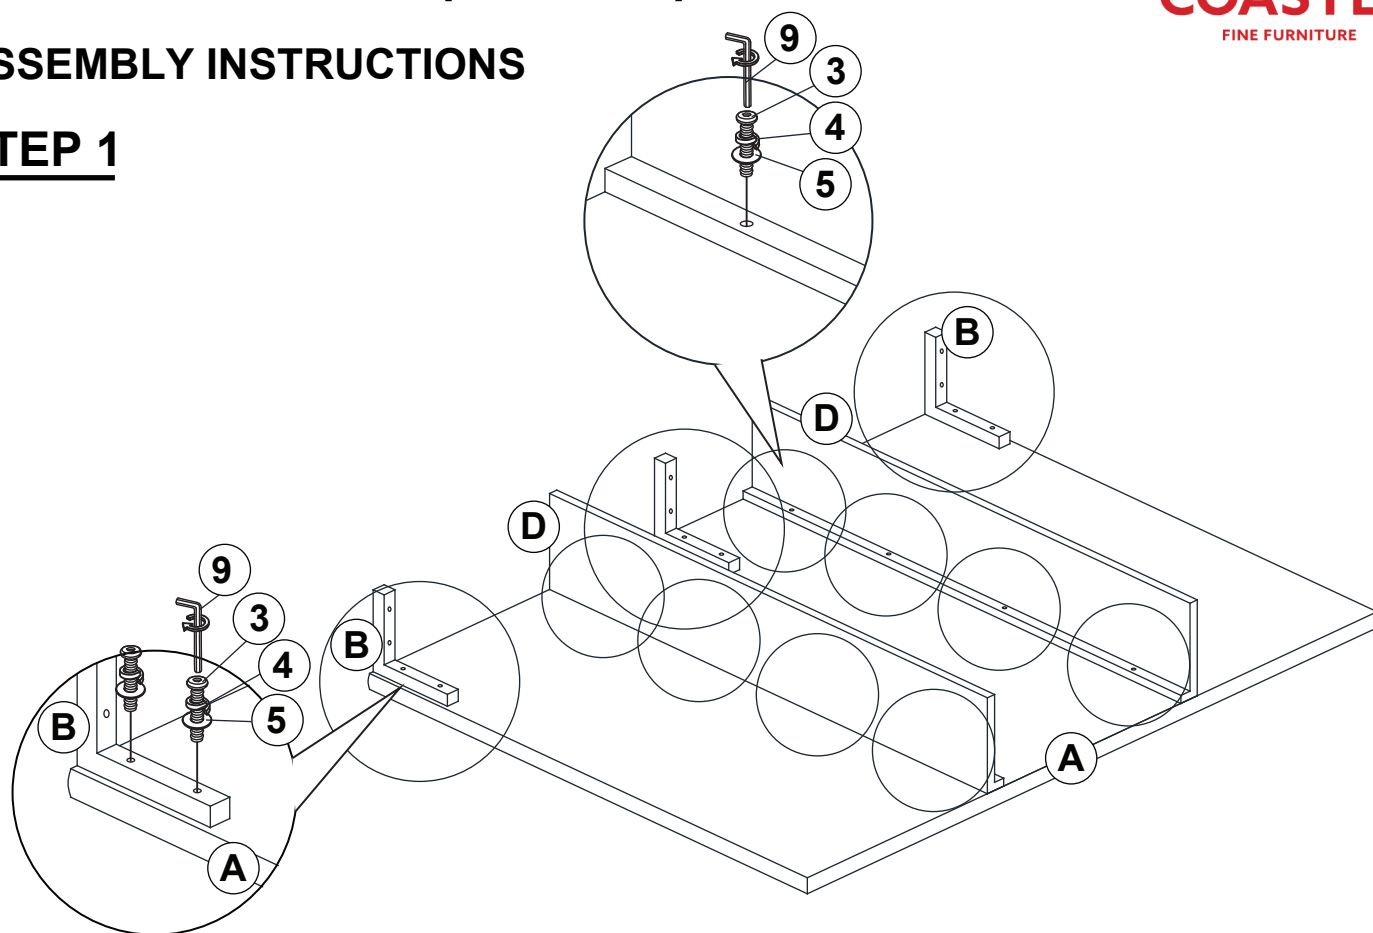


**STEP 2**

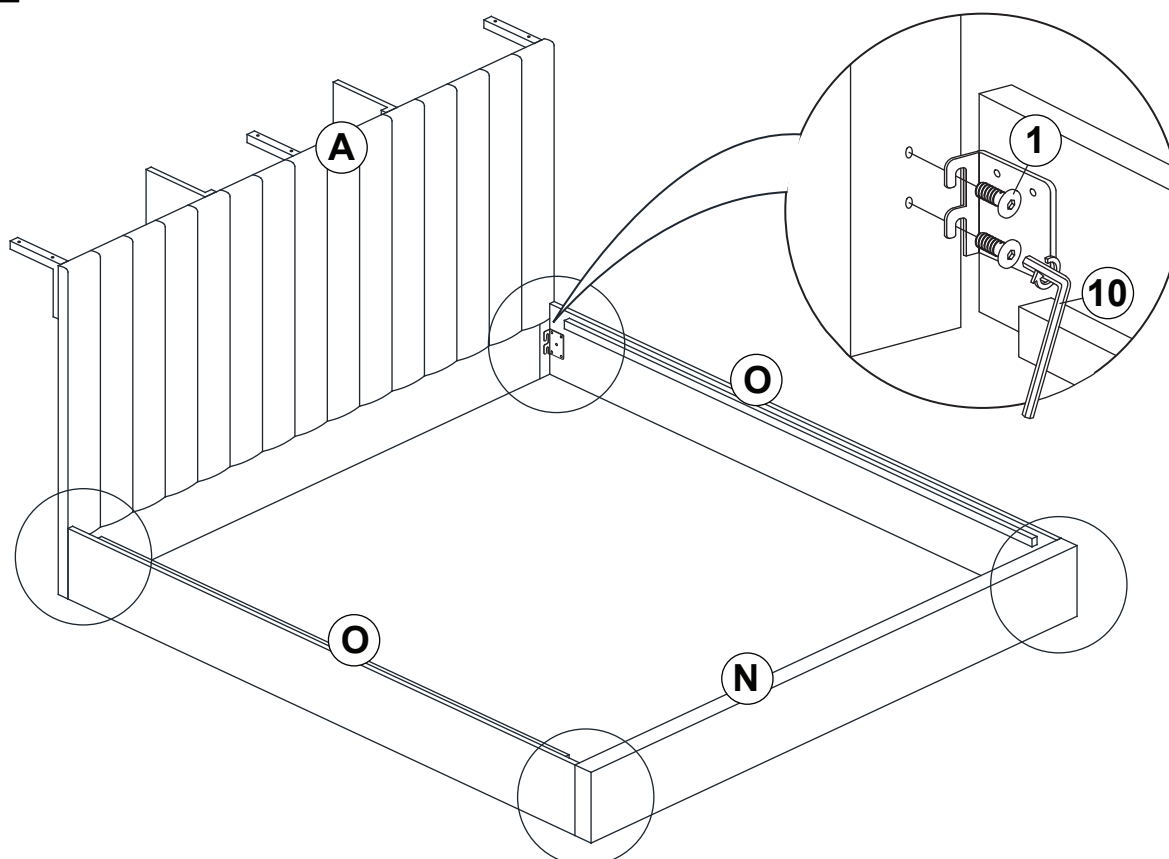


ITEM: **223111KE (B1&B2)**

**ASSEMBLY INSTRUCTIONS**

**STEP 3**

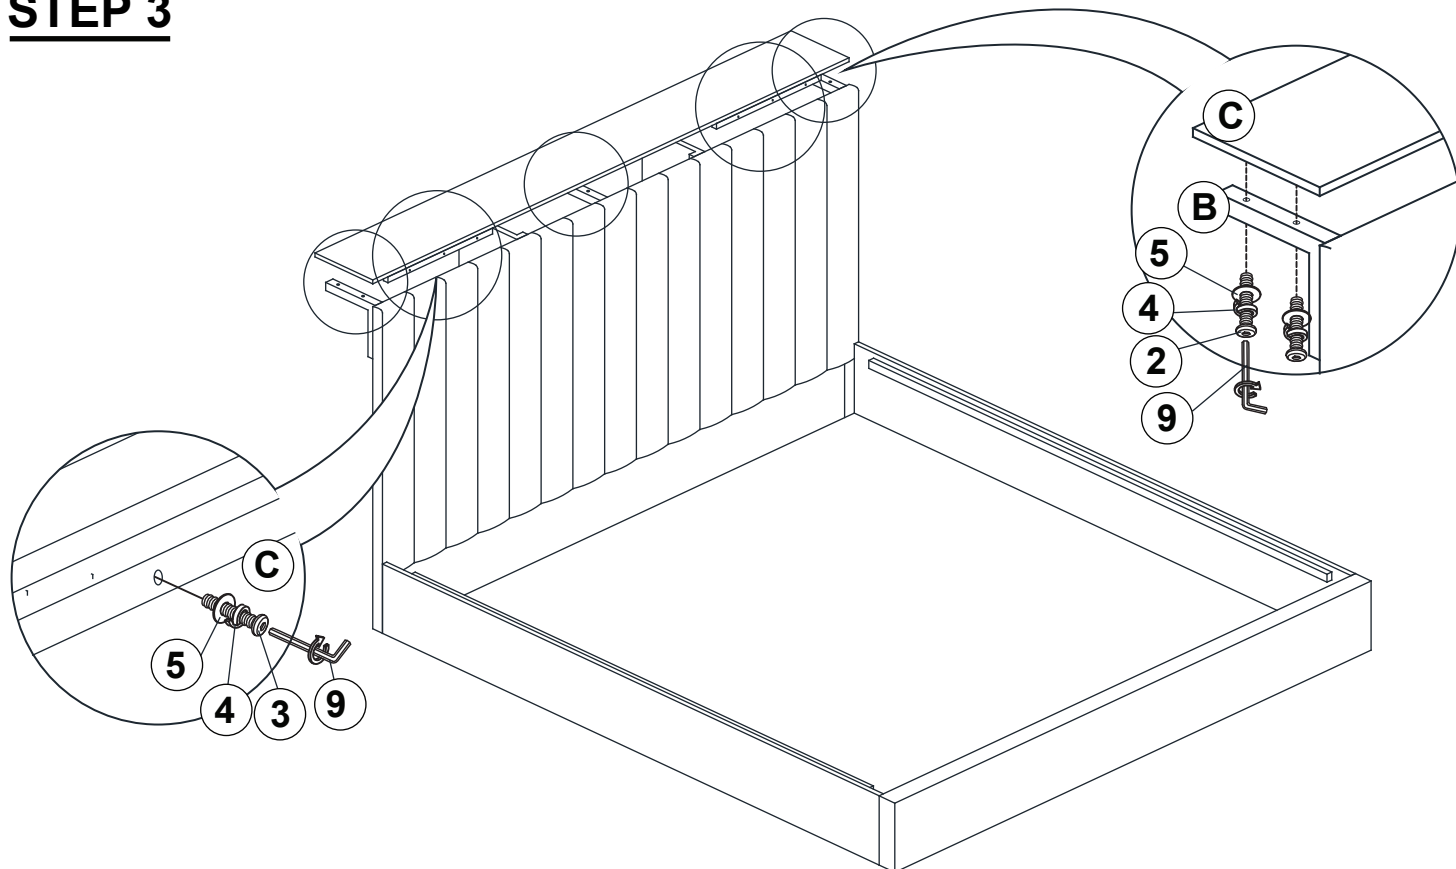


**STEP 4**

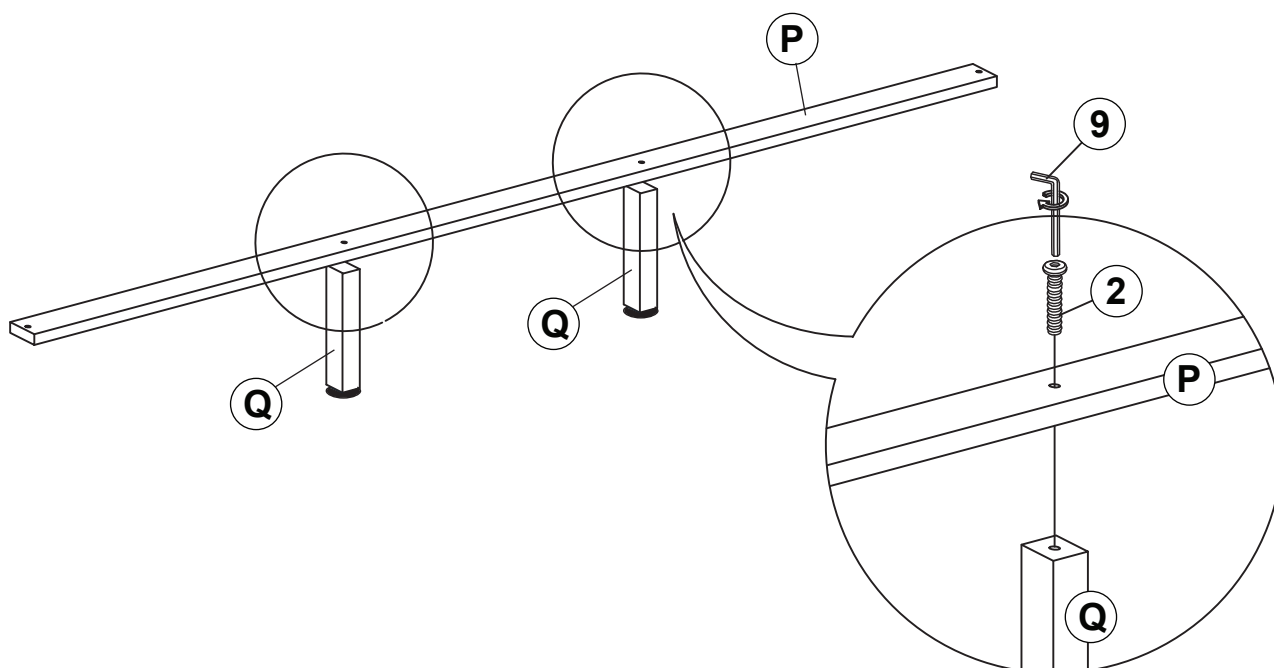


ITEM: **223111KE (B1&B2)**

## ASSEMBLY INSTRUCTIONS

### STEP 5

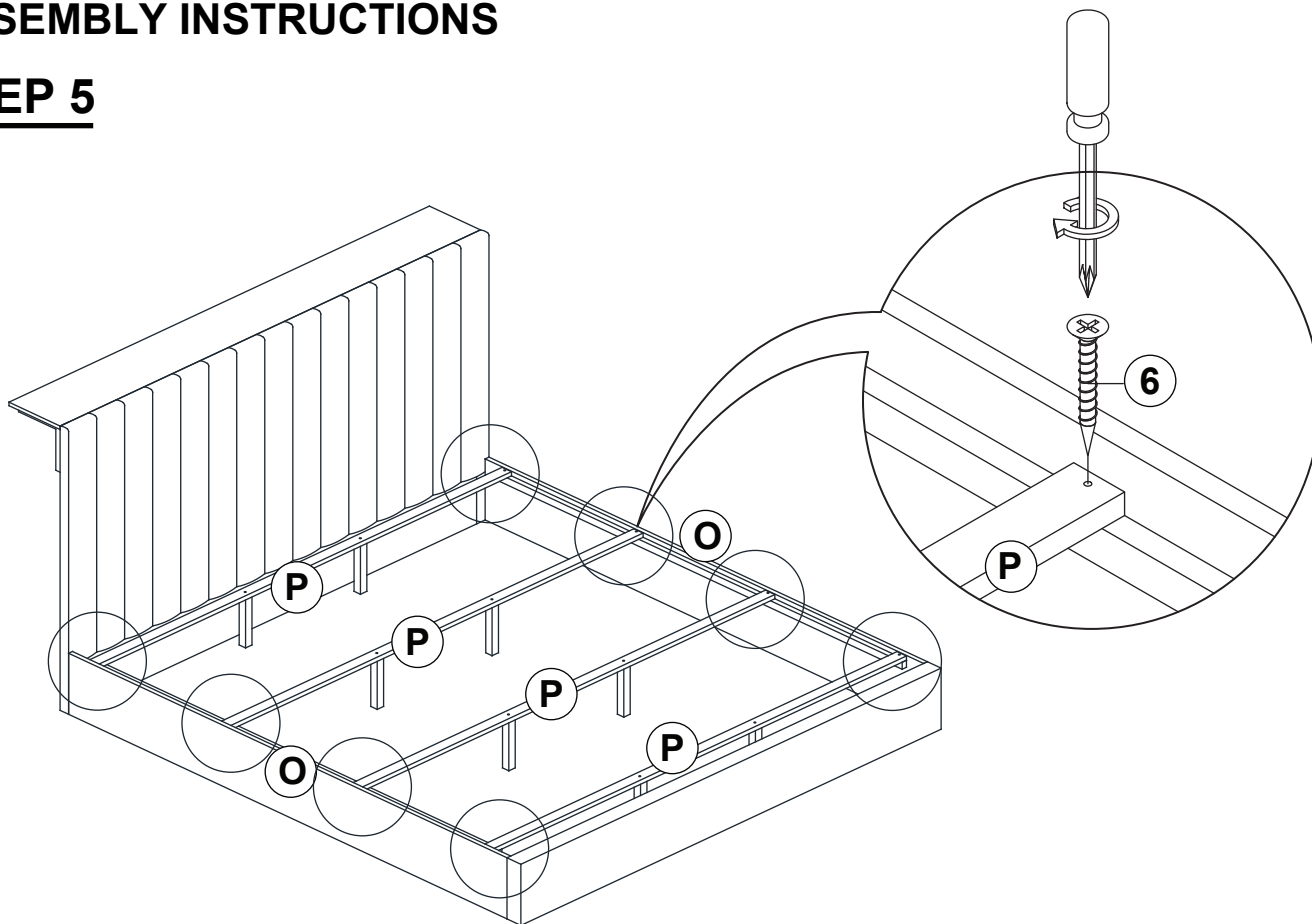


### STEP 6

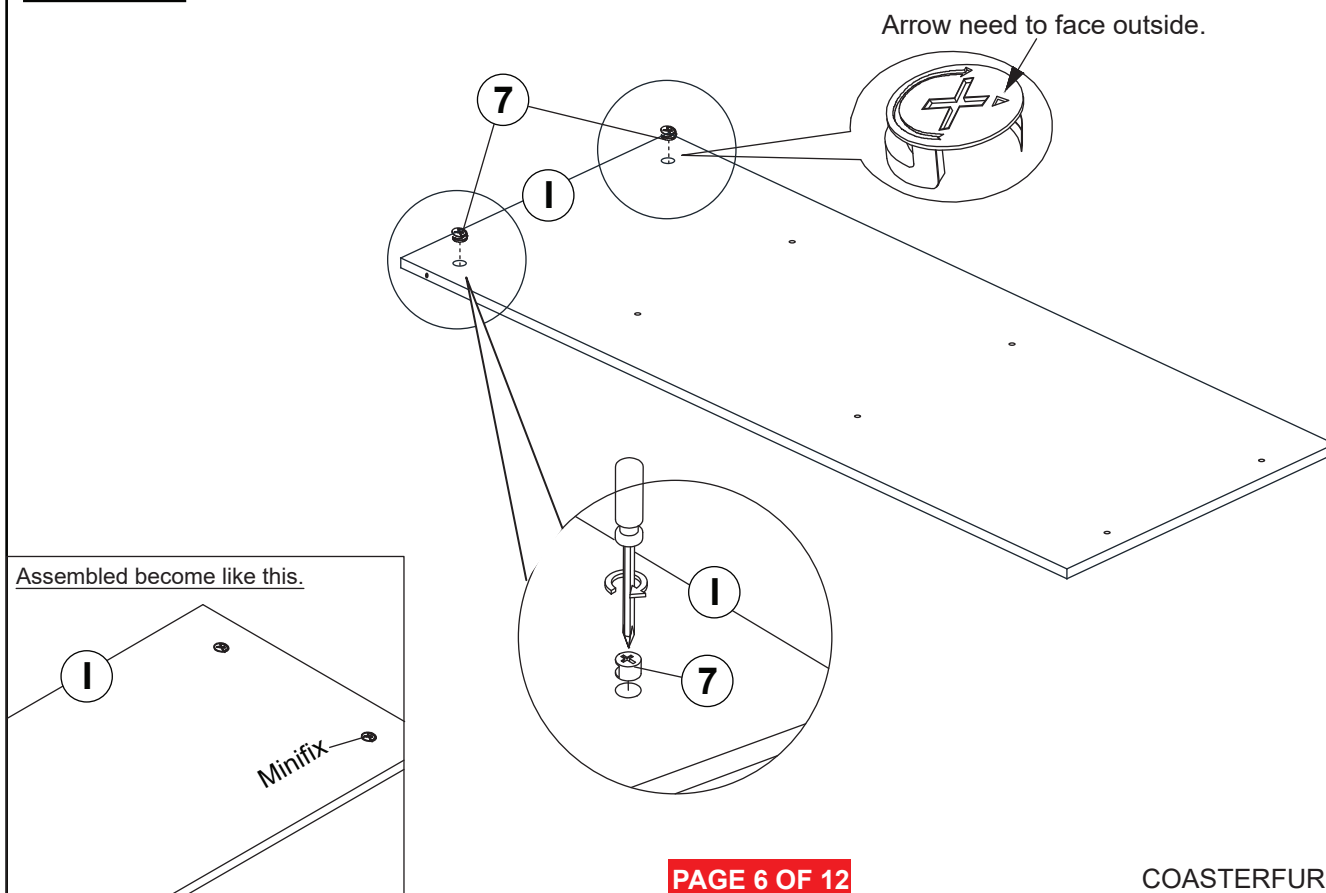


ITEM: **223111KE (B1&B2)**

## ASSEMBLY INSTRUCTIONS


### STEP 7

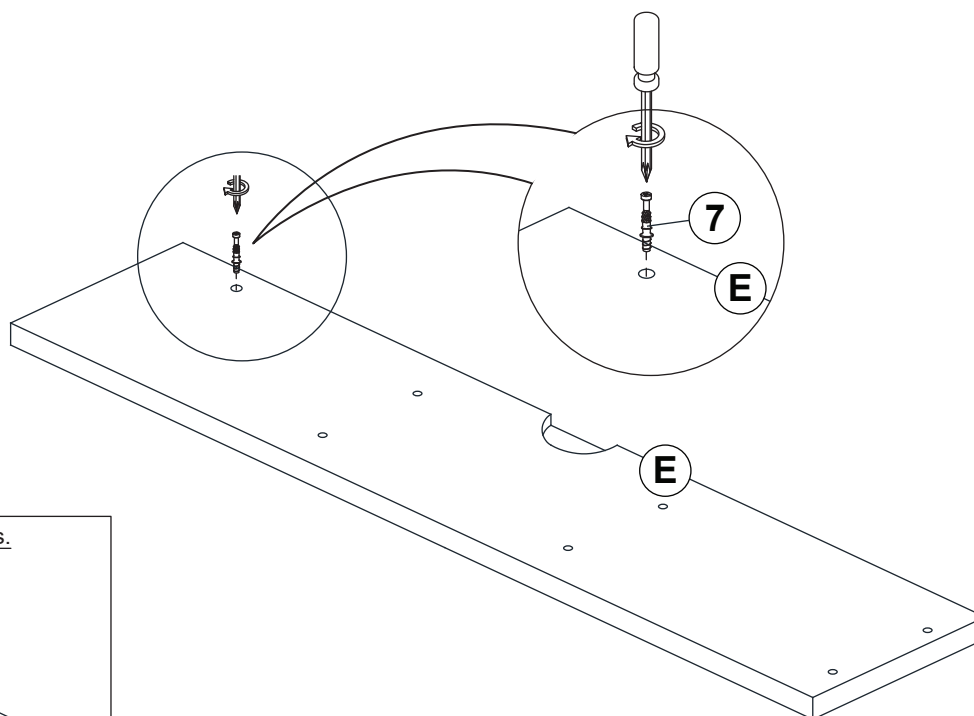


Assembled become like this.

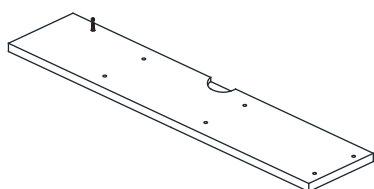

### STEP 8

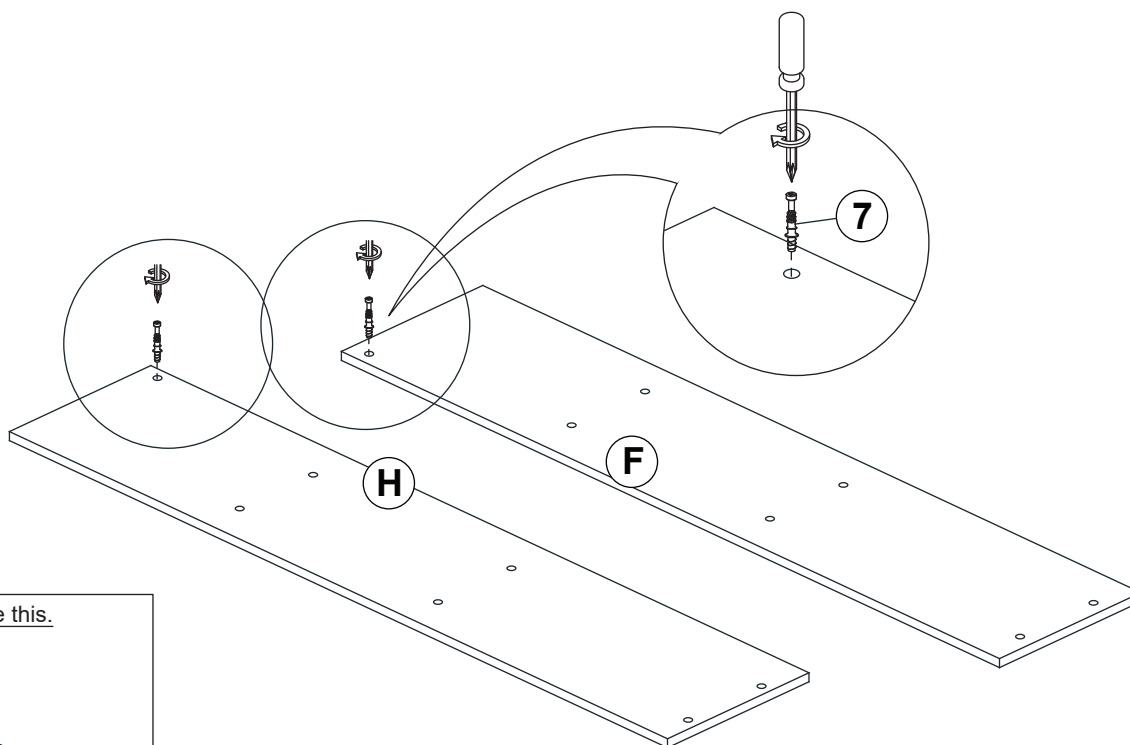


Assembled become like this.

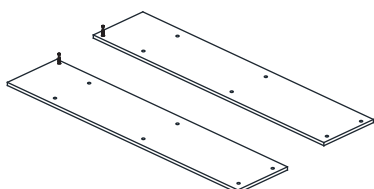


ITEM: **223111KE (B1&B2)**

**ASSEMBLY INSTRUCTIONS**


**STEP 9**

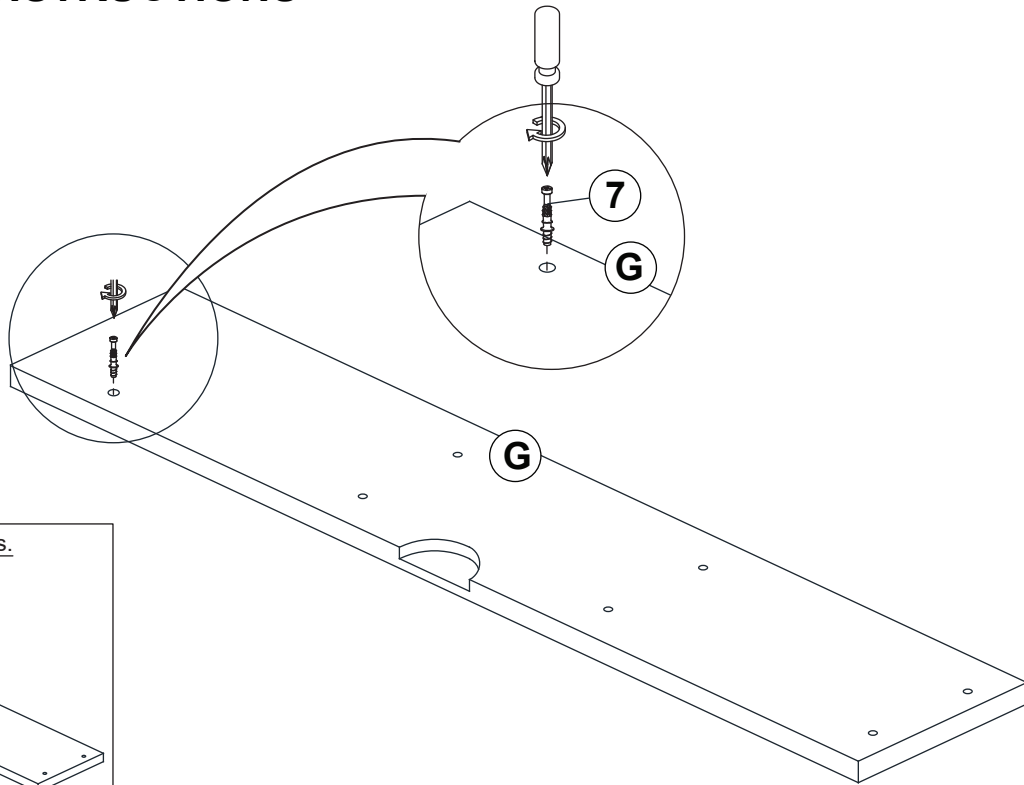

Assembled become like this.

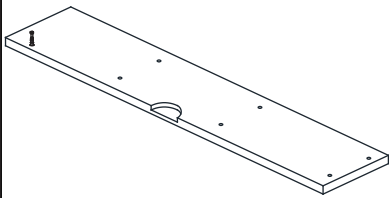

**STEP 10**

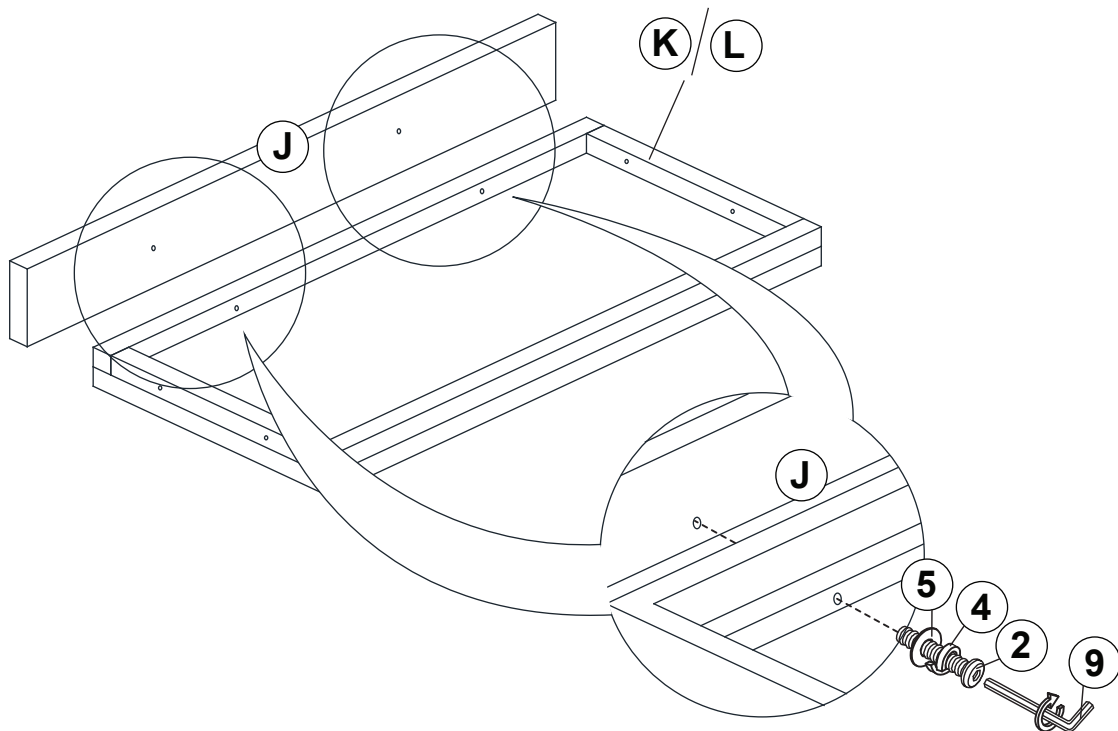





ITEM: **223111KE (B1&B2)**

**ASSEMBLY INSTRUCTIONS**

**STEP 11**

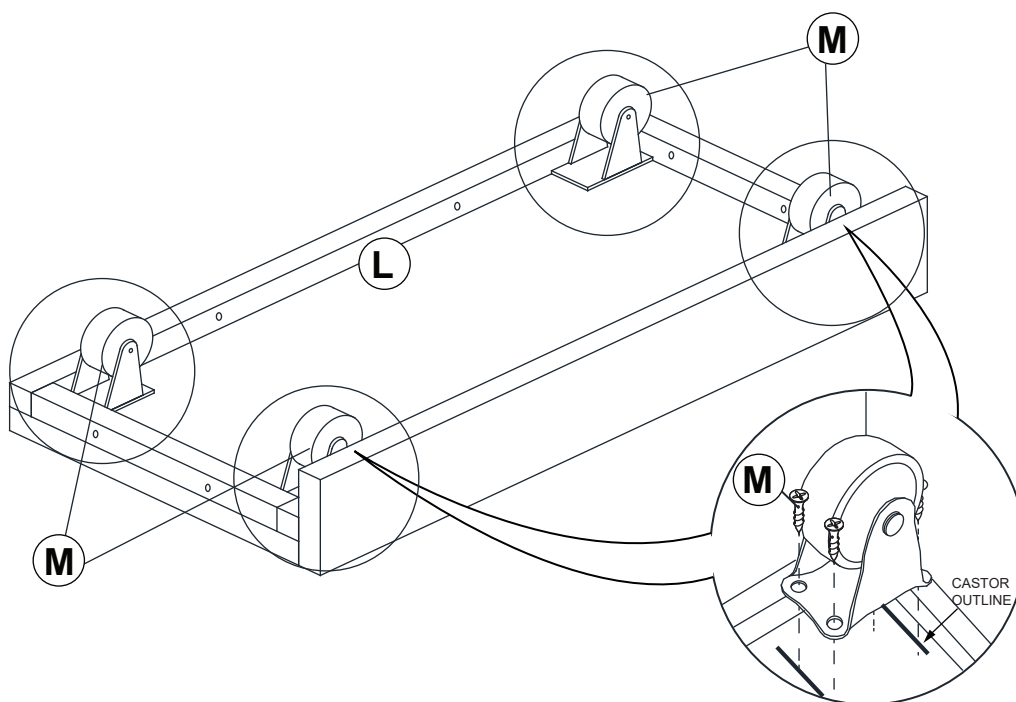

**STEP 12**

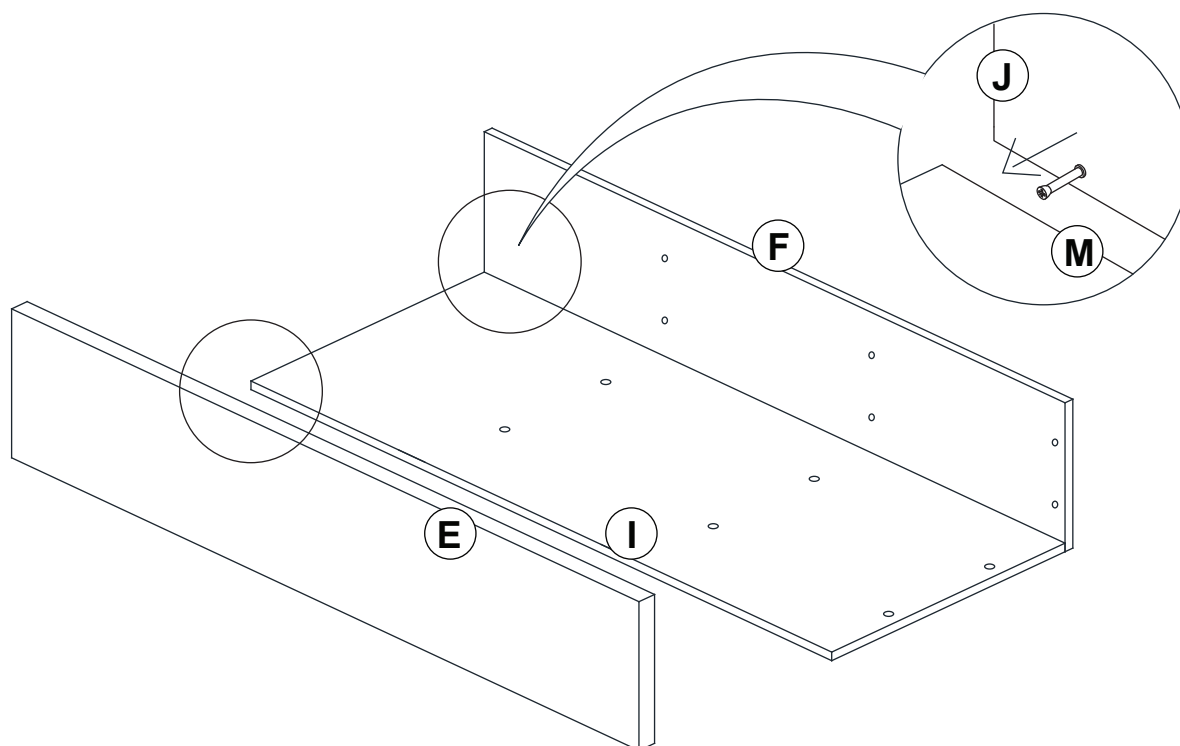


ITEM: **223111KE (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 13

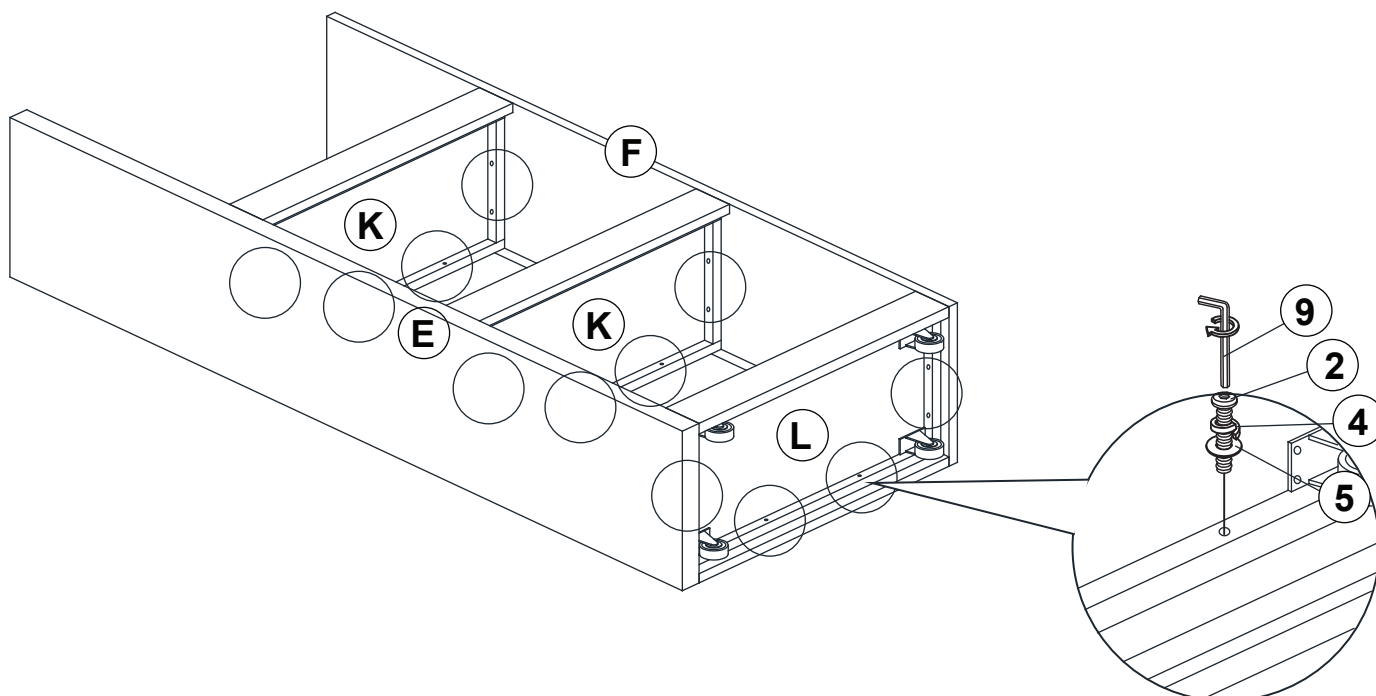


### STEP 14

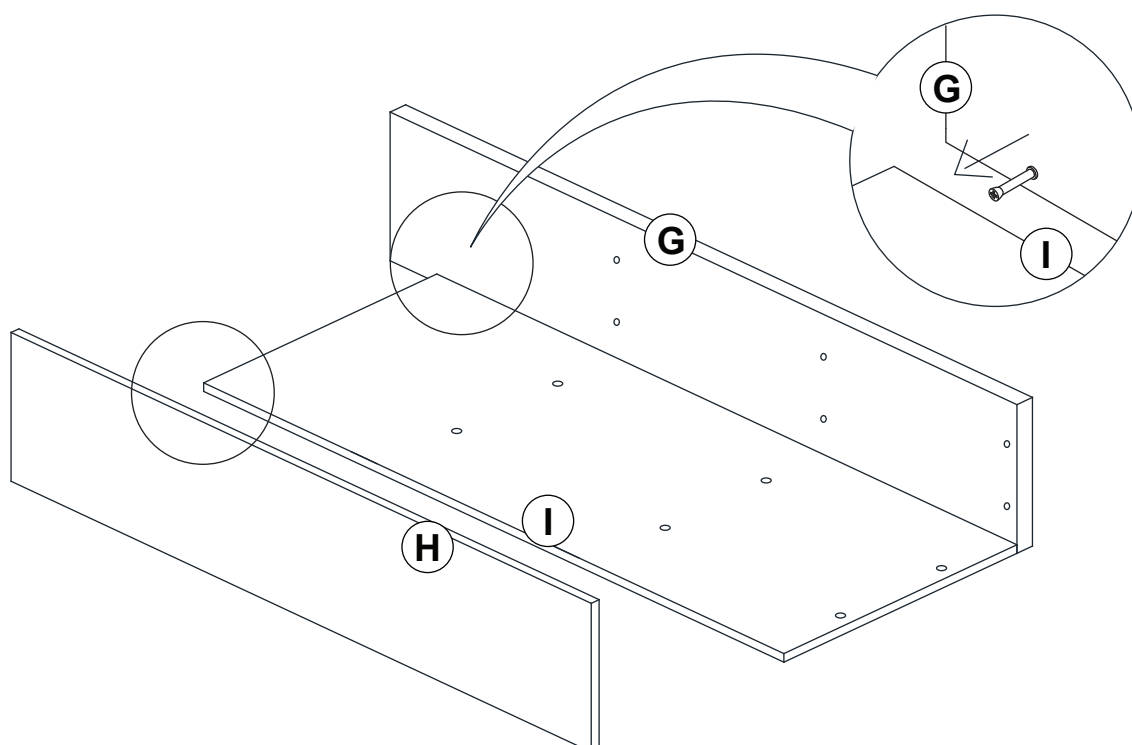


ITEM: **223111KE (B1&B2)**

**ASSEMBLY INSTRUCTIONS**

**STEP 15**

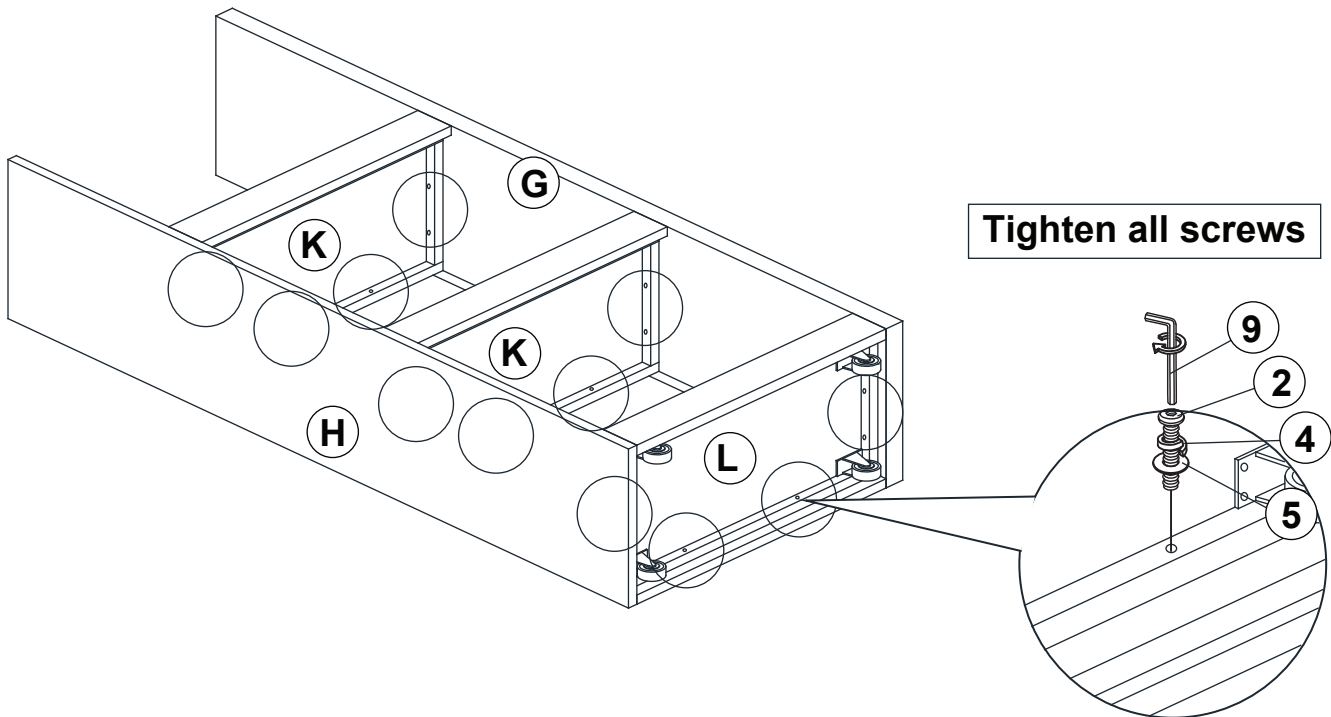

**STEP 16**

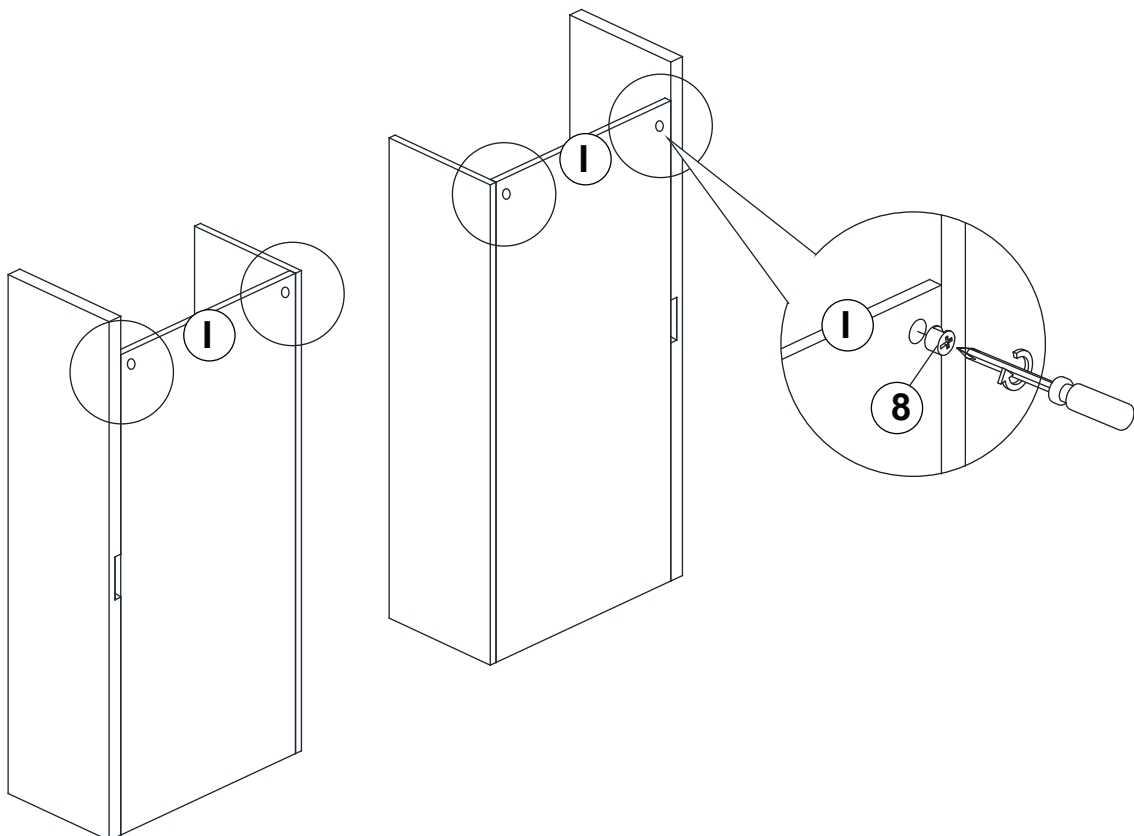


ITEM: **223111KE (B1&B2)**



## ASSEMBLY INSTRUCTIONS

### STEP 17


### COMPLETE

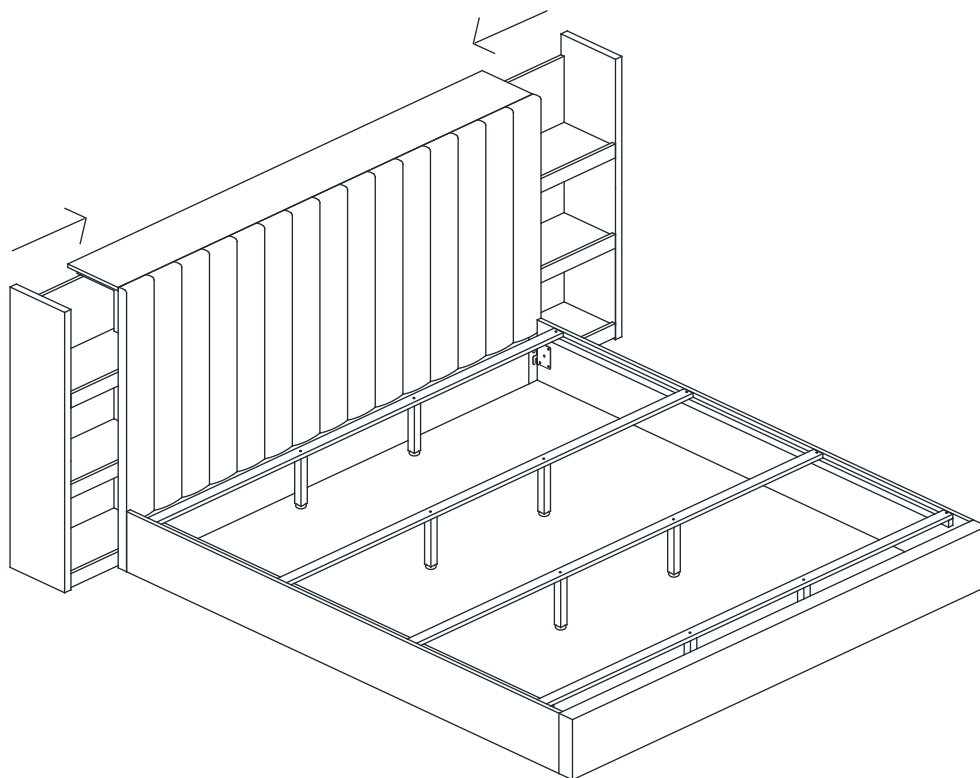

ITEM: **223111KE (B1&B2)**



Inner Size : 76.50"W x 80.00"D

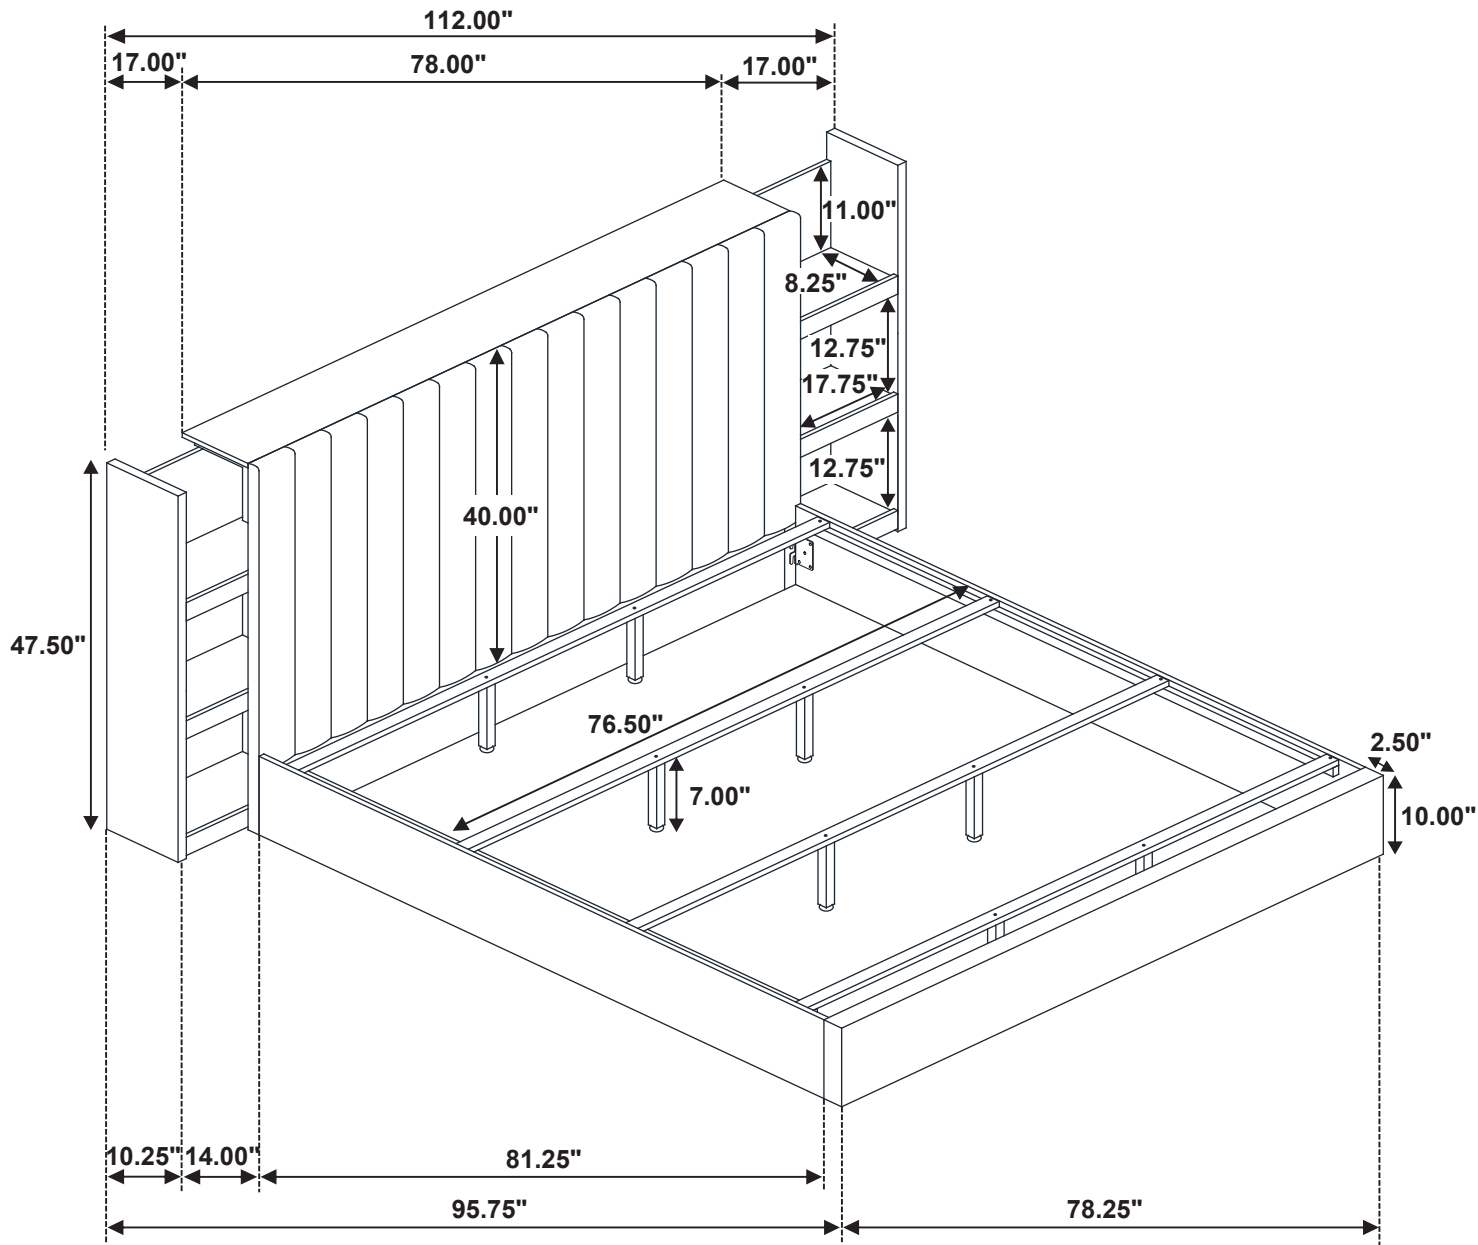

Note : Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223112**  
**Nightstand**

ITEM: **223112**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A NIGHTSTAND

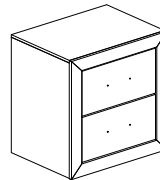

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS


D CASTER WITH SCREW



4SETS

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL  
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223112**


## ASSEMBLY INSTRUCTIONS




### STEP 1

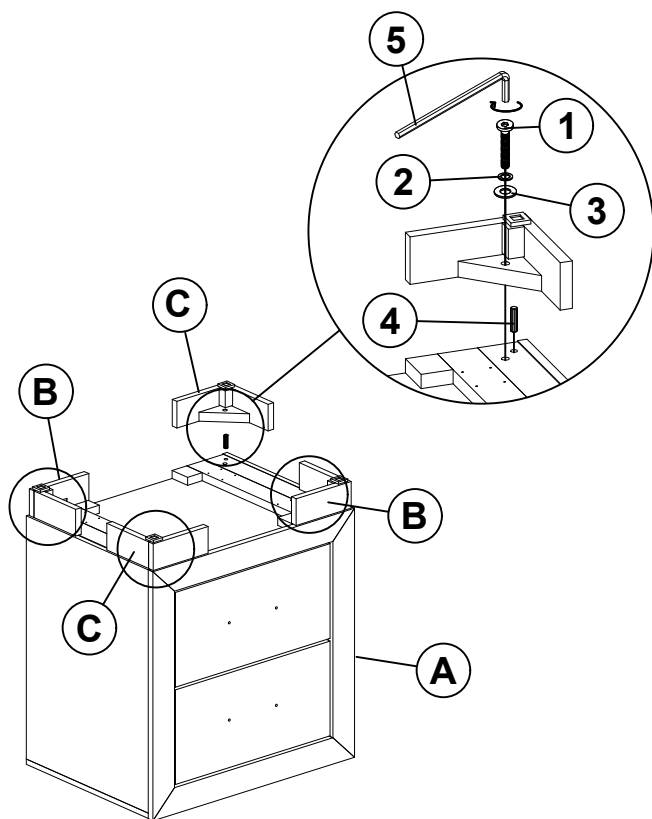


### STEP 2

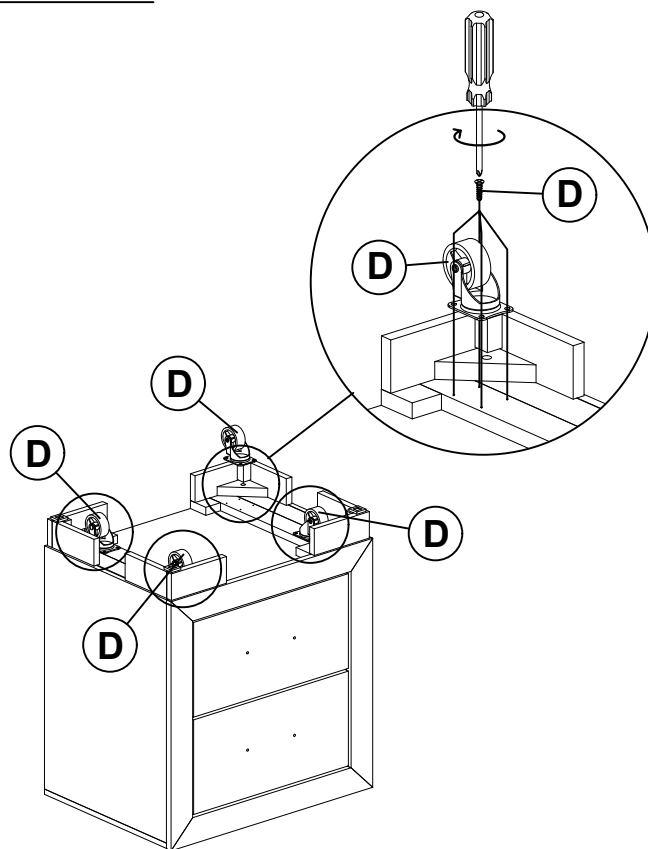

### STEP 3

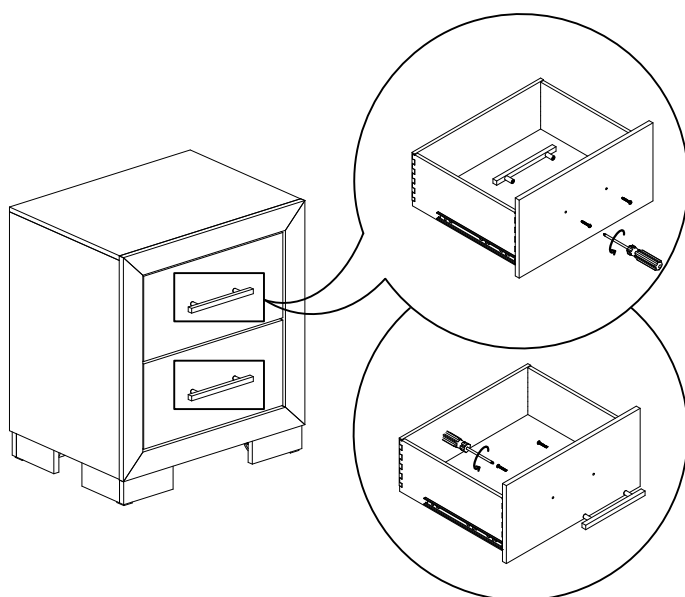

### STEP 4 **COMPLETE**

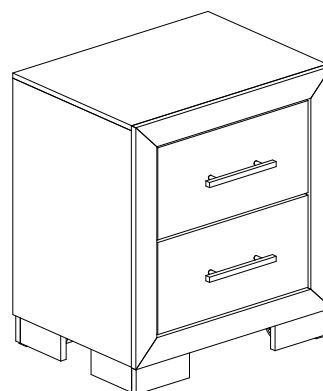




ITEM: **223112**



**Inner Size of Drawer : 15.25"W X 12.25"D X 5.00"H X 0.50"T**

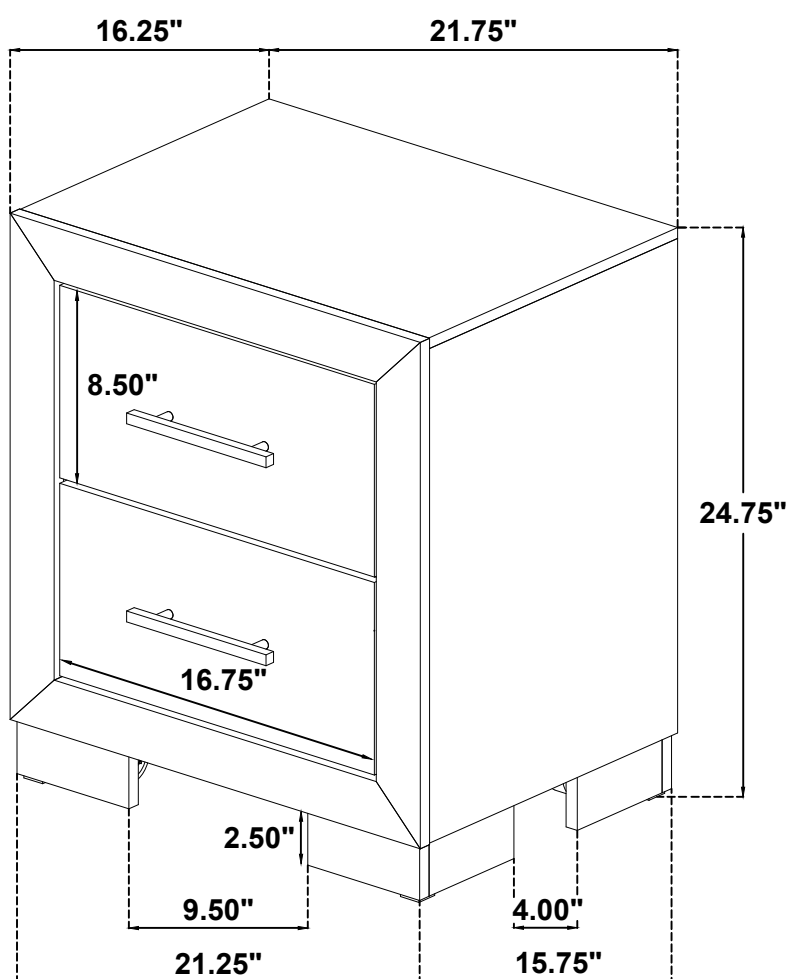

**Note : Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223113**  
**Dresser**

ITEM: **223113**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A DRESSER

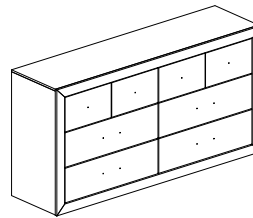

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS


D CENTER LEG SUPPORT  
WITH LEVELER



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL  
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **223113**

## ASSEMBLY INSTRUCTIONS


### STEP 1

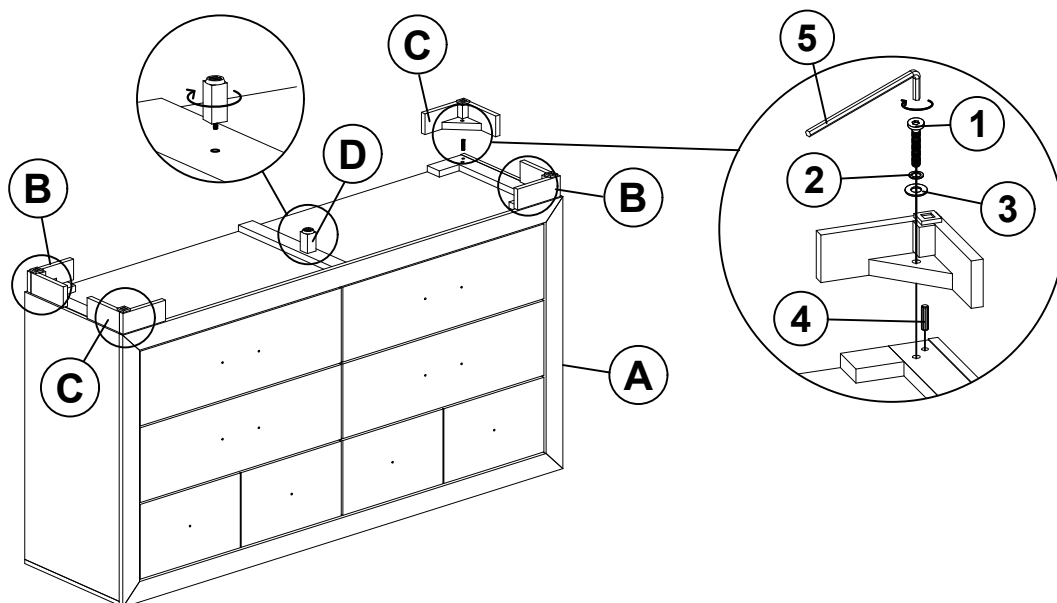

### STEP 2

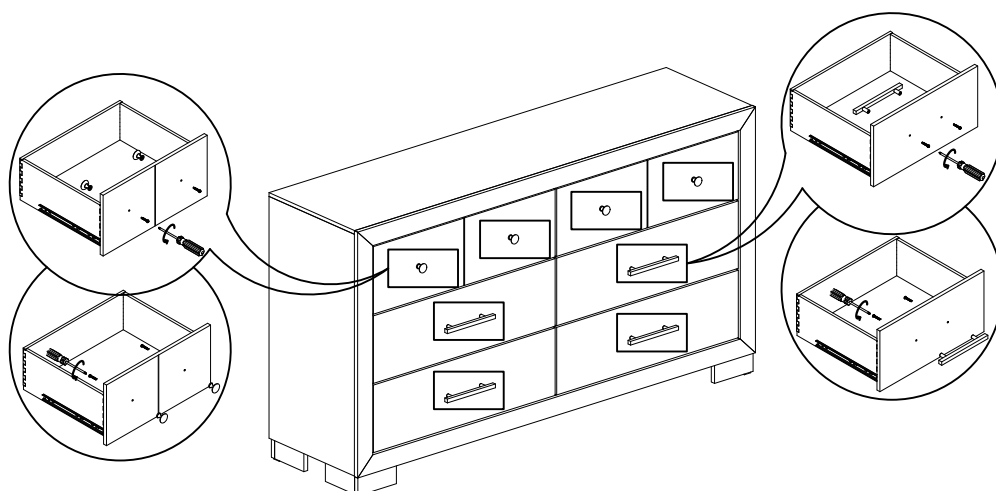

### STEP 3 **COMPLETE**

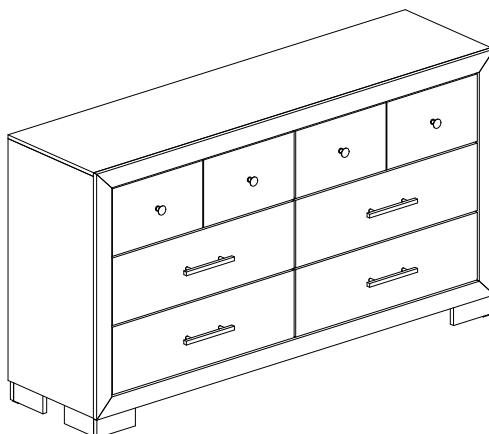

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

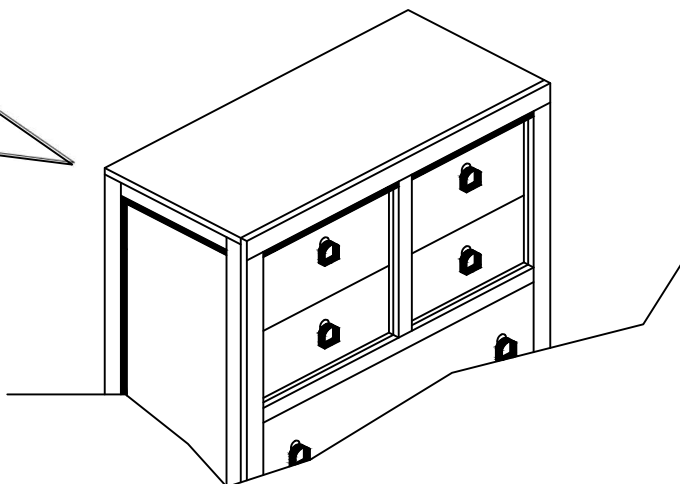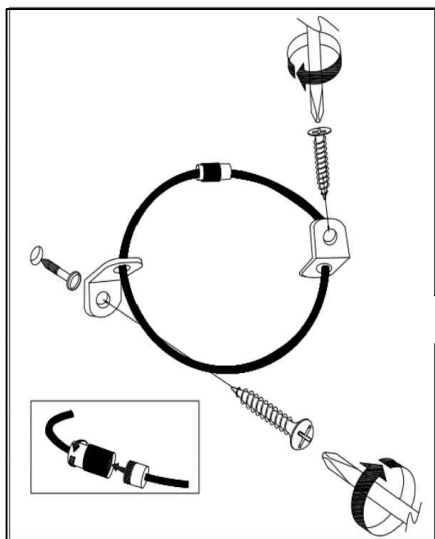

ITEM: **223113**



Inner Size of Drawer : 25.75"W X 12.25"D X 5.00"H X 0.50"T

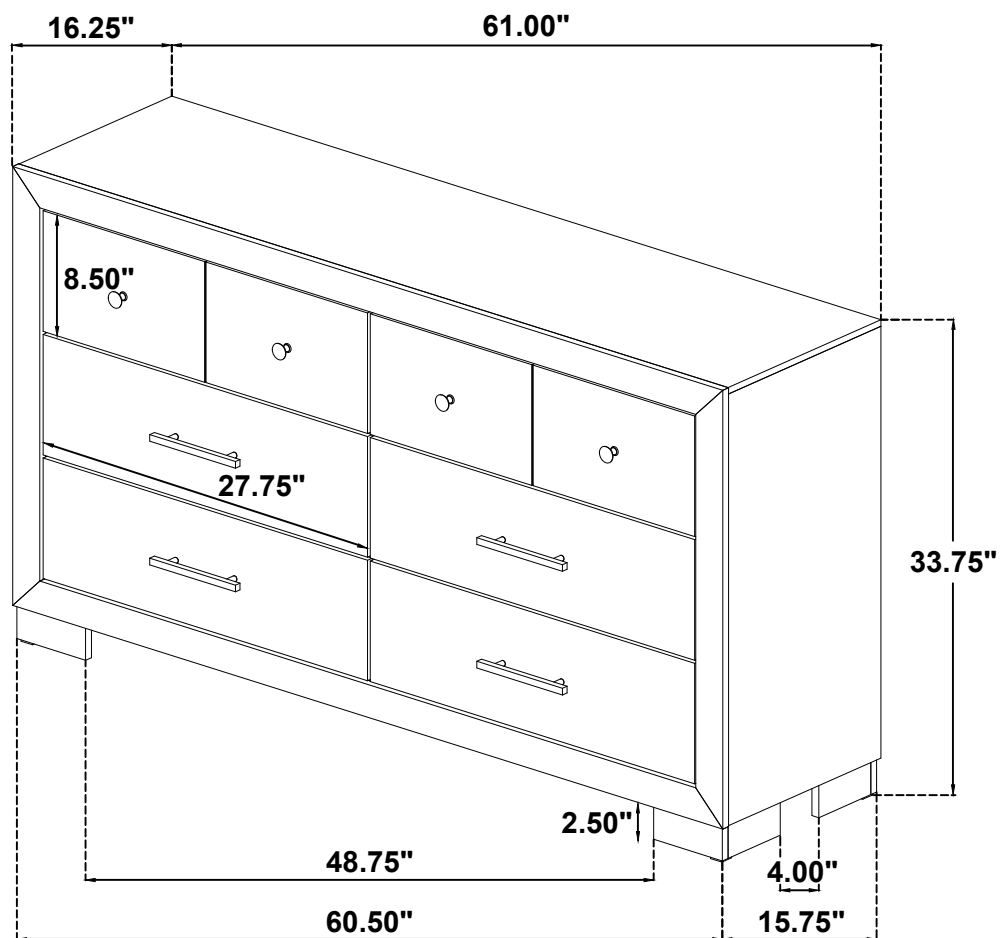

Note : Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223114**  
**Mirror**

ITEM: **223114**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A MIRROR




1PC

B MIRROR SUPPORT  
(PACKED WITH MIRROR)



2PCS


C DRESSER  
\*FROM BOX ITEM 223113

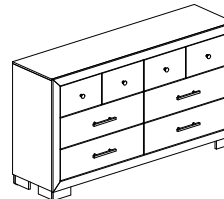

1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



8PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)



8PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



8PCS

4 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.




ITEM: **223114**

## ASSEMBLY INSTRUCTIONS




### STEP 1

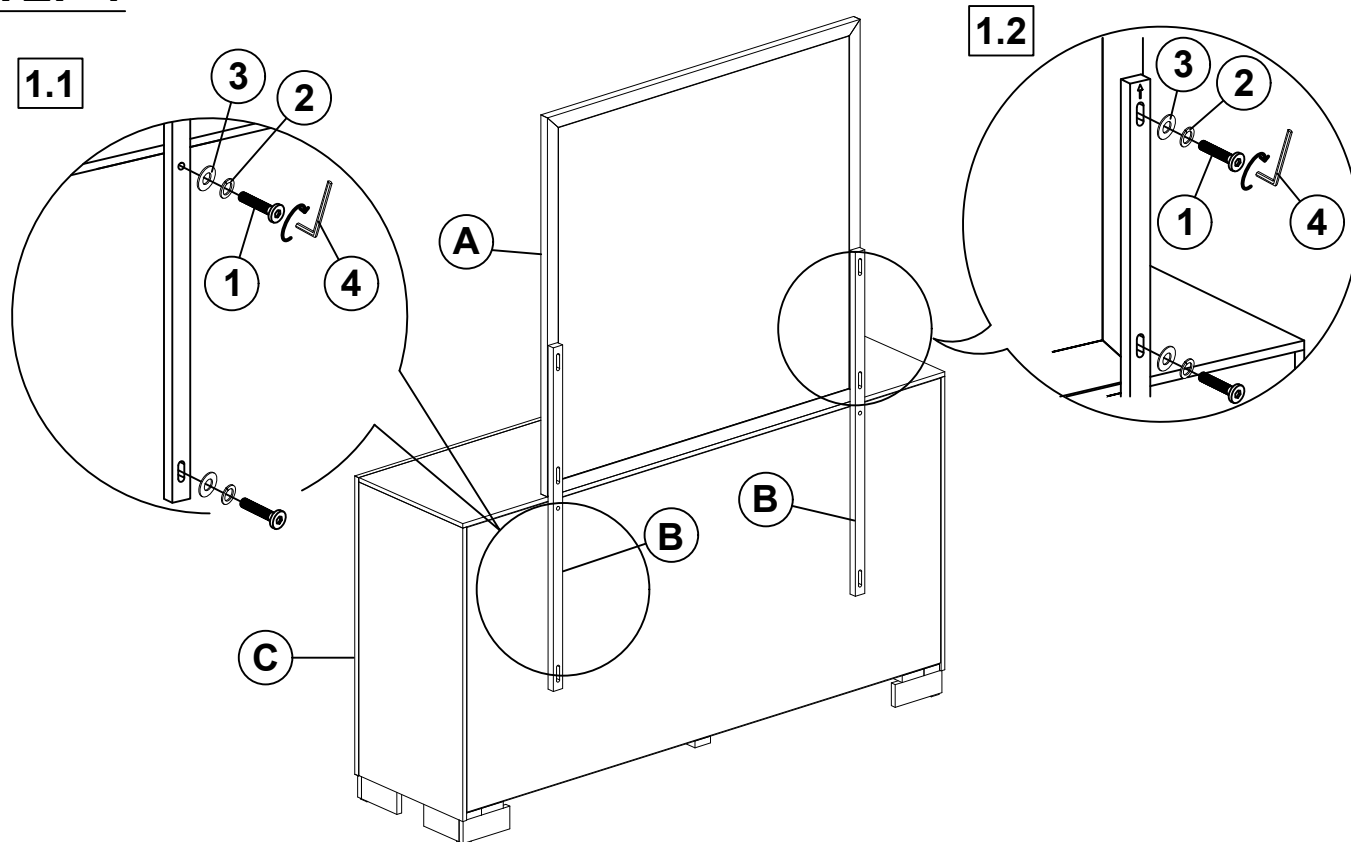


**\*\* BACK VIEW**

### STEP 2 **COMPLETE**

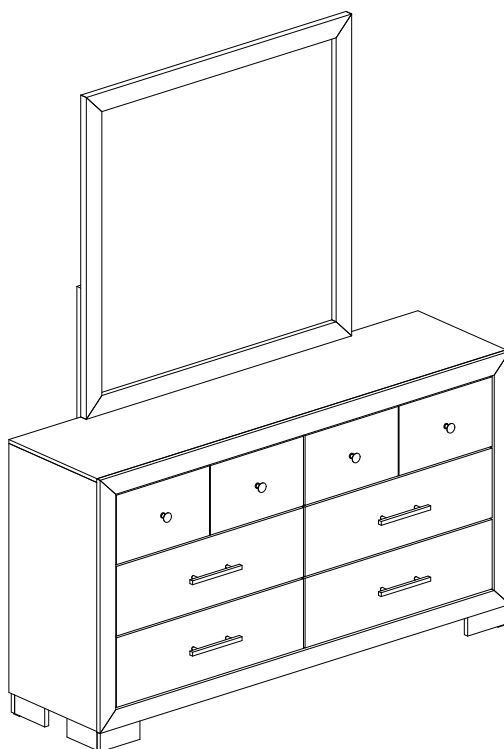

ITEM: **223114**

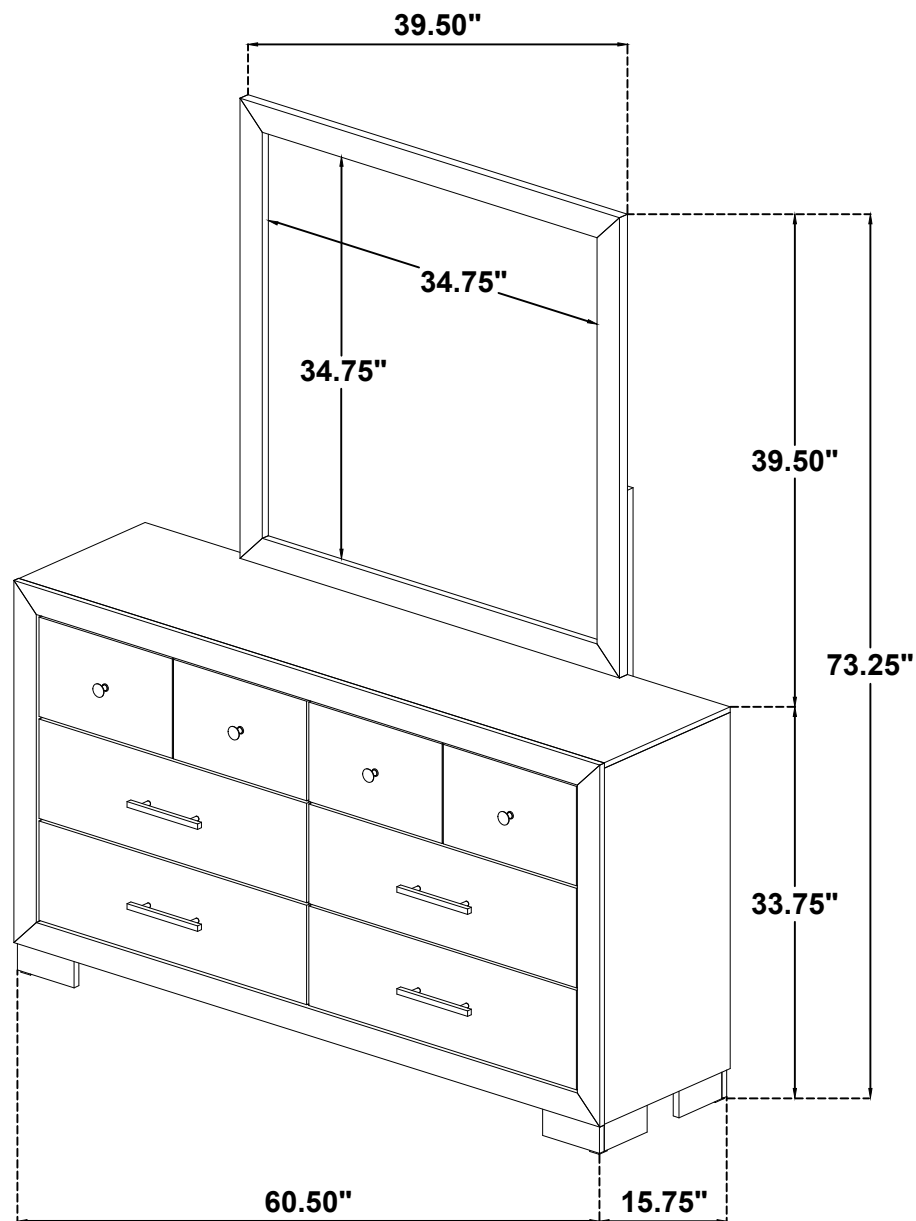

**Note : Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223115**  
**Chest**

ITEM: **223115**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A CHEST

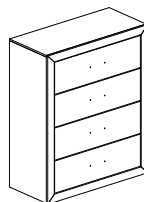

1PC

B LEG (WITH 'B' LABEL)



2PCS


C LEG (WITH 'C' LABEL)



2PCS

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL  
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223115**


## ASSEMBLY INSTRUCTIONS




### STEP 1

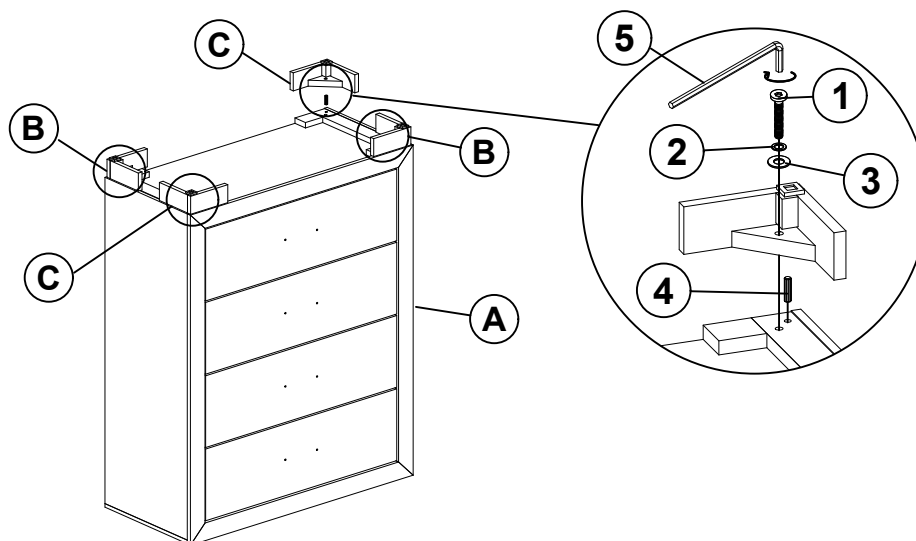

### STEP 2

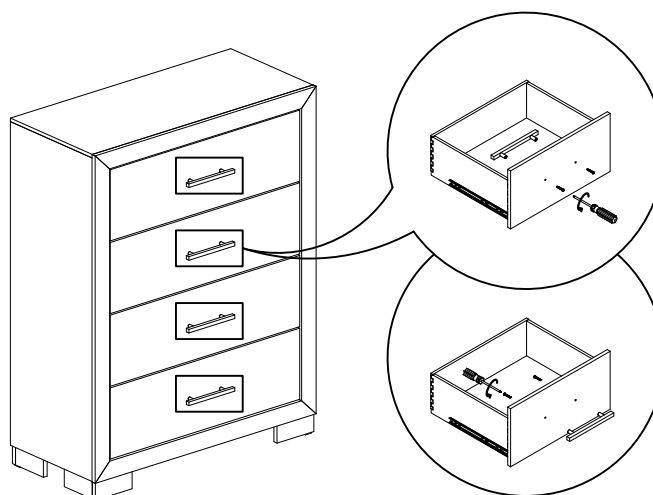

### STEP 3 **COMPLETE**

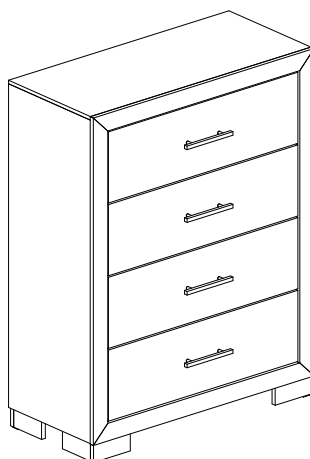

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

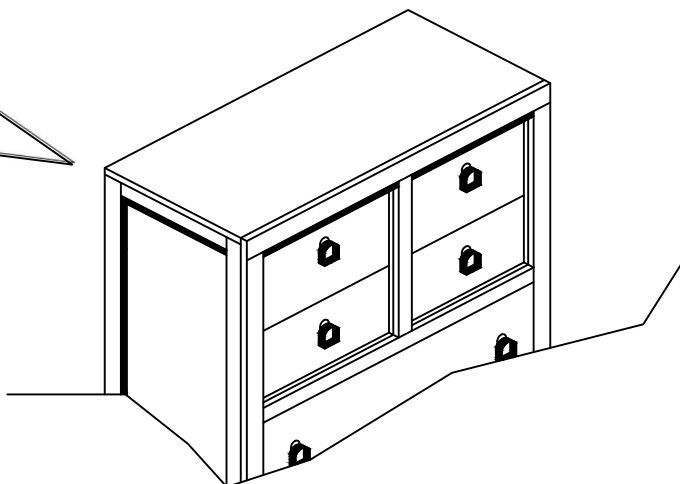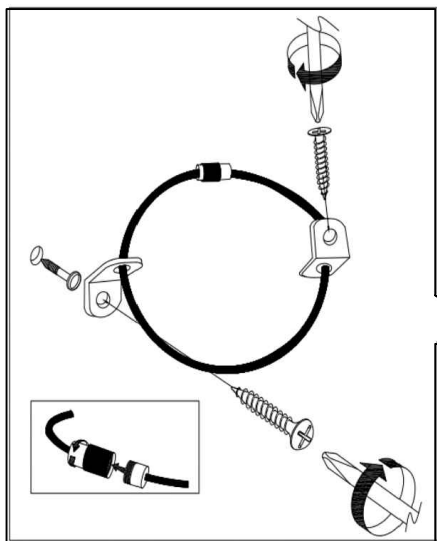

ITEM: **223115**



Inner Size of Drawer : 29.00"W X 12.25"D X 5.00"H X 0.50"T

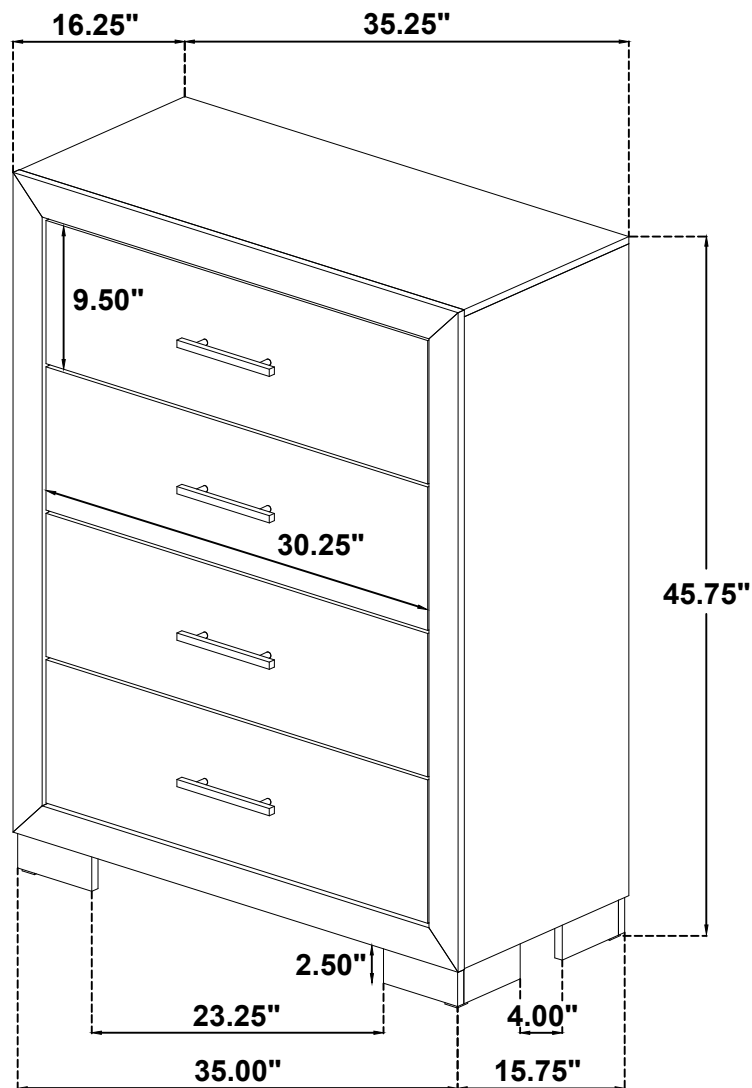

Note : Dimension tolerance  $\pm 5\%$