



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223111Q (B1&B2)
Queen Bed

ITEM: 223111Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL



1PC

B HEADBOARD SUPPORT




3PCS

C HEADBOARD TOP PANEL




1PC

D DIVIDER PANEL




2PCS

E LEFT BOOK CASE SIDE PANEL




1PC

F RIGHT SHELF INSIDE PANEL




1PC

G RIGHT BOOK CASE SIDE PANEL




1PC

H LEFT SHELF INSIDE PANEL




1PC

I SHELF BACK PANEL




2PCS

J SHELF FRONT PANEL




6PCS

K SHELF TOP PANEL



4PCS

L SHELF BOTTOM PANEL



2PCS

M CASTER WITH SCREW



8SETS


N FOOTBOARD



1PC

B2 (BOX 2)

O BED RAIL



2PCS

P BED SLAT



4PCS

Q BED SLAT SUPPORT WITH LEVELER



4PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 223111Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223111Q (B1)

1	SHORT BOLT (M8 x 30MM - RBW)		8PCS	6	FLAT HEAD SCREW (M4 x 32MM - RBW)		8PCS
2	MEDIUM BOLT (M6 x 35MM - RBW)		52PCS	7	CAM BOLT (7MMx 24MM - RBW)		4PCS
3	LONG BOLT (M6 x 40MM - RBW)		26PCS	8	CAM LOCK (15MM x 9.5MM - RBW)		4PCS
4	LOCK WASHER (1/4" x 12 Ø - RBW)		74PCS	9	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC
5	FLAT WASHER (1/4" x 19 Ø - RBW)		74PCS	10	BIG ALLEN WRENCH (M5 x 65MM - BLK)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **223111Q (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 1

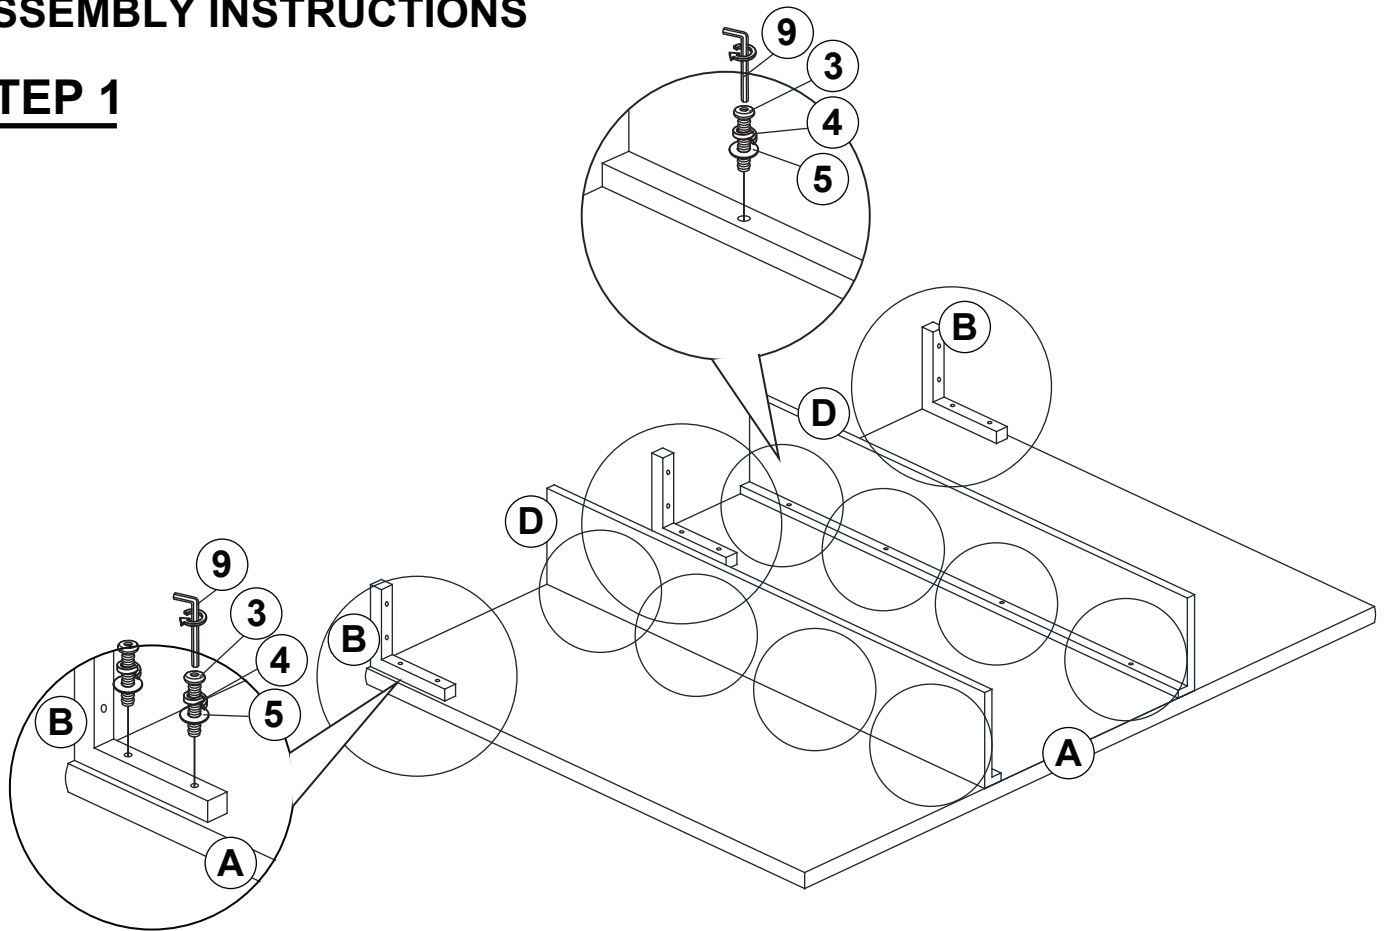


STEP 2

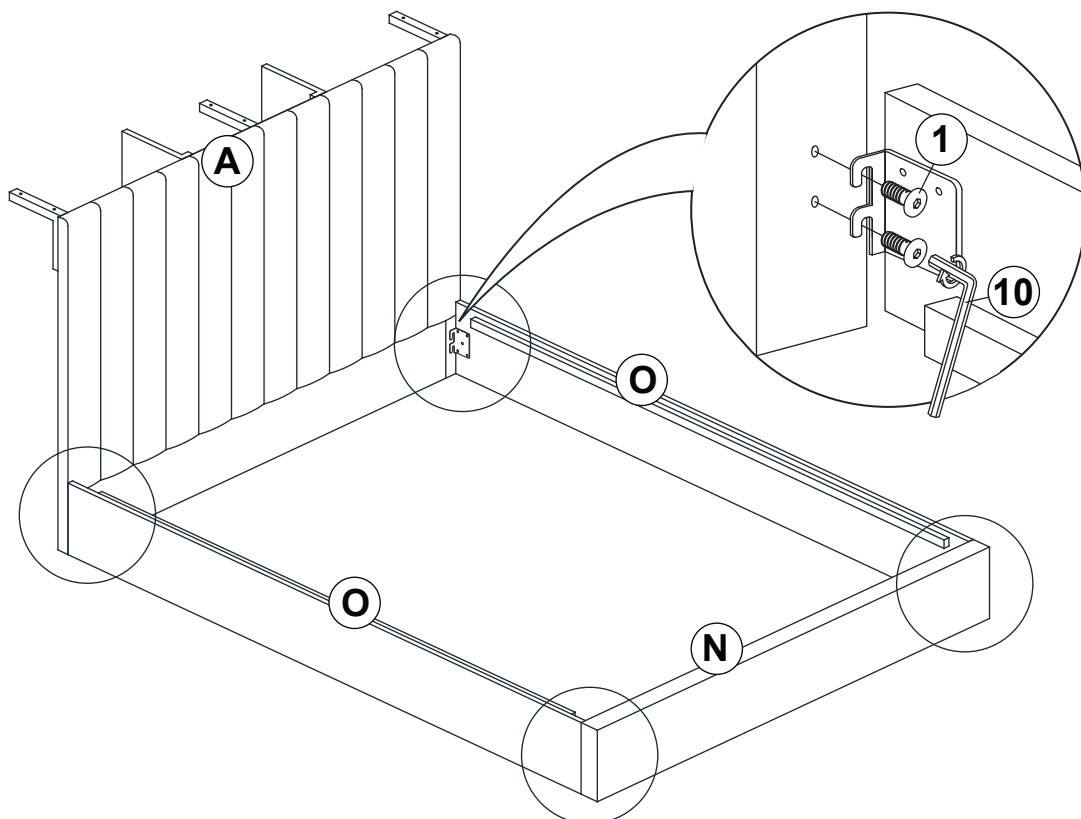


ITEM: **223111Q (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 3

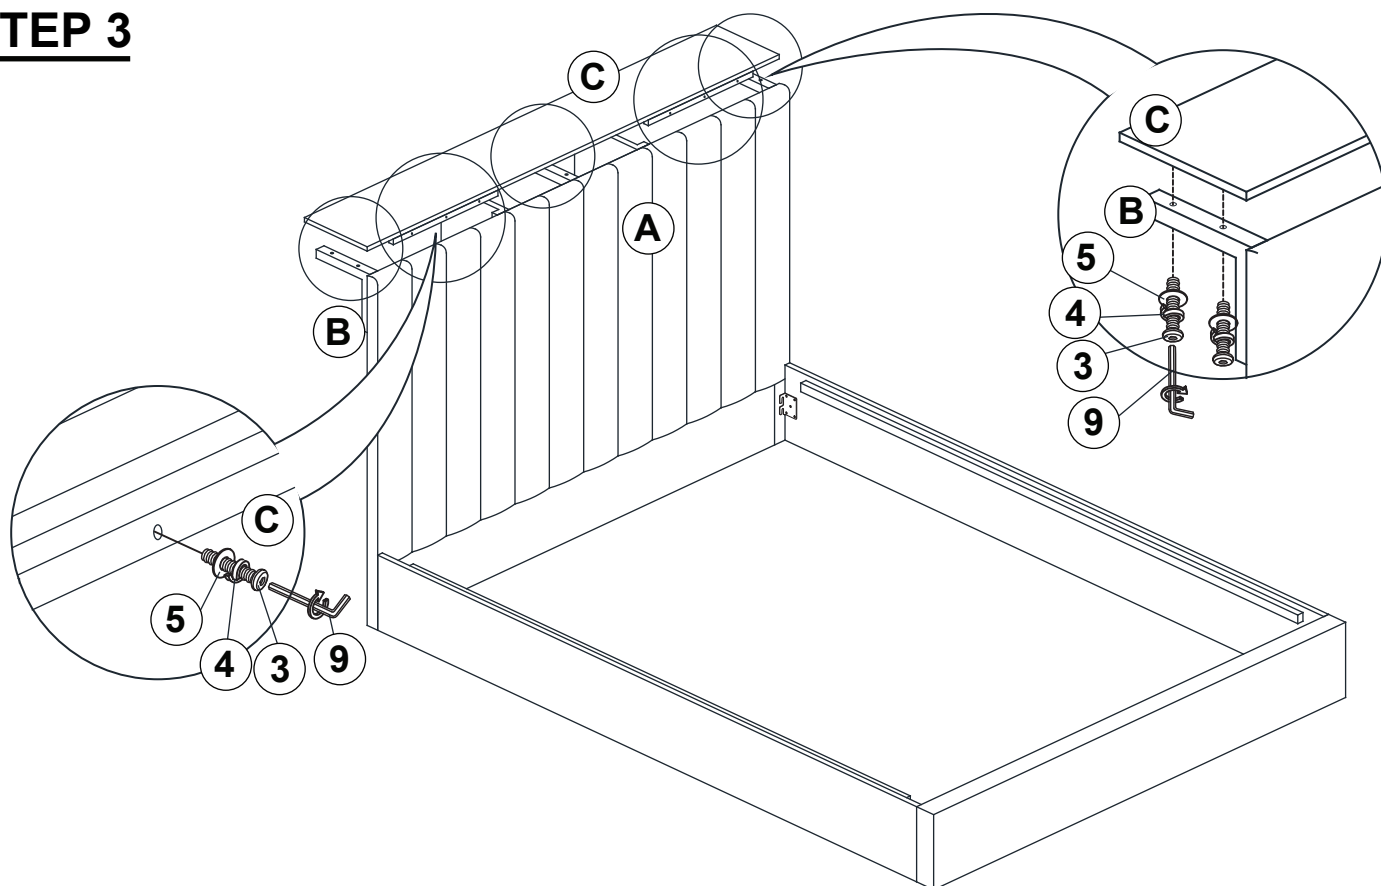

STEP 4

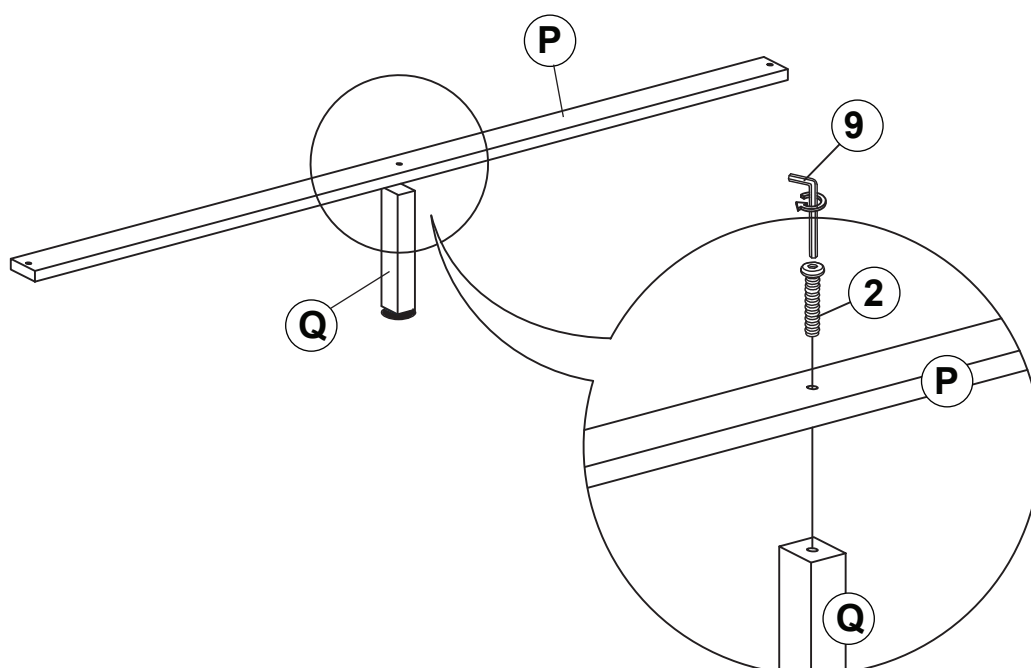


ITEM: **223111Q (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 5

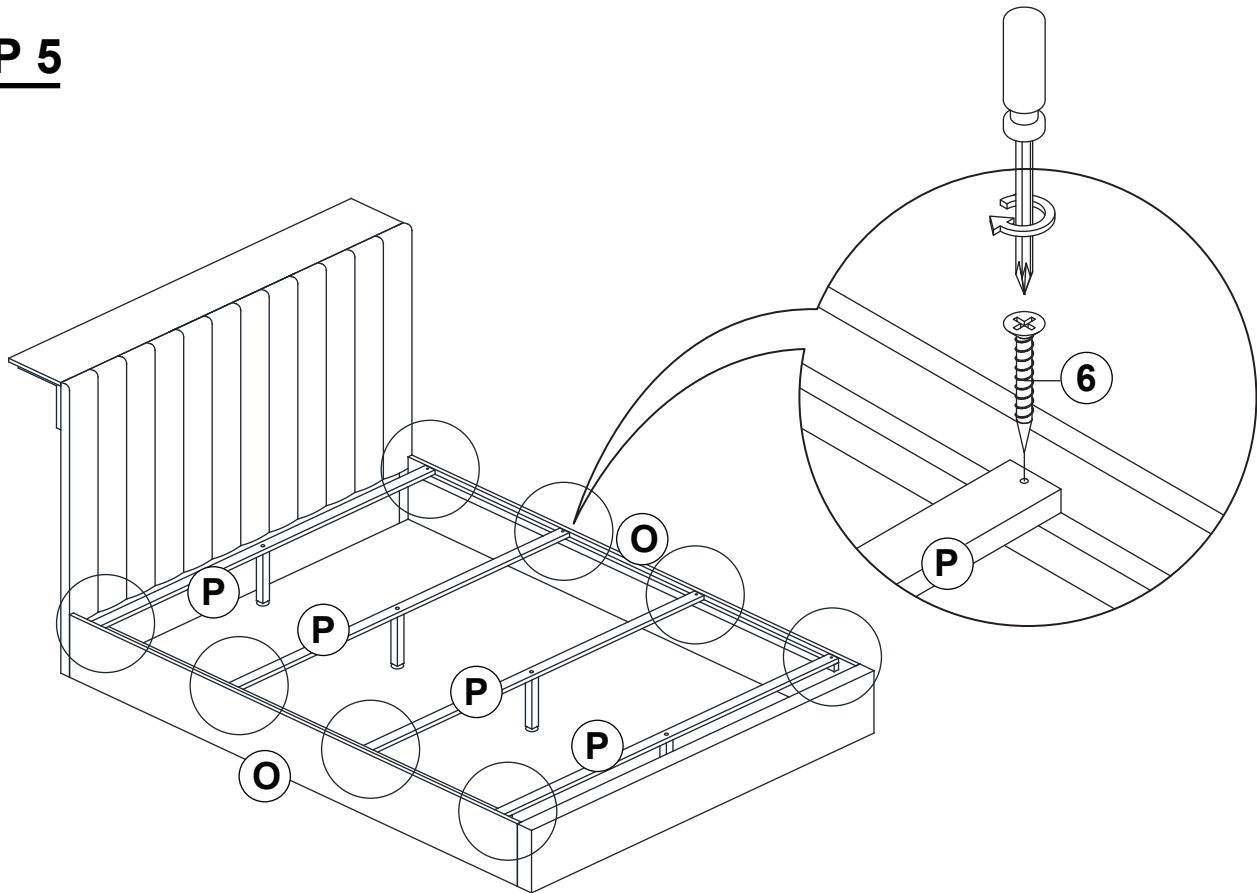


STEP 6

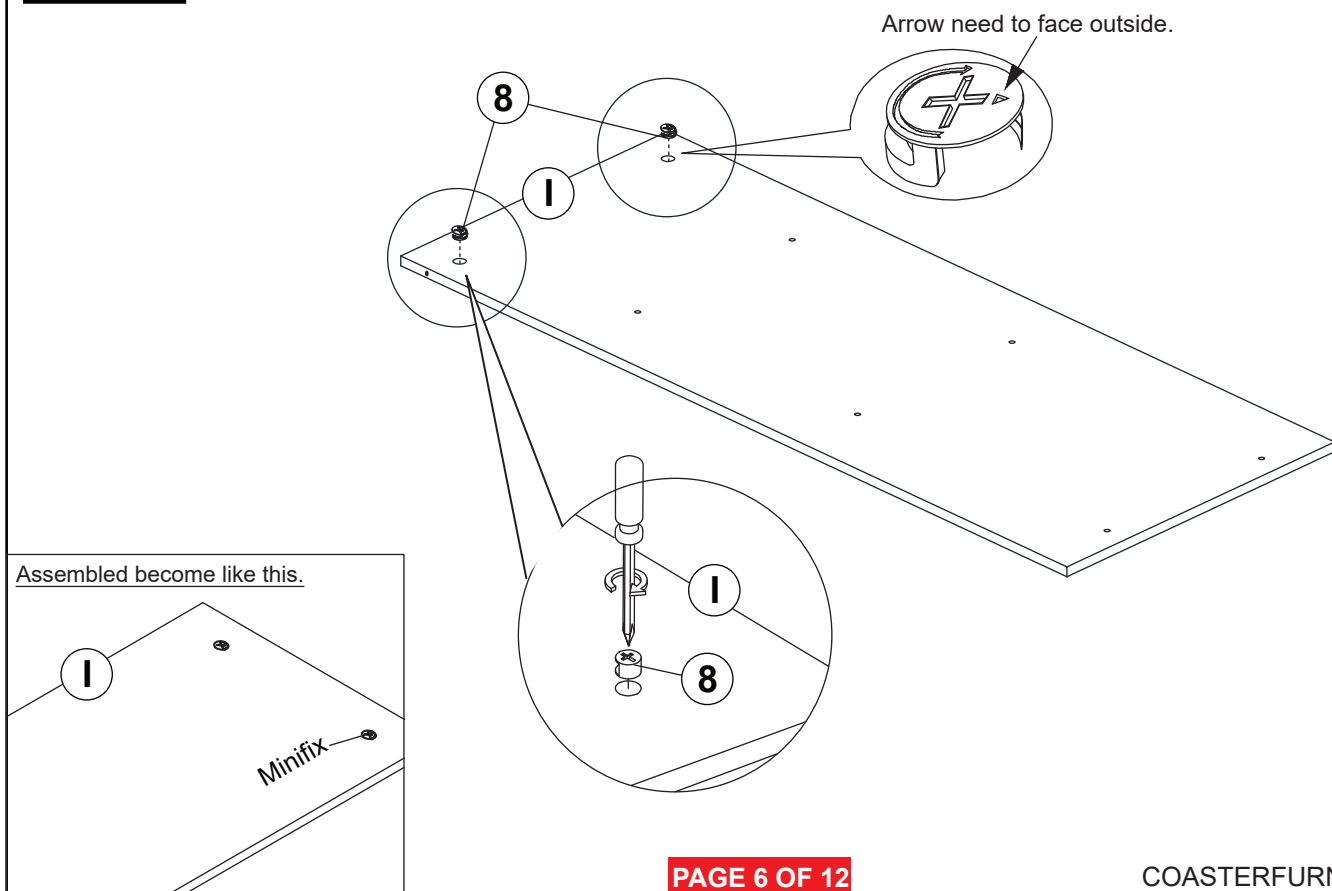


ASSEMBLY INSTRUCTIONS


STEP 7

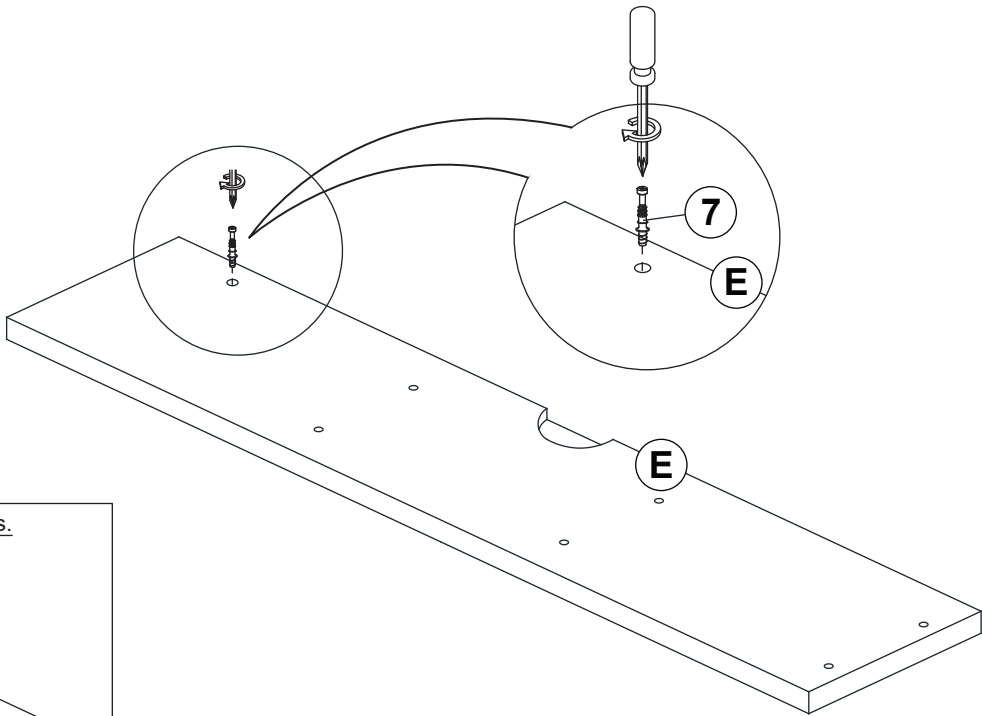


Assembled become like this.

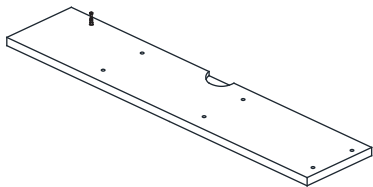

STEP 8

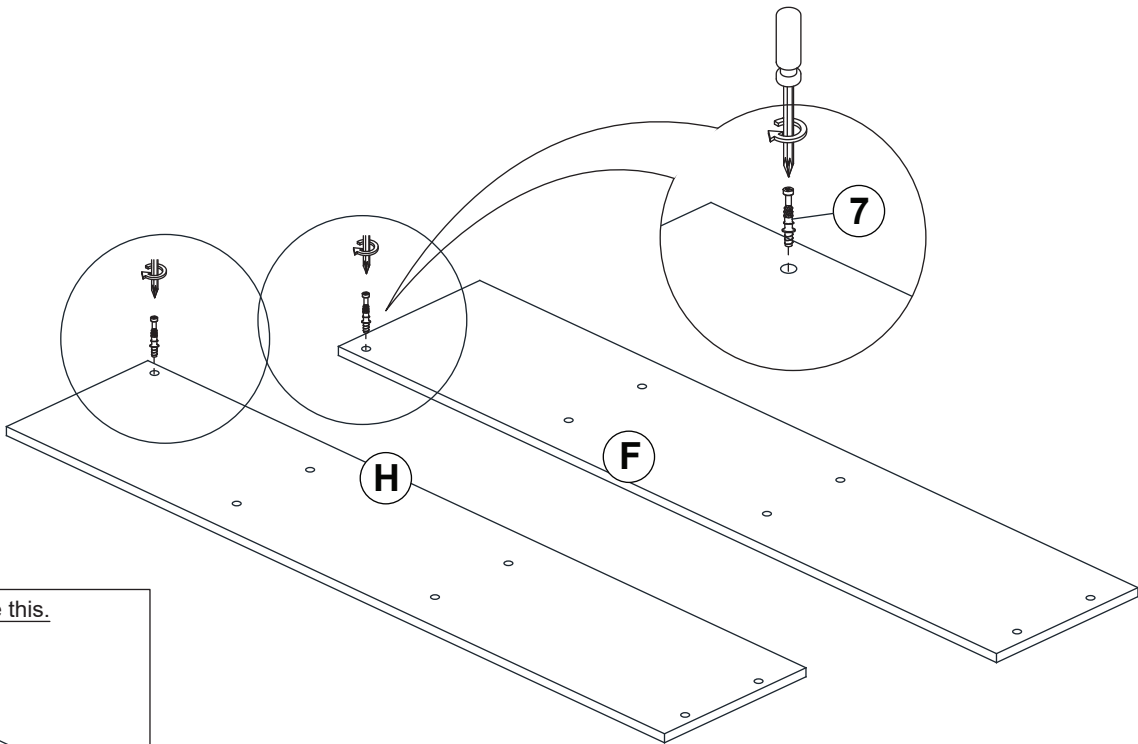


Assembled become like this.

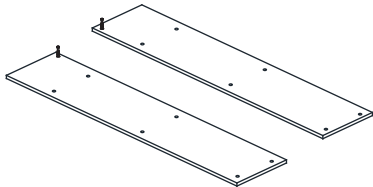


ITEM: **223111Q (B1&B2)**

ASSEMBLY INSTRUCTIONS


STEP 9

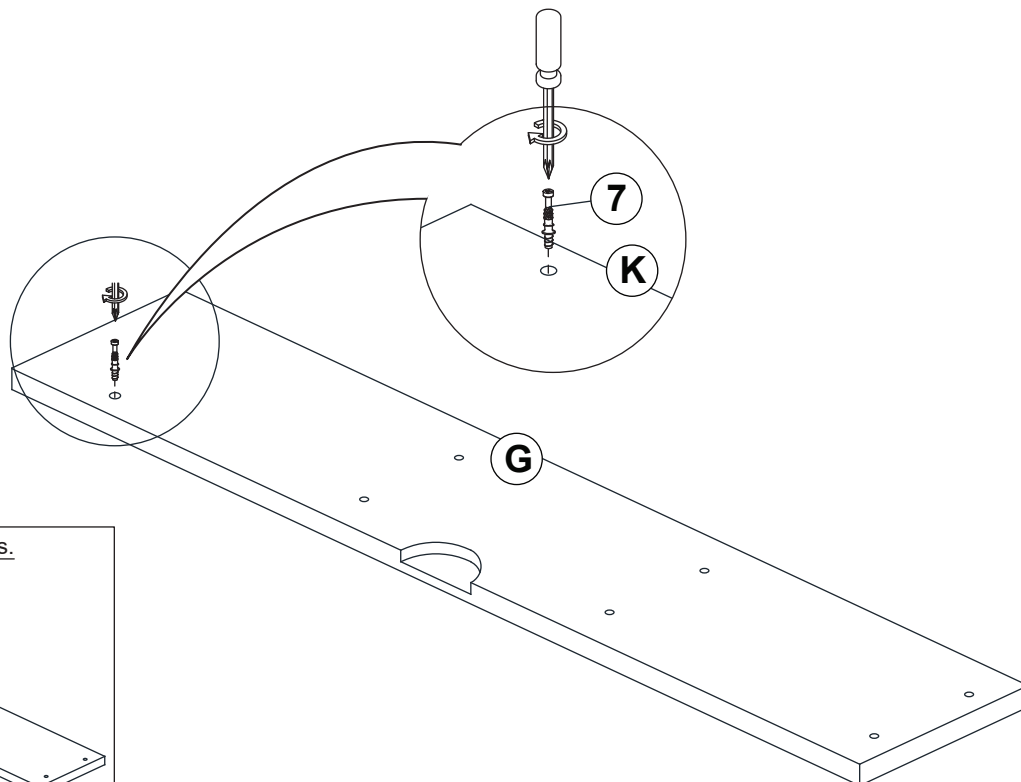

Assembled become like this.

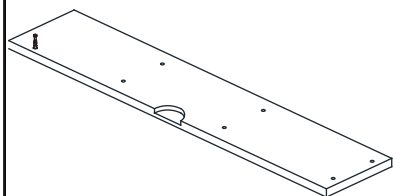


STEP 10

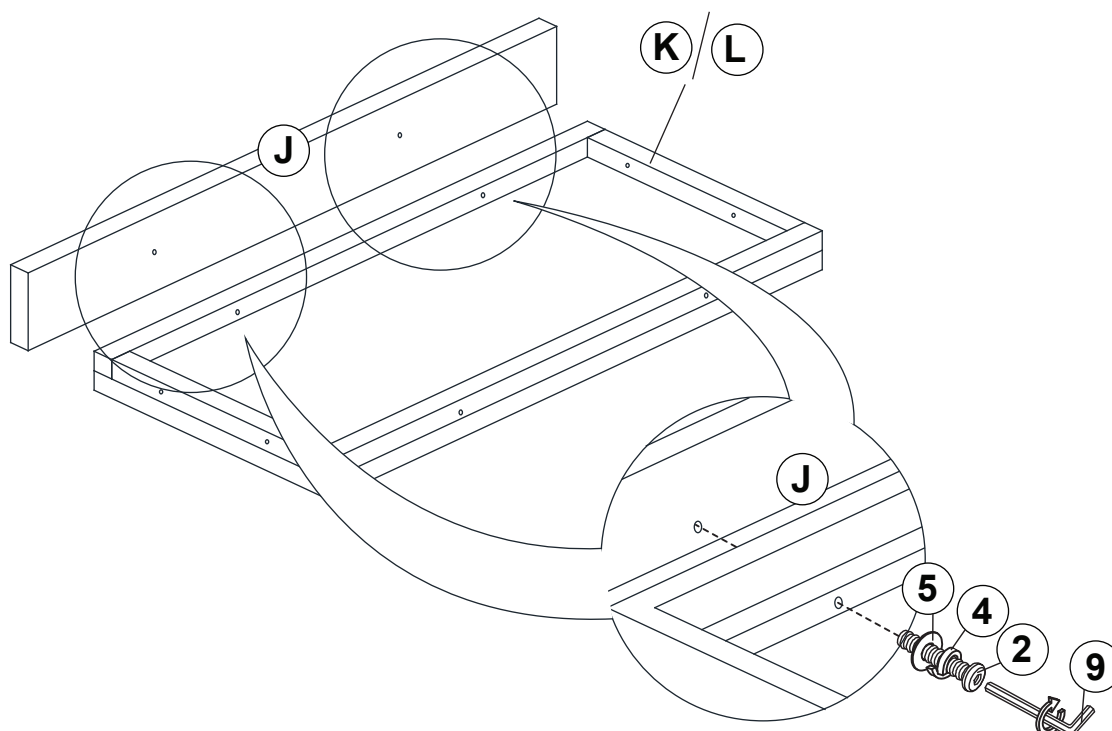


ITEM: **223111Q (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 11

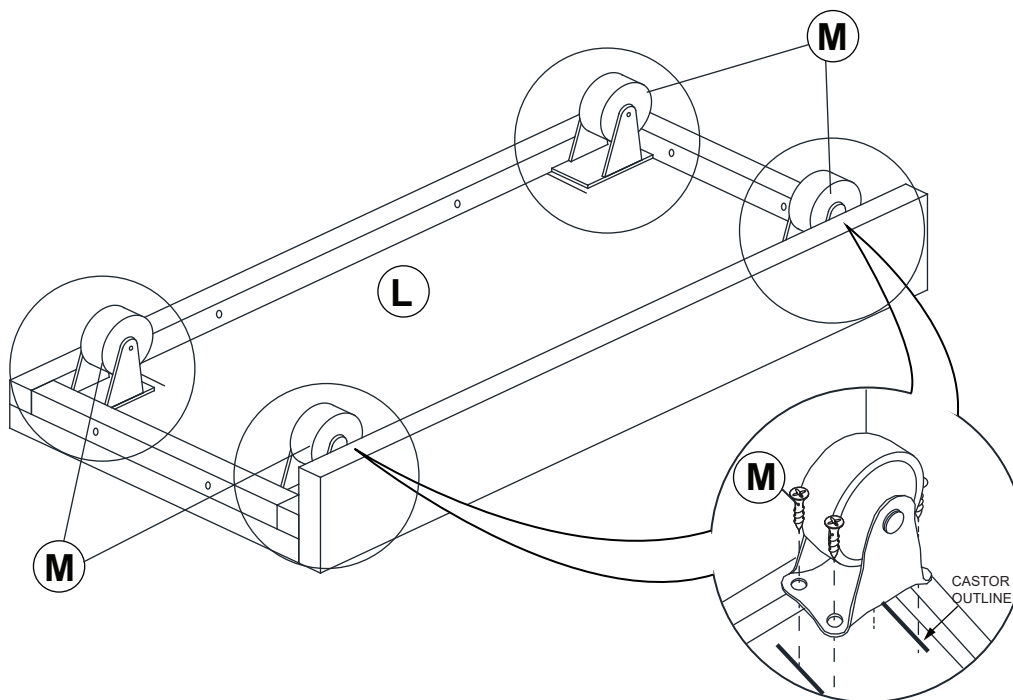


STEP 12

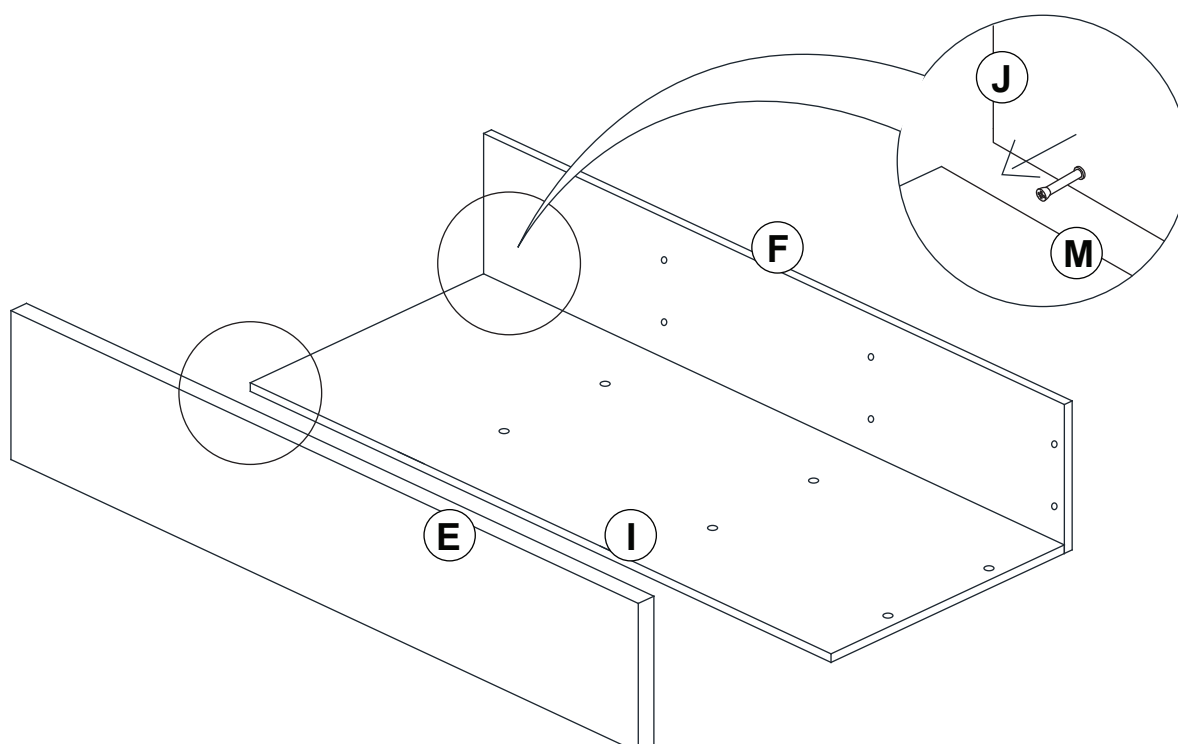


ITEM: **223111Q (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 13

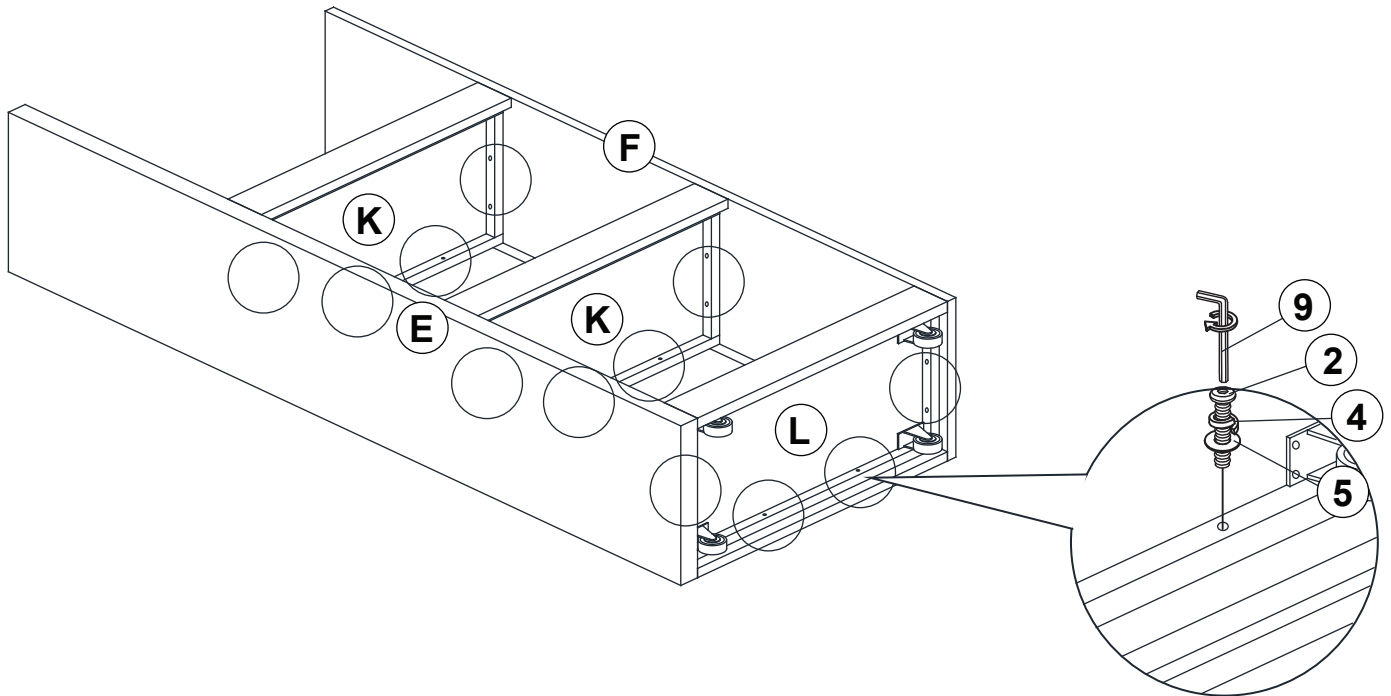


STEP 14

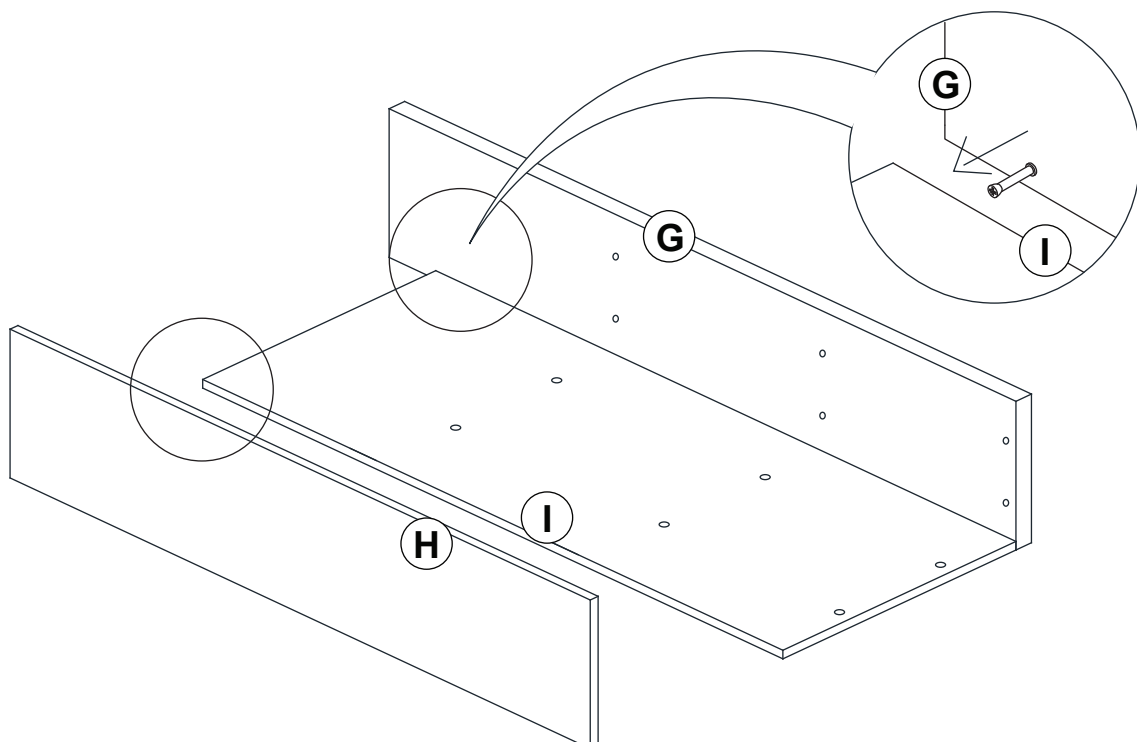


ITEM: **223111Q (B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 15

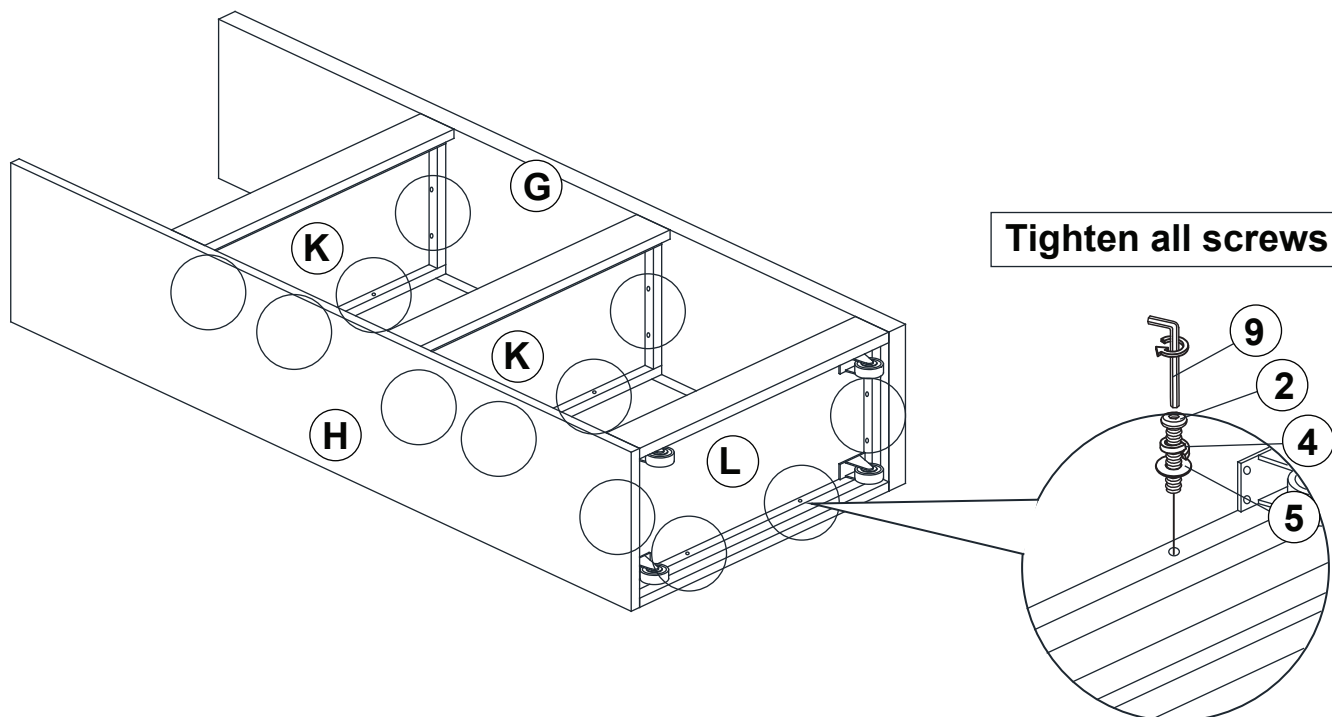

STEP 16

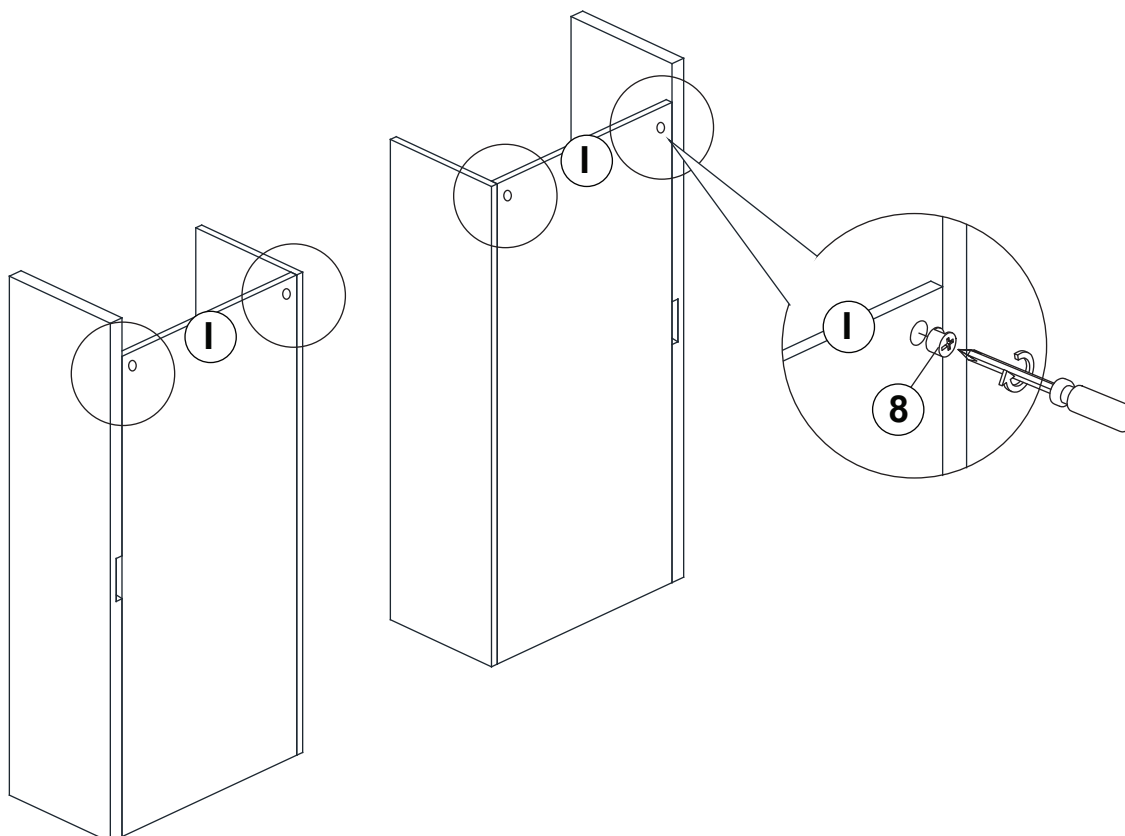


ITEM: **223111Q (B1&B2)**



ASSEMBLY INSTRUCTIONS

STEP 17


COMPLETE

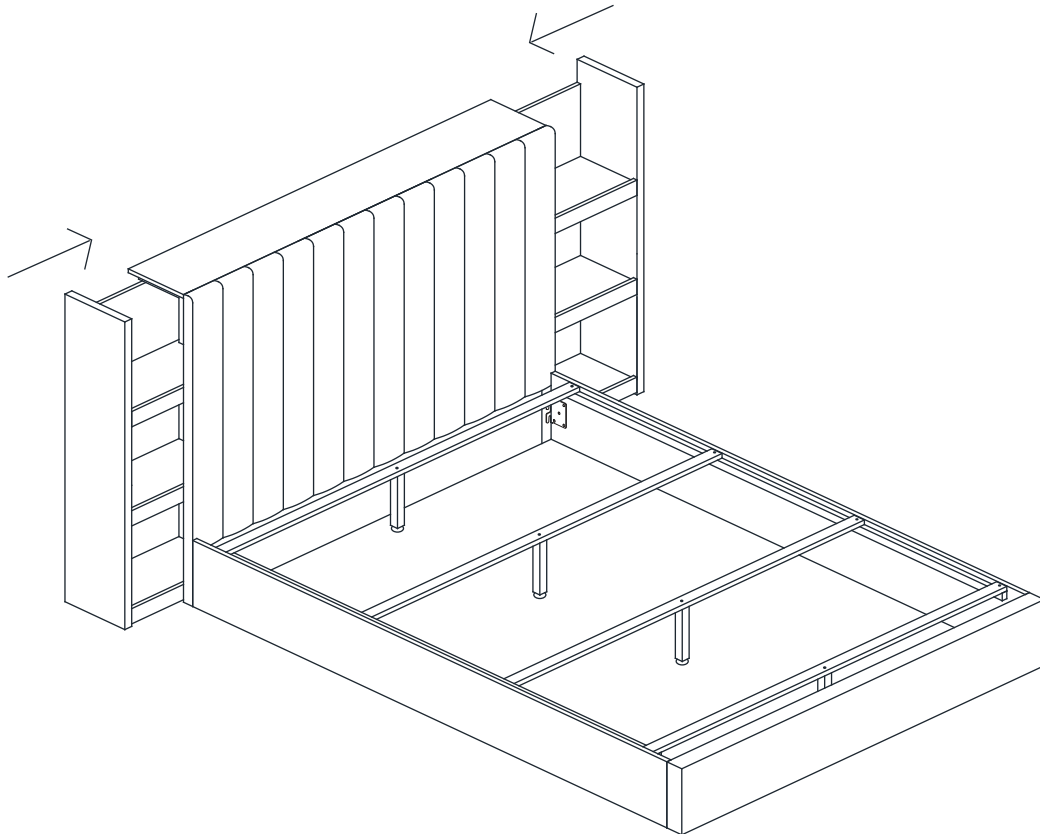

ITEM: **223111Q (B1&B2)**



Inner Size : 60.75"W x 80.00"D

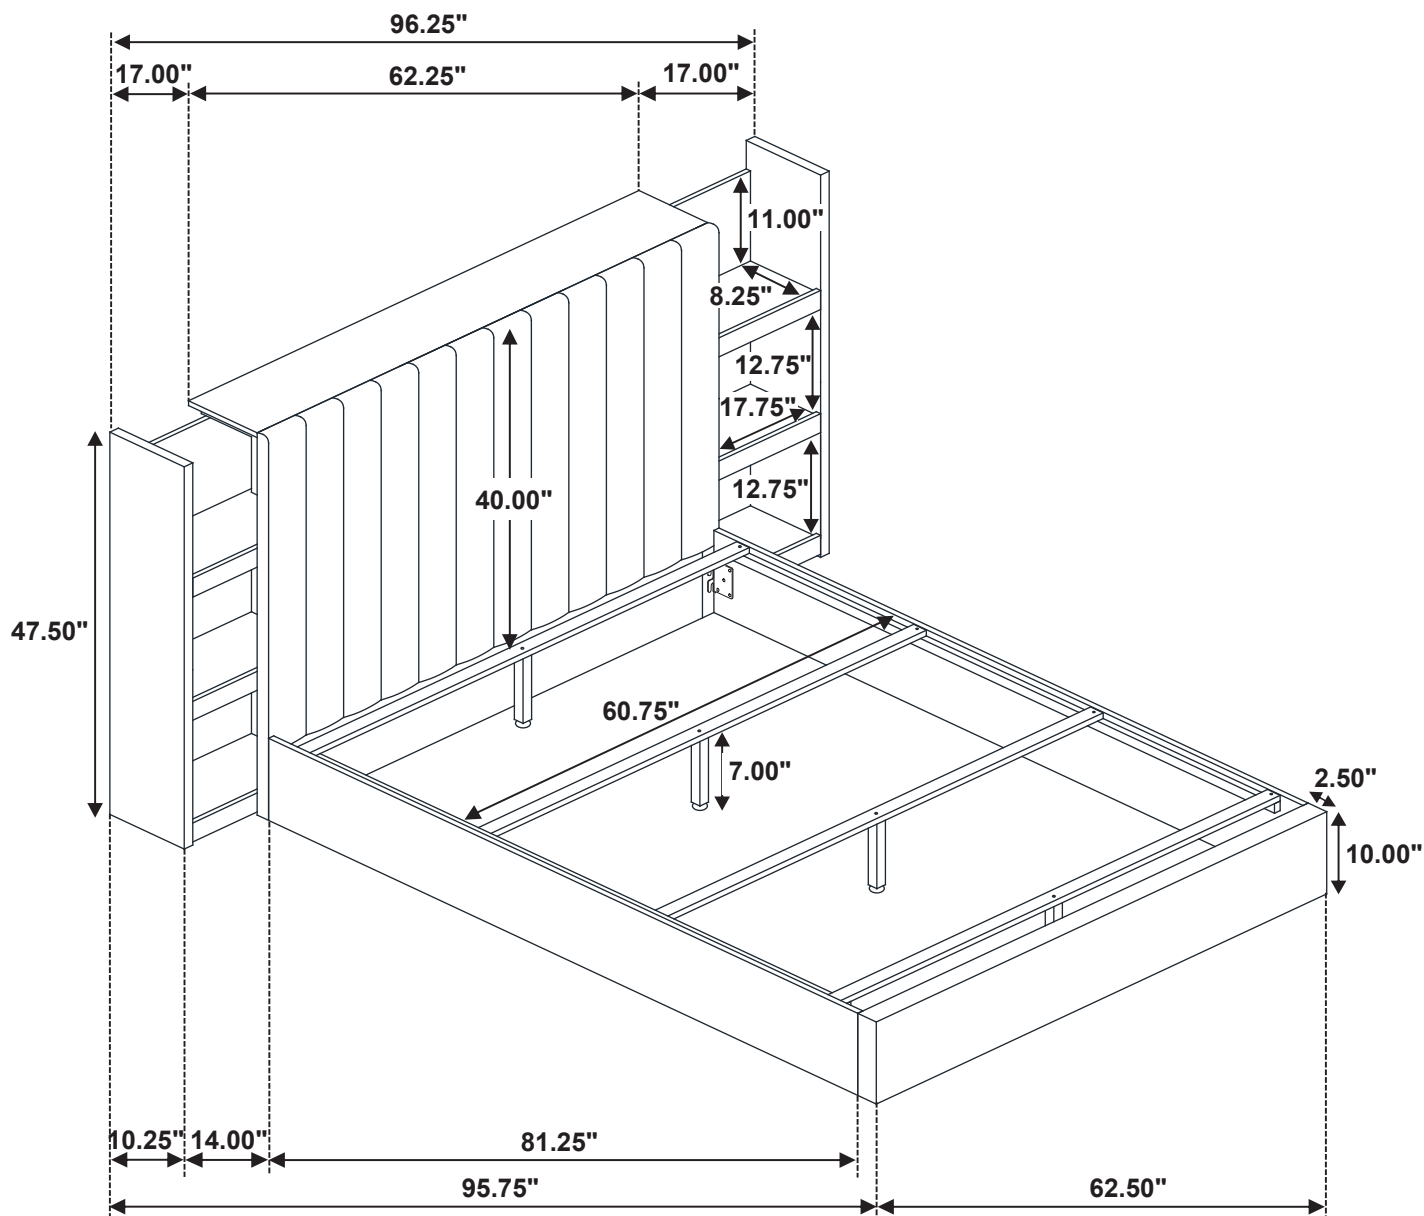

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223112
Nightstand

ITEM: **223112**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.








ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	NIGHTSTAND		1PC
B	LEG (WITH 'B' LABEL)		2PCS
C	LEG (WITH 'C' LABEL)		2PCS
D	CASTER WITH SCREW		4SETS

HARDWARE IDENTIFICATION

1	BOLT (M6 x 40MM - RBW)		4PCS
2	LOCK WASHER (1/4" x 13Ø - RBW)		4PCS
3	FLAT WASHER (1/4" x 19Ø - RBW)		4PCS
4	WOOD DOWEL (Ø8 x 30MM)		4PCS
5	ALLEN WRENCH (M4 x 110MM - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223112**


ASSEMBLY INSTRUCTIONS




STEP 1

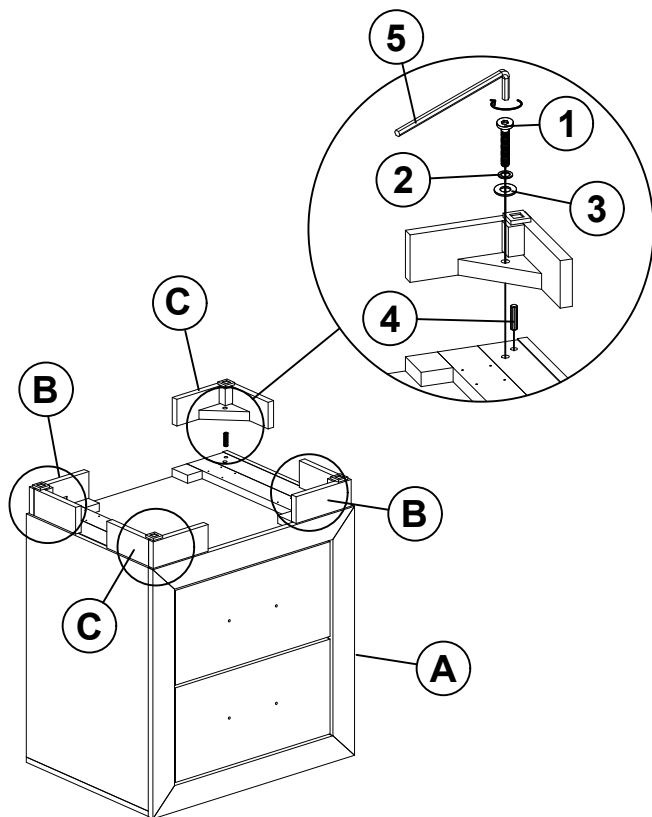


STEP 2

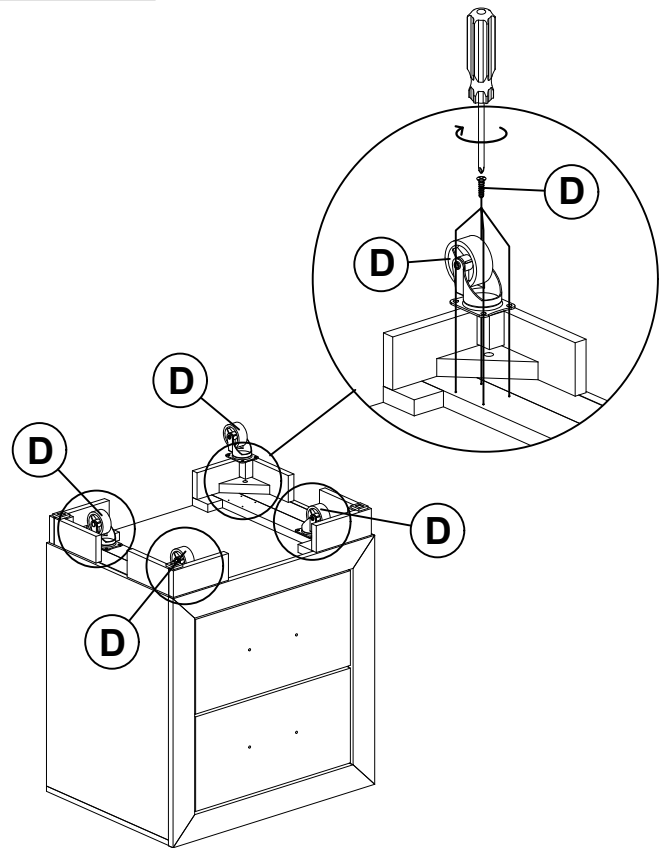

STEP 3

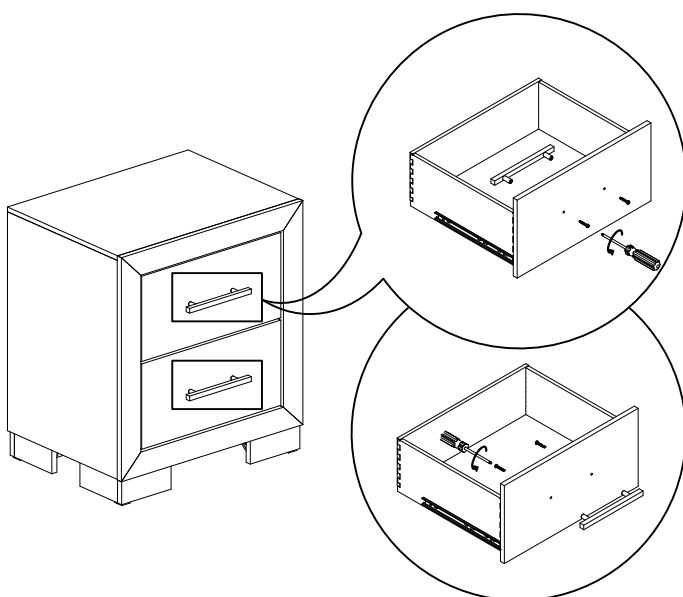


STEP 4 **COMPLETE**

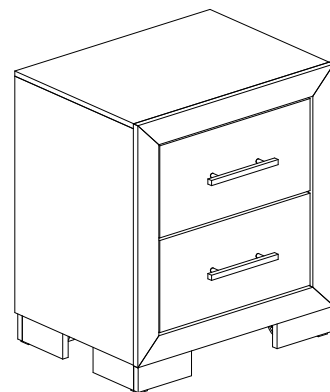

ITEM: **223112**



Inner Size of Drawer : 15.25"W X 12.25"D X 5.00"H X 0.50"T

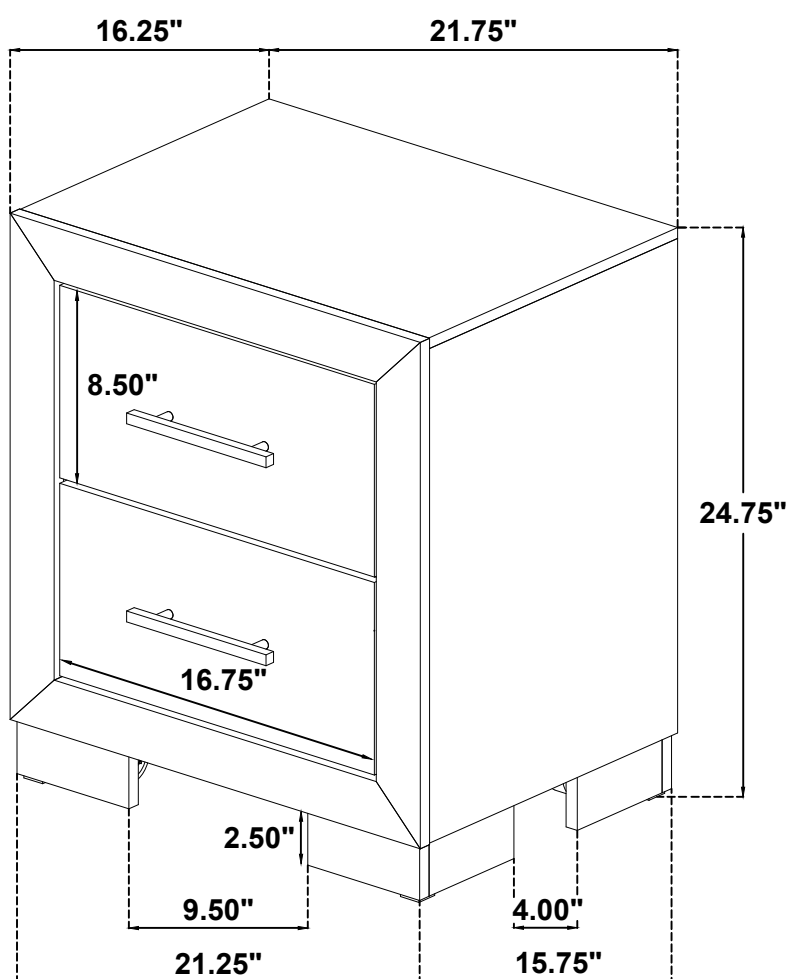

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223113
Dresser

ITEM: **223113**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A DRESSER

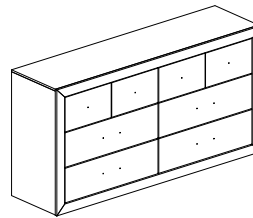

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS


D CENTER LEG SUPPORT
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH
(M4 x 110MM - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **223113**

ASSEMBLY INSTRUCTIONS


STEP 1

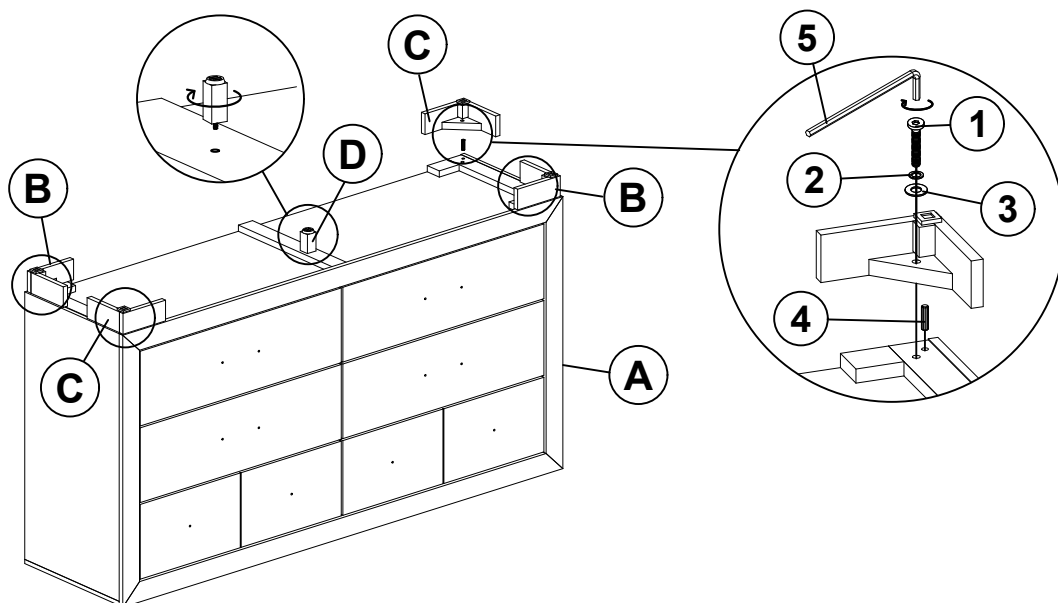

STEP 2

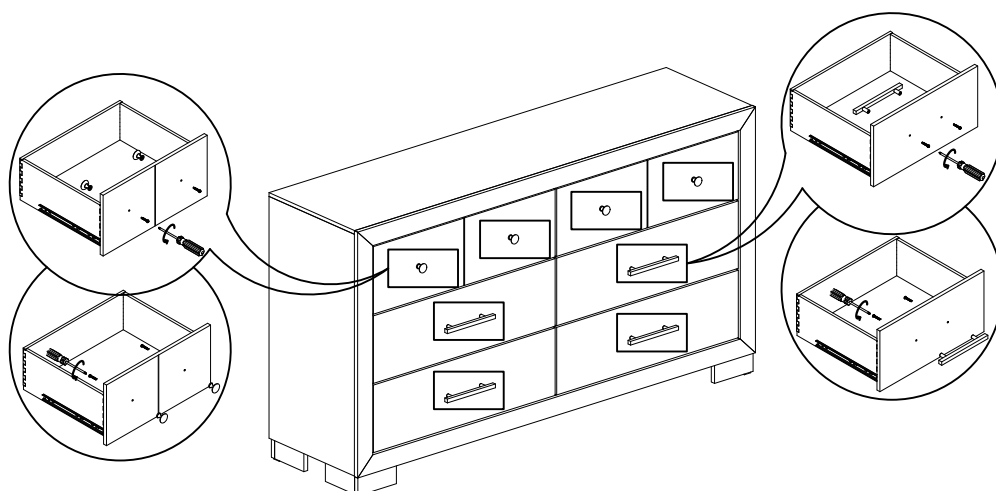

STEP 3 **COMPLETE**

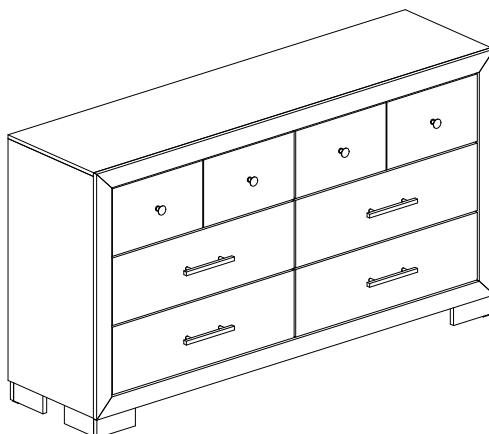

ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

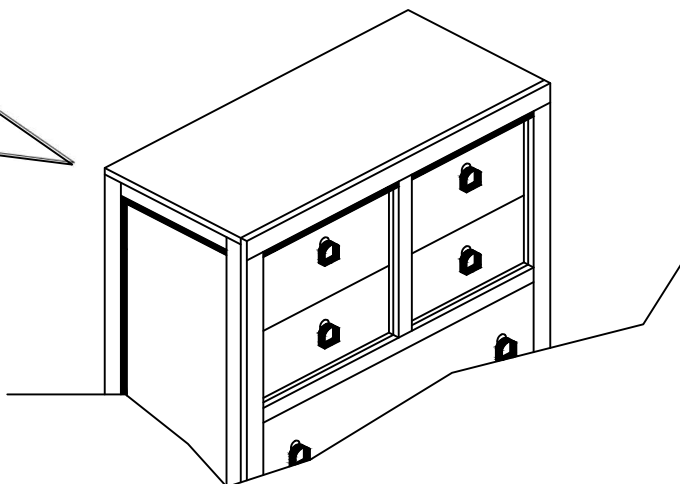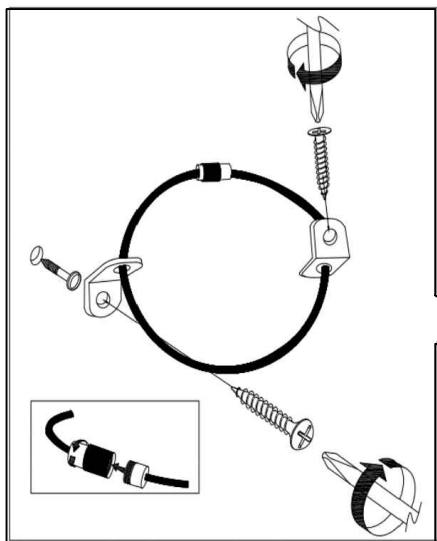

ITEM: **223113**



Inner Size of Drawer : 25.75"W X 12.25"D X 5.00"H X 0.50"T

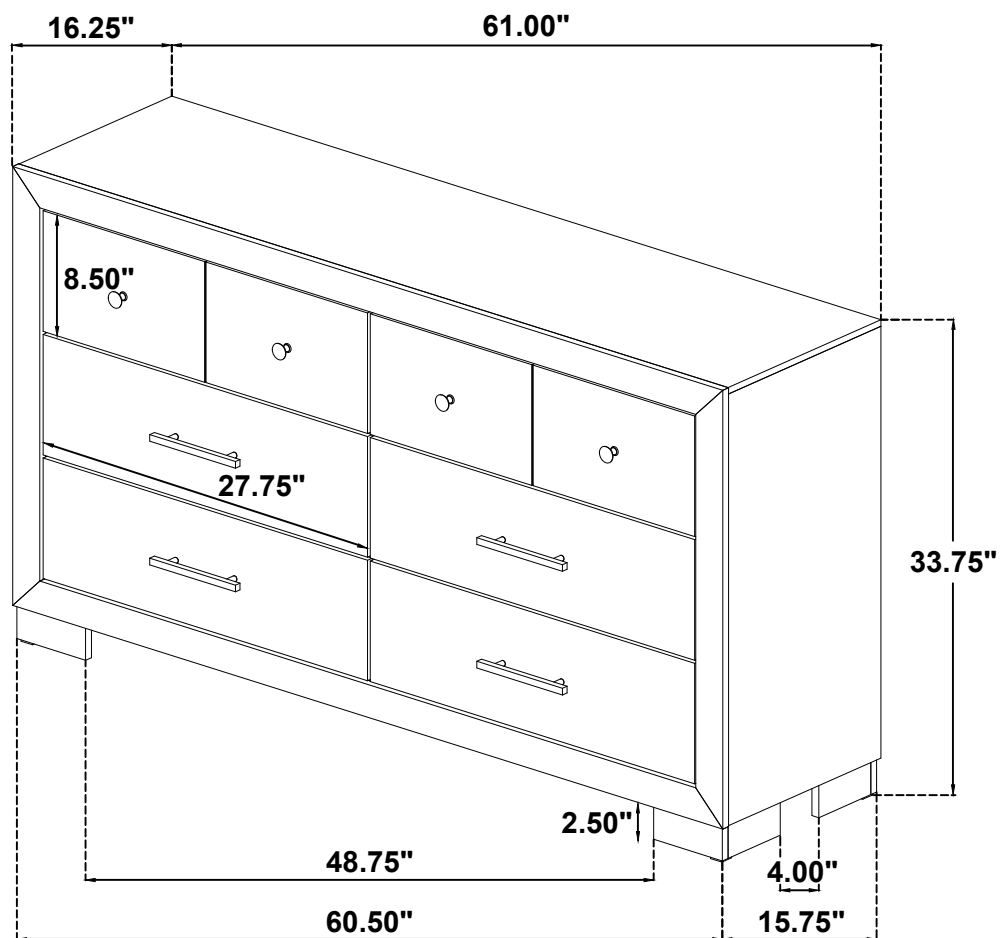

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223114
Mirror

ITEM: **223114**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A MIRROR




1PC

B MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS


C DRESSER
*FROM BOX ITEM 223113

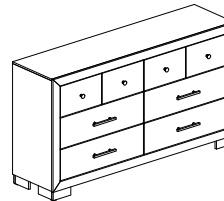

1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



8PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)



8PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



8PCS

4 ALLEN WRENCH
(M4 x 110MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223114**

ASSEMBLY INSTRUCTIONS




STEP 1

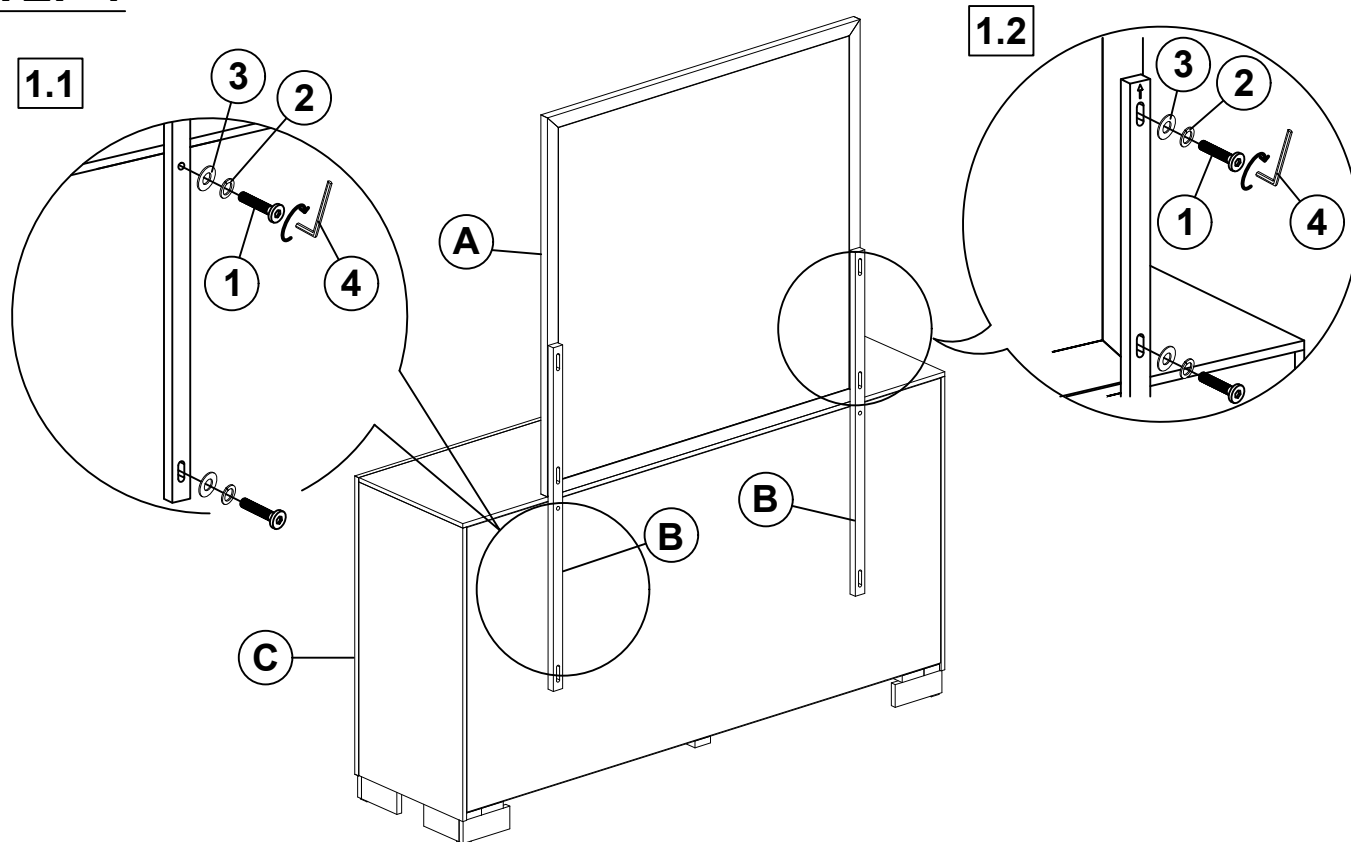


**** BACK VIEW**

STEP 2 COMPLETE

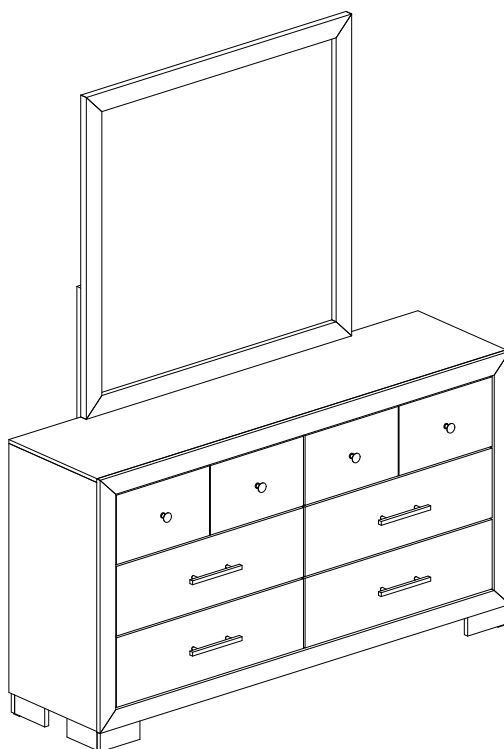

ITEM: **223114**

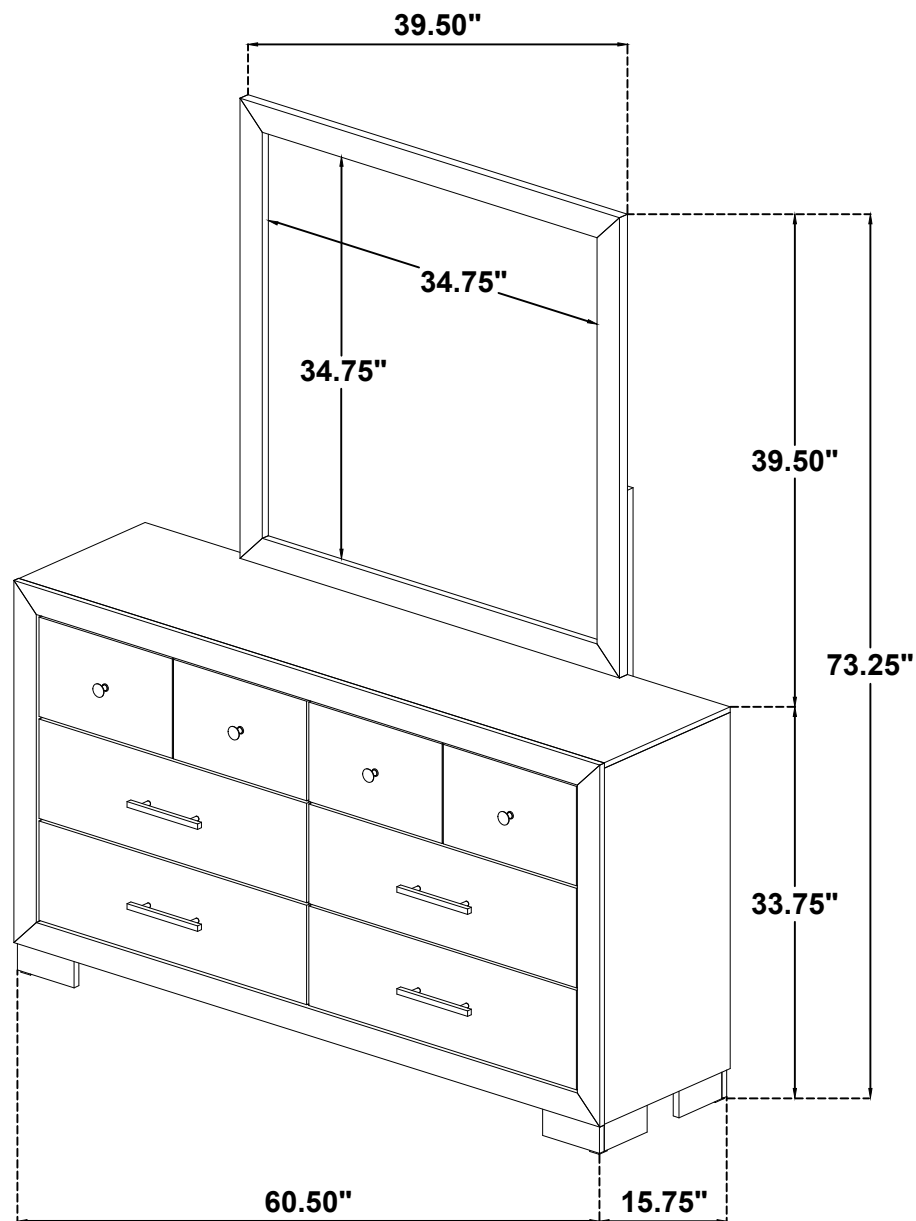

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223115
Chest

ITEM: **223115**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHEST

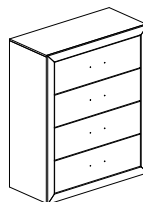

1PC

B LEG (WITH 'B' LABEL)



2PCS


C LEG (WITH 'C' LABEL)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH
(M4 x 110MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223115**


ASSEMBLY INSTRUCTIONS




STEP 1

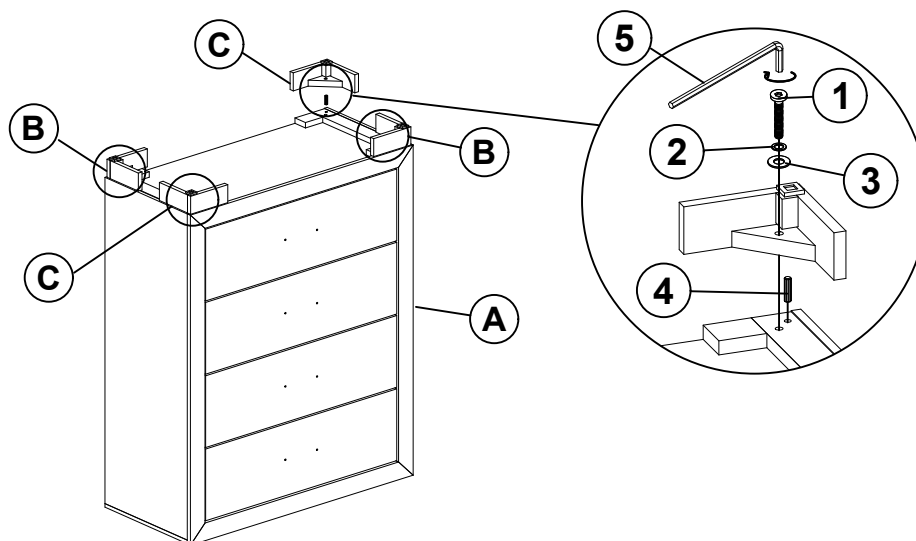

STEP 2

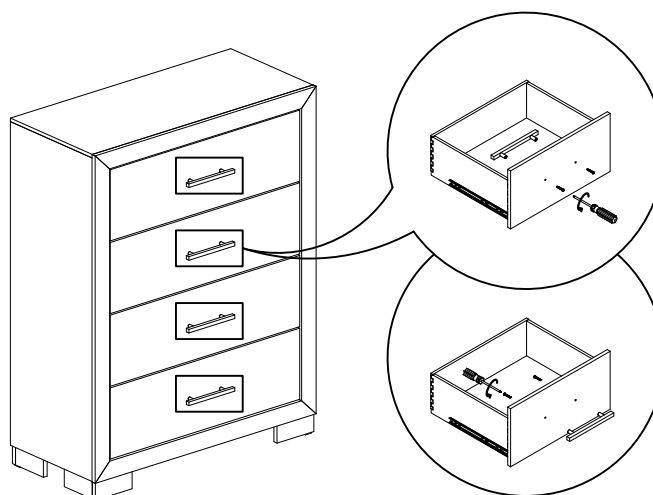

STEP 3 **COMPLETE**

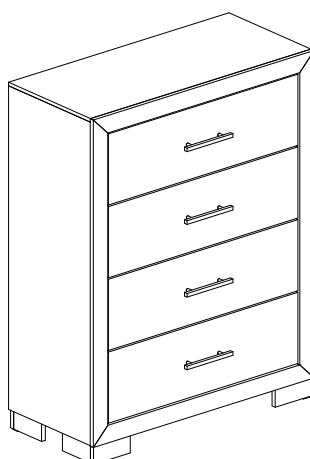

ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

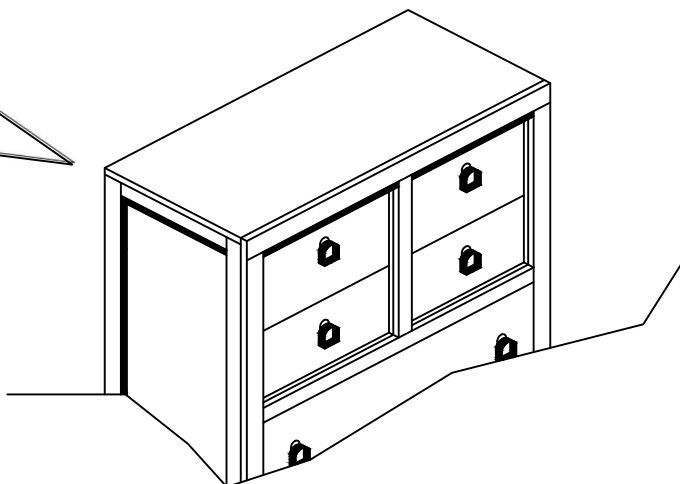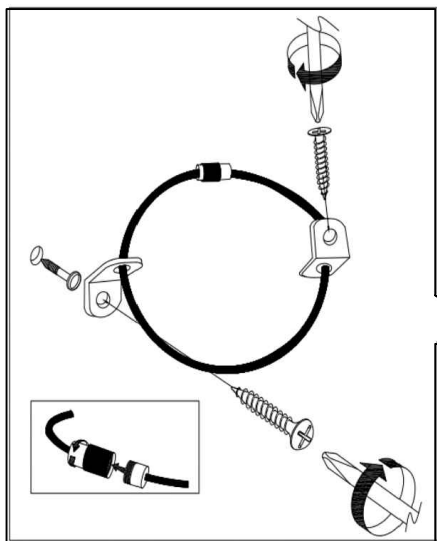

ITEM: **223115**



Inner Size of Drawer : 29.00"W X 12.25"D X 5.00"H X 0.50"T

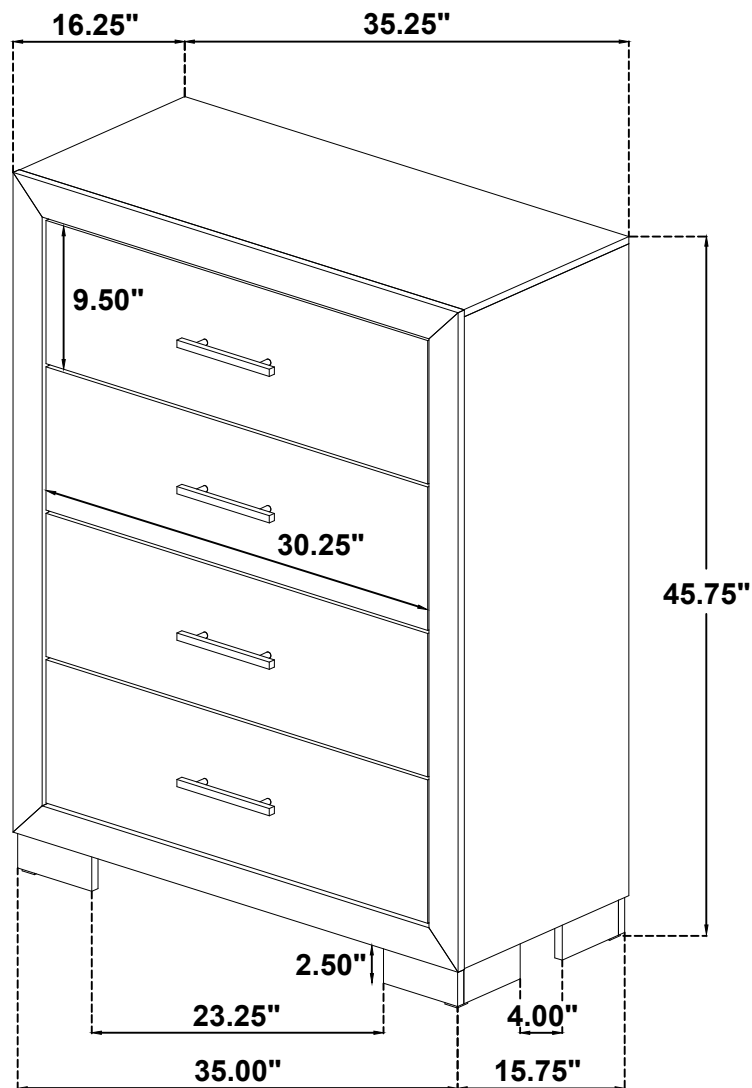

Note : Dimension tolerance $\pm 5\%$