



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223161Q(B1-B4)
Queen Bed

ITEM: 223161Q(B1-B4)

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

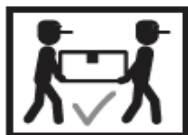


ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

- A HEADBOARD PANEL
- B HEADBOARD SUPPORT
- C ADAPTER



1PC



2PCS



1PC

B2 (BOX 2)

- D LEFT WING
- E RIGHT WING




1PC

1PC

B3 (BOX 3)

- F FOOTBOARD PANEL



1PC

B4 (BOX 4)

- G FOOTBOARD LEG
- H BED SLAT
- I BED SLAT SUPPORT WITH LEVELER
- J LEFT BED RAIL
- K RIGHT BED RAIL




2PCS




5PCS



5PCS



1PC



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223161Q(B1-B4)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B4 (BOX 4) - HARDWARE PACK IS LOCATED IN 223161Q(B4)

1	ALLEN WRENCH (Φ4 X 95mm- ZINC)		1PC
2	SHORT BOLT (Φ6 X 30mm - BLK)		4PCS
3	MEDIUM BOLT (Φ6 X 45mm - BLK)		17PCS
4	LONG BOLT (Φ6 X 60mm - BLK)		6PCS
5	FLAT HEAD SCREW (Φ4 X 32mm - BLK)		10PCS
6	LOCK WASHER (Φ6 - BLK)		22PCS
7	FLAT WASHER (Φ7 X 19mm X 2.0 - BLK)		22PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **223161Q(B1-B4)**


ASSEMBLY INSTRUCTIONS



STEP 1

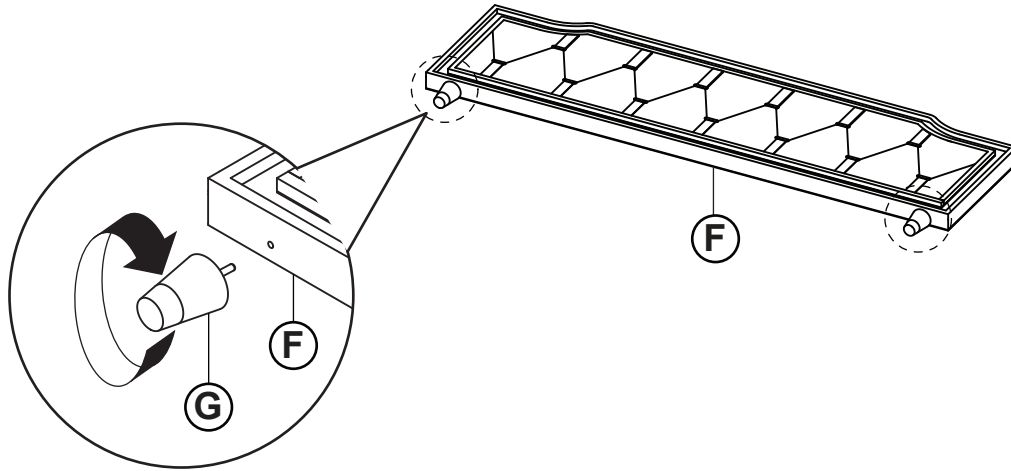


STEP 2

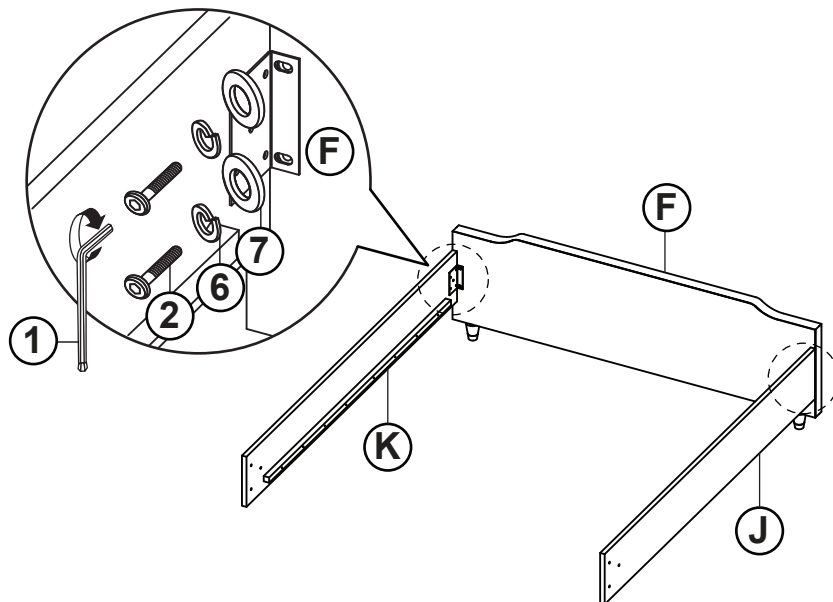

STEP 3

Hand tighten all the bolts

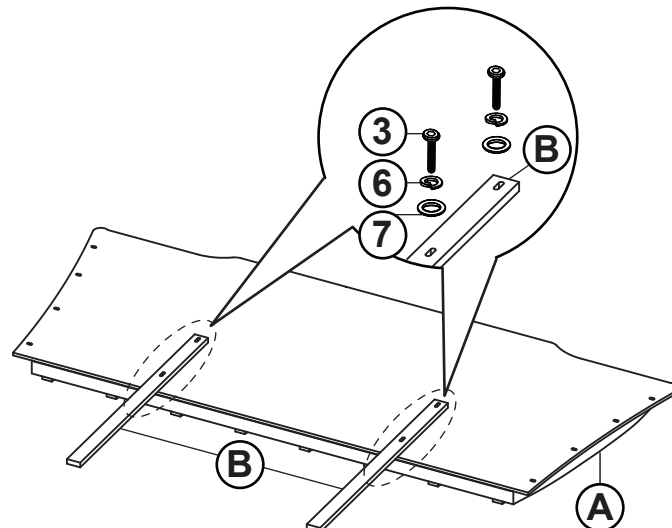


ITEM: **223161Q(B1-B4)**



ASSEMBLY INSTRUCTIONS


STEP 4

Hand tighten all the bolts

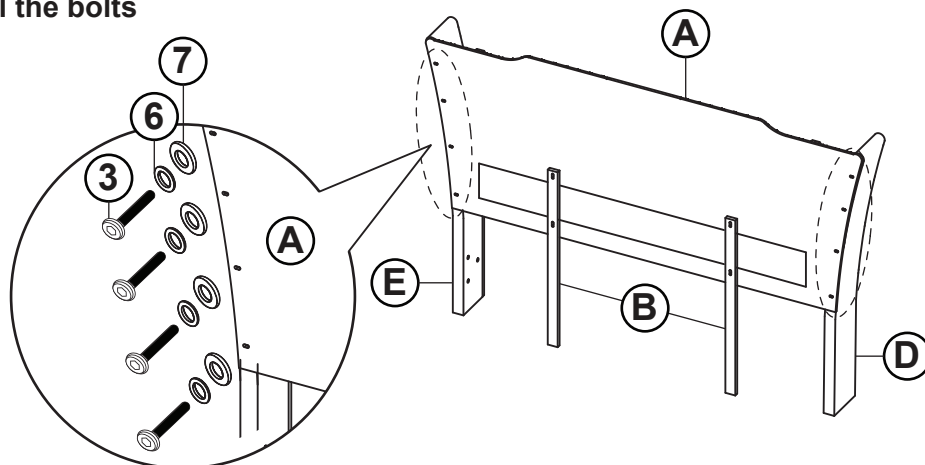


STEP 5

Fully tighten all the bolts using Allen Wrench (1) at Step 3, 4 & 5

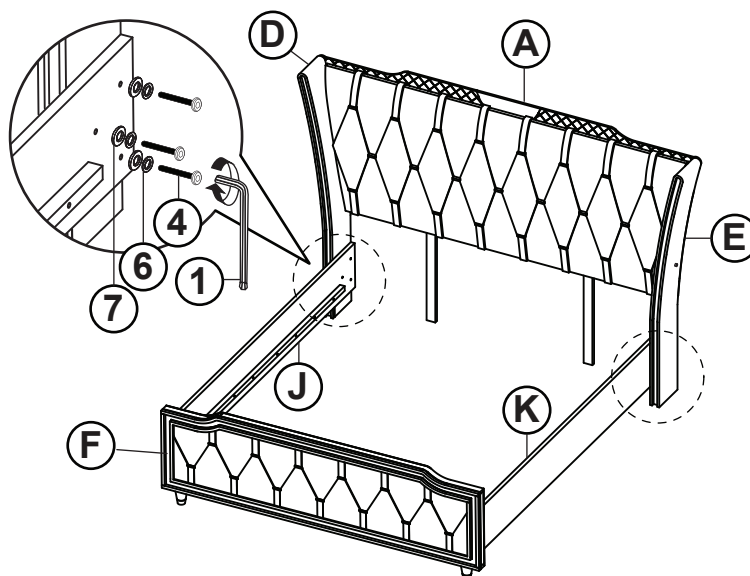

STEP 6

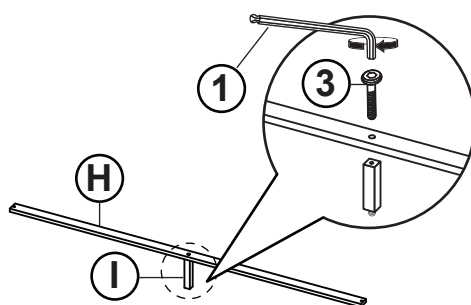


ITEM: **223161Q(B1-B4)**




ASSEMBLY INSTRUCTIONS


STEP 7

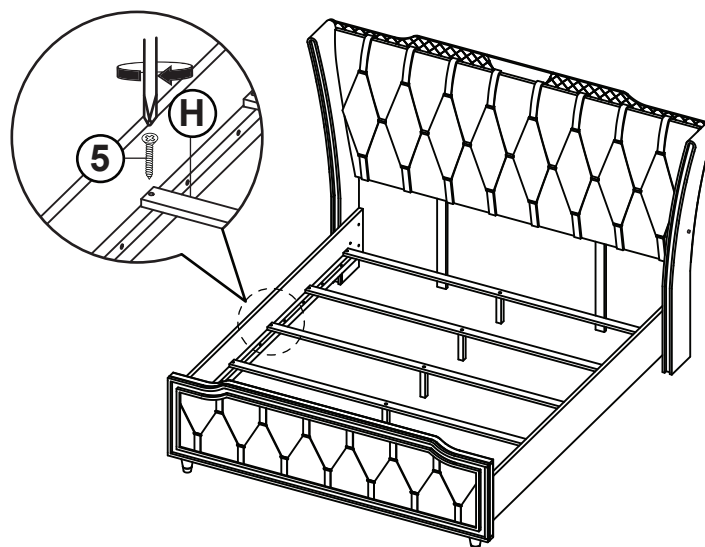

STEP 8

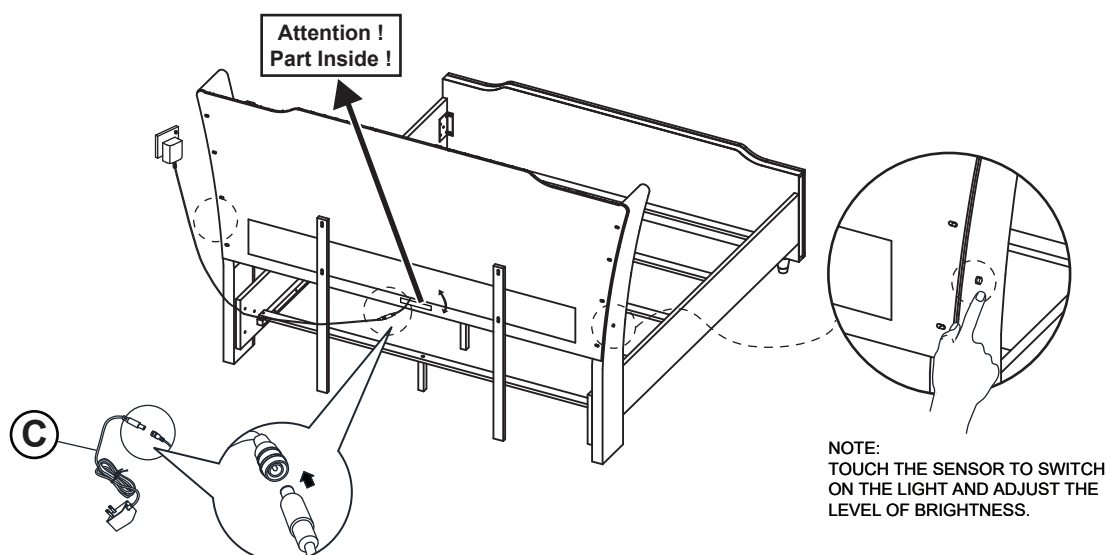


STEP 9 COMPLETE

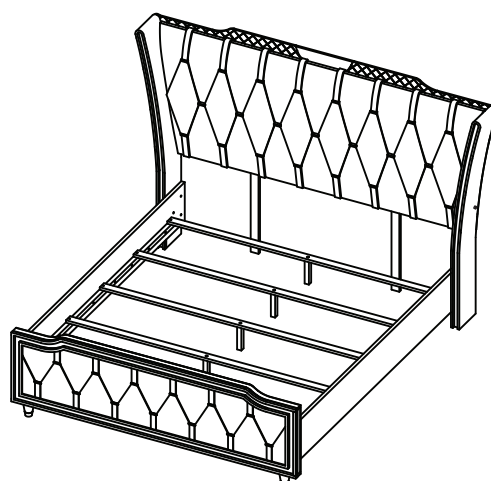

ITEM: **223161Q(B1-B4)**



Inner Size : 61.25"W x 80.75"D

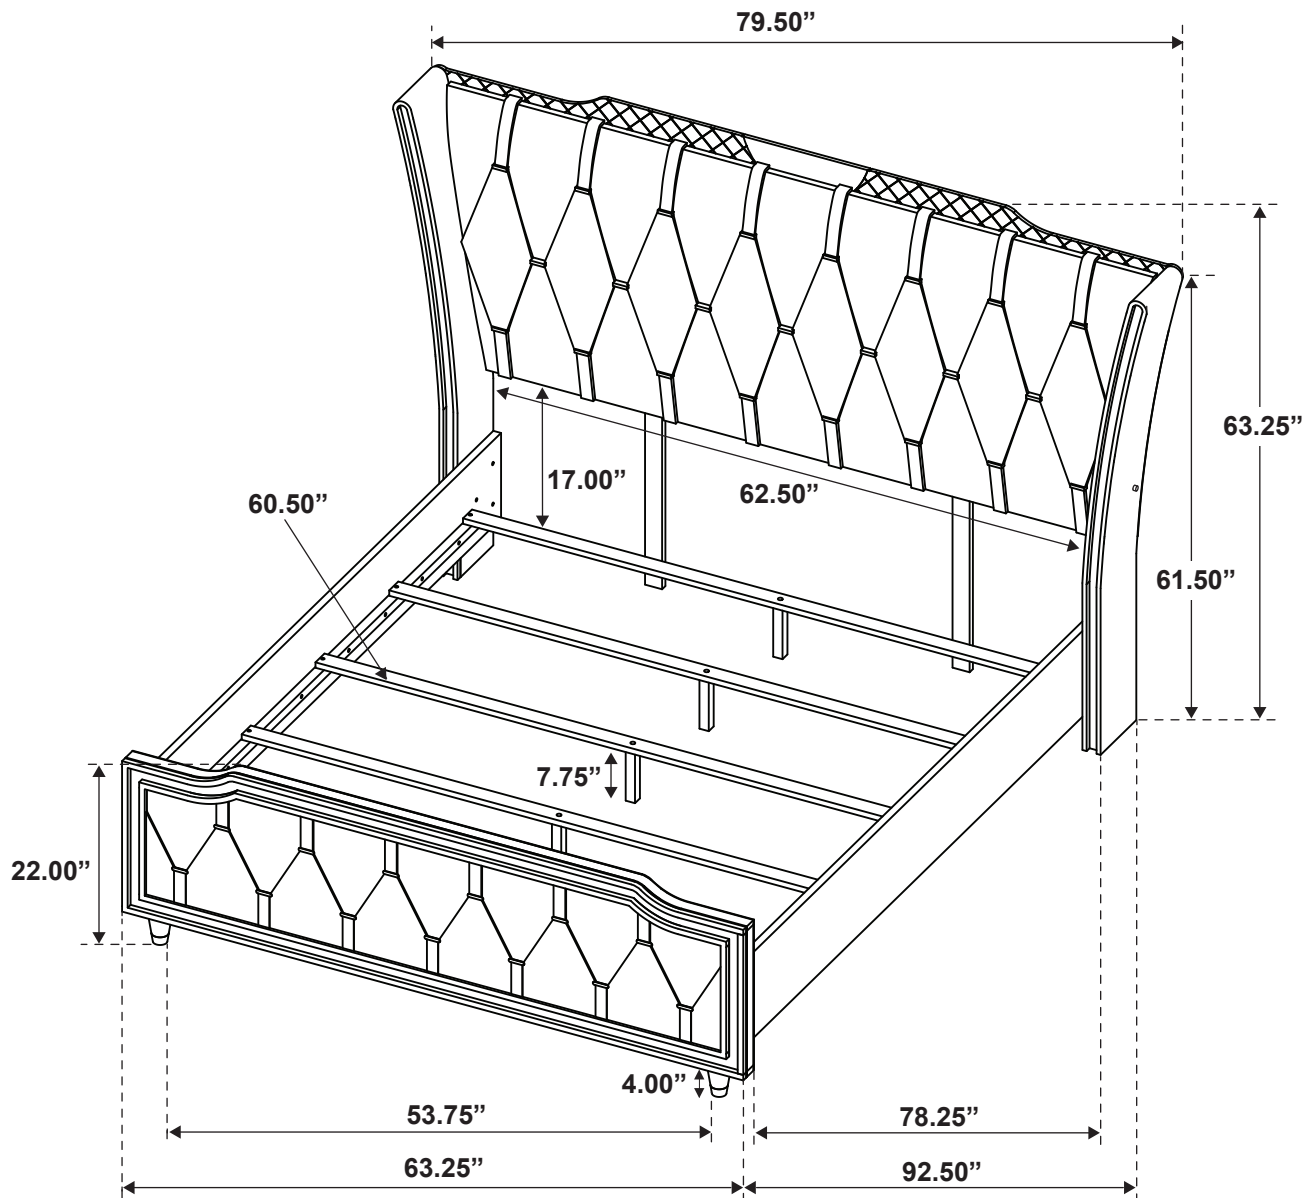

Note: Dimension tolerance $\pm 5\%$