



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 223250KW (B1&B2) California King Bed

REVISION 0: 08/10/2018  
REVISION 1: 04/22/2019  
REVISION 2: 09/12/2019

# ITEM: 223250KW (B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

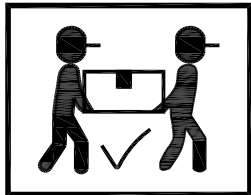


ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 ( BOX 1 )

A HEADBOARD  
PANEL

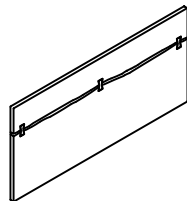

1PC

B HEADBOARD  
LEG



2PCS


C CENTER RAIL  
SUPPORT



1PC


### B2 ( BOX 2 )

D FOOTBOARD

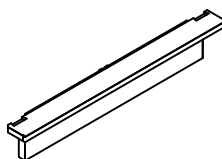


1PC

E RIGHT  
SIDE RAIL

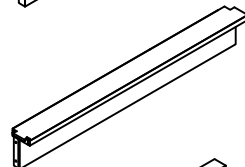


1PC

F LEFT  
SIDE RAIL

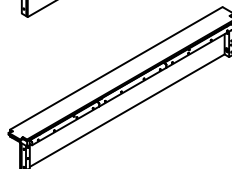


1PC

G TRESTLE BAR

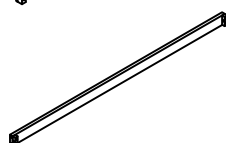


1PC

H CENTER RAIL

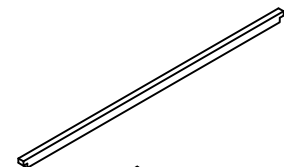

1PC

I ROLL SLAT  
( 13PCS )

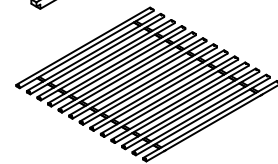


1SET

J CENTER RAIL  
SUPPORT  
WITH LEVELER




3PCS

K CONCEAL  
PANEL

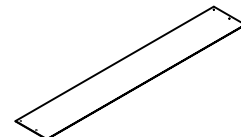

1PC

HB 223250KW (B1)  
\* FROM BOX 1  
HEADBOARD  
COMPLETE

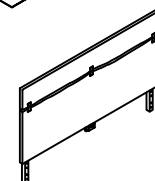

1PC

### NOTE :

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 223250KW (B1 & B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










### WARNING!












1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z - B1 ( BOX 1 ) - HARDWARE PACK IS LOCATED IN 223250KW (B1)

1	<b>SHORT BOLT</b> ( M6 x 40mm - BLK )		2PCS	5	<b>BIG FLAT WASHER</b> ( Ø20 x Ø8 x 2mm - BLK )		8PCS
2	<b>LONG BOLT</b> ( M8 x 60mm - BLK )		8PCS	6	<b>Z-ALLEN WRENCH</b> ( 4mm - WHT )		1PC
3	<b>LOCK WASHER</b> ( Ø13 x Ø8 x 2mm - BLK )		10PCS	7	<b>ALLEN WRENCH</b> ( 5mm - WHT )		1PC
4	<b>SMALL FLAT WASHER</b> ( Ø16 x Ø6.5 x 1mm - BLK )		2PCS				

### Z - B2 ( BOX 2 ) - HARDWARE PACK IS LOCATED IN 223250KW (B2)

8	<b>BOLT 1</b> ( M6 x 40mm - BLK )		2PCS	14	<b>SMALL FLAT WASHER</b> ( Ø16 x Ø6.5 x 1mm - BLK )		4PCS
9	<b>BOLT 2</b> ( M6 x 50mm - BLK )		2PCS	15	<b>Z-ALLEN WRENCH</b> ( 4mm - WHT )		1PC
10	<b>BOLT 3</b> ( M8 x 60mm - BLK )		4PCS	16	<b>ALLEN WRENCH</b> ( 5mm - BLK )		1PC
11	<b>BOLT 4</b> ( M8 x 90mm - BLK )		4PCS	17	<b>LONG PAN HEAD SCREW</b> ( Ø7 x Ø1 1/4" - BLK )		26PCS
12	<b>LOCK WASHER</b> ( Ø13 x Ø8 x 2mm - BLK )		12PCS	18	<b>SHORT PAN HEAD SCREW</b> ( Ø6 x Ø5/8" - BLK )		4PCS
13	<b>BIG FLAT WASHER</b> ( Ø18 x Ø8 x 1mm - BLK )		8PCS				

### NOTE :


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 223250KW (B1&B2)


## ASSEMBLY INSTRUCTIONS



### STEP 1

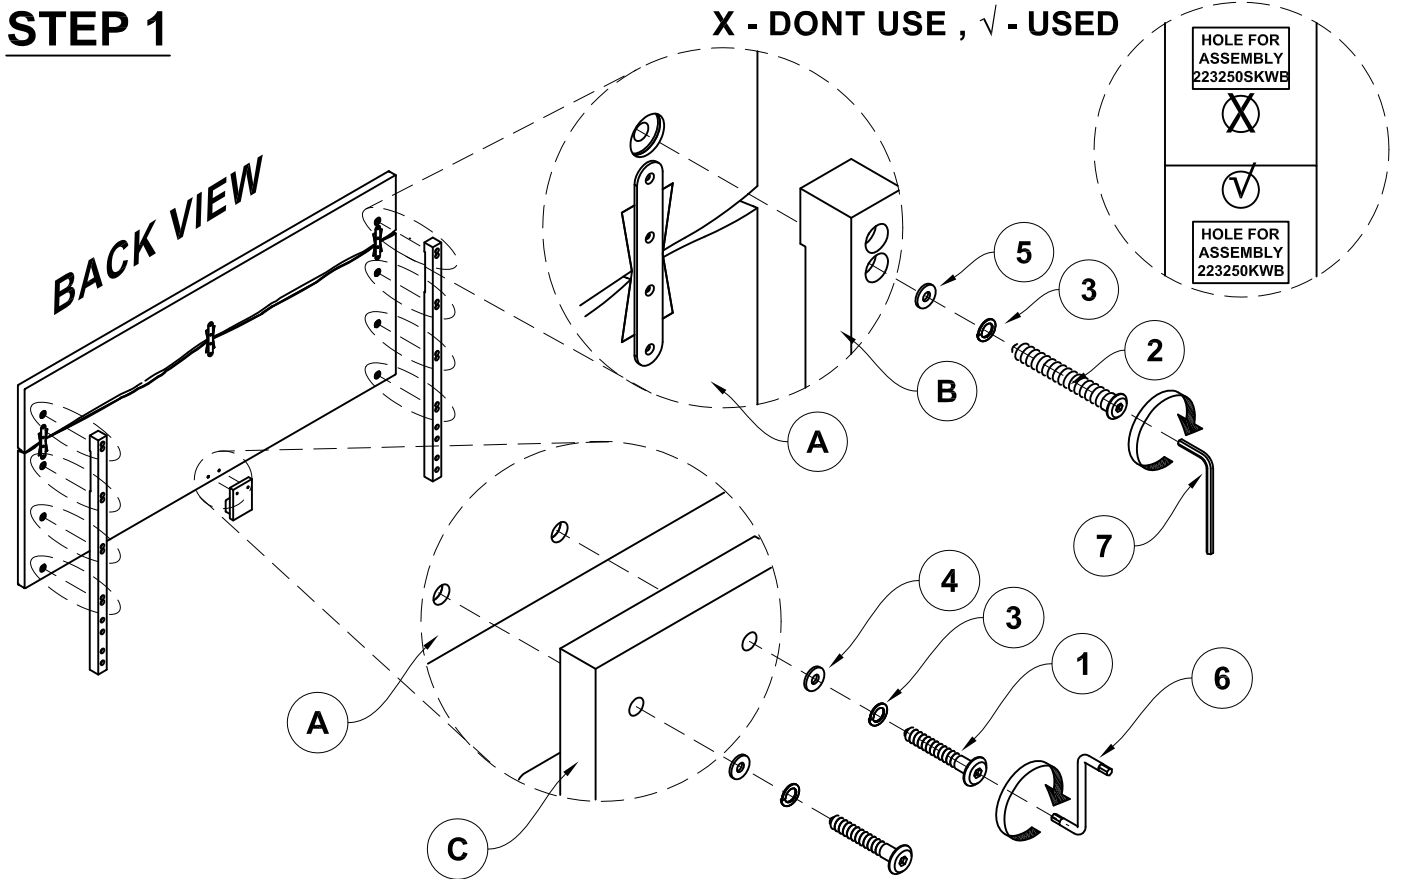

### STEP 2

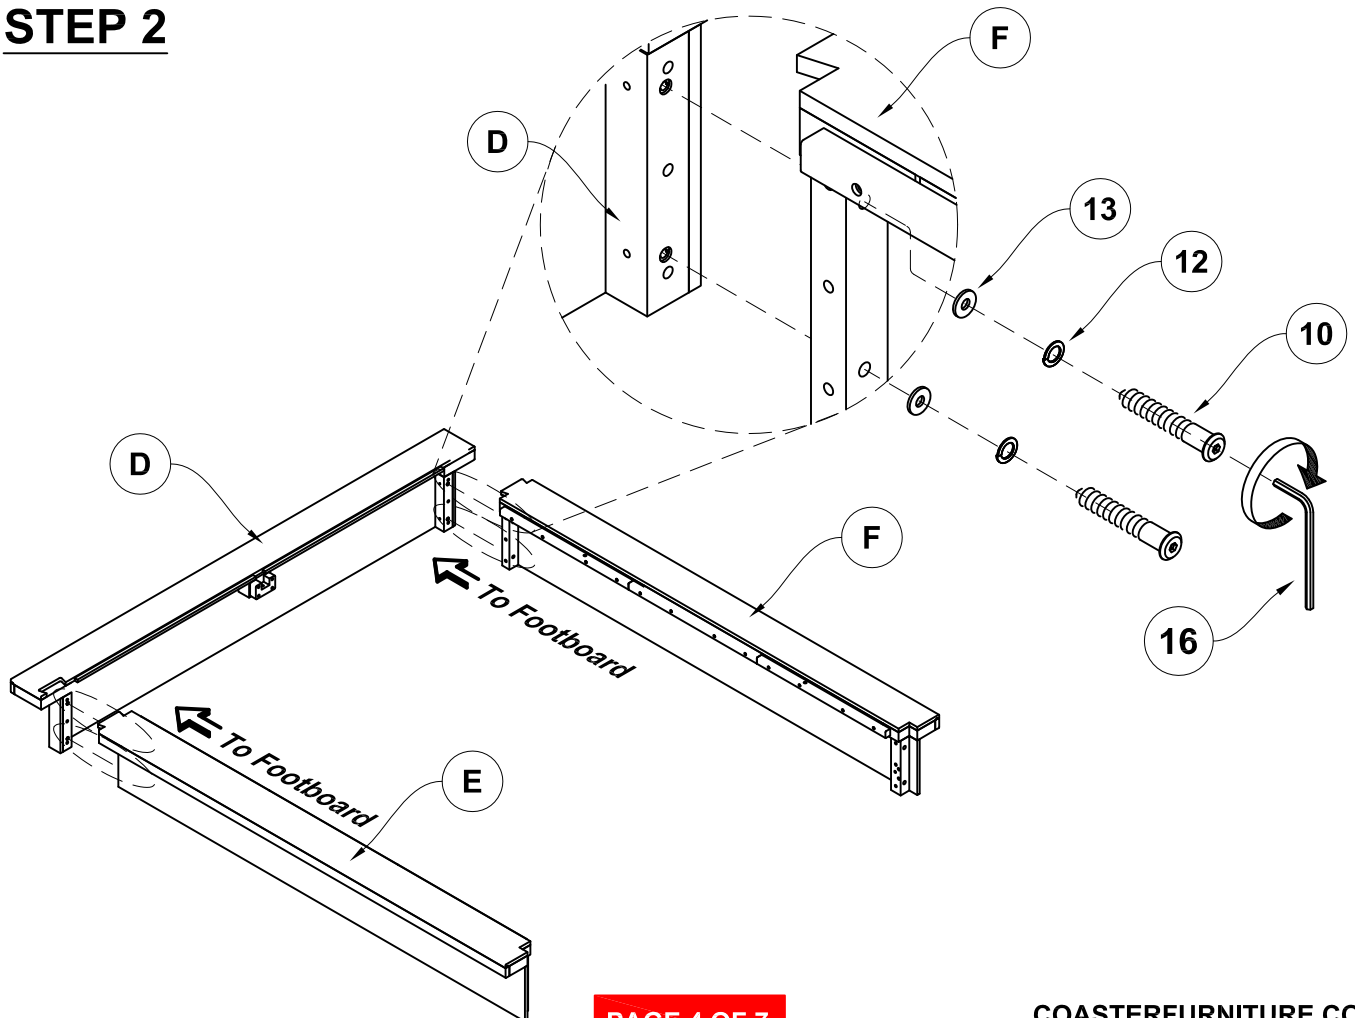


# ITEM: 223250KW (B1 & B2)


## ASSEMBLY INSTRUCTIONS



### STEP 3

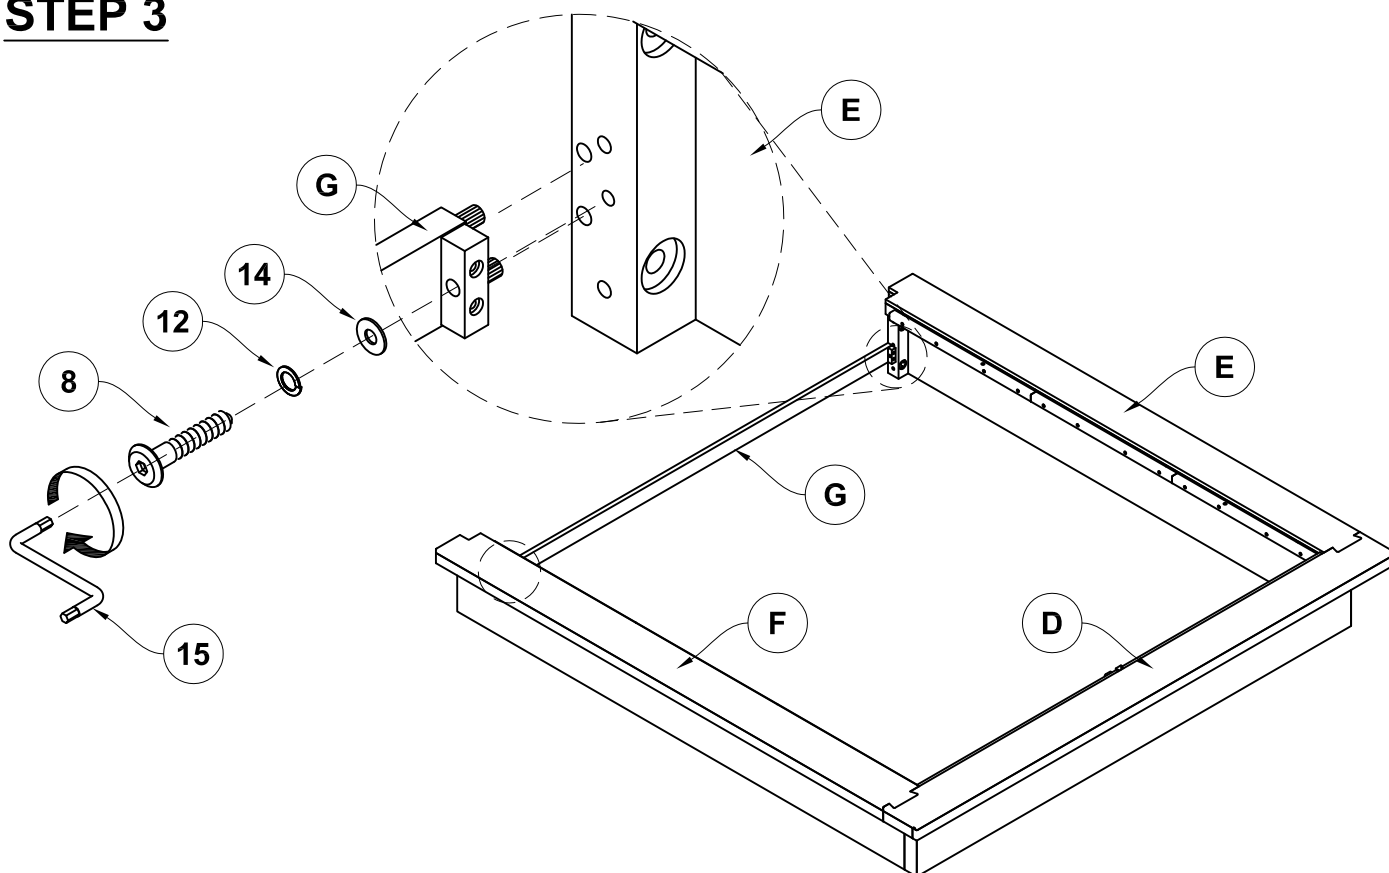

### STEP 4

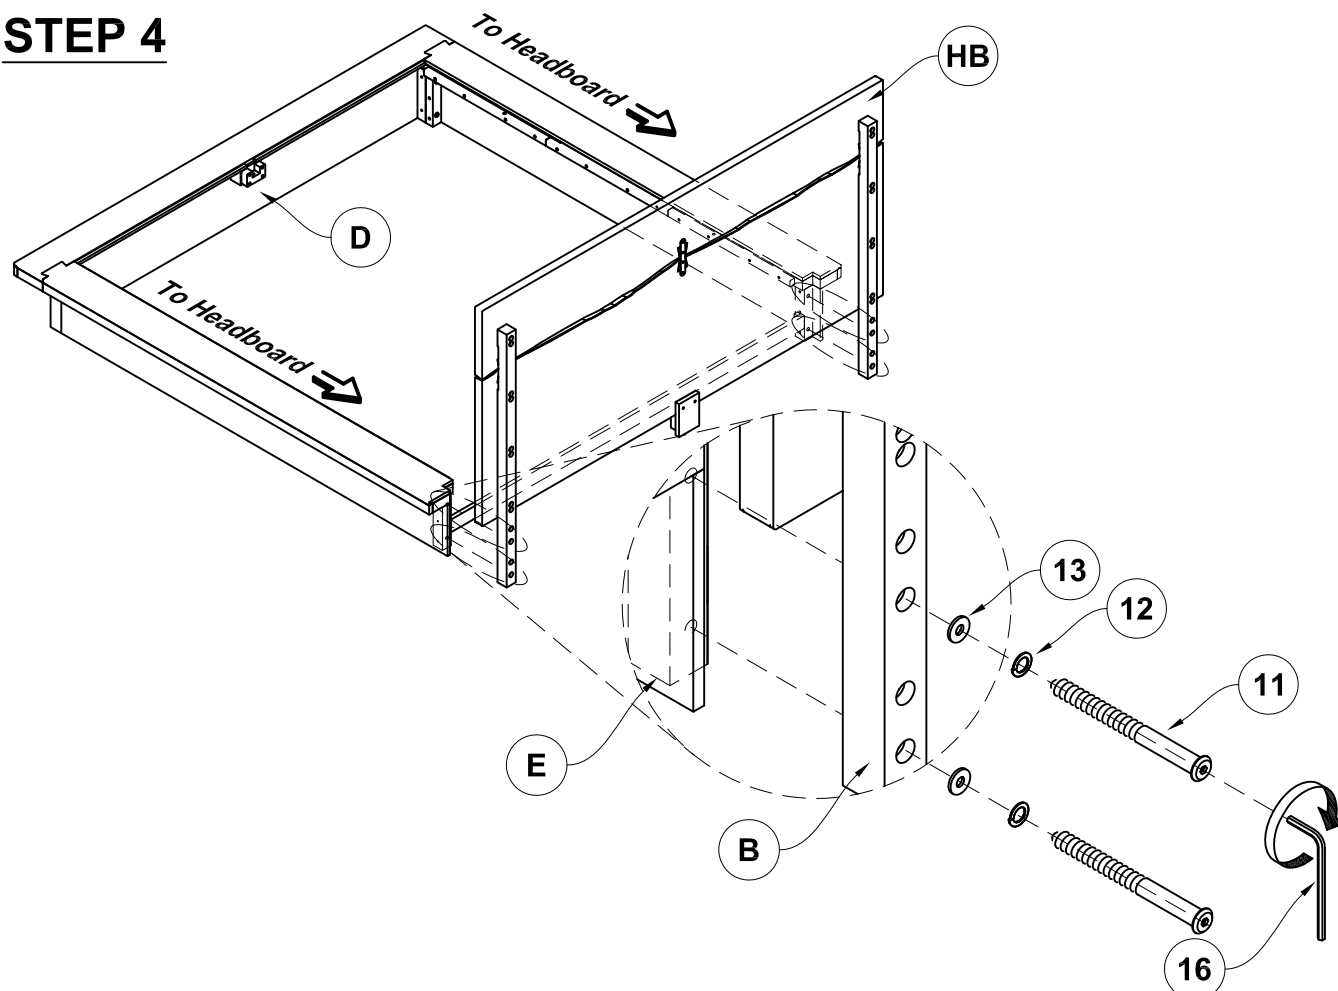


# ITEM: 223250KW (B1 & B2)


## ASSEMBLY INSTRUCTIONS



### STEP 5

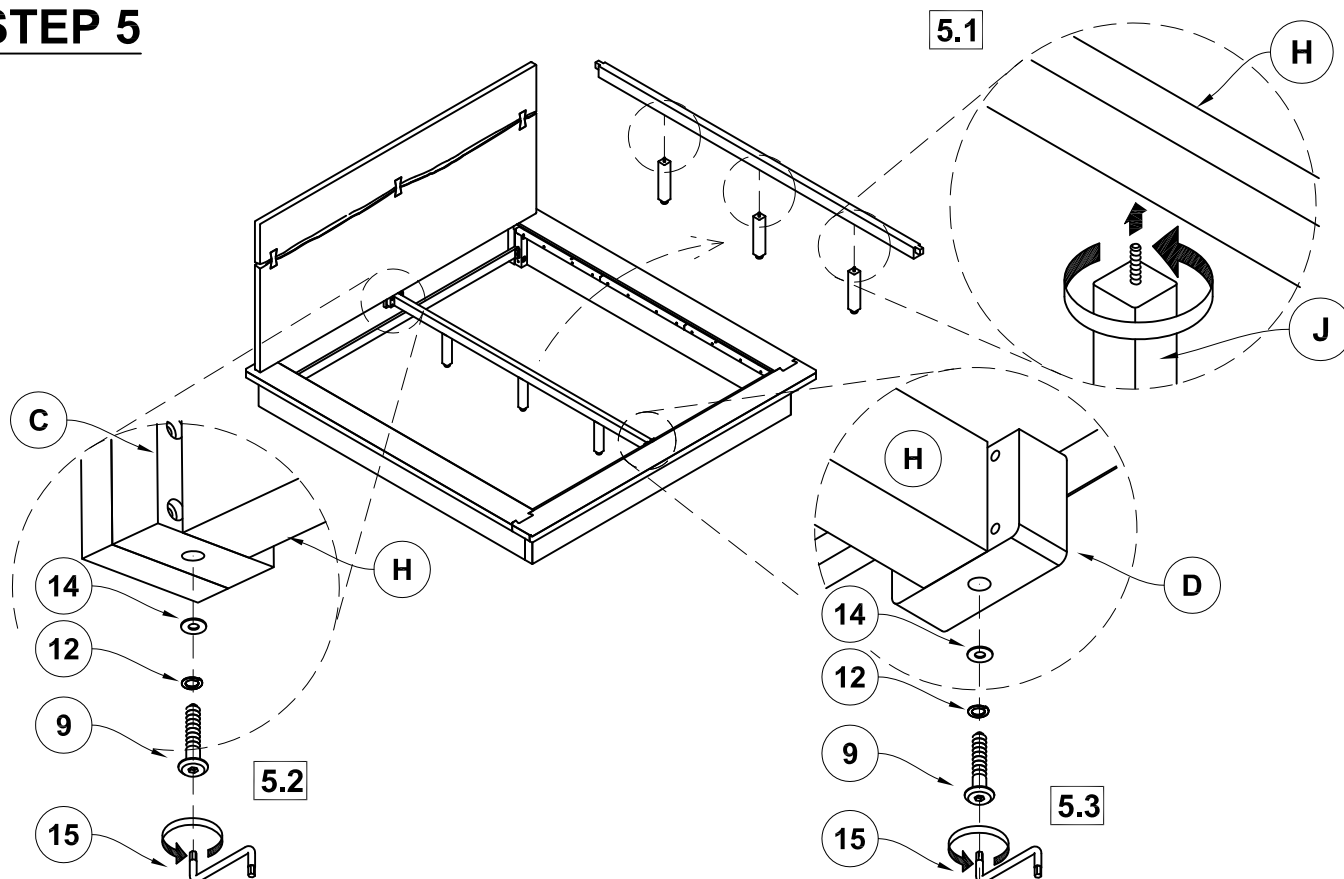


### STEP 6

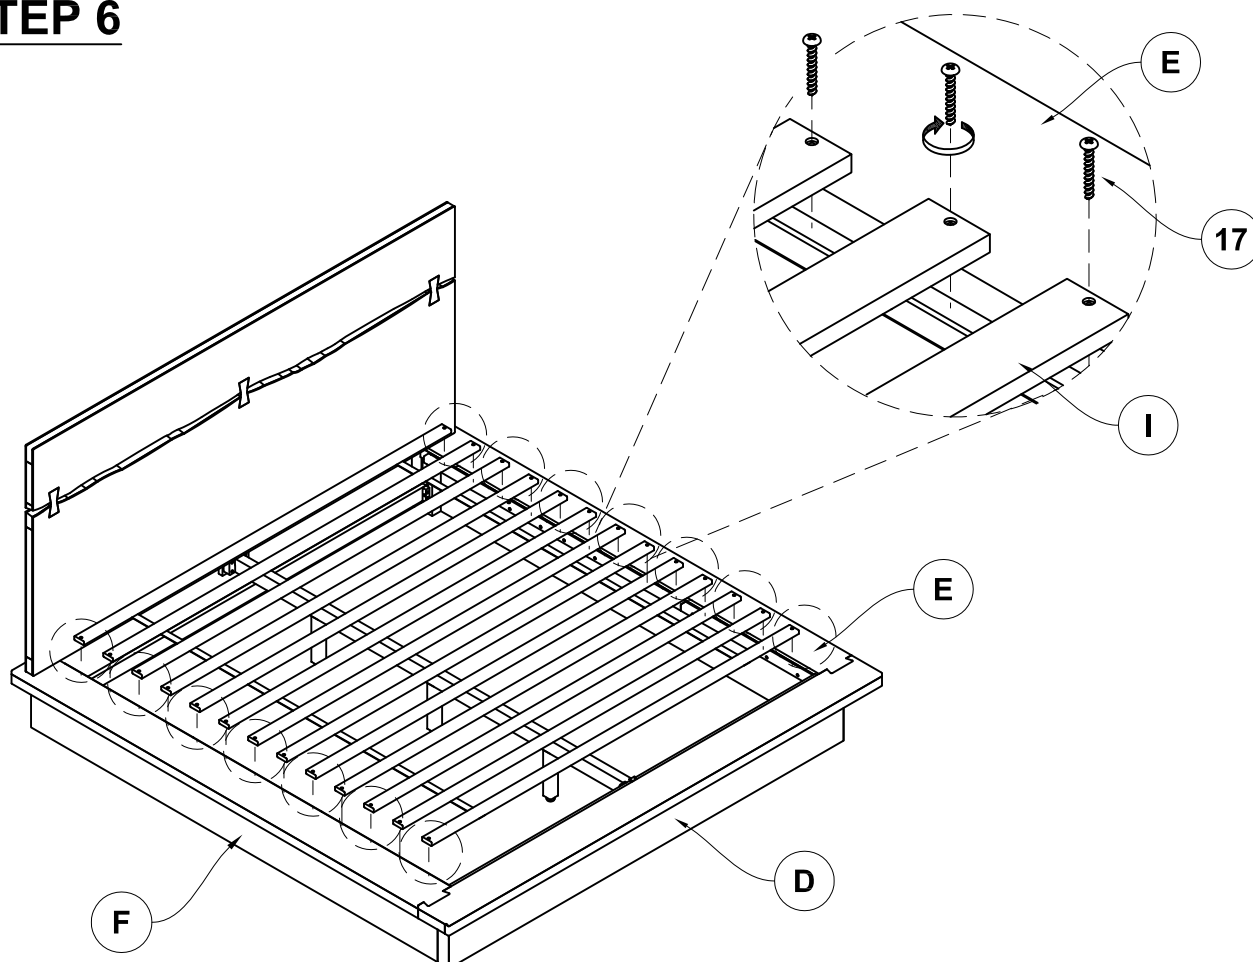



# ITEM: 223250KW (B1 & B2)

## ASSEMBLY INSTRUCTIONS

### STEP 7

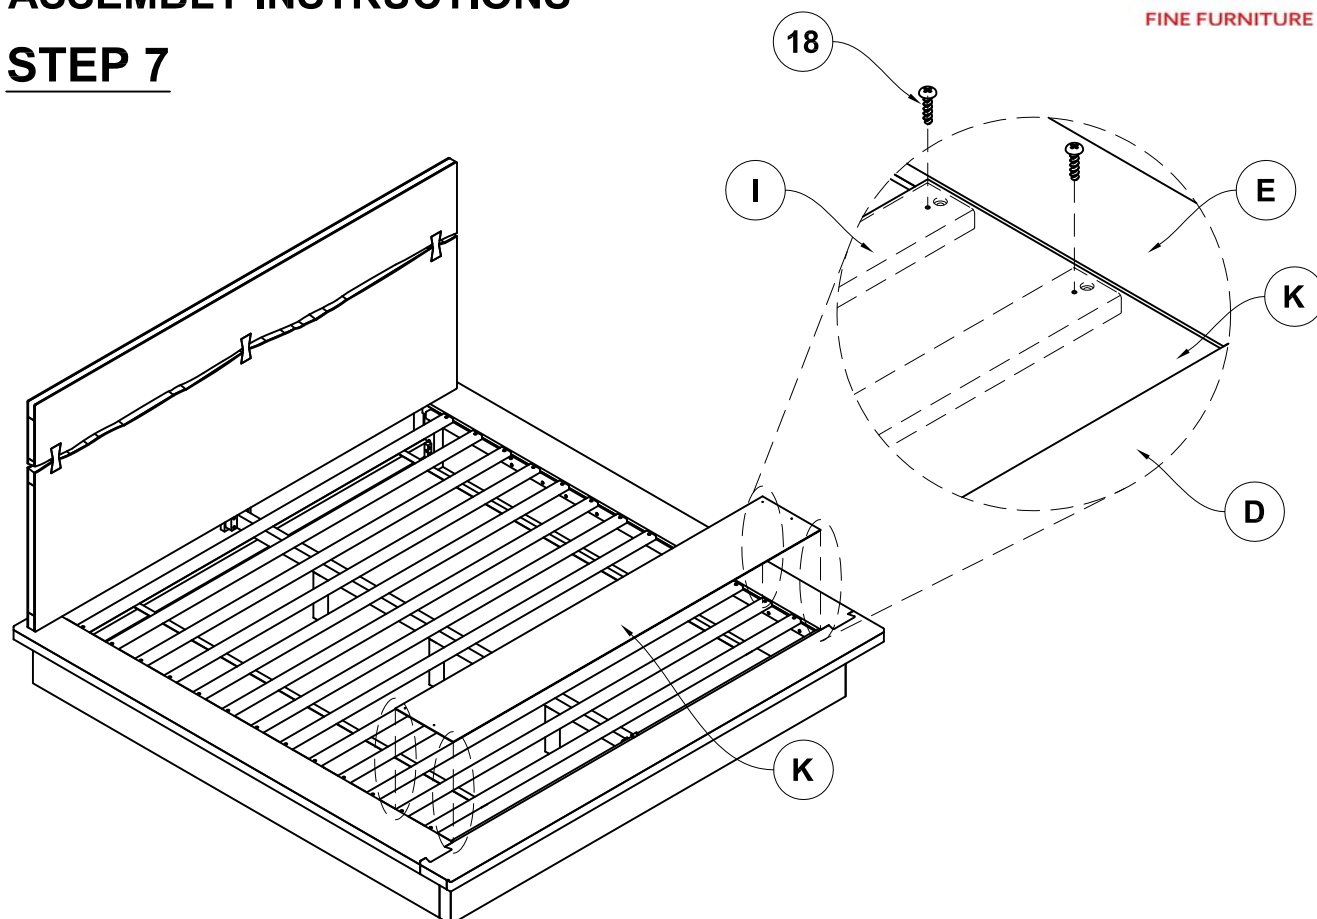

### STEP 8 COMPLETE

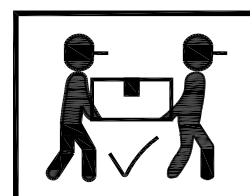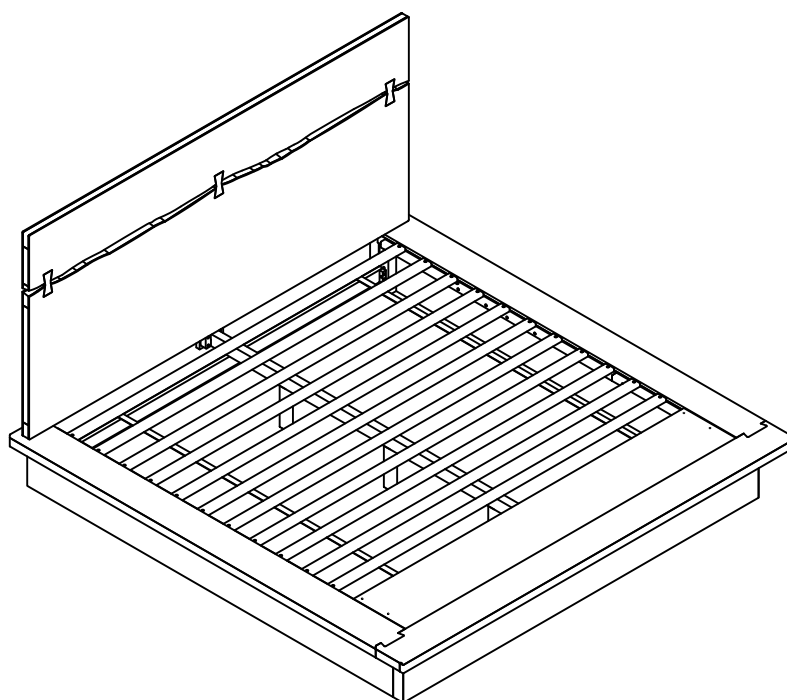




ITEM: 223250KW (B1&B2)



Inner Size: 84.25"W X 90.00"D

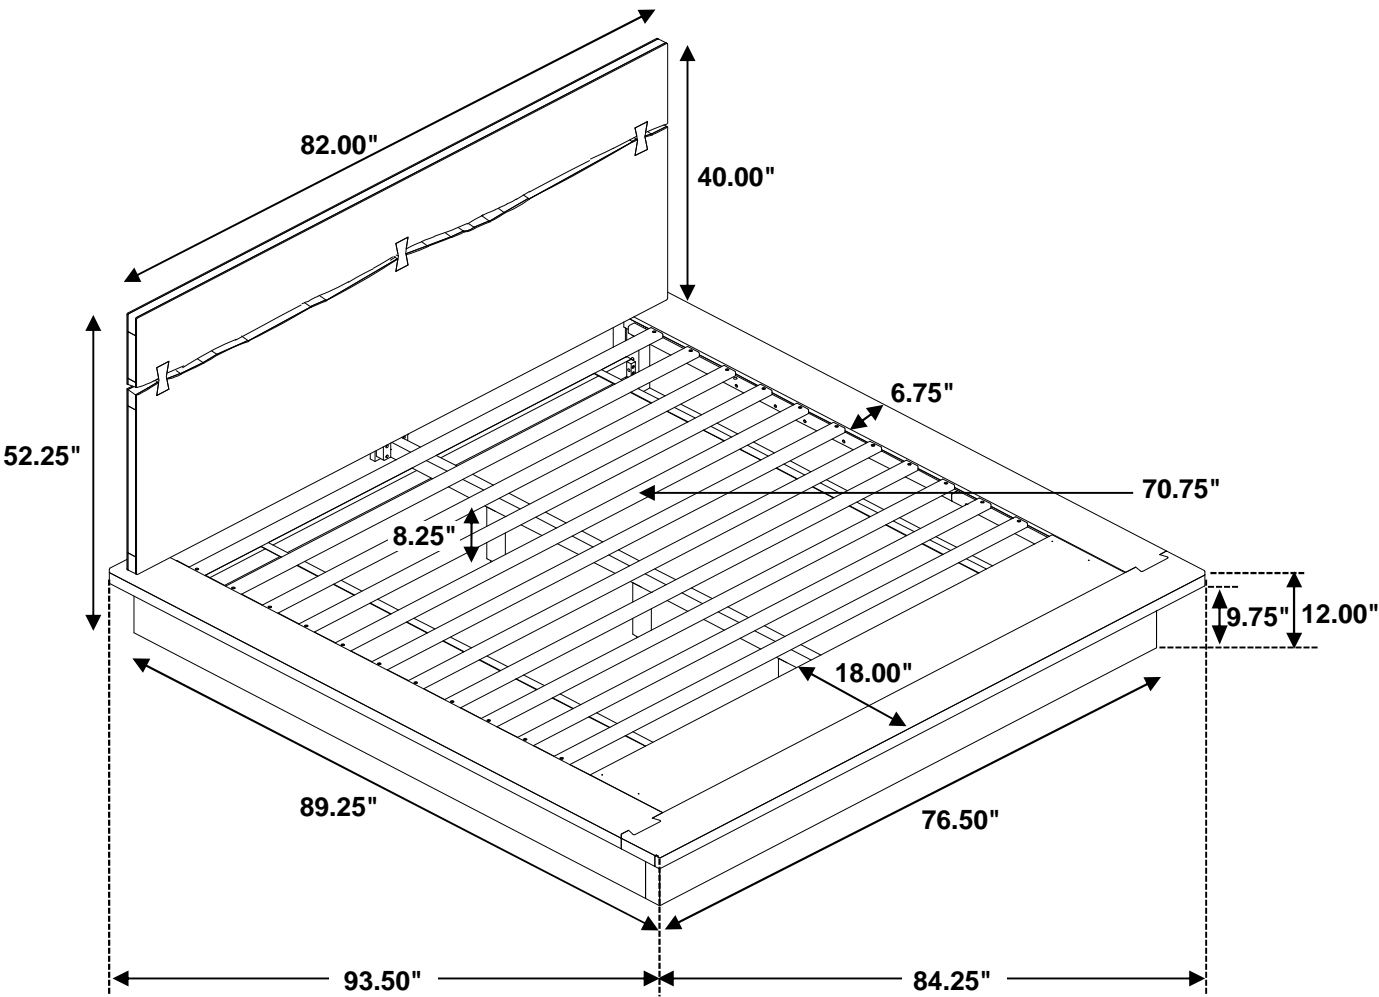

Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223253**  
***Dresser***

REVISION 0: 05/28/2018  
REVISION 1: 04/22/2019  
REVISION 2: 07/25/2019  
REVISION 3: 04/05/2024

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

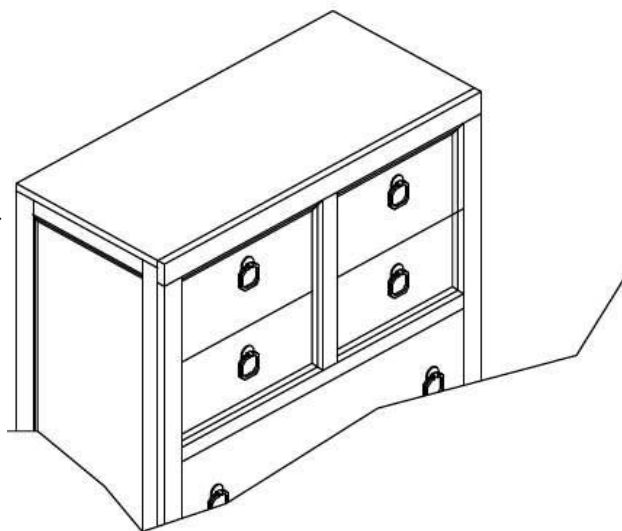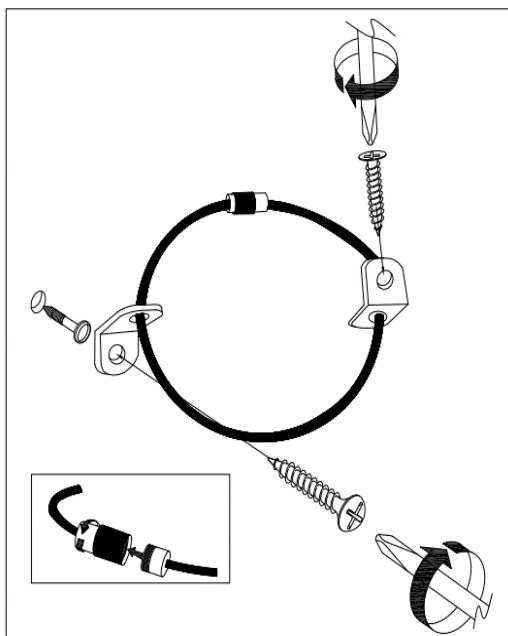

ITEM: **223253**



Inner Size of Drawer A : 28.25"W X 13.75"D X 5.50"H X 0.50"T  
Inner Size of Drawer B : 28.25"W X 13.75"D X 7.00"H X 0.50"T  
Inner Size of Drawer C : 28.25"W X 13.75"D X 7.00"H X 0.50"T

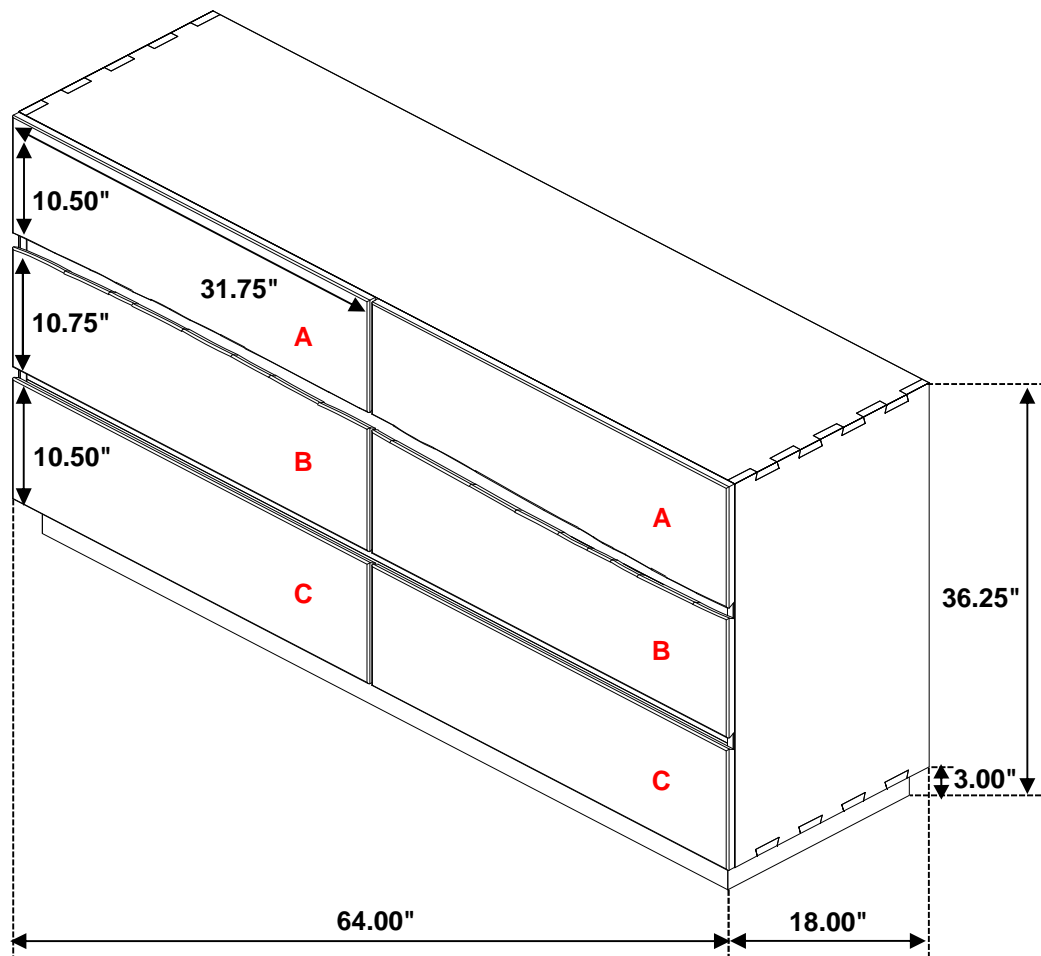

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223254**  
**Mirror**

REVISION 0: 06/27/2018  
REVISION 1: 04/22/2019  
REVISION 2: 08/27/2019

# ITEM: 223254



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

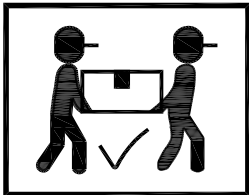


**ASSEMBLY TIME**

**10 MINUTES**


## PARTS IDENTIFICATION

**A MIRROR**



**1PC**

**B DRESSER**  
**\* FROM BOX ITEM #223253**

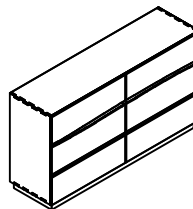

**1PC**


**C MIRROR SUPPORT**  
**( PACKED WITH MIRROR )**



**2PCS**

## HARDWARE IDENTIFICATION

**1 BOLT**  
**( M6 x 35mm - BLK )**



**8PCS**

**2 LOCK WASHER**  
**( Ø13 x Ø6 x 1mm - BLK )**



**8PCS**

**3 FLAT WASHER**  
**( Ø16 x Ø6.5 x 1mm - BLK )**



**8PCS**

**4 Z-ALLEN WRENCH**  
**( 4MM - WHT )**




**1PC**



ITEM: **223254**

## ASSEMBLY INSTRUCTIONS


### STEP 1

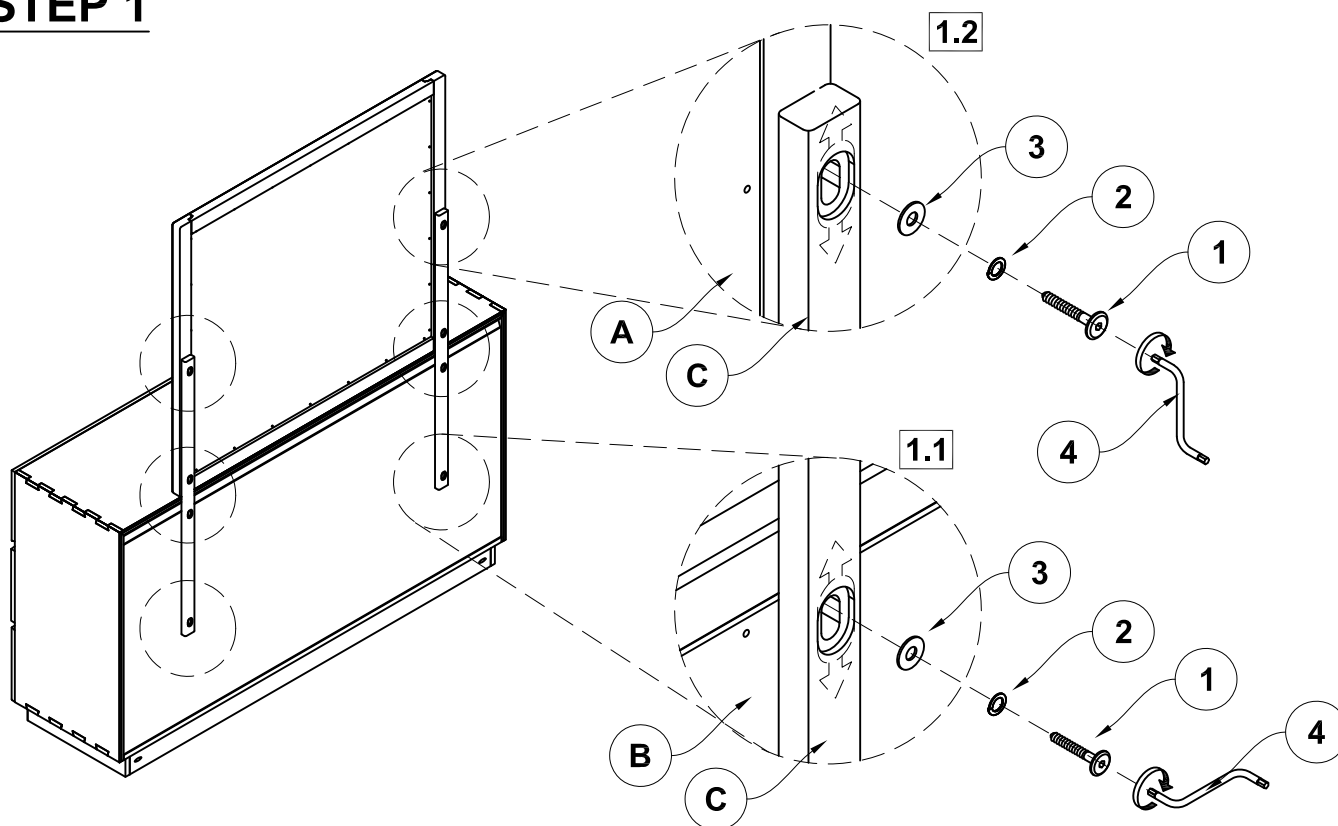

### STEP 2 COMPLETE

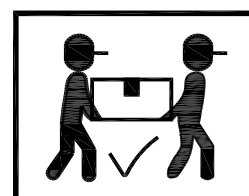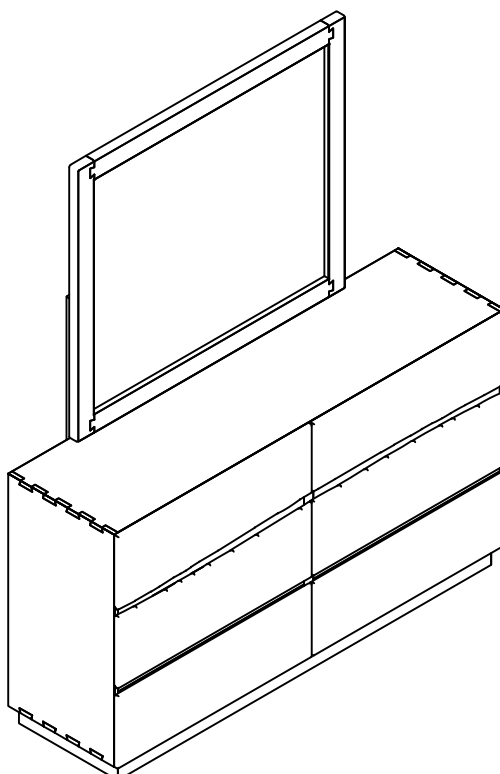

ITEM: 223254

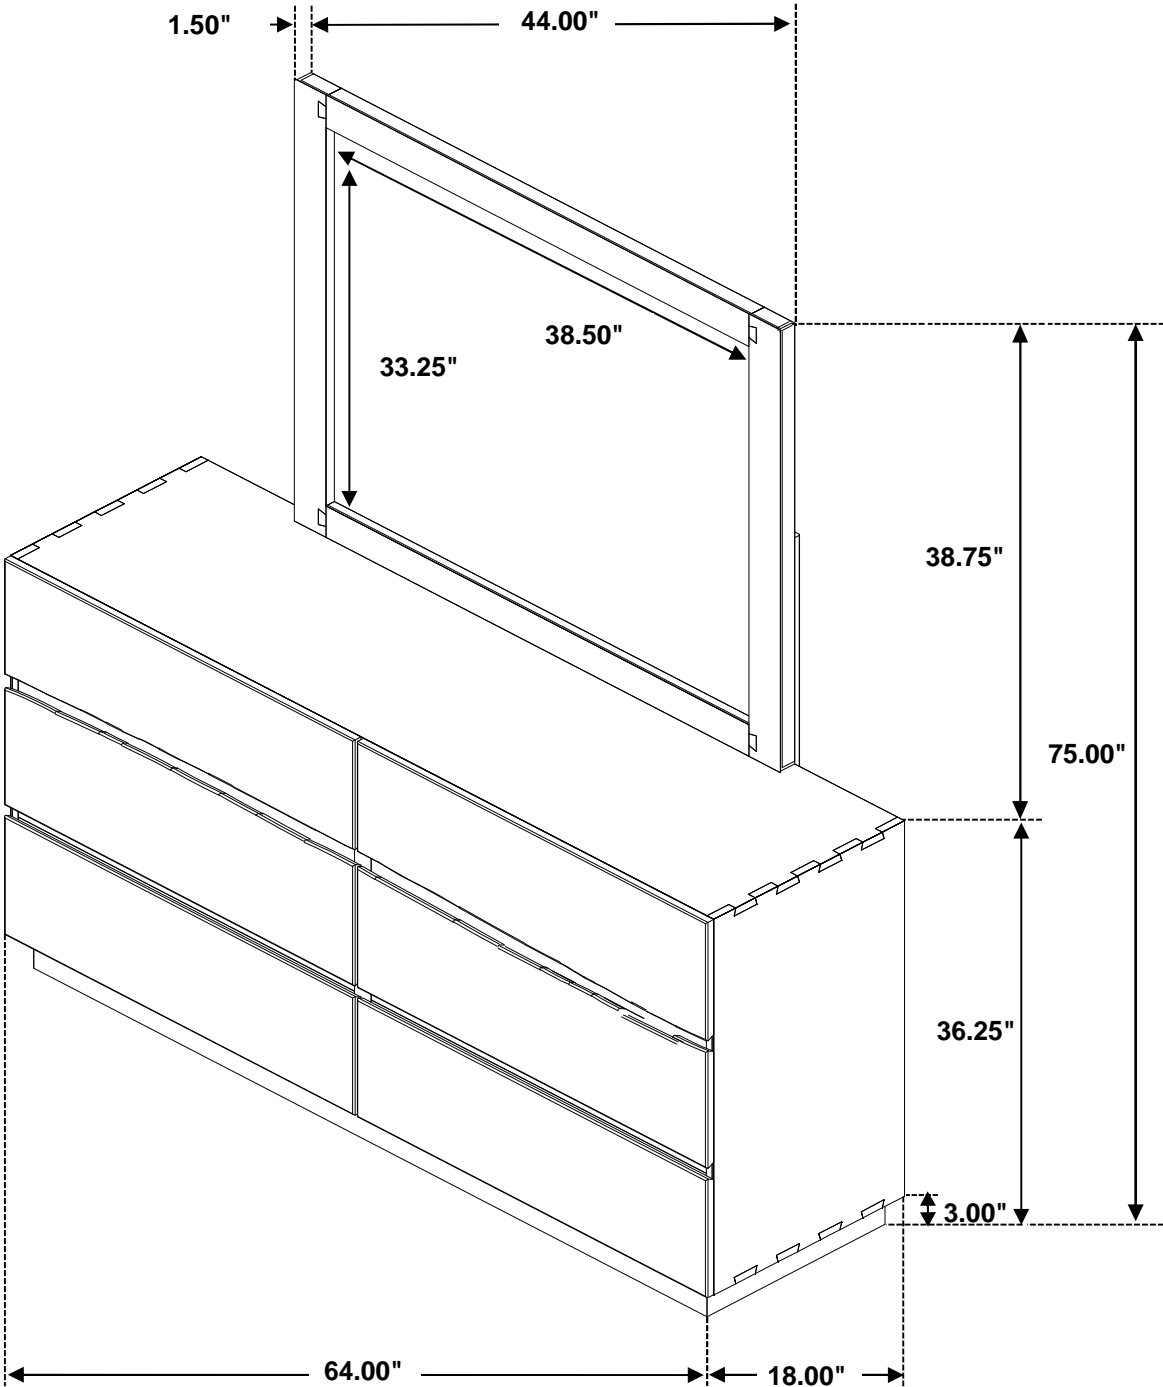

Note: Dimension tolerance  $\pm 5\%$





# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223255**  
**Chest**


REVISION 0: 05/28/2018  
REVISION 1: 09/27/2018  
REVISION 2: 04/22/2019  
REVISION 3: 07/25/2019  
REVISION 4: 10/02/2023  
REVISION 5: 04/05/2024

ITEM: **223255**


## ASSEMBLY INSTRUCTIONS



### STEP 1 OPTIONAL DIVIDER

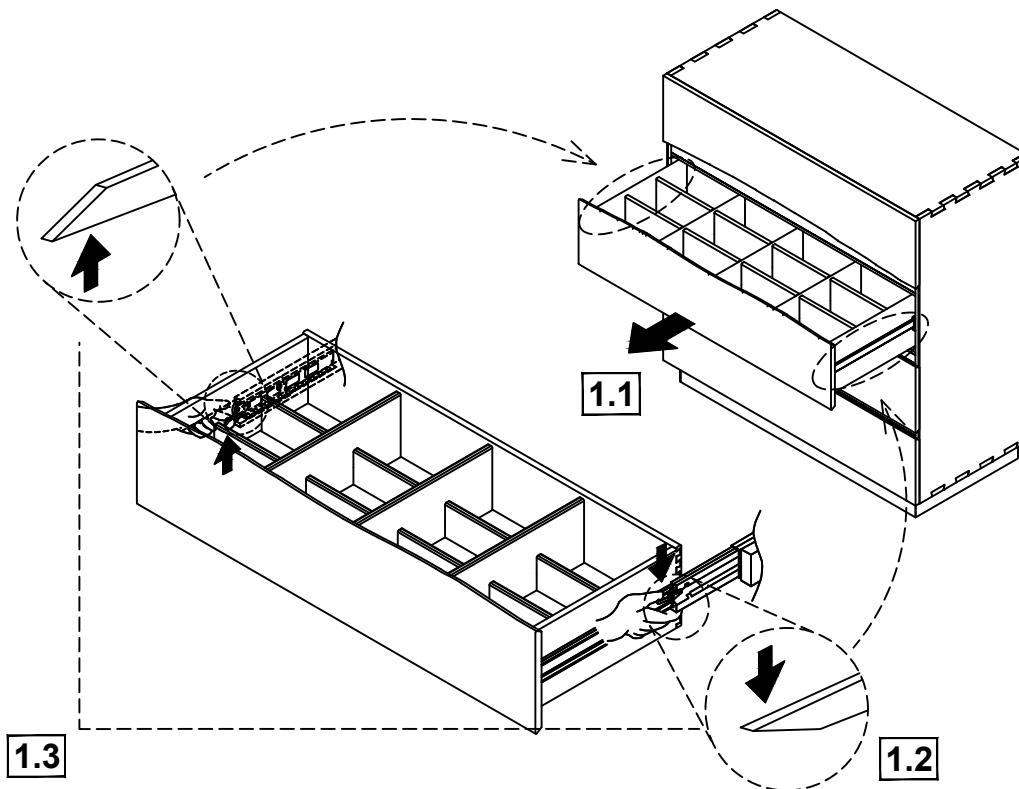

### STEP 2 OPTIONAL DIVIDER

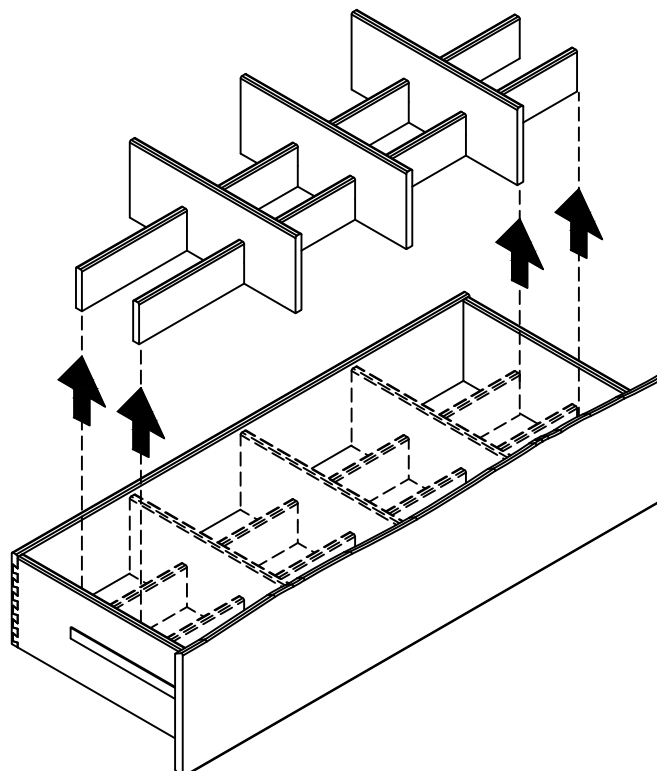


ITEM: **223255**

## ASSEMBLY INSTRUCTIONS



### STEP 3

### OPTIONAL DIVIDER

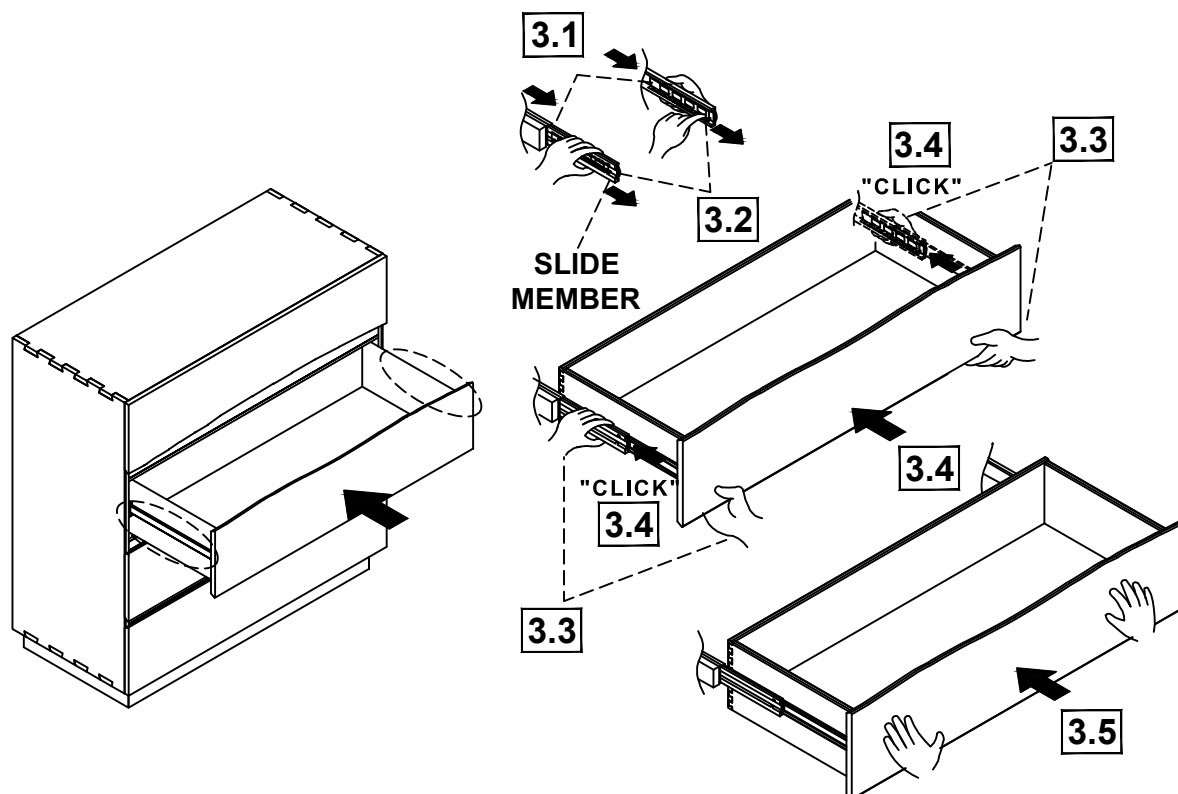

### STEP 4

### COMPLETE

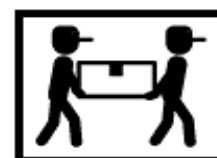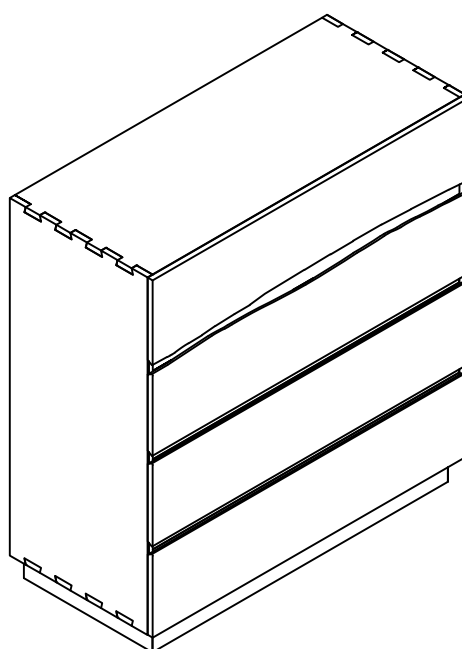

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

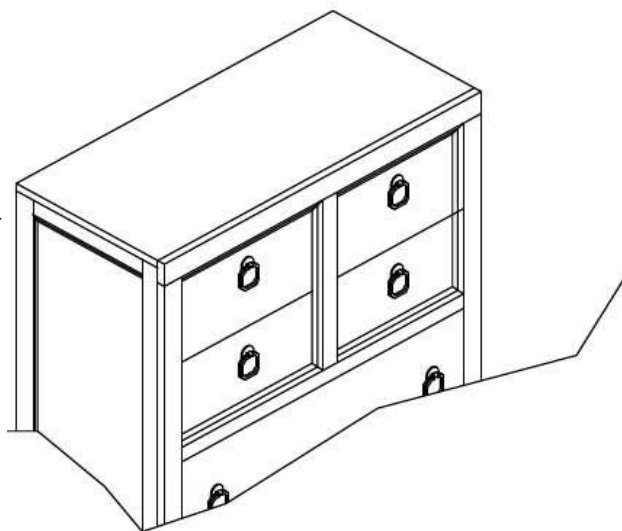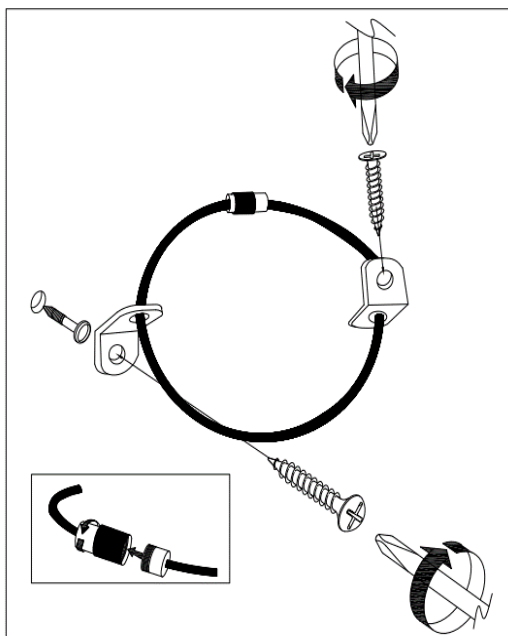

ITEM: **223255**



Inner Size of Drawer A : 36.50"W X 13.75"D X 4.25"H X 0.50"T  
Inner Size of Drawer B : 36.50"W X 13.75"D X 5.75"H X 0.50"T  
Inner Size of Drawer C : 36.50"W X 13.75"D X 5.75"H X 0.50"T

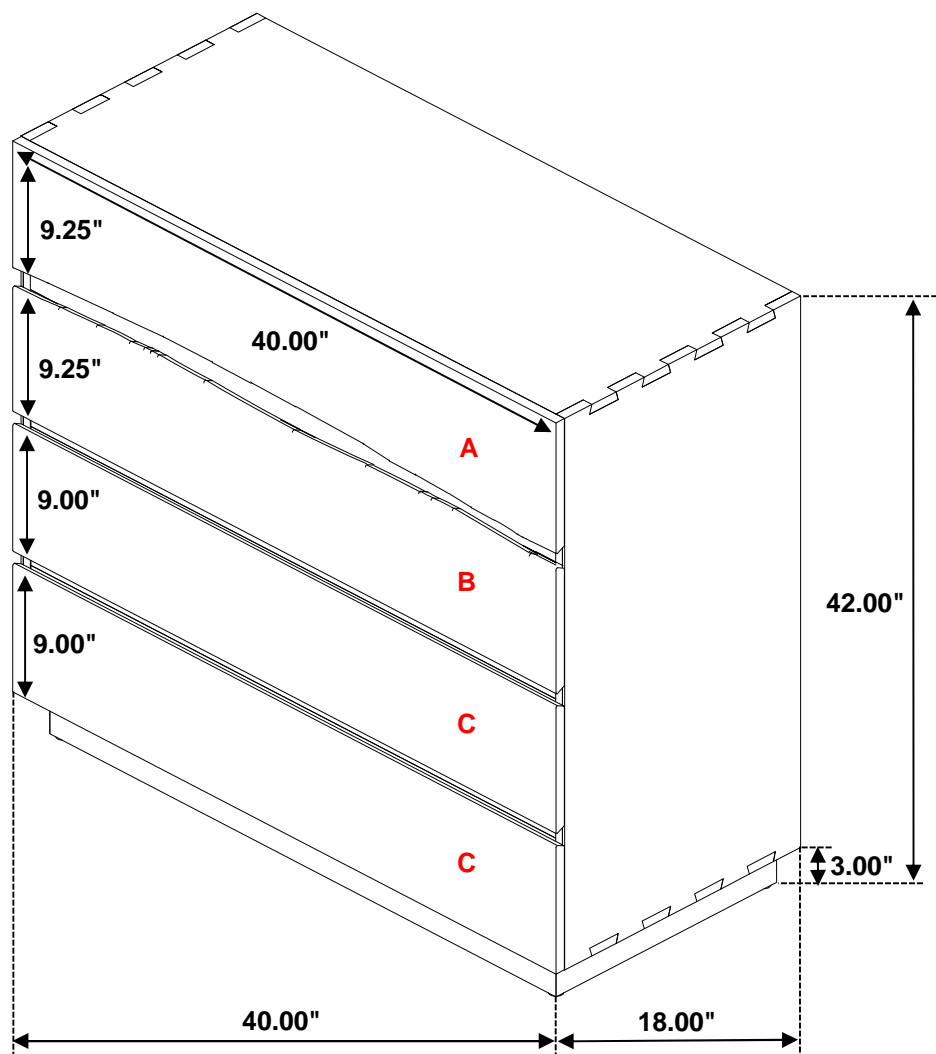

Note: Dimension tolerance  $\pm 5\%$