



Fine Furniture for every stage of life

223271KE(B1-B3) Eastern King Bed

REVISION 0: 05/10/2024

PAGE 1 OF 5

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS



- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

TAKTO IDENTIFICATION									
B1 (BOX 1)									
A	HEADBOARD PANEL		1PC	С	RIGHT HEADBOARD LEG		1PC		
В	LEFT HEADBOARD LEG		1PC	D	HEADBOARD BOTTOM RAIL		1PC		
B2 (BOX 2)									
E	FOOTBOARD		1PC						
B3 (BOX 3)									
F	BED RAIL		2PCS	н	BED SLAT SUPPORT WITH LEVELER		8PCS		
G	BED SLAT		4PCS						
НВ	223271KE(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	E	223271KE (B2) FROM BOX 2 FOOTBOARD		1PC		

ASSEMBLY INSTRUCTIONS

COASTER'

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z - B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223271KE (B1)

1	LONG BOLT (5/16" x 45mm - BLK)	10PCS	4	FLAT WASHER (5/16" x 19 x 1.5mm - BLK)	14PCS
2	SHORT BOLT (5/16" x 38mm - BLK)	4PCS	5	ALLEN WRENCH (74 x 30 x 4mm - BLK)	1PC
3	LOCK WASHER (5/16" - BLK)	14PCS			

Z - B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223271KE (B3)

6	THREADED BOLT (5/16" x 75mm - BLK)		8PCS	11	L-BRACKET (15 x 15 x 1mm - BLK)		4 PCS
7	U-SQUARE WASHER (25 x 15 x 2mm - BLK)		8PCS	12	SHORT FLAT HEAD SCREW (3.5 x 15mm - BLK)	(3) 111111111111111111111111111111111111	8PCS
8	HEX NUT (5/16" x 17mm - BLK)		8PCS				
9	WRENCH (13MM - BLK)	5	1PC				
10	LONG FLAT HEAD SCREW (4 x 32mm - BLK)		8PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

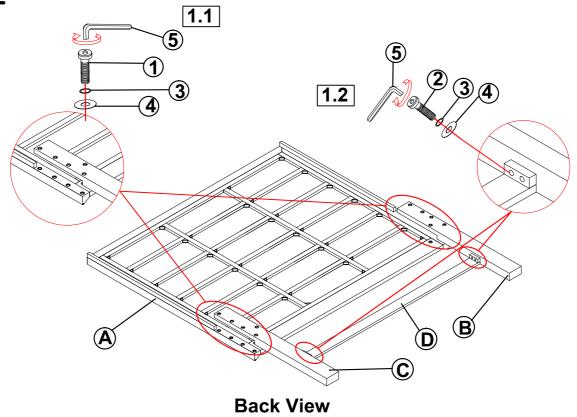


STEP 2

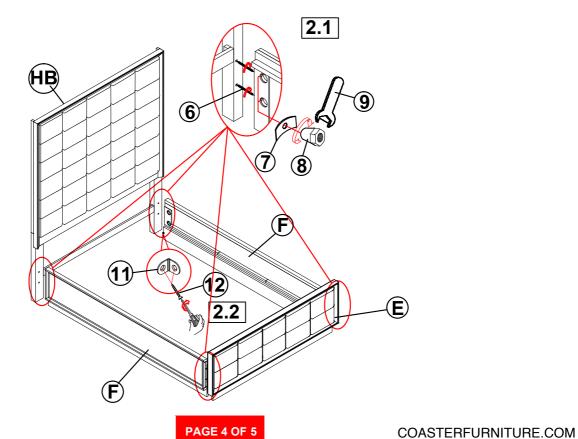






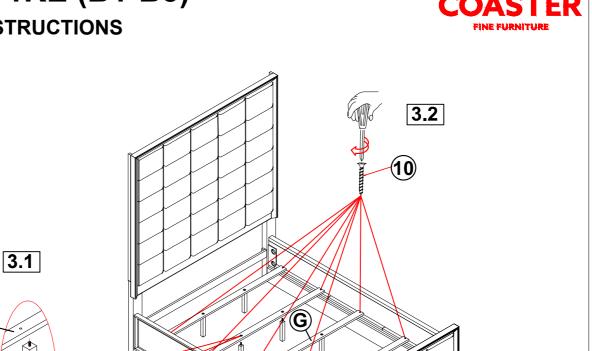

STEP 4 **COMPLETE**

(G)

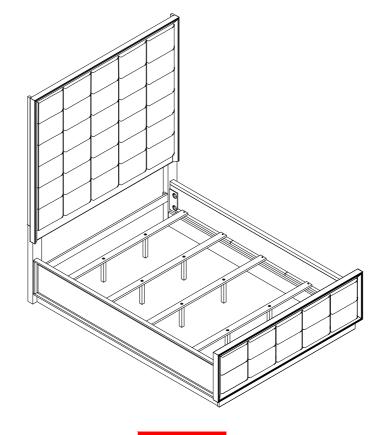


PAGE 5 OF 5

COASTERFURNITURE.COM

ITEM: 223271KE (B1-B3)

Inner Size: 77.00"W x 81.50"D

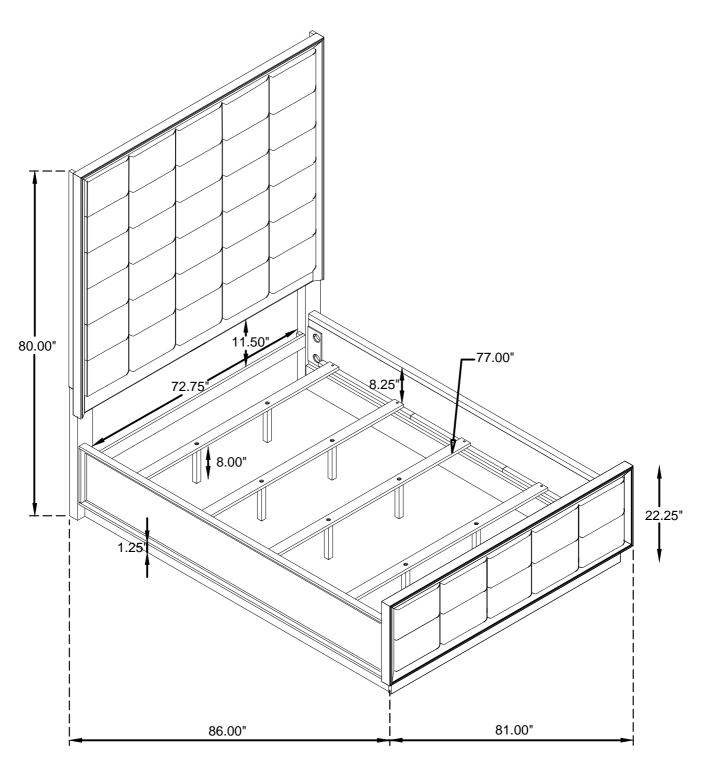





Fine Furniture for every stage of life

223272 Nightstand



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

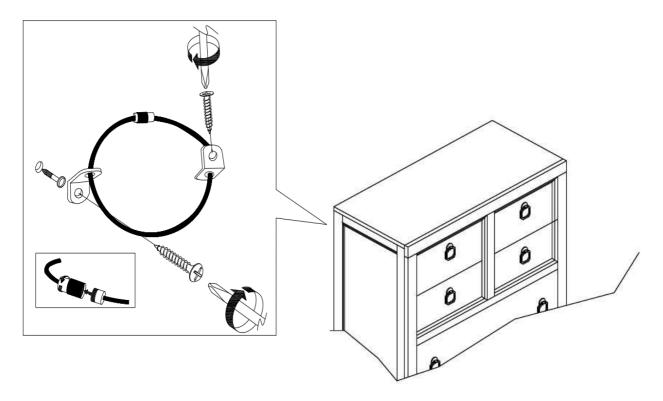








Inner Size Of Drawer A: 25.00"W x 13.75"D x 3.50"H x 0.50T Inner Size Of Drawer B: 25.00"W x 13.75"D x 5.25"H x 0.50T

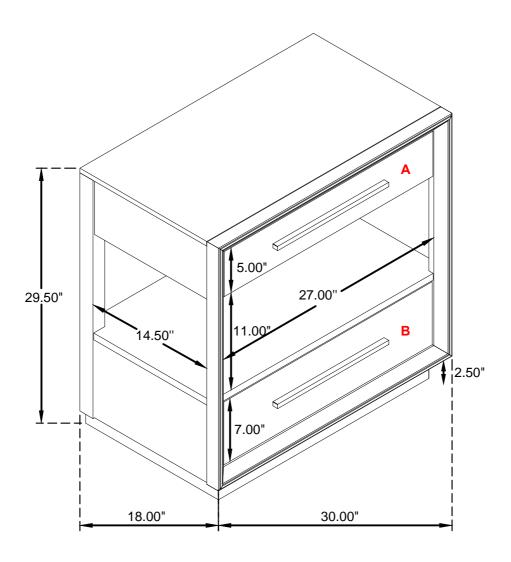





Fine Furniture for every stage of life

223273 Dresser

ASSEMBLY INSTRUCTIONS

COASTER'

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A DRESSER




1PC

STEP 1

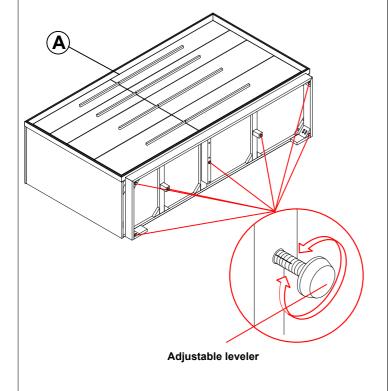

STEP 2 COMPLETE

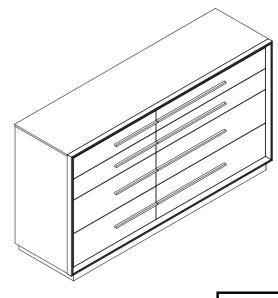



COASTERFURNITURE.COM

PAGE 2 OF 3



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

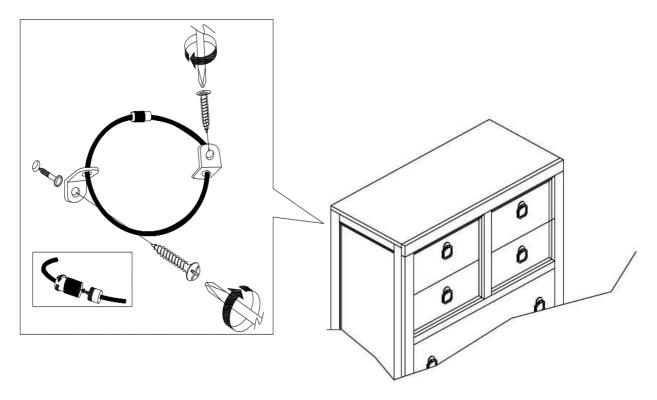








Inner Size Of Drawer A: 26.50"W x 14.50"D x 3.50"H x 0.50T Inner Size Of Drawer B: 35.75"W x 14.50"D x 3.50"H x 0.50T Inner Size Of Drawer C: 26.50"W x 14.50"D x 7.25"H x 0.50T Inner Size Of Drawer D: 35.75"W x 14.50"D x 7.25"H x 0.50T

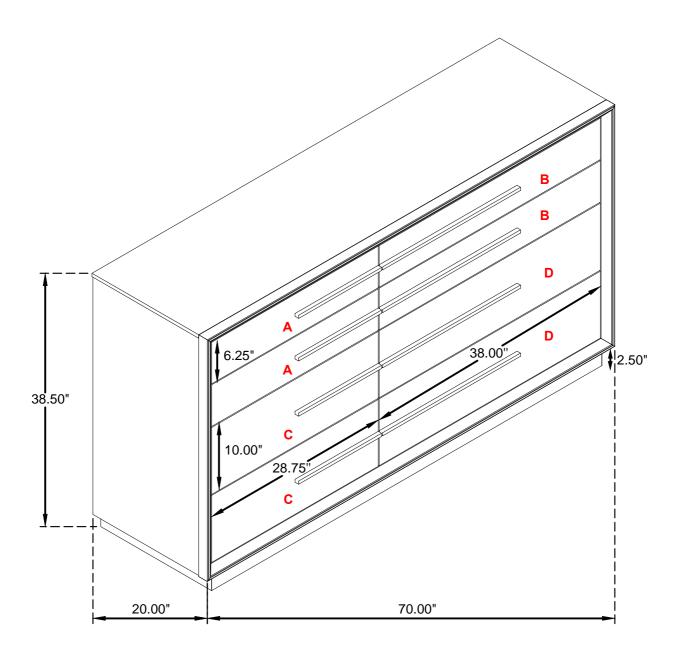





Fine Furniture for every stage of life

223274 <u>Mirror</u>

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER A FROM BOX ITEM 223273

B MIRROR

1PC

C MIRROR SUPPORT C (PACKED WITH DRESSER)

2PCS


HARDWARE IDENTIFICATION

1 BOLT (1/4" x 32mm - BLK) 6PCS 3 FLAT WASHER (1/4" x 19 x 1.5mm - BLK) 6PCS
2 LOCK WASHER (1/4" - BLK) 6PCS 4 ALLEN WRENCH (74 x 30 x 4mm - BLK) 1PC

ASSEMBLY INSTRUCTIONS







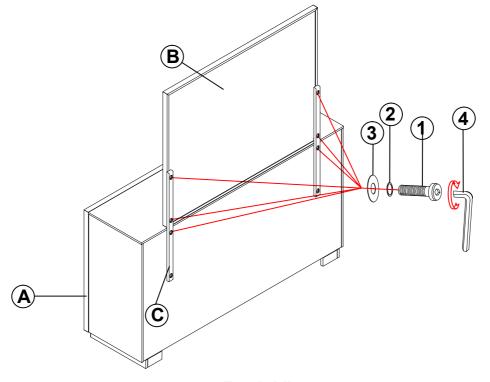


Back View

STEP 2 COMPLETE

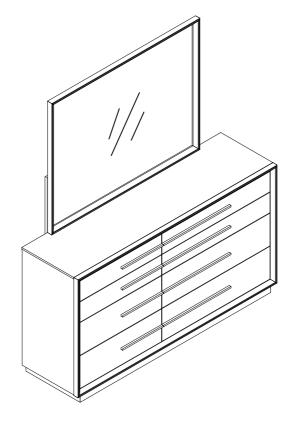





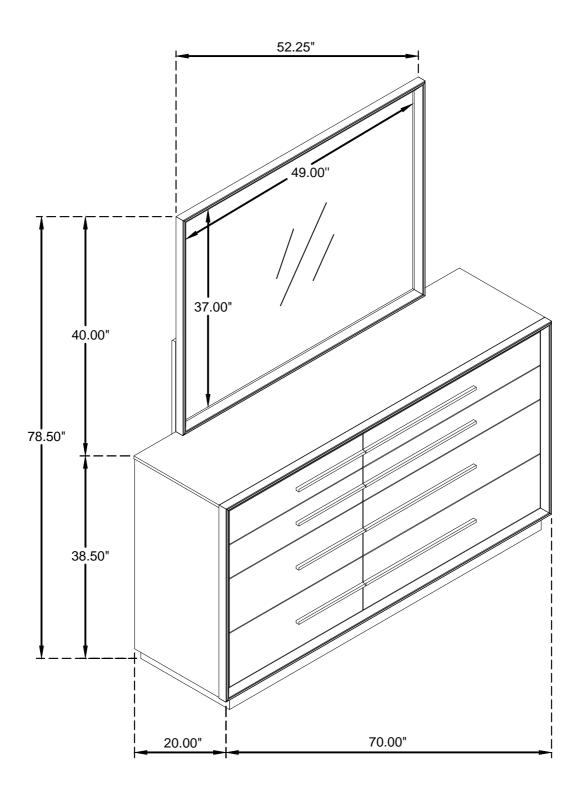





Fine Furniture for every stage of life

223275 <u>Chest</u>



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

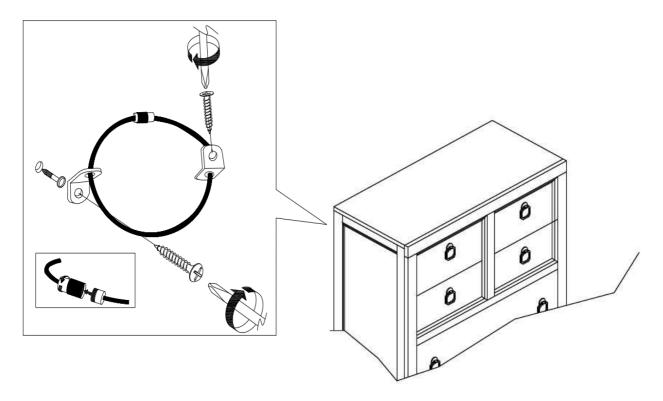







Inner Size Of Drawer A : 33.00"W x 14.50"D x 6.00"H x 0.50T Inner Size Of Drawer B : 33.00"W x 14.50"D x 7.50"H x 0.50T

