


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

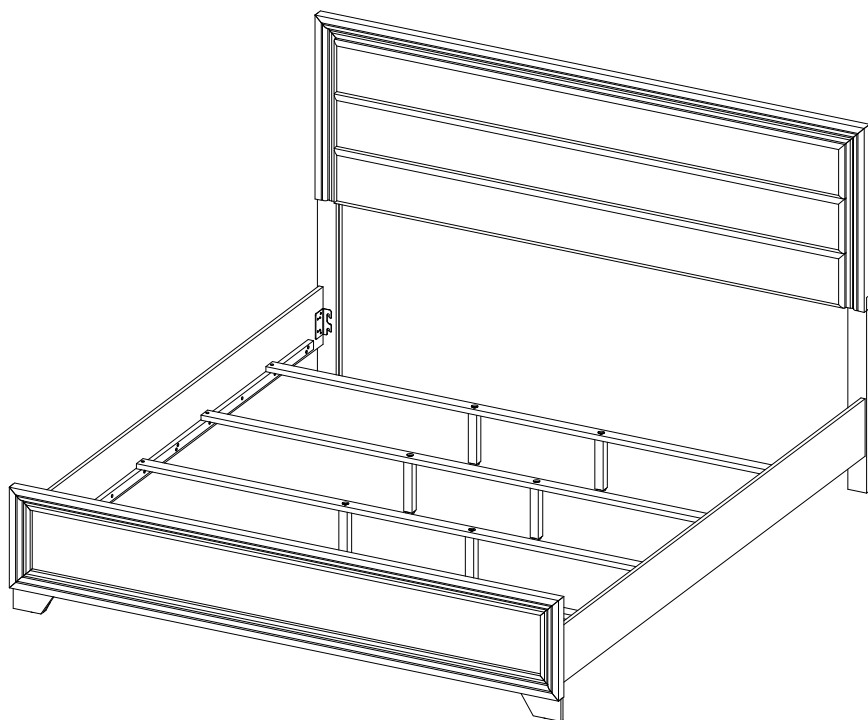

*Fine Furniture for every stage of life*

**223341KE (B1&B2)**  
**Eastern King Bed**

# ITEM: 223341KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD  
PANEL



1PC

E LEFT FOOTBOARD  
LEG  
(WITH "L" LABEL)



1PC

B LEFT HEADBOARD  
LEG  
(WITH "L" LABEL)



1PC

F RIGHT FOOTBOARD  
LEG  
(WITH "R" LABEL)



1PC

C RIGHT HEADBOARD  
LEG  
(WITH "R" LABEL)



1PC

G BED SLAT




4PCS

D FOOTBOARD  
PANEL



1PC

H BED SLAT  
SUPPORT  
WITH LEVELER



8PCS

### B2 (BOX 2)

I BED RAIL



2PCS

# ITEM: 223341KE (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 223341KE (B1)

1	<b>BOLT 1</b> (M8 x 16MM - RBW)		8PCS	6	<b>SMALL LOCK WASHER</b> (1/4" x 13Ø - RBW)		4PCS
2	<b>BOLT 2</b> (M8 x 35MM - RBW)		6PCS	7	<b>SMALL FLAT WASHER</b> (1/4" x 19Ø - RBW)		4PCS
3	<b>BIG LOCK WASHER</b> (5/16" x 14Ø - RBW)		6PCS	8	<b>FLAT HEAD SCREW</b> (M4 x 32MM - RBW)		8PCS
4	<b>BIG FLAT WASHER</b> (5/16" x 22Ø - RBW)		6PCS	9	<b>BIG ALLEN WRENCH</b> (M5 x 68MM - BLK)		1PC
5	<b>BOLT 3</b> (M6 x 35MM - RBW)		4PCS	10	<b>SMALL ALLEN WRENCH</b> (M4 x 60MM - BLK)		1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

# ITEM: 223341KE (B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 1

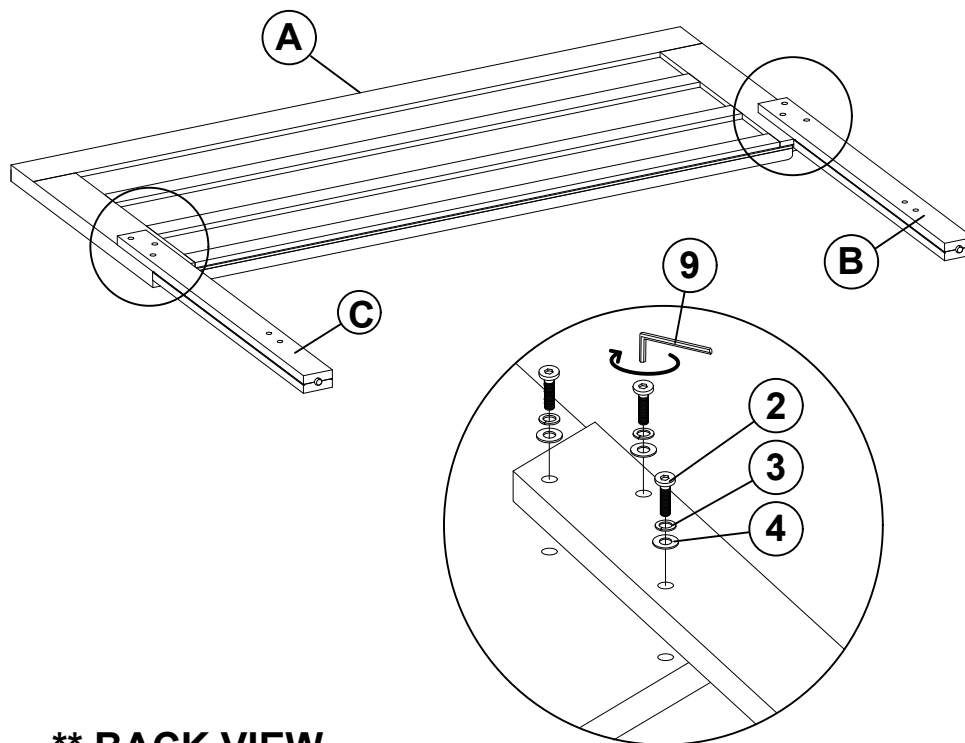

**\*\* BACK VIEW**

### STEP 2

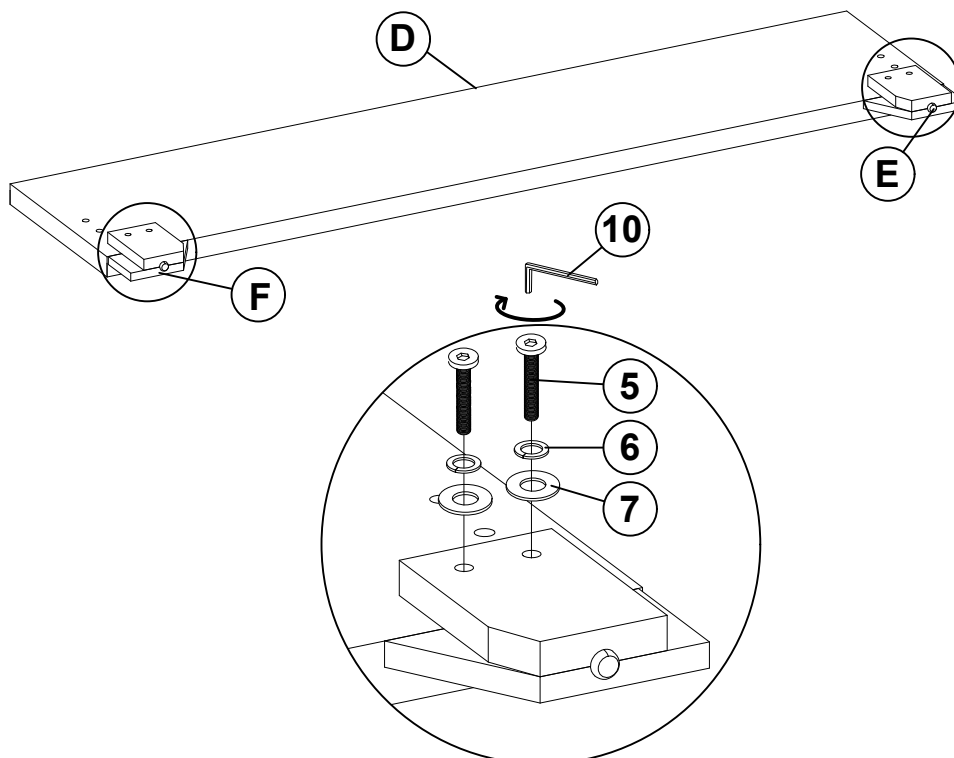


**\*\* BACK VIEW**

# ITEM: 223341KE (B1&B2)


## ASSEMBLY INSTRUCTIONS



### STEP 3

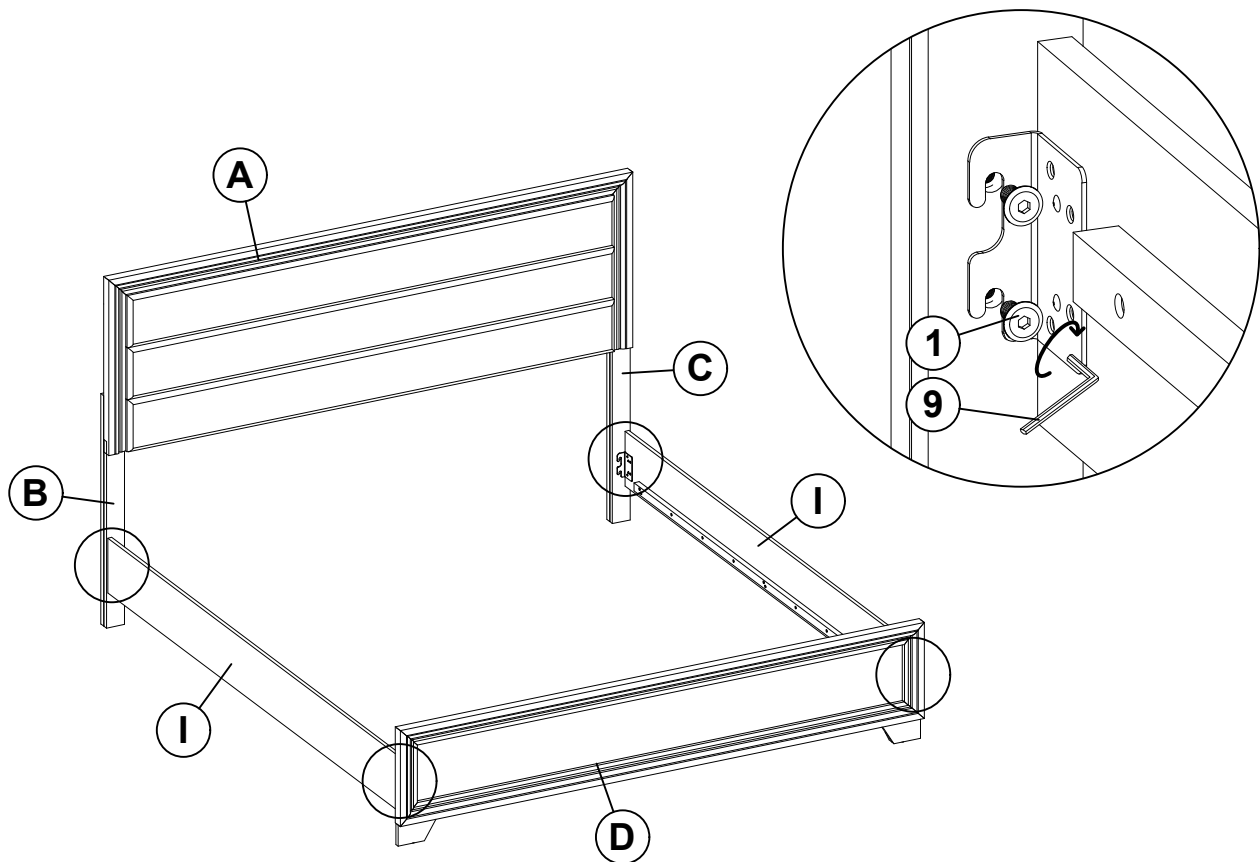

### STEP 4

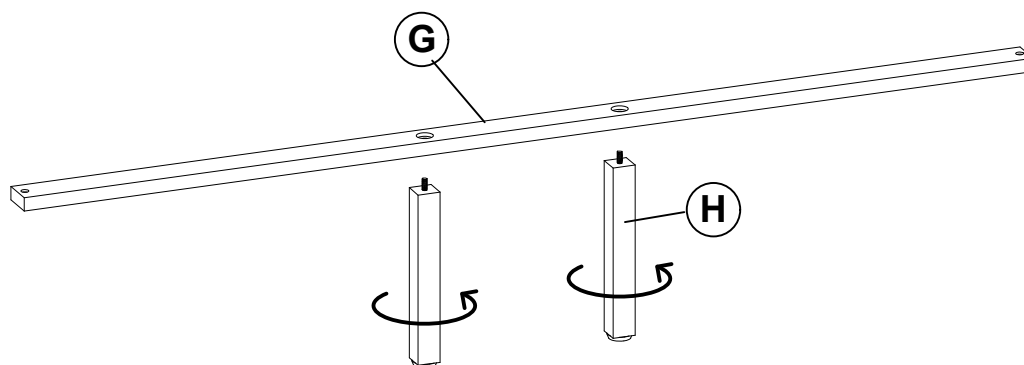


# ITEM: 223341KE (B1&B2)


## ASSEMBLY INSTRUCTIONS



### STEP 5

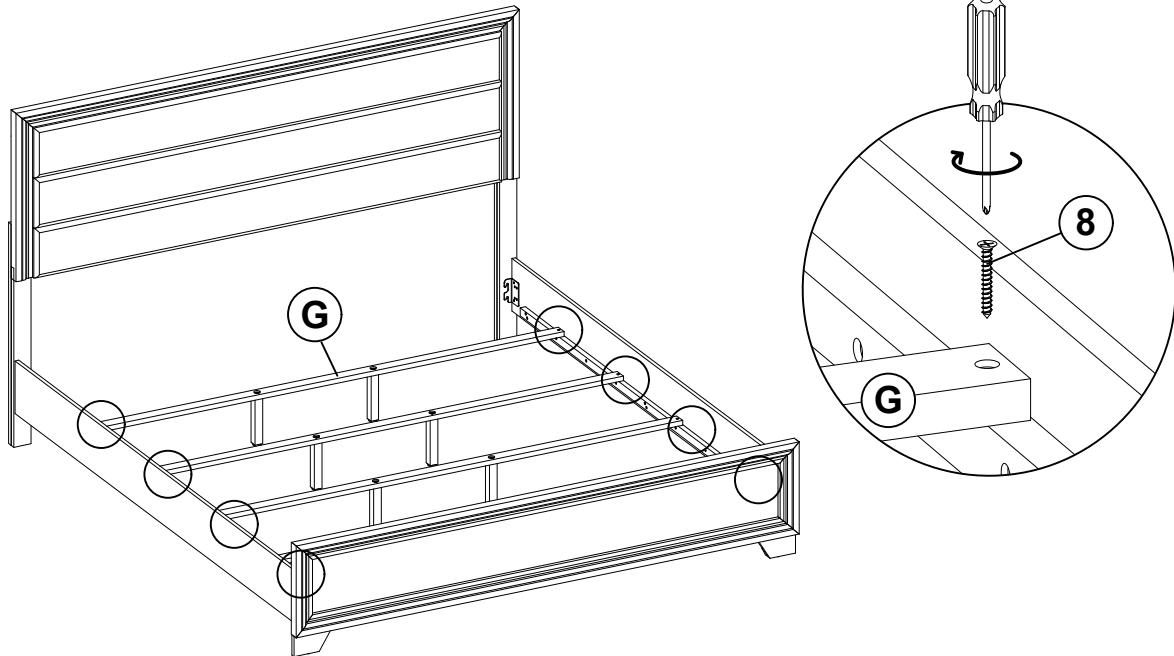


### STEP 6 COMPLETE

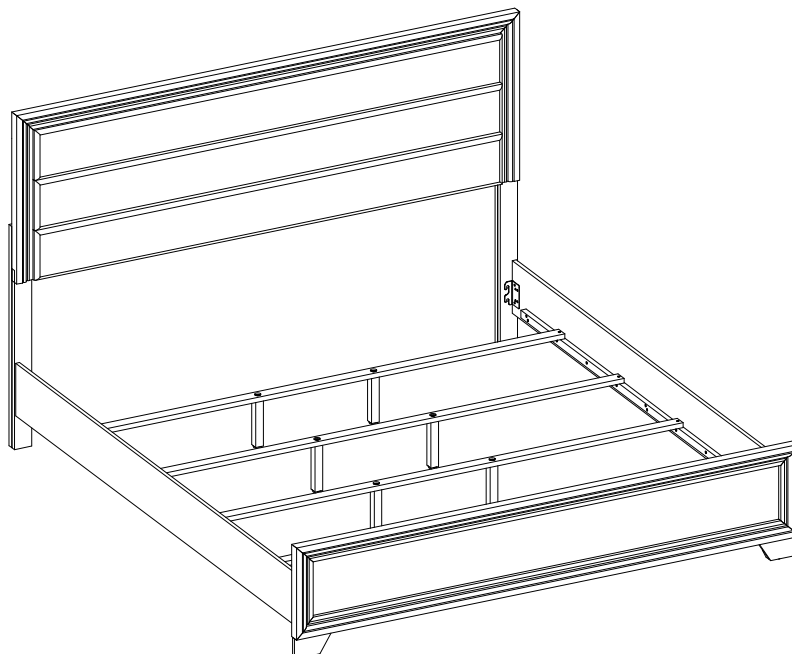

ITEM: **223341KE (B1&B2)**



Inner Size : 76.50"W X 81.00"D

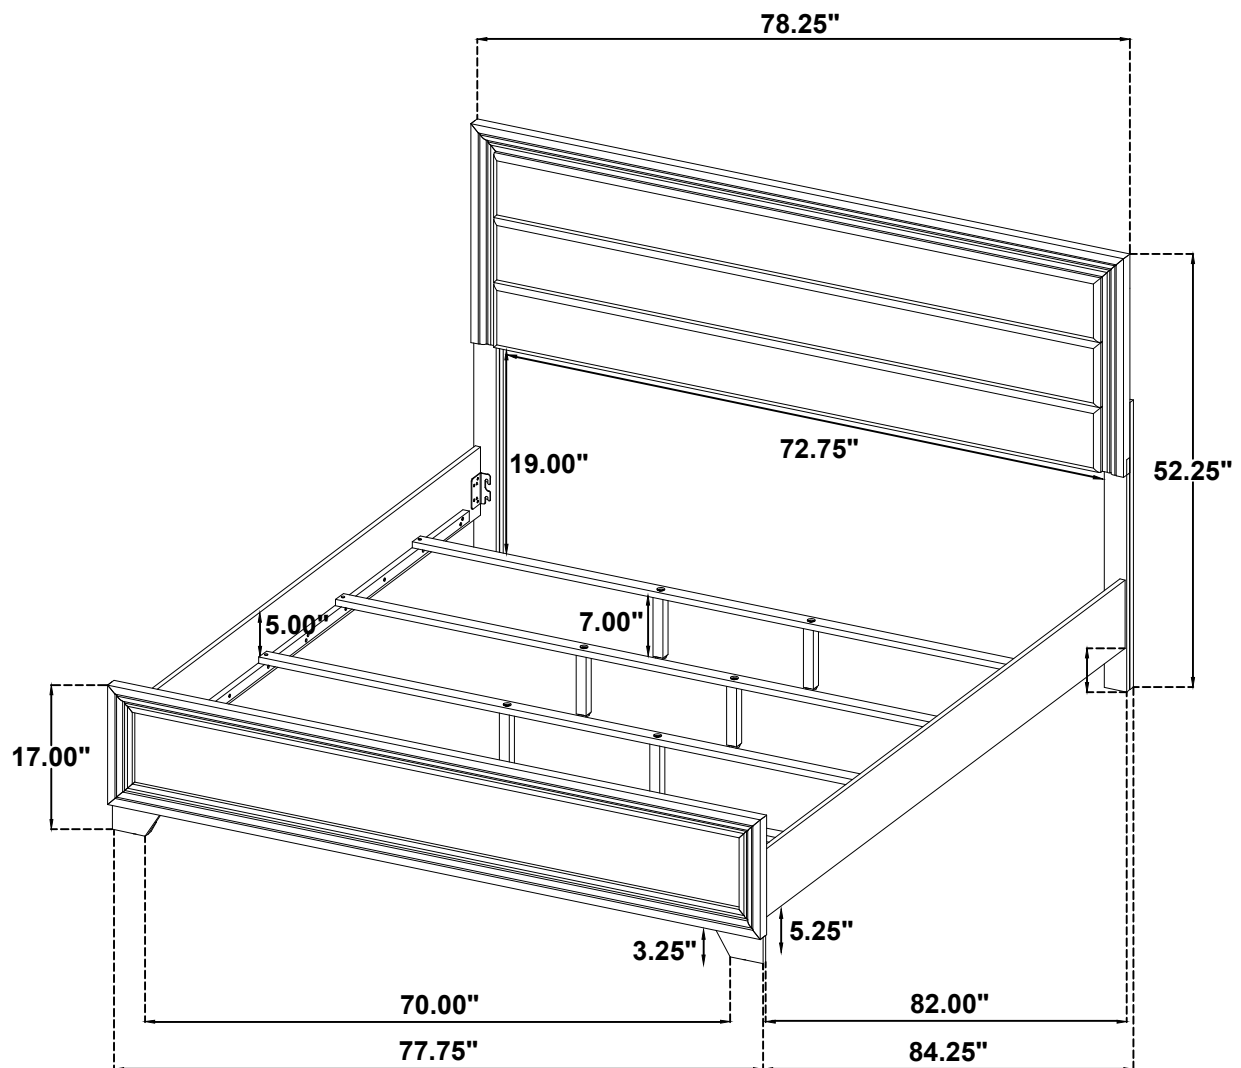

Note : Dimension tolerance  $\pm 5\%$

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



*Fine Furniture for every stage of life*

**223342**  
**Nightstand**



ITEM: **223342**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A

NIGHTSTAND

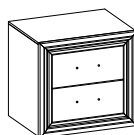

1PC

B

LEG



4PCS

## HARDWARE IDENTIFICATION

1

**BOLT**  
(M6 x 40MM - RBW)



4PCS

2

**LOCK WASHER**  
(1/4" x 13Ø - RBW)



4PCS

3


**FLAT WASHER**  
(1/4" x 19Ø - RBW)



4PCS

4

**WOOD DOWEL**  
(Ø8 x 30MM)



4PCS

5

**ALLEN WRENCH**  
(M4 x 110MM - BLK)



1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223342**

## ASSEMBLY INSTRUCTIONS




### STEP 1

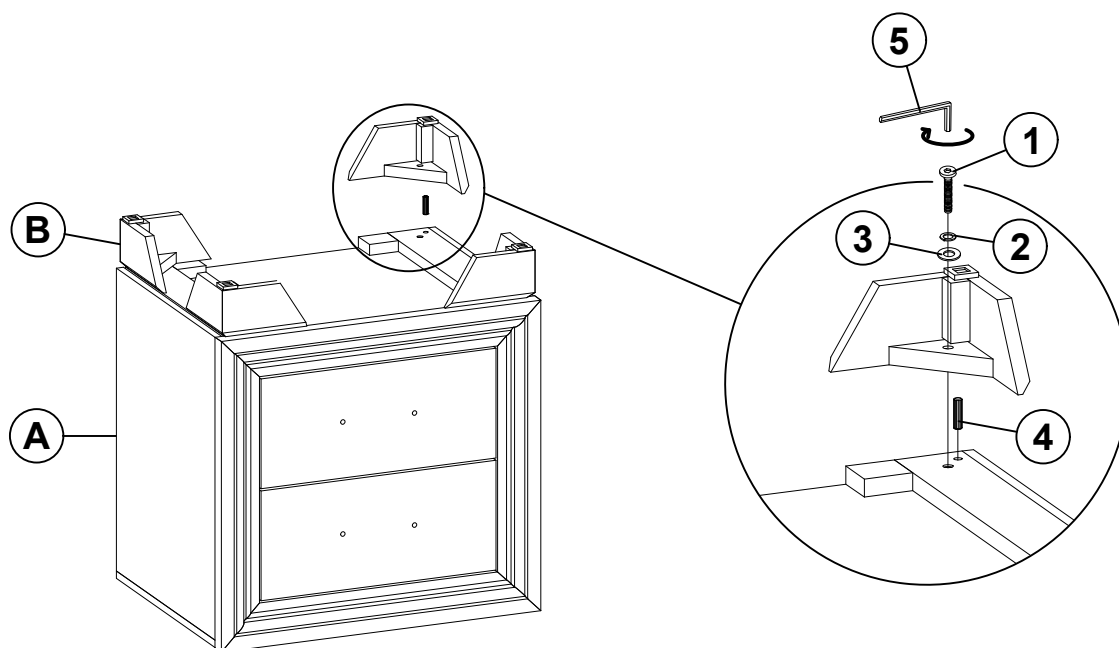

**\*\* BOTTOM VIEW**


### STEP 2 **COMPLETE**

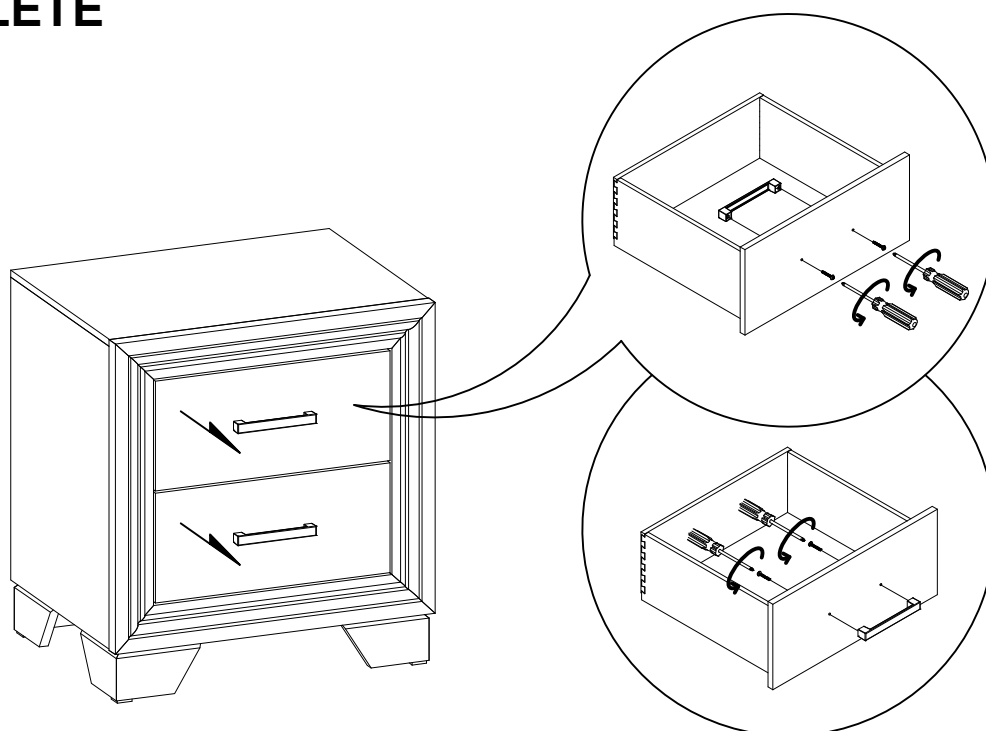

ITEM: **223342**



**Inner Size of Drawer : 13.50"W x 12.25"D x 5.00"H x 0.50"T**

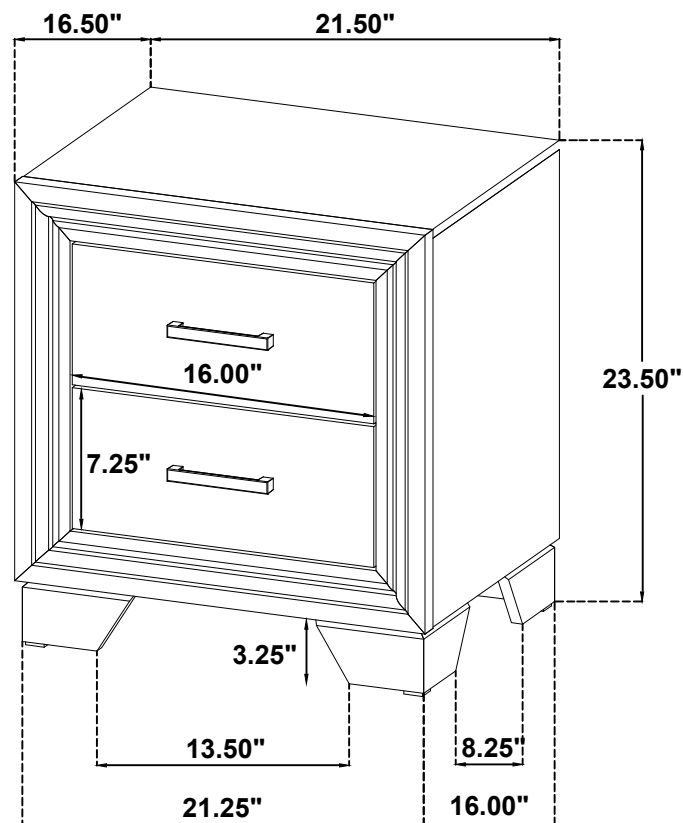

**Note : Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**223343**  
***Dresser***

ITEM: **223343**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A DRESSER

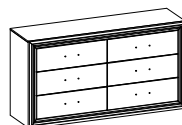

1PC

B LEG



4PCS


C CENTER LEG SUPPORT  
WITH LEVELER



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL  
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223343**


## ASSEMBLY INSTRUCTIONS

### STEP 1

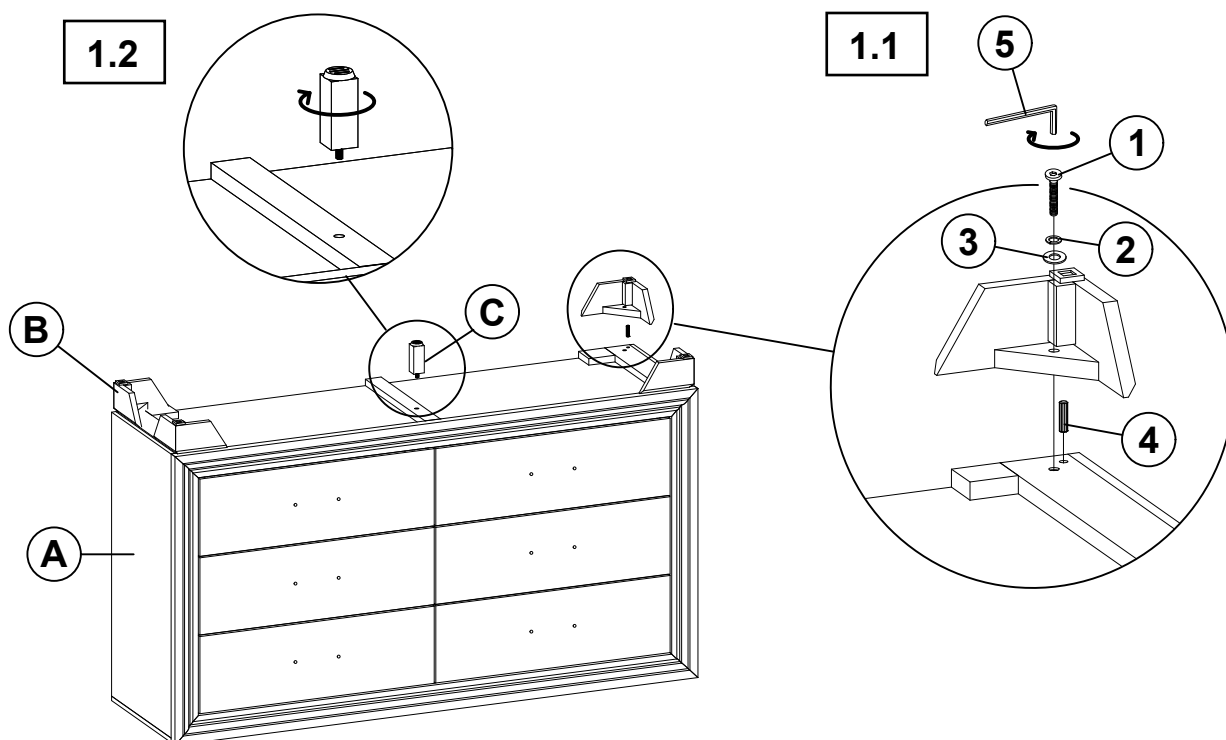

**\*\* BOTTOM VIEW**

### STEP 2 COMPLETE

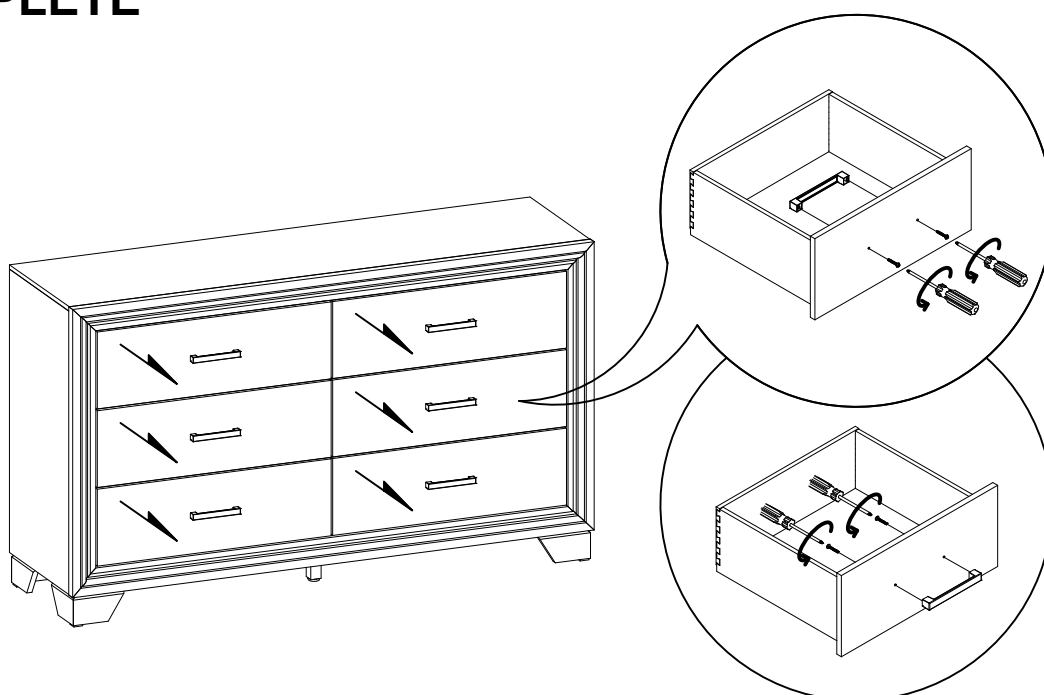

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

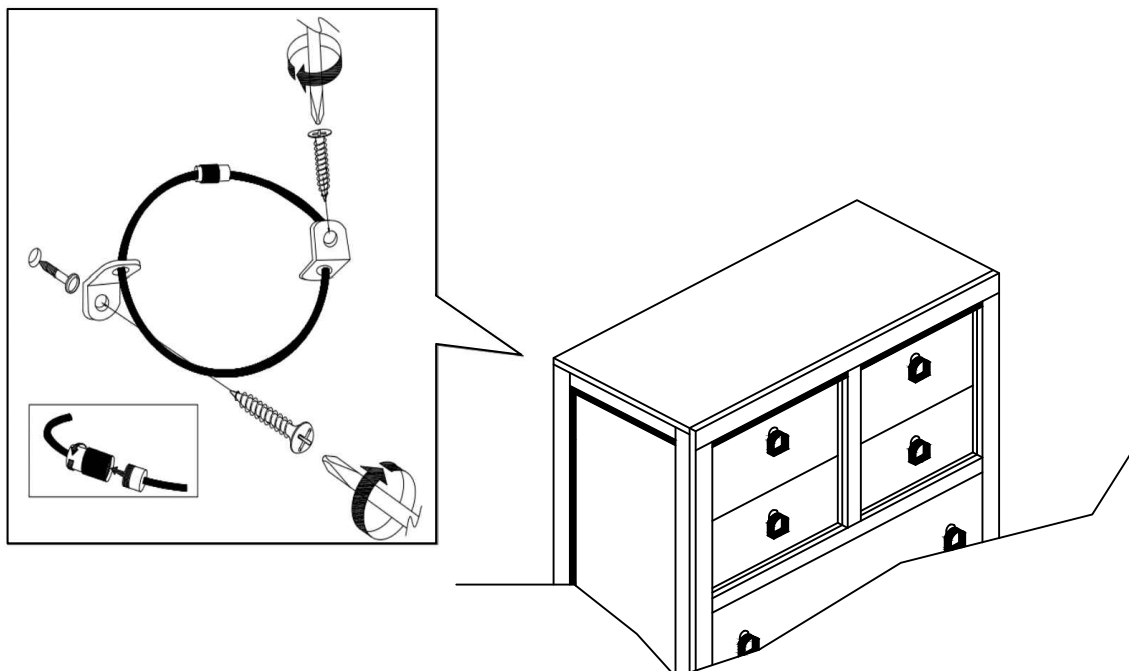

ITEM: **223343**



Inner Size of Drawer : 23.00"W x 12.25"D x 5.00"H x 0.50"T

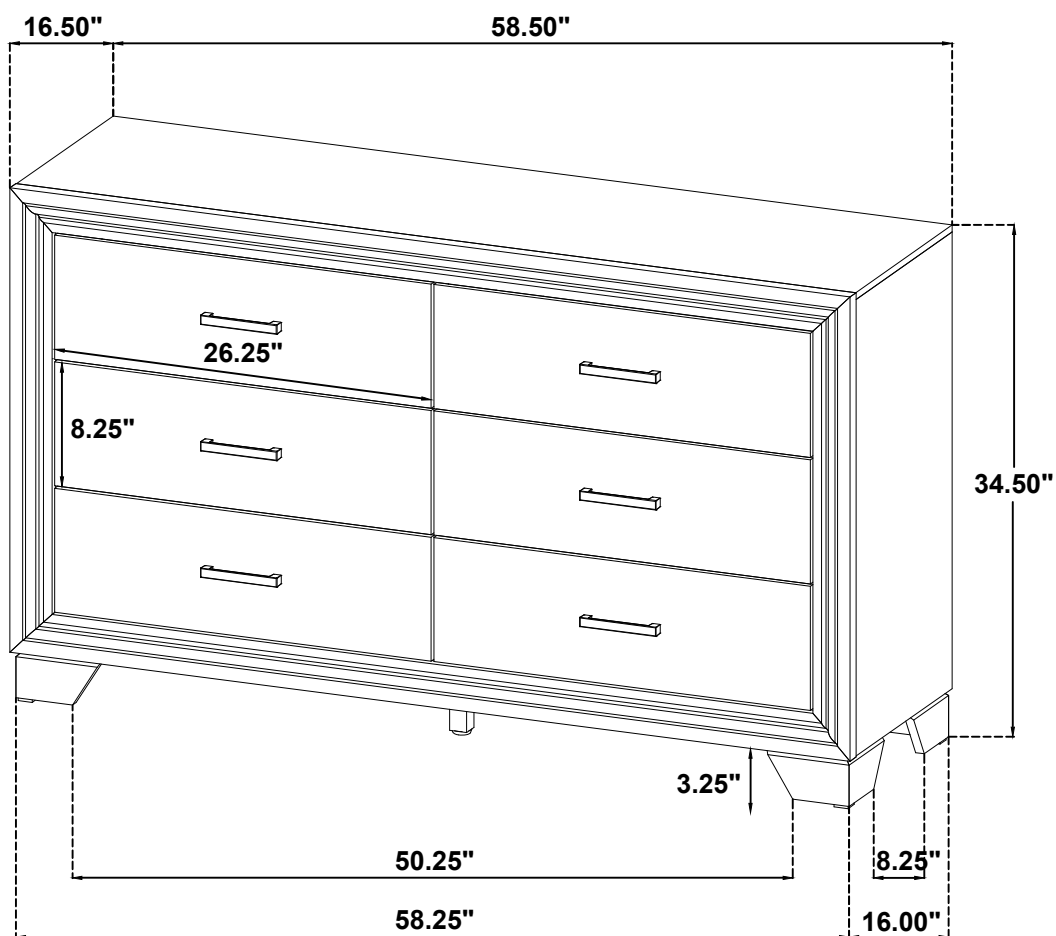

**Note : Dimension tolerance  $\pm 5\%$**



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223344**  
**Mirror**

ITEM: **223344**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A MIRROR

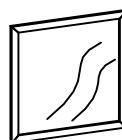

1PC

B MIRROR SUPPORT  
(PACKED WITH MIRROR)



2PCS


C DRESSER  
\*FROM BOX ITEM 223343



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



8PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)



8PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



8PCS

4 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223344**


## ASSEMBLY INSTRUCTIONS

### STEP 1

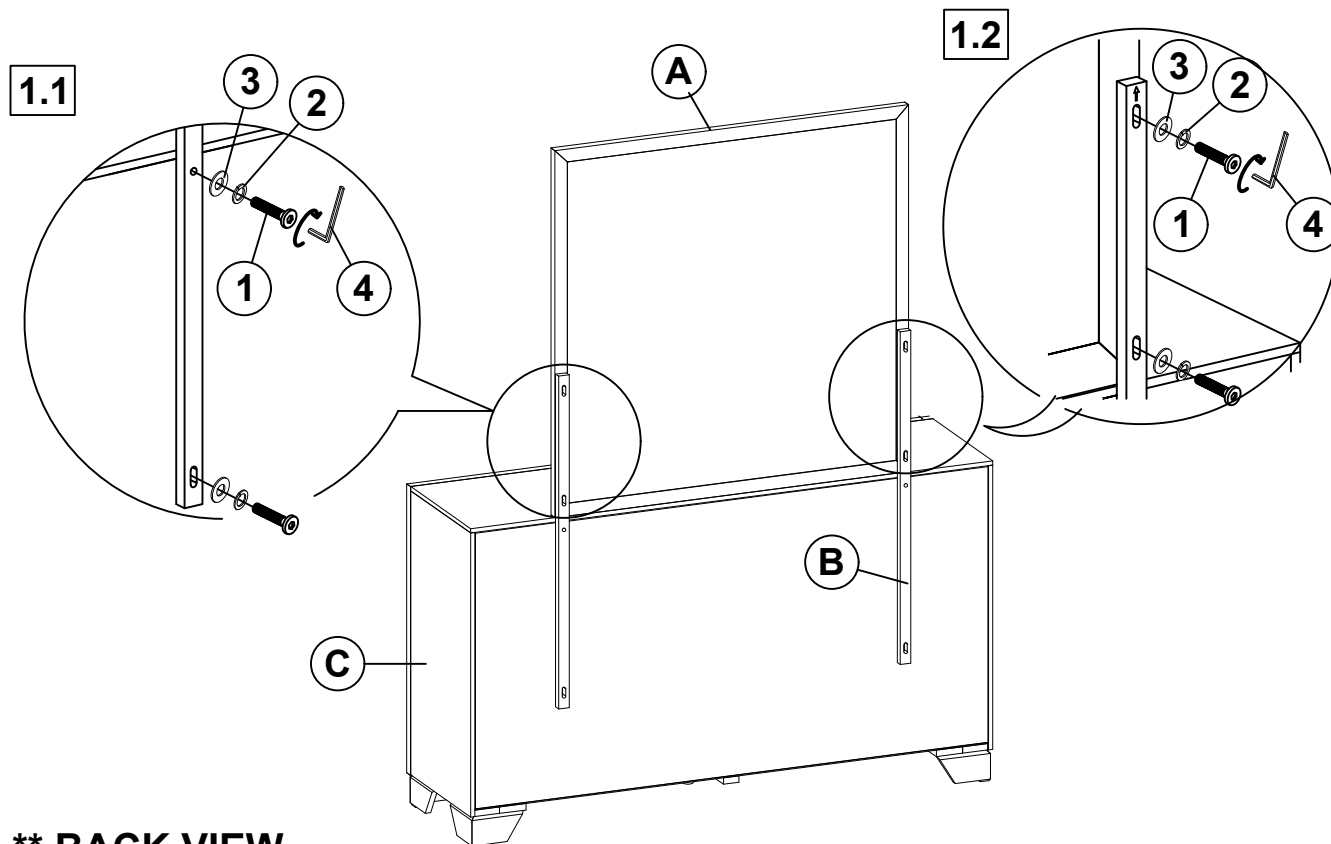


**\*\* BACK VIEW**

### STEP 2 **COMPLETE**

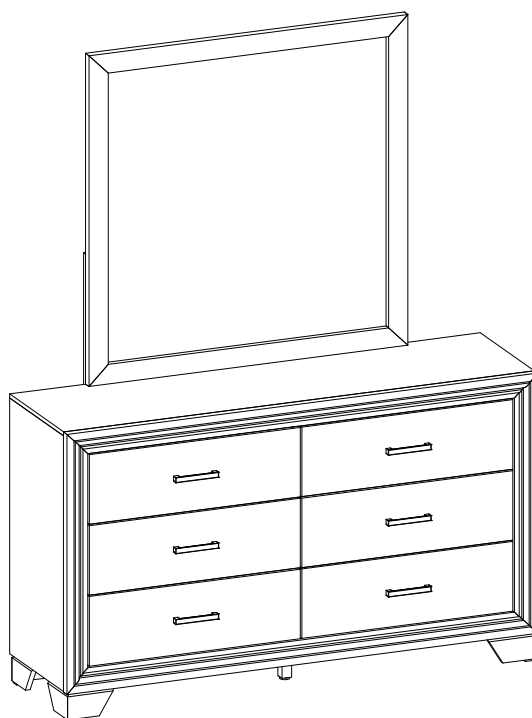

ITEM: **223344**

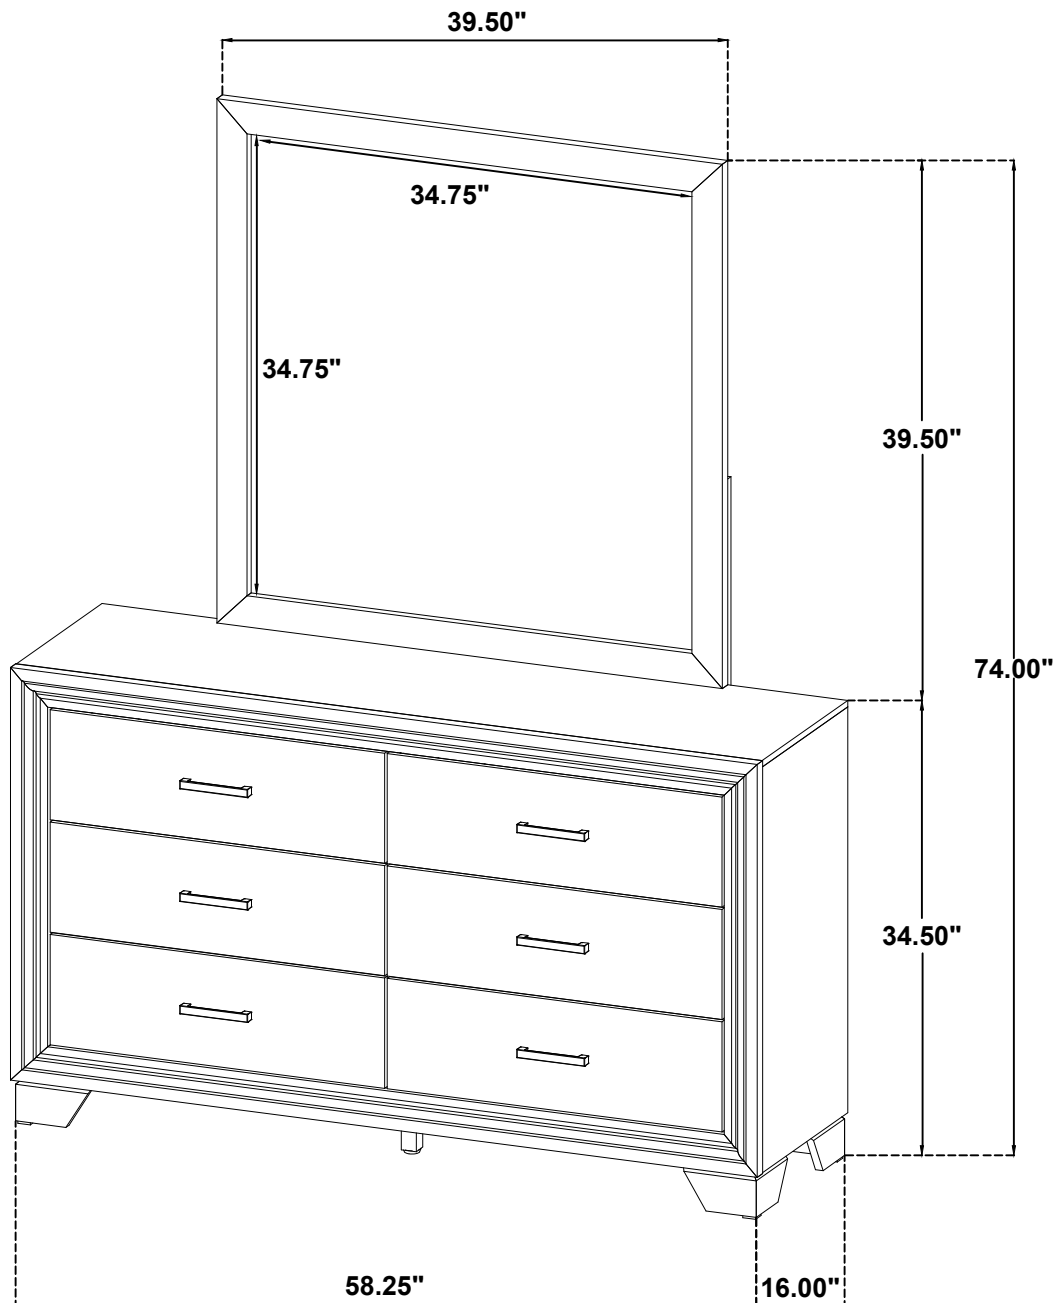

**Note : Dimension tolerance  $\pm 5\%$**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223345**  
**Chest**

ITEM: **223345**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A CHEST



1PC

B LEG



4PCS

## HARDWARE IDENTIFICATION

1 BOLT  
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER  
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER  
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL  
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH  
(M4 x 110MM - BLK)



1PC

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **223345**

## ASSEMBLY INSTRUCTIONS




### STEP 1

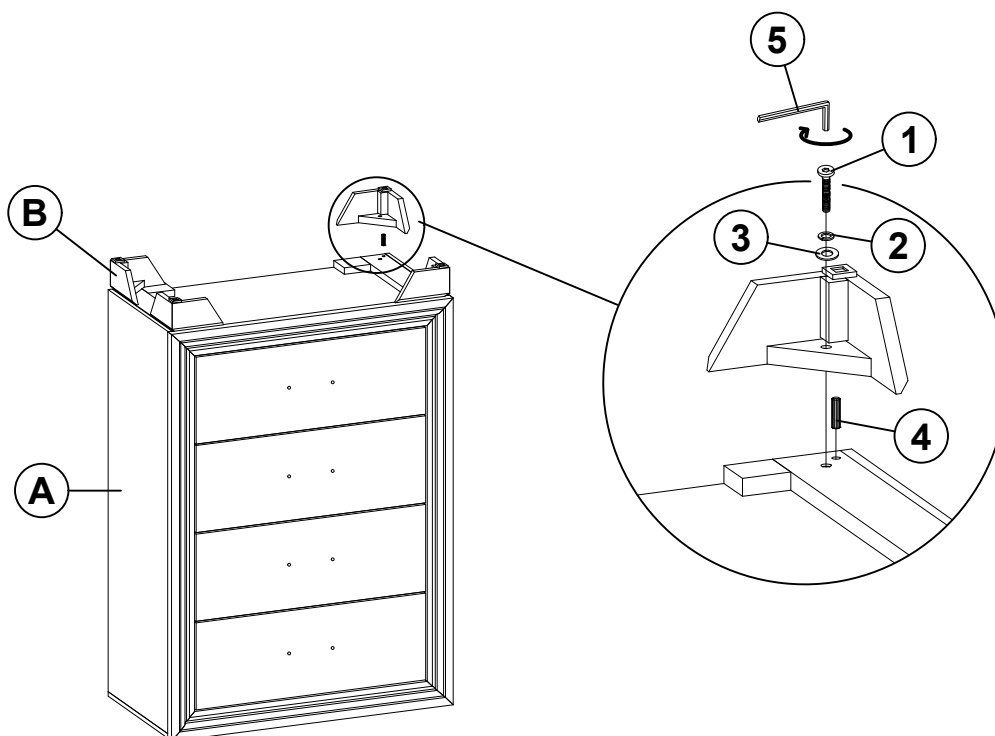

**\*\* BOTTOM VIEW**

### STEP 2 **COMPLETE**

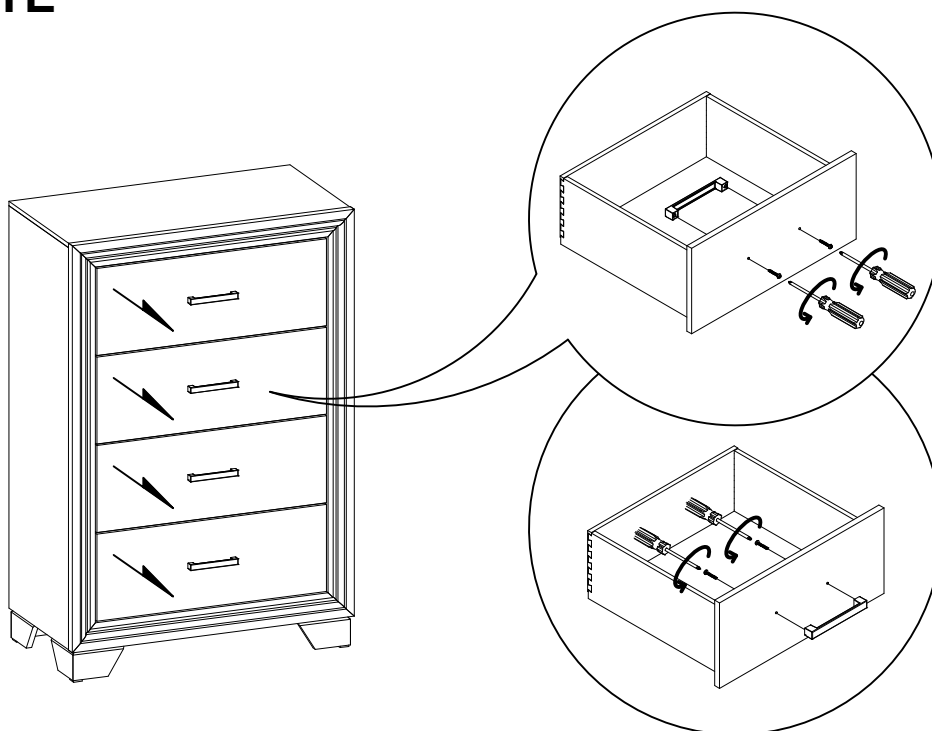

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

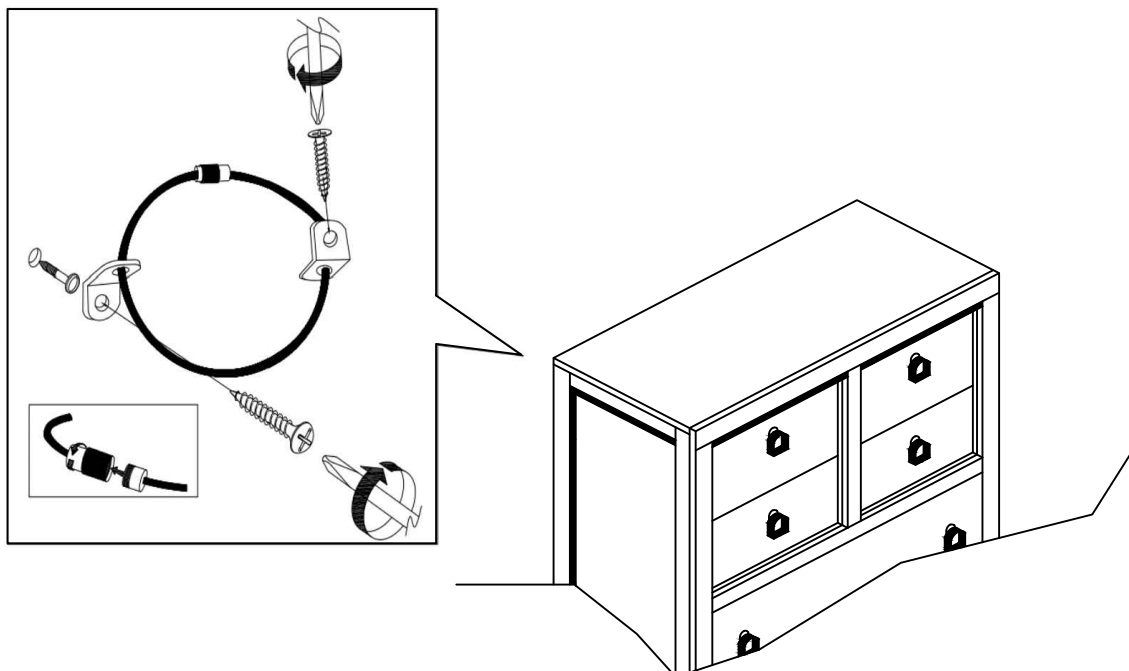




ITEM: **223345**



**Inner Size of Drawer : 23.00"W x 12.25"D x 6.00"H x 0.50"T**

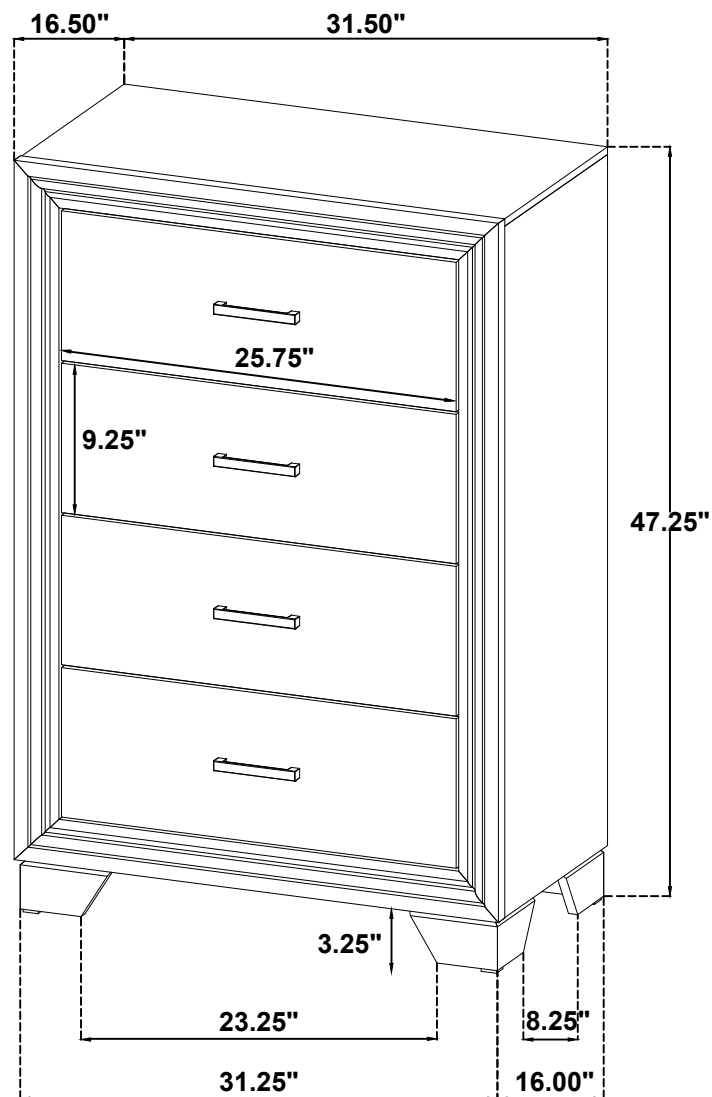

**Note : Dimension tolerance  $\pm 5\%$**