


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

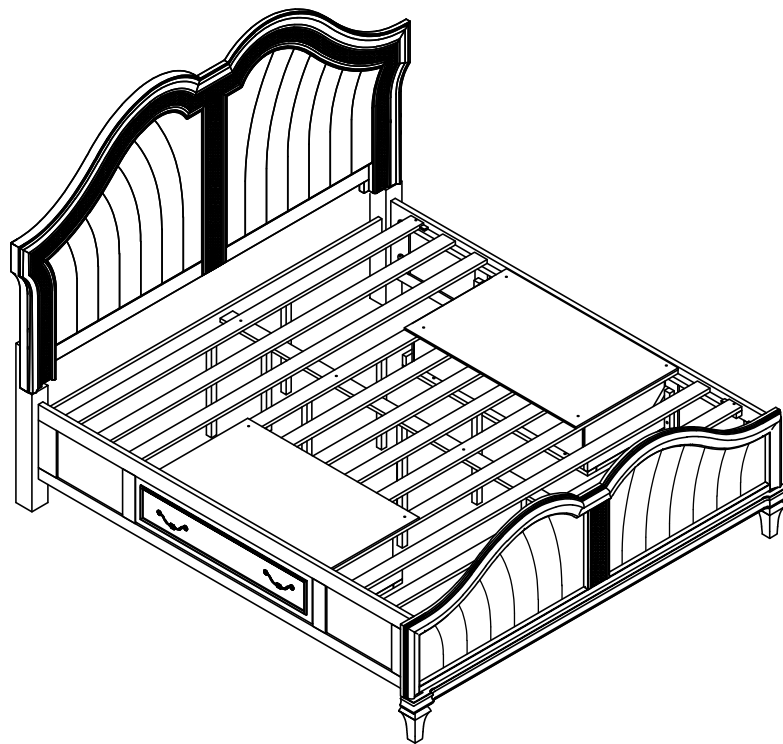

Fine Furniture for every stage of life

223390KE (B1-B4)
Eastern King Storage Bed

ITEM: 223390KE(B1-B4)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL



1PC

C RIGHT
HEADBOARD LEG



1PC

B HEADBOARD
BOTTOM RAIL



1PC

D LEFT
HEADBOARD LEG



1PC

B2 (BOX 2)

E FOOTBOARD PANEL



1PC

G LEFT
FOOTBOARD LEG



1PC


F RIGHT
FOOTBOARD LEG



1PC


B3 (BOX 3)

H BED RAIL



2PCS

J ROLL SLAT (11PCS)



1SET

L CENTER RAIL SUPPORT
WITH LEVELER



3PCS

I BED SLAT SUPPORT
WITH LEVELER



8PCS


K CENTER RAIL



1PC

B4 (BOX 4)

M DRAWER



2PCS

O DRAWER PANEL



2PCS

N DRAWER SUPPORT
WITH LEVELER



4PCS

HB 223390KE (B1)
FROM BOX 1
HEADBOARD
COMPLETE



1PC

FB 223390KE (B2)
FROM BOX 2
FOOTBOARD



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223390KE(B1-B4)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION






Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223390KE (B1)

1	MEDIUM BOLT ($\emptyset 5/16"$ x 45MM- RBW)		10PCS	2	LOCK WASHER ($\emptyset 5/16"$ - RBW)		10PCS
3	FLAT WASHER ($\emptyset 5/16"$ - RBW)		10PCS	4	ALLEN WRENCH (4MM - RBW)		1PC






Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223390KE (B2)

5	LONG BOLT ($\emptyset 5/16"$ x 55MM- RBW)		4PCS	6	LOCK WASHER ($\emptyset 5/16"$ - RBW)		4PCS
7	FLAT WASHER ($\emptyset 5/16"$ - RBW)		4PCS	8	ALLEN WRENCH (4MM - RBW)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223390KE (B3)

9	THREADED BOLT ($\emptyset 5/16"$ x 90MM - RBW)		8PCS	10	HALF ROUND NUT ($\emptyset 5/16"$ - RBW)		8PCS
11	HEX NUT ($\emptyset 5/16"$ x 14MM - RBW)		8PCS	12	WRENCH (14MM - RBW)		1PC
13	FLAT HEAD SCREW ($\emptyset 4$ x 30MM - RBW)		12PCS				

Z-B4 (BOX 4) - HARDWARE PACK IS LOCATED IN 223390KE (B4)

14	SHORT BOLT ($\emptyset 1/4"$ x 38MM- RBW)		12PCS	15	LOCK WASHER ($\emptyset 1/4"$ - RBW)		12PCS
16	FLAT WASHER ($\emptyset 1/4"$ - RBW)		12PCS	17	ALLEN WRENCH (4MM - RBW)		1PC
18	FLAT HEAD SCREW ($\emptyset 4$ x 15MM - RBW)		8PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223390KE(B1-B4)**

ASSEMBLY INSTRUCTIONS

STEP 1

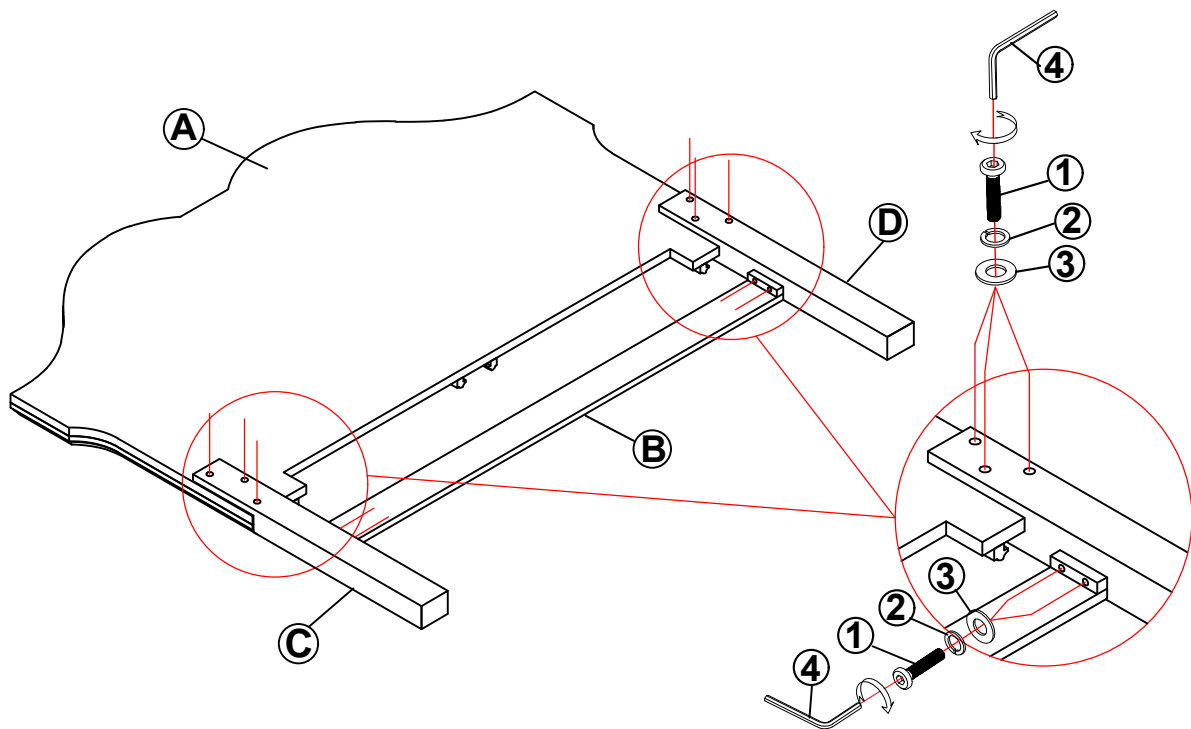


STEP 2

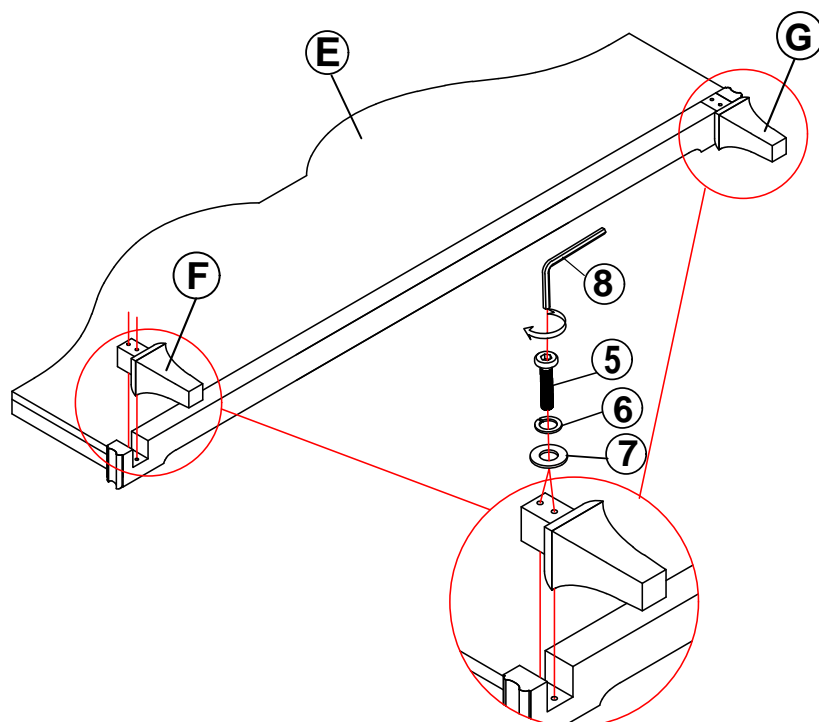


ITEM: **223390KE(B1-B4)**

ASSEMBLY INSTRUCTIONS

STEP 3

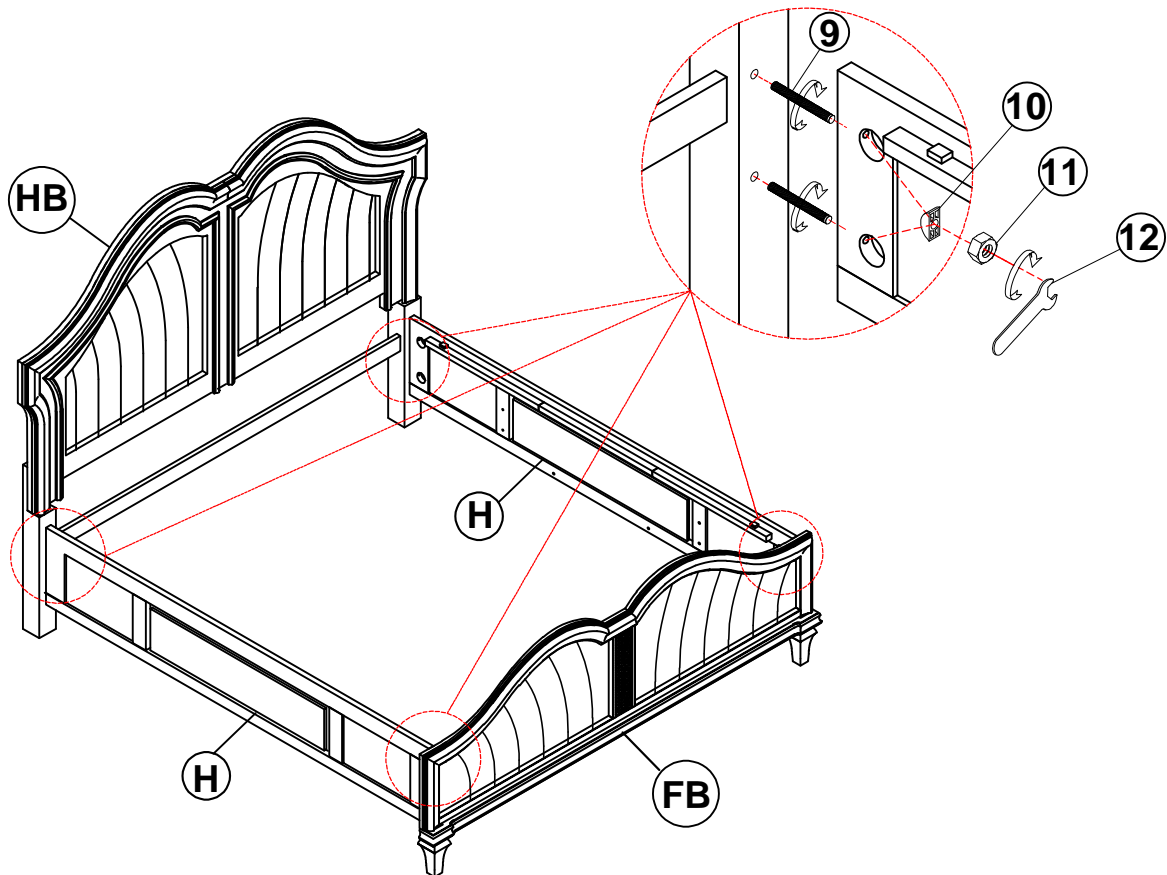


STEP 4

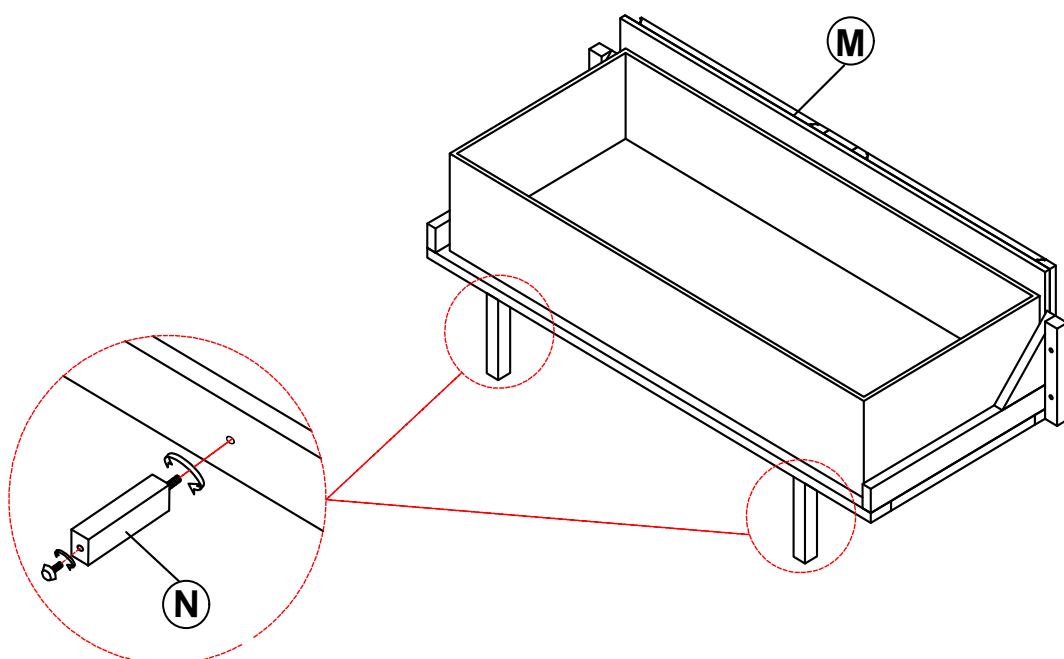


ITEM: **223390KE(B1-B4)**

ASSEMBLY INSTRUCTIONS

STEP 5

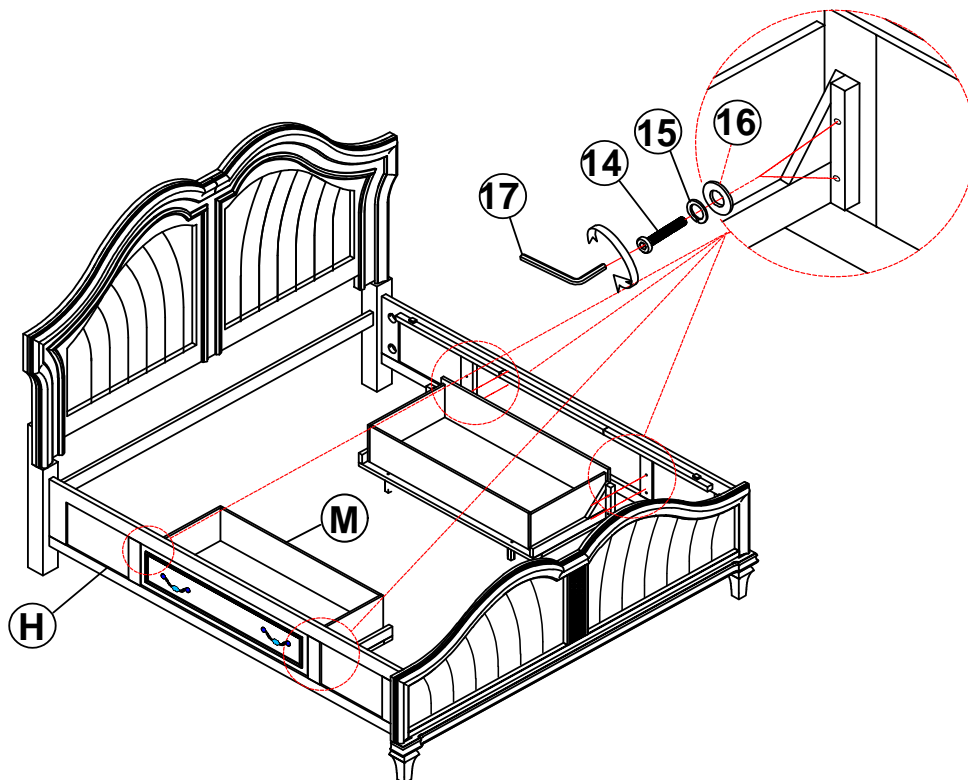


STEP 6

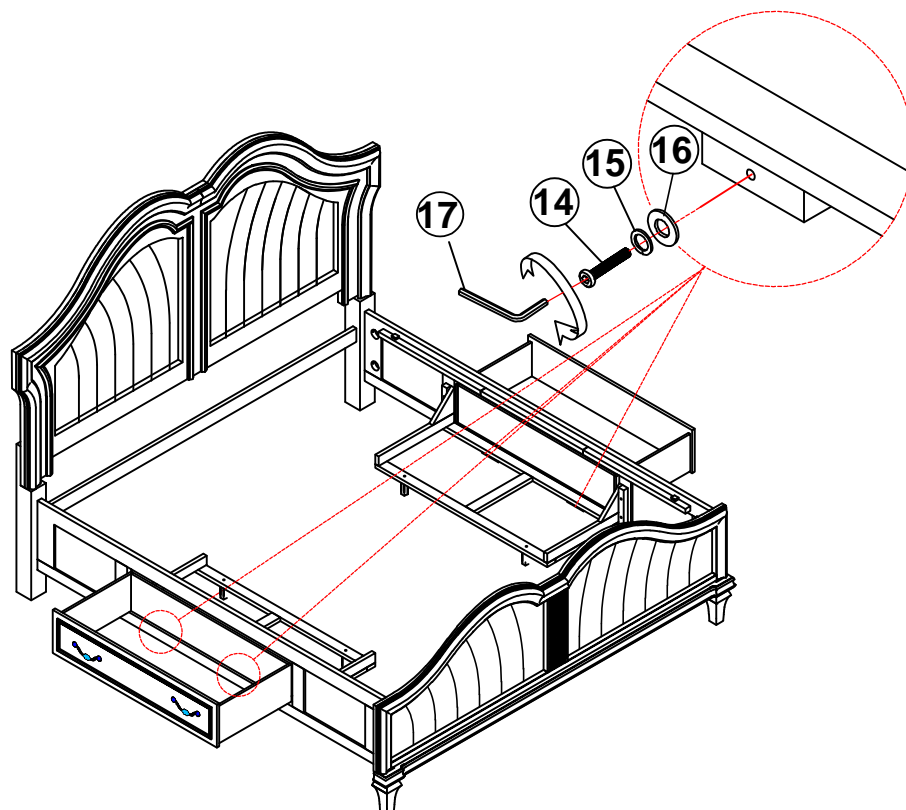


ITEM: 223390KE(B1-B4)

ASSEMBLY INSTRUCTIONS

STEP 7

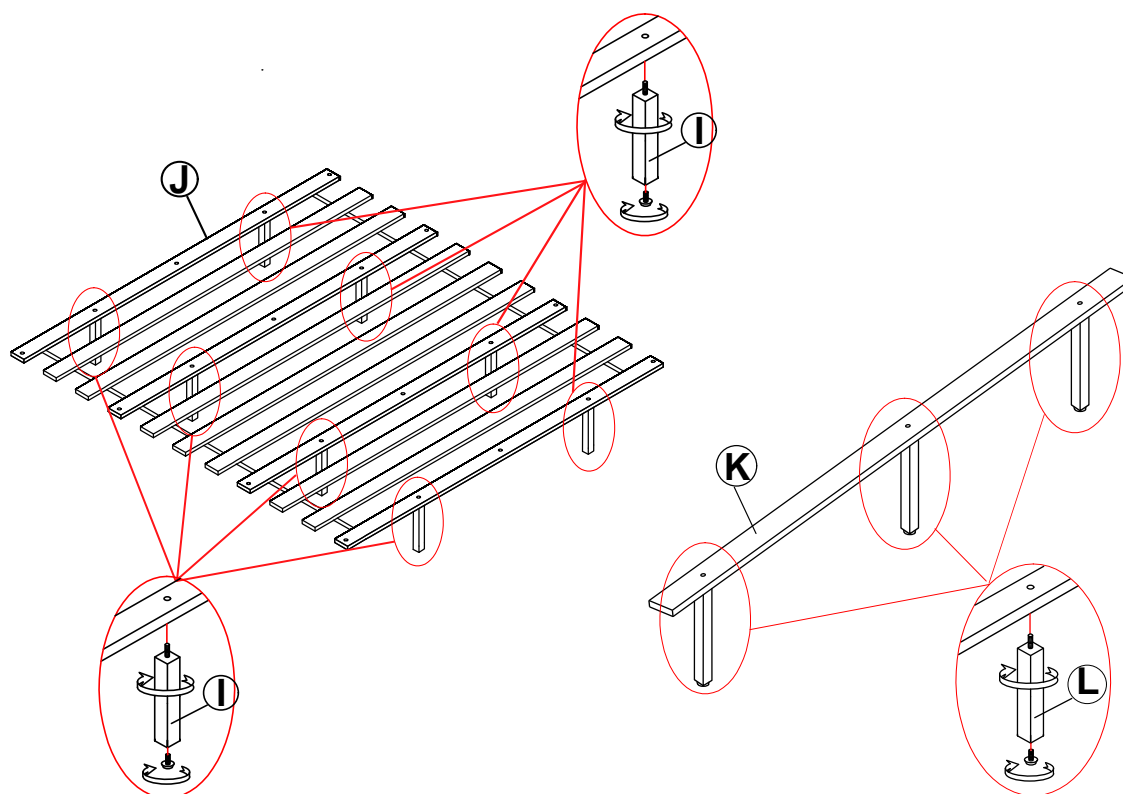


STEP 8

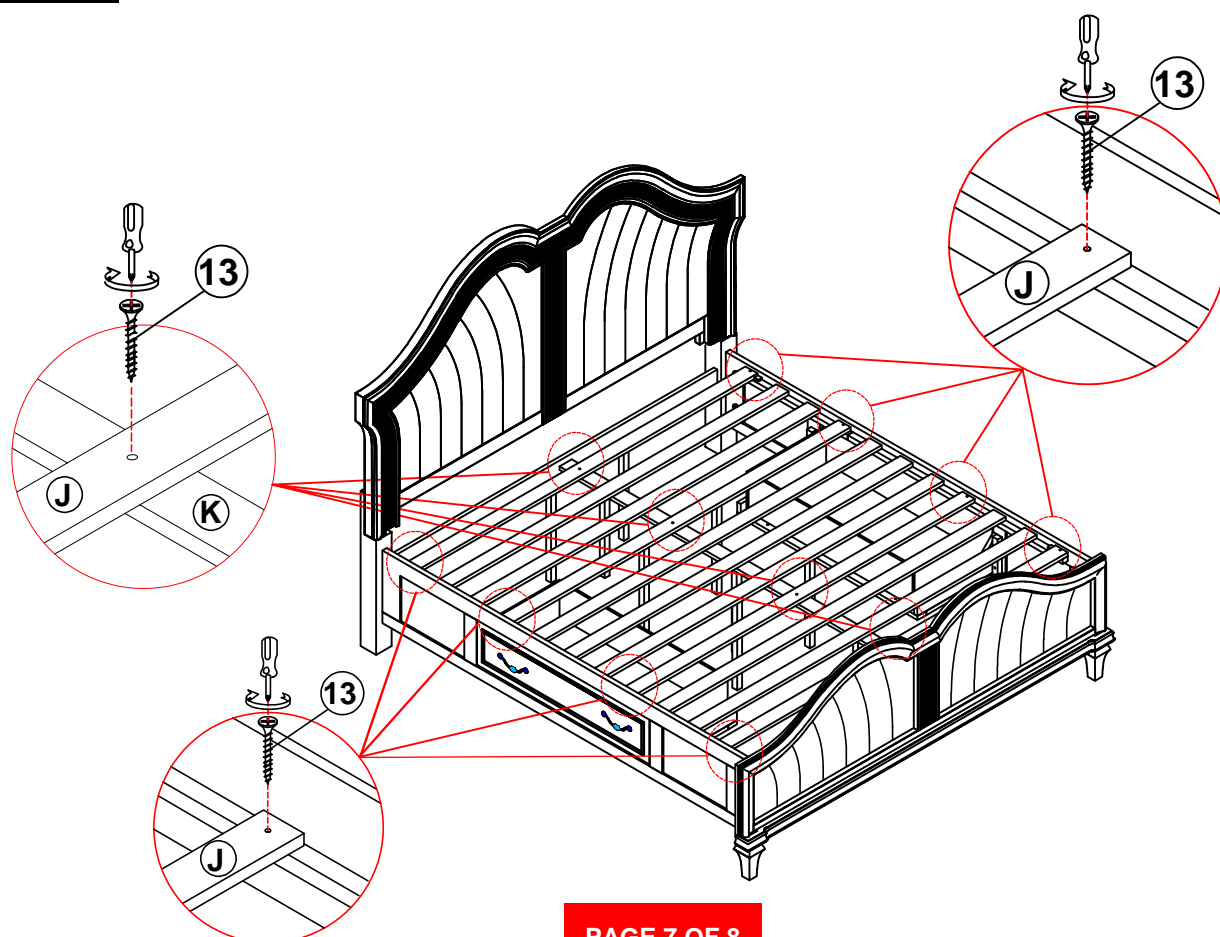



ITEM: **223390KE(B1-B4)**

ASSEMBLY INSTRUCTIONS

STEP 9

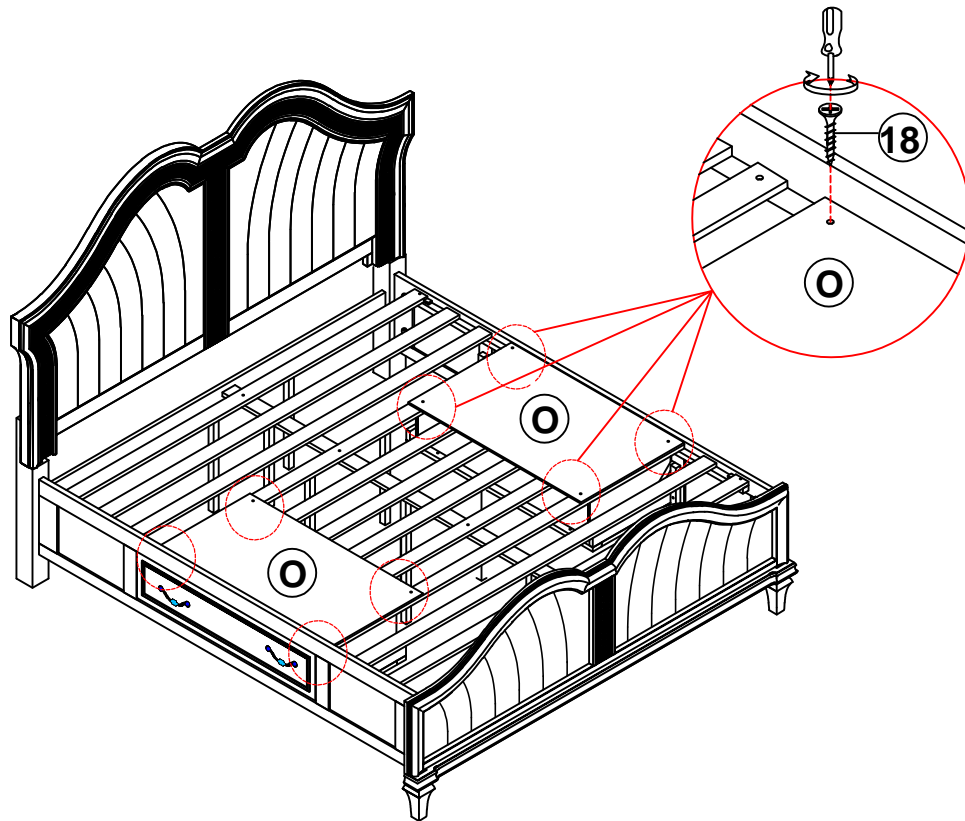

STEP 10 COMPLETE

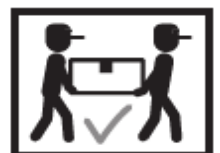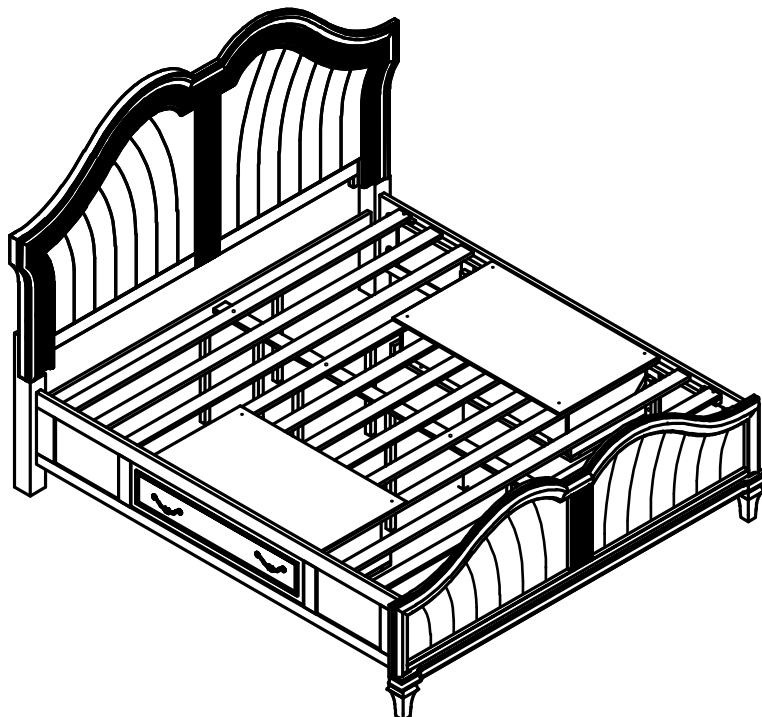


ITEM: **223390KE(B1-B4)**



Inner Size : 76.25"W X 81.50"D


Inner Size of Drawer : 37.00"W X 17.25"D X 6.50"H X 0.50"T

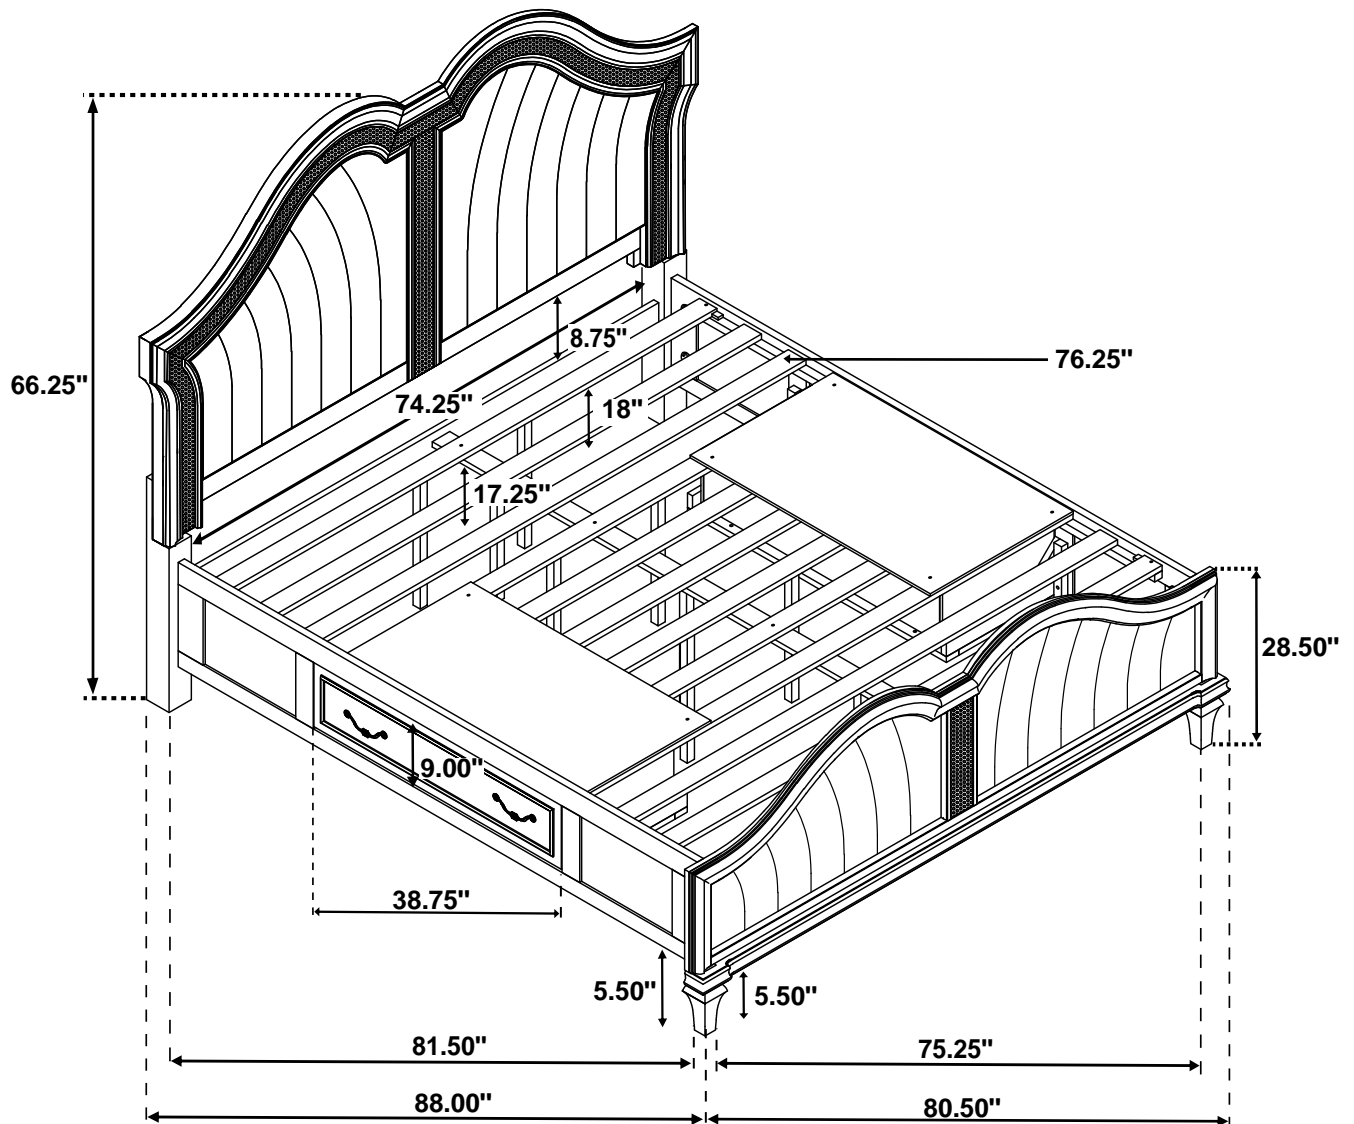

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

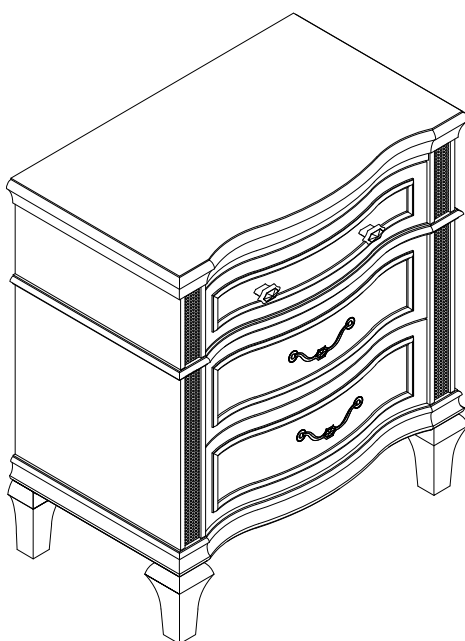

Fine Furniture for every stage of life

223392
Nightstand

REVISION 0 : 05/30/2022
REVISION 1 : 10/10/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: **223392**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A NIGHTSTAND

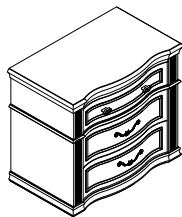

1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG



1PC


D LEFT BACK LEG



1PC

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 60mm - RBW)



8PCS

2 LOCK WASHER
(Φ5/16" - RBW)



8PCS

3 FLAT WASHER
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH
(4MM - RBW)




1PC


ITEM: **223392**

ASSEMBLY INSTRUCTIONS

STEP 1

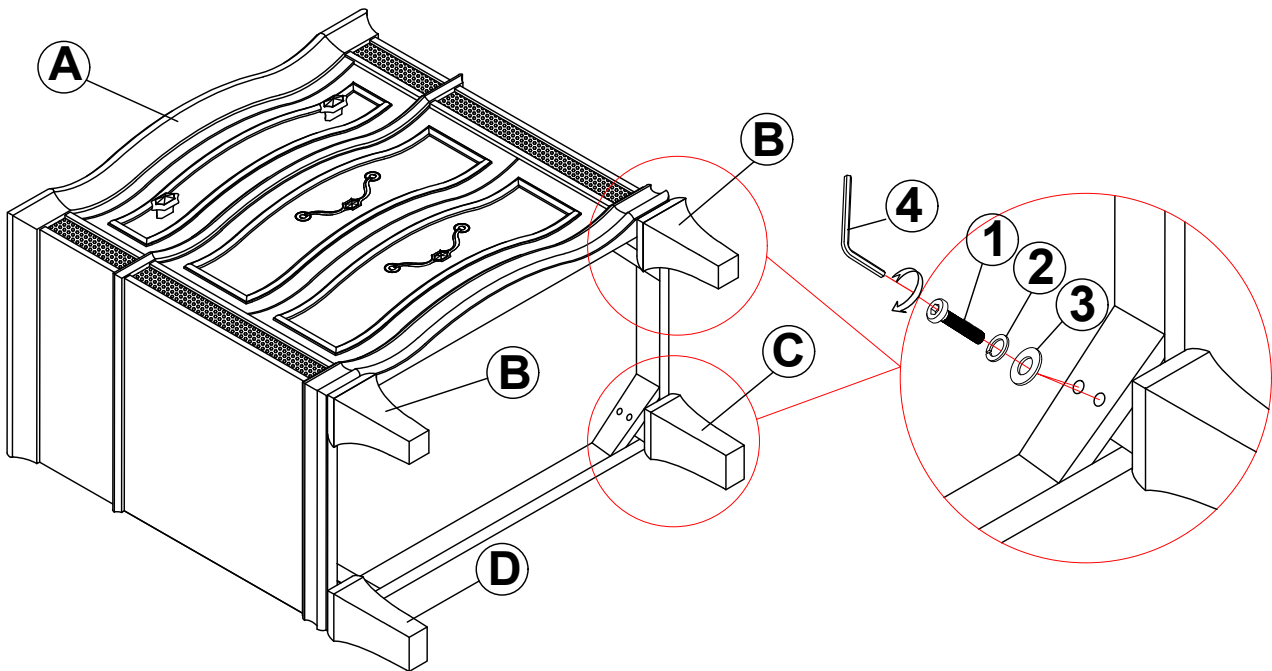

STEP 2 COMPLETE


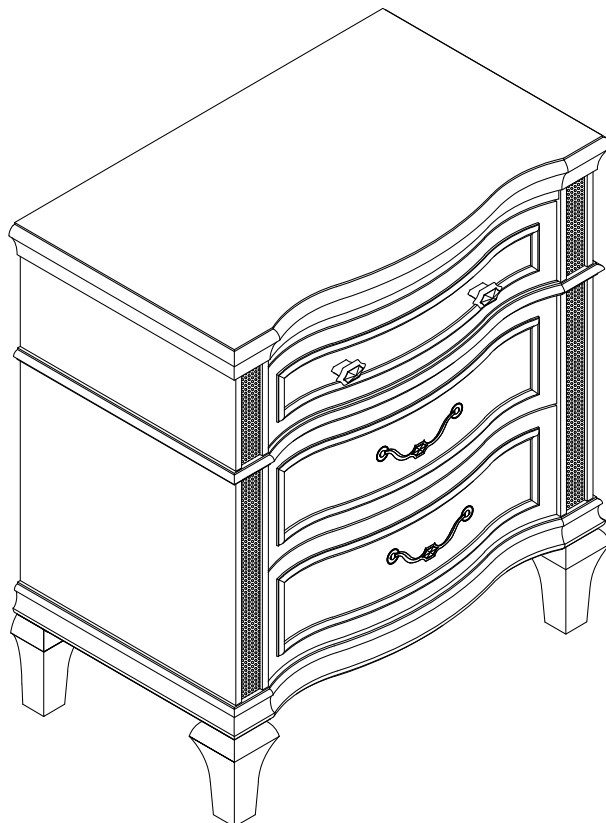


ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

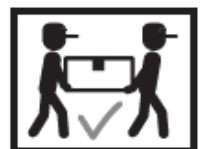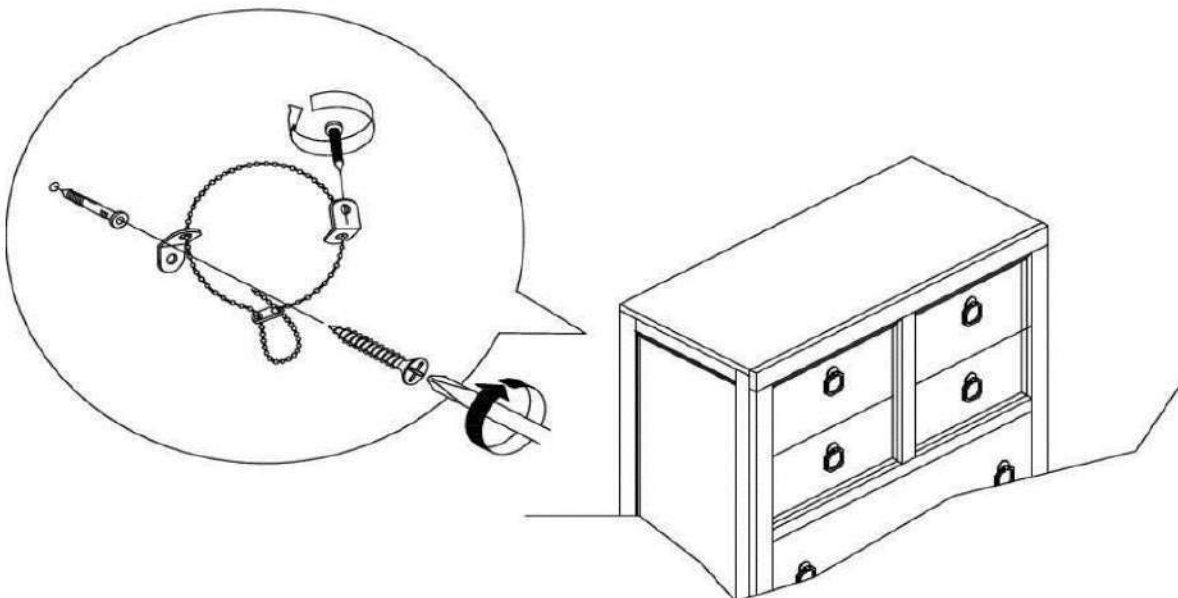


ITEM: **223392**




Inner Size of Drawer A: 20.50"W X 13.25"D X 3.25"H X 0.50"T

Inner Size of Drawer B: 20.50"W X 13.25"D X 4.75"H X 0.50"T

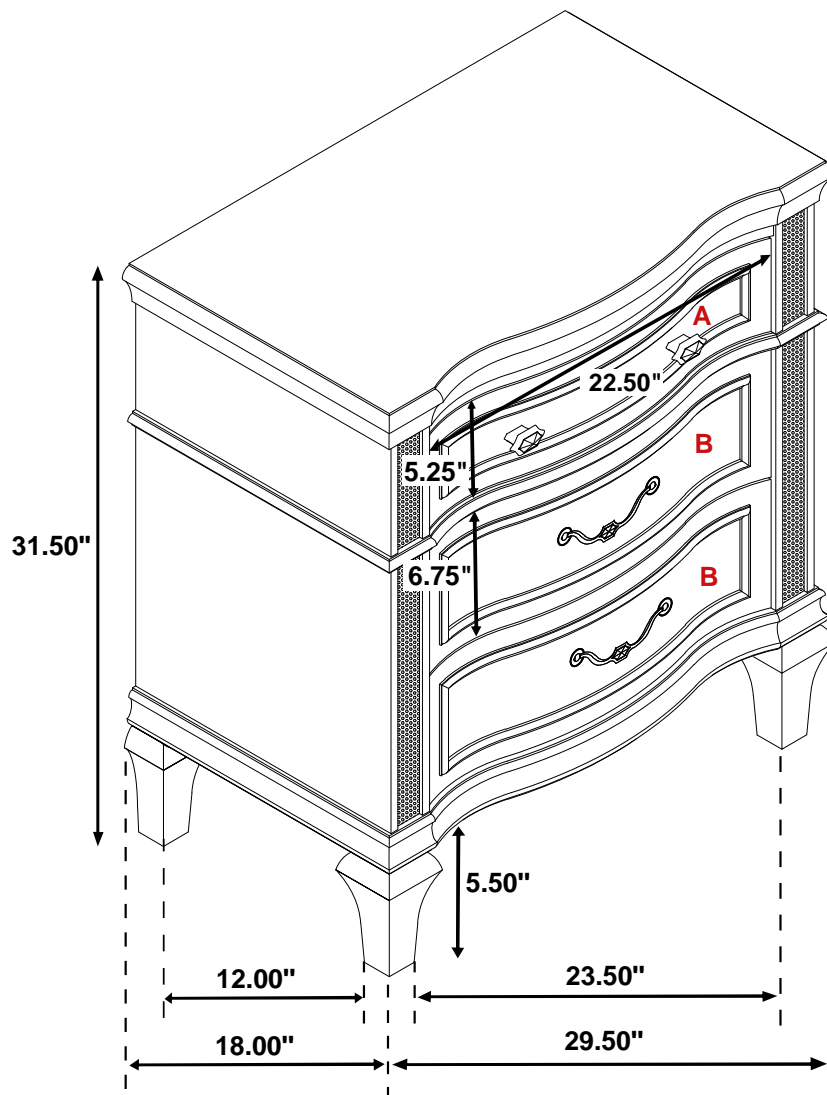

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

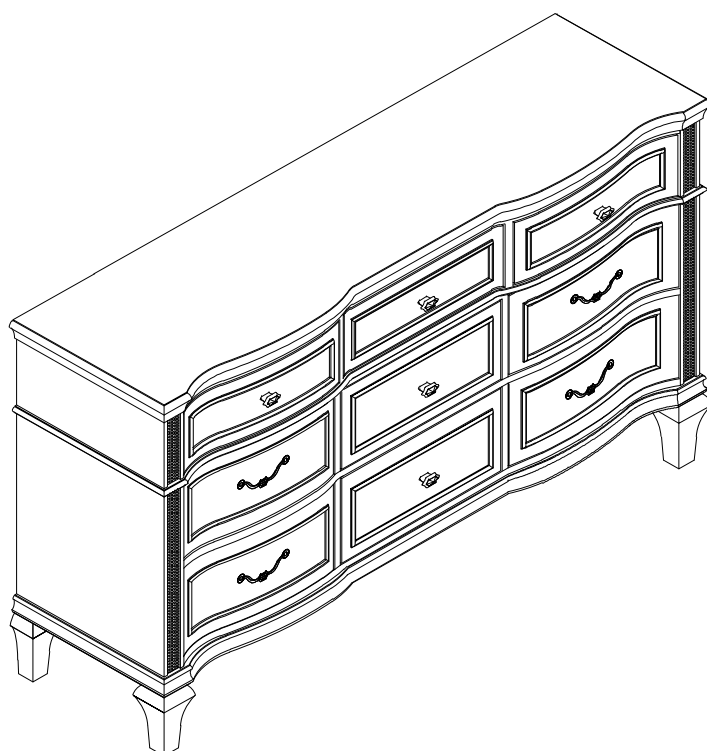

Fine Furniture for every stage of life

223393
Dresser

ITEM:223393

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A DRESSER

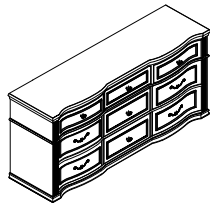

1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG




1PC

D LEFT BACK LEG



1PC


E CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 60mm - RBW)



8PCS

2 LOCK
WASHER
(Φ5/16" - RBW)



8PCS

3 FLAT WASHER
(Φ5/16" - RBW)



8PCS

4 ALLEN
WRENCH
(4MM - RBW)




1PC

ITEM: **223393**

ASSEMBLY INSTRUCTIONS

STEP 1

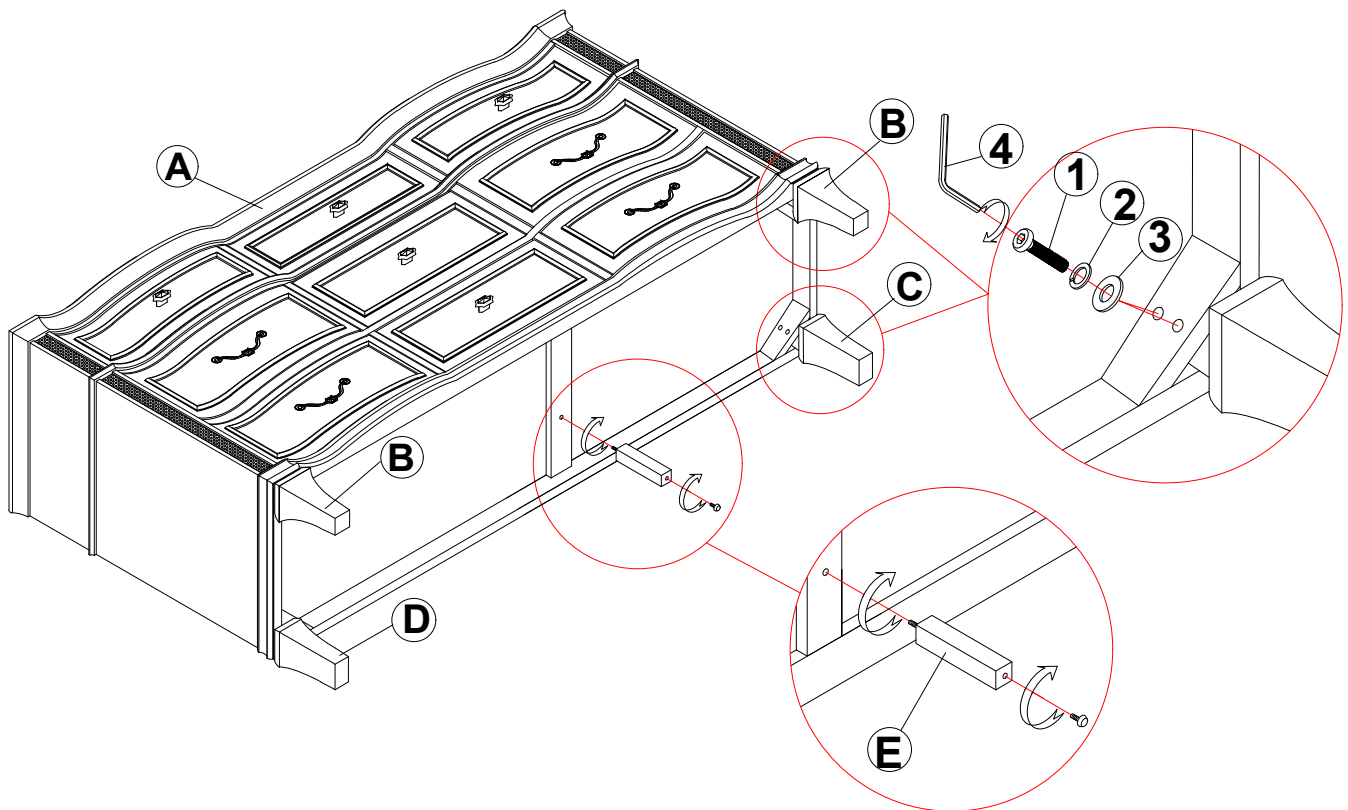

STEP 2 COMPLETE




ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

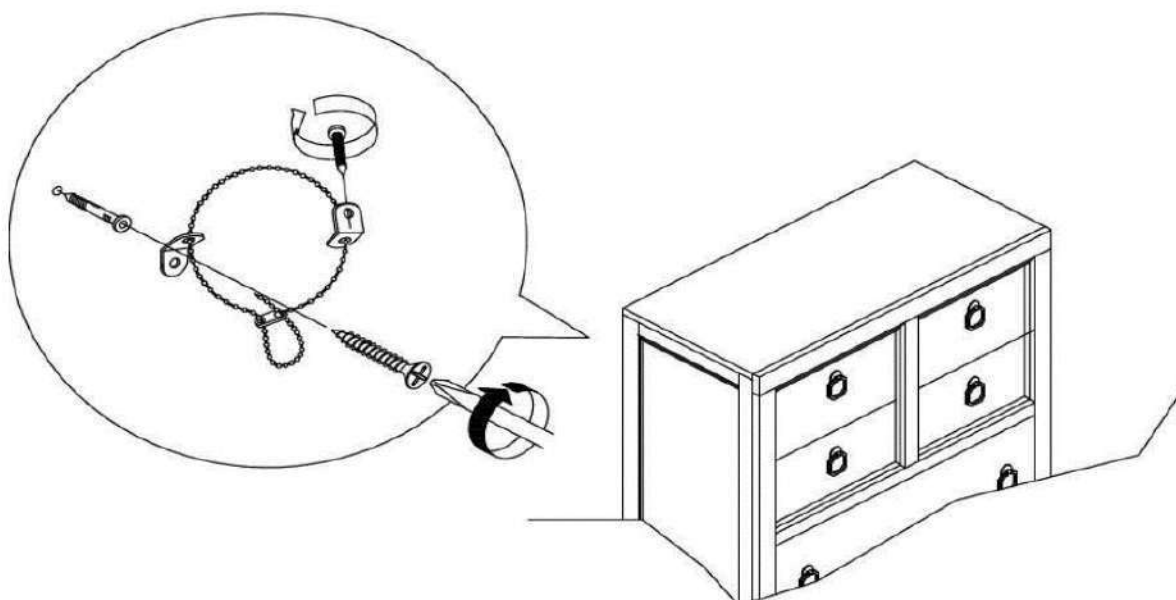

ITEM: **223393**




Inner Size of Drawer A: 20.50"W X 14.25"D X 4.75"H X 0.50"T

Inner Size of Drawer B: 15.00"W X 13.00"D X 4.75"H X 0.50"T


Inner Size of Drawer C: 20.50"W X 14.25"D X 7.00"H X 0.50"T

Inner Size of Drawer D: 15.00"W X 13.00"D X 7.00"H X 0.50"T

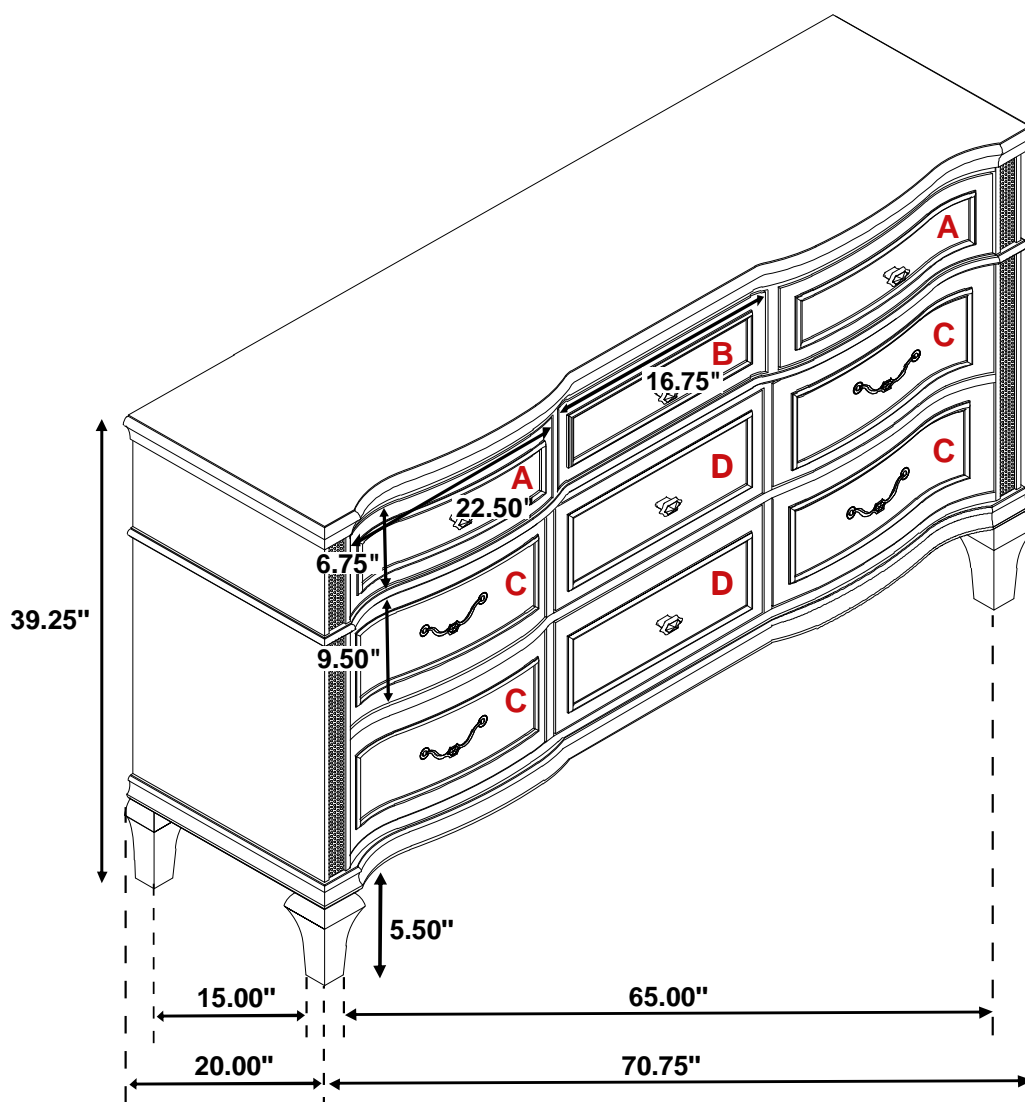

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

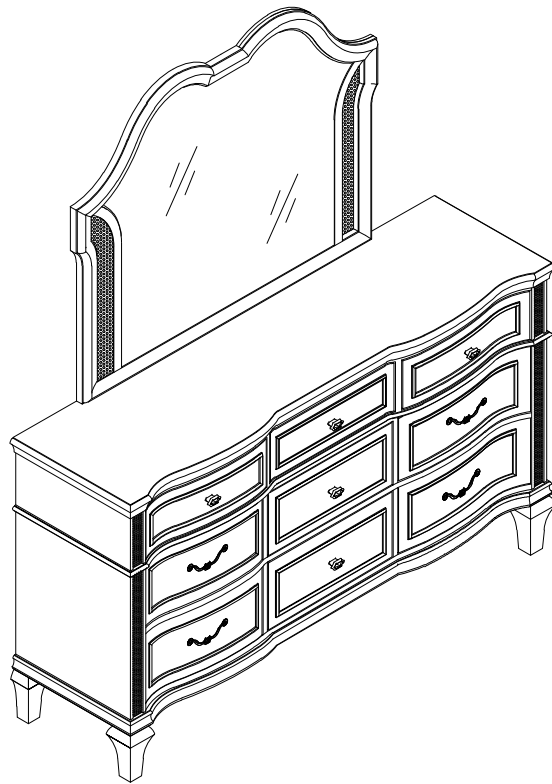

Fine Furniture for every stage of life

223394
Mirror

ITEM:223394



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A


DRESSER
FROM BOX
ITEM #223393



1PC

B


MIRROR

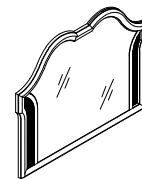

1PC

C

MIRROR SUPPORT
(PACKED WITH
DRESSER)




2PCS

HARDWARE IDENTIFICATION

1

BOLT
($\Phi 1/4"$ x 38mm - RBW)



6PCS

2

LOCK WASHER
($\Phi 1/4"$ - RBW)



6PCS

3

FLAT WASHER
($\Phi 1/4"$ - RBW)



6PCS

4

ALLEN WRENCH
(4MM - RBW)




1PC


ITEM: **223394**

ASSEMBLY INSTRUCTIONS


STEP 1

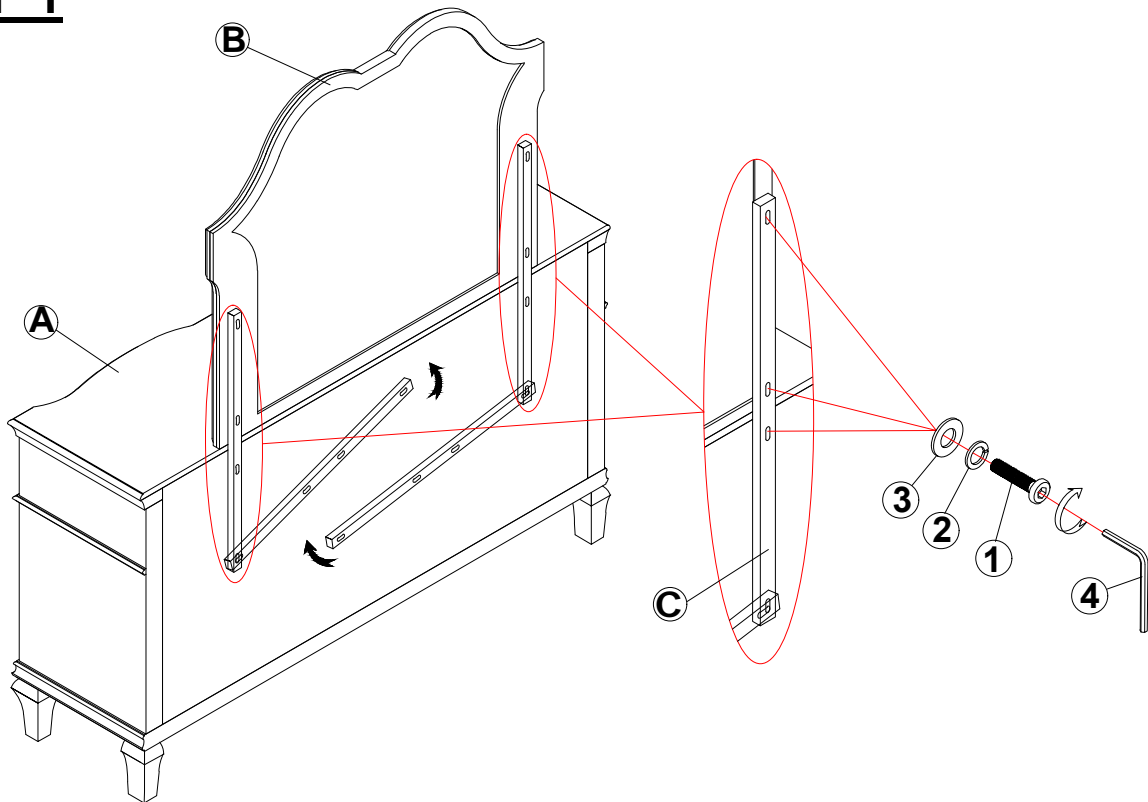

STEP 2 COMPLETE

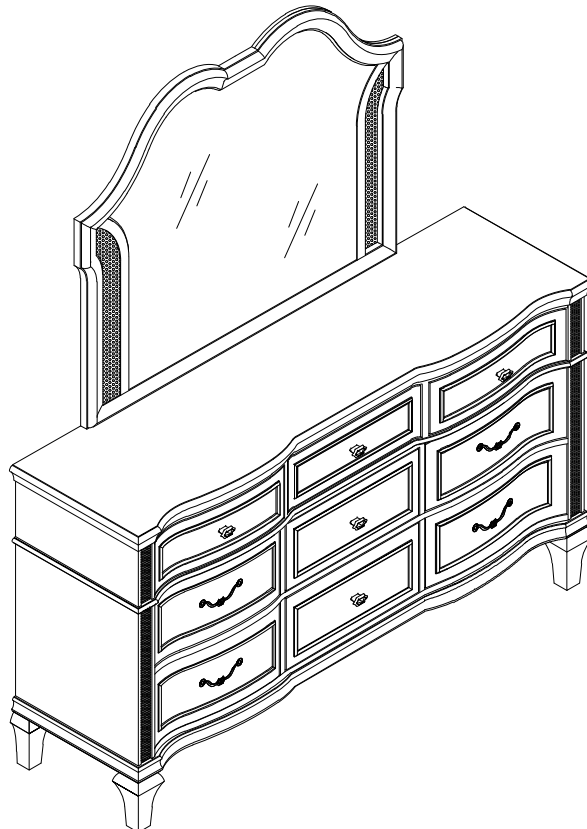


ITEM: **223394**

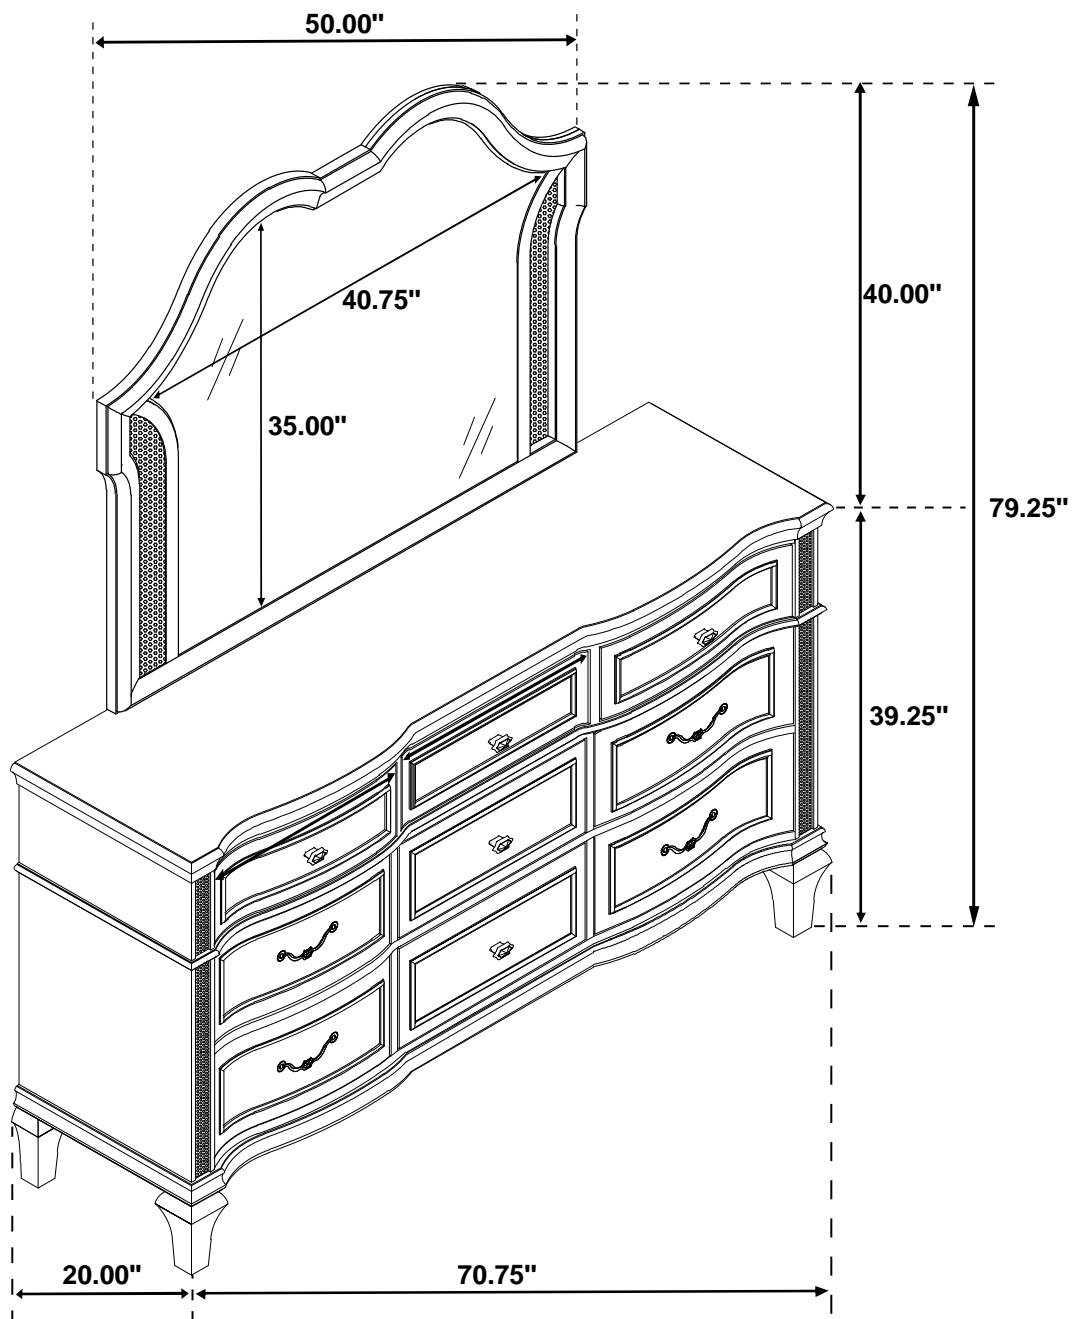

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

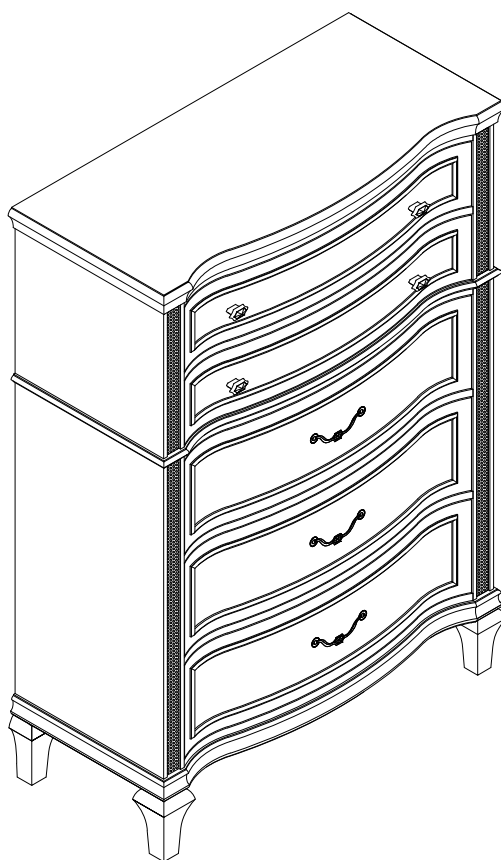

Fine Furniture for every stage of life

223395
Chest

ITEM: **223395**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A CHEST

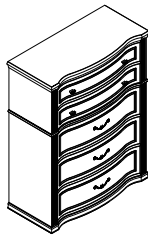

1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG



1PC


D LEFT BACK LEG



1PC

HARDWARE IDENTIFICATION

1 BOLT
(Φ5/16" x 60mm - RBW)



8PCS

2 LOCK WASHER
(Φ5/16" - RBW)



8PCS

3 FLAT WASHER
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH
(4MM - RBW)




1PC


ITEM: **223395**

ASSEMBLY INSTRUCTIONS

STEP 1

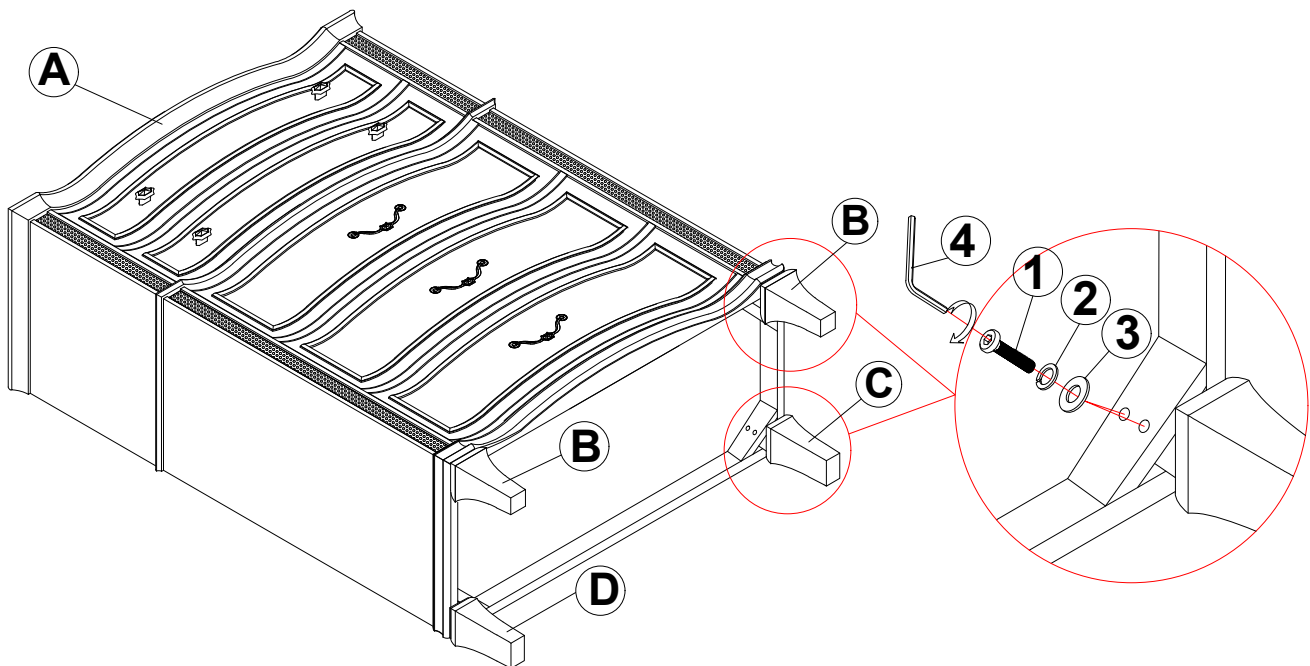

STEP 2 COMPLETE

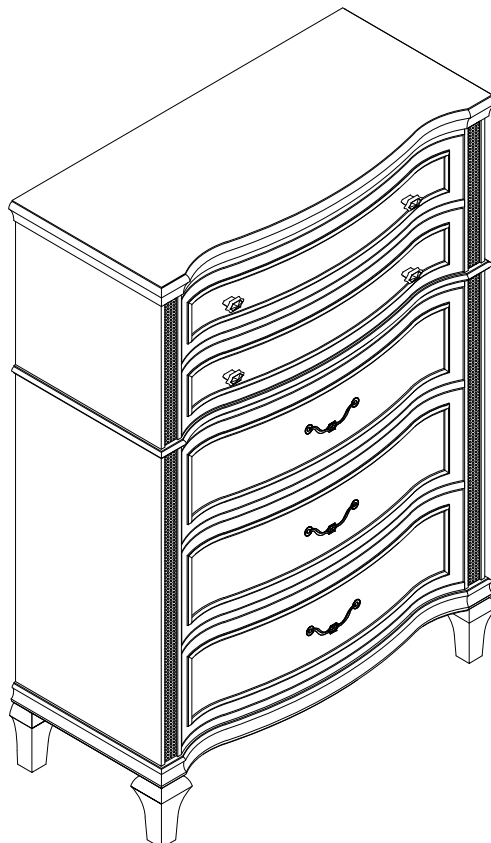


ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

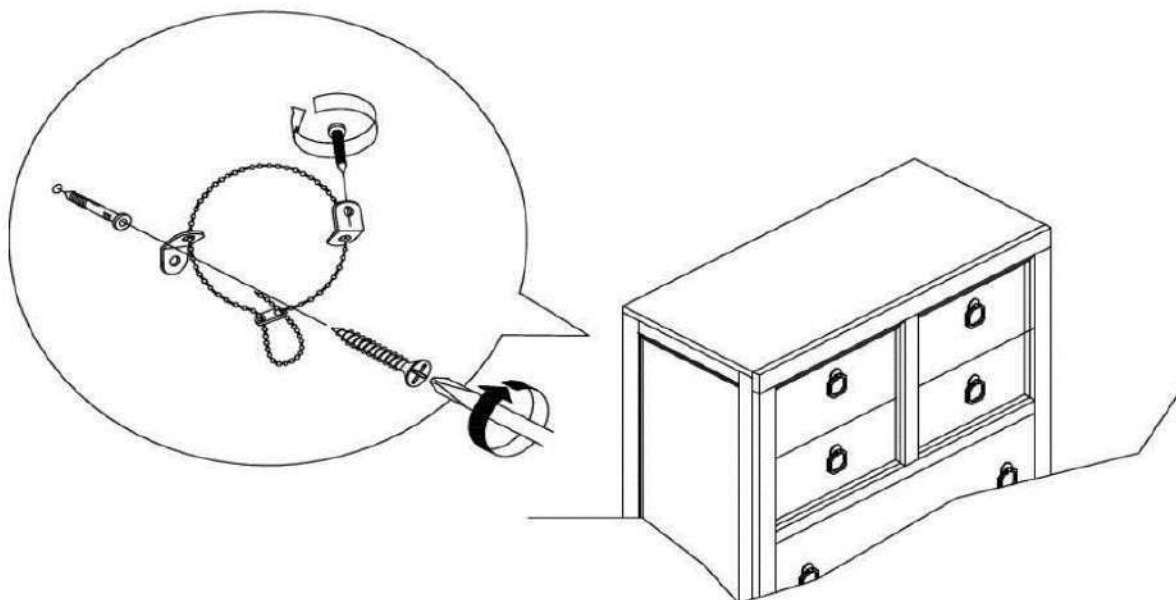

ITEM: **223395**




Inner Size of Drawer A: 33.00"W X 14.50"D X 5.00"H X 0.50"T

Inner Size of Drawer B: 33.00"W X 14.50"D X 5.75"H X 0.50"T

Inner Size of Drawer C: 33.00"W X 14.50"D X 7.00"H X 0.50"T

Inner Size of Hidden Drawer : 33.00"W X 13.00"D X 1.25"H X 0.50"T

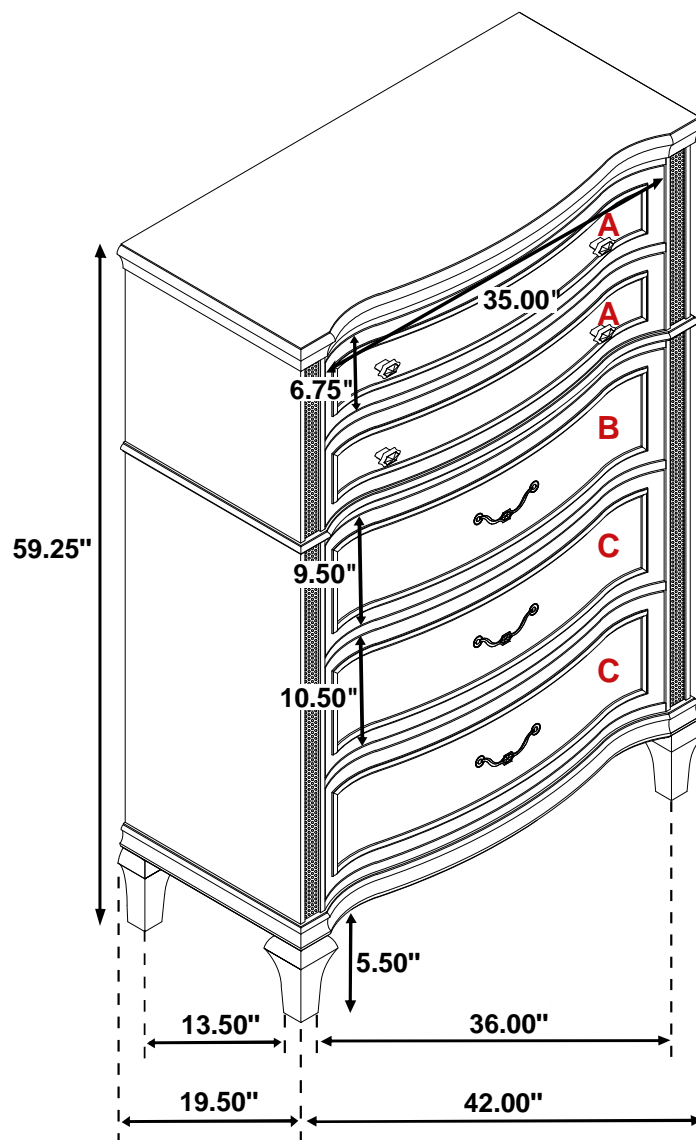

Note: Dimension tolerance $\pm 5\%$