


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

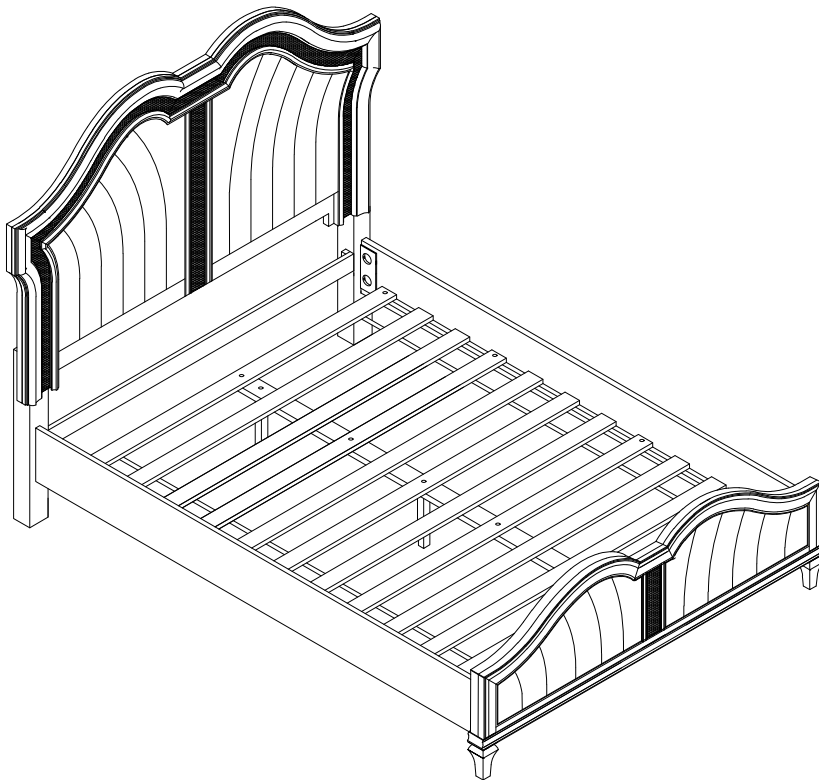

*Fine Furniture for every stage of life*

**223391Q (B1-B3)**  
**Queen Bed**

REVISION 0 : 05/30/2022  
REVISION 1 : 10/10/2022  
REVISION 2 : 09/21/2023

# ITEM: 223391Q(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION


### B1 (BOX 1)

A HEADBOARD  
PANEL




1PC

C RIGHT  
HEADBOARD LEG




1PC

B HEADBOARD BOTTOM  
RAIL



1PC


D LEFT  
HEADBOARD LEG



1PC

### B2 (BOX 2)

E FOOTBOARD



1PC

G LEFT  
FOOTBOARD LEG



1PC


F RIGHT  
FOOTBOARD LEG



1PC


### B3 (BOX 3)

H BED RAIL



2PCS

J ROLL SLAT  
(11PCS)



1SET

I CENTER RAIL SUPPORT  
WITH LEVELER



3PCS

K CENTER RAIL



1PC

HB 223391Q (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE



1PC

FB 223391Q (B2)  
FROM BOX 2  
FOOTBOARD



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 223391Q(B1-B3)

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





### WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION






### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223391Q (B1)

1	<b>BOLT</b> ( $\varnothing$ 5/16" x 45MM - RBW)		10PCS	2	<b>LOCK WASHER</b> ( $\varnothing$ 5/16" - RBW)		10PCS
3	<b>FLAT WASHER</b> ( $\varnothing$ 5/16" - RBW)		10PCS	4	<b>ALLEN WRENCH</b> (4MM - RBW)		1PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223391Q (B2)

5	<b>BOLT</b> ( $\varnothing$ 5/16" x 55MM - RBW)		4PCS	6	<b>LOCK WASHER</b> ( $\varnothing$ 5/16" - RBW)		4PCS
7	<b>FLAT WASHER</b> ( $\varnothing$ 5/16" - RBW)		4PCS	8	<b>ALLEN WRENCH</b> (4MM - RBW)		1PC

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223391Q (B3)

9	<b>THREADED BOLT</b> ( $\varnothing$ 5/16" x 90MM - RBW)		8PCS	10	<b>HALF ROUND NUT</b> ( $\varnothing$ 5/16" - RBW)		8PCS
11	<b>HEX NUT</b> ( $\varnothing$ 5/16" x 14MM - RBW)		8PCS	12	<b>WRENCH</b> (14MM - RBW)		1PC
13	<b>FLAT HEAD SCREW</b> ( $\varnothing$ 4 x 30MM - RBW)		12PCS				


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223391Q(B1-B3)**

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

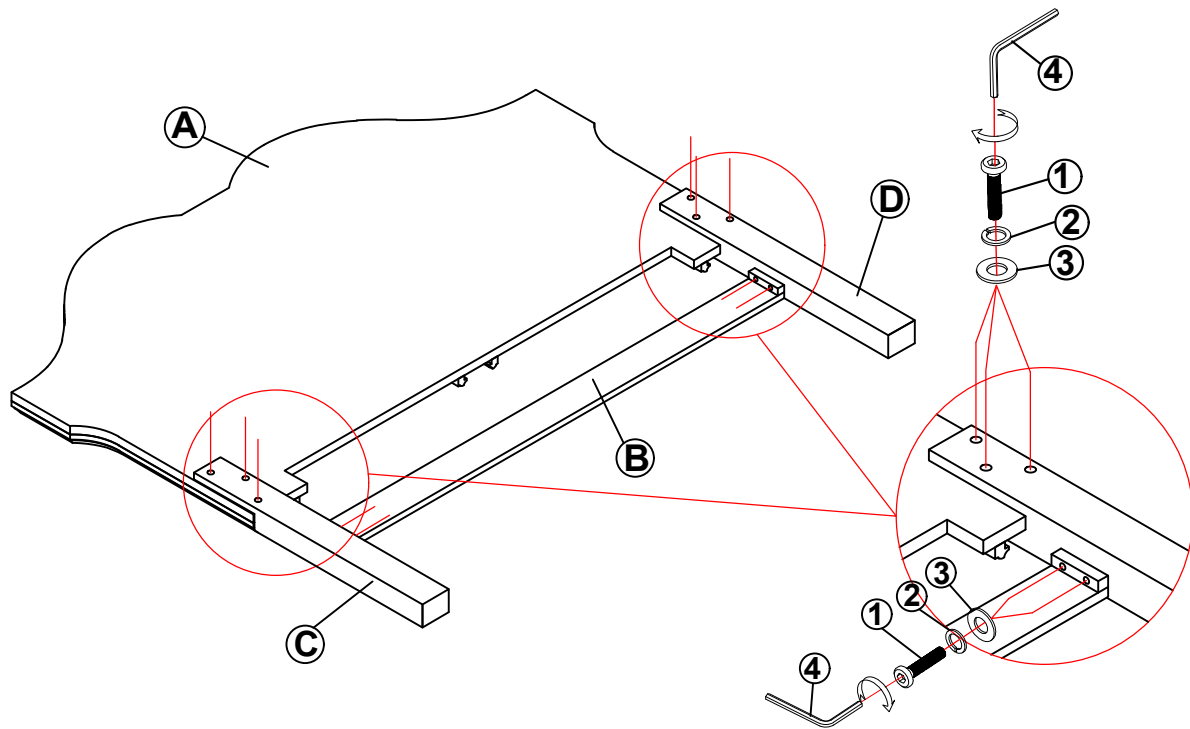


**STEP 2**

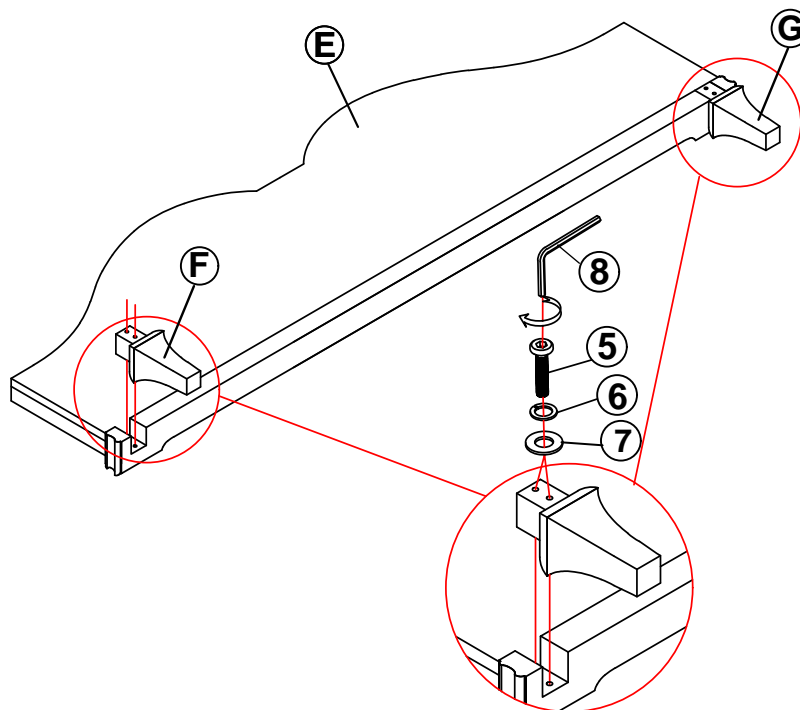


ITEM: **223391Q(B1-B3)**

**ASSEMBLY INSTRUCTIONS**

**STEP 3**

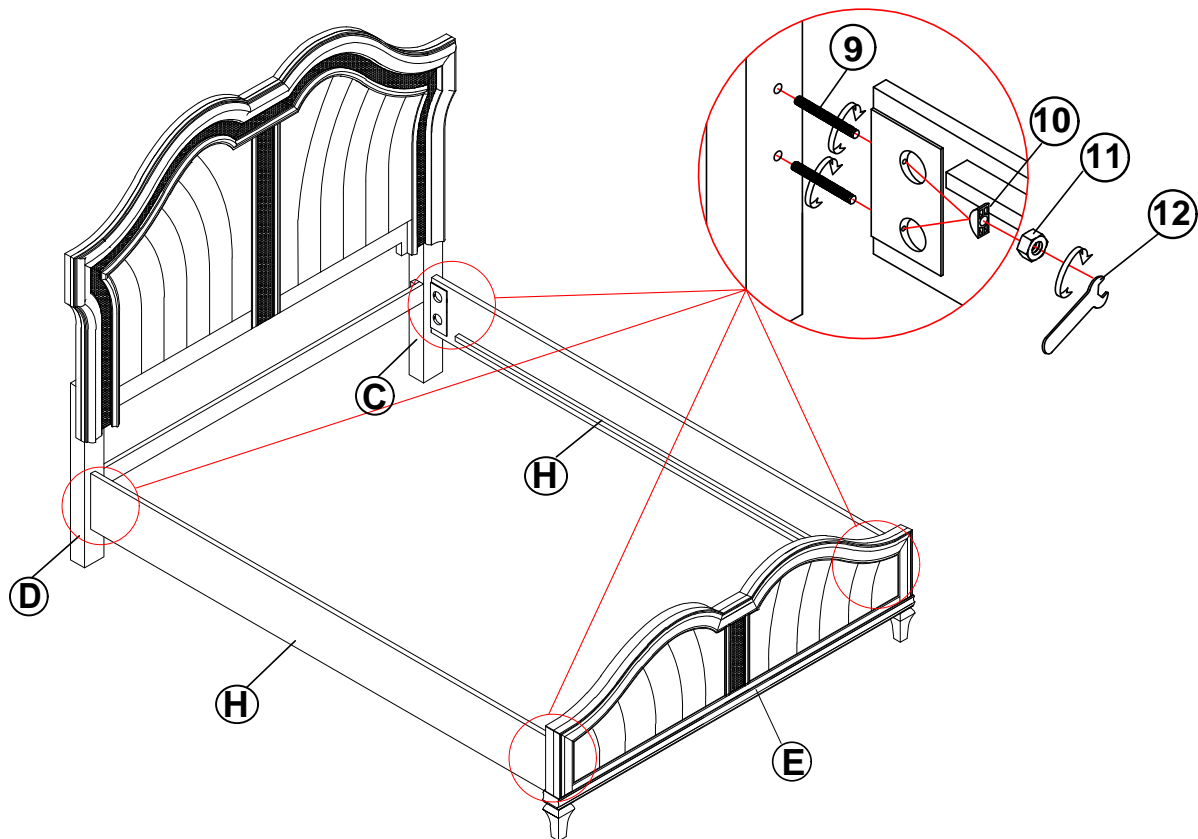

**STEP 4**

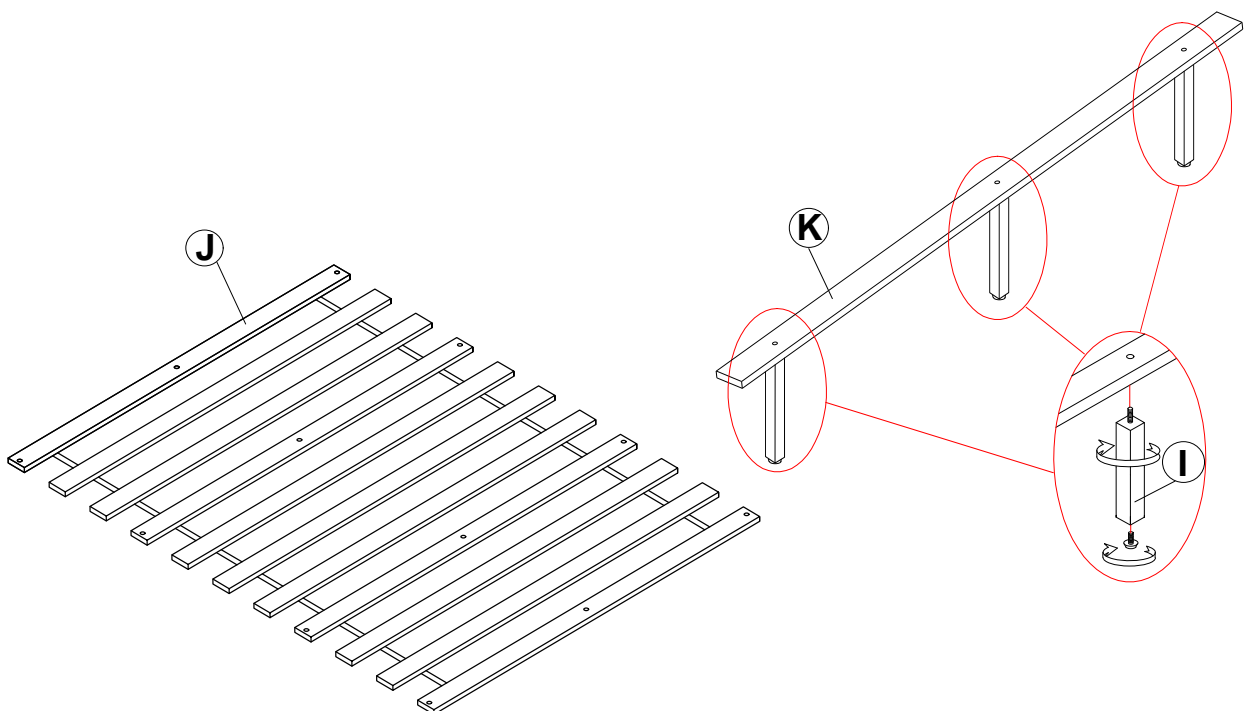


ITEM: **223391Q(B1-B3)**


## ASSEMBLY INSTRUCTIONS

### STEP 5

**COASTER**  
FINE FURNITURE

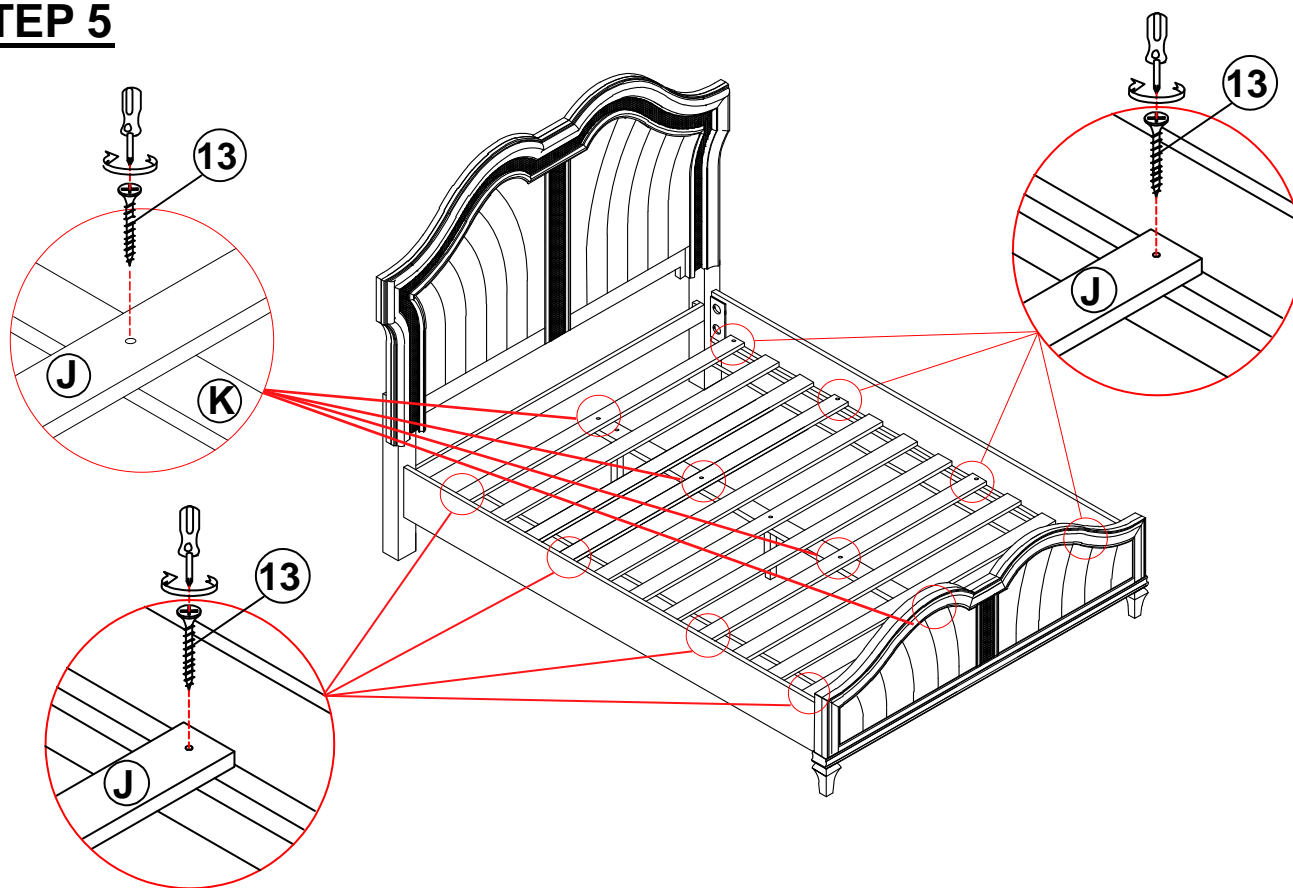


### STEP 6 COMPLETE

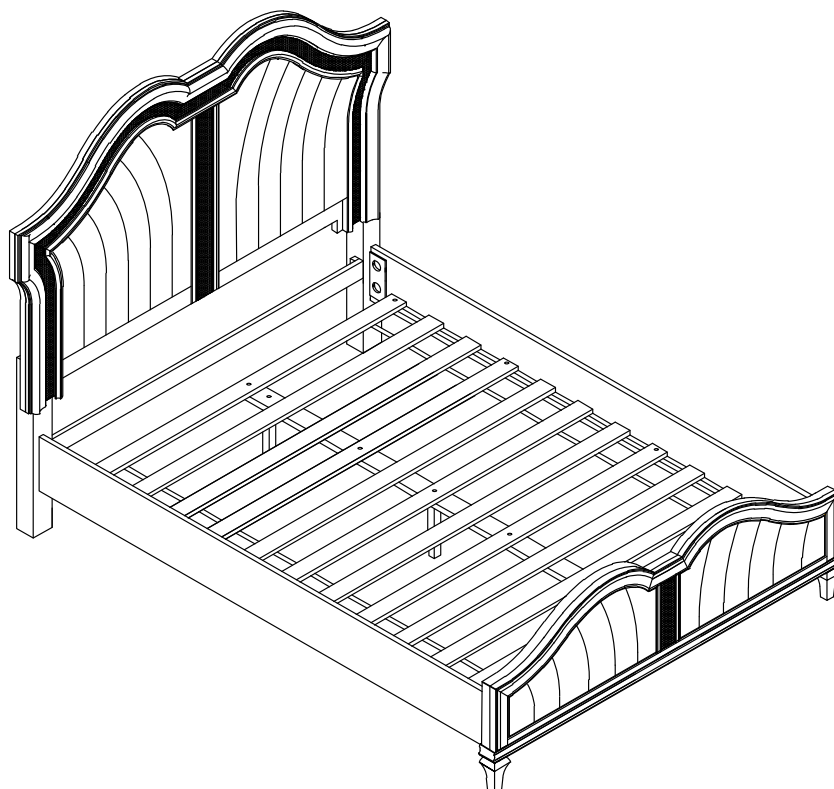

ITEM: **223391Q(B1-B3)**




Inner Size : 81.50"W X 61.00"D

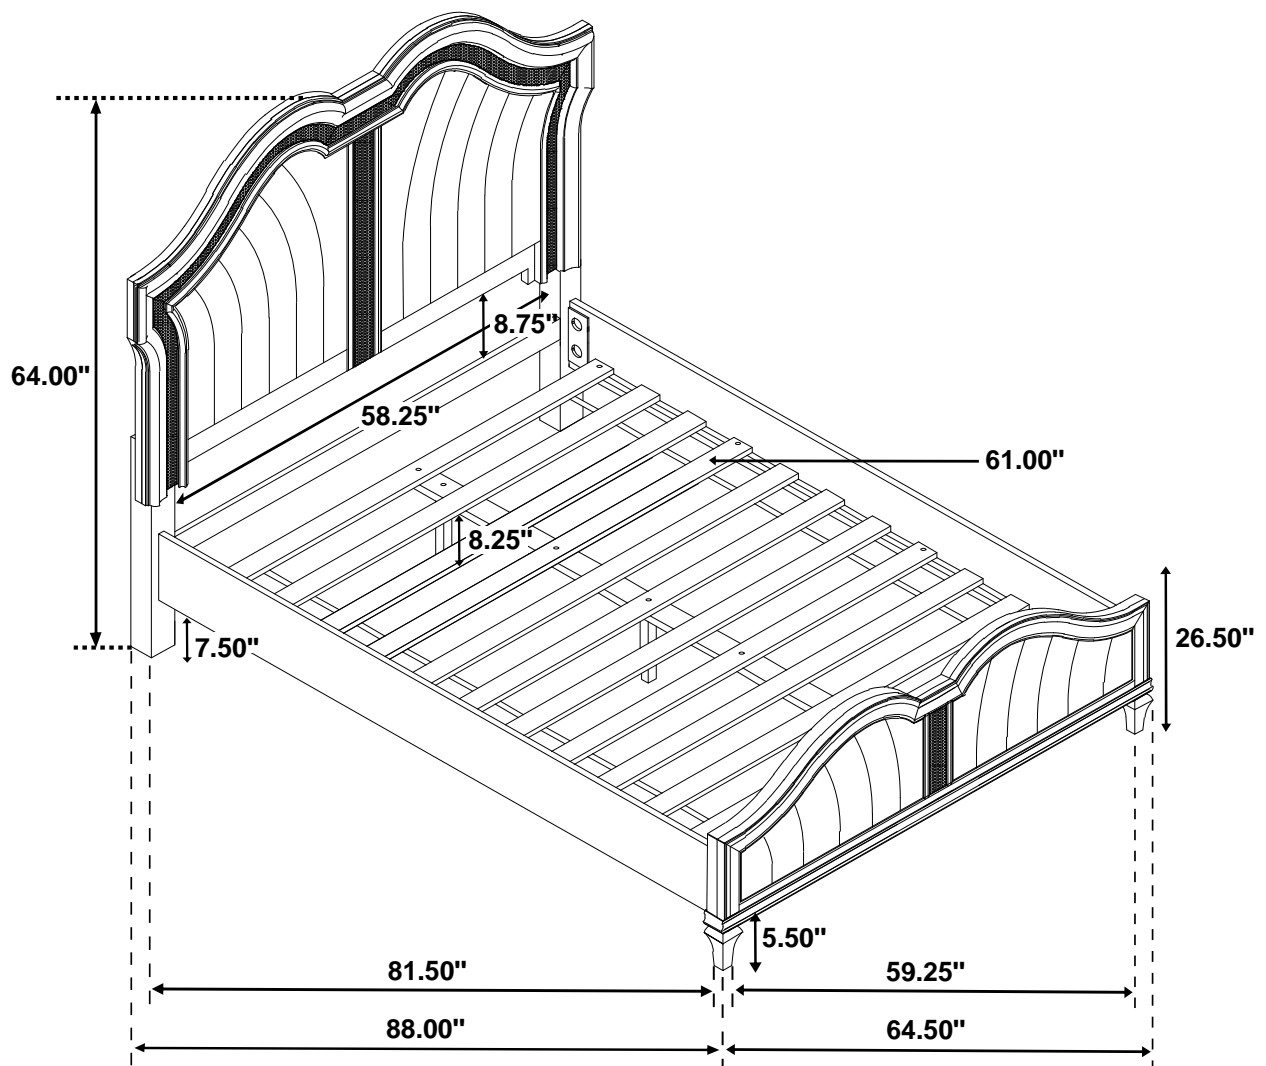

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

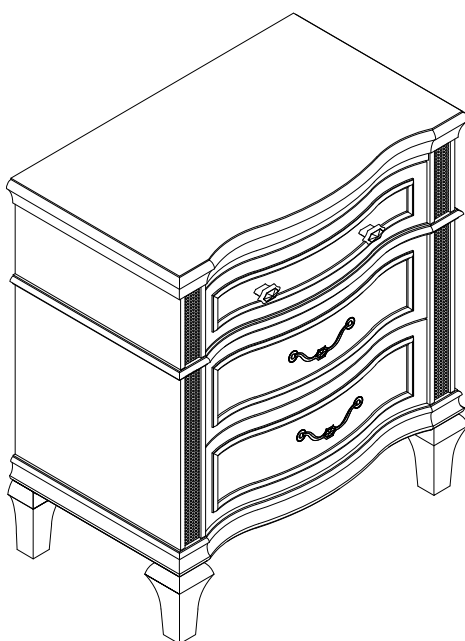

*Fine Furniture for every stage of life*

**223392**  
**Nightstand**

REVISION 0 : 05/30/2022  
REVISION 1 : 10/10/2022

**PAGE 1 OF 4**

COASTERFURNITURE.COM



ITEM: **223392**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A NIGHTSTAND

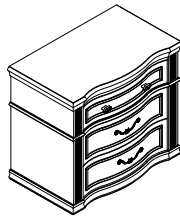

1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG



1PC


D LEFT BACK LEG



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(Φ5/16" x 60mm - RBW)



8PCS

2 LOCK WASHER  
(Φ5/16" - RBW)



8PCS

3 FLAT WASHER  
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH  
(4MM - RBW)




1PC


ITEM: **223392**

## ASSEMBLY INSTRUCTIONS

### STEP 1

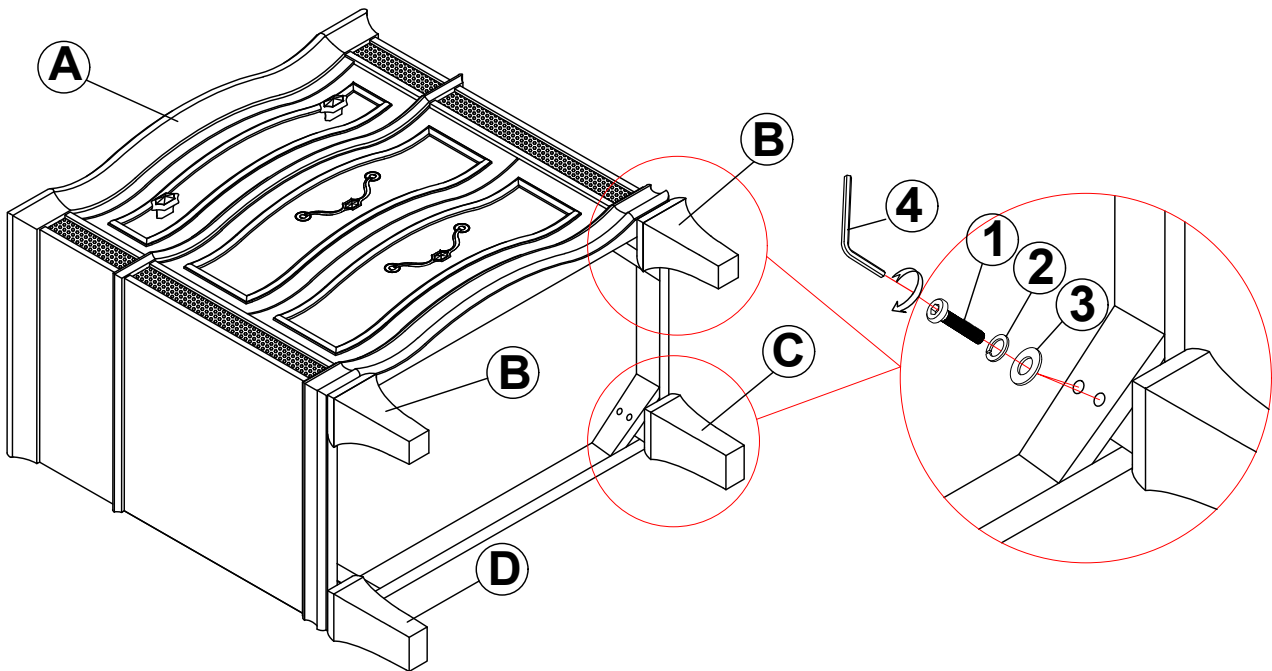

### STEP 2 COMPLETE

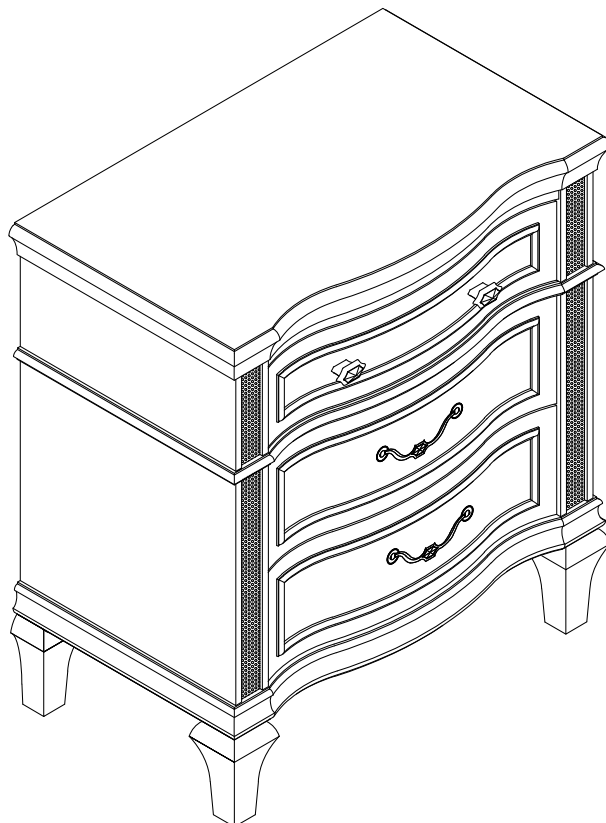


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

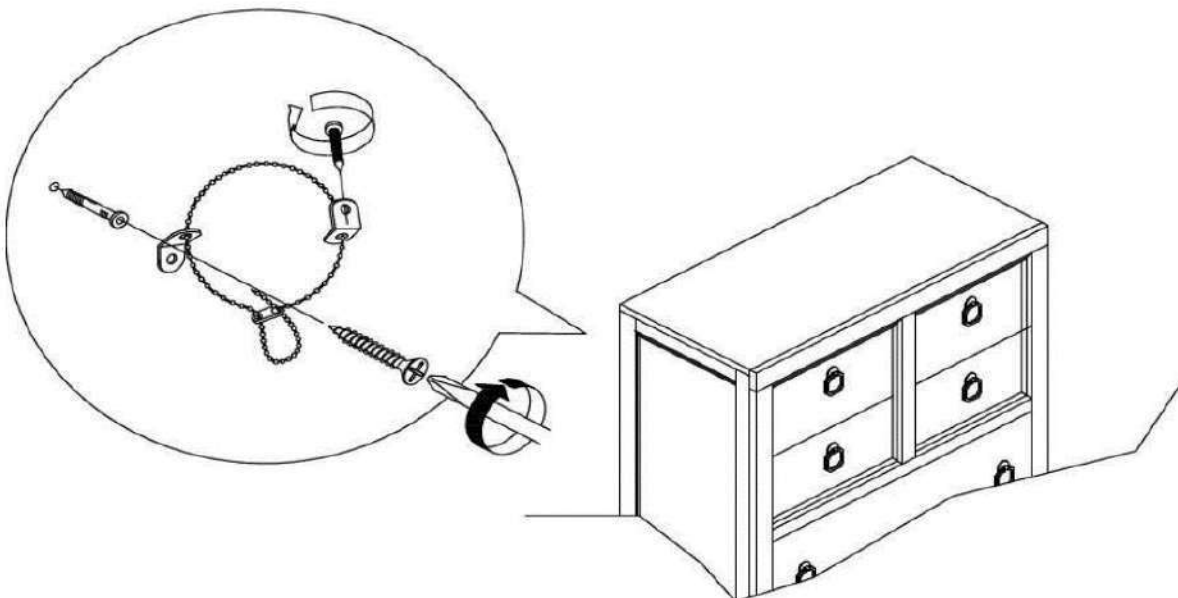


ITEM: **223392**



Inner Size of Drawer A: 20.50"W X 13.25"D X 3.25"H X 0.50"T

Inner Size of Drawer B: 20.50"W X 13.25"D X 4.75"H X 0.50"T

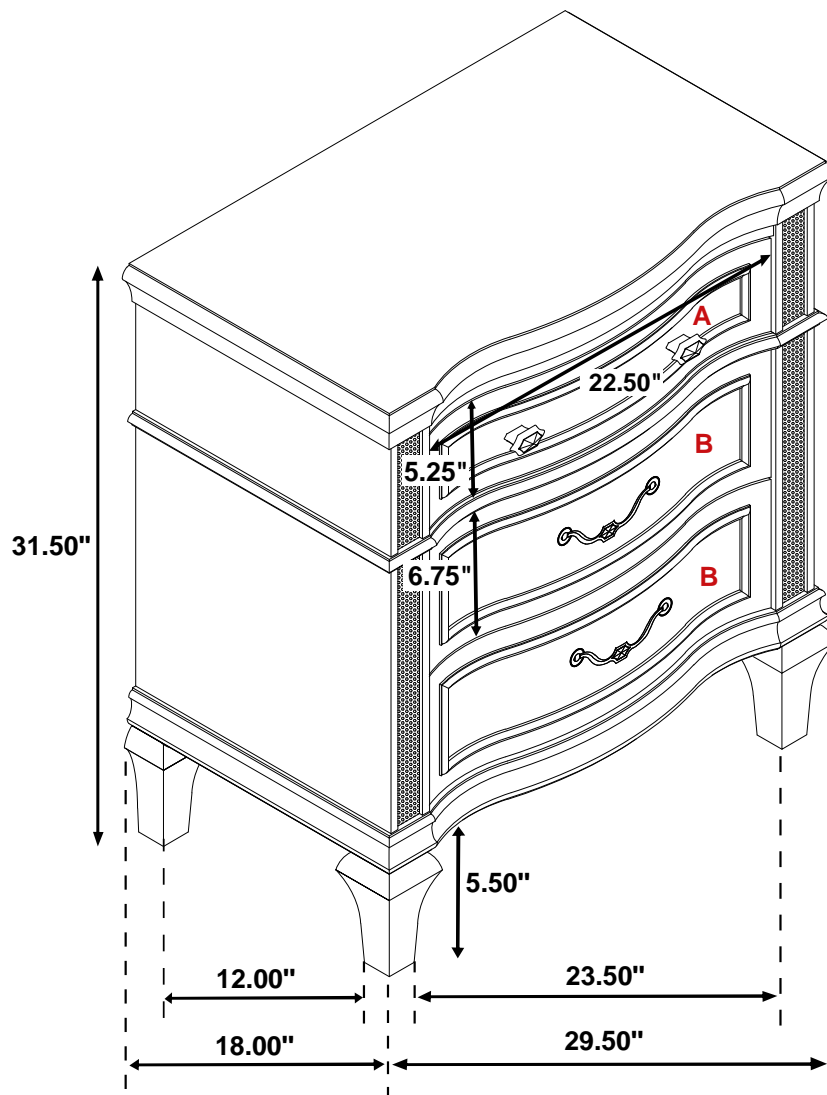

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223393**  
Dresser

REVISION 0 : 05/30/2022  
REVISION 1 : 10/10/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM:223393

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A DRESSER

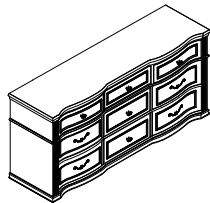

1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG




1PC

D LEFT BACK LEG



1PC


E CENTER SUPPORT LEG  
WITH LEVELER



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(Φ5/16" x 60mm - RBW)



8PCS

2 LOCK  
WASHER  
(Φ5/16" - RBW)



8PCS

3 FLAT WASHER  
(Φ5/16" - RBW)



8PCS

4 ALLEN  
WRENCH  
(4MM - RBW)




1PC


ITEM: **223393**

## ASSEMBLY INSTRUCTIONS

### STEP 1

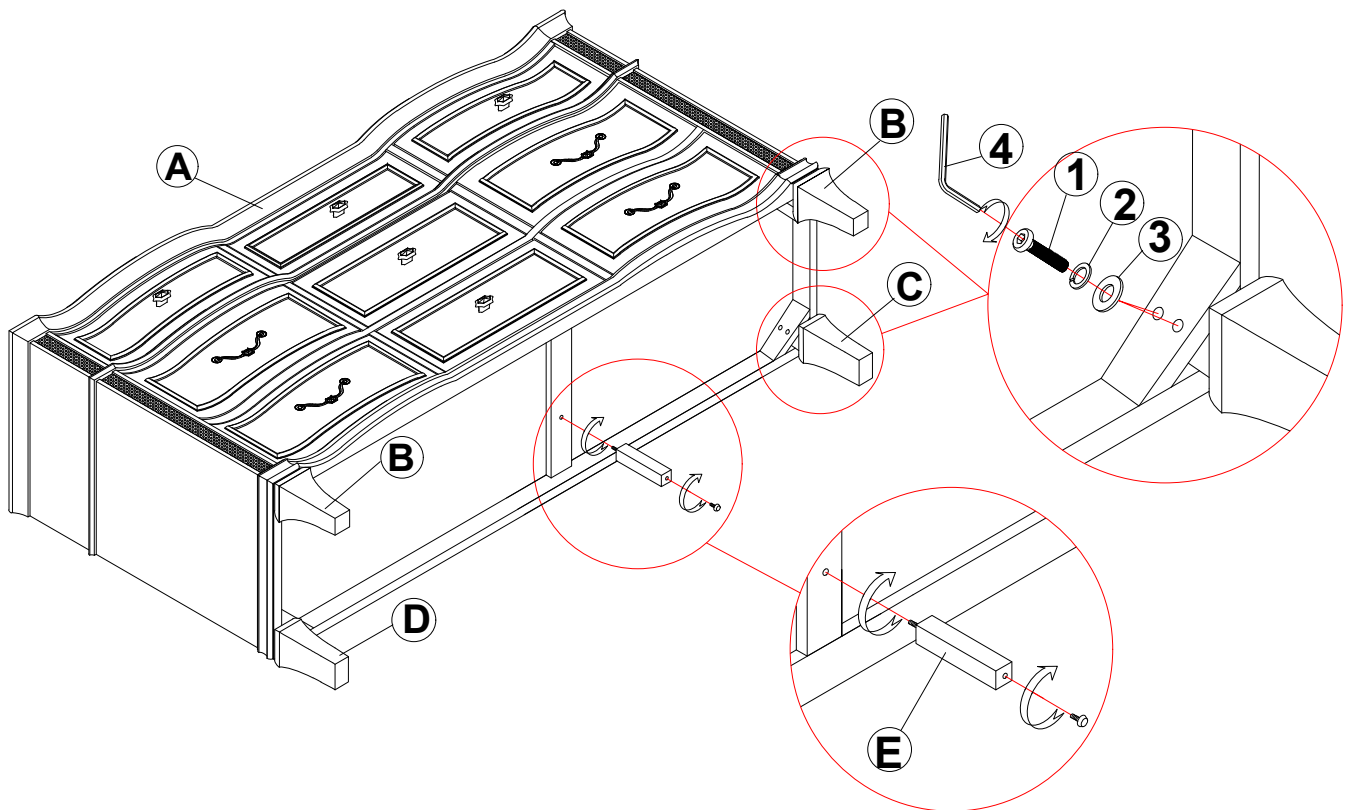

### STEP 2 COMPLETE

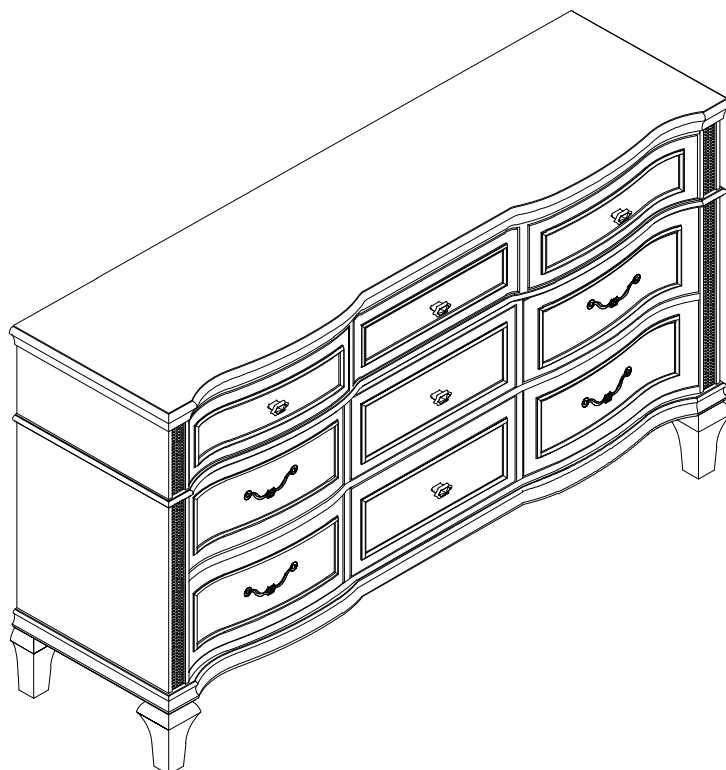


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

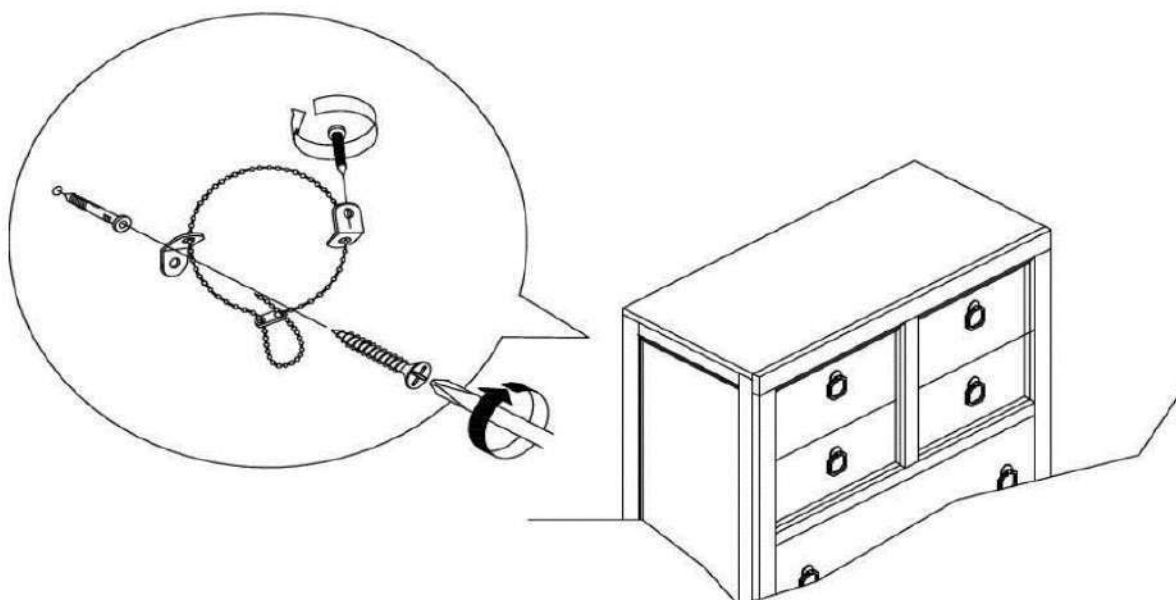



ITEM: **223393**




Inner Size of Drawer A: 20.50"W X 14.25"D X 4.75"H X 0.50"T

Inner Size of Drawer B: 15.00"W X 13.00"D X 4.75"H X 0.50"T

Inner Size of Drawer C: 20.50"W X 14.25"D X 7.00"H X 0.50"T

Inner Size of Drawer D: 15.00"W X 13.00"D X 7.00"H X 0.50"T

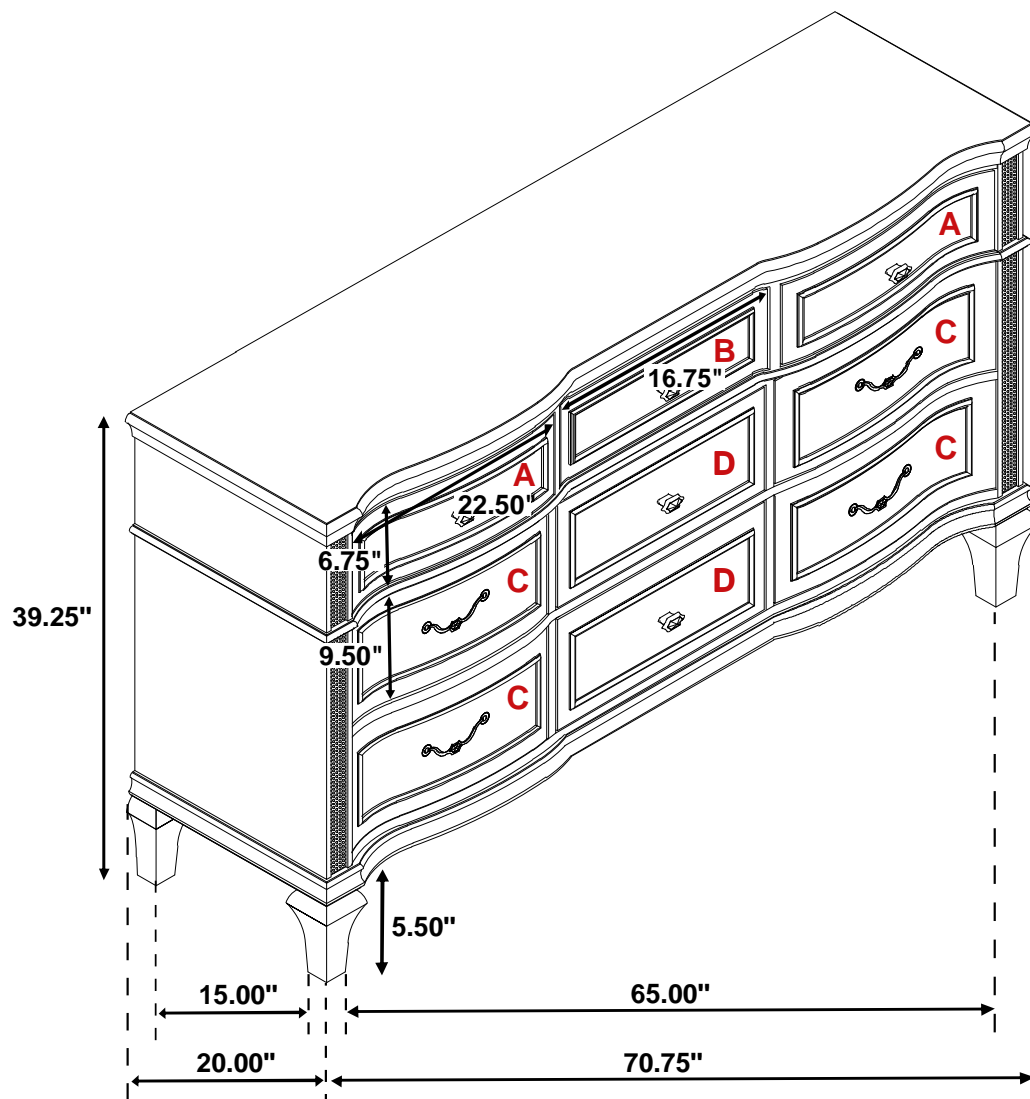


Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE

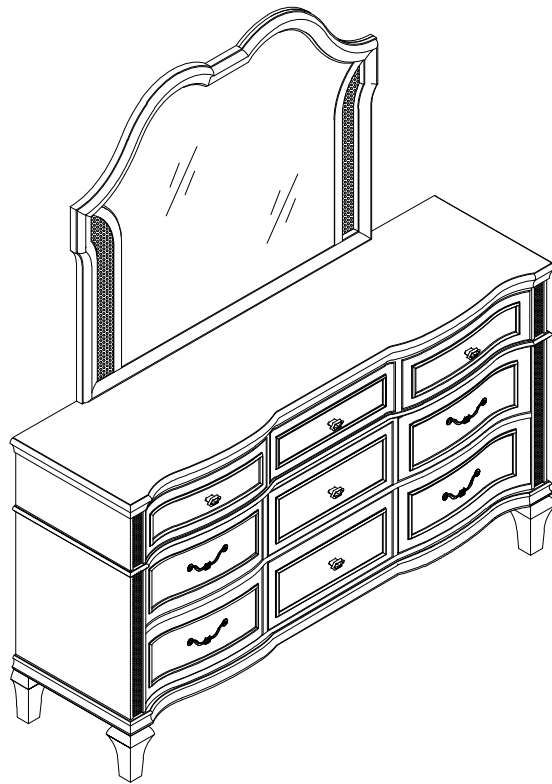

*Fine Furniture for every stage of life*

**223394**  
**Mirror**

ITEM:223394



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A


DRESSER  
FROM BOX  
ITEM #223393

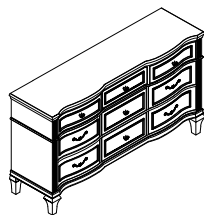

1PC

B


MIRROR

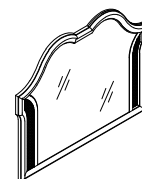

1PC

C

MIRROR SUPPORT  
(PACKED WITH  
DRESSER)




2PCS

## HARDWARE IDENTIFICATION

1

BOLT  
( $\Phi 1/4"$  x 38mm - RBW)



6PCS

2

LOCK WASHER  
( $\Phi 1/4"$  - RBW)



6PCS

3

FLAT WASHER  
( $\Phi 1/4"$  - RBW)



6PCS

4

ALLEN WRENCH  
(4MM - RBW)




1PC


ITEM: **223394**

## ASSEMBLY INSTRUCTIONS


### STEP 1

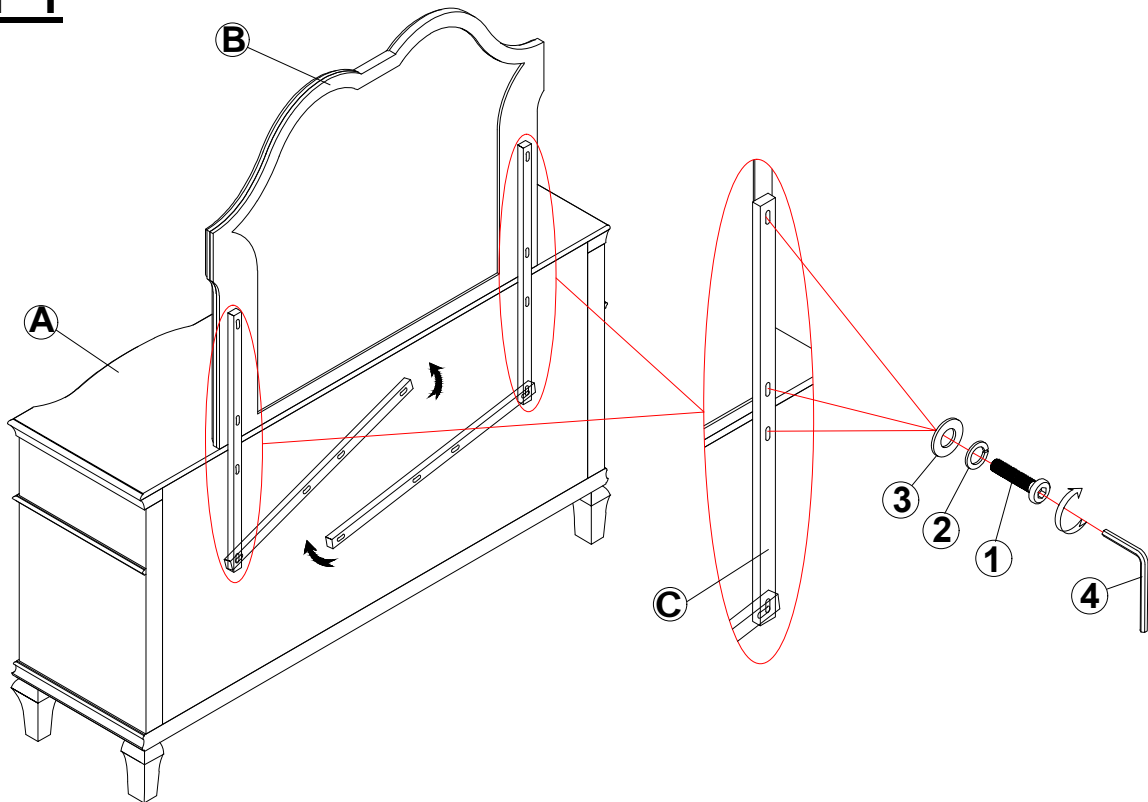

### STEP 2 COMPLETE

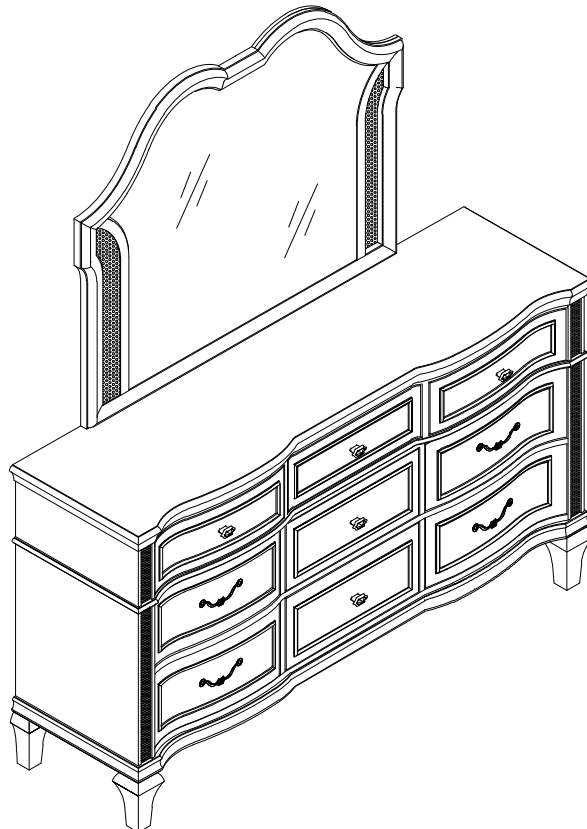


ITEM: **223394**

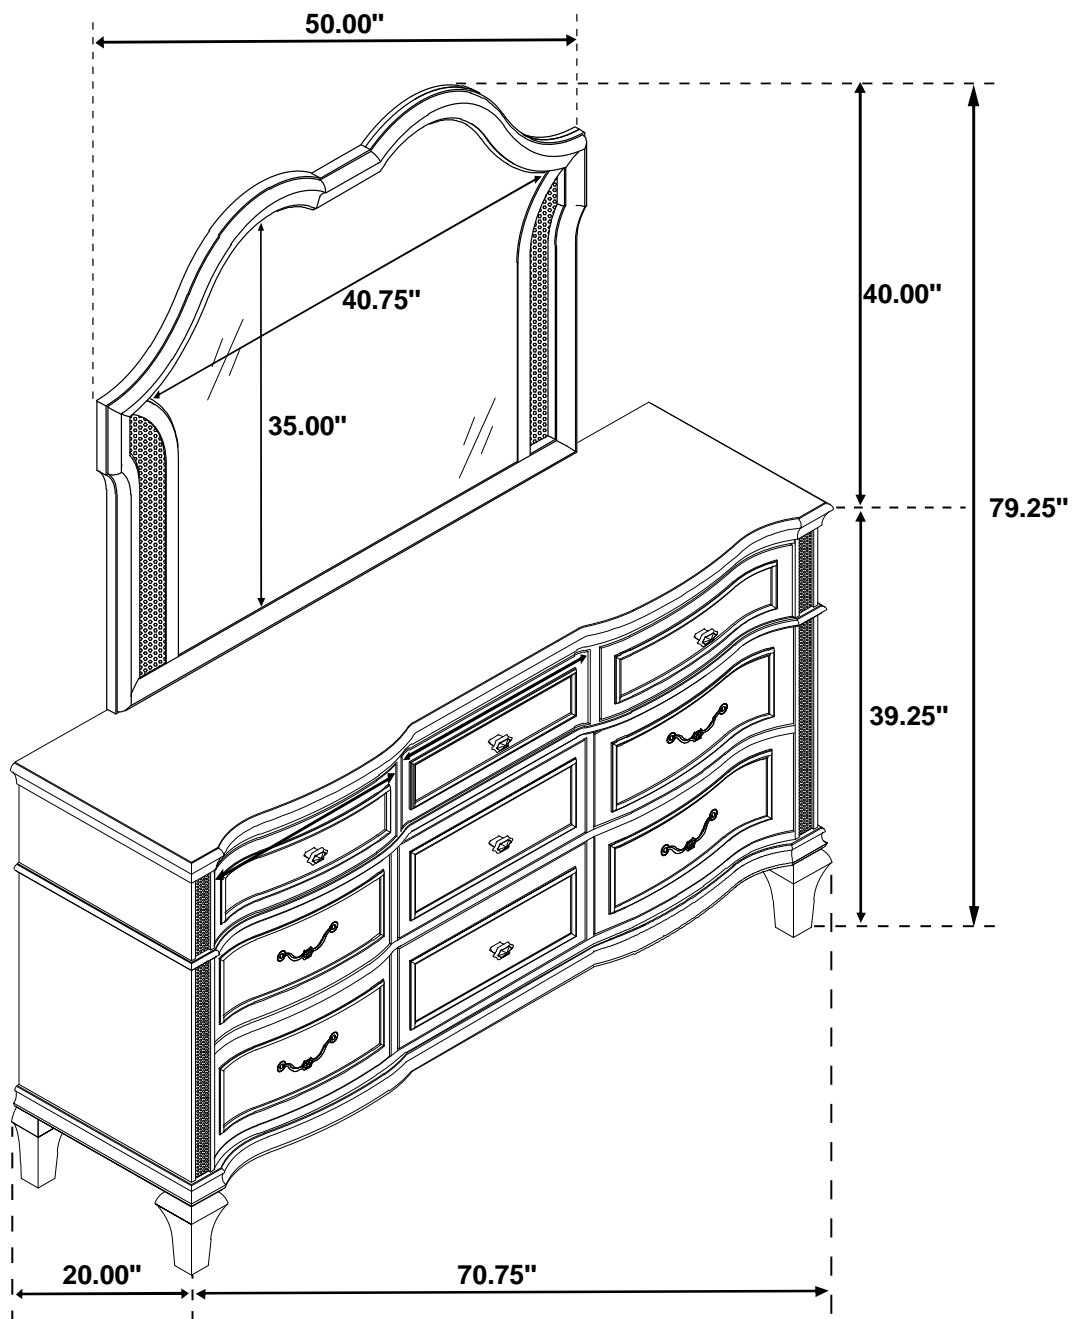

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

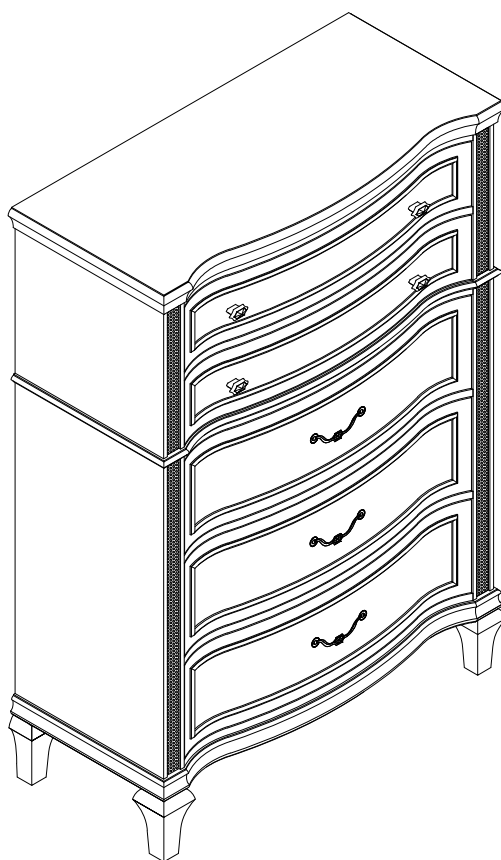

*Fine Furniture for every stage of life*

**223395**  
**Chest**

REVISION 0 : 05/30/2022  
REVISION 1 : 10/10/2022

**PAGE 1 OF 4**

COASTERFURNITURE.COM

ITEM: **223395**

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A CHEST

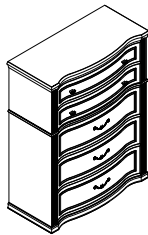

1PC

B FRONT LEG



2PCS

C RIGHT BACK LEG



1PC


D LEFT BACK LEG



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(Φ5/16" x 60mm - RBW)



8PCS

2 LOCK WASHER  
(Φ5/16" - RBW)



8PCS

3 FLAT WASHER  
(Φ5/16" - RBW)



8PCS

4 ALLEN WRENCH  
(4MM - RBW)




1PC


ITEM: **223395**

## ASSEMBLY INSTRUCTIONS

### STEP 1

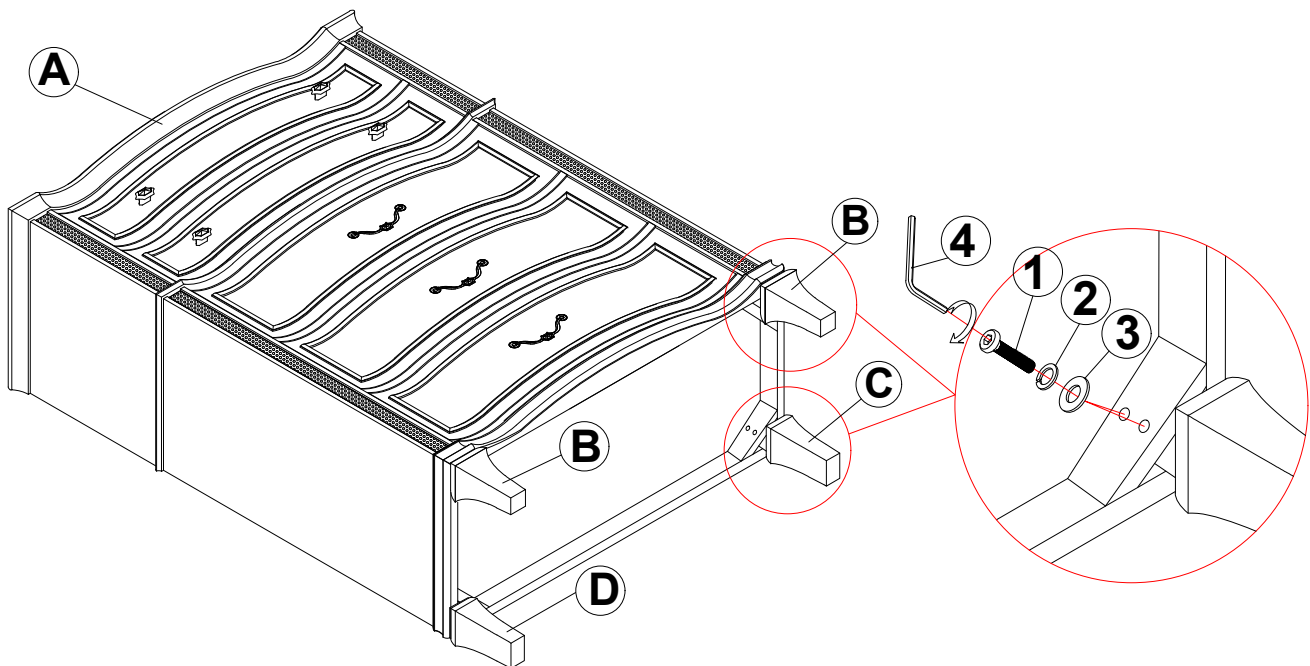

### STEP 2 COMPLETE

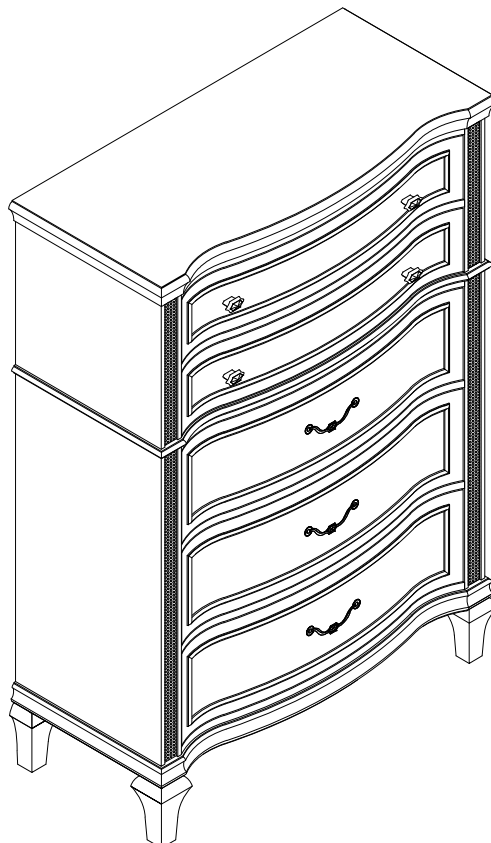




## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

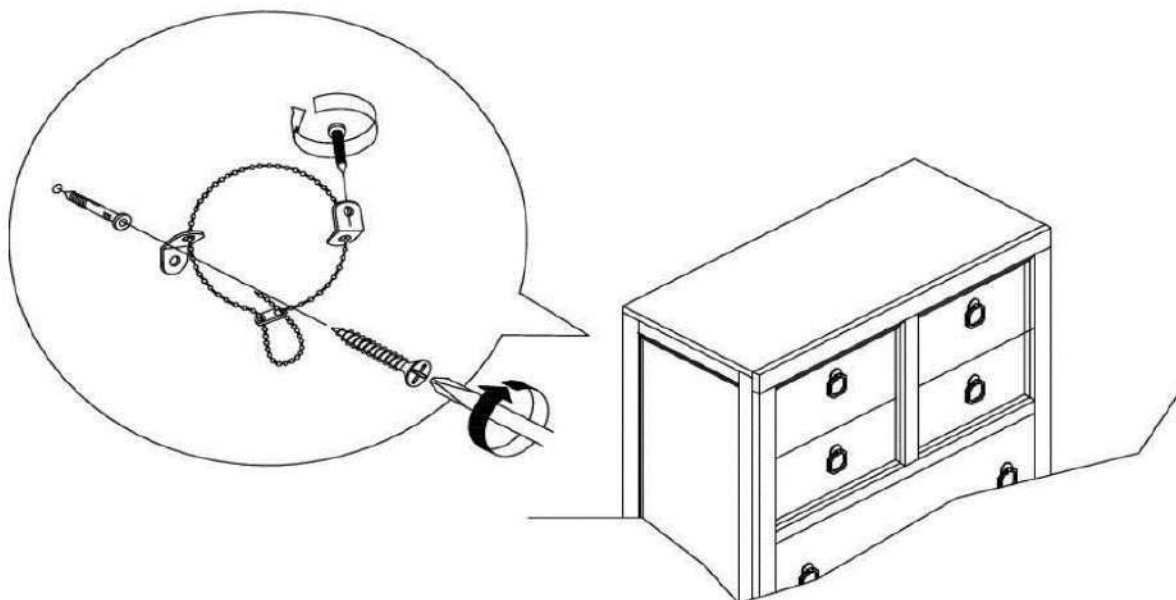

ITEM: **223395**




Inner Size of Drawer A: 33.00"W X 14.50"D X 5.00"H X 0.50"T

Inner Size of Drawer B: 33.00"W X 14.50"D X 5.75"H X 0.50"T

Inner Size of Drawer C: 33.00"W X 14.50"D X 7.00"H X 0.50"T

Inner Size of Hidden Drawer : 33.00"W X 13.00"D X 1.25"H X 0.50"T

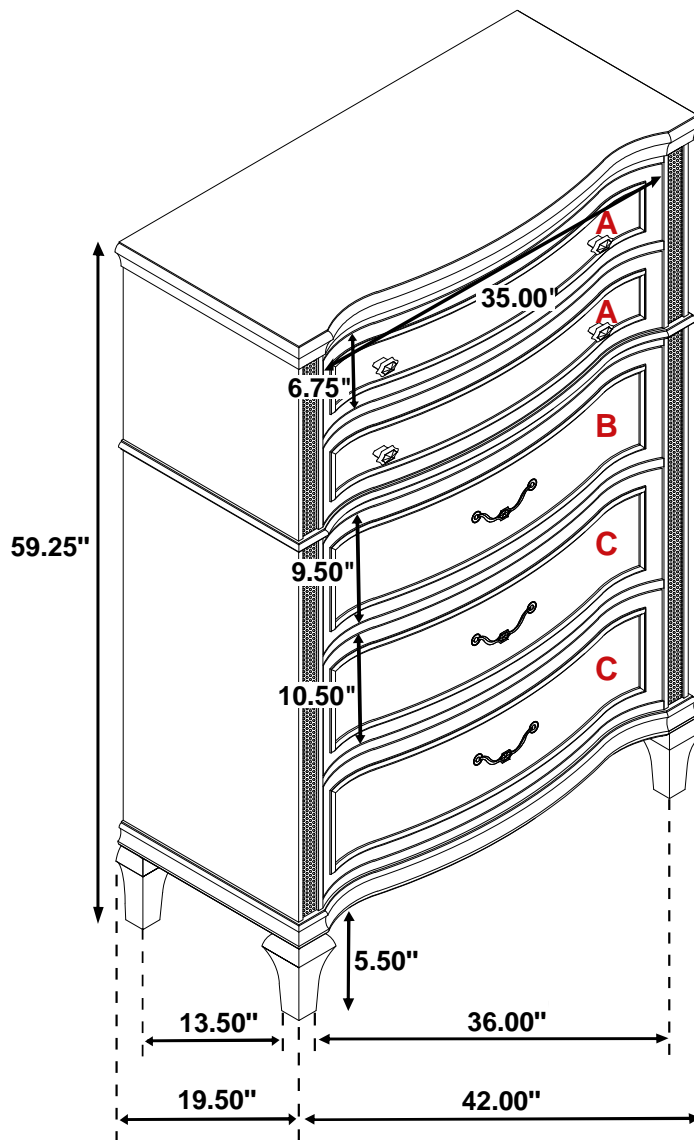

Note: Dimension tolerance  $\pm 5\%$