

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 223551Q(B1&B2) *Queen Bed*

# ITEM: 223551Q(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

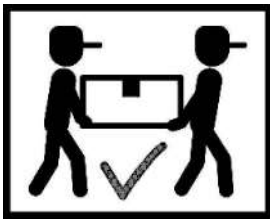







ASSEMBLY TIME


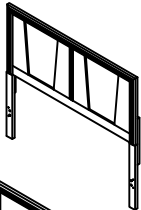
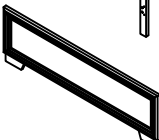
30 MINUTES

## PARTS IDENTIFICATION

### B1(BOX 1)

A	HEADBOARD PANEL		1PC
B	LEFT HEADBOARD LEG		1PC
C	RIGHT HEADBOARD LEG		1PC
D	FOOTBOARD		1PC
E	BED SLAT		4PCS
F	BED SLAT SUPPORT WITH LEVELER		4PCS

### B2(BOX 2)

G	BED RAIL		2PCS
HB	223551Q (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
D	223551Q (B1) FROM BOX 1 FOOTBOARD		1PC

# ITEM: 223551Q(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223551Q (B1)

1	<b>ALLEN WRENCH</b> (M4 - BLK)		1PC
2	<b>SHORT BOLT</b> (M6 x 25mm - BLK)		8PCS
3	<b>LONG BOLT</b> (M6 x 50mm - BLK)		8PCS
4	<b>WOOD DOWEL</b> (M8 x 30mm)		8PCS
5	<b>FLAT HEAD SCREW</b> (#8 x 1 1/8" - BLK)		8PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **223551Q(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

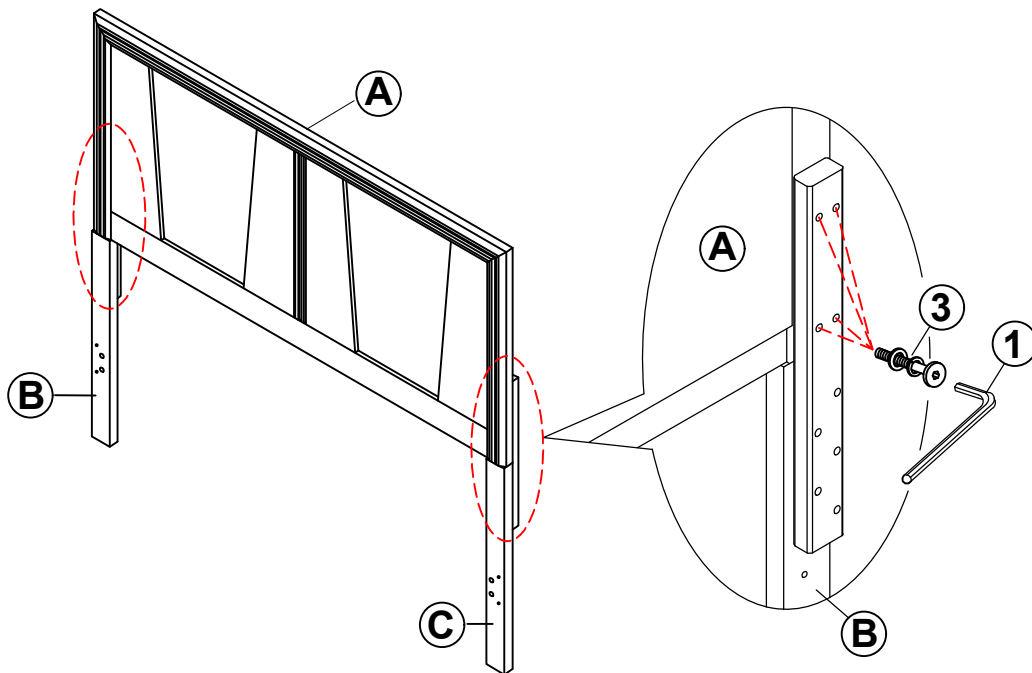

### STEP 2

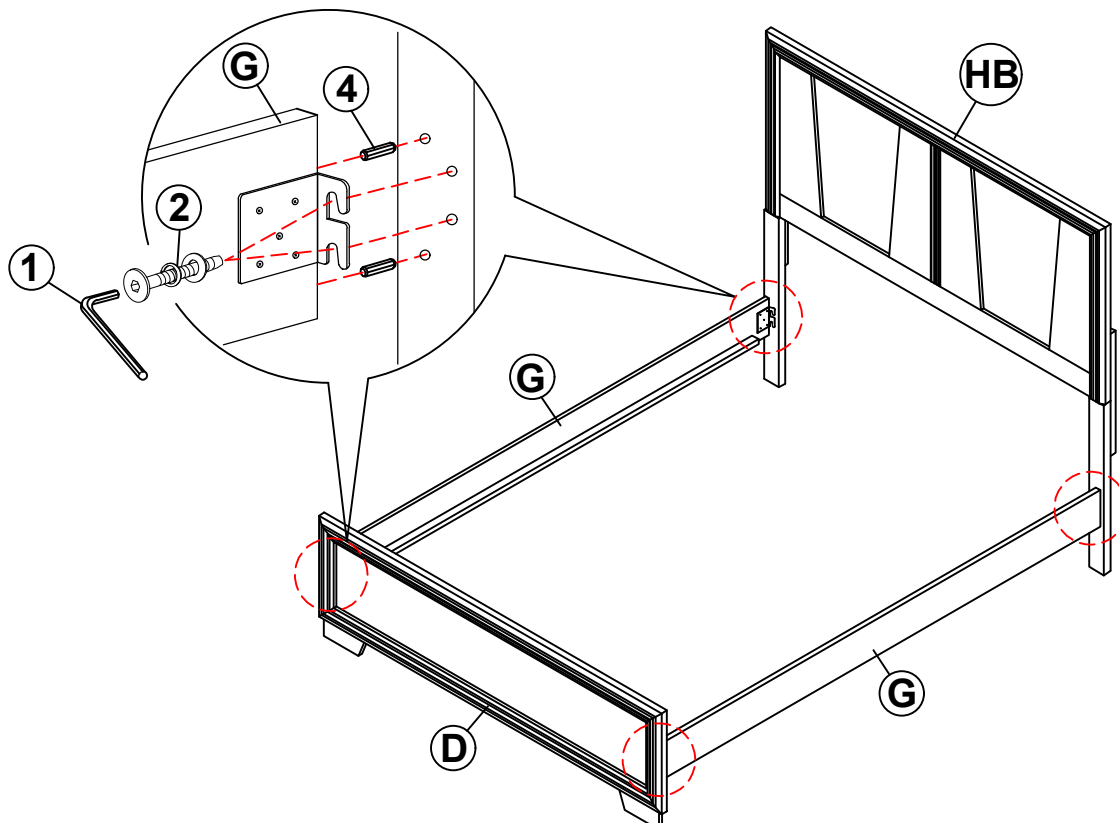


ITEM: **223551Q(B1&B2)**





## ASSEMBLY INSTRUCTIONS

### STEP 3

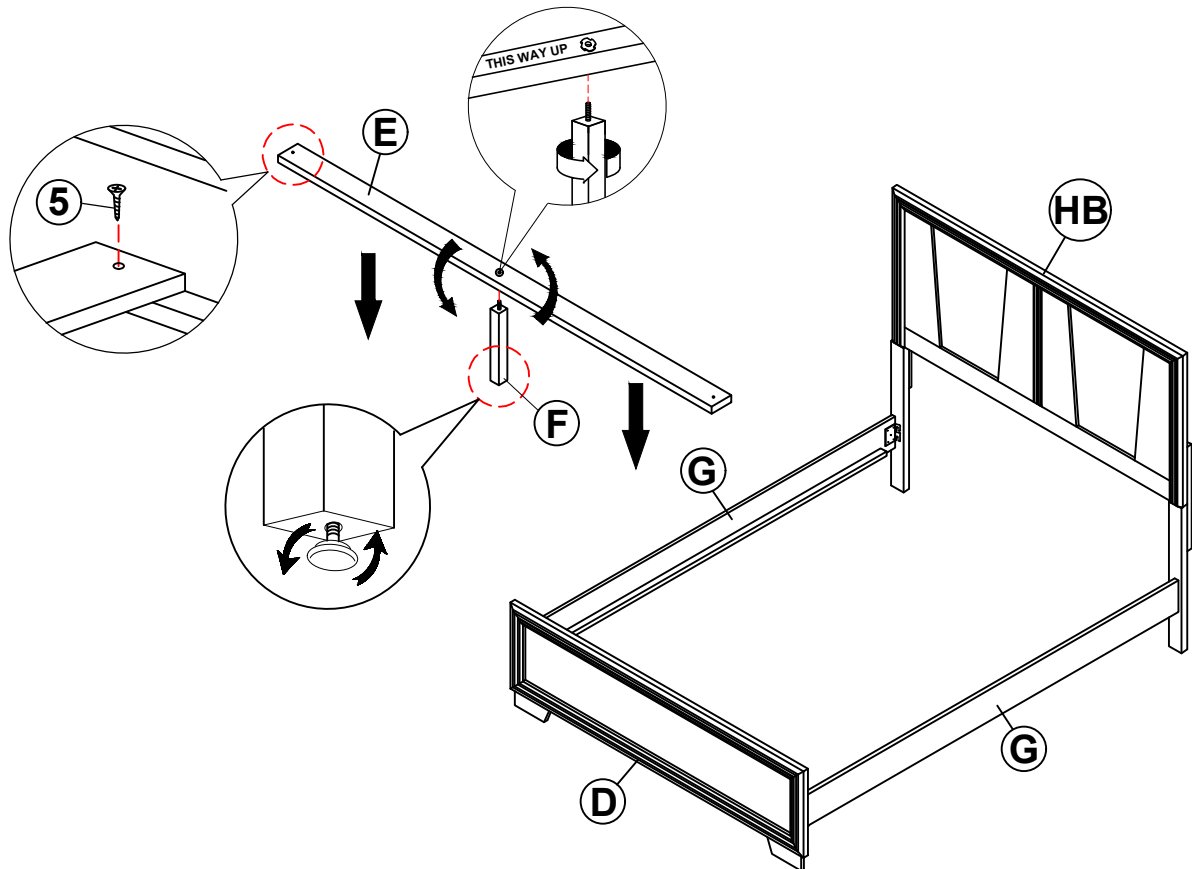

### STEP 4 COMPLETE

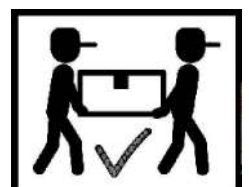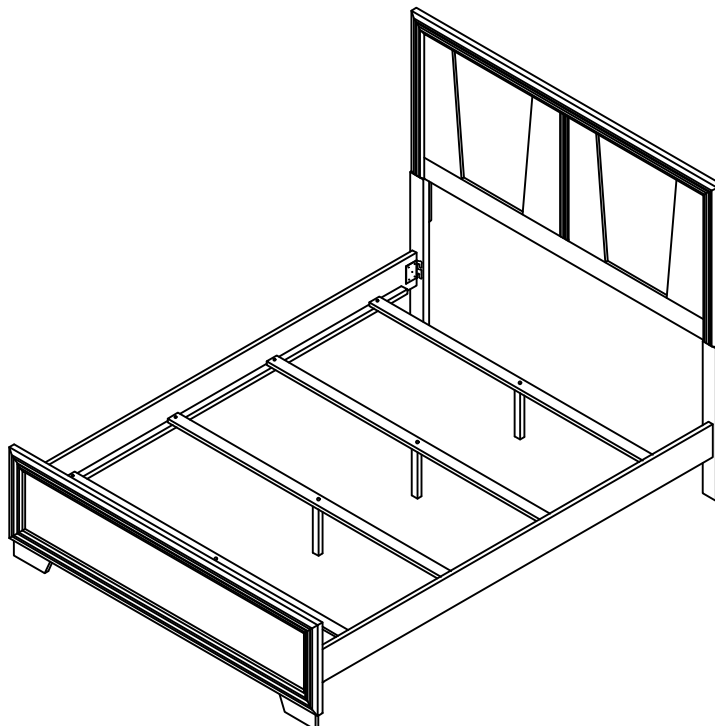



Technical drawing of a bed frame showing dimensions in inches. The frame is shown in a perspective view, highlighting the headboard, footboard, and side rails. The dimensions are as follows:

- Overall width: 63.25"
- Overall length: 84.75"
- Headboard height: 56.25"
- Headboard width: 63.25"
- Headboard panel width: 58.00"
- Headboard panel height: 17.50"
- Headboard panel depth: 61.00"
- Headboard panel thickness: 3.00"
- Headboard panel depth offset: 8.00"
- Headboard panel depth offset: 49.25"
- Headboard panel depth offset: 63.25"
- Headboard panel depth offset: 81.00"
- Headboard panel depth offset: 84.75"
- Headboard panel depth offset: 9.50"
- Headboard panel depth offset: 19.00"

COASTERFURNITURE.COM

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223552**  
***Nightstand***

ITEM: **223552**

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS



### FURNITURE TIPPING RESTRAINT


#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


#### STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

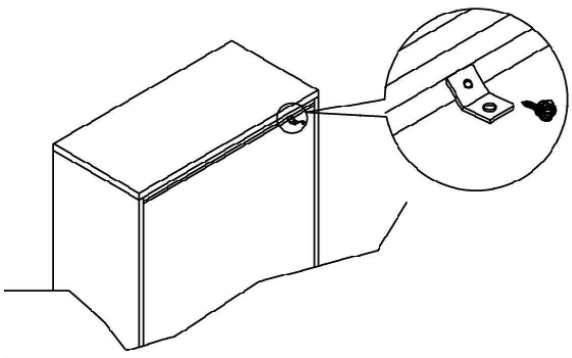



#### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of furniture. Attach the wall stud using the long screw provided, through the smaller hole.

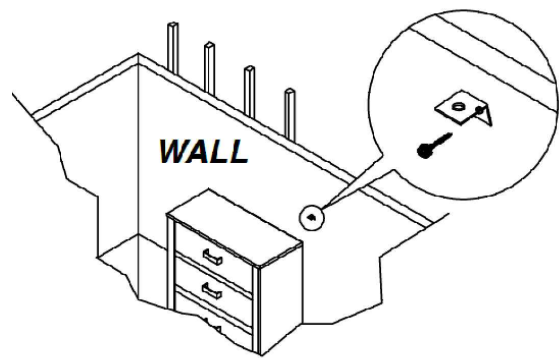

#### STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the large hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

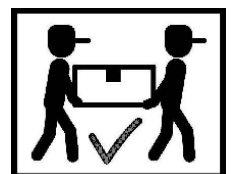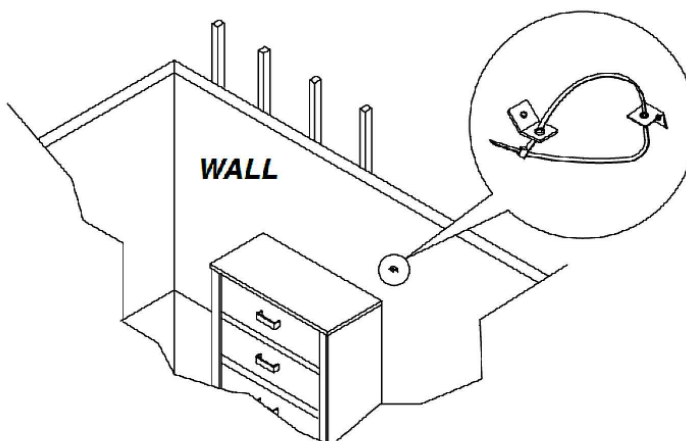

ITEM: **223552**



**Inner Size of Drawer : 19.50"W x 13.00"D x 5.50"H x 0.25"T**

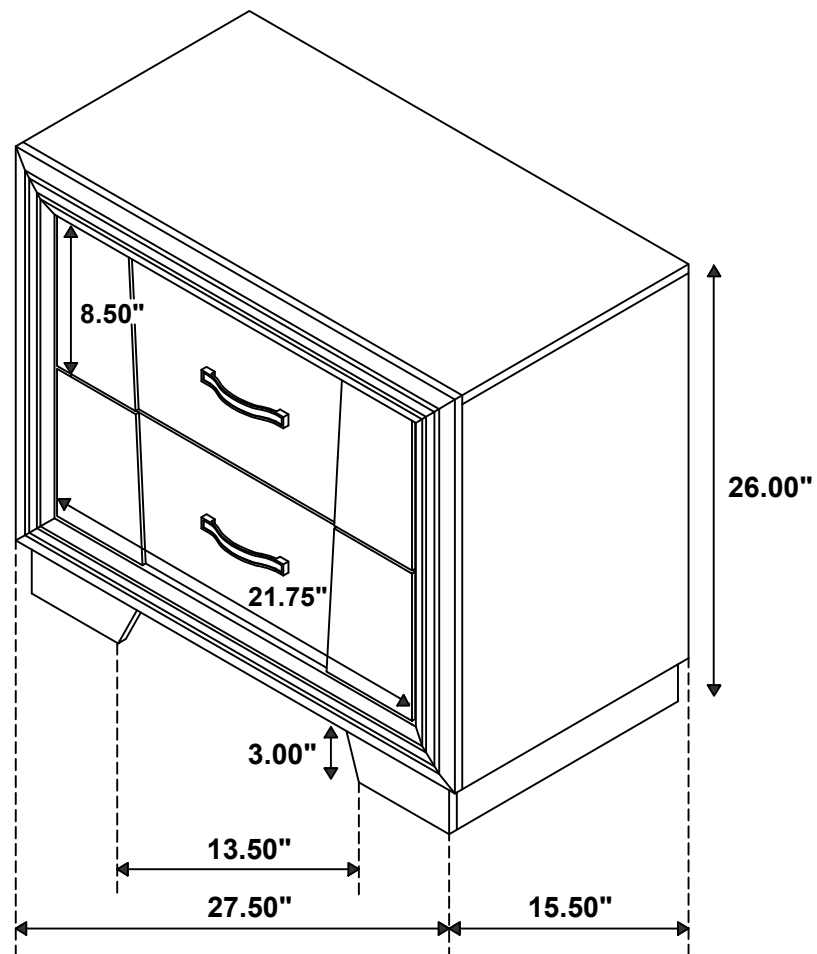

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223553**  
***Dresser***

ITEM: **223553**



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

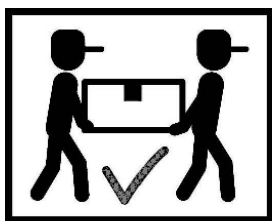


ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A DRESSER


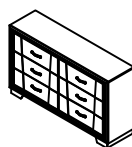


1PC

## ASSEMBLY INSTRUCTIONS

### STEP 1

### COMPLETE

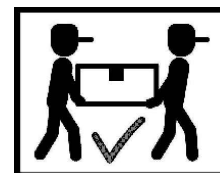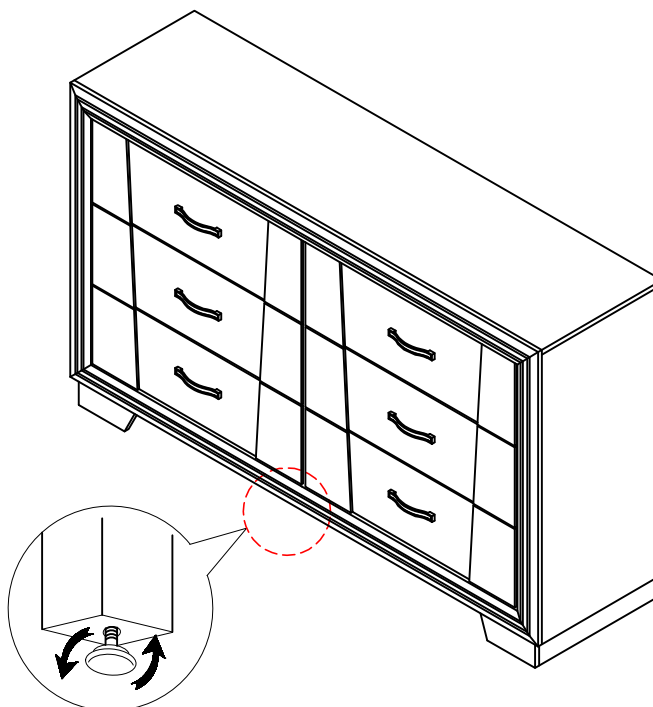

ITEM: **223553**

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS



### FURNITURE TIPPING RESTRAINT


#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


#### STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

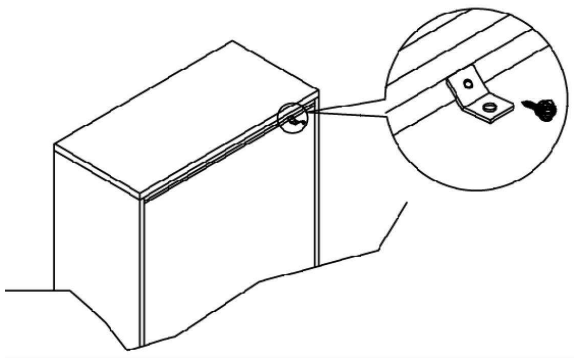



#### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of furniture. Attach the wall stud using the long screw provided, through the smaller hole.

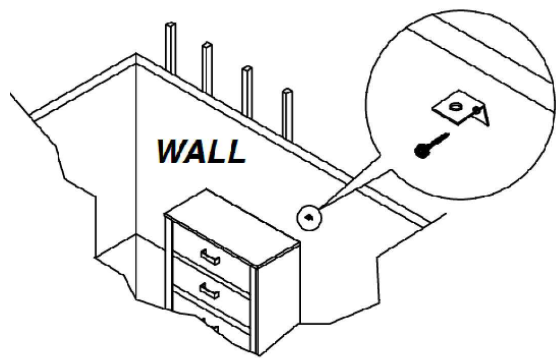

#### STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the large hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

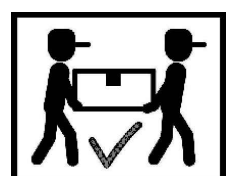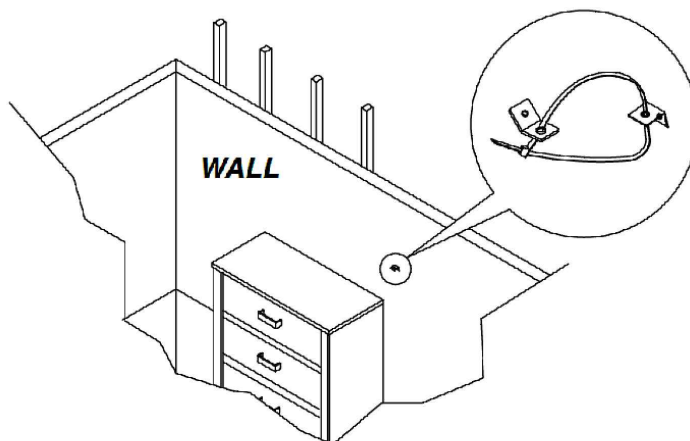

ITEM: **223553**



**Inner Size of Drawer : 25.50"W x 13.50"D x 5.50"H x 0.25"T**

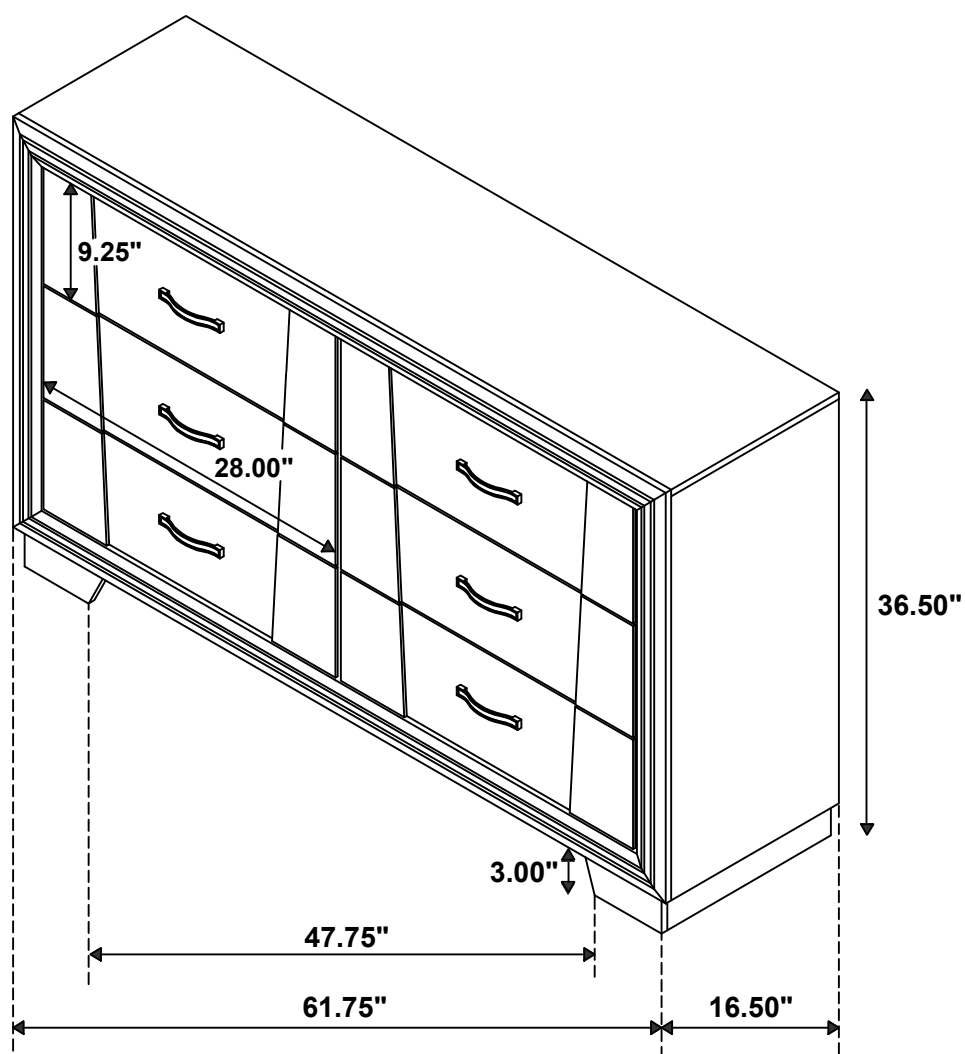

**Note : Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223554**  
***Mirror***

ITEM: **223554**



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

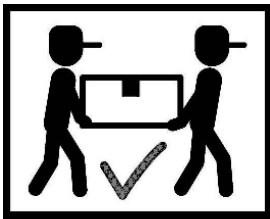

ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A MIRROR




1PC

B DRESSER  
\*FROM BOX ITEM #223553

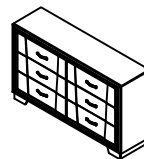

1PC

C MIRROR SUPPORT  
(PACKED WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

1 SHORT FLAT HEAD SCREW  
(M4 x 32mm - BLK)



4PCS

2 LONG FLAT HEAD SCREW  
(M4 x 45mm - BLK)



4PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **223554**





## ASSEMBLY INSTRUCTIONS

### STEP 1

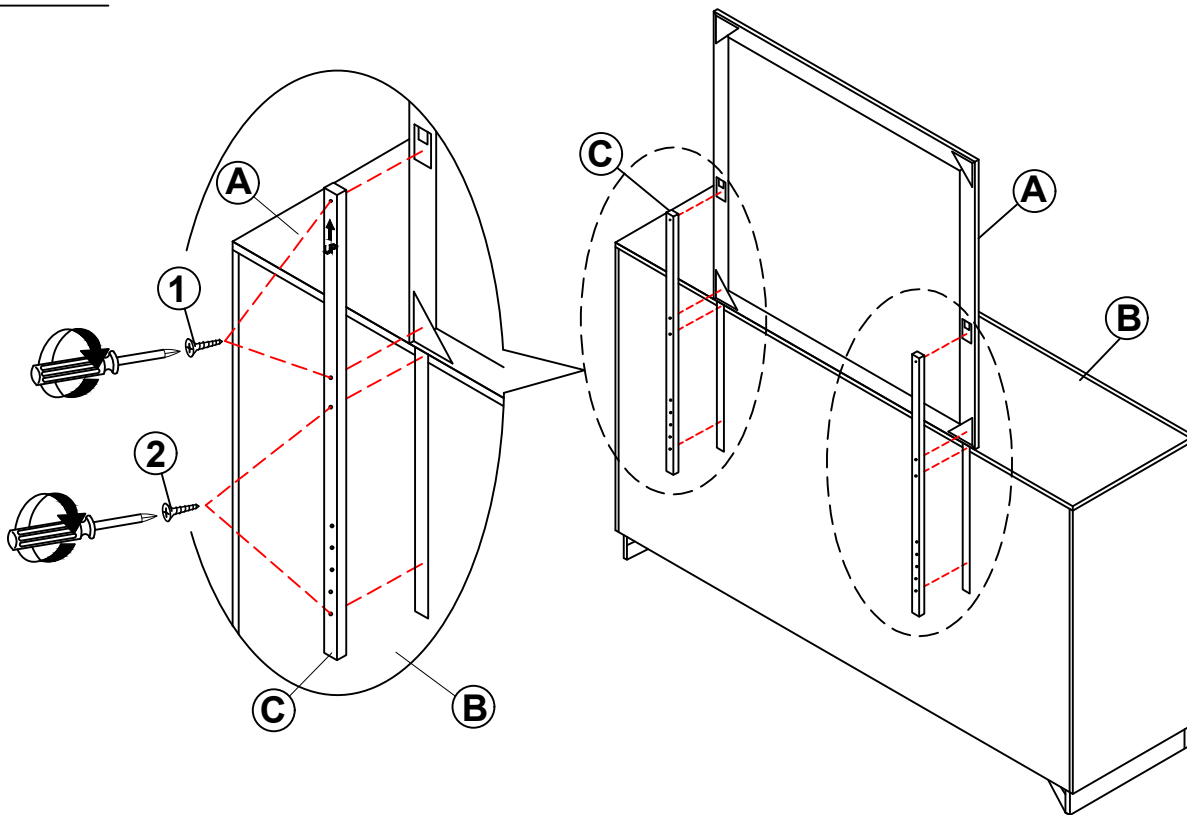


### STEP 2

### COMPLETE

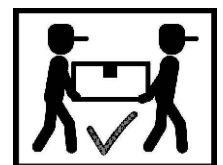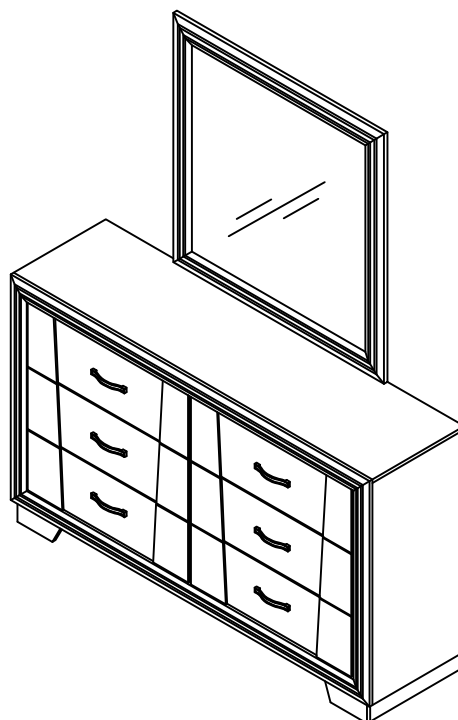

ITEM: **223554**

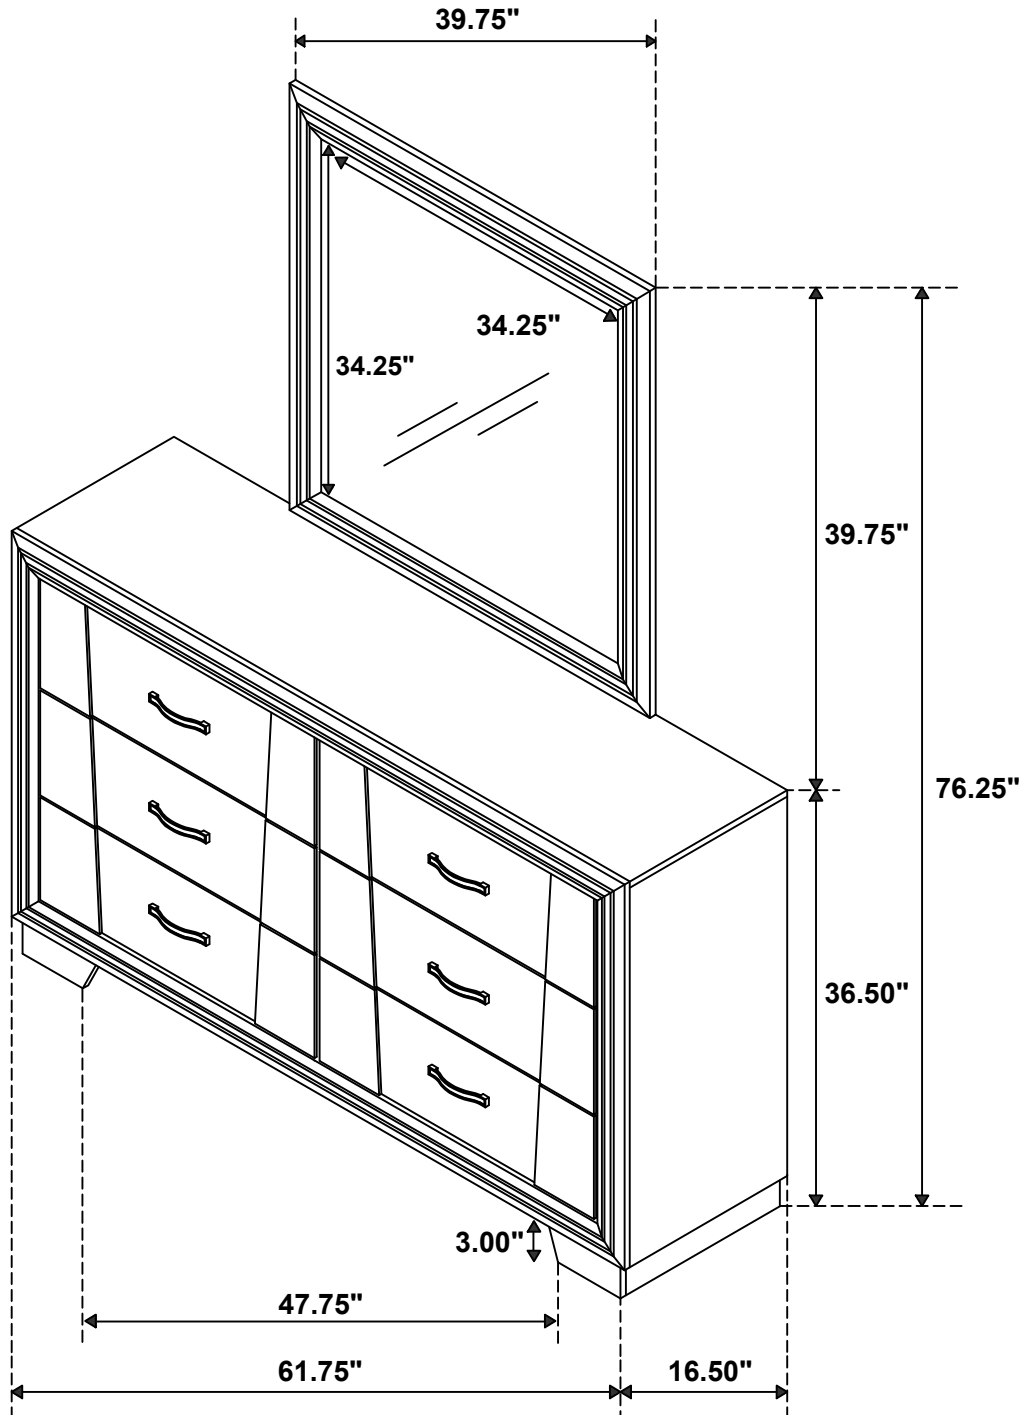

Note : Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**223555**  
**Chest**

ITEM: **223555**

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS



### FURNITURE TIPPING RESTRAINT


#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


#### STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

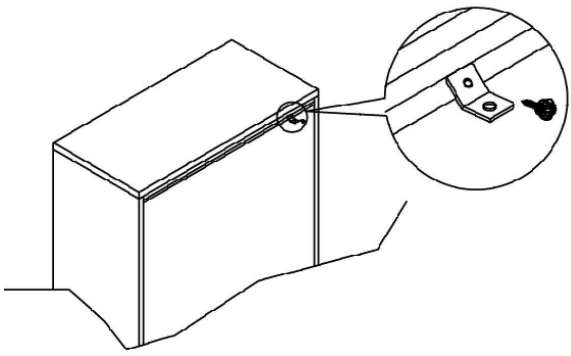



#### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of furniture. Attach the wall stud using the long screw provided, through the smaller hole.

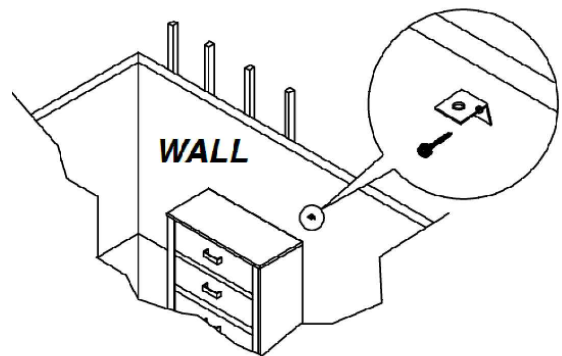

#### STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the large hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

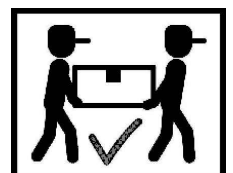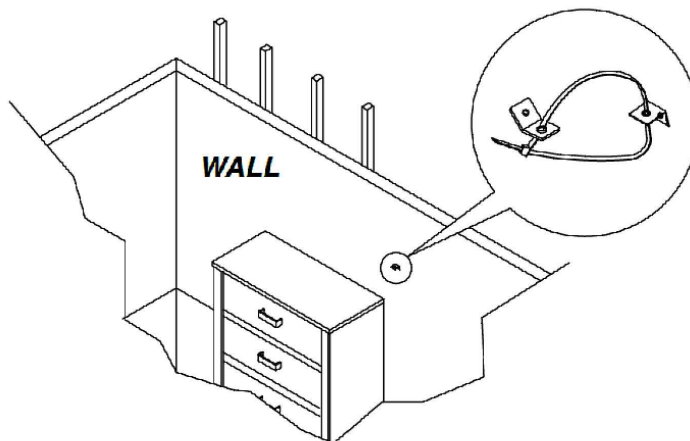

ITEM: **223555**



Inner Size of Drawer : 27.00"W x 13.50"D x 5.50"H x 0.25"T

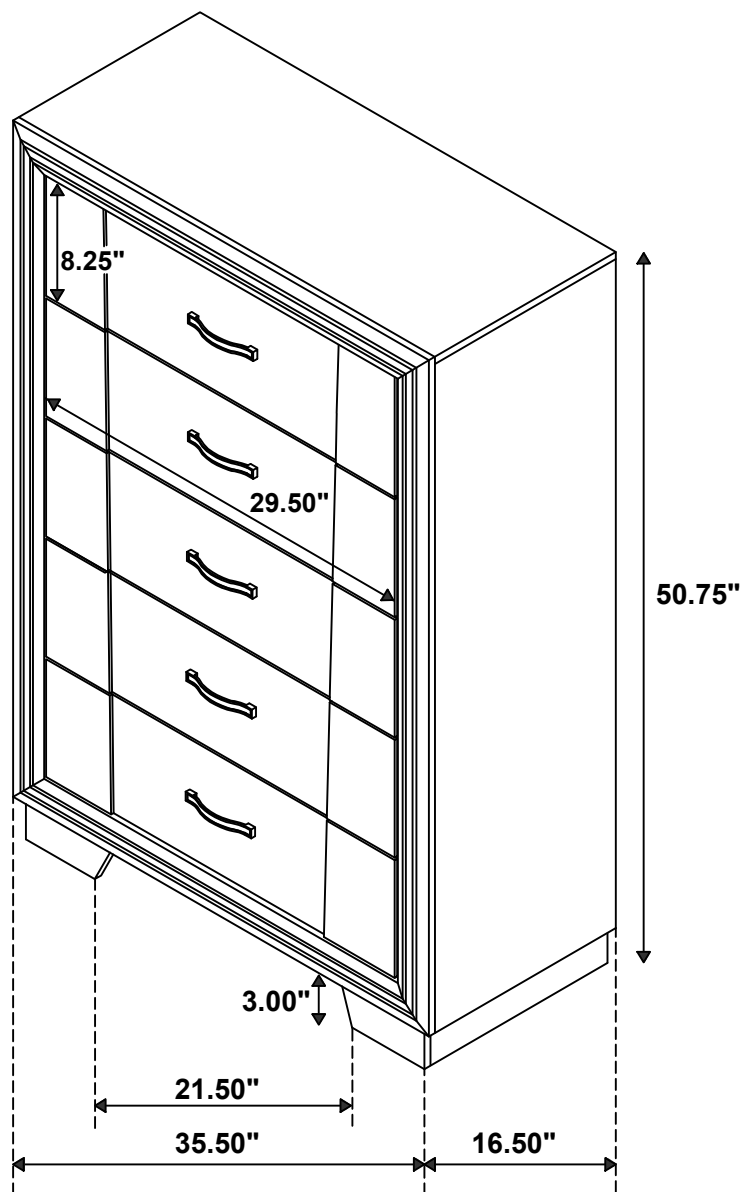

Note : Dimension tolerance  $\pm 5\%$