

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224301Q (B1-B3)
Queen Bed

ITEM: 224301Q (B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

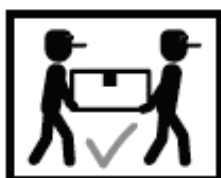

ASSEMBLY TIME

25 MINUTES

PART IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL

B LEFT HEADBOARD LEG

C RIGHT HEADBOARD LEG

D HEADBOARD BOTTOM RAIL

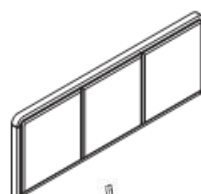

1PC



1PC




1PC



1PC

B2 (BOX 2)

E FOOTBOARD

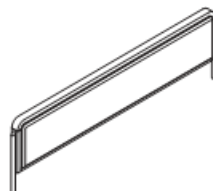

1PC

B3 (BOX 3)


F BED RAIL

G BED SLAT

H BED SLAT SUPPORT
WITH LEVELER

HB 224301Q (B1) *FROM BOX 1
HEADBOARD COMPLETE

E 224301Q (B2) *FROM BOX 2
FOOTBOARD*

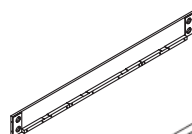


2PCS




4PCS



4PCS

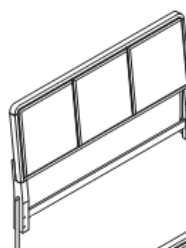

1PC

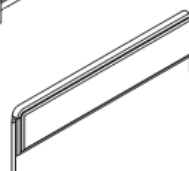

1PC

ITEM: 224301Q (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224301Q (B1)

1	BOLT (5/16" x 45mm - BLK)		8PCS
2	LOCK WASHER (1.6 x 14mm - BLK)		8PCS
3	FLAT WASHER (1 x 18mm - BLK)		8PCS
4	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
5	WOOD DOWEL (10 x 30mm - BRW)		4PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224301Q (B3)

6	FLAT HEAD SCREW (8 x 38mm - BLK)		8PCS
7	THREADED BOLT (5/16" x 100mm - WHT)		8PCS
8	HEX NUT (5/16" x 100mm - WHT)		8PCS
9	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
10	WRENCH (13mm - WHT)		1PC


NOTE :

Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 224301Q (B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

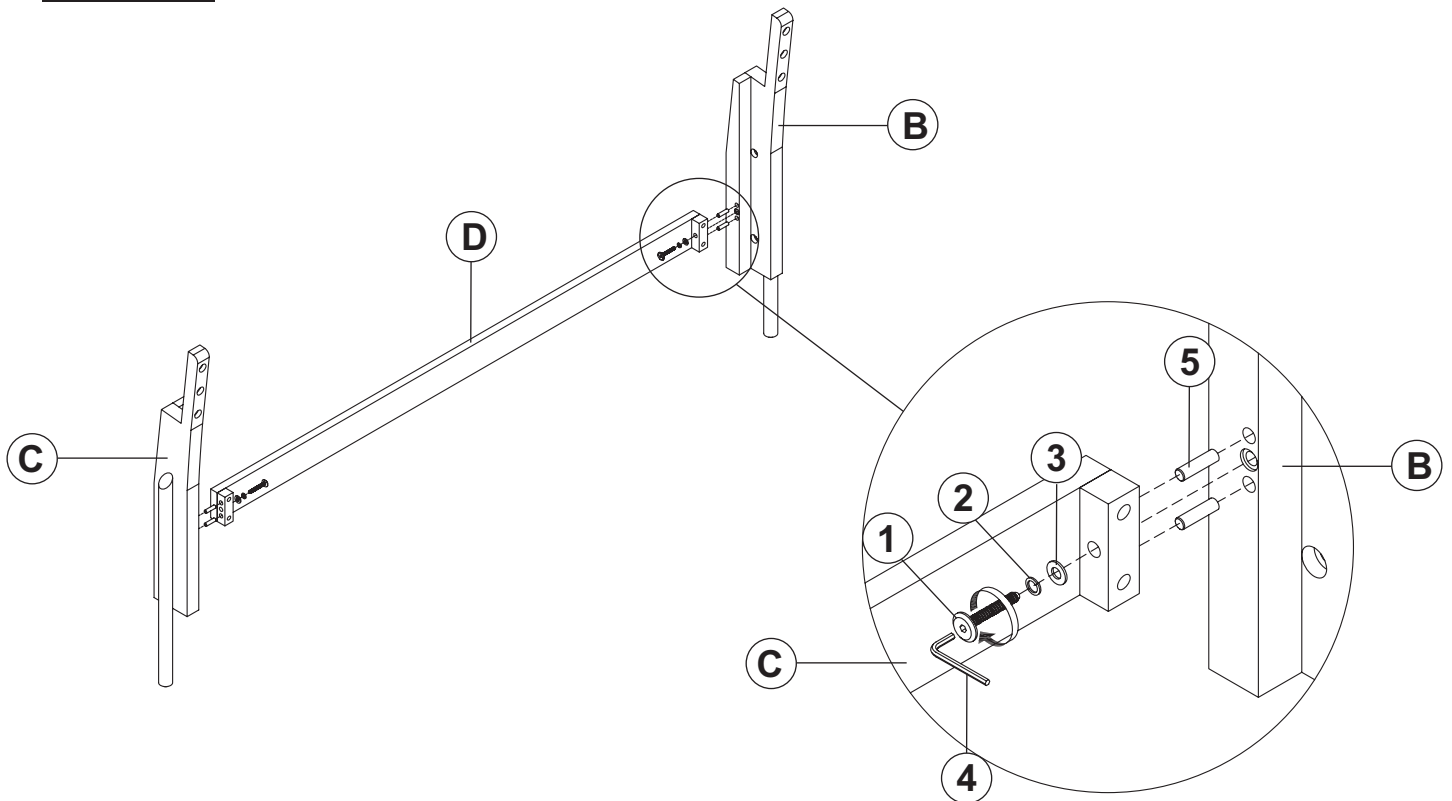

STEP 2

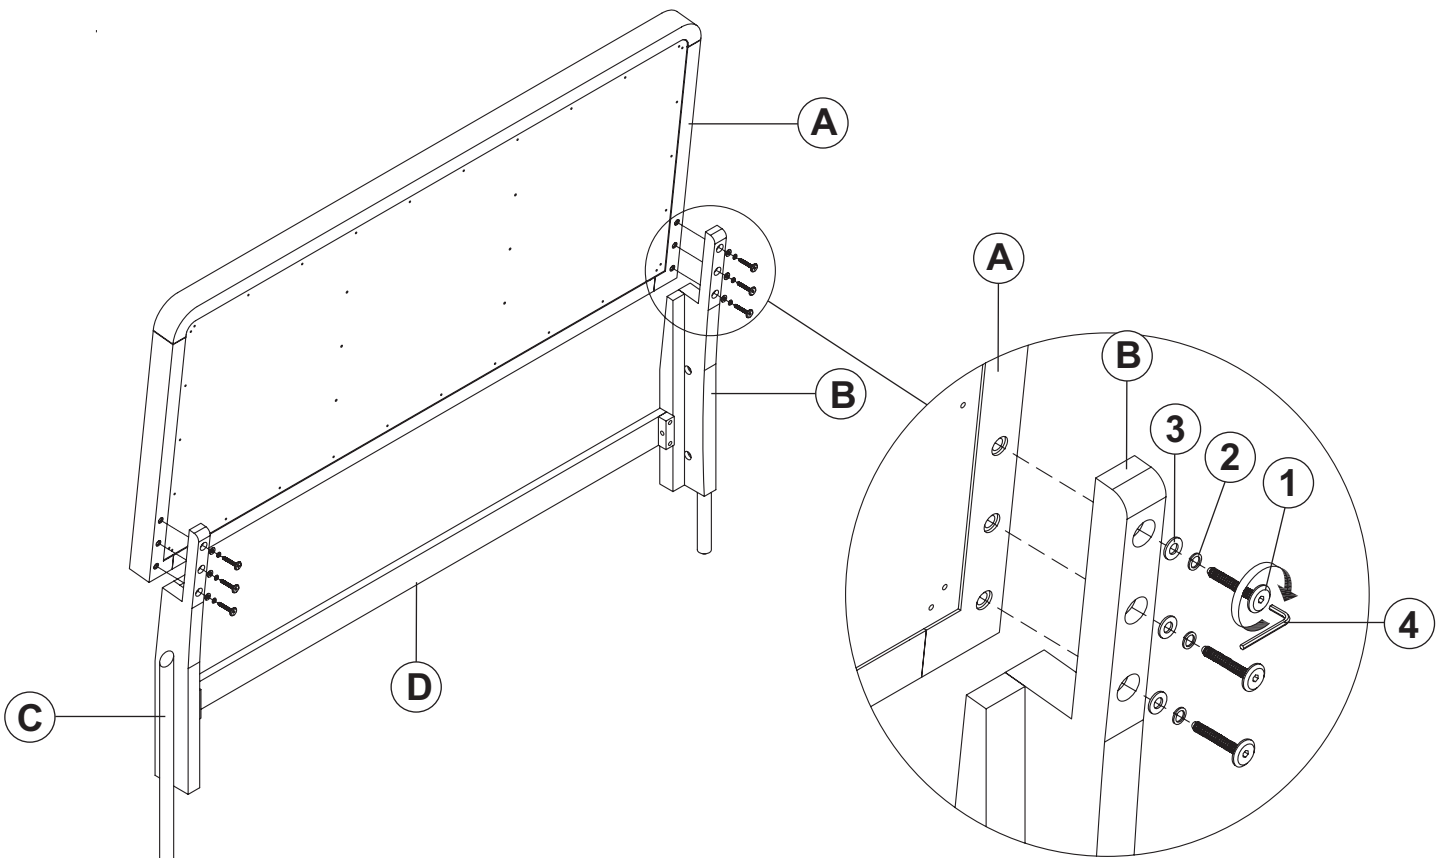


ITEM: **224301Q (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 3

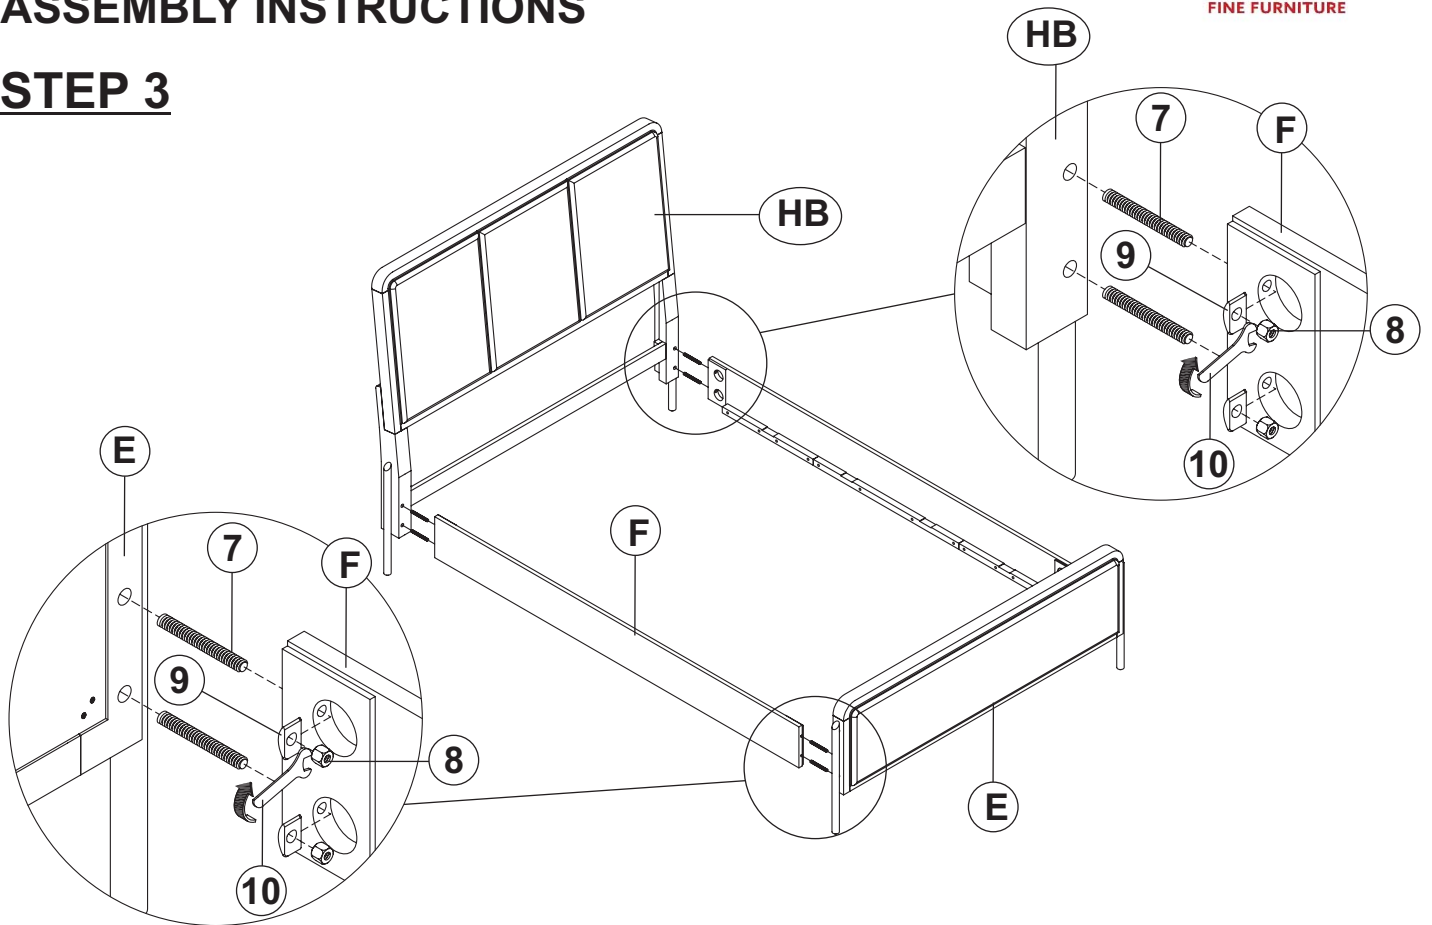

STEP 4

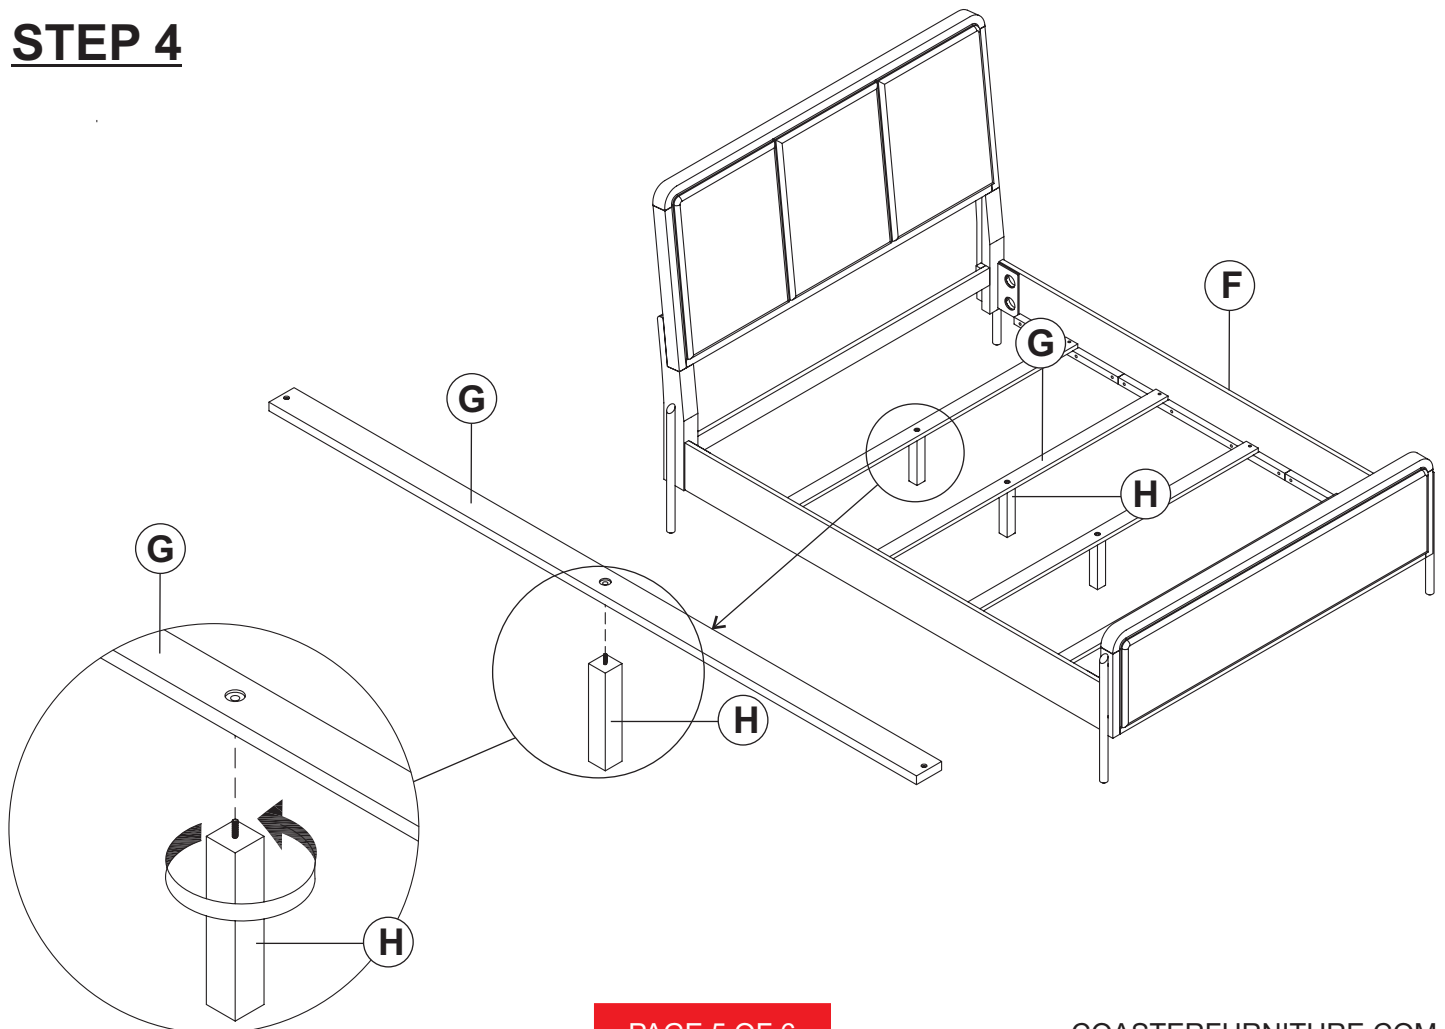


ITEM: **224301Q (B1-B3)**



ASSEMBLY INSTRUCTIONS



STEP 5

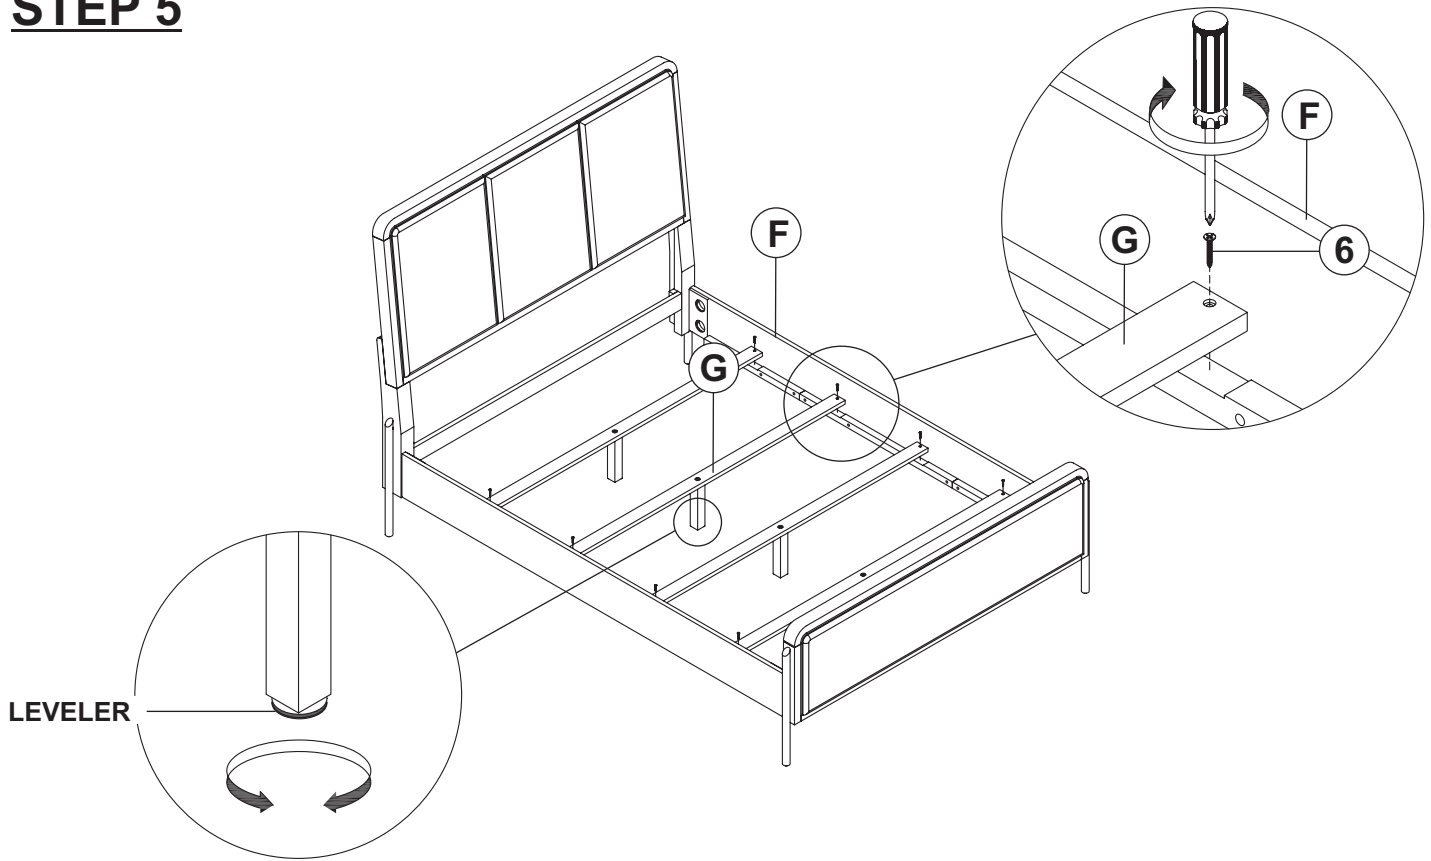


STEP 6 COMPLETE

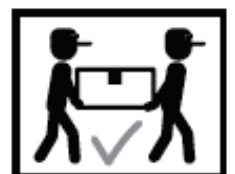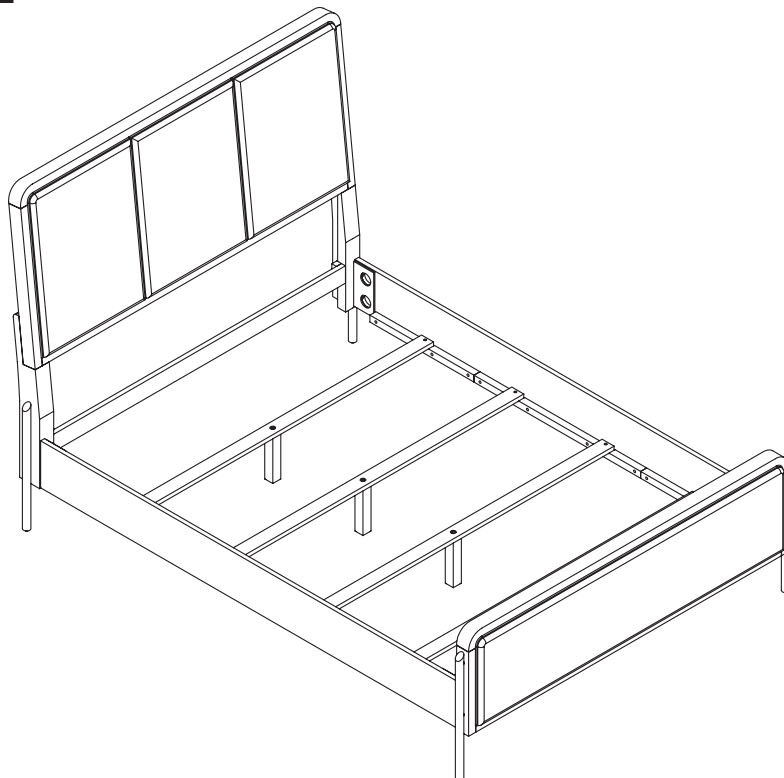

ITEM: **224301Q (B1-B3)**



Inner Size : 61.00"W x 82.00"D

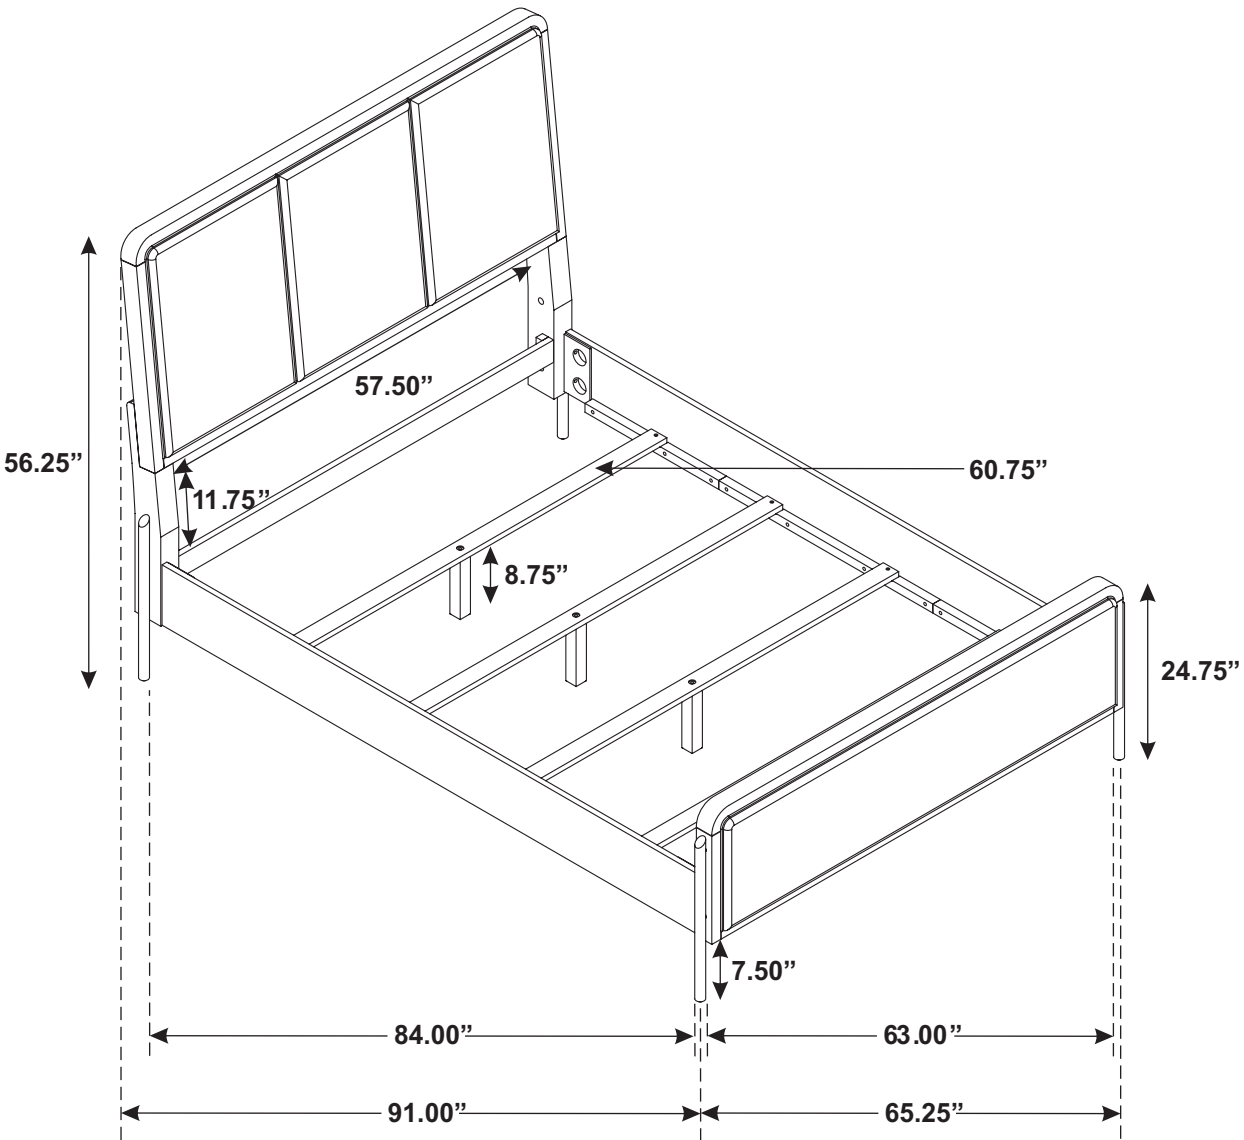

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224302
Nightstand

ITEM: **224302**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

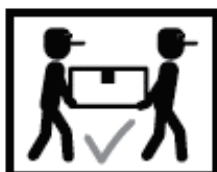


ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

A NIGHTSTAND

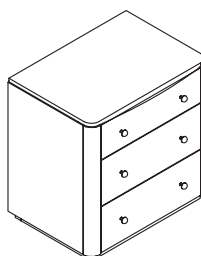


1PC

B LEFT METAL LEG



1PC


C RIGHT METAL LEG



1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 22mm - BLK)



6PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



6PCS

3 FLAT WASHER
(1 x 18mm - BLK)



6PCS

4 ALLEN WRENCH
(M4 x 65mm - BLK)




1PC

ITEM: **224302**



ASSEMBLY INSTRUCTIONS



STEP 1

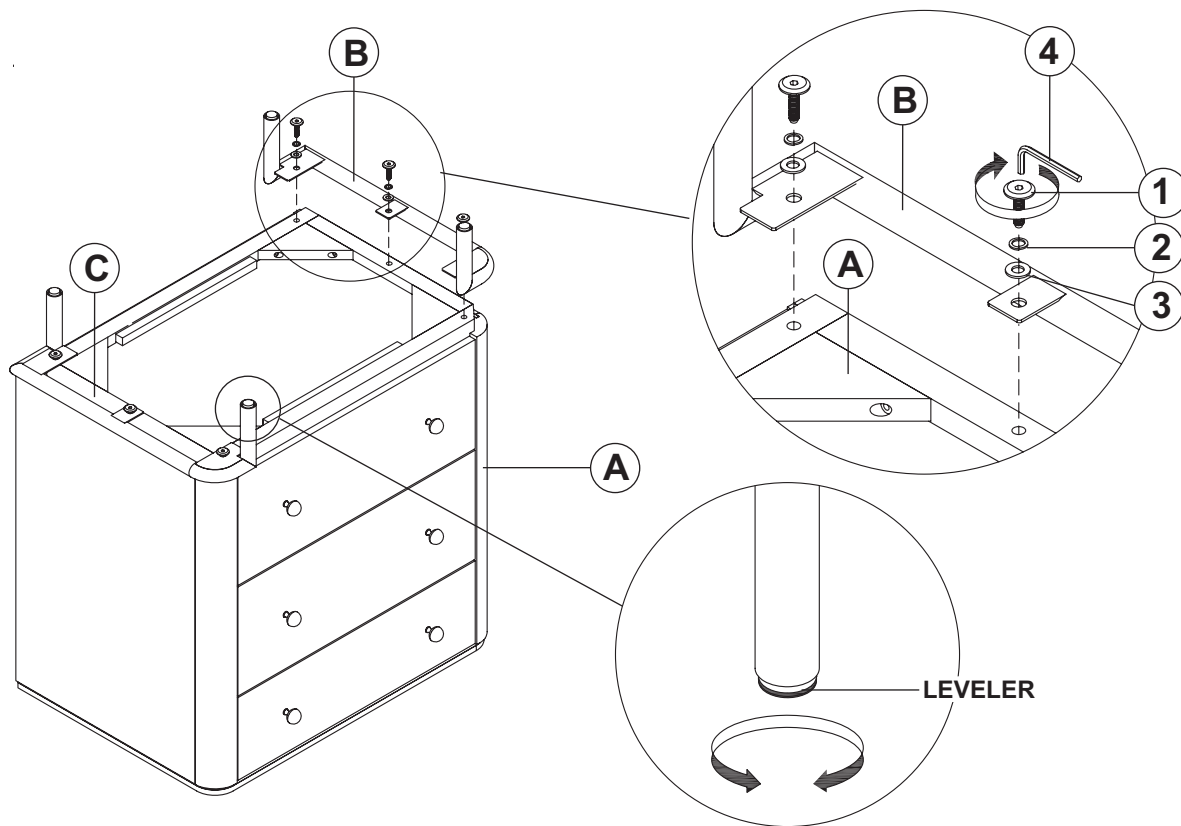

STEP 2 COMPLETE

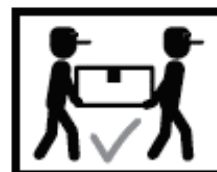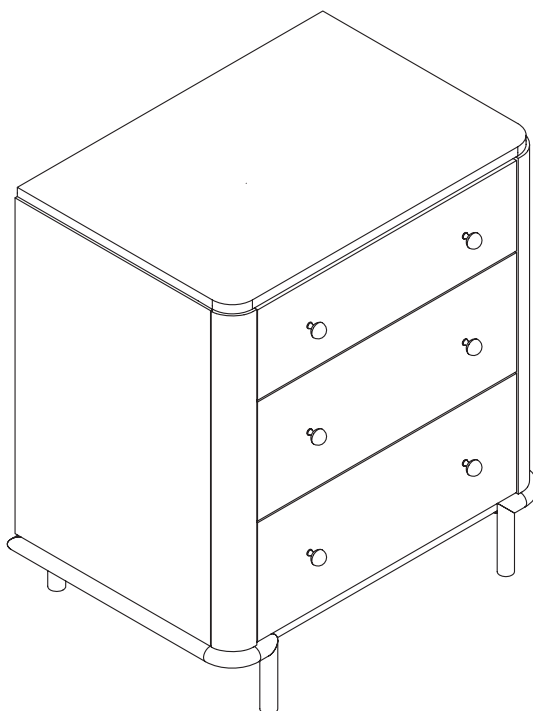

ITEM: **224302**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

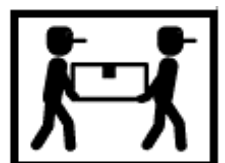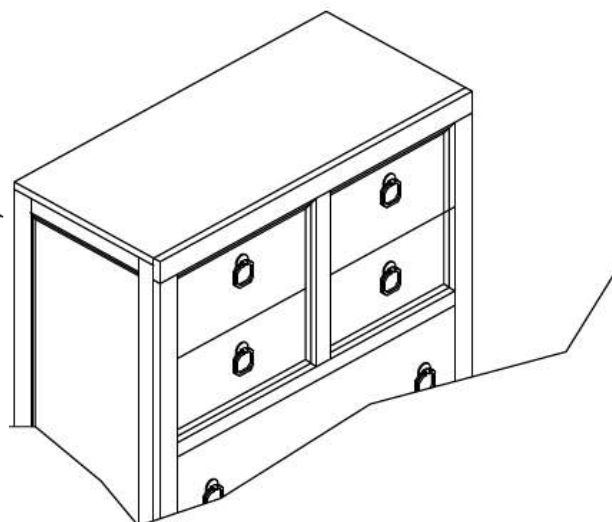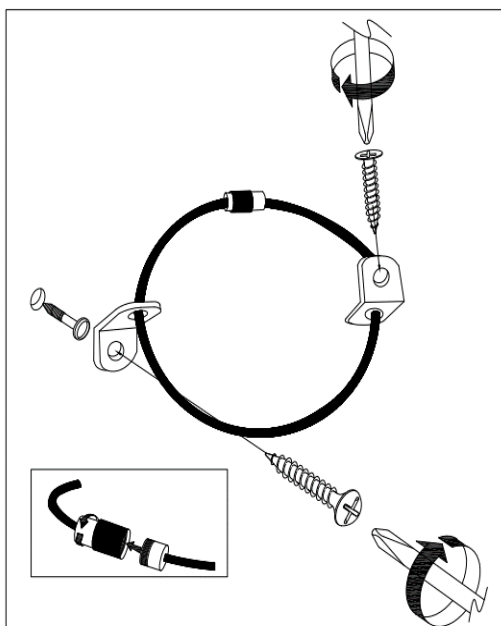

ITEM: **224302**



Inner Size of Drawer A : 18.75"W x 13.75"D x 3.50"H x 0.5"T
Inner Size of Drawer B : 18.75"W x 13.75"D x 6.00"H x 0.5"T

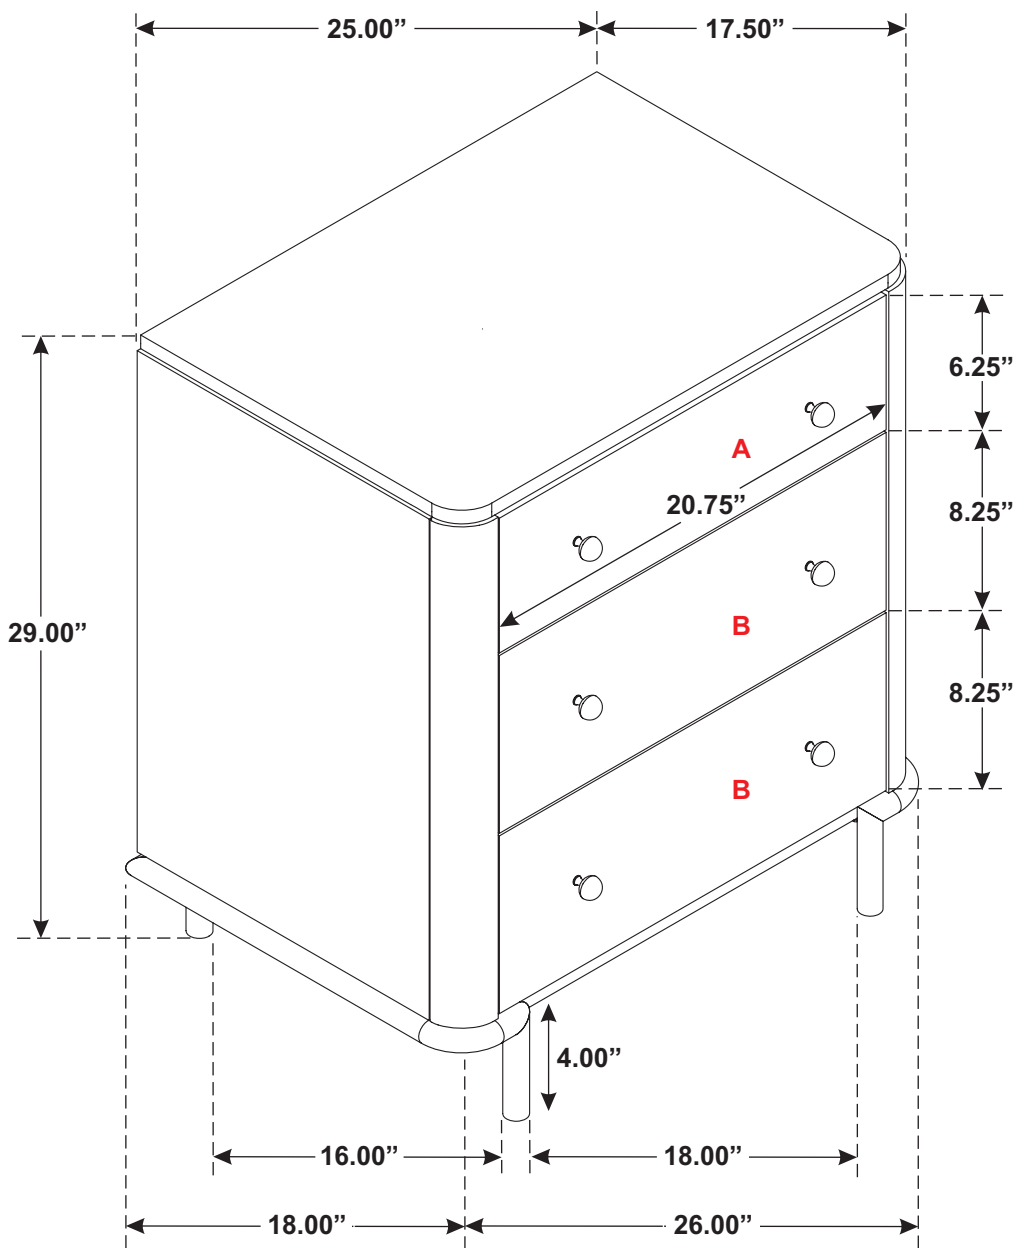

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224303
Dresser

ITEM: **224303**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

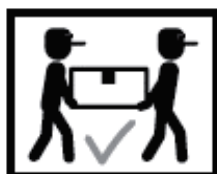


ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

A DRESSER

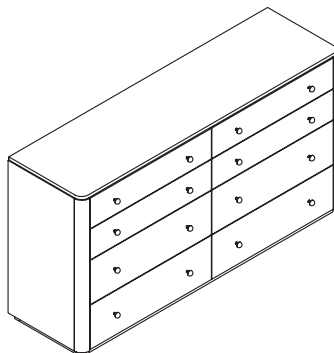


1PC

B LEFT METAL LEG



1PC

C RIGHT METAL LEG



1PC


D CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 22mm - BLK)



6PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



6PCS

3 FLAT WASHER
(1 x 18mm - BLK)



6PCS

4 ALLEN WRENCH
(M4 x 65mm - BLK)




1PC

ITEM: **224303**


ASSEMBLY INSTRUCTIONS



STEP 1

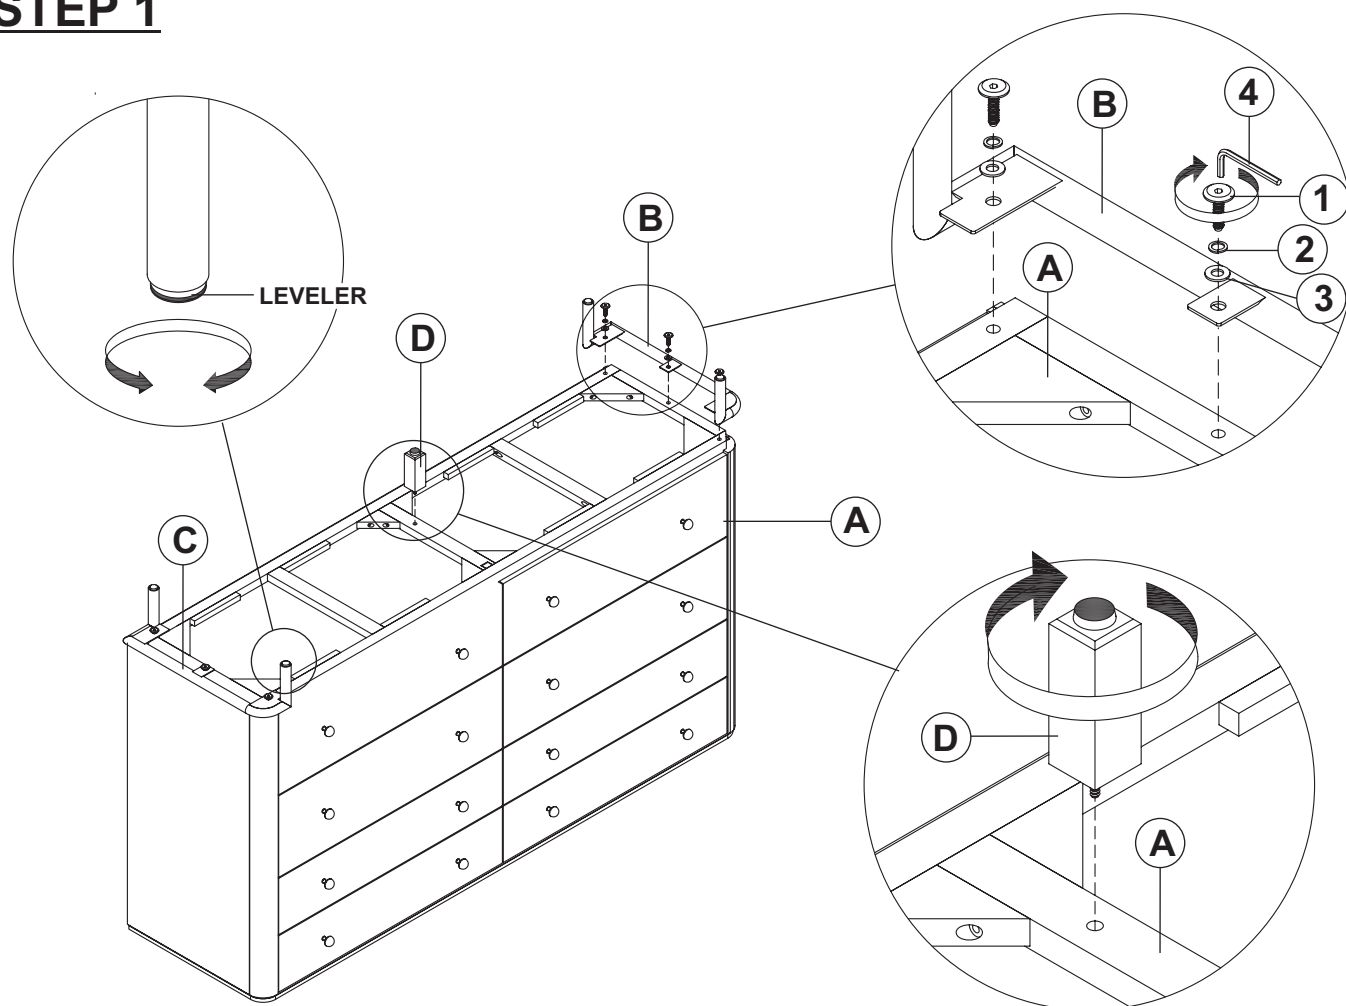

STEP 2 COMPLETE

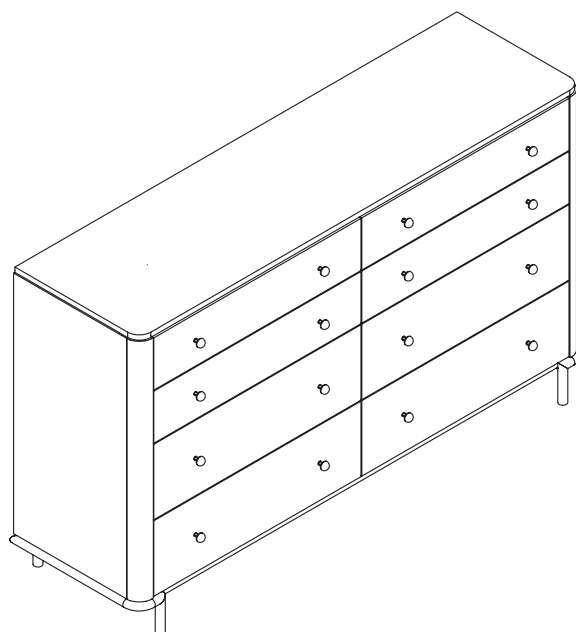

ITEM: **224303**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

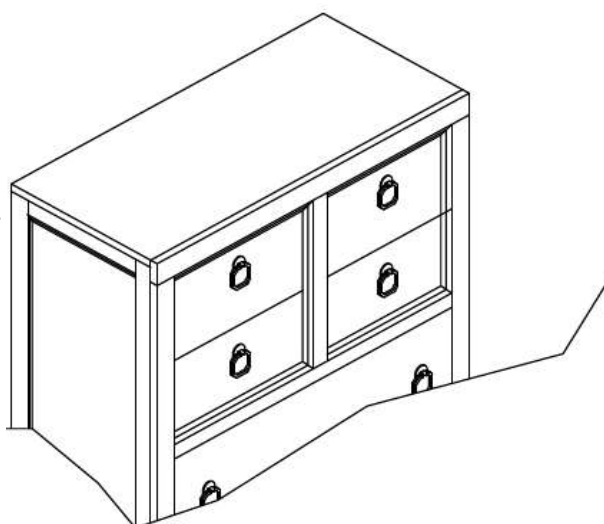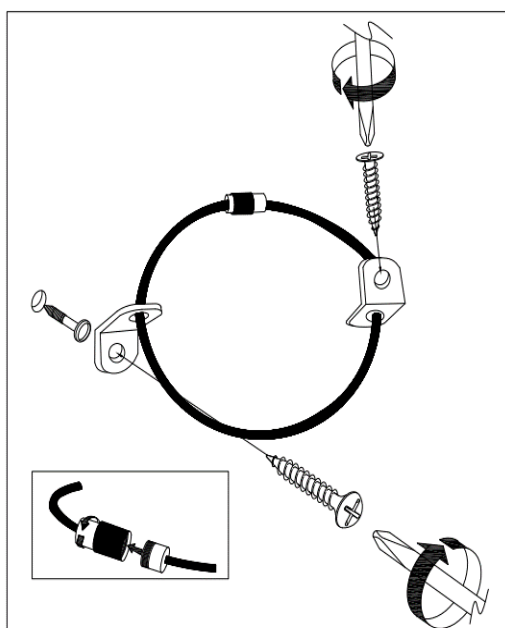


ITEM: **224303**



Inner Size of Drawer A : 26.50"W x 13.75"D x 3.50"H x 0.5"T

Inner Size of Drawer B : 26.50"W x 13.75"D x 6.50"H x 0.5"T

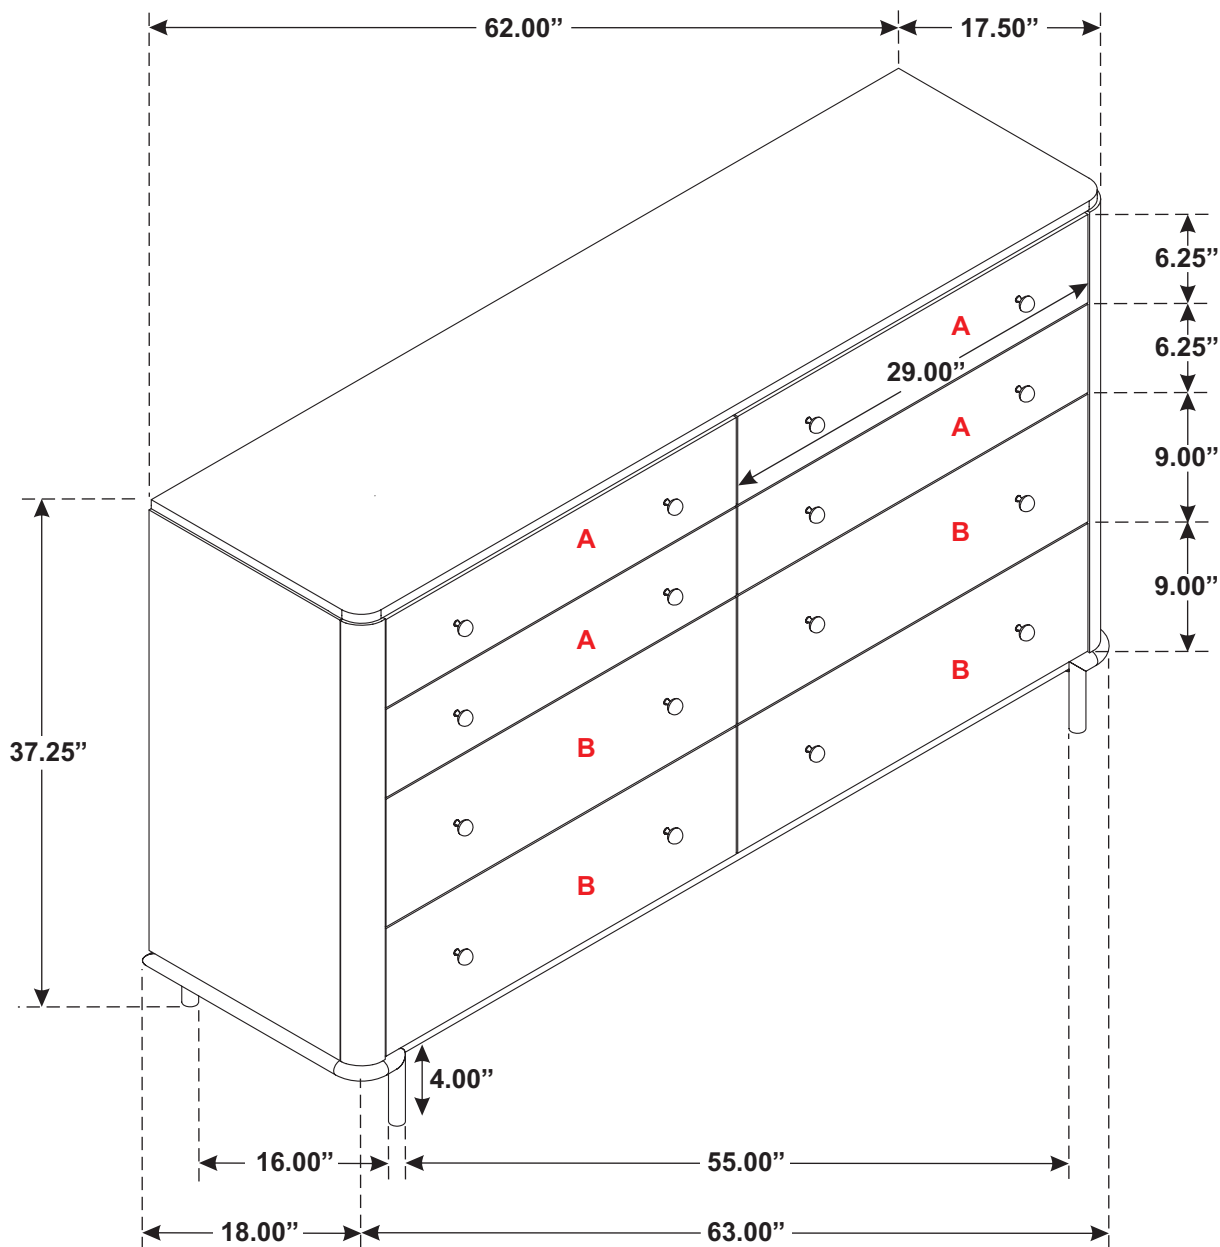

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224304
Mirror

ITEM: 224304



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

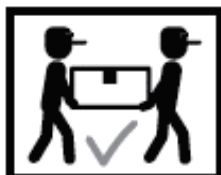


ASSEMBLY TIME

15 MINUTES

PART IDENTIFICATION

- A DRESSER
FROM BOX ITEM 224303

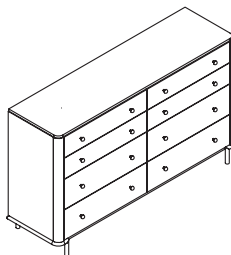


1PC

- B MIRROR




1PC

- C MIRROR SUPPORT
(PACKED WITH MIRROR)



1PC

- D JEWELRY TRAY
(PACKED WITH MIRROR)



1PC

HARDWARE IDENTIFICATION

- 1 METAL CONNECTOR
(2.5 x 65 x 65mm - BLK)



2PCS

- 2 SHORT BOLT
(M6 x 22mm - BLK)



4PCS

- 3 LONG BOLT
(M6 x 45mm - BLK)



8PCS

- 4 LOCK WASHER
(1.6 x 14mm - BLK)



8PCS

- 5 FLAT WASHER
(1 x 18mm - BLK)



8PCS

- 6 ALLEN WRENCH
(M4 x 65mm - BLK)




1PC

ITEM: **224304**


ASSEMBLY INSTRUCTIONS



STEP 1

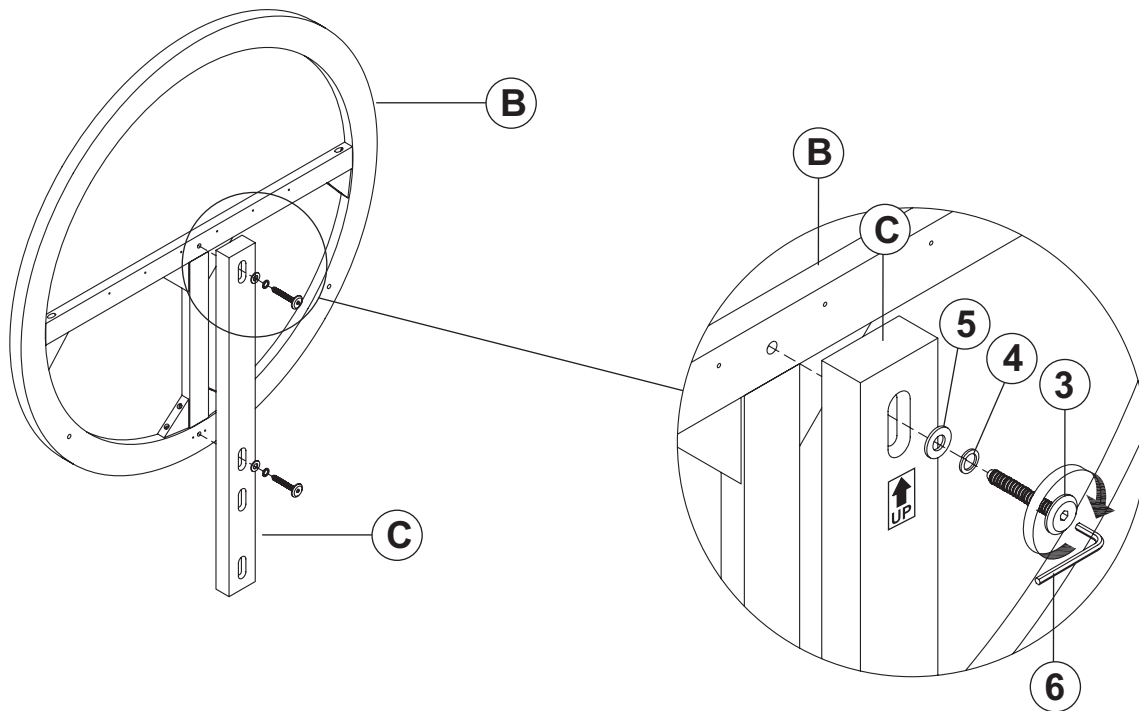

STEP 2

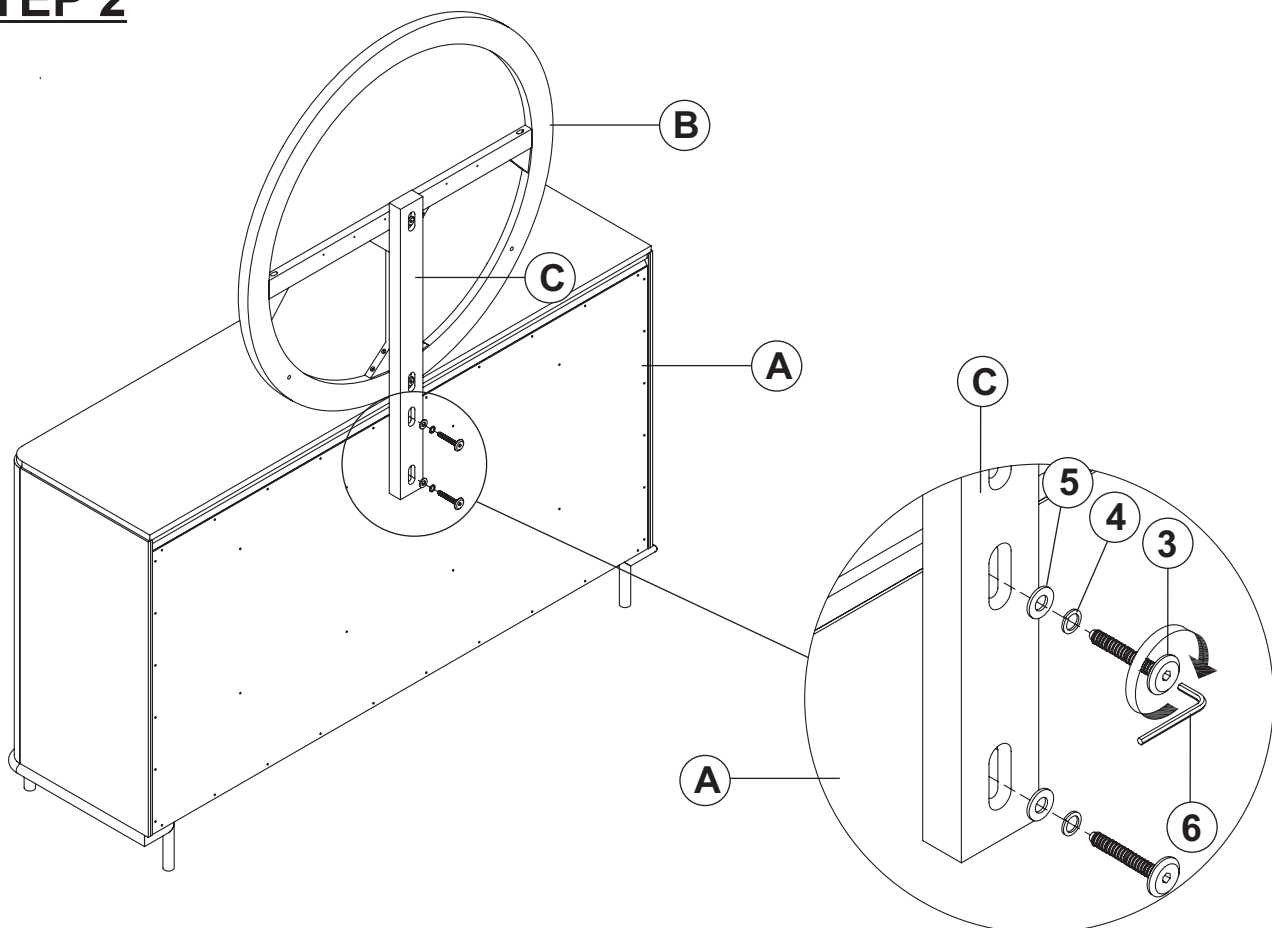


ITEM: **224304**



ASSEMBLY INSTRUCTIONS



STEP 3

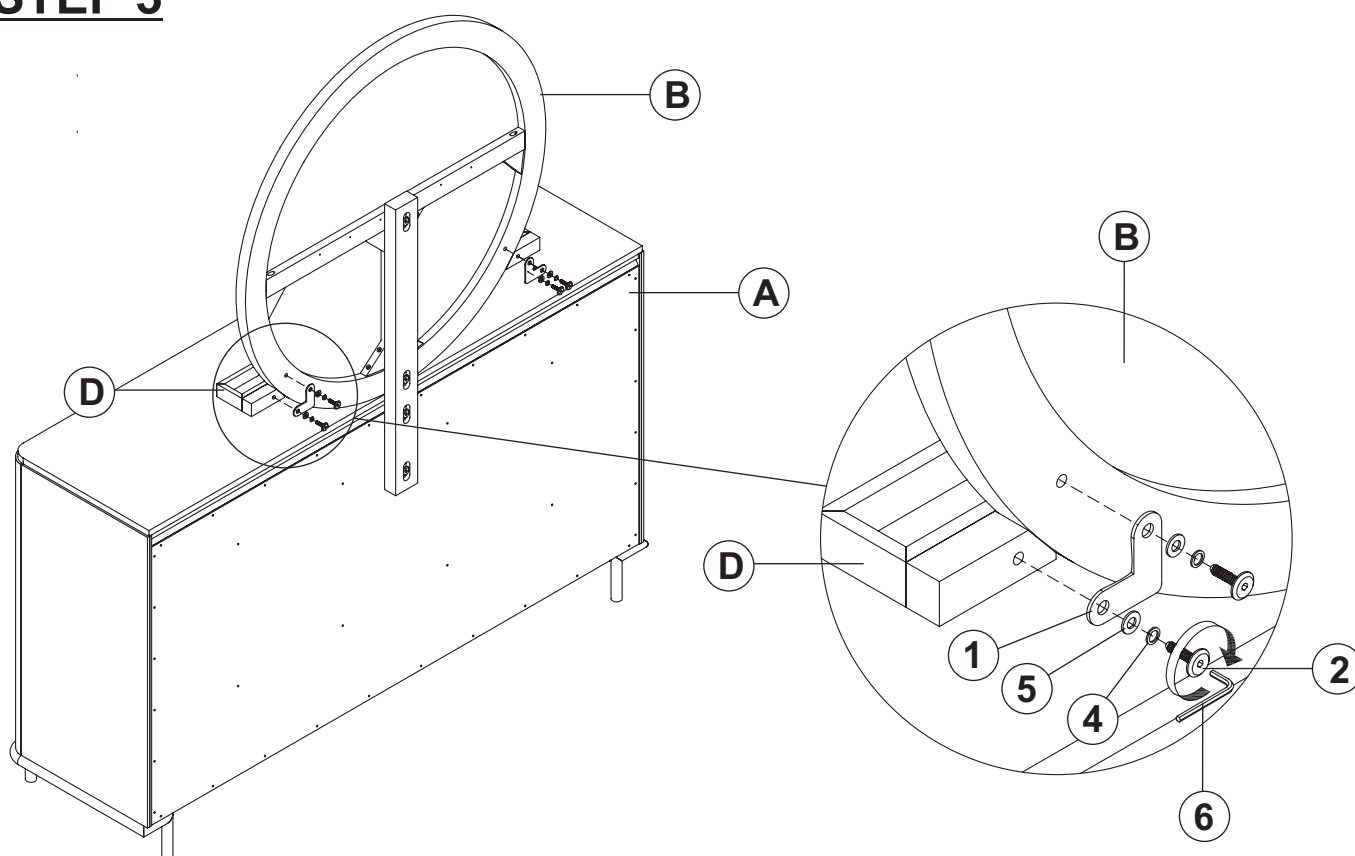

STEP 4 COMPLETE

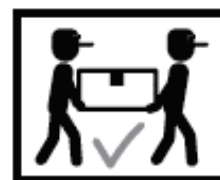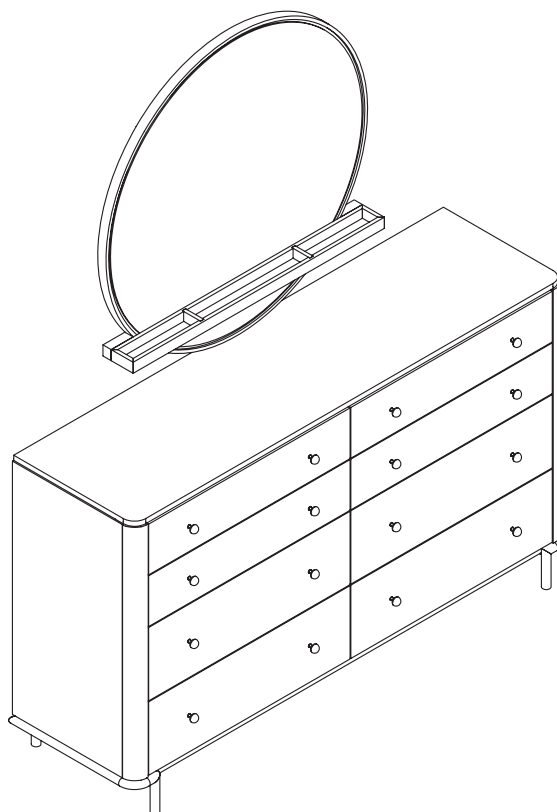

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PART IDENTIFICATION

B MIRROR




1 PC

E SHORT HANGING BAR
(PACKED WITH MIRROR)



1 PC

F LONG HANGING BAR
(PACKED WITH MIRROR)

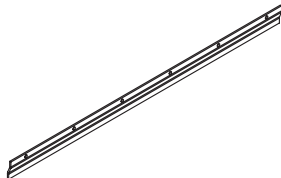

2 PCS

HARDWARE IDENTIFICATION

7 FLAT HEAD SCREW
(8 x 1" - BLK)



2 PCS

8 SHORT PAN HEAD SCREW
(8 x 5/8" - BLK)



6 PCS

9 LONG PAN HEAD SCREW
(8 x 2" - BLK)



6 PCS

10 PLASTIC ANCHOR
(S8 - GREY)




6 PCS


ITEM: **224304**

ASSEMBLY INSTRUCTIONS

STEP 1 FOR HANGING MIRROR

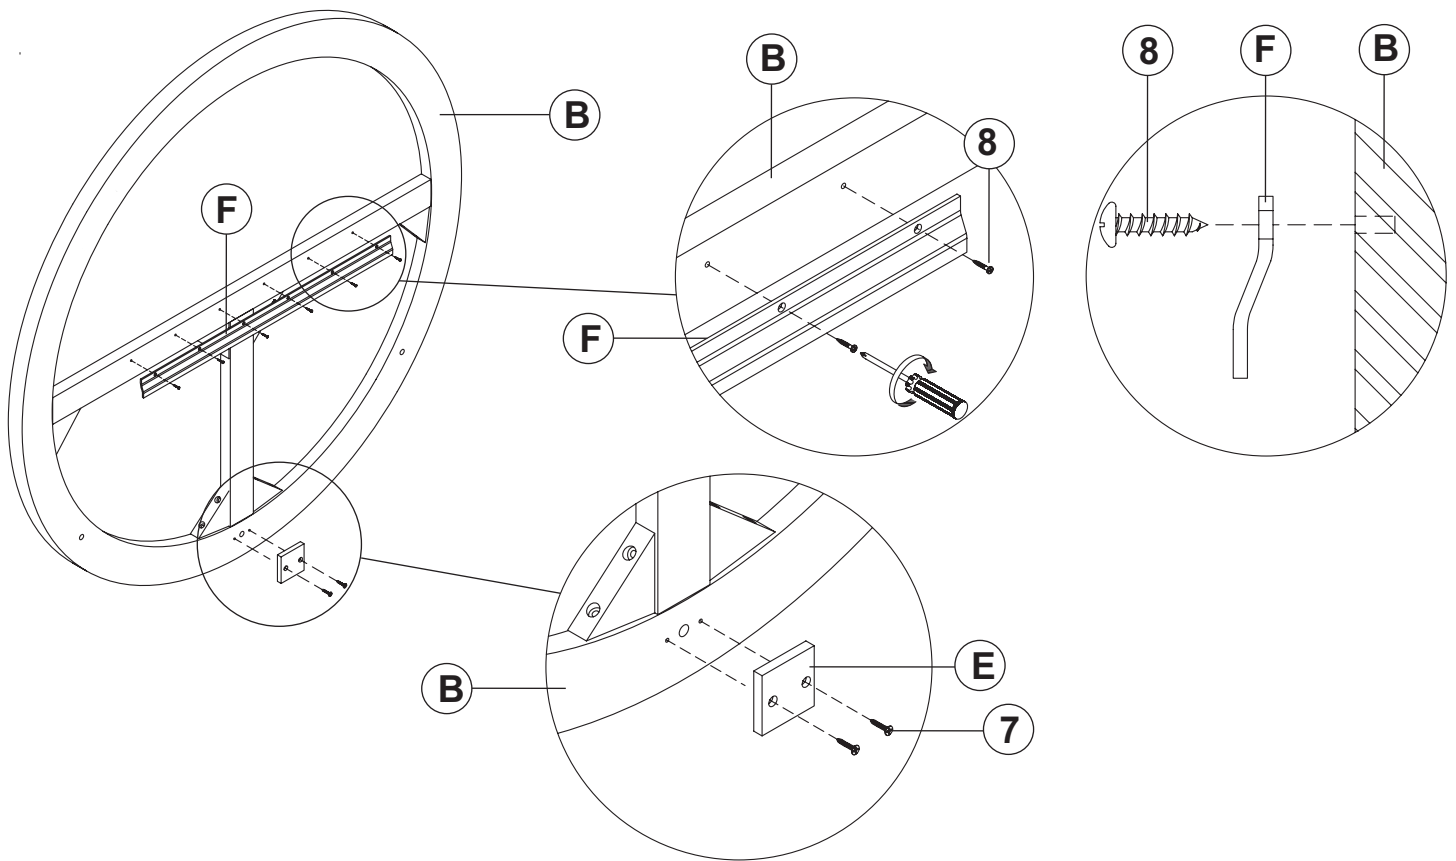

STEP 2 FOR HANGING MIRROR


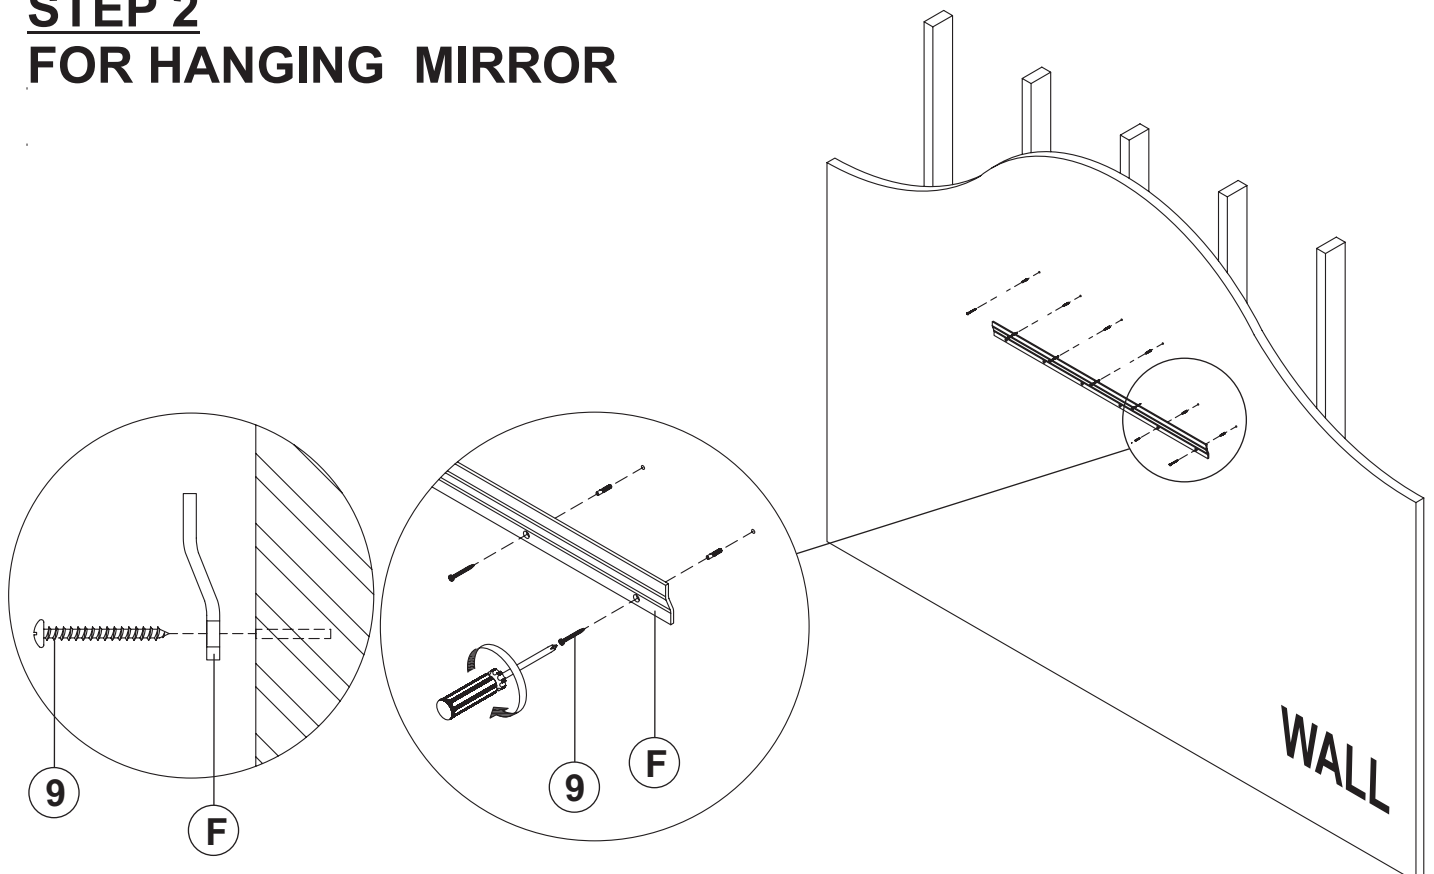


ITEM: **224304**


ASSEMBLY INSTRUCTIONS



STEP 3 **FOR HANGING MIRROR** **COMPLETE**

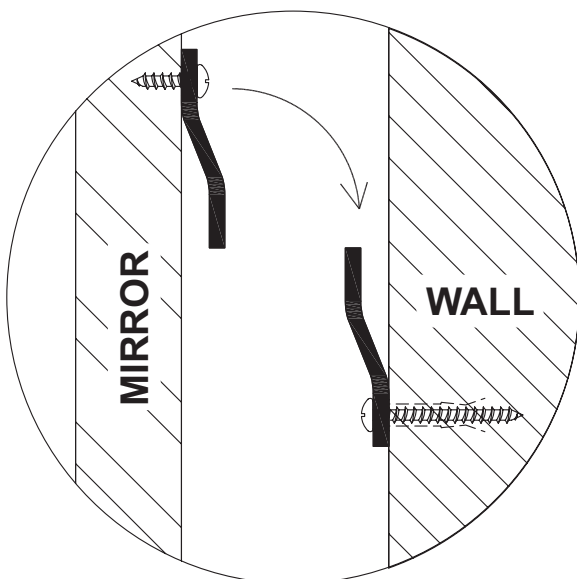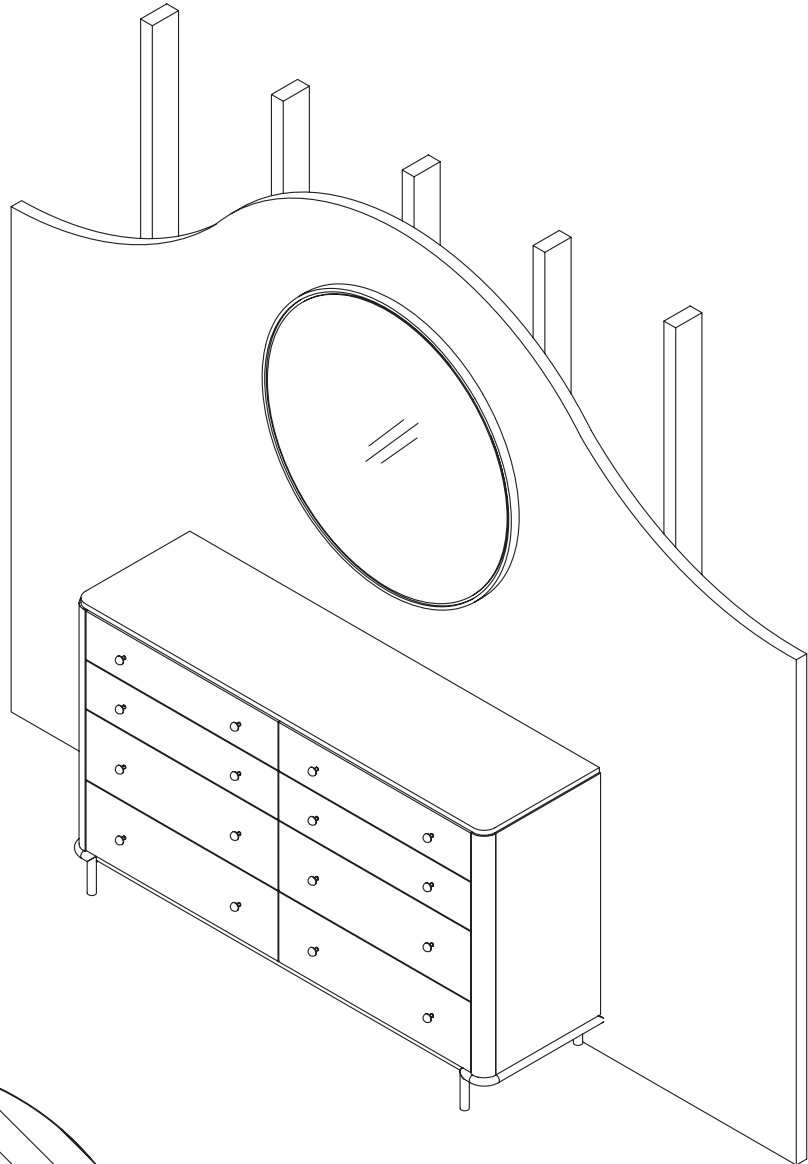

ITEM: **224304**

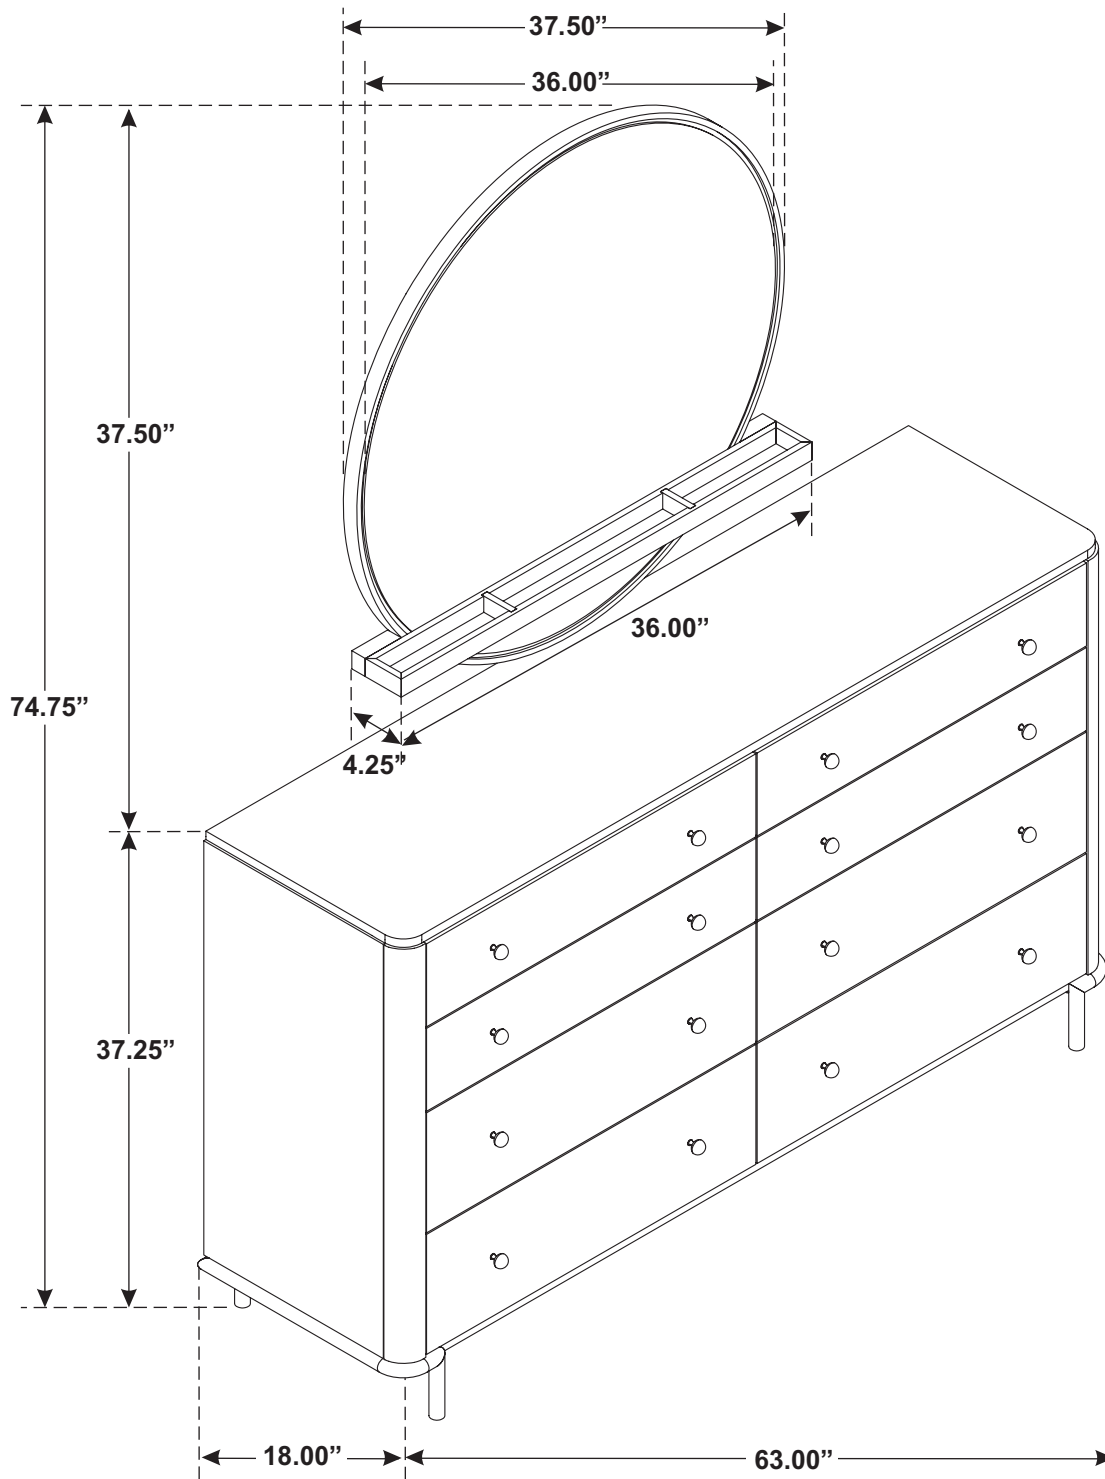

Note: Dimension tolerance $\pm 5\%$

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224305
Chest

ITEM: **224305**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES


PART IDENTIFICATION

A CHEST

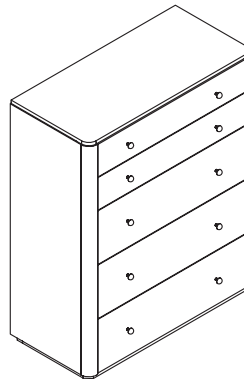


1PC

B LEFT METAL LEG



1PC


C RIGHT METAL LEG



1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 22mm - BLK)



6PCS

2 LOCK WASHER
(1.6 x 14mm - BLK)



6PCS

3 FLAT WASHER
(1 x 18mm - BLK)



6PCS

4 ALLEN WRENCH
(M4 x 65mm - BLK)




1PC

ITEM: **224305**



ASSEMBLY INSTRUCTIONS



STEP 1

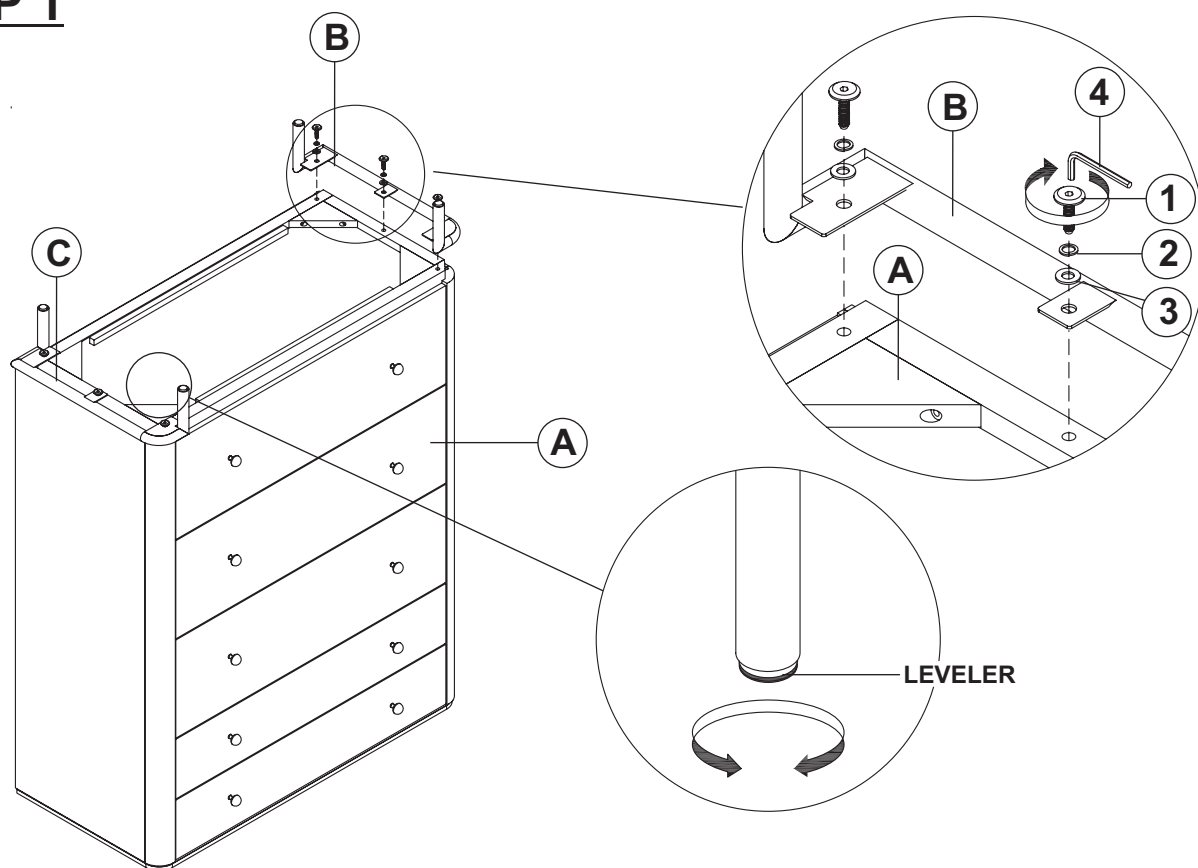

STEP 2 COMPLETE

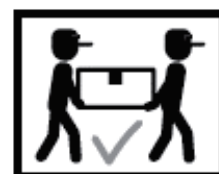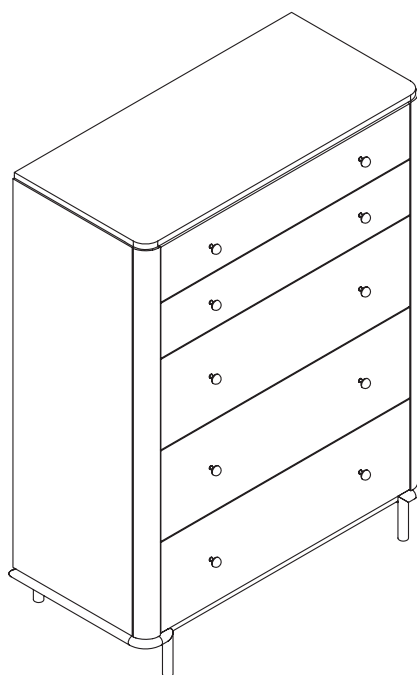

ITEM: **224305**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

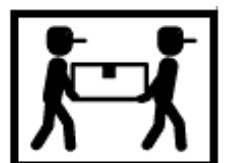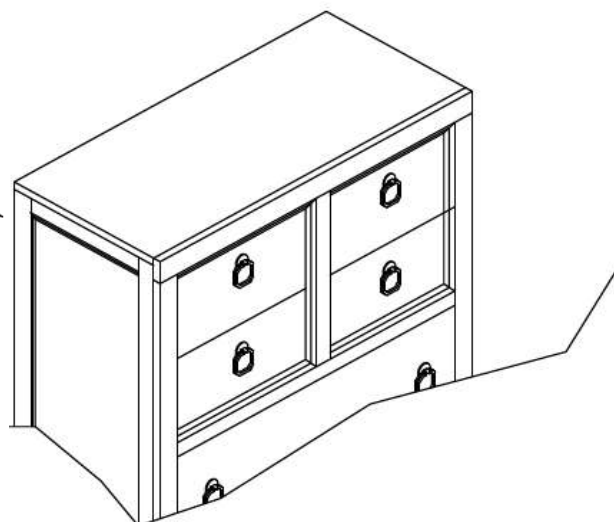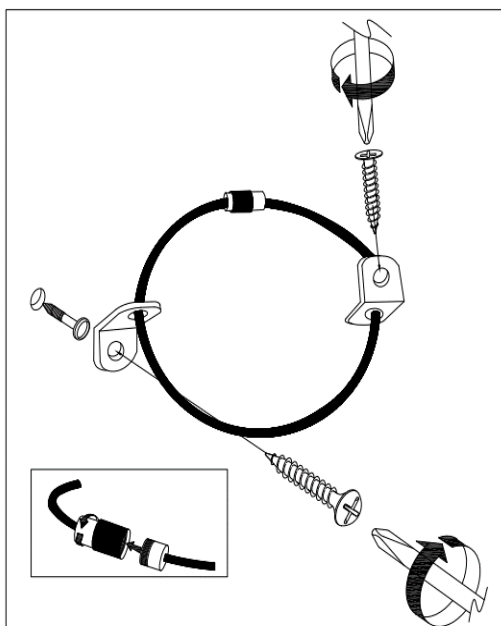

ITEM: **224305**



Inner Size of Drawer A : 30.75"W x 13.75"D x 3.50"H x 0.5"T
Inner Size of Drawer B : 30.75"W x 13.75"D x 4.00"H x 0.5"T
Inner Size of Drawer C : 30.75"W x 13.75"D x 4.50"H x 0.5"T
Inner Size of Drawer D : 30.75"W x 13.75"D x 8.00"H x 0.5"T
Inner Size of Hidden Drawer : 30.75"W x 12.50"D x 2.25"H x 0.5"T

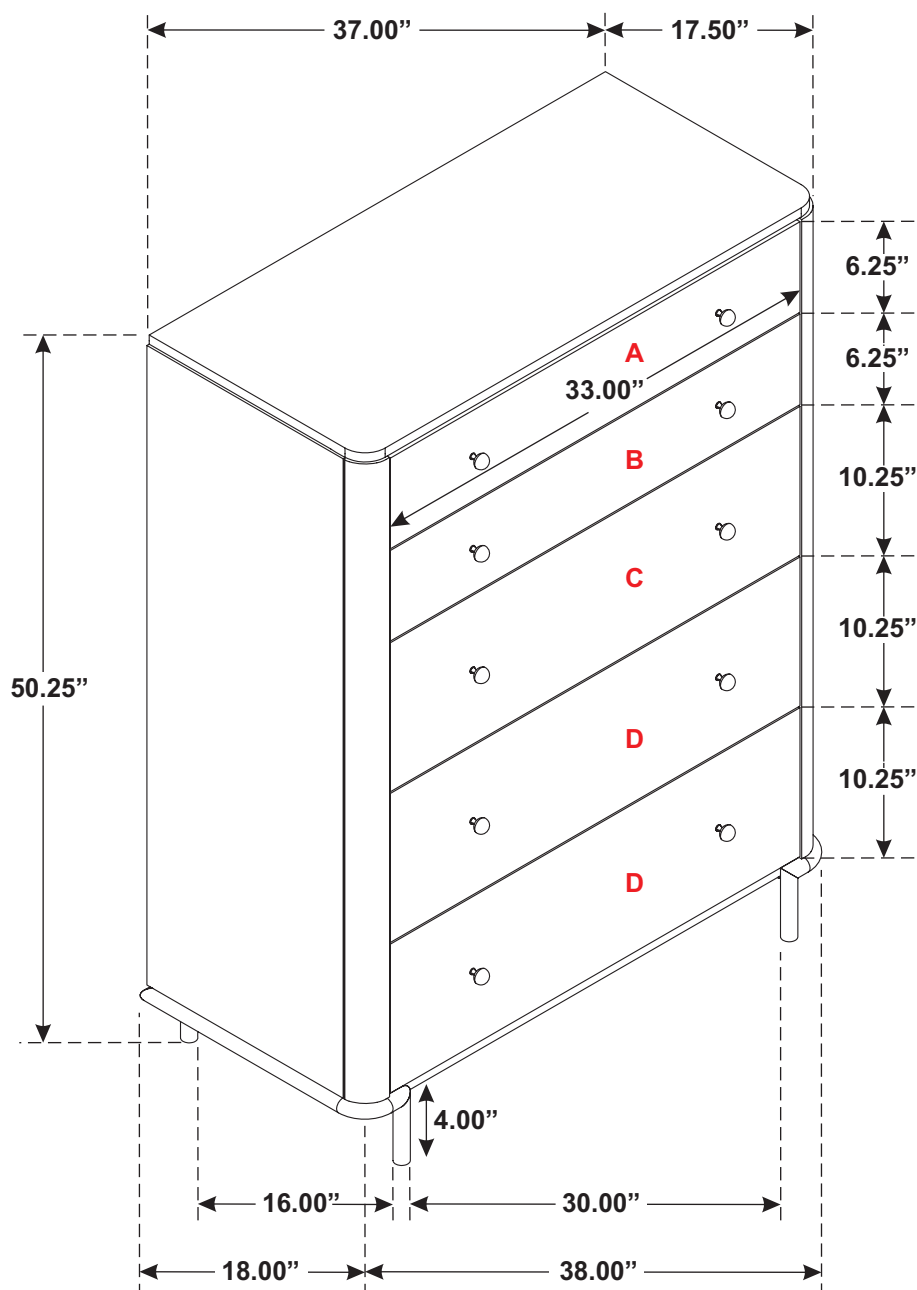

Note: Dimension tolerance $\pm 5\%$