




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

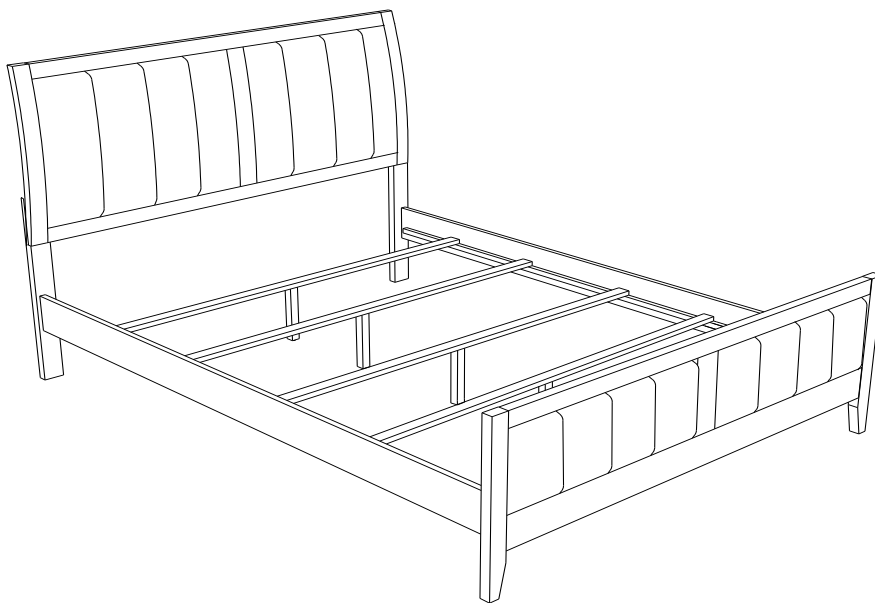

Fine Furniture for every stage of life

224421F(B1&B2)
Full Bed

ITEM: 224421F (B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME



20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A	HEADBOARD PANEL		1PC	D	FOOTBOARD		1PC
B	RIGHT HEADBOARD LEG		1PC	E	BED SLAT		4PCS
C	LEFT HEADBOARD LEG		1PC	F	BED SLAT SUPPORT WITH LEVELER		4PCS

B2 (BOX 2)

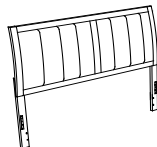G	BED RAIL		2PCS				
HB	224421F(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	D	224421F(B1) FROM BOX 1 FOOTBOARD		1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224421F (B1)

1	BOLT (M6 x 35mm - BLK)		6PCS	4	ALLEN WRENCH (M4 x 65mm - BLK)		1PC
2	LOCK WASHER (1/4" - BLK)		6PCS	5	FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS				

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224421F (B1&B2)**



ASSEMBLY INSTRUCTIONS


STEP 1

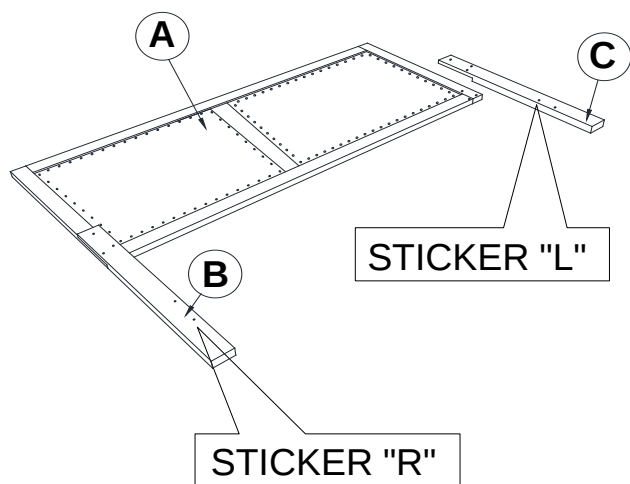

****BACK VIEW****


Note: Please take note of the marking sticker (L & R) on the headboard legs.

STEP 2

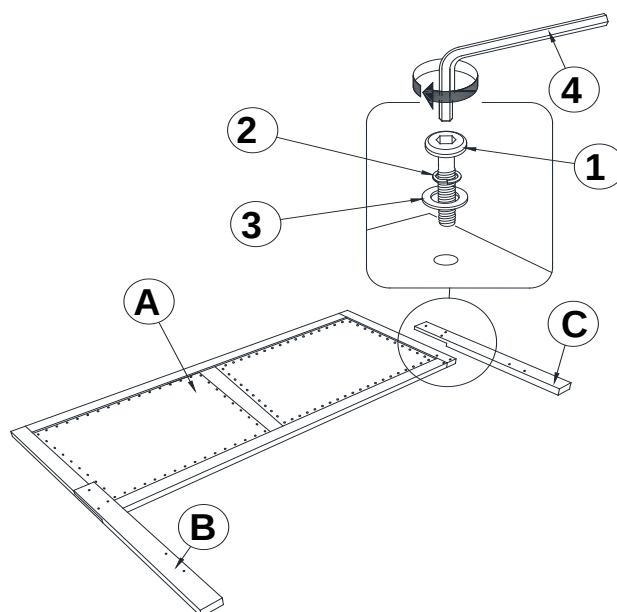


****BACK VIEW****

STEP 3

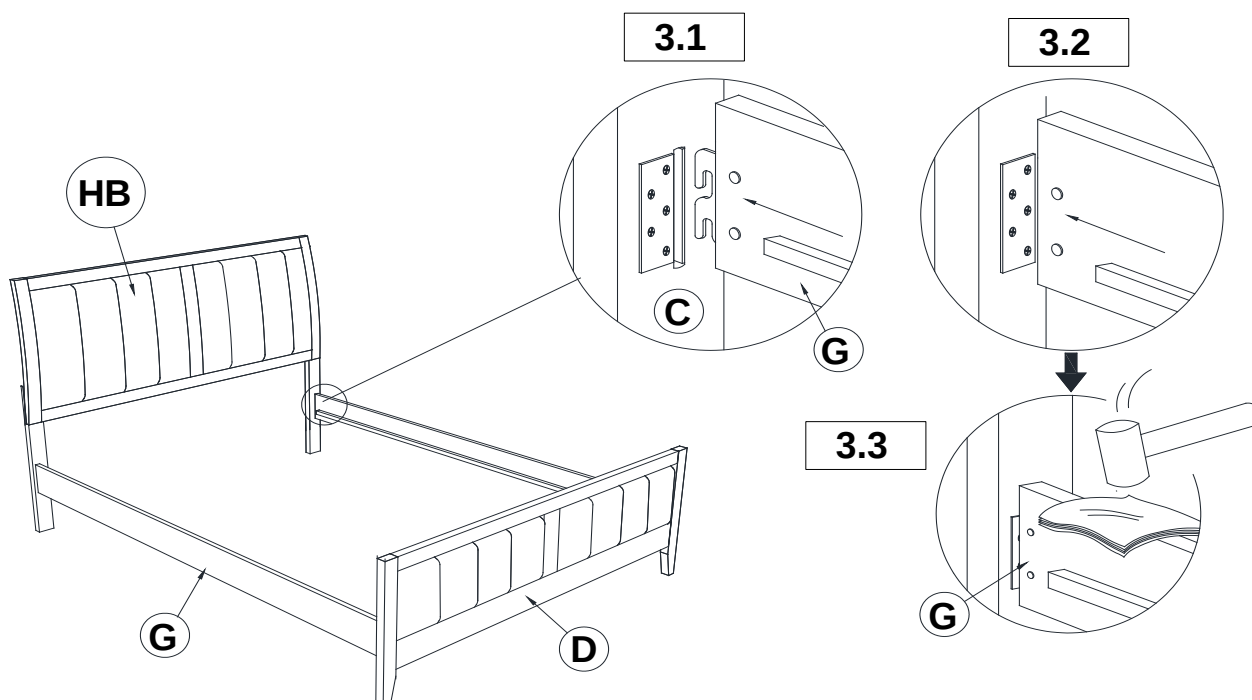


ASSEMBLY INSTRUCTIONS


STEP 4

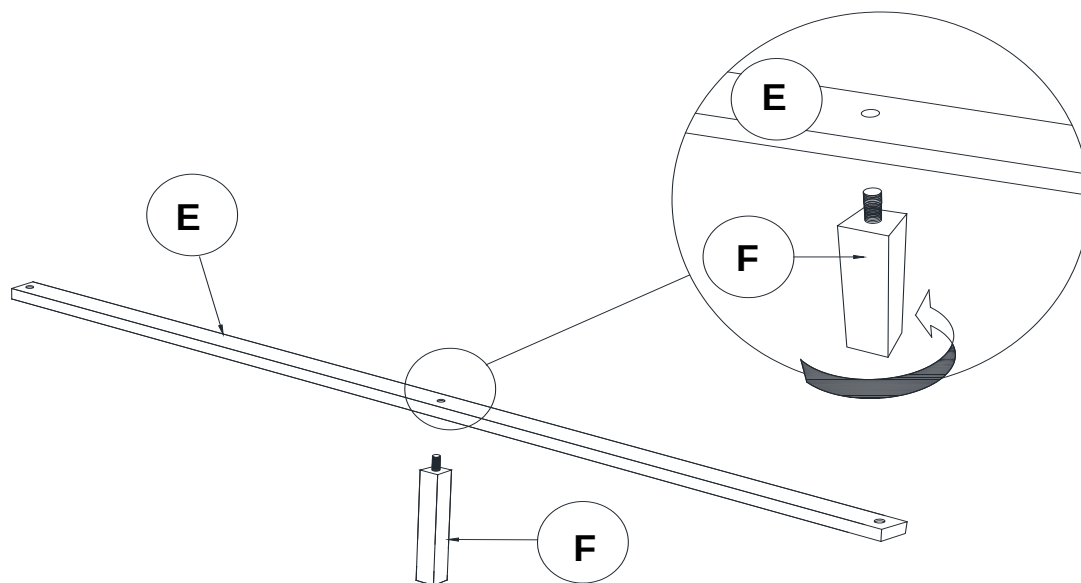

STEP 5

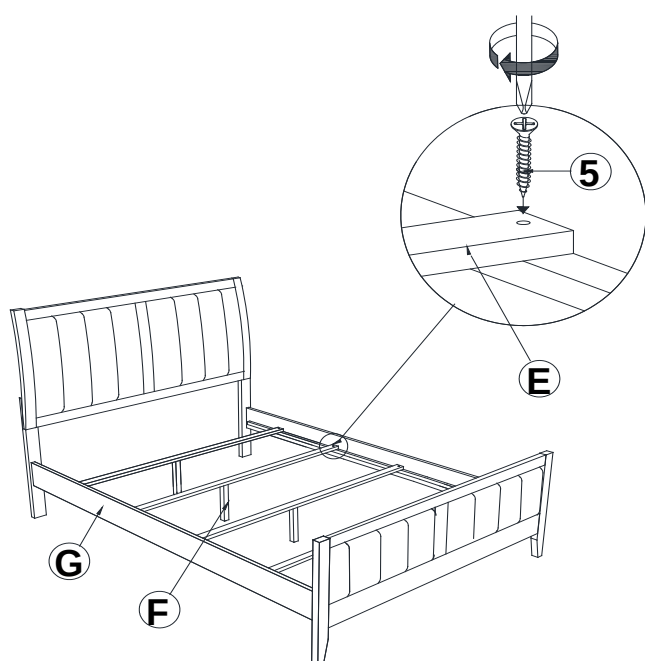


STEP 6
COMPLETE

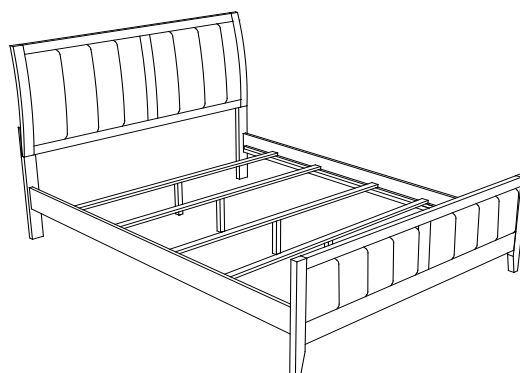

ITEM: **224421F**




Inner Size : 54.50"W x 76.00"D

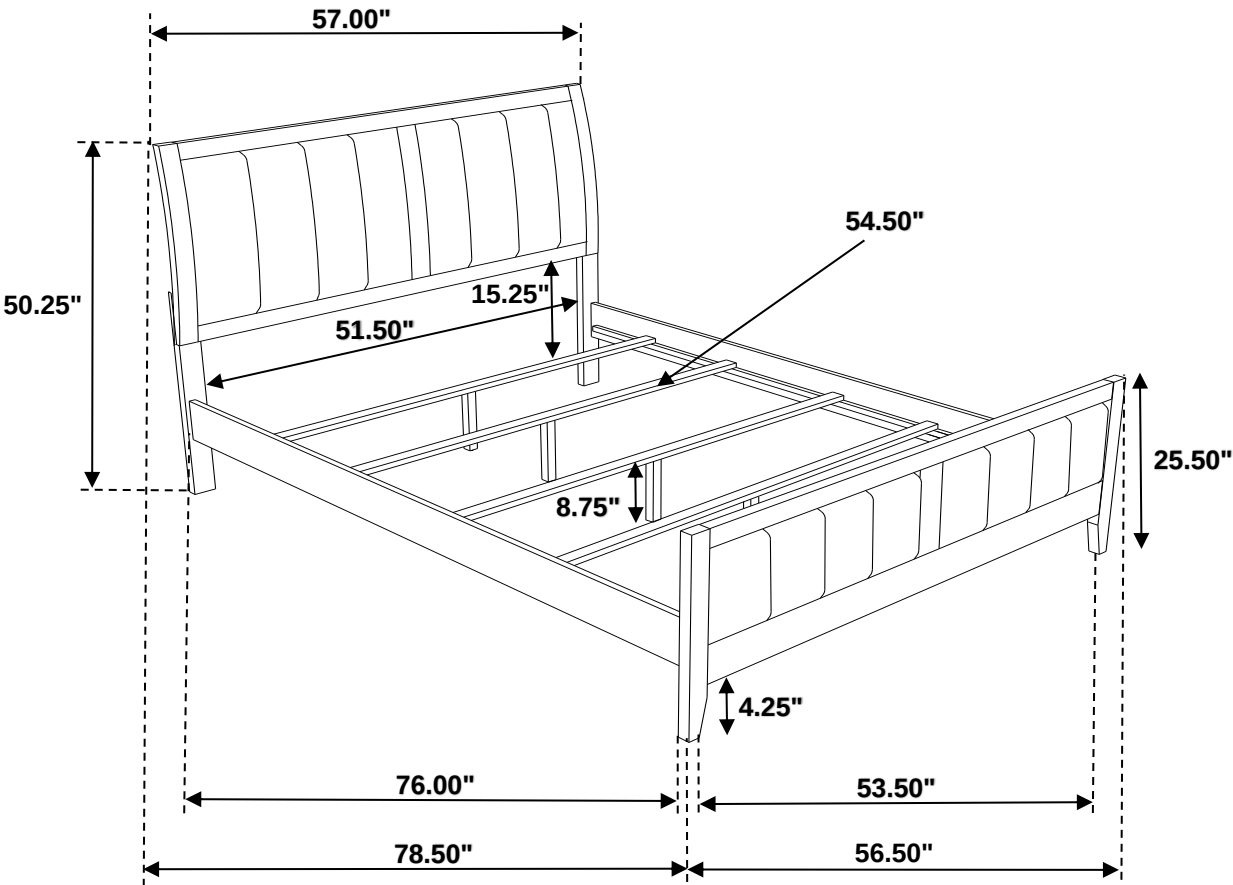

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

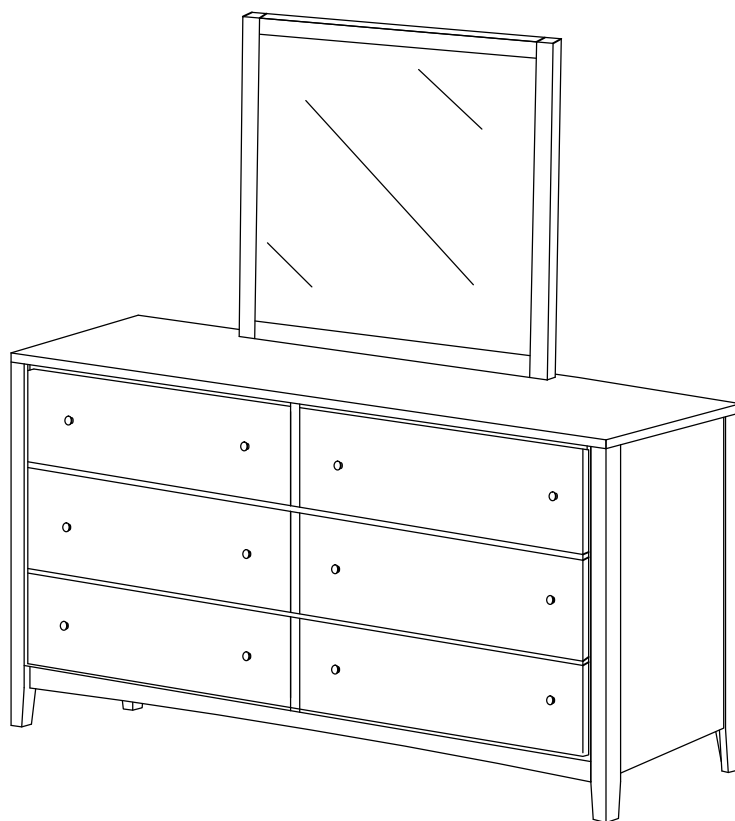

Fine Furniture for every stage of life

224424
Mirror

ITEM: **224424**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A


DRESSER
*FROM BOX ITEM # 224423



1PC

B

MIRROR

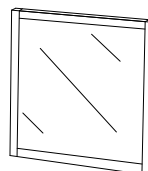

1PC

C

MIRROR SUPPORT
(PACK WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW
(M4 x 32mm - RBW)



10PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM:224424

ASSEMBLY INSTRUCTIONS

STEP 1


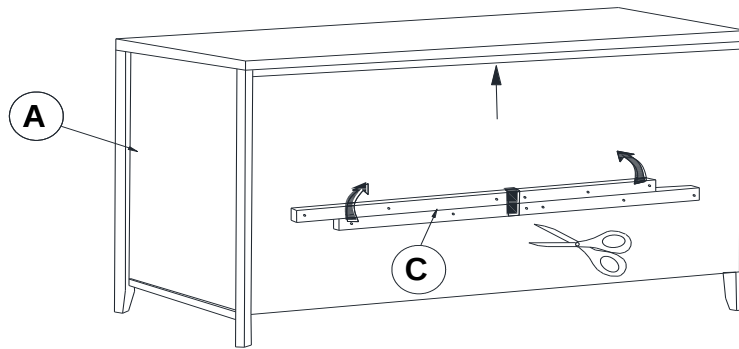


STEP 2

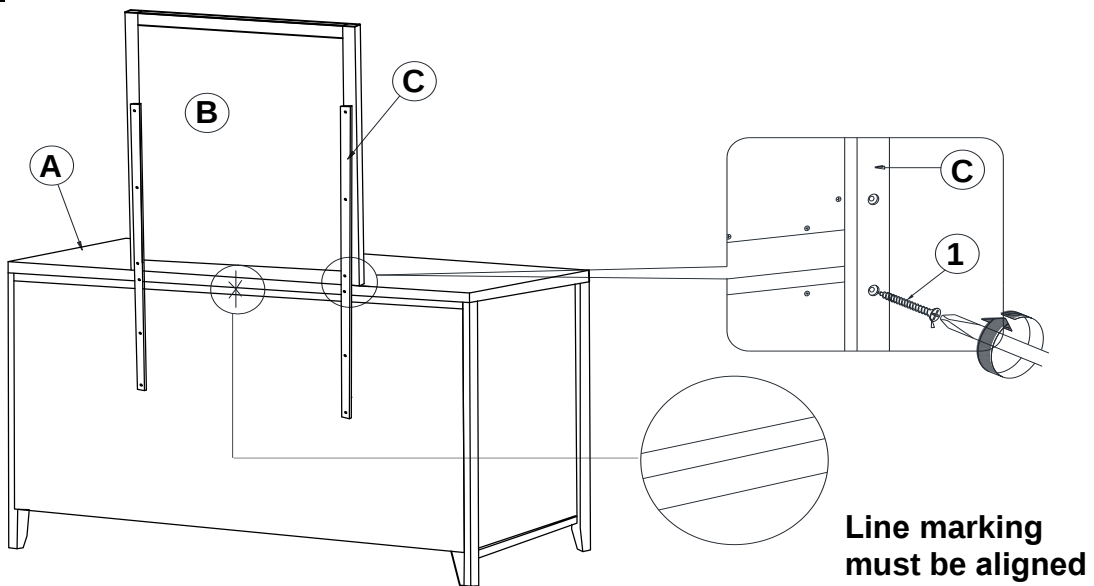


STEP 3

COMPLETE

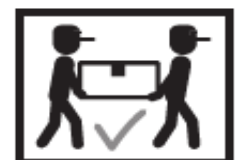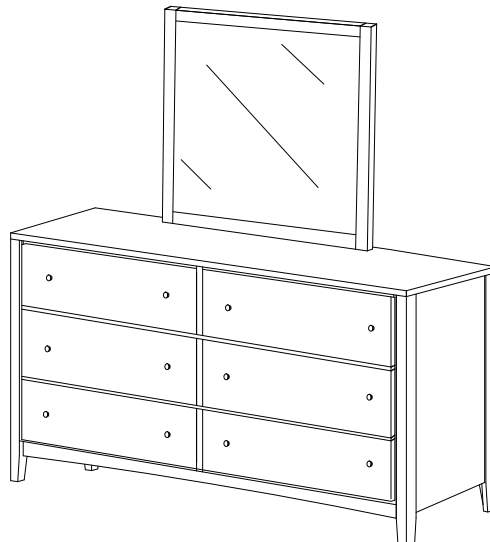

ITEM: **224424**

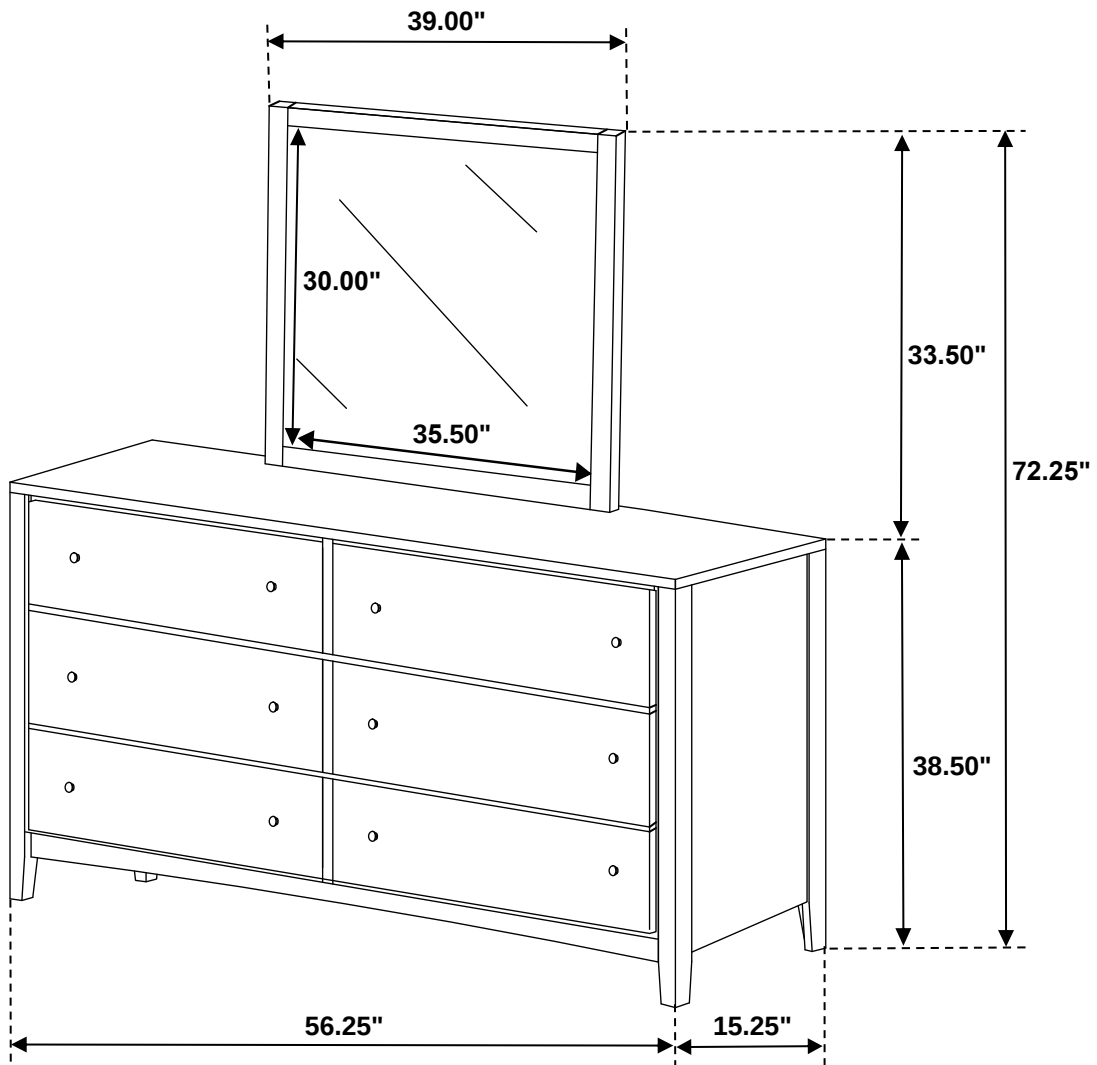

Note: Dimension tolerance $\pm 5\%$