




## *ASSEMBLY INSTRUCTIONS* *COASTER FINE FURNITURE*

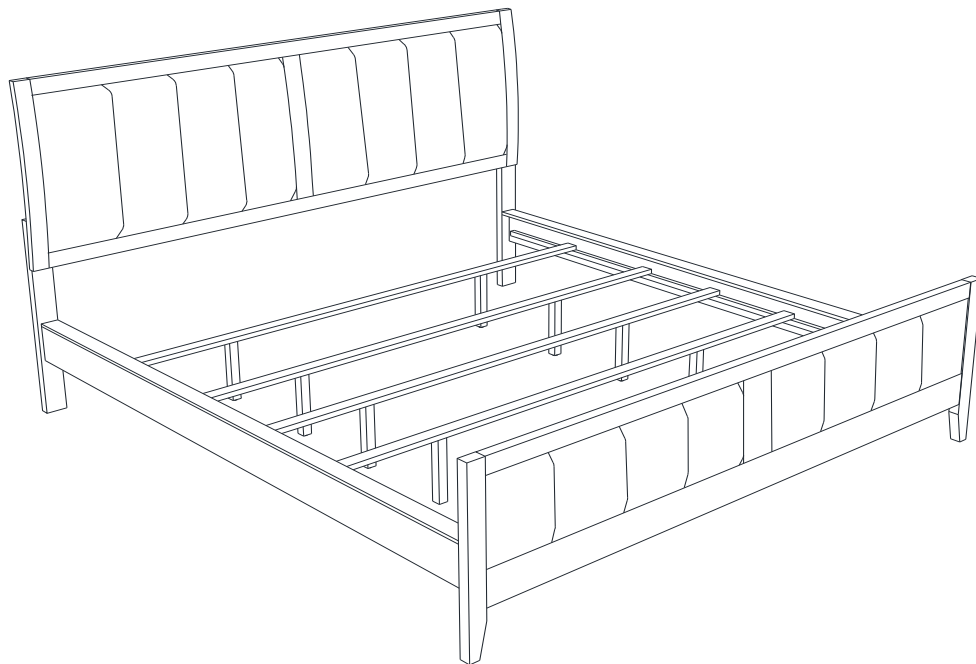

*Fine Furniture for every stage of life*

## **224421KW (B1&B2)** **California King Bed**

# ITEM: 224421KW(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD  
PANEL



1PC

B RIGHT  
HEADBOARD  
LEG




1PC

C LEFT  
HEADBOARD  
LEG



1PC

D FOOTBOARD



1PC

E BED SLAT



4PCS

F BED SLAT  
SUPPORT WITH  
LEVELER



8PCS


### B2 (BOX 2)

G BED RAIL




2PCS

HB 224421KW(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

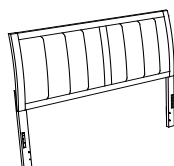

1PC

D 224421KW(B1)  
FROM BOX1  
FOOTBOARD



1PC

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224421KW(B1)

1 BOLT  
(M6 x 35mm - BLK)



6PCS

2 LOCK WASHER  
(1/4" - BLK)



6PCS

3 FLAT WASHER  
(1/4" ID x 13mm - BLK)



6PCS

4 ALLEN WRENCH  
(M4 x 60mm - BLK)



1PC

5 FLAT HEAD  
SCREW  
(M4 x 32mm - RBW)



8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 224421KW(B1&B2)

## ASSEMBLY INSTRUCTIONS


### STEP 1

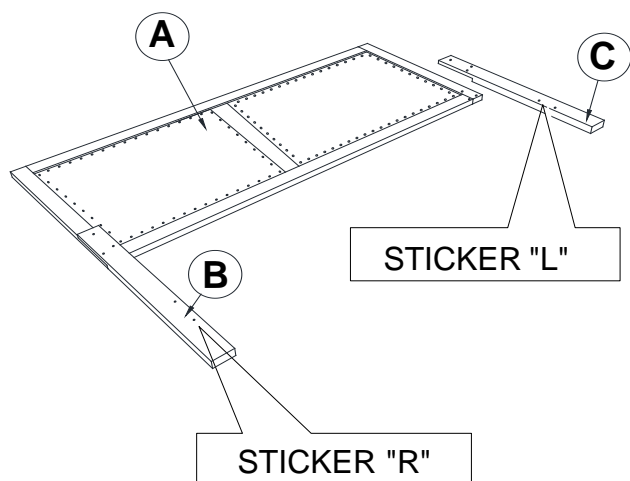

**\*\*BACK VIEW\*\***


Note: Please take note of the marking sticker ( L & R ) on the headboard legs.

### STEP 2

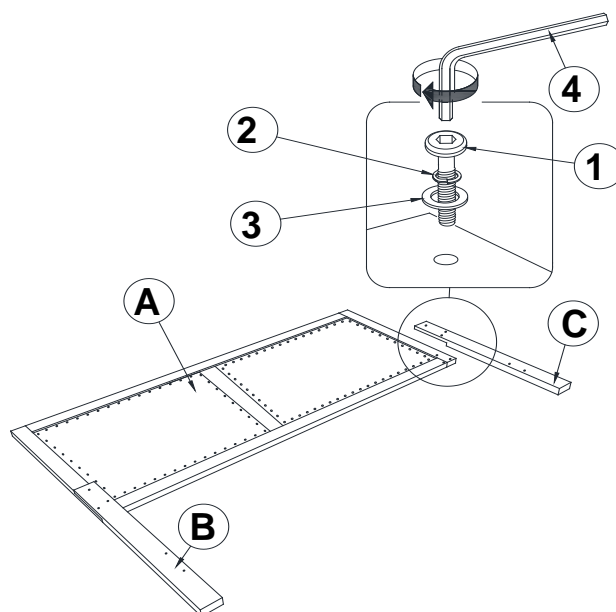

**\*\*BACK VIEW\*\***


### STEP 3

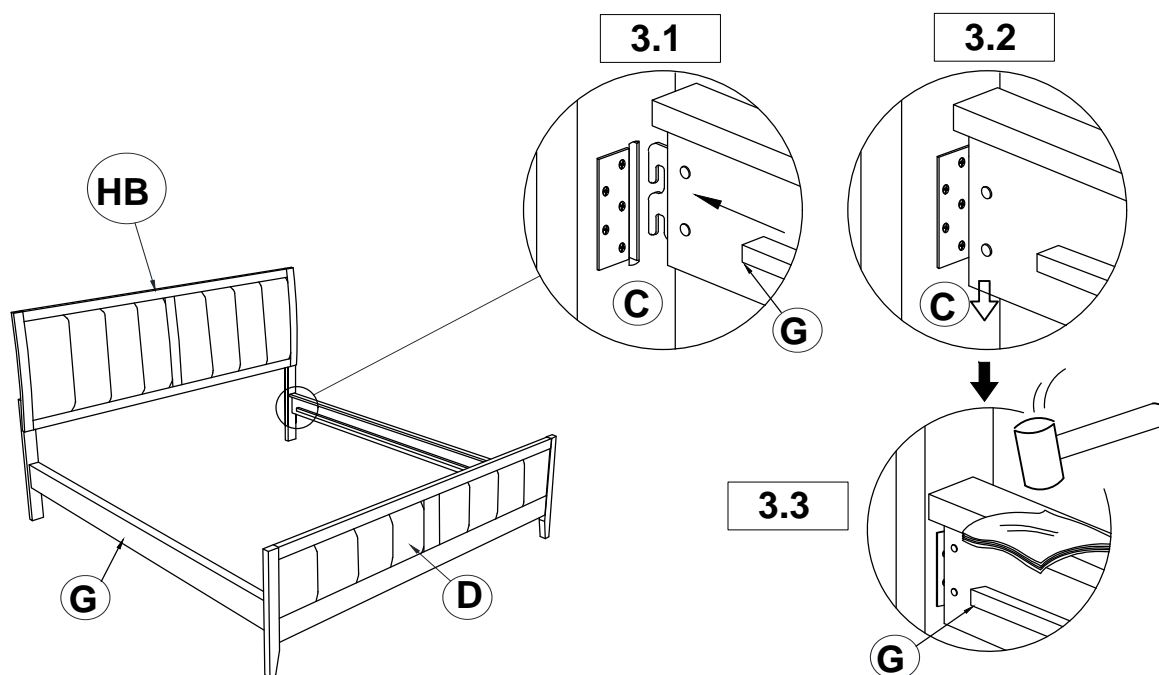


ITEM: **224421KW(B1&B2)**

## ASSEMBLY INSTRUCTIONS



### STEP 4

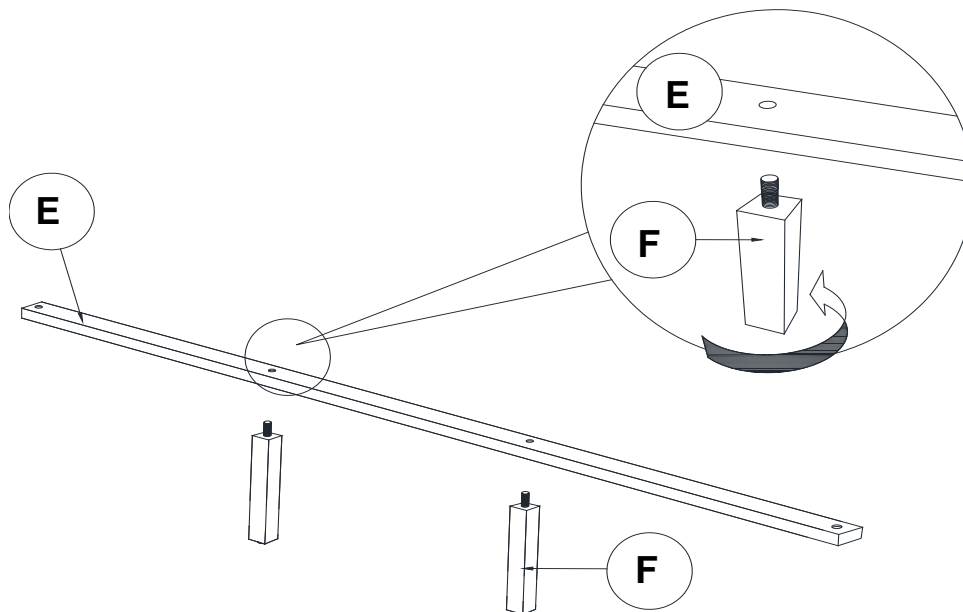

### STEP 5

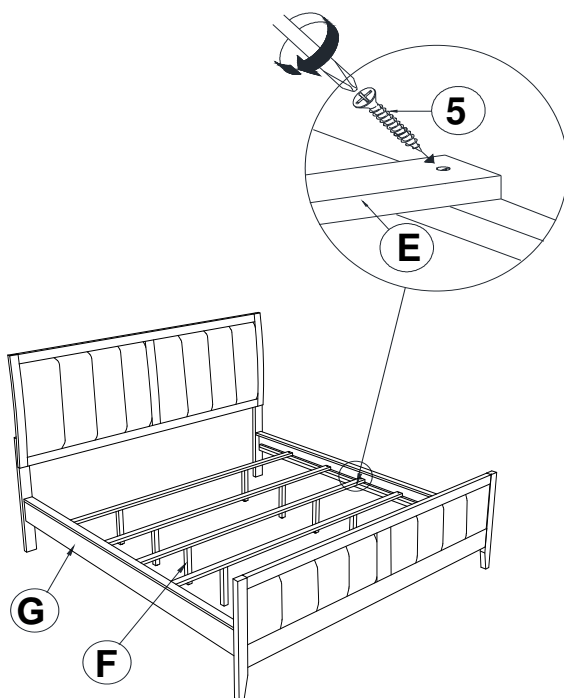


### STEP 6 COMPLETE

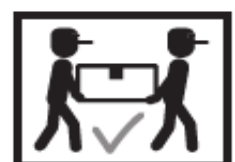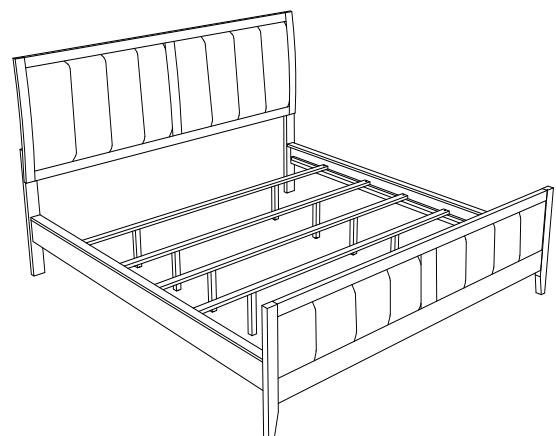

ITEM: **224421KW(B1&B2)**




Inner Size : 73.25"W x 86.00"D

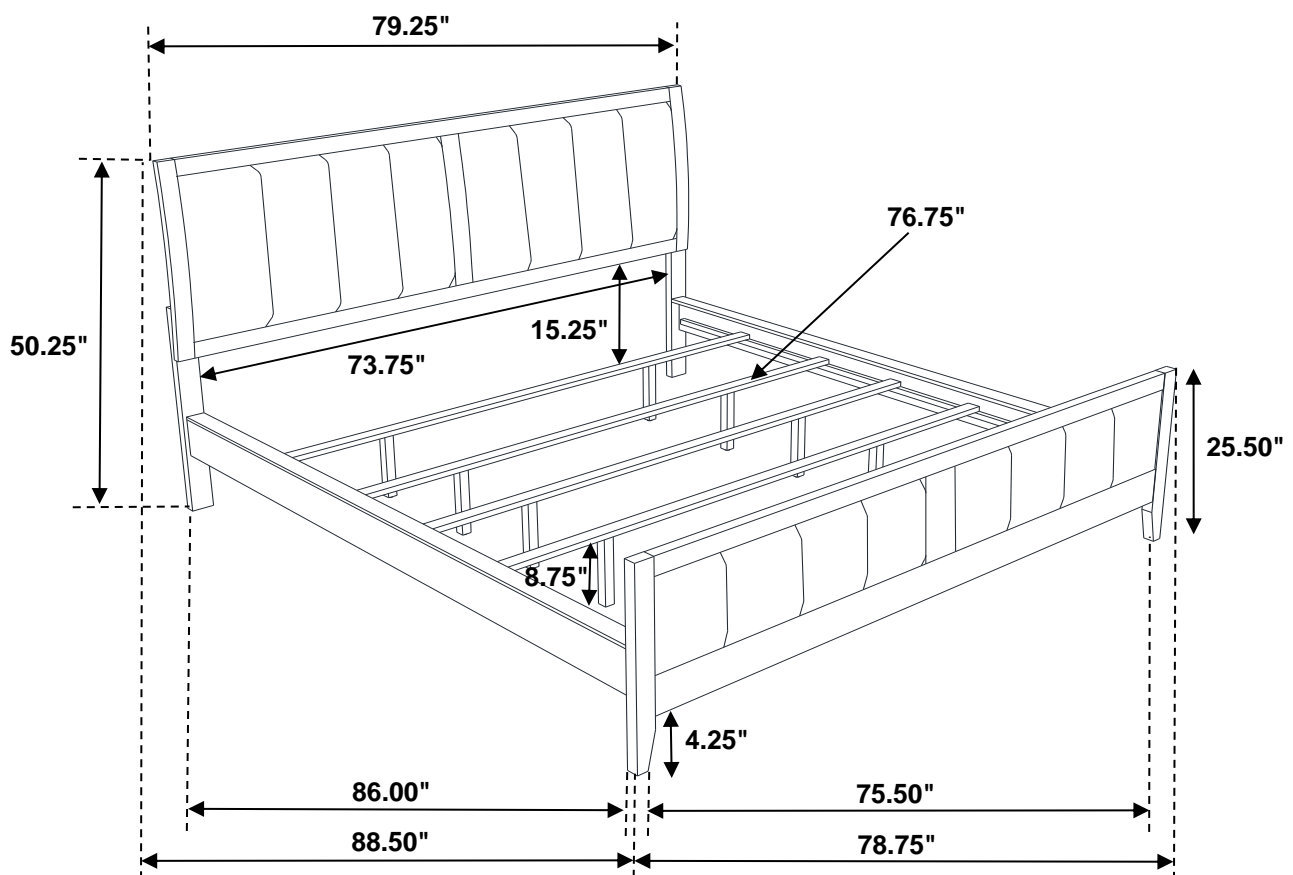

Note: Dimension tolerance  $\pm 5\%$

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

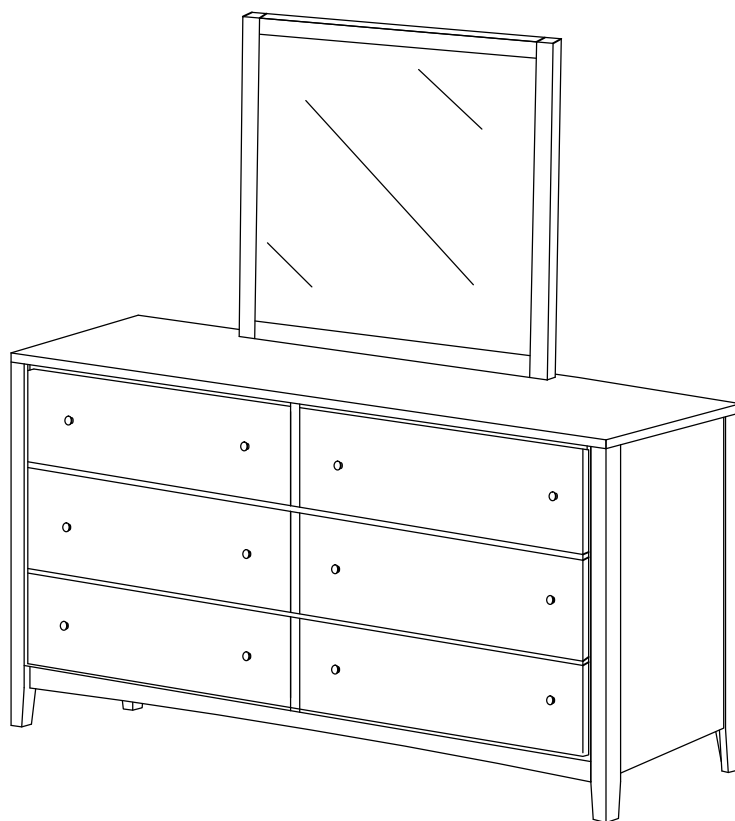

*Fine Furniture for every stage of life*

**224424**  
**Mirror**

ITEM: **224424**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A **DRESSER**  
\*FROM BOX ITEM # 224423



1PC

B **MIRROR**

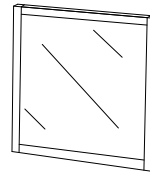

1PC

C **MIRROR SUPPORT**  
(PACK WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

1

**FLAT HEAD SCREW**  
(M4 x 32mm - RBW)



10PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224424**


## ASSEMBLY INSTRUCTIONS





### STEP 1

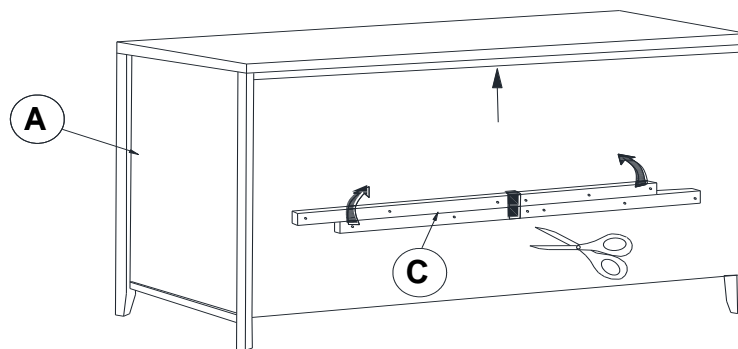

### STEP 2

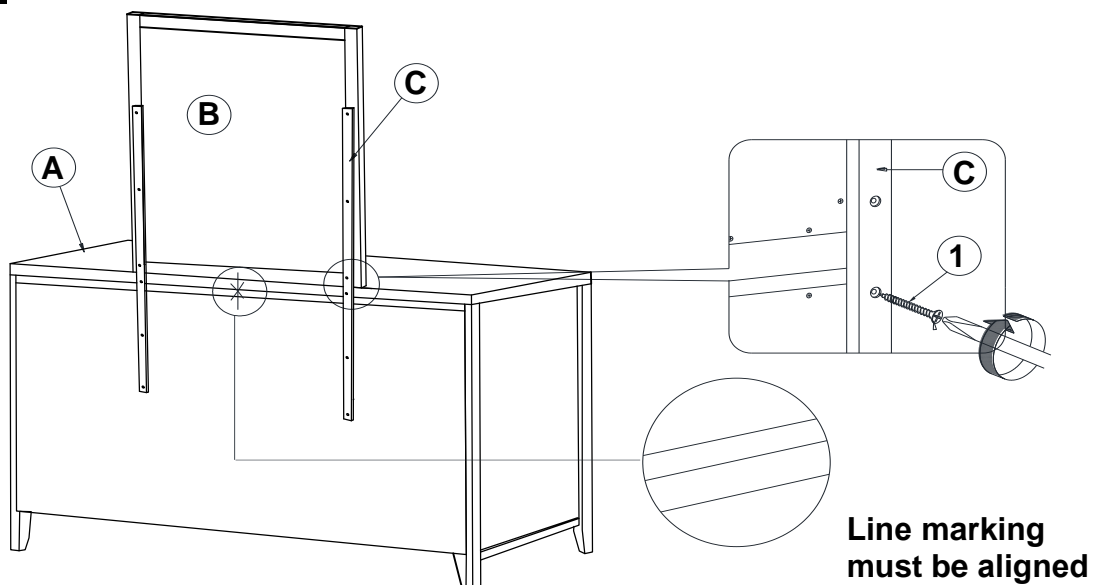


### STEP 3 COMPLETE

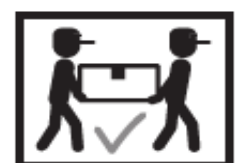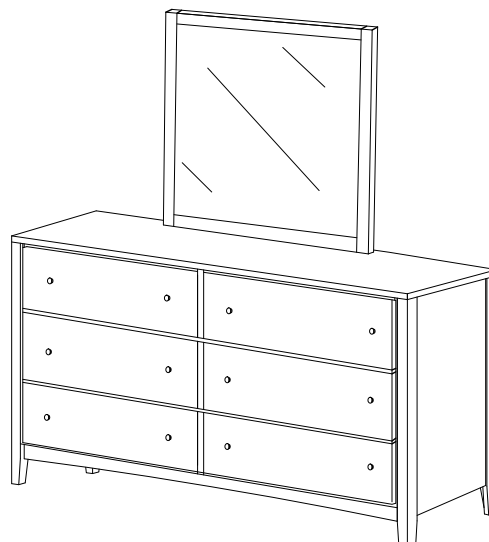



ITEM: **224424**

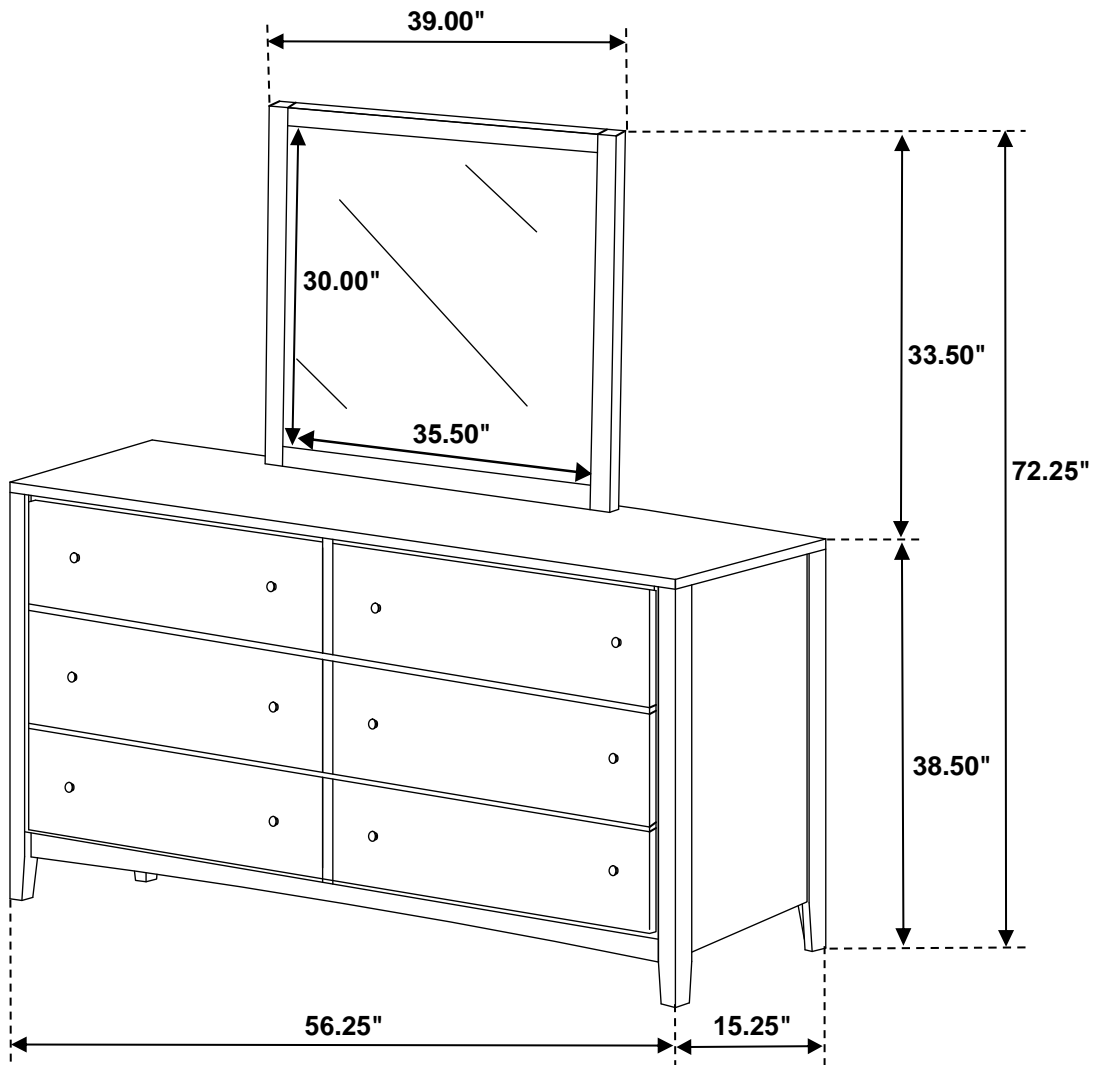

**Note: Dimension tolerance  $\pm 5\%$**