


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

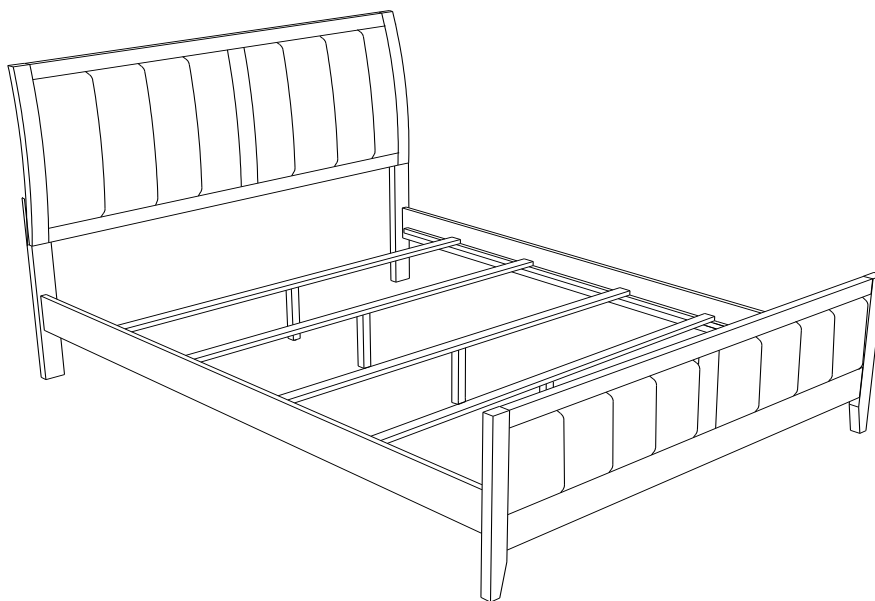

Fine Furniture for every stage of life

224421Q (B1&B2)
Queen Bed

ITEM: 224421Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL



1PC

B RIGHT
HEADBOARD
LEG




1PC

C LEFT
HEADBOARD
LEG



1PC

D FOOTBOARD

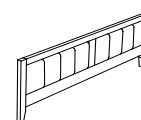

1PC

E BED SLAT



4PCS

F BED SLAT
SUPPORT WITH
LEVELER



4PCS


B2 (BOX 2)

G BED RAIL




2PCS

HB 224421Q(B1)
FROM BOX 1
HEADBOARD
COMPLETE

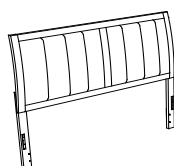

1PC

D 224421Q(B1)
FROM BOX 1
FOOTBOARD



1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224421Q (B1)

1 BOLT
(M6 x 35mm - BLK)



6PCS

2 LOCK WASHER
(1/4" - BLK)



6PCS

3 FLAT WASHER
(1/4"ID x 13mm - BLK)



6PCS

4 ALLEN WRENCH
(M4 x 65mm - BLK)



1PC

5 FLAT HEAD
SCREW
(M4 x 32mm - RBW)




8PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

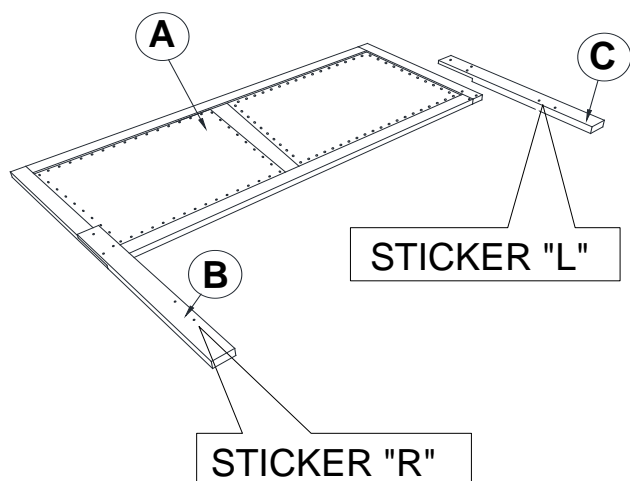

****BACK VIEW****


Note: Please take note of the marking sticker (L & R) on the headboard legs.

STEP 2

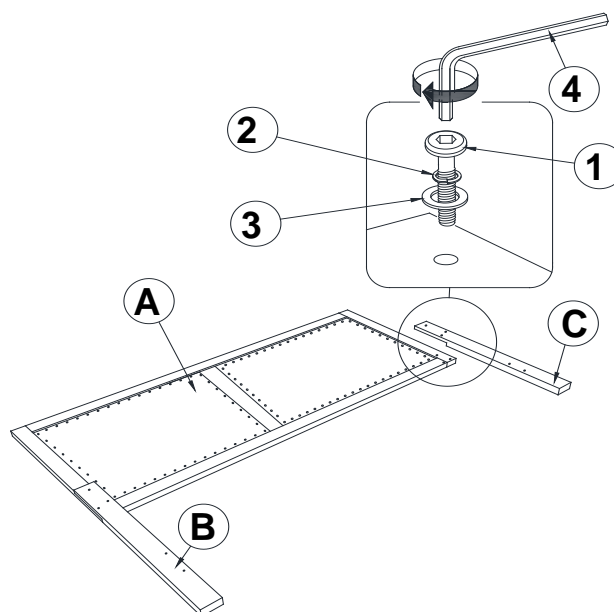


****BACK VIEW****

STEP 3

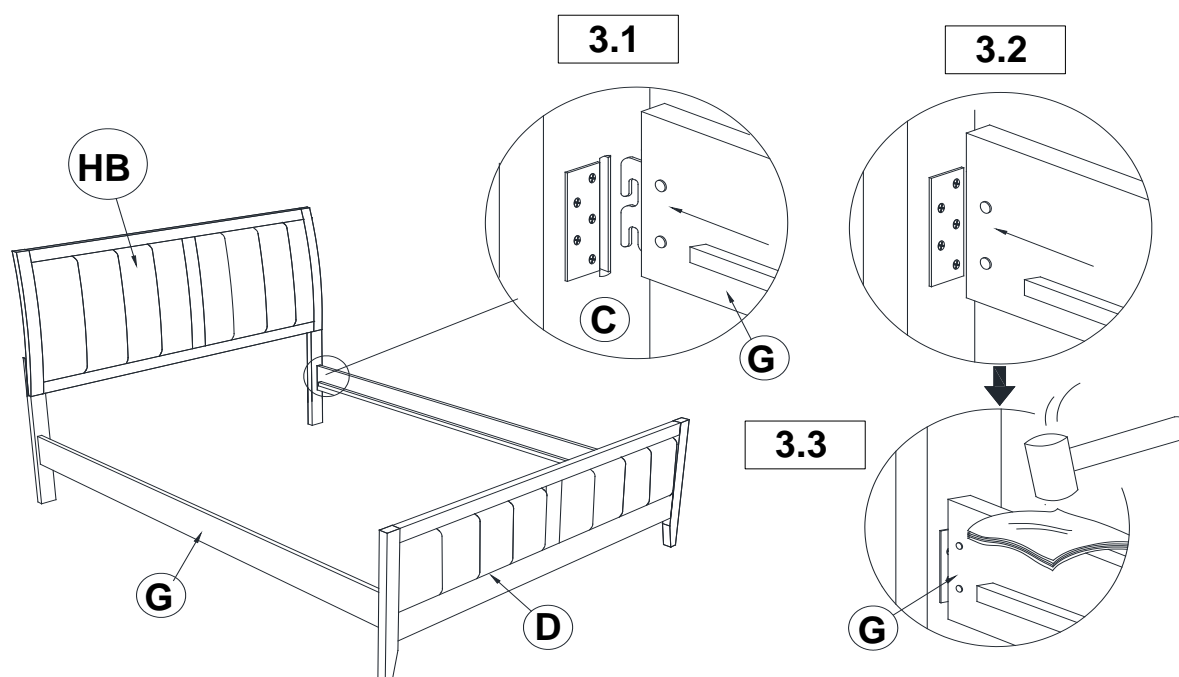


ASSEMBLY INSTRUCTIONS


STEP 4

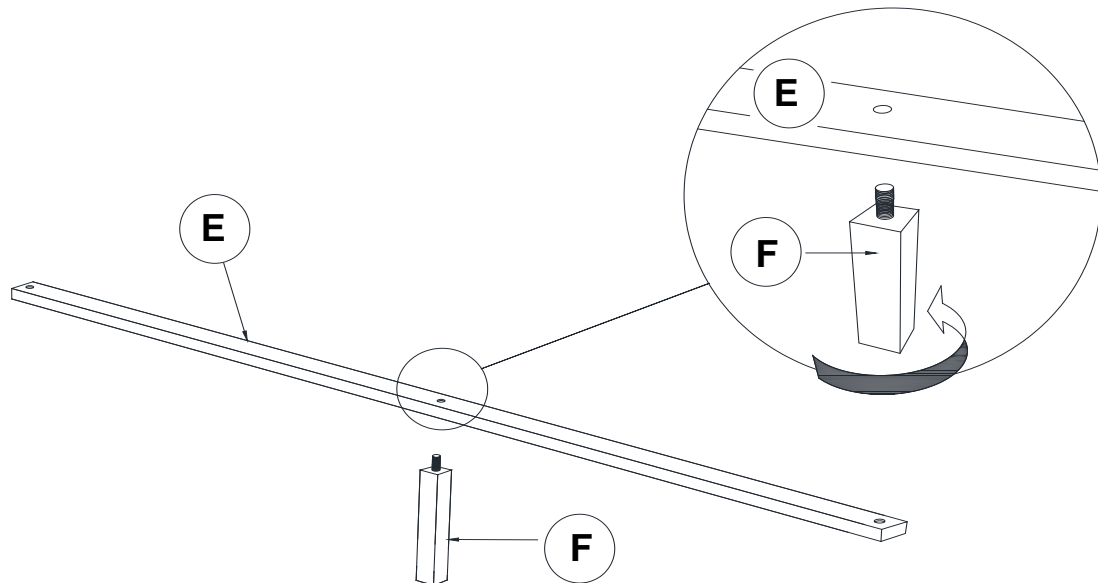

STEP 5

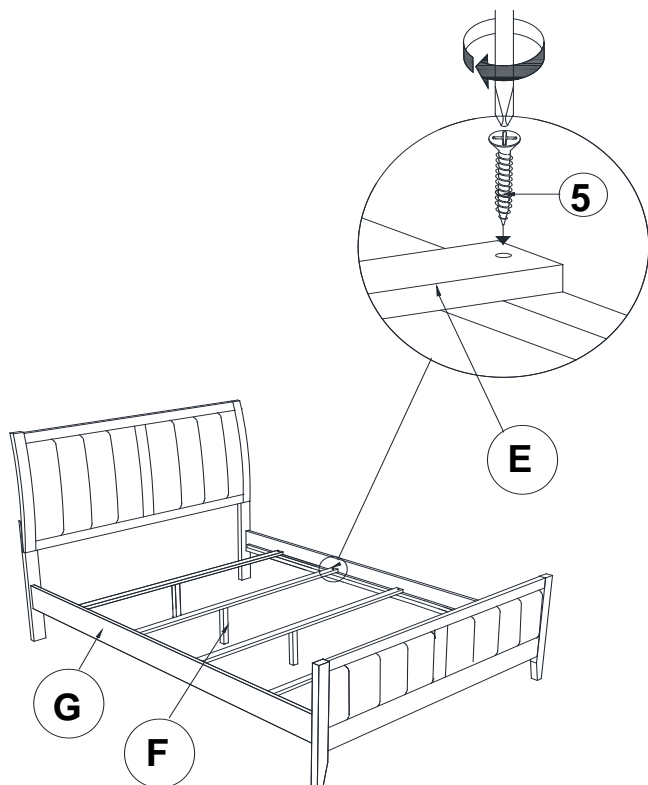


STEP 6
COMPLETE

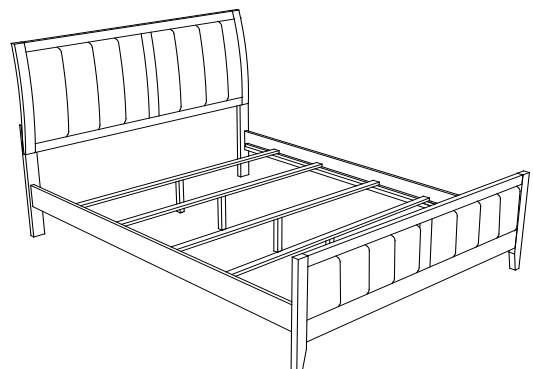

ITEM: **224421Q**




Inner Size : 61.00"W x 81.00"D

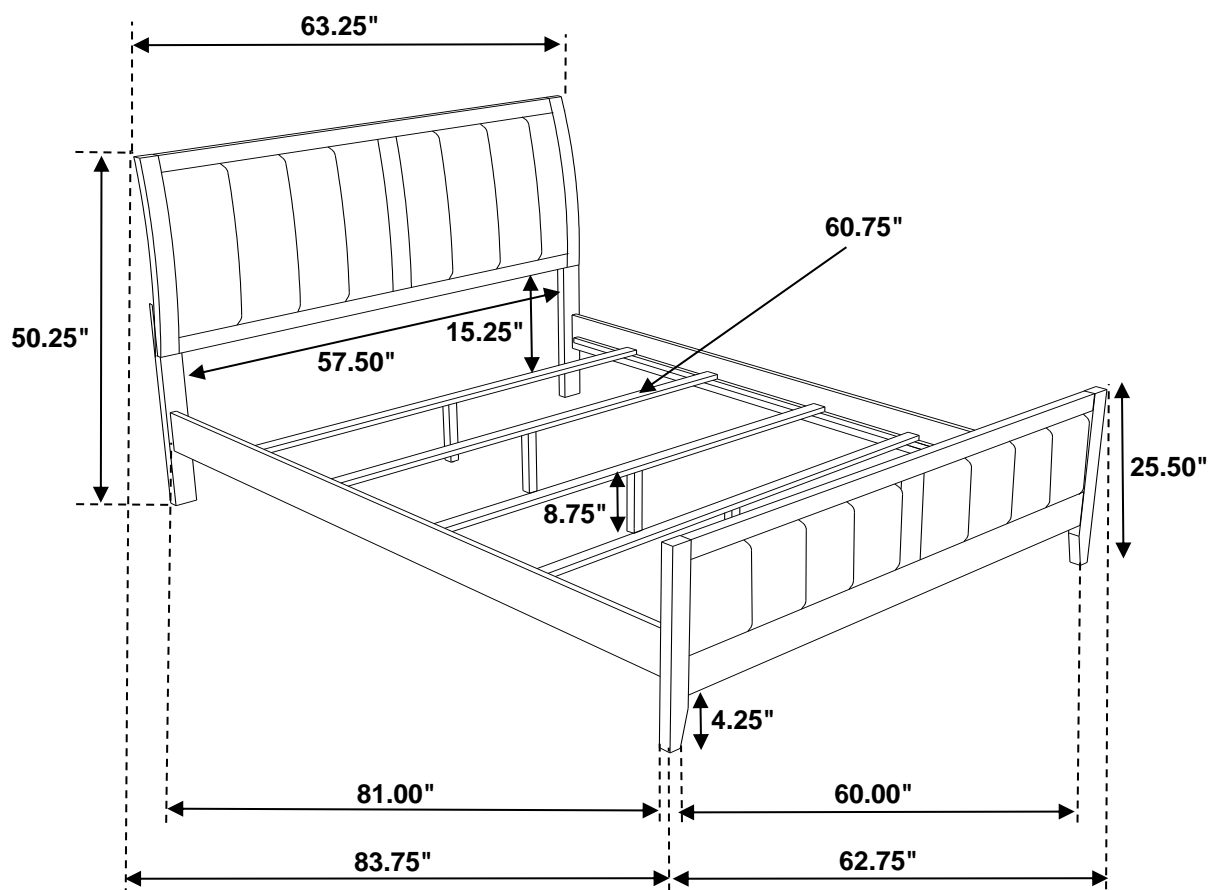

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

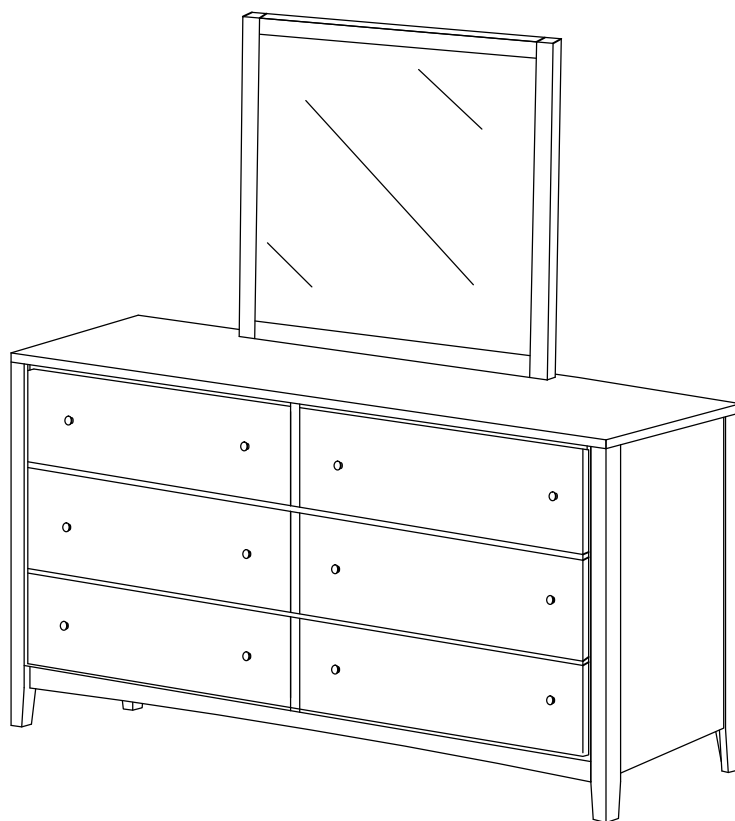

Fine Furniture for every stage of life

224424
Mirror

ITEM: **224424**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A **DRESSER**
*FROM BOX ITEM # 224423



1PC

B **MIRROR**

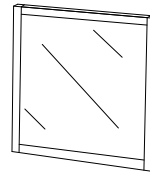

1PC

C **MIRROR SUPPORT**
(PACK WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 **FLAT HEAD SCREW**
(M4 x 32mm - RBW)



10PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224424**


ASSEMBLY INSTRUCTIONS





STEP 1

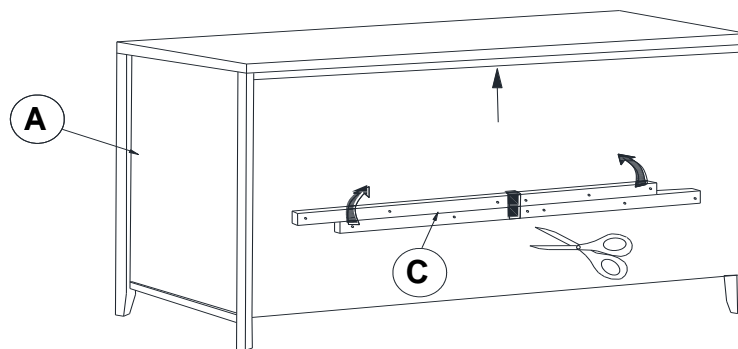


STEP 2

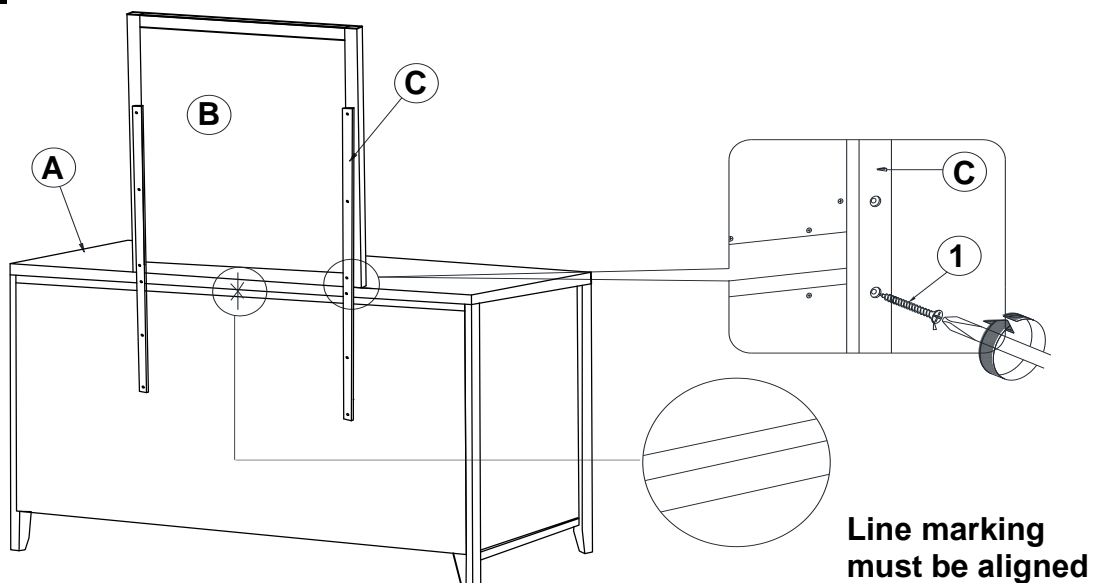

STEP 3 **COMPLETE**

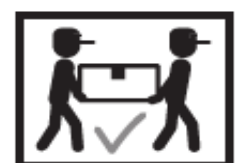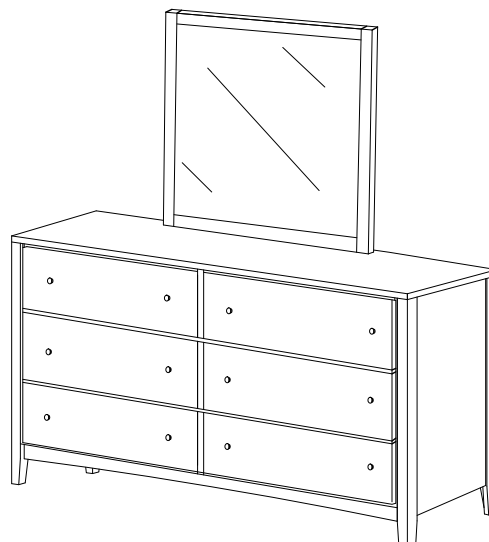

ITEM: **224424**

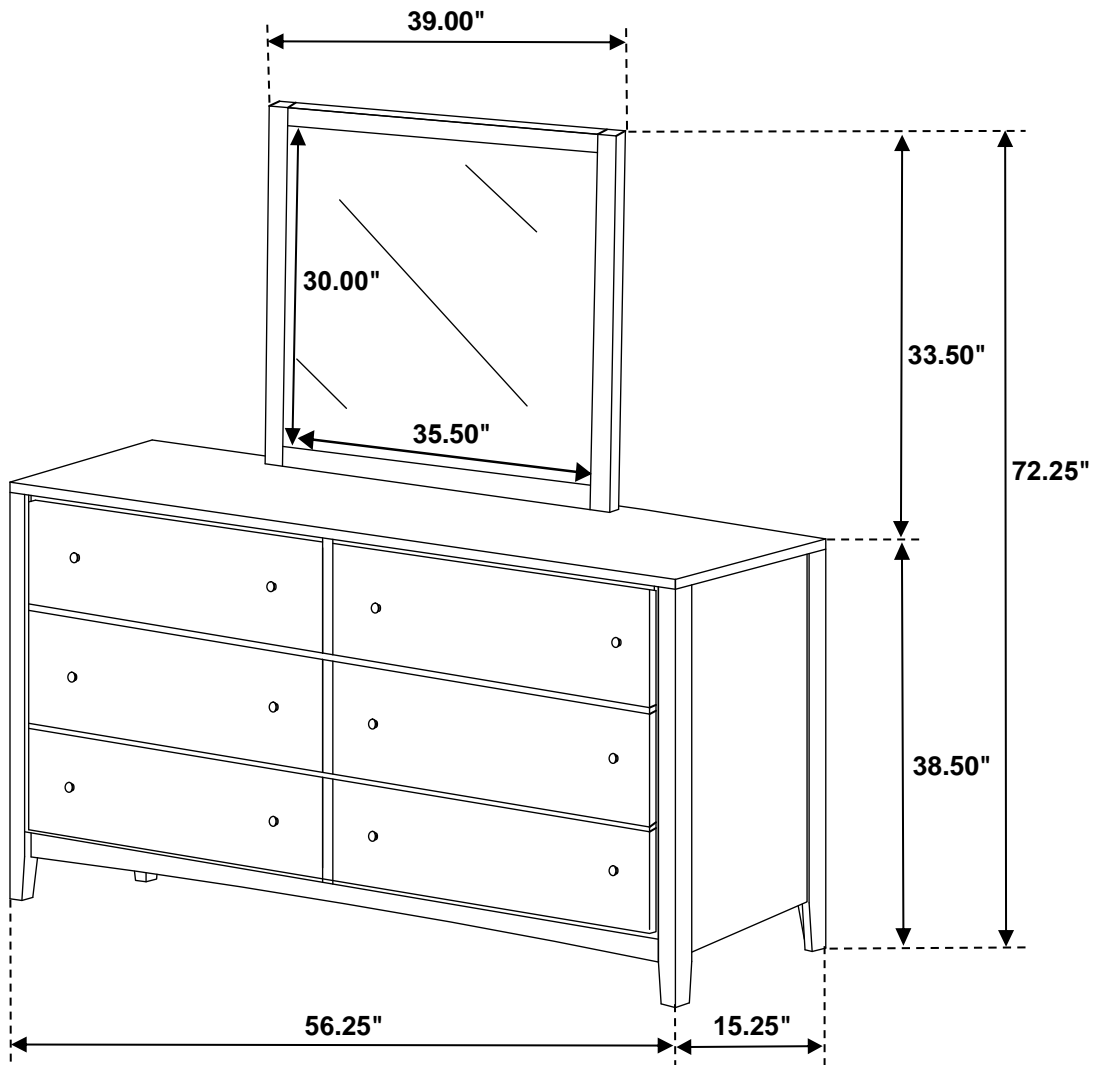

Note: Dimension tolerance $\pm 5\%$