



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for very stage of life

224471KE(B1-B3)
Eastern King Bed

ITEM: 224471KE(B1-B3)

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

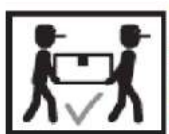


ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL

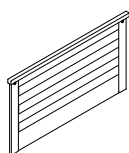

1PC

B HEADBOARD
BOTTOM RAIL



1PC

C RIGHT
HEADBOARD LEG



1PC


D LEFT
HEADBOARD LEG



1PC

B2 (BOX 2)

E FOOTBOARD

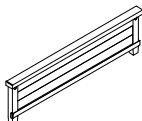

1PC


B3 (BOX 3)

F BED RAIL



2PCS

G BED SLAT




4PCS

H BED SLAT SUPPORT
WITH LEVELER




8PCS

HB 224471KE (B1)
FROM BOX 1
HEADBOARD
COMPLETE

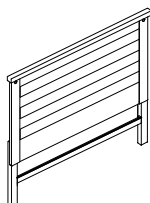

1PC

FB 224471KE (B2)
FROM BOX 2
FOOTBOARD

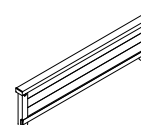

1PC

ITEM: 224471KE(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.







WARNING!







- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224471KE (B1)

1	BOLT (Ø5/16" x 50MM-RBW)		8PCS	3	FLAT WASHER (Ø5/16" x 19 x 2MM - RBW)		8PCS
2	LOCK WASHER (Ø5/16" x 14 x 2MM - RBW)		8PCS	4	ALLEN WRENCH (M4 x 58MM- RBW)		1PC


Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224471KE (B3)

5	THREADED BOLT (Ø5/16" x 90MM - RBW)		8PCS	8	HEX NUT (Ø5/16" x12 x 18MM - RBW)		8PCS
6	LOCK WASHER (Ø5/16" x 14 x 2MM - RBW)		8PCS	9	WRENCH (M12 x L90MM - RBW)		1PC
7	FLAT WASHER (Ø5/16" x 19 x 2MM - RBW)		8PCS	10	FLAT HEAD SCREW (Ø8" x 30MM - RBW)		8PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224471KE(B1-B3)**
ASSEMBLY INSTRUCTIONS
STEP 1

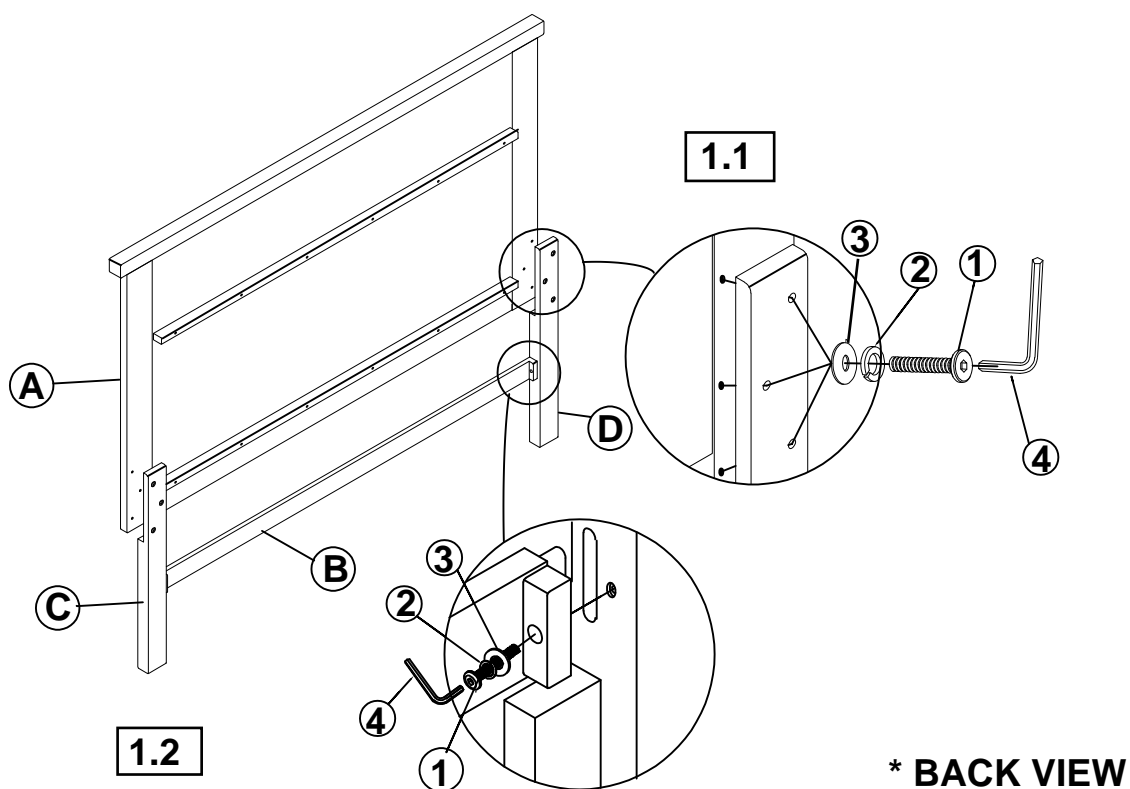

STEP 2


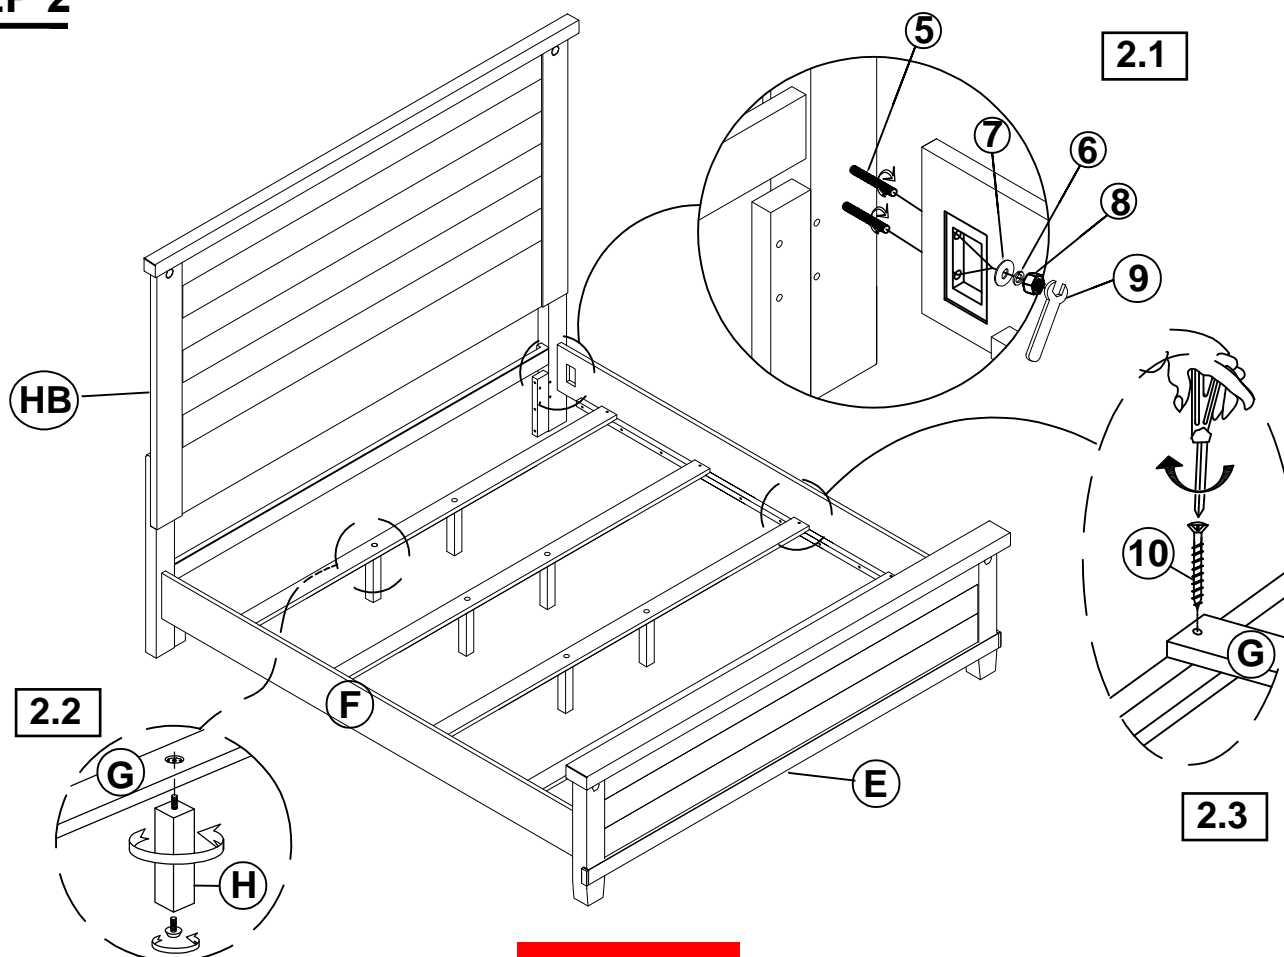


ITEM: **224471KE(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

COMPLETE

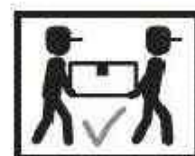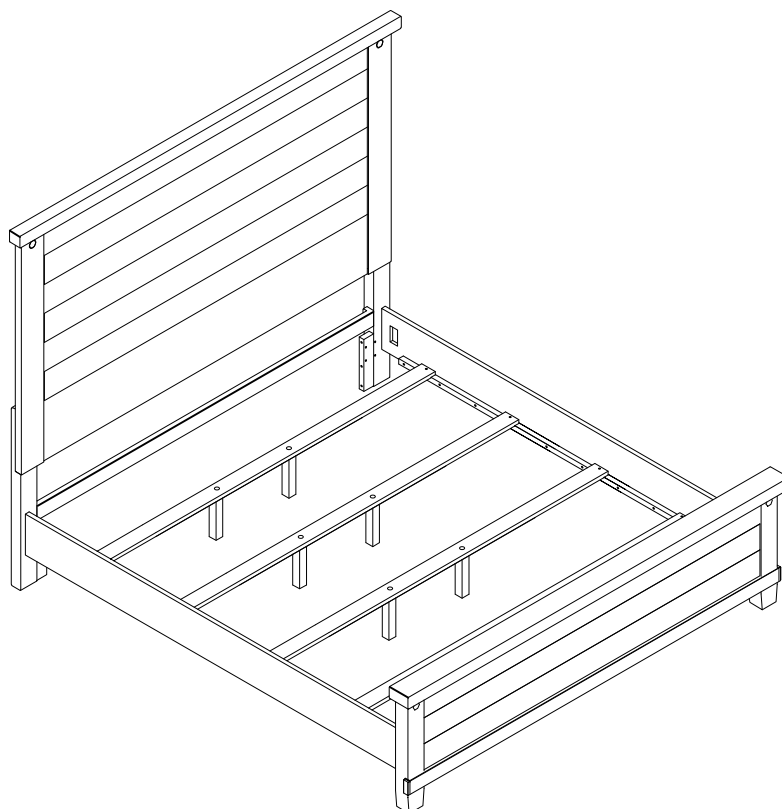



Technical drawing of a bed frame showing dimensions in inches. The drawing includes the following measurements:

- Overall width: 83.50"
- Overall height: 68.25"
- Headboard height: 8.00"
- Headboard width: 73.75"
- Headboard depth: 77.00"
- Footboard height: 23.50"
- Footboard width: 74.00"
- Footboard depth: 81.00"
- Bed base height: 6.25"
- Bed base width: 82.00"
- Bed base depth: 88.00"
- Bed base height (at footboard): 4.00"
- Bed base width (at footboard): 77.00"
- Bed base depth (at footboard): 81.00"

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224472
Nightstand

ITEM: **224472**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

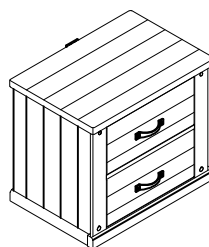

1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(Ø5/16" x 76MM-RBW)



4PCS

2 LOCK WASHER
(Ø5/16" x 14 x 2MM - RBW)



4PCS

3 FLAT WASHER
(Ø5/16" x 19 x 2MM - RBW)



4PCS

4 ALLEN WRENCH
(M4 x 58MM- RBW)




1PC


ITEM: **224472**
ASSEMBLY INSTRUCTIONS



STEP 1

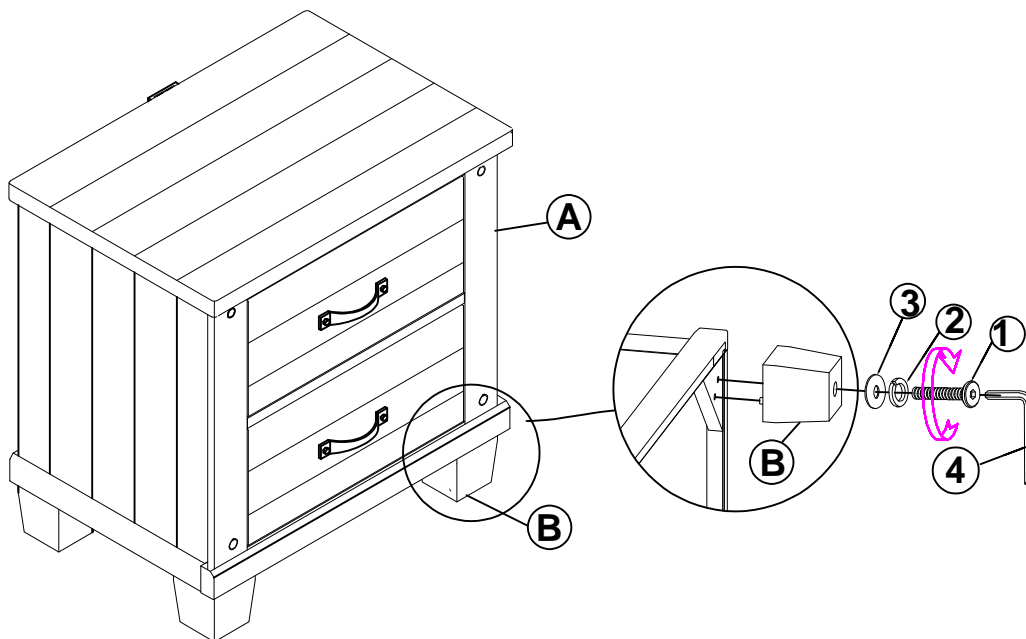

STEP 2
COMPLETE


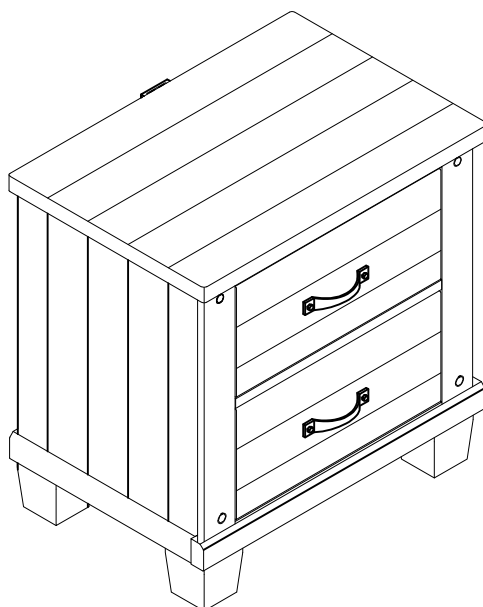


ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

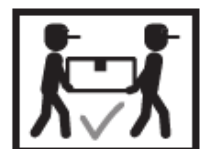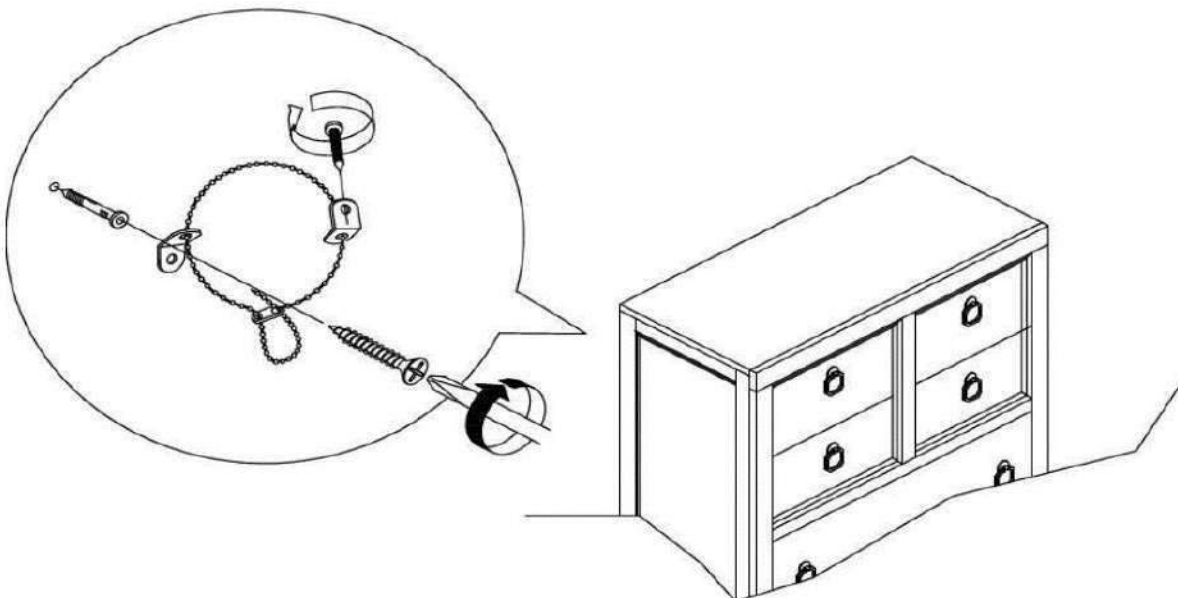

ITEM: **224472**



Inner Size of Drawer : 17.00"W X 13.25"D X 7.50"H X 0.25"T

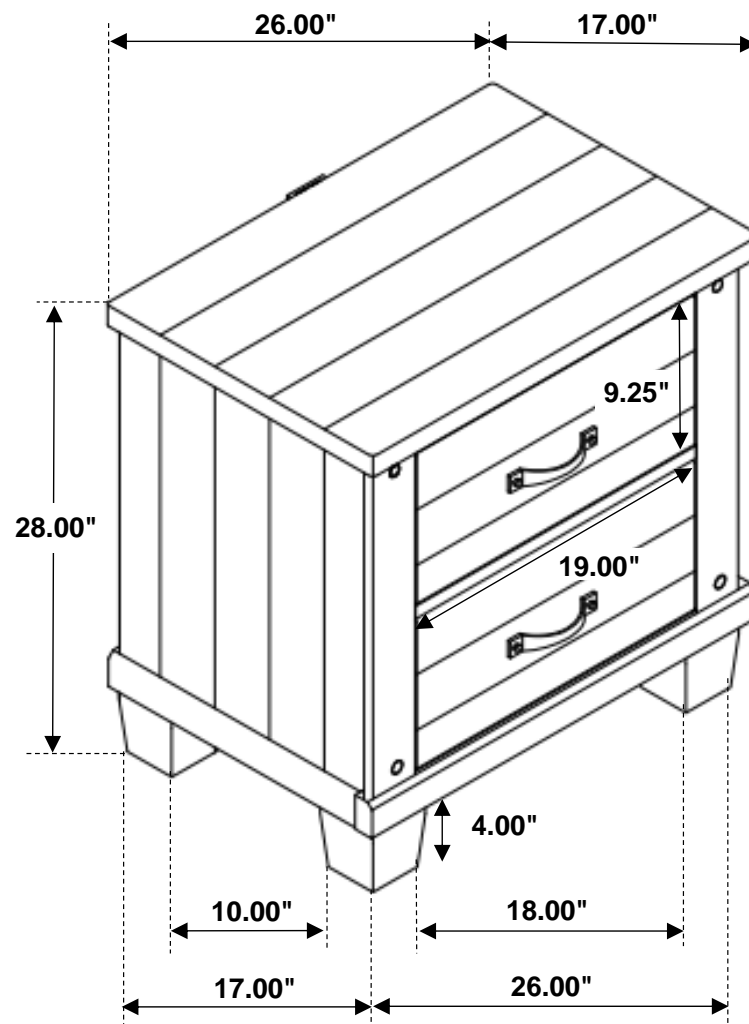

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224473
Dresser

ITEM: **224473**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A DRESSER

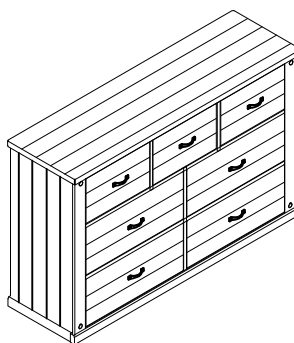


1PC

B LEG



4PCS

C CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(Ø5/16" x 76MM-RBW)



4PCS

2 LOCK WASHER
(Ø5/16" x 14 x 2MM - RBW)



4PCS

3 FLAT WASHER
(Ø5/16" x 19 x 2MM - RBW)



4PCS

4 ALLEN WRENCH
(M4 x 58MM- RBW)




1PC



ITEM: **224473**
ASSEMBLY INSTRUCTIONS



STEP 1

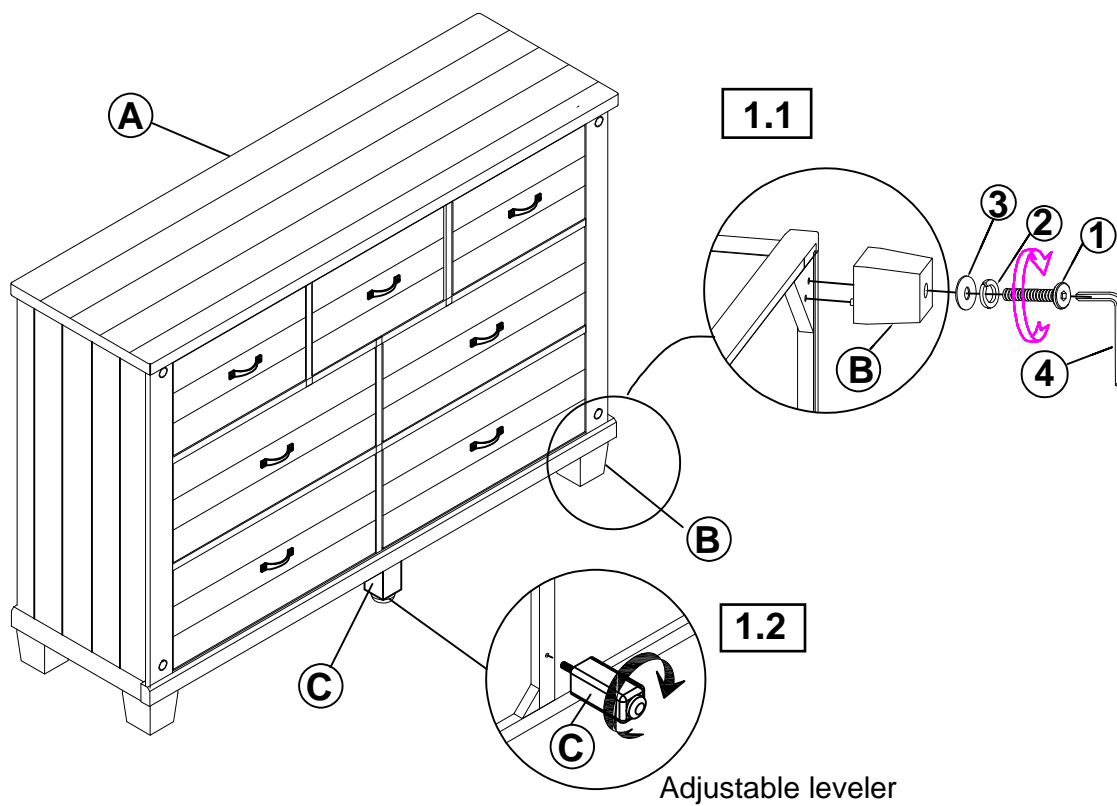

STEP 2
COMPLETE

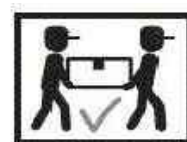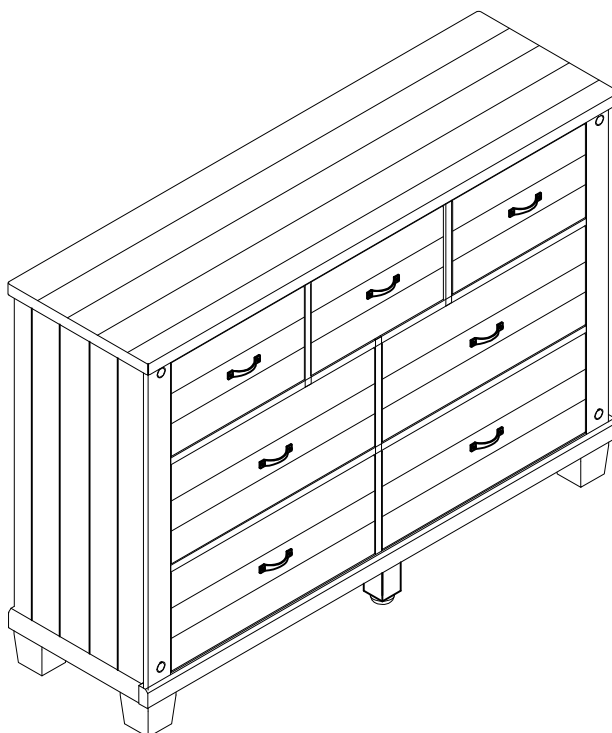


ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

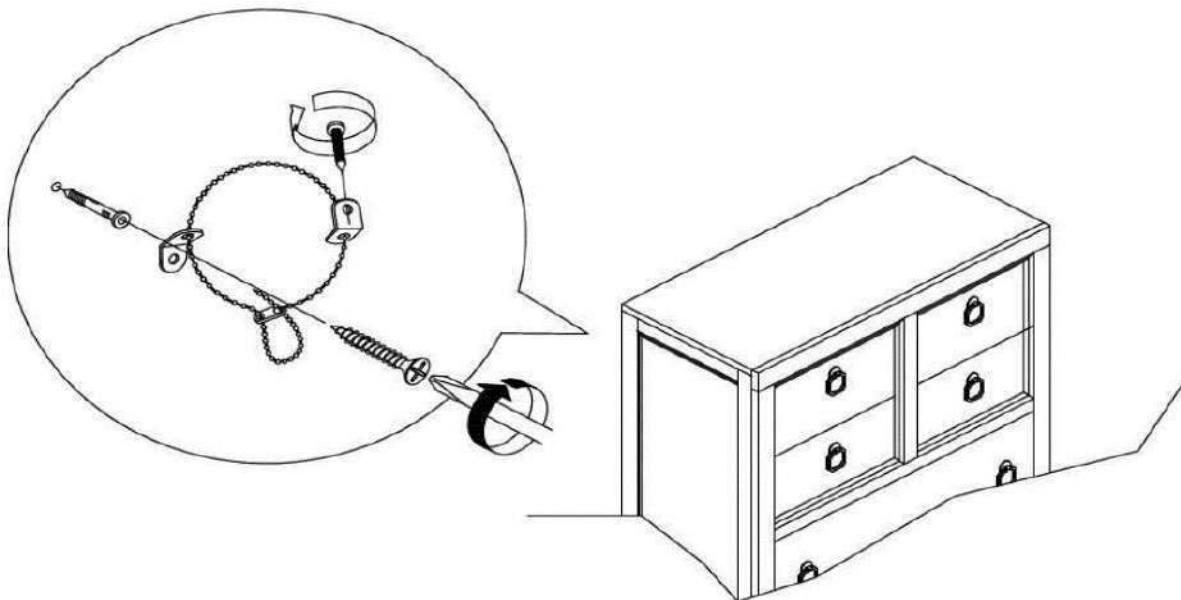


ITEM: **224473**



Inner Size of Drawer A : 15.25"W X 13.25"D X 8.00"H X 0.25"T

Inner Size of Drawer B : 24.25"W X 13.25"D X 9.00"H X 0.25"T

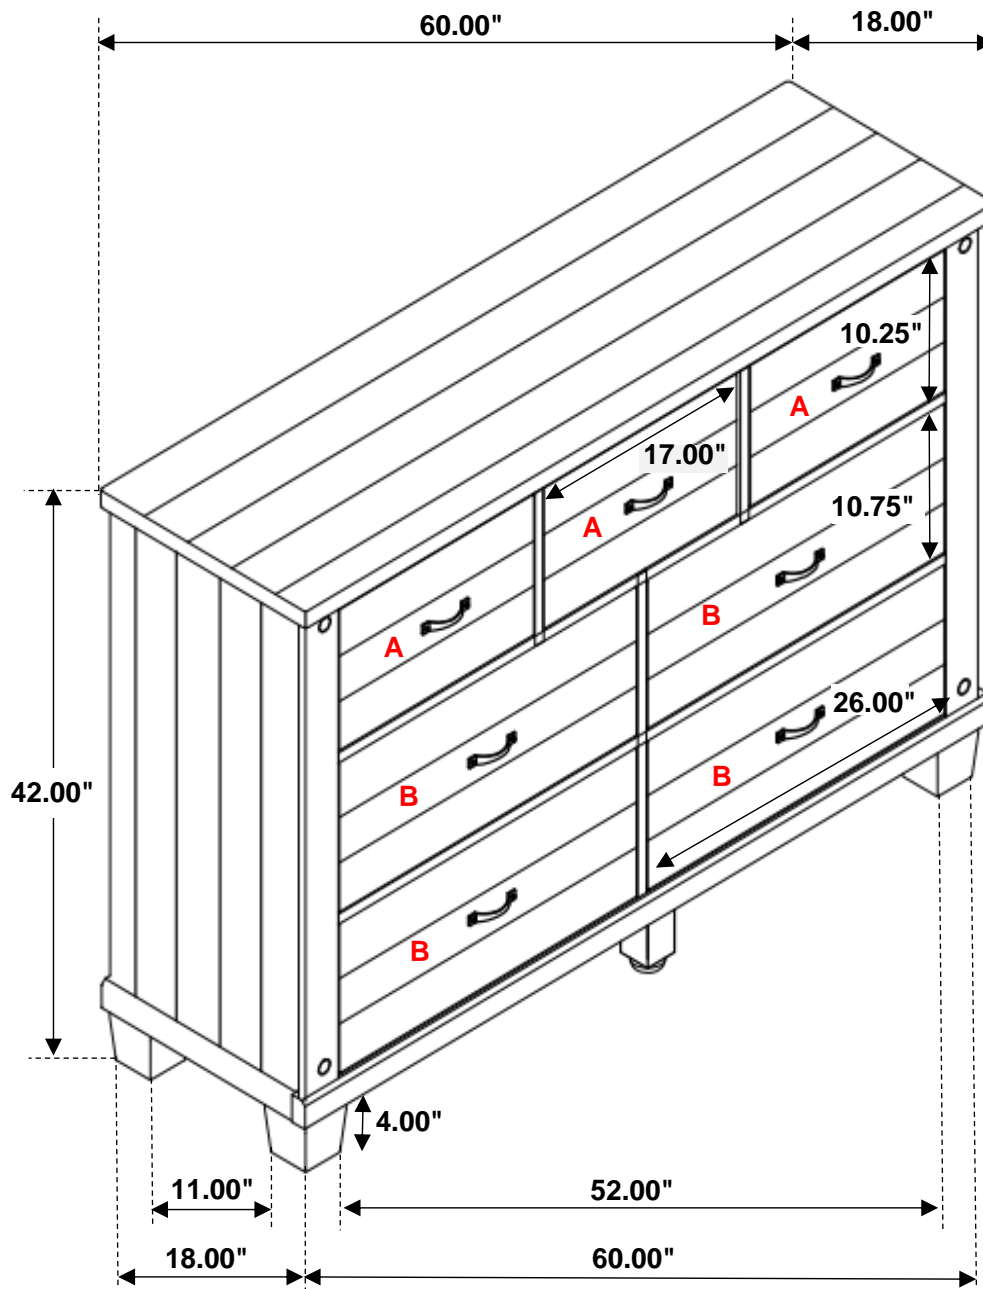

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224474
Mirror

ITEM: **224474**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A


DRESSER
FROM BOX ITEM#224473

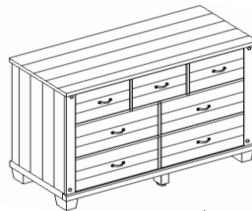

1PC

B

MIRROR

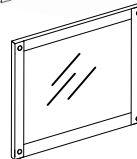

1PC

C

MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1

BOLT
(Ø1/4" x 38MM - RBW)



6PCS

2

LOCK WASHER
(Ø1/4" x 11 x 2MM - RBW)



6PCS

3

FLAT WASHER
(Ø1/4" x 19 x 2MM - RBW)



6PCS

4

ALLEN WRENCH
(M4 x 58MM - RBW)




1PC

ITEM: **224474**

ASSEMBLY INSTRUCTIONS





STEP 1

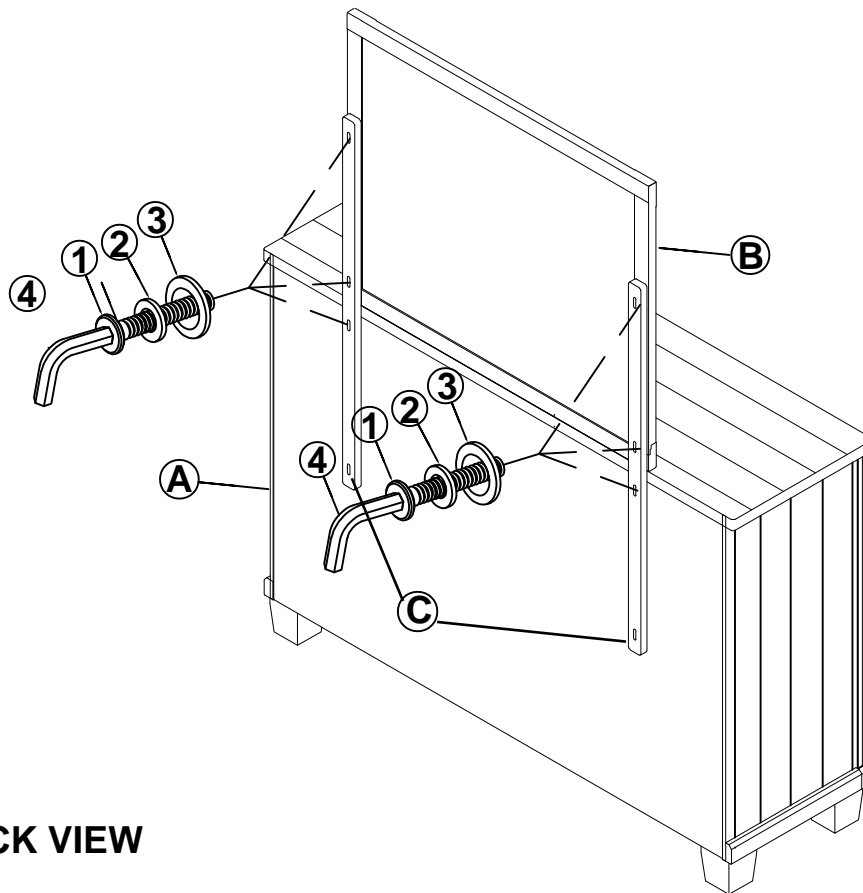


* BACK VIEW

STEP 2 COMPLETE

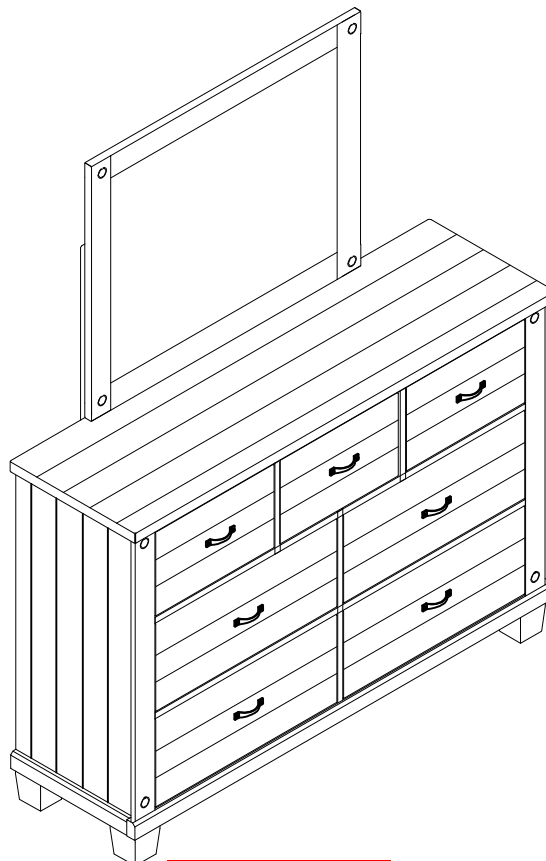

ITEM: **224474**

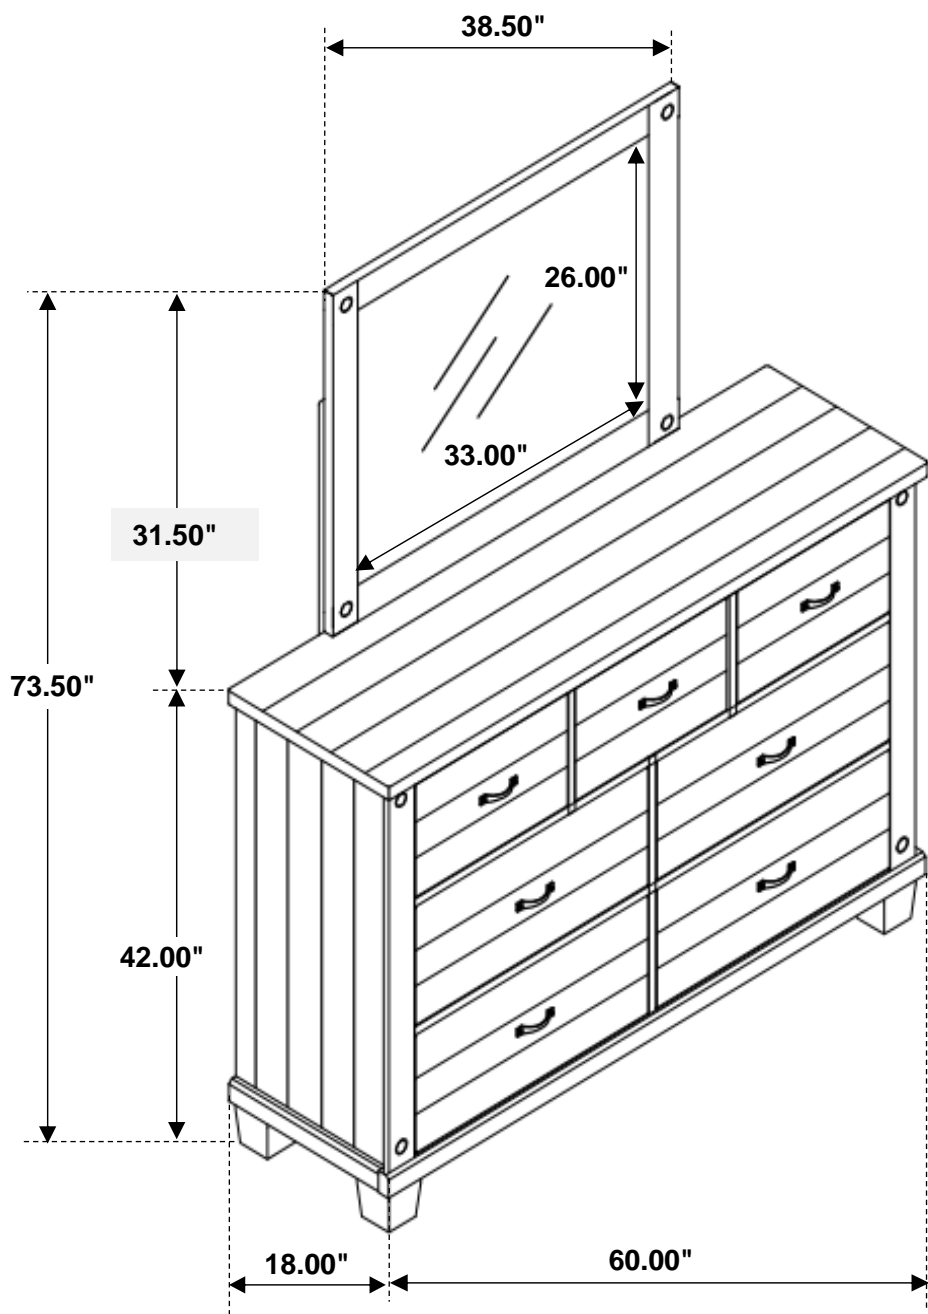

Note: Dimension tolerance $\pm 5\%$