




## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

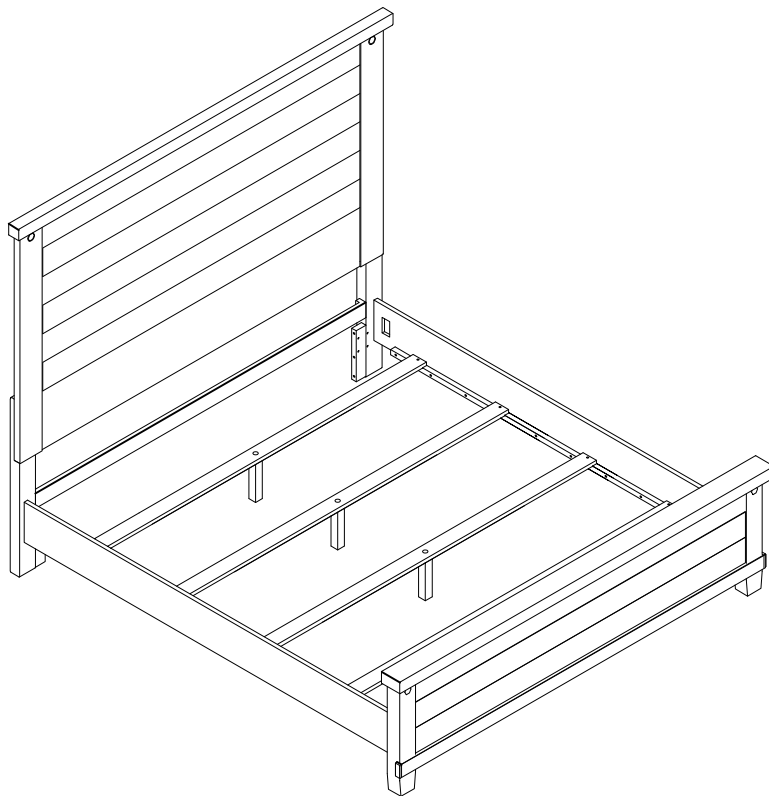

*Fine Furniture for every stage of life*

**224471Q(B1-B3)**  
***Queen Bed***

# ITEM: 224471Q(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD PANEL

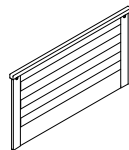


1PC

B HEADBOARD  
BOTTOM RAIL



1PC

C RIGHT  
HEADBOARD LEG



1PC


D LEFT  
HEADBOARD LEG



1PC

### B2 (BOX 2)

E FOOTBOARD

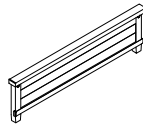

1PC


### B3 (BOX 3)

F BED RAIL



2PCS

G BED SLAT




4PCS

H BED SLAT SUPPORT  
WITH LEVELER




4PCS

HB 224471Q (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

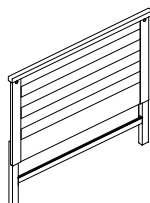

1PC

FB 224471Q (B2)  
FROM BOX 2  
FOOTBOARD

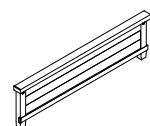

1PC

# ITEM: 224471Q(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.







### WARNING!







- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224471Q (B1)

1	<b>BOLT</b> (Ø5/16" x 50MM-RBW)		8PCS	3	<b>FLAT WASHER</b> (Ø5/16" x 19 x 2MM - RBW)		8PCS
2	<b>LOCK WASHER</b> (Ø5/16" x 14 x 2MM - RBW)		8PCS	4	<b>ALLEN WRENCH</b> (M4 x 58MM- RBW)		1PC

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224471Q (B3)

5	<b>THREADED BOLT</b> (Ø5/16" x 90MM - RBW)		8PCS	8	<b>HEX NUT</b> (Ø5/16" x12 x 18MM - RBW)		8PCS
6	<b>LOCK WASHER</b> (Ø5/16" x 14 x 2MM - RBW)		8PCS	9	<b>WRENCH</b> (M12 x L90MM - RBW)		1PC
7	<b>FLAT WASHER</b> (Ø5/16" x 19 x 2MM - RBW)		8PCS	10	<b>FLAT HEAD SCREW</b> (Ø8" x 30MM - RBW)		8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 224471Q(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 1

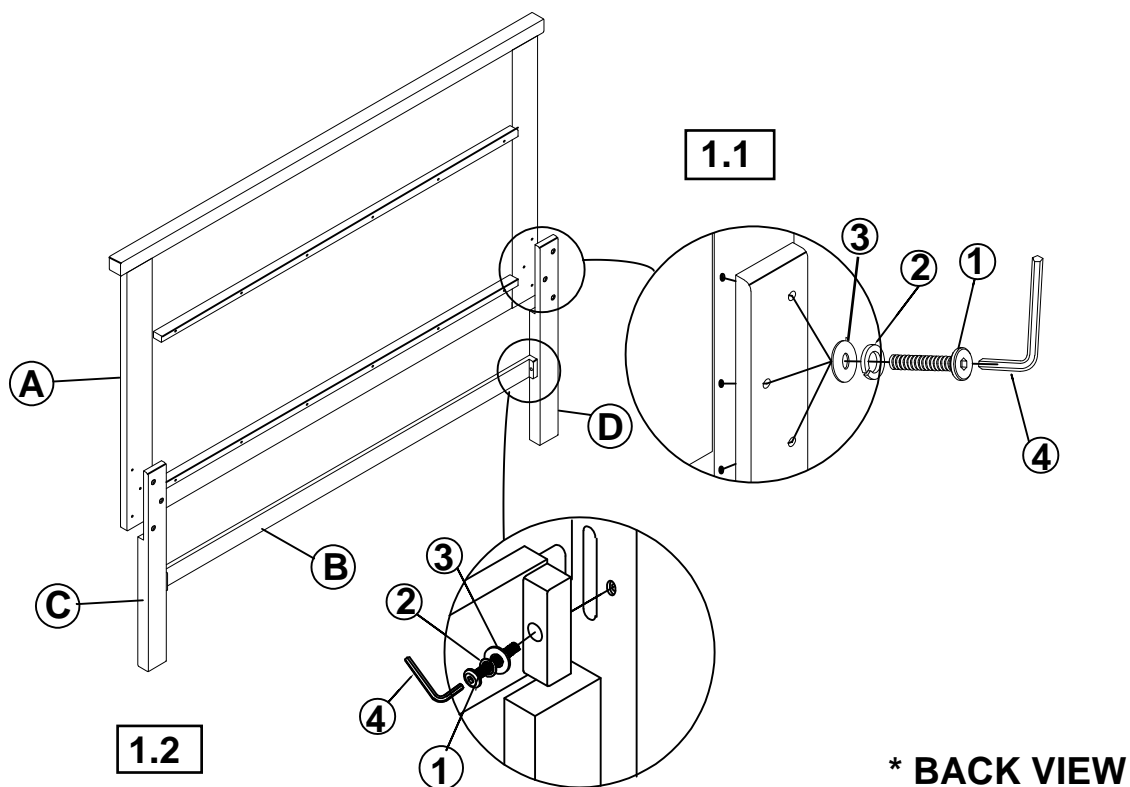

### STEP 2


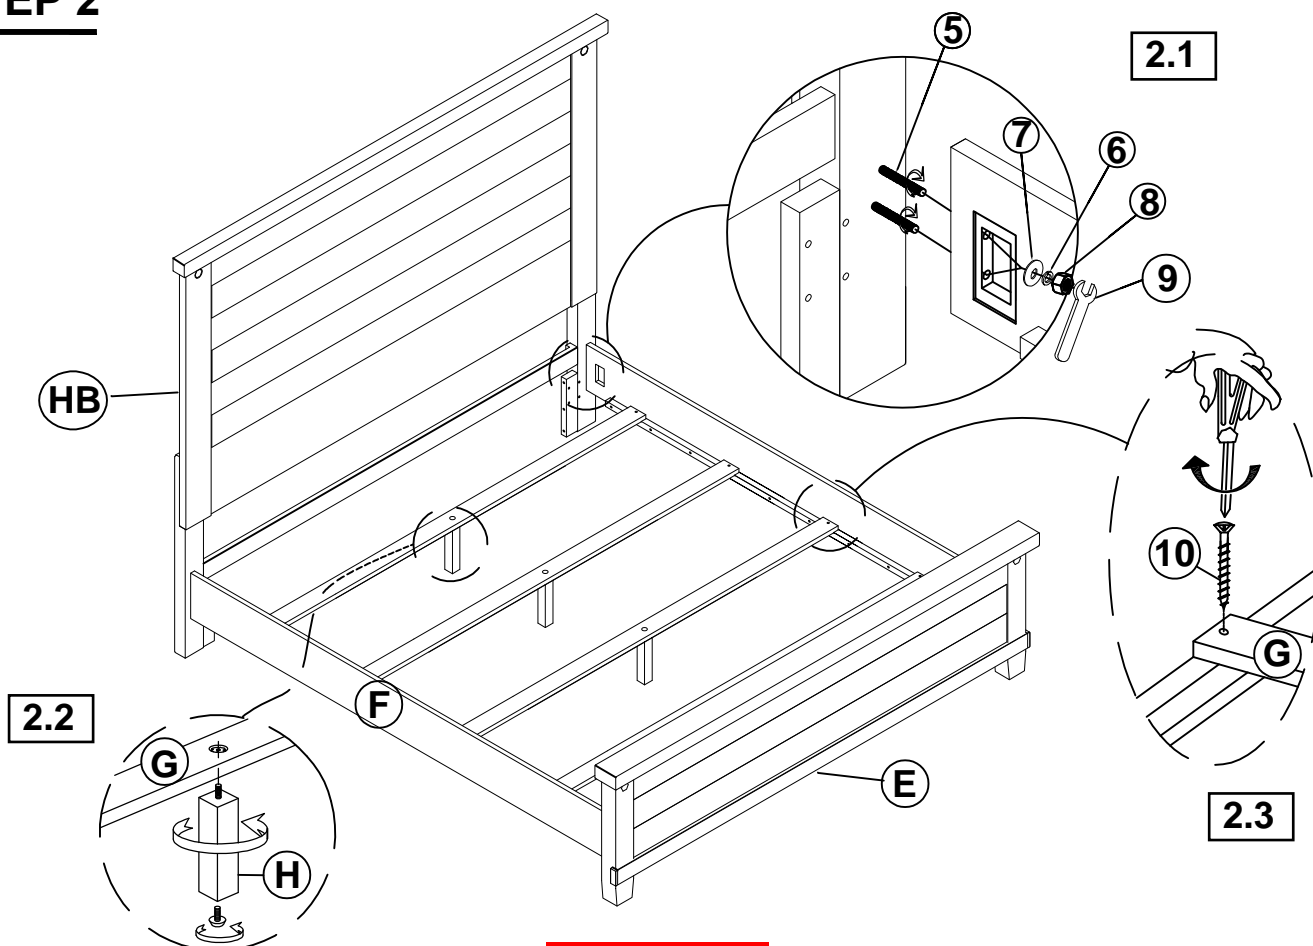


ITEM: **224471Q(B1-B3)**

ASSEMBLY INSTRUCTIONS

**STEP 3**


**COMPLETE**

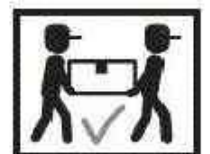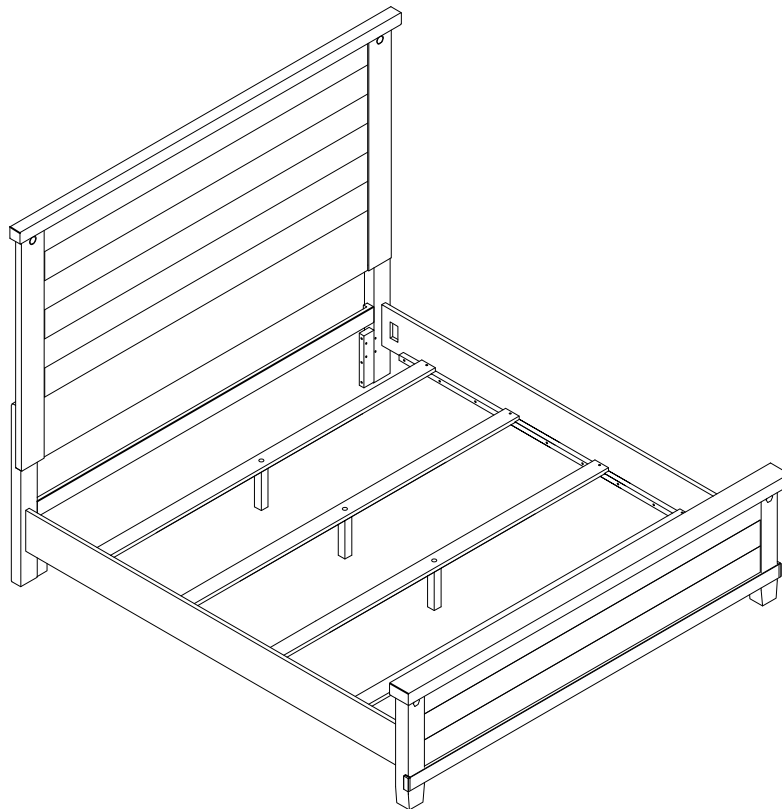

ITEM: 224471Q(B1-B3)



Inner size: 61.00"W x 82.00"D

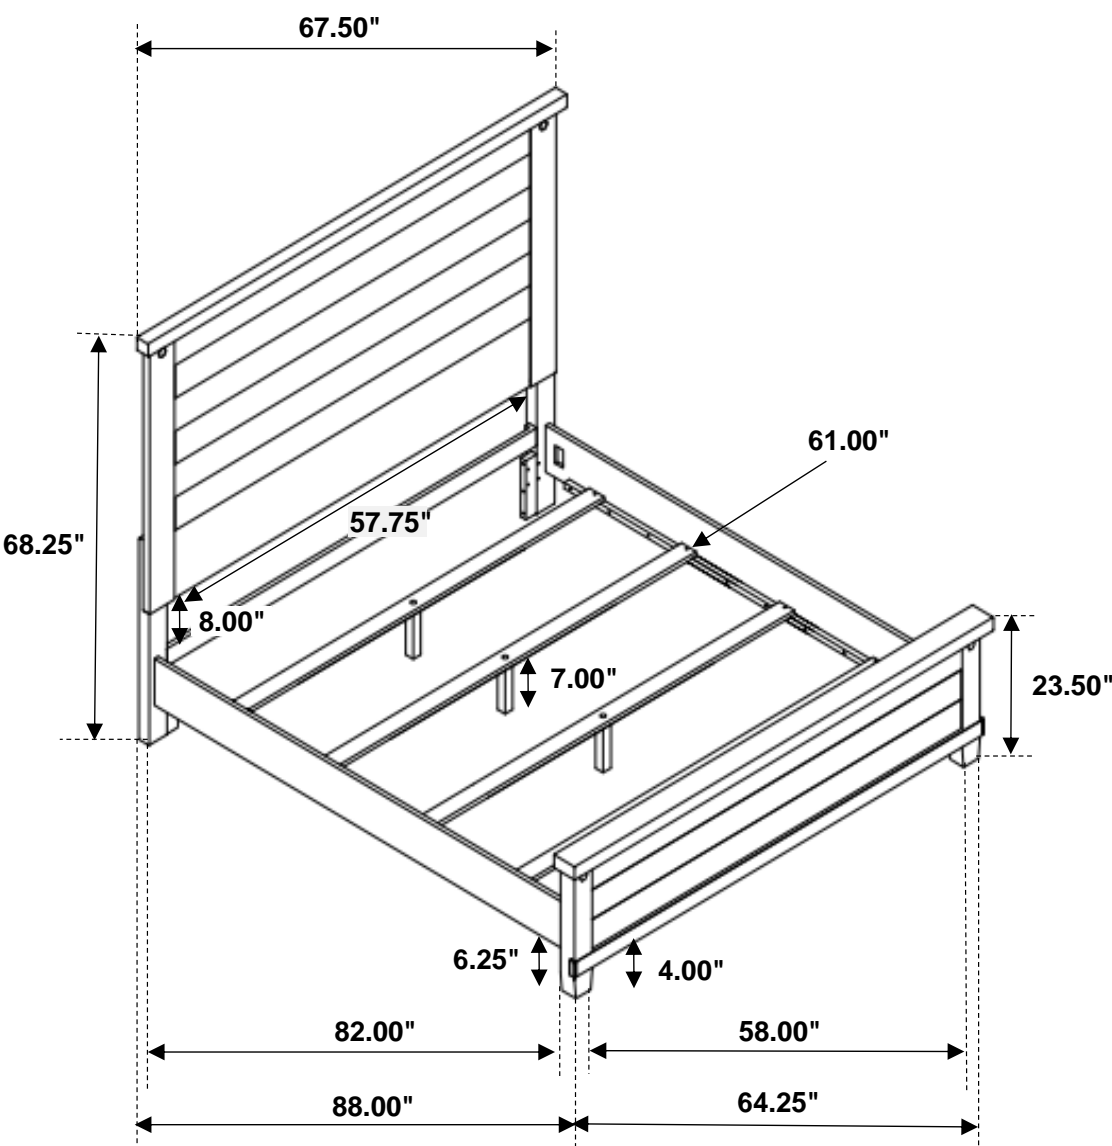

Note: Dimension tolerance  $\pm 5\%$



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224472**  
**Nightstand**

ITEM: **224472**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND

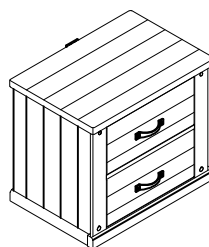

1PC

B LEG



4PCS

## HARDWARE IDENTIFICATION

1 BOLT  
(Ø5/16" x 76MM-RBW)



4PCS

2 LOCK WASHER  
(Ø5/16" x 14 x 2MM - RBW)



4PCS

3 FLAT WASHER  
(Ø5/16" x 19 x 2MM - RBW)



4PCS

4 ALLEN WRENCH  
(M4 x 58MM- RBW)




1PC




ITEM: **224472**  
**ASSEMBLY INSTRUCTIONS**



**STEP 1**

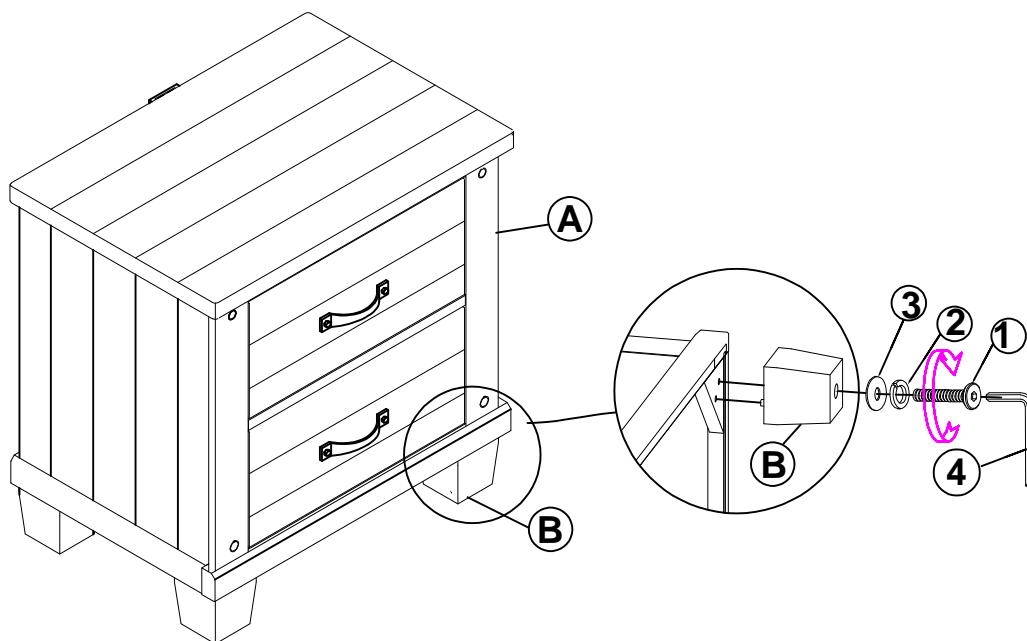

**STEP 2**  
**COMPLETE**


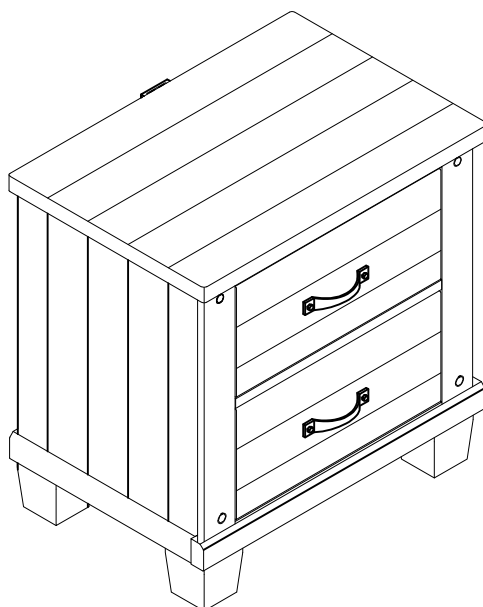


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

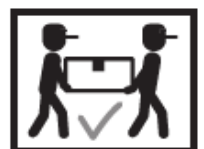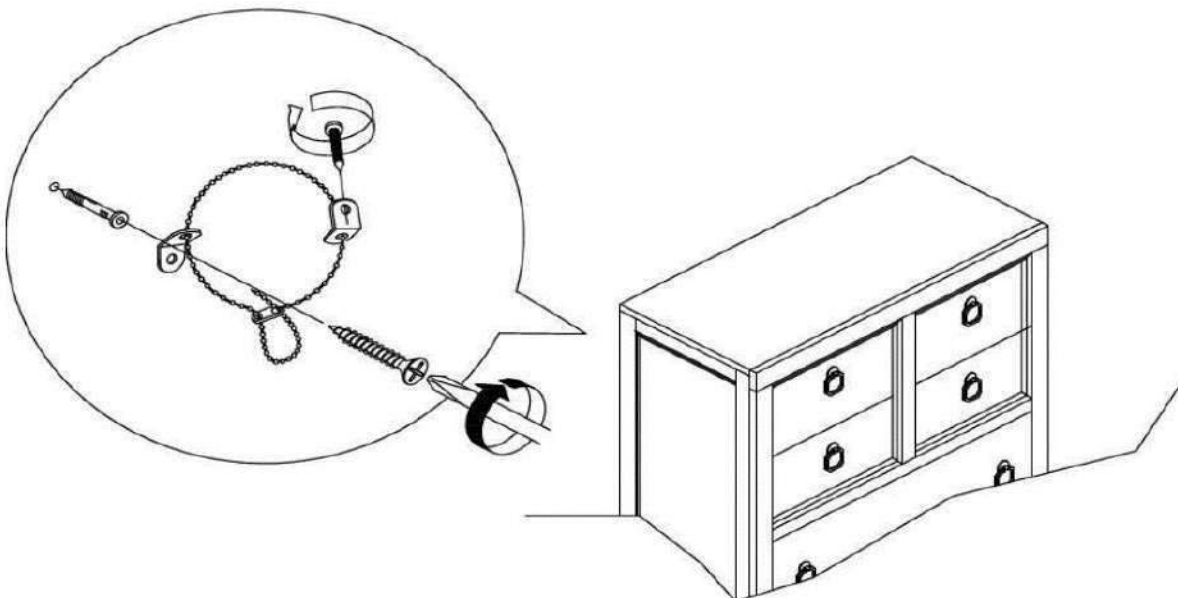

ITEM: **224472**



**Inner Size of Drawer : 17.00"W X 13.25"D X 7.50"H X 0.25"T**

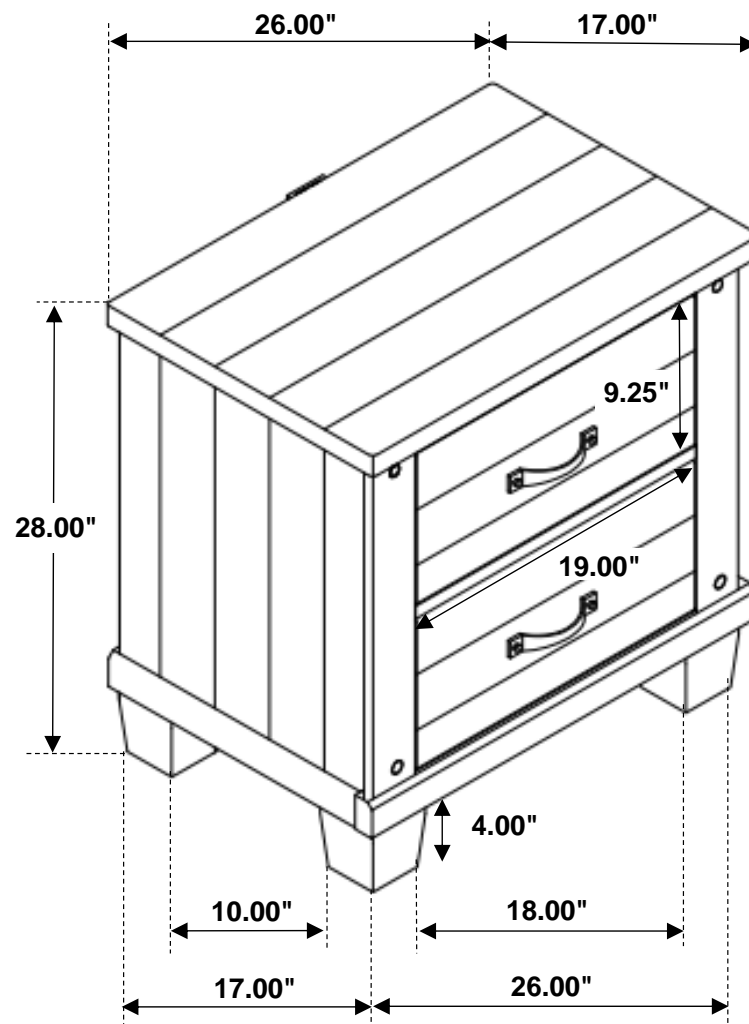

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224473**  
**Dresser**

ITEM: **224473**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

A DRESSER

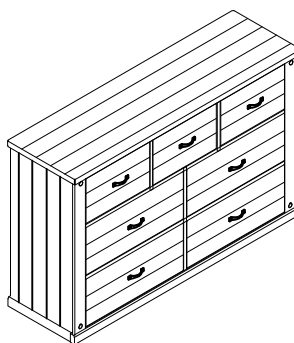


1PC

B LEG



4PCS

C CENTER SUPPORT LEG  
WITH LEVELER



1PC

## HARDWARE IDENTIFICATION

1 BOLT  
(Ø5/16" x 76MM-RBW)



4PCS

2 LOCK WASHER  
(Ø5/16" x 14 x 2MM - RBW)



4PCS

3 FLAT WASHER  
(Ø5/16" x 19 x 2MM - RBW)



4PCS

4 ALLEN WRENCH  
(M4 x 58MM- RBW)




1PC



ITEM: **224473**  
**ASSEMBLY INSTRUCTIONS**



**STEP 1**

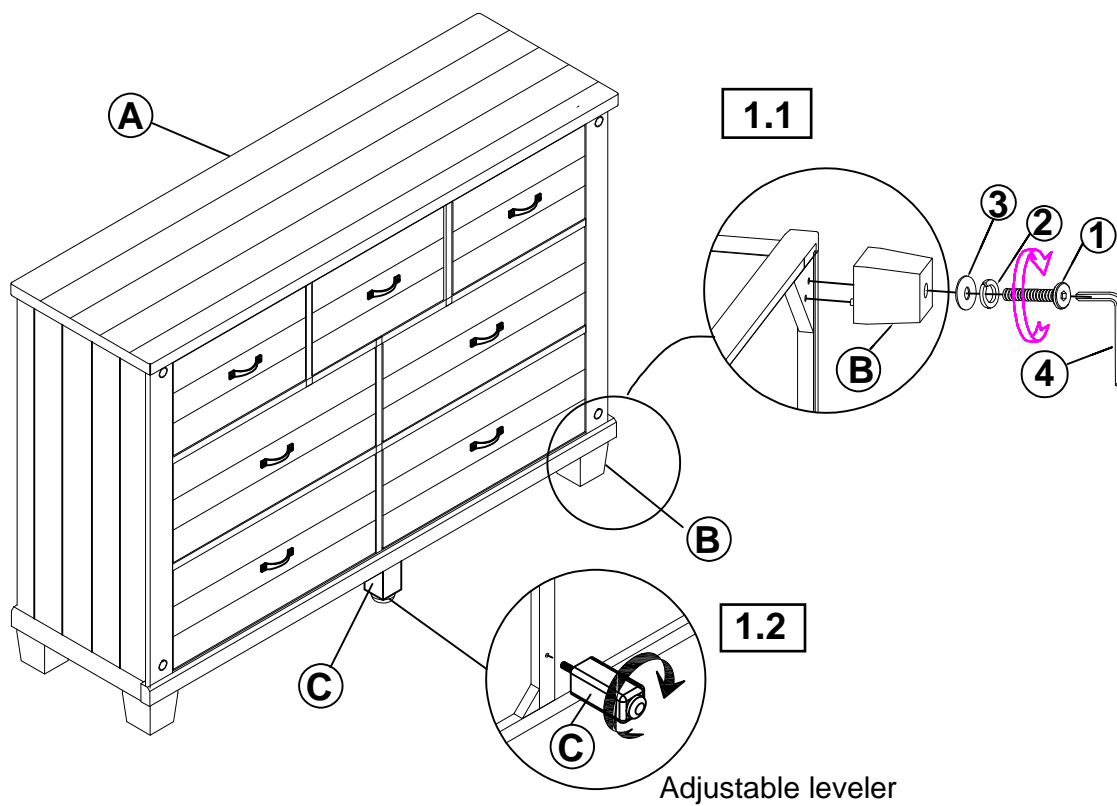

**STEP 2**  
**COMPLETE**

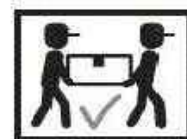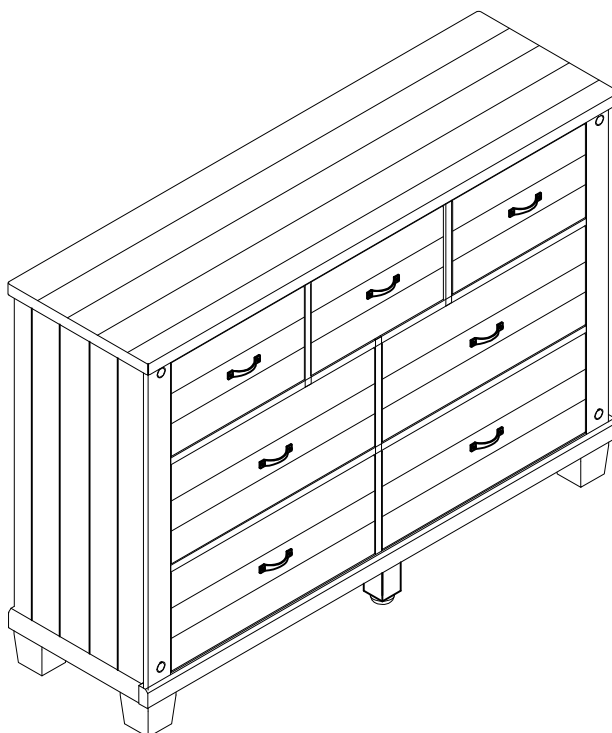


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

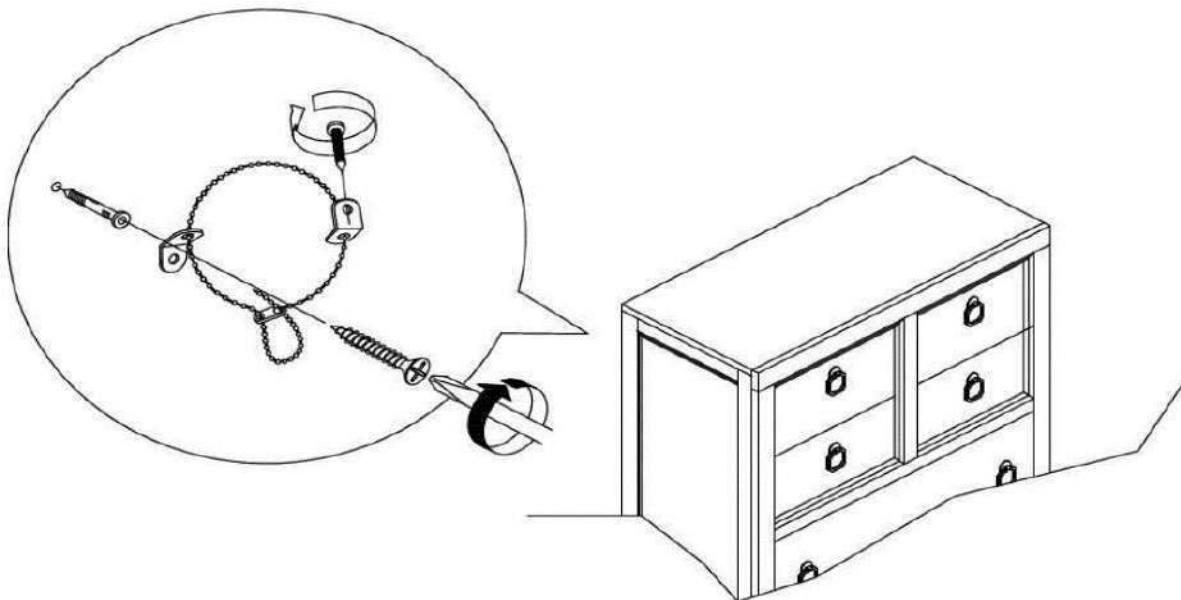


ITEM: **224473**



Inner Size of Drawer A : 15.25"W X 13.25"D X 8.00"H X 0.25"T

Inner Size of Drawer B : 24.25"W X 13.25"D X 9.00"H X 0.25"T

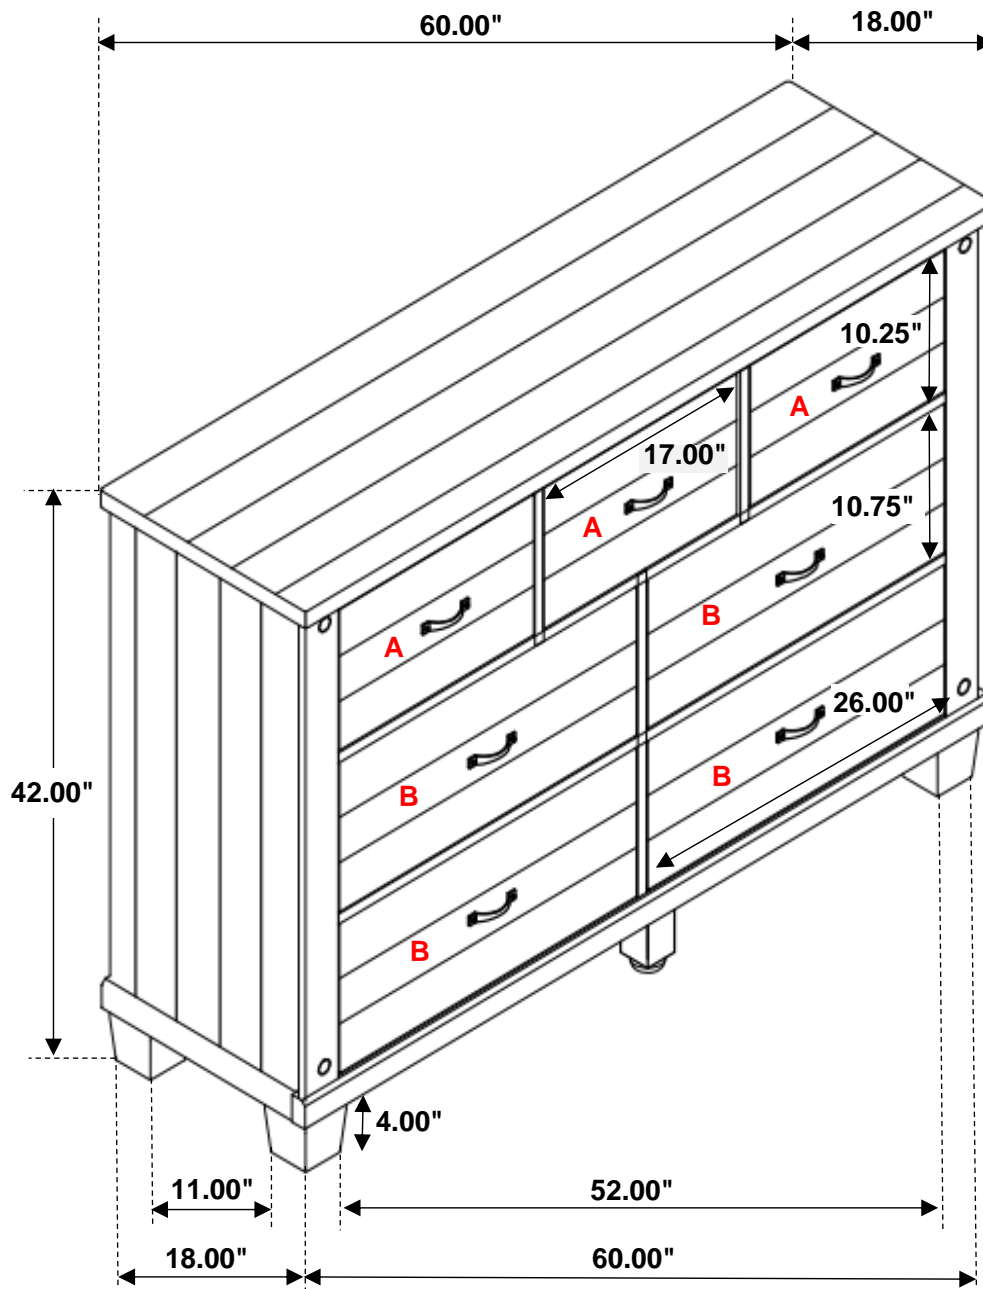

Note: Dimension tolerance  $\pm 5\%$



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**224474**  
***Mirror***

ITEM: **224474**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

**A** DRESSER  
FROM BOX ITEM#224473

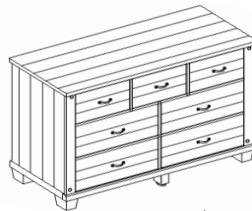

1PC

**B** MIRROR

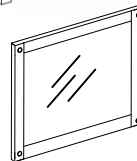

1PC

**C** MIRROR SUPPORT  
(PACKED WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

**1** BOLT  
(Ø1/4" x 38MM - RBW)



6PCS

**2** LOCK WASHER  
(Ø1/4" x 11 x 2MM - RBW)



6PCS

**3** FLAT WASHER  
(Ø1/4" x 19 x 2MM - RBW)



6PCS

**4** ALLEN WRENCH  
(M4 x 58MM - RBW)




1PC

ITEM: **224474**

## ASSEMBLY INSTRUCTIONS




### STEP 1

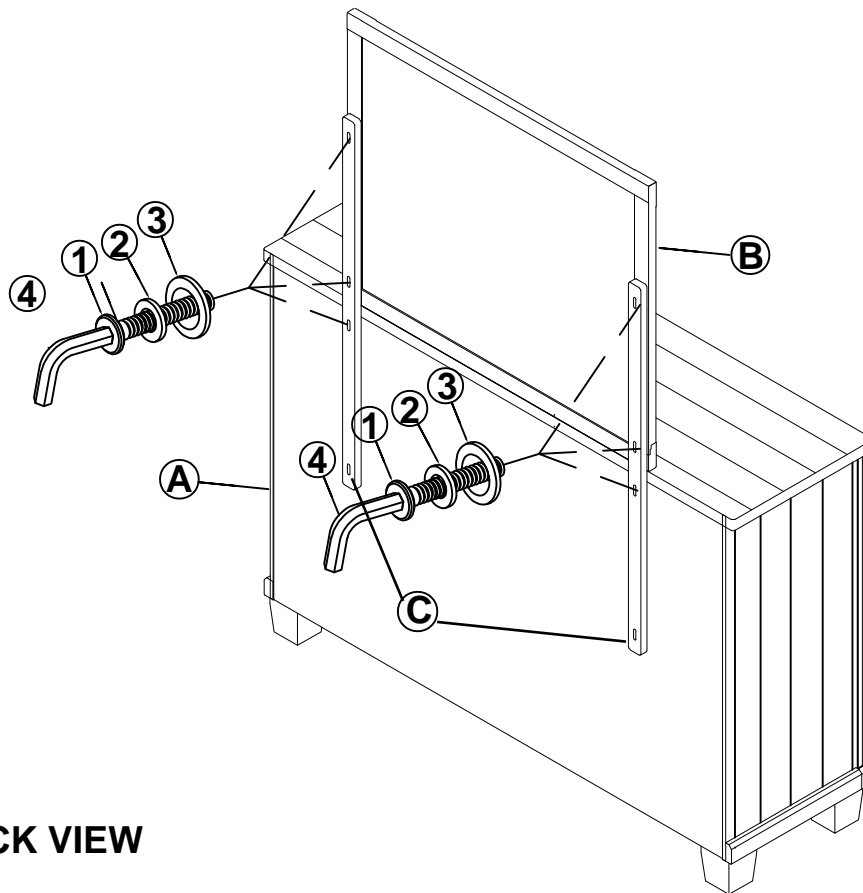


\* BACK VIEW

### STEP 2 COMPLETE

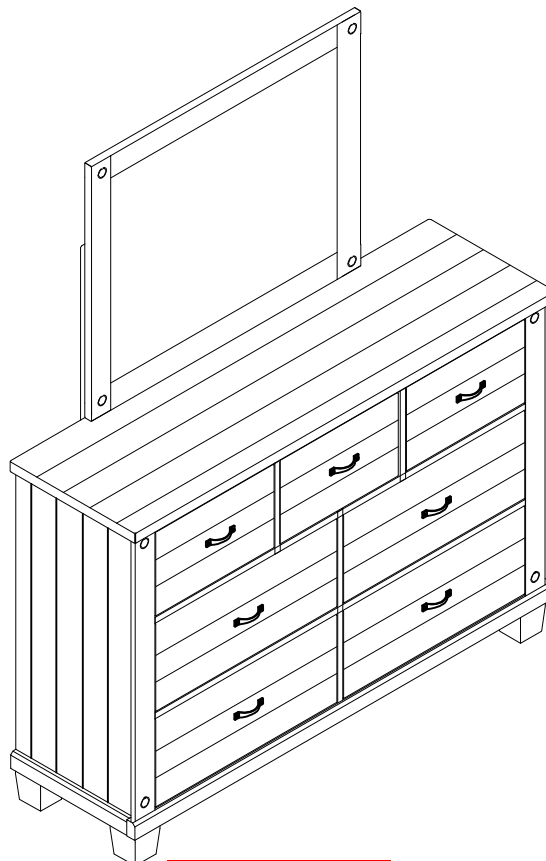

ITEM: **224474**

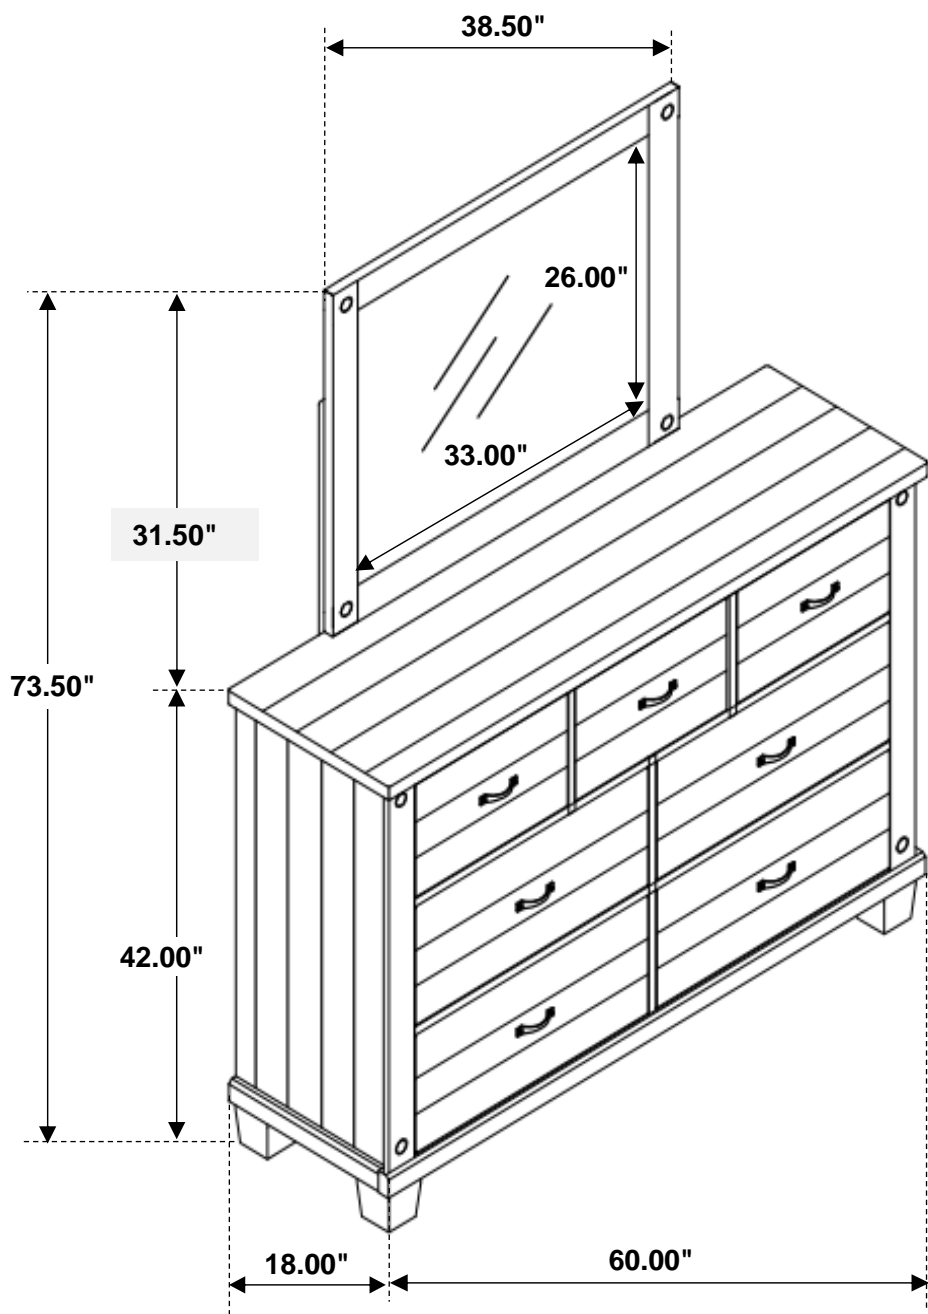

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for very stage of life*

**224475**  
***Chest***

ITEM: **224475**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A CHEST

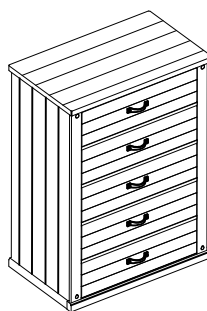

1PC

B LEG



4PCS

## HARDWARE IDENTIFICATION

1

**BOLT**  
(Ø5/16" x 76MM-RBW)



4PCS

2

**LOCK WASHER**  
(Ø5/16" x 14 x 2MM - RBW)



4PCS

3

**FLAT WASHER**  
(Ø5/16" x 19 x 2MM - RBW)



4PCS

4

**ALLEN WRENCH**  
(M4 x 58MM- RBW)




1PC


ITEM: **224475**  
**ASSEMBLY INSTRUCTIONS**



**STEP 1**

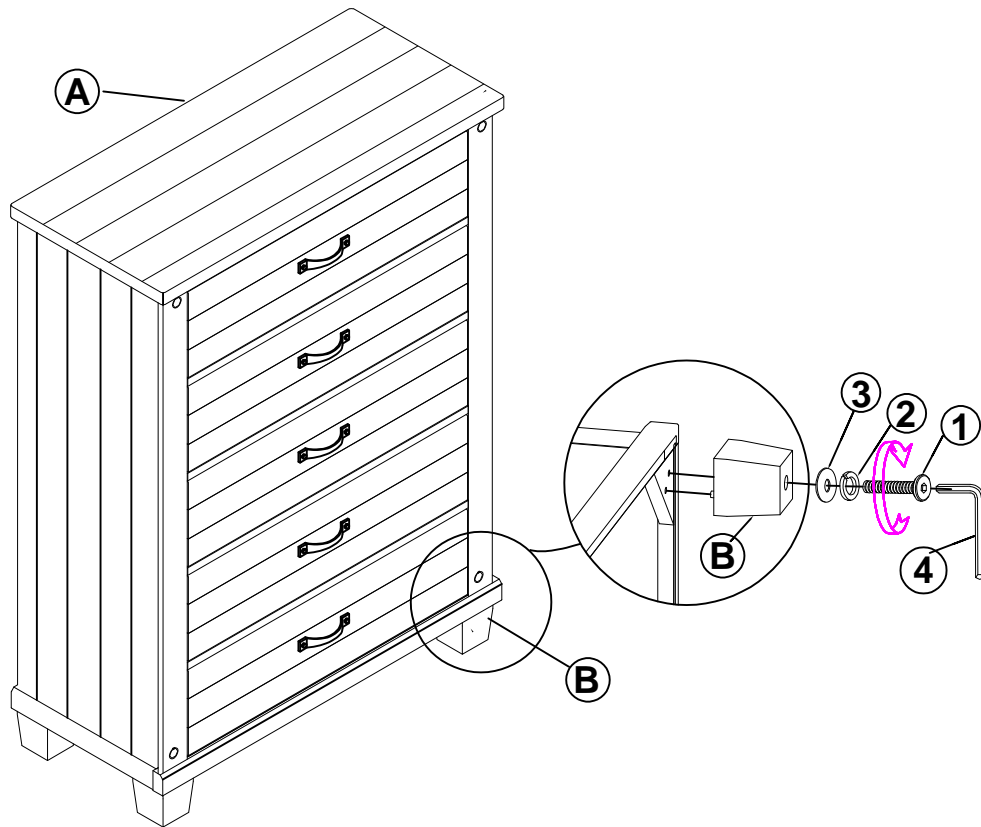

**STEP 2**  
**COMPLETE**


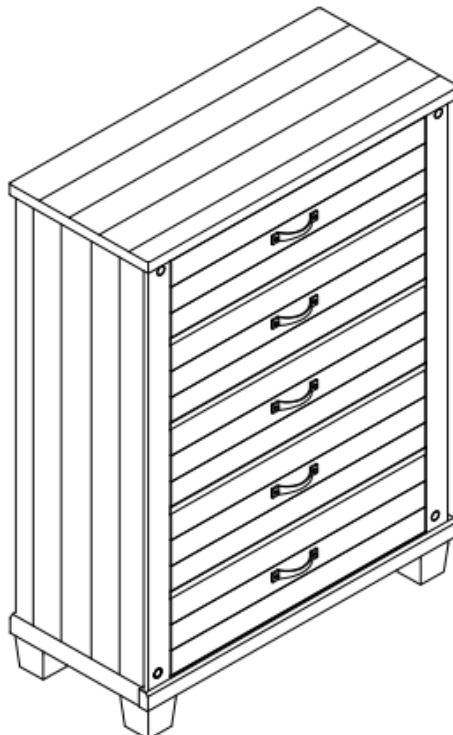


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

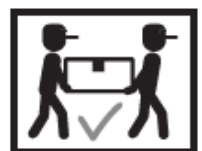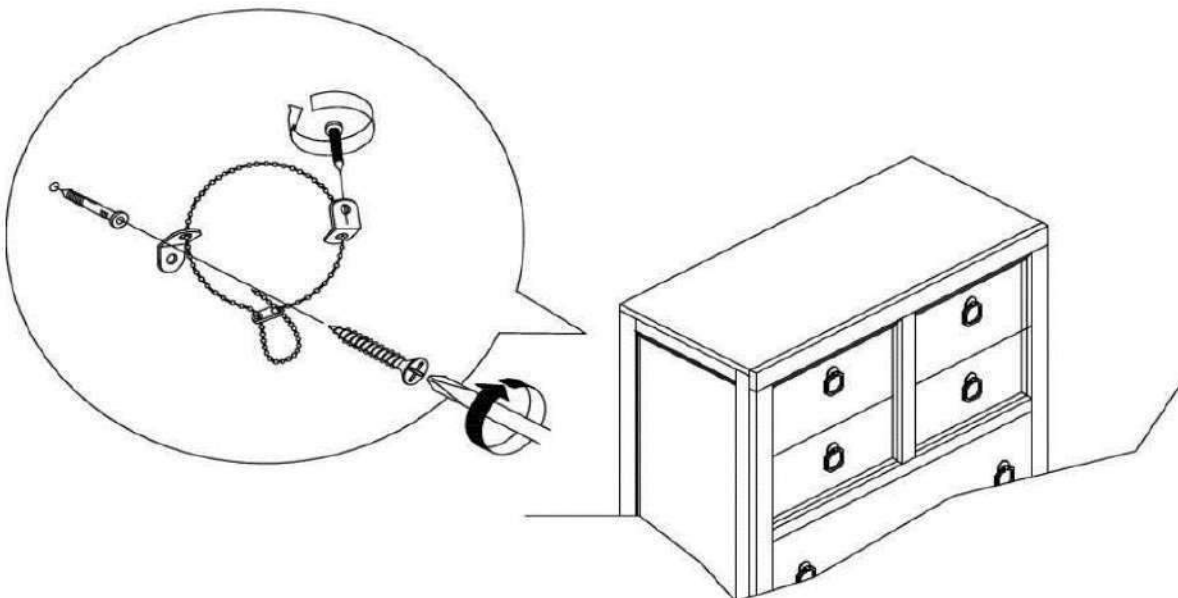




ITEM: **224475**



Inner Size of Drawer : 31.00"W X 13.25"D X 6.25"H X 0.25"T

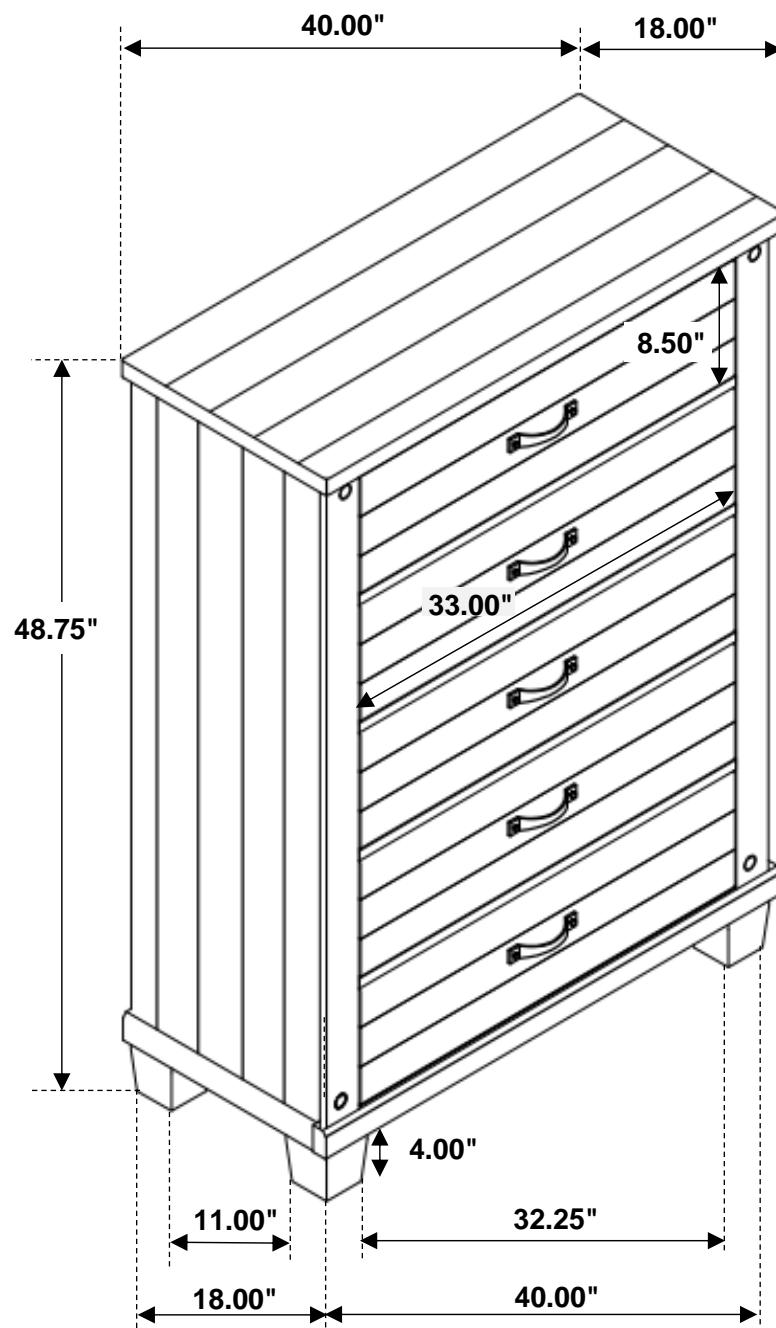

Note: Dimension tolerance  $\pm 5\%$