


### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

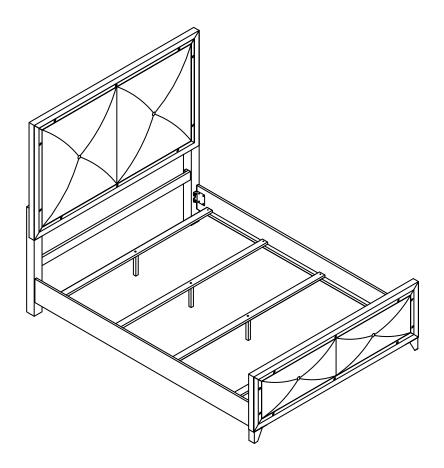

Fine Furniture for every stage of life

224491Q(B1-B3) Queen Bed

REVISION 0:04/25/2023

PAGE 1 OF 6

### ITEM: 224491Q(B1-B3)

### **ASSEMBLY INSTRUCTIONS**

### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION							
B1 (BOX 1)							
A	HEADBOARD PANEL		1PC	В	HEADBOARD BOTTOI RAIL	W	1PC
С	RIGHT HEADBOARD LEG		1PC	D	LEFT HEADBOARD LEG		1PC
B2	(BOX 2)		•	ı			
E	FOOTBOARD		1PC	F	RIGHT FOOTBOARD LEG		1PC
G	LEFT FOOTBOARD LEG		1PC				
<u>B3</u>	3 (BOX 3)			I			
н	BED RAIL		2PCS	ı	BED SLAT SUPPORT WITH LEVELER		4PCS
J	BED SLAT		4PCS				
нв	224491Q (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	FB	224491Q(B2) FROM BOX 2 FOOTBOARD COMPLETE		1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

### ITEM: 224491Q(B1-B3)

### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

COASTER

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

### **HARDWARE IDENTIFICATION**

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224491Q (B1)

1	BOLT (Ø5/16" x 50MM- RBW)	10PCS	2	LOCK WASHER (Ø5/16" - RBW)	10PCS
3	FLAT WASHER (Ø5/16" - RBW)	10PCS	4	ALLEN WRENCH (4MM x 59MM - RBW)	1PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224491Q (B2)

5	BOLT (Ø5/16" x 20MM- RBW)	4PCS	6	LOCK WASHER (Ø5/16" - RBW)	4PCS
7	FLAT WASHER (Ø5/16" - RBW)	4PCS	8	ALLEN WRENCH (4MM x 59MM - RBW)	1PC


### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224491Q (B3)

9	BOLT (Ø5/16" x 20MM- RBW)	8PCS	10	LOCK WASHER (Ø5/16" - RBW)	8PCS
11	FLAT WASHER (Ø5/16" - RBW)	8PCS	12	ALLEN WRENCH (4MM x 59MM - RBW)	1PC
13	FLAT HEAD SCREW (Ø4 x 30MM - RBW)	8PCS			

#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

## 

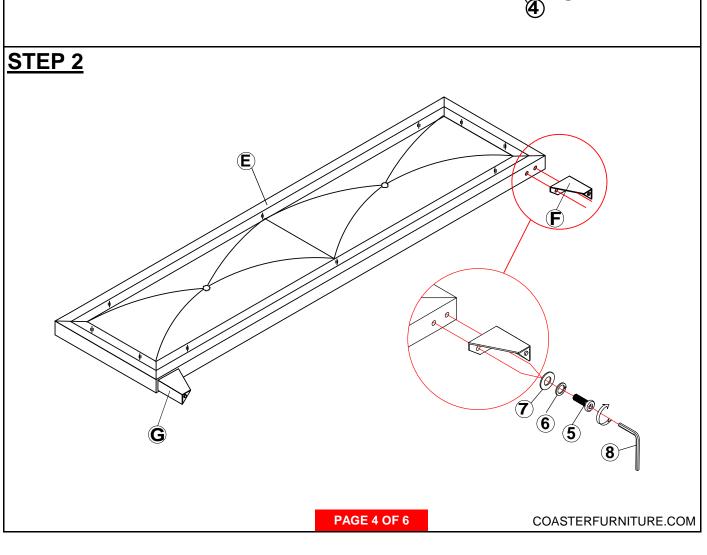


# ITEM: 224491Q(B1-B3) ASSEMBLY INSTRUCTIONS STEP 3



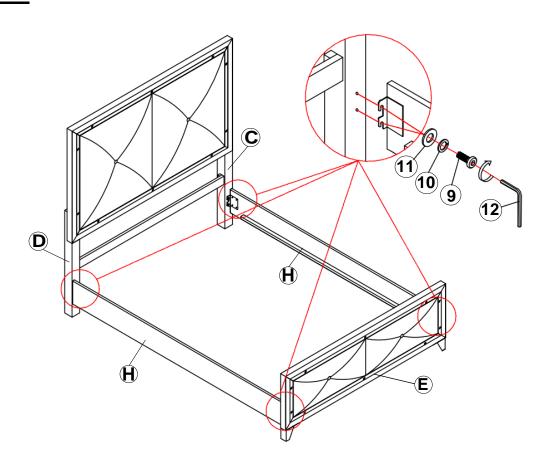


### STEP 4

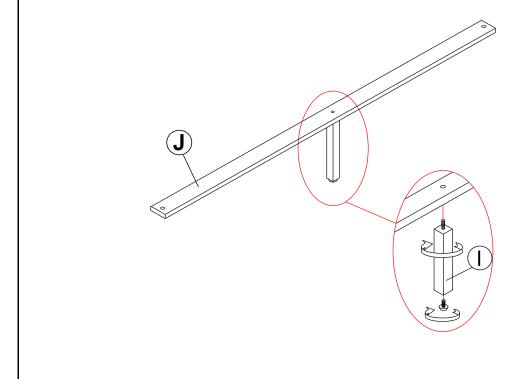


PAGE 5 OF 6

# ITEM: 224491Q(B1-B3) ASSEMBLY INSTRUCTIONS STEP 5



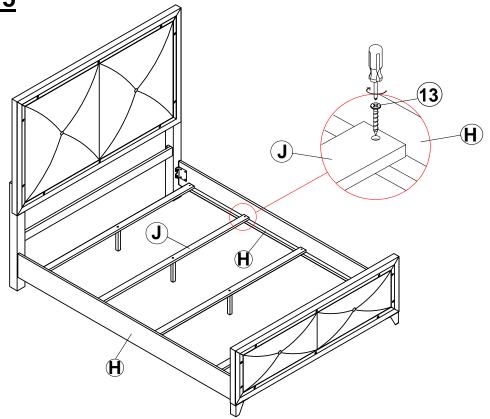

### STEP 6 COMPLETE

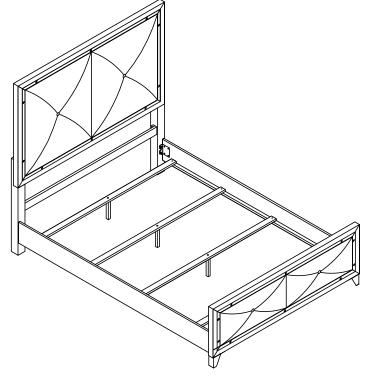




PAGE 6 OF 6

### ITEM: 224491Q(B1-B3)



Inner Size: 81.50"W X 61.00"D

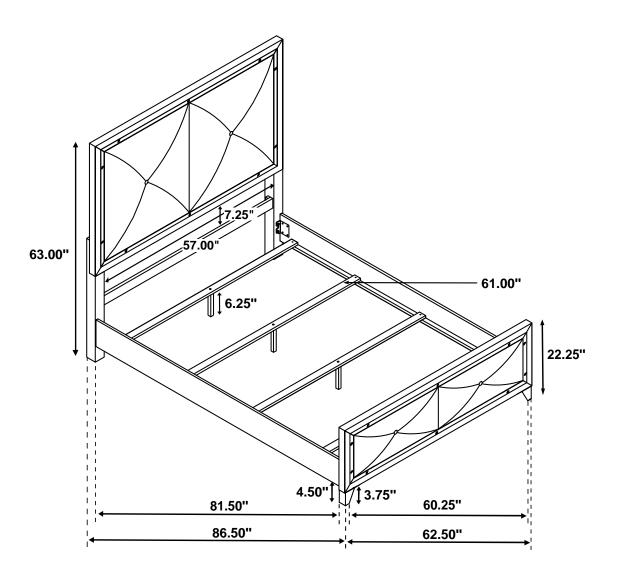

Note: Dimension tolerance ±5%



### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224492 Nightstand

### **ASSEMBLY INSTRUCTIONS**

### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

**5 MINUTES** 

### **PARTS IDENTIFICATION**

A NIGHTSTAND



1PC

B LEG

(4mm x 59mm - RBW)



4PCS


### HARDWARE IDENTIFICATION

1	BOLT (Φ5/16" x 20mm - RBW)	12PCS
2	LOCK WASHER (Φ5/16" - RBW)	12PCS
3	FLAT WASHER (Φ5/16" - RBW)	12PCS
4	ALLEN WRENCH	1PC


### **ASSEMBLY INSTRUCTIONS**



### STEP 1

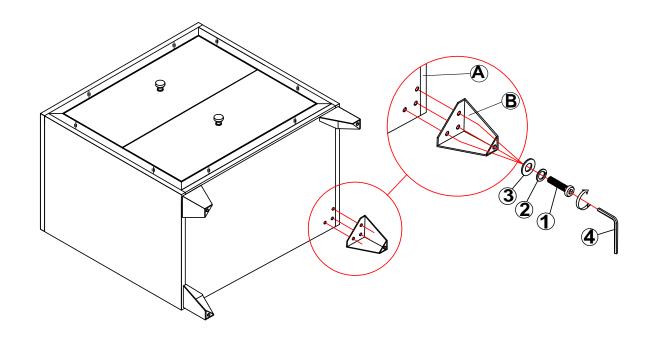


### STEP 2 COMPLETE

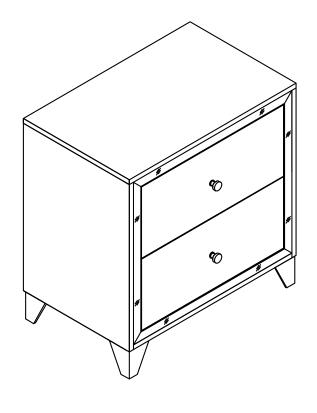





Inner Size of Drawer: 21.00"W X 12.25"D X 6.25"H X 0.50"T

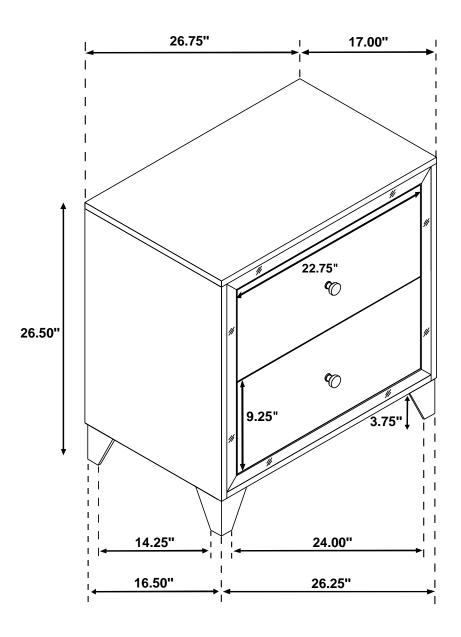

**Note: Dimension tolerance ±5%** 



### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224493 Dresser

### **ASSEMBLY INSTRUCTIONS**

### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

**5 MINUTES** 

### **PARTS IDENTIFICATION**

A DRESSER



1PC

B LEG



4PCS

CENTER SUPPORT LEG
C WITH LEVELER



1PC

### HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 20mm - RBW)



12PCS

2 LOCK WASHER (Φ5/16" - RBW)



12PCS

3 FLAT WASHER (Φ5/16" - RBW)





12PCS

4 ALLEN WRENCH (4mm x 59mm - RBW)



1PC

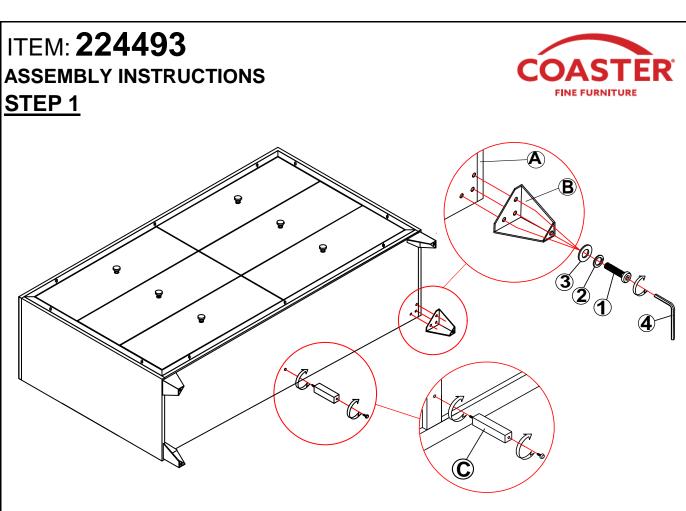

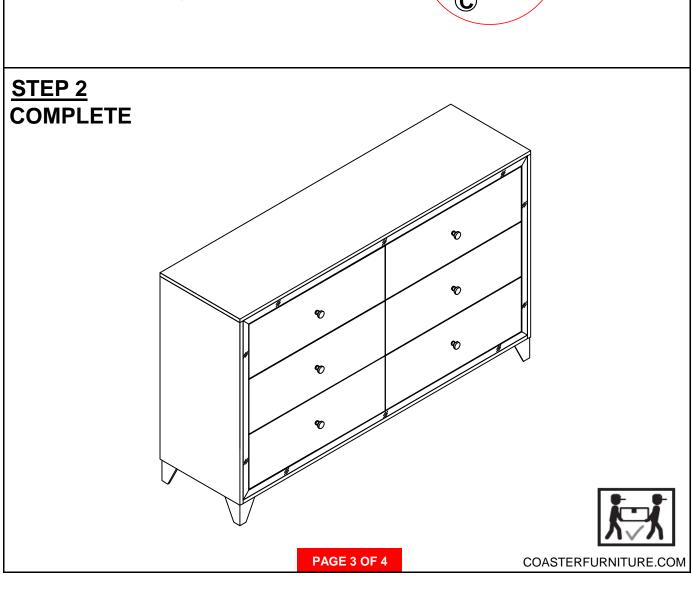



### ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

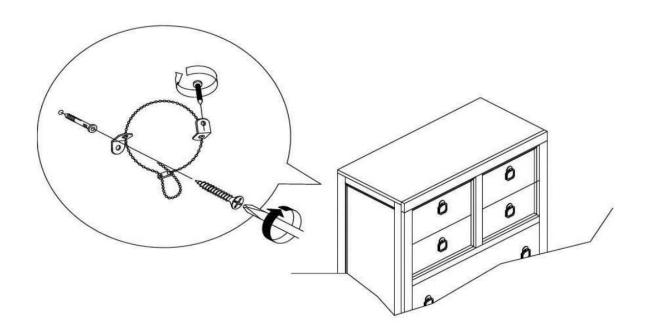





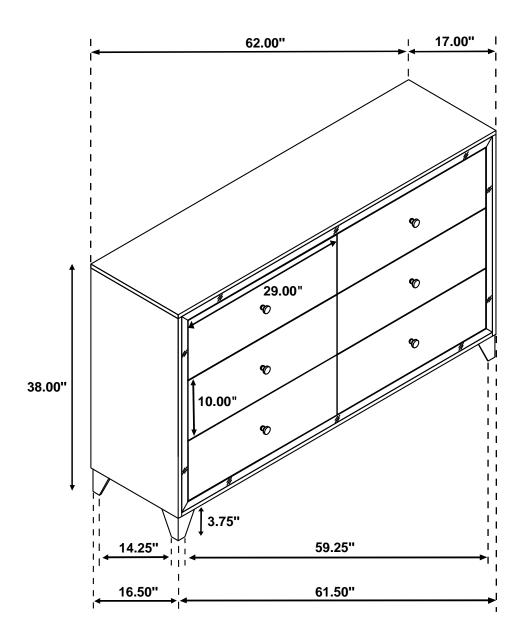

Note: Dimension tolerance ±5%



### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

**224494** *Mirror* 

### **ASSEMBLY INSTRUCTIONS**



### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

**5 MINUTES** 

### PARTS IDENTIFICATION

A DRESSER FROM BOX ITEM #224493



1PC

B MIRROR



1PC

C MIRROR SUPPORT (PACKED WITH DRESSER)



2PCS

### HARDWARE IDENTIFICATION

1 BOLT (Φ1/4" x 38mm - RBW)



6PCS

2 LOCK WASHER (Φ1/4" - RBW)



6PCS

3 FLAT WASHER (Φ1/4" - RBW)





6PCS

4 ALLEN WRENCH 4 (4mm x 59mm - RBW)




1PC

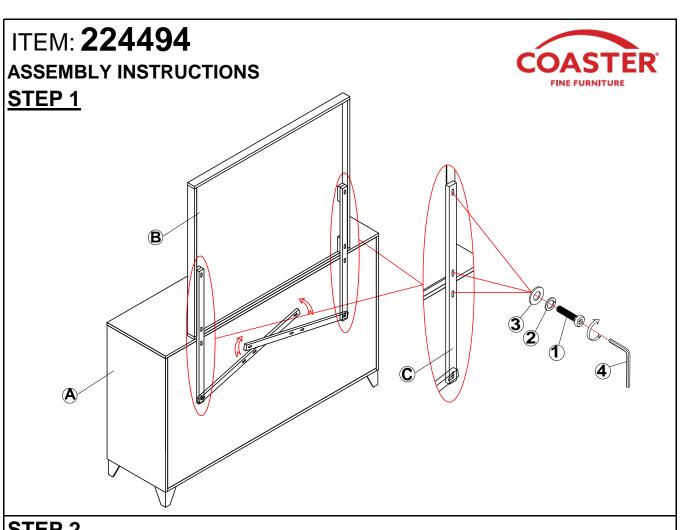

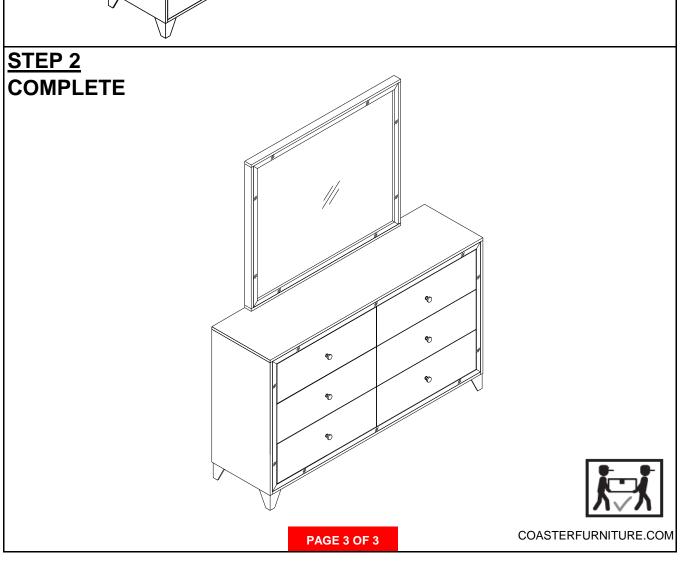



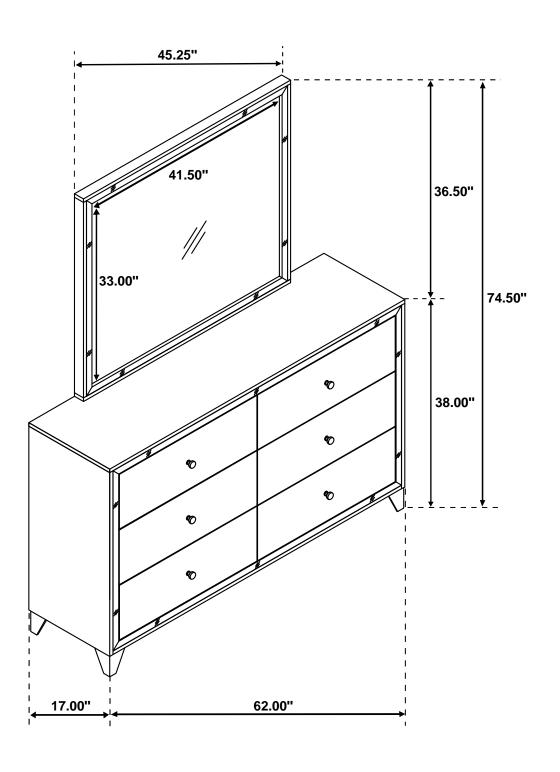

Note: Dimension tolerance ±5%



### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224495 <u>Chest</u>

### **ASSEMBLY INSTRUCTIONS**



### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

**5 MINUTES** 

### **PARTS IDENTIFICATION**

A CHEST



1PC

B LEG



4PCS

### HARDWARE IDENTIFICATION

1 BOLT (Φ5/16" x 20mm - RBW)



12PCS

2 LOCK WASHER (Φ5/16" - RBW)



12PCS

3 FLAT WASHER (Φ5/16" - RBW)



12PCS


4 ALLEN WRENCH (4mm x 59mm - RBW)



1PC

# ITEM: **224495**ASSEMBLY INSTRUCTIONS STEP 1



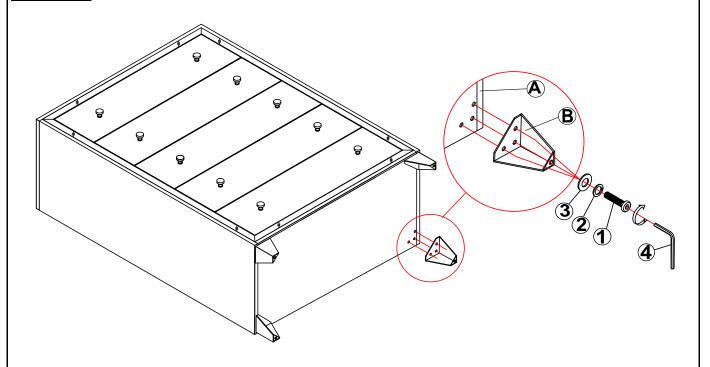

### STEP 2 COMPLETE





COASTERFURNITURE.COM

PAGE 3 OF 4



### ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
- 2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
- 3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
- 4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
- 5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
- 6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
- 7. To double lock return the beaded end back through the keyhole as shown.
- 8. Check to make sure the cable tie is securely laced and locked to the brackets.

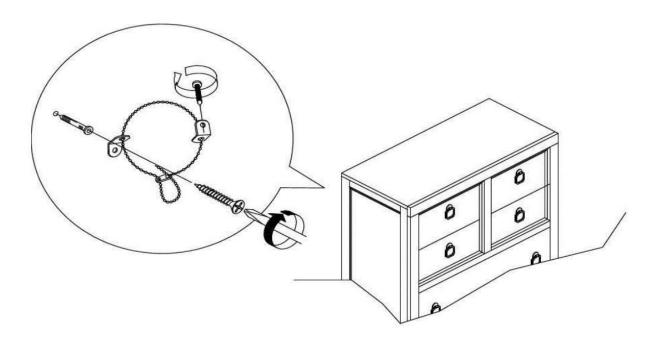








Inner Size of Drawer: 30.75"W X 12.25"D X 5.50"H X 0.50"T

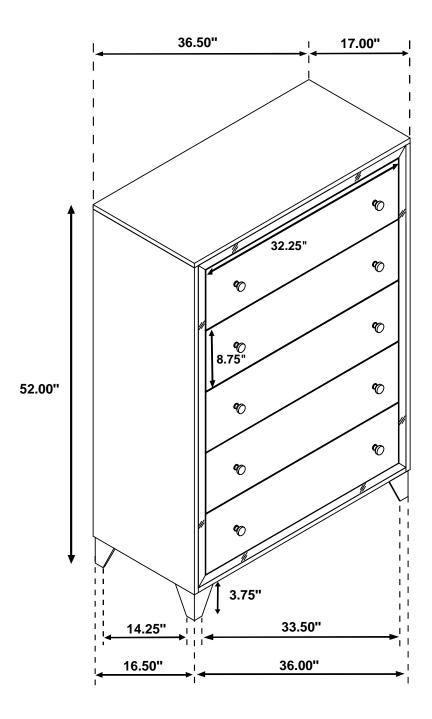

Note: Dimension tolerance ±5%